




SPREADER SPRAYER

Model No. SSS395CKC00000—Serial No. 404314159 and Up

Picture below may not reflect actual product.

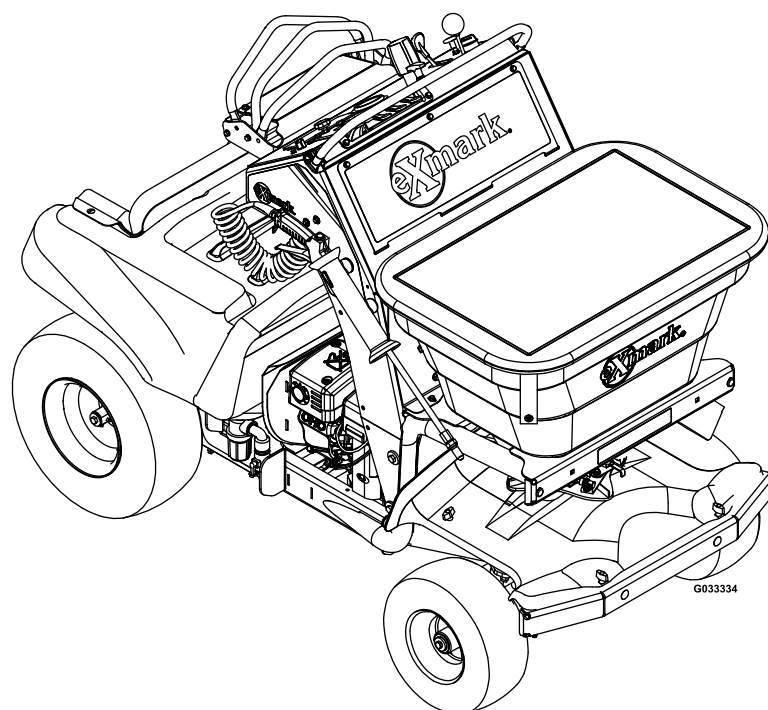

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).




If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

Main Frame Assembly	4
Control Tower W/Decals	6
Knee Pad Assembly	8
Steering Assembly	10
Steering Linkage Assembly No. 126-7185	12
Spray System Assembly	14
Sprayer Tank Assembly	16
Strainer Assembly No. 126-4358	18
Control Valve Manifold Assembly	20
Spray Manifold Assembly No. 126-7635	22
Hose Assembly No. 126-2250	24
Hose Assembly No. 126-7304	26
Left Nozzle Assembly No. 126-3667	28
Center Nozzle Assembly No. 126-3668	30
Right Nozzle Assembly No. 126-3669	32
Spreader Assembly	34
Hopper Assembly	36
Spreader Motor Assembly	38
Side Deflector Assembly	40
Ground Drive Assembly	42
Transaxle Cover Assembly No. 126-1462	44
Engine Assembly	46
Electrical Assembly	48

Main Frame Assembly

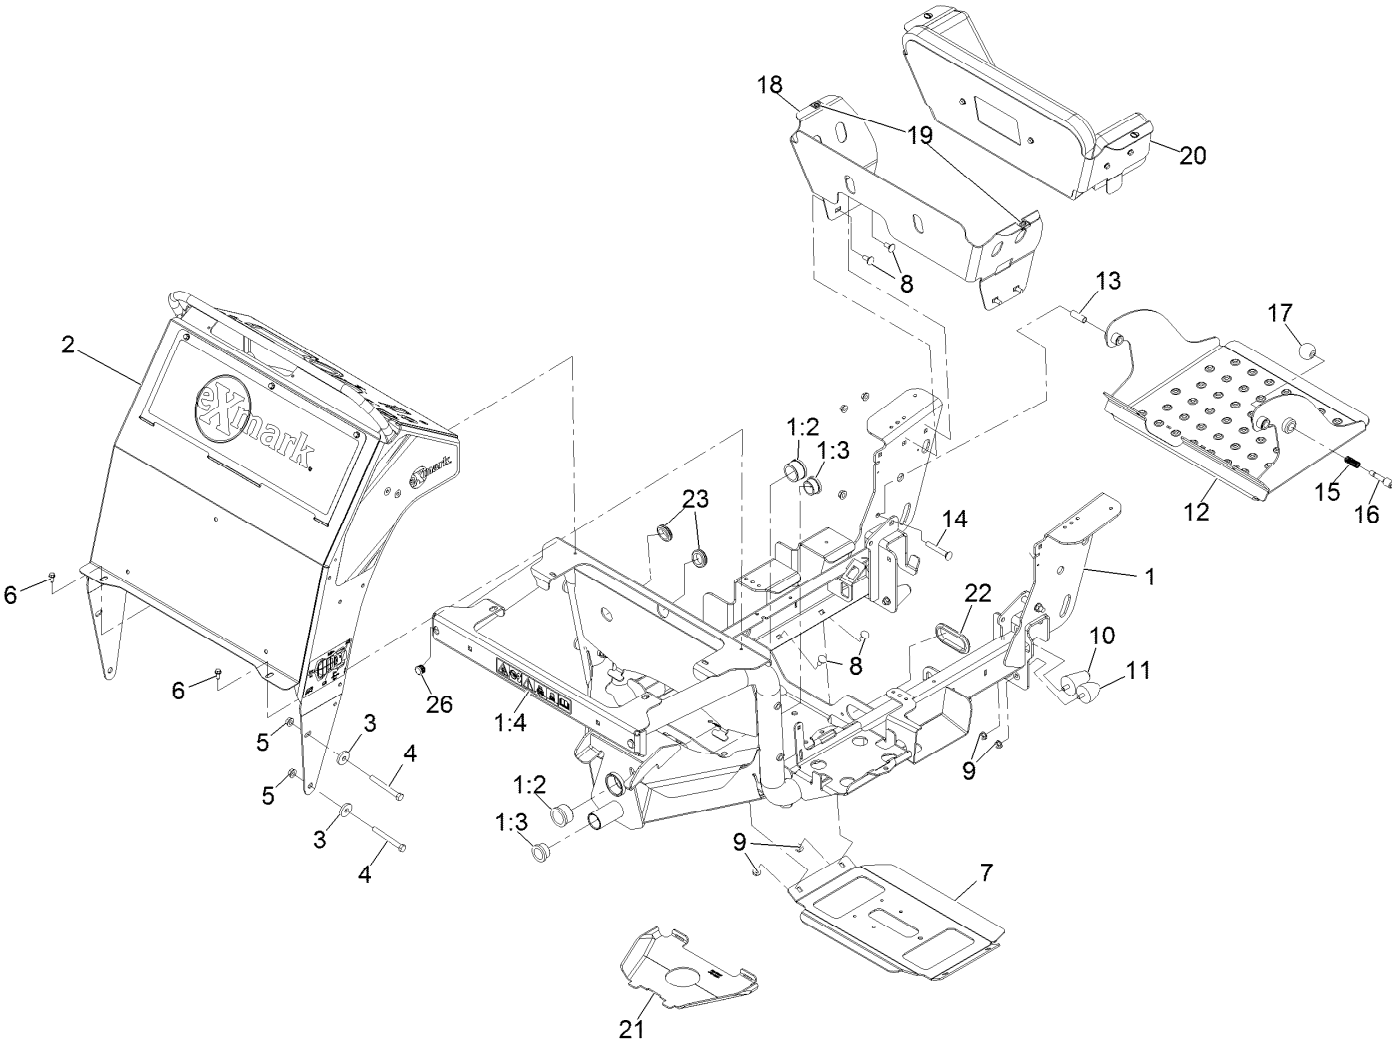


Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0198	1	Frame ASM	12	126-0435	1	Operator Platform ASM
1:2	126-3008	2	Bearing-Flanged	13	126-0434	2	Bushing-Pivot, Platform
1:3	126-3002	2	Bearing-Flanged	14	126-0702	2	Screw-CARR
1:4	126-4994	1	Decal-Down, Tie	15	114-5348	1	Spring
2	126-6398	1	Control Tower ASM	16	119-8650	1	Pin-Latch
3	126-3875	4	Washer	17	1-603175	1	Knob-Ball
4	126-2661	4	Screw-HH	18	126-1234-03	1	Mount-Pad, Knee
5	135-2882	6	Nut-HF	19	119-1730	2	Receptacle-Clip, Mini
6	32144-10	2	Screw-HWH 1/4-20 X .62	20		1	Knee Pad ASM ●
7	126-1415	1	Guard-Lower	21	126-2567	1	Shield-Dust
8	126-0695	8	Screw-CARR	22	237-164	2	Grommet
9	135-2881	12	Nut-HF	23	240-5	2	Grommet
10	114-1925	2	Bumper-Rubber	26	126-5147	2	Plug-Tube
11	114-1926	2	Bumper-Rubber				

● Not serviced separately


Control Tower W/Decals

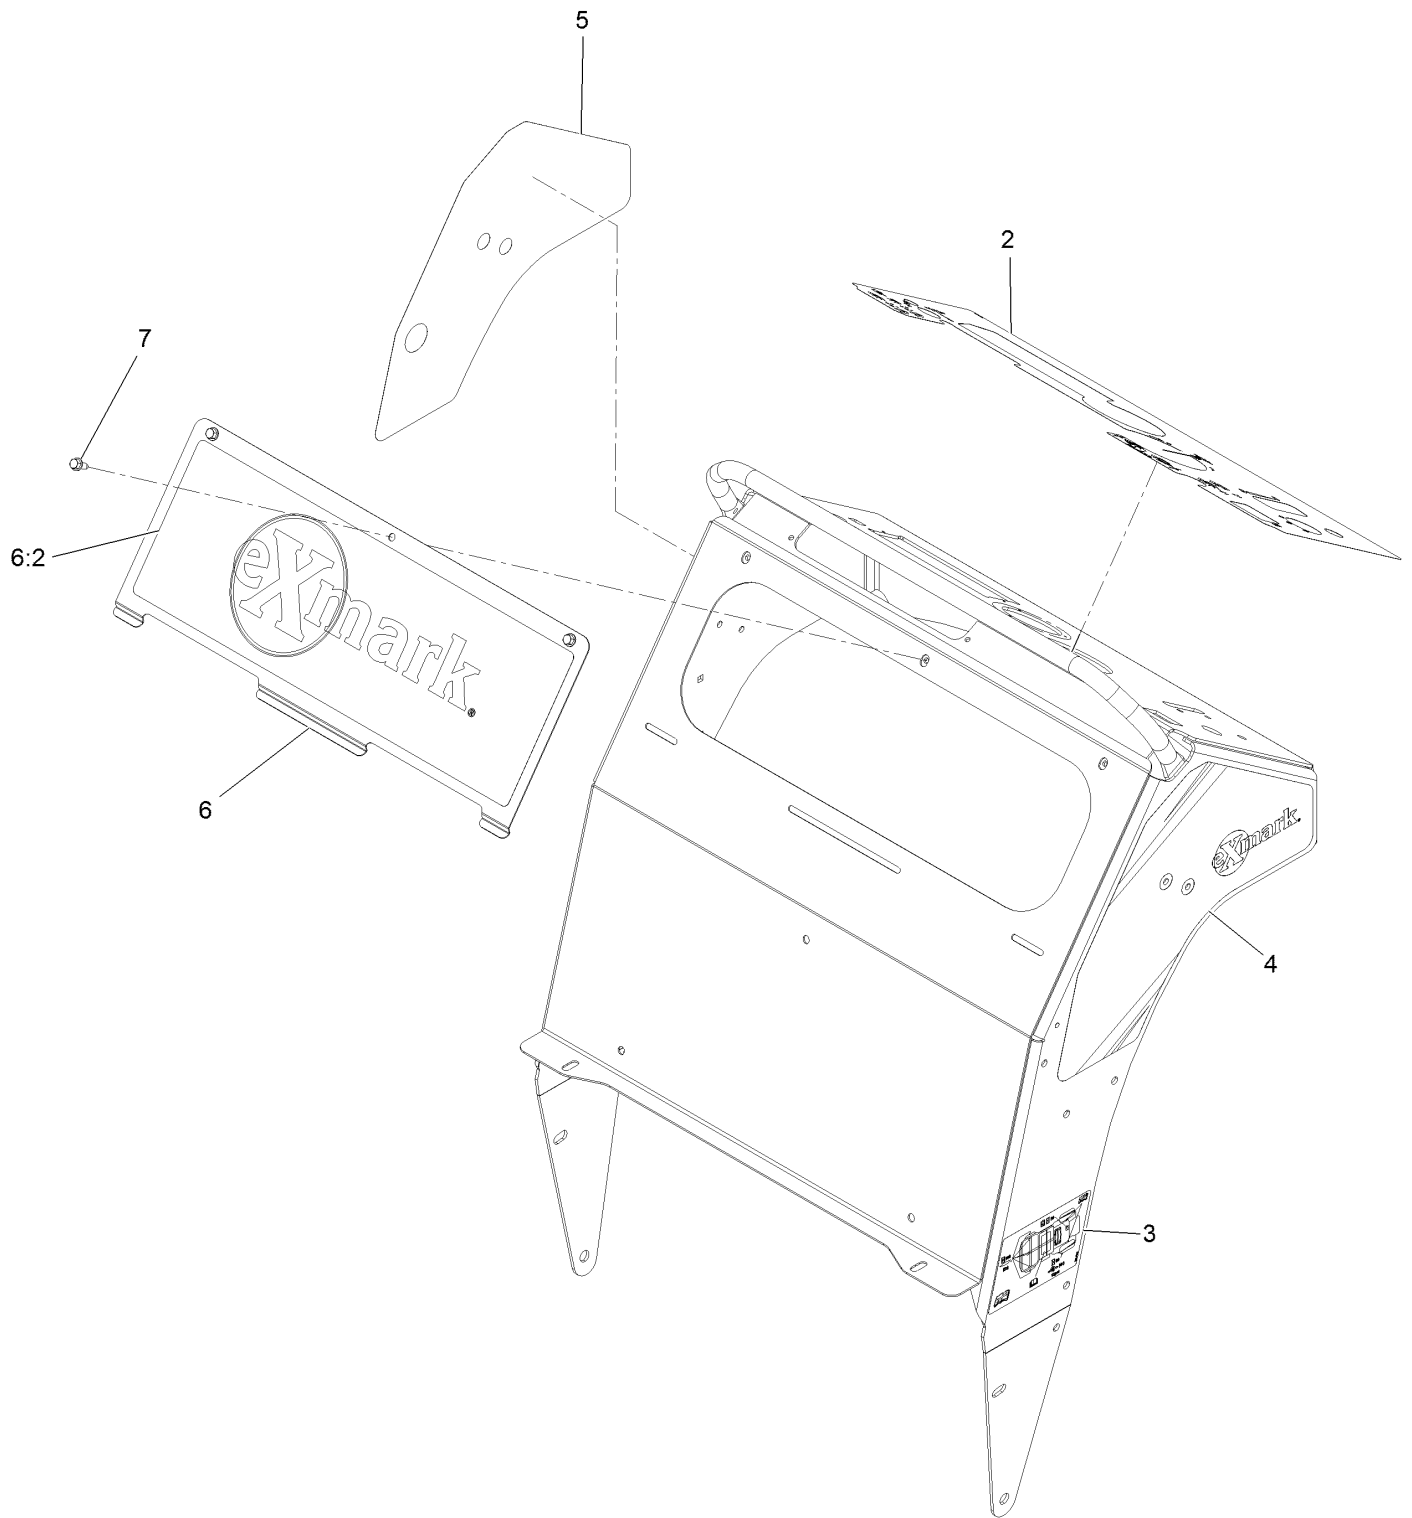

Control Tower W/Decals (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	126-9655	1	Decal-Control	6	126-7215	1	Access Panel W/ Decal
3	126-5186	1	Decal-Service Aid	6:2	126-7206	1	Decal-Exmark Front Panel
4	126-7207	1	Decal-LH Side Panel	7	32144-10	3	Screw-HWH 1/4-20 X .62
5	126-7208	1	Decal-RH Side Panel				


Knee Pad Assembly

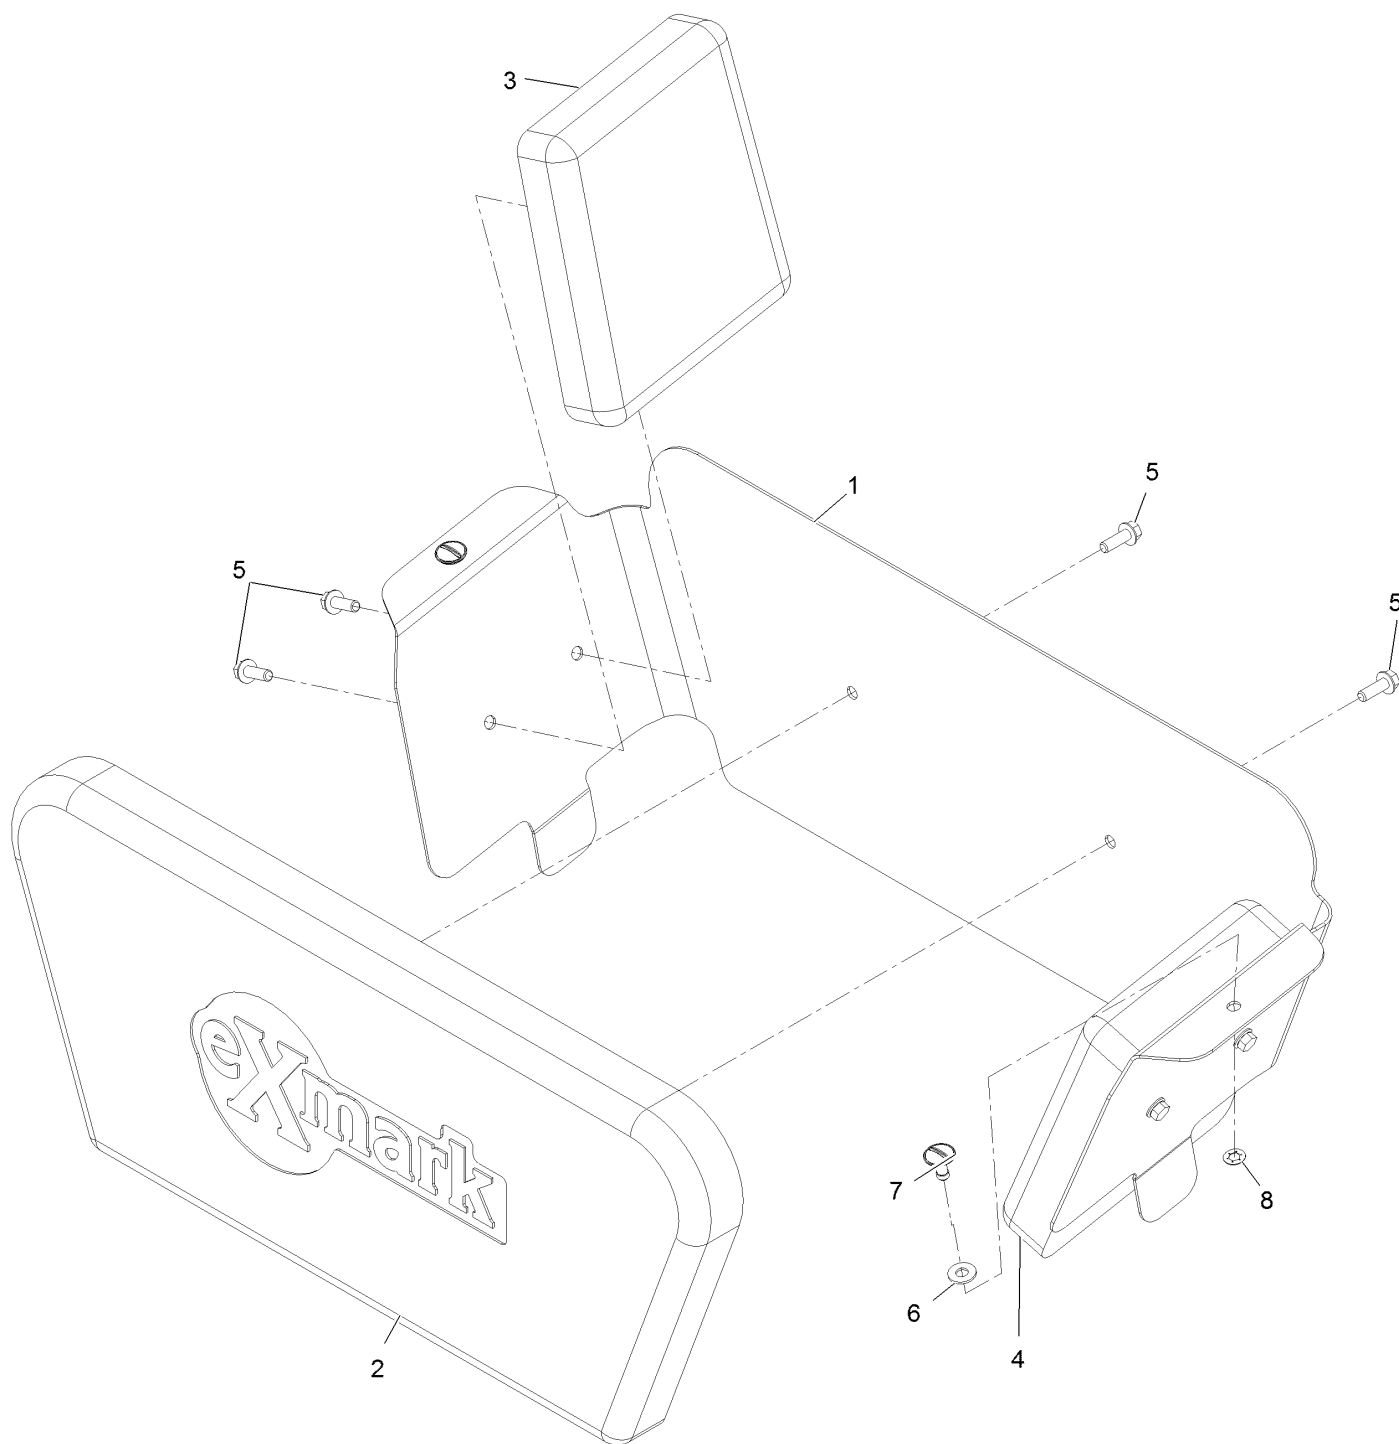

Knee Pad Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1244-03	1	Bracket-Pad, Knee	6	360-0140	2	Washer-Flat
2	126-1249	1	Pad-Knee, Center	7	119-1728	2	Stud-1/4 Turn
3	126-1250	1	Pad-Knee, LH Side	8	119-1729	2	Retainer-Stud
4	126-2773	1	Pad-Knee, RH Side				
5	117-8304	6	Screw-Hex Flange 1/4-20 X 3/4				


Steering Assembly

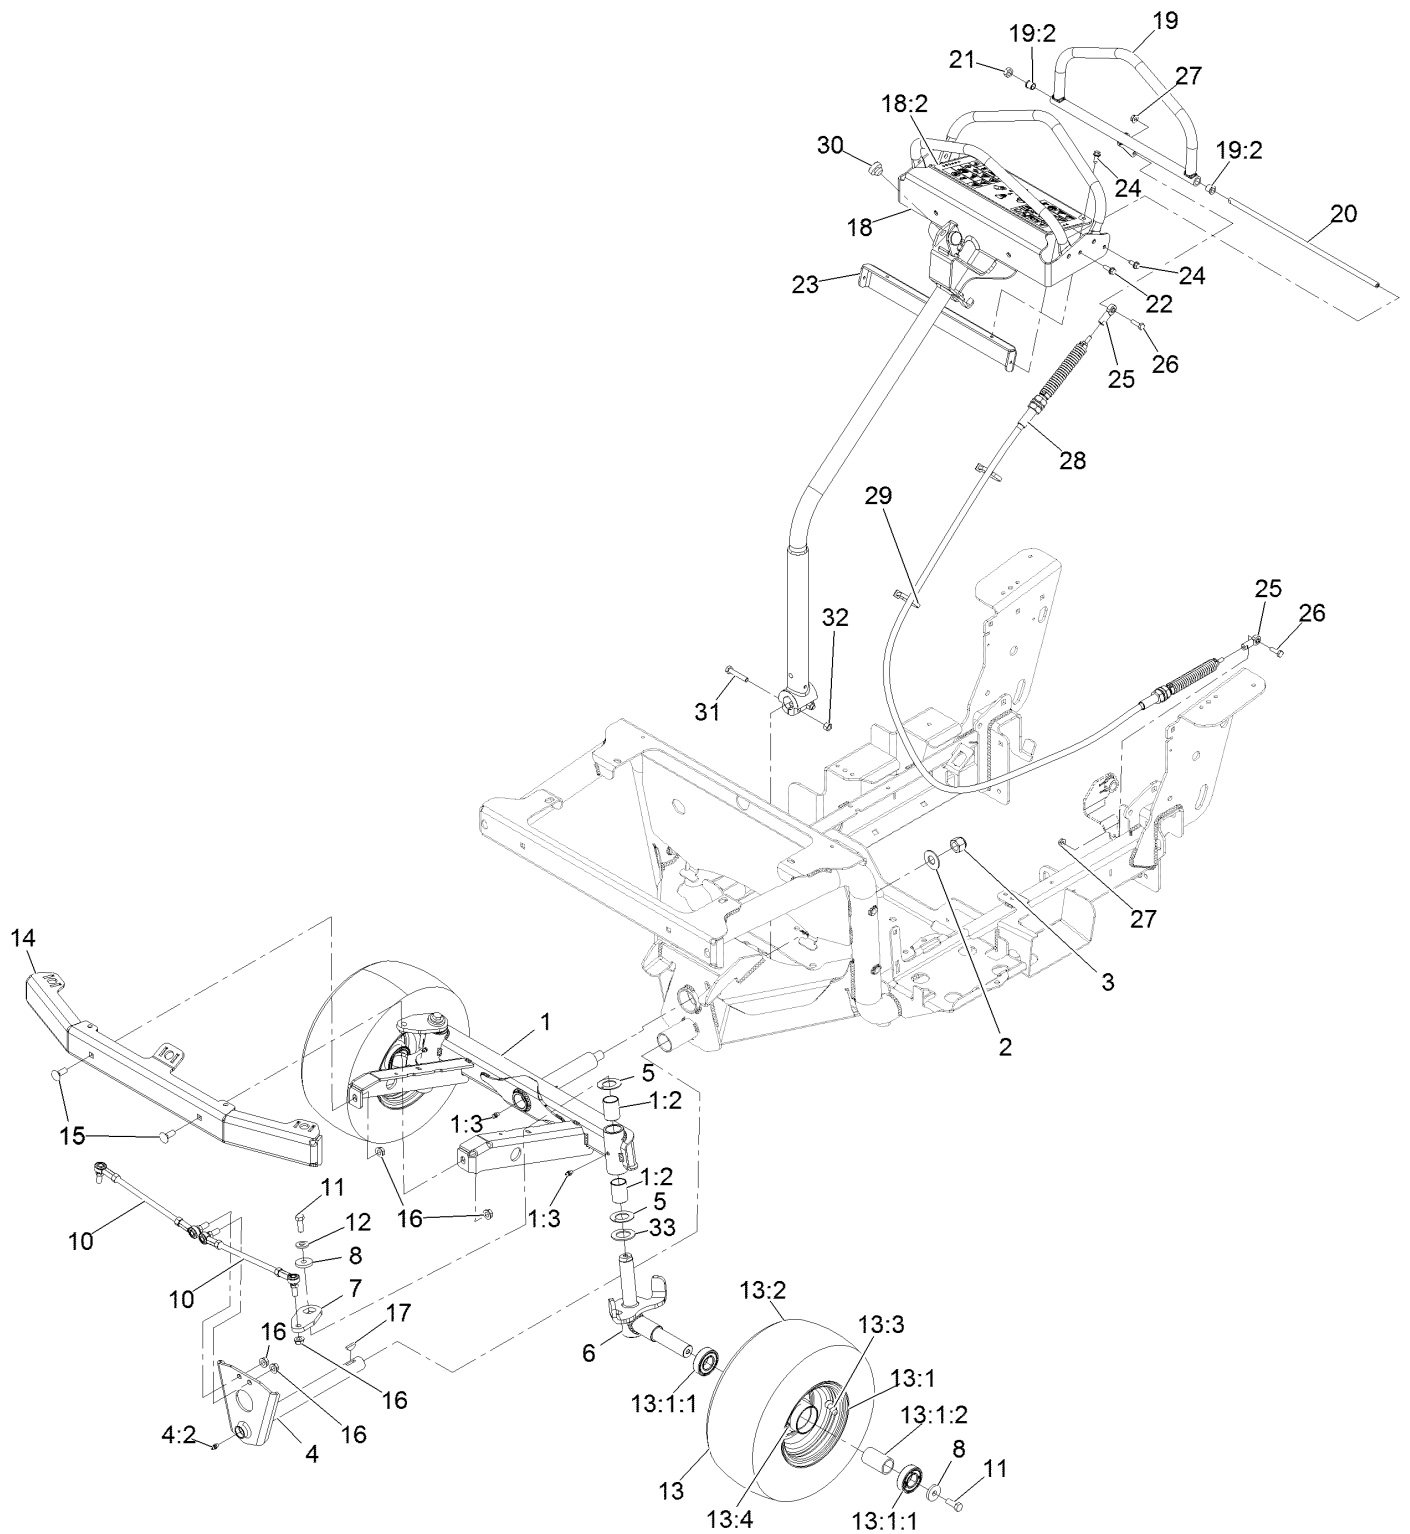

Steering Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7045	1	Front Axle ASM	16	135-2882	6	Nut-HF
1:2	126-7048	4	Bearing-Sleeve	17	3257-7	1	Key-Woodruff
1:3	126-1375	3	Zerk-Grease	18	135-3155	1	Motion Handle ASM
2	126-0656	1	Washer-Flat	18:2	135-2844	1	Decal-Warning
3	126-3841	1	Nut-Hex Nyloc 5/8-11 SS	19	126-1598	1	Motion Handle ASM
4	135-3156	1	Steering Shaft ASM	19:2	103-9928	2	Bearing
4:2	126-1375	1	Zerk-Grease	20	126-0496	1	Shaft-Pivot, Speed Control
5	126-7044	4	Washer-Thrust	21	116-4198	1	Spacer-Shaft, Drive Lever
6	126-6733	2	Front Axle ASM	22	117-8304	2	Screw-Hex Flange 1/4-20 X 3/4
7	126-7069	2	Arm-Steering	23	126-1604-03	1	Panel-Rear, Steering
8	126-3875	4	Washer	24	32144-10	4	Screw-HWH 1/4-20 X .62
10	126-7185	2	Steering Linkage ASM	25	2411-41	2	Rod End-Ball Joint
11	135-1711	4	Screw-HH	26	126-0498	2	Screw-HH 1/4-20 X 7/8 SS
12	98-5975	2	Washer-Spring Disc 3/8	27	135-2880	2	Nut-HF
13	126-7220	2	Wheel And Tire ASM	28	126-2169	1	Cable-Motion
13:1	126-7258	1	Wheel ASM	29	1-303335	2	Tie-Cable 7 15/16 (Large)
13:1:1	116-0720	2	Bearing-Ball	30	104-1412	2	Bumper-Rubber
13:1:2	126-7260	1	Spacer	31	3210-9	2	Screw-HH
13:2	126-1509	1	Tire	32	32152-5	2	Nut-Hex 5/16-24
13:3	232-27	1	Stem-Valve	33	126-7050	2	Spacer-Relief
13:4	302-62	1	Fitting-Grease				
14	116-9789	1	Bumper-Front				
15	126-0980	2	Screw-Carriage 3/8-16 X 1 SS				

Steering Linkage Assembly No. 126-7185

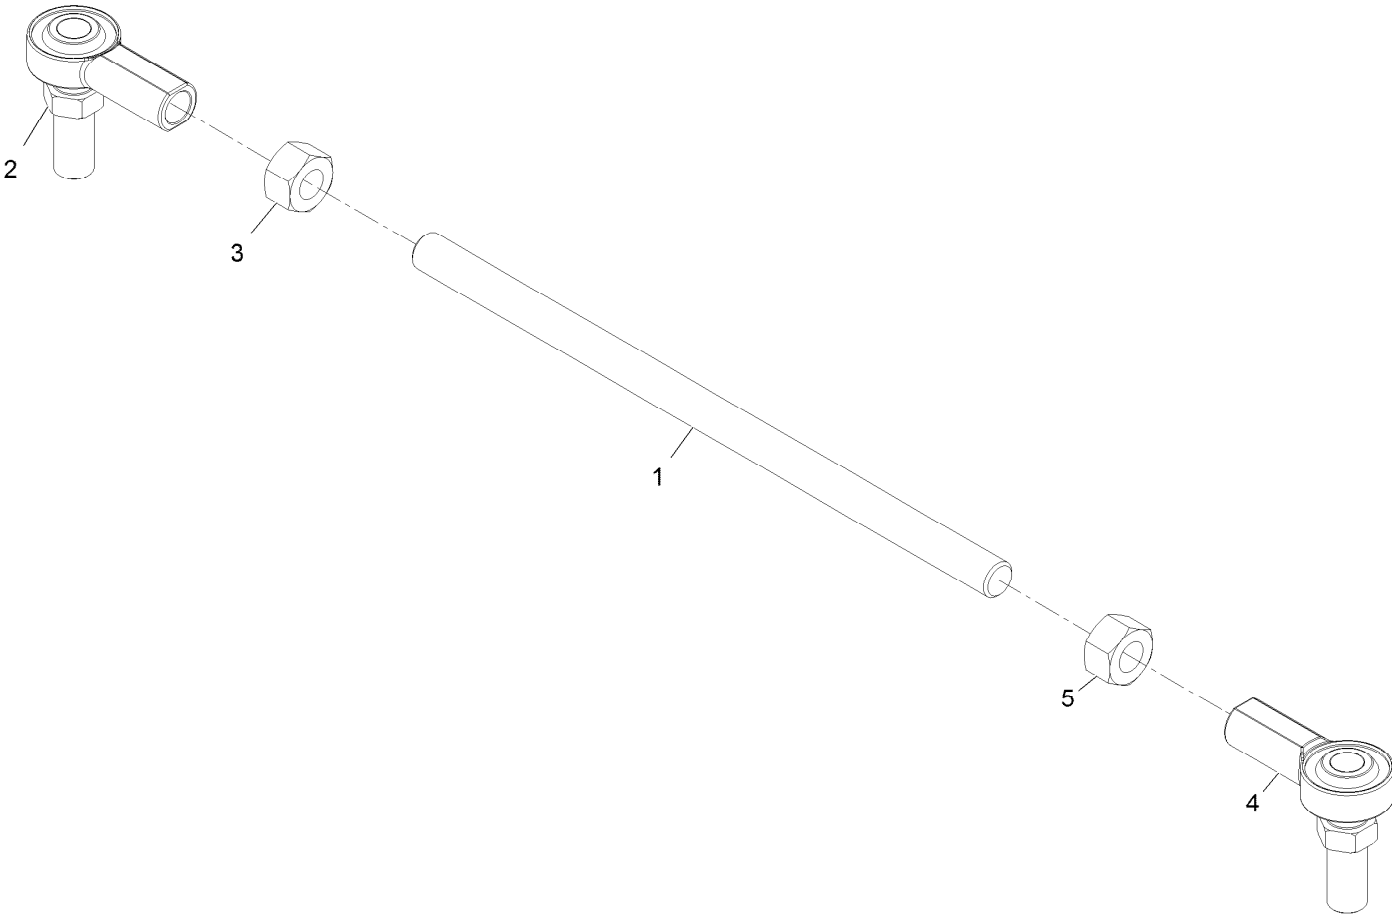


Steering Linkage Assembly No. 126-7185 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7183	1	Rod-Linkage, Steering
2	126-7181	1	Rod-End, RH
3	126-0687	1	Nut-Hex

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	126-7182	1	Rod-End, LH
5	126-0688	1	Nut-Hex, LH

Spray System Assembly

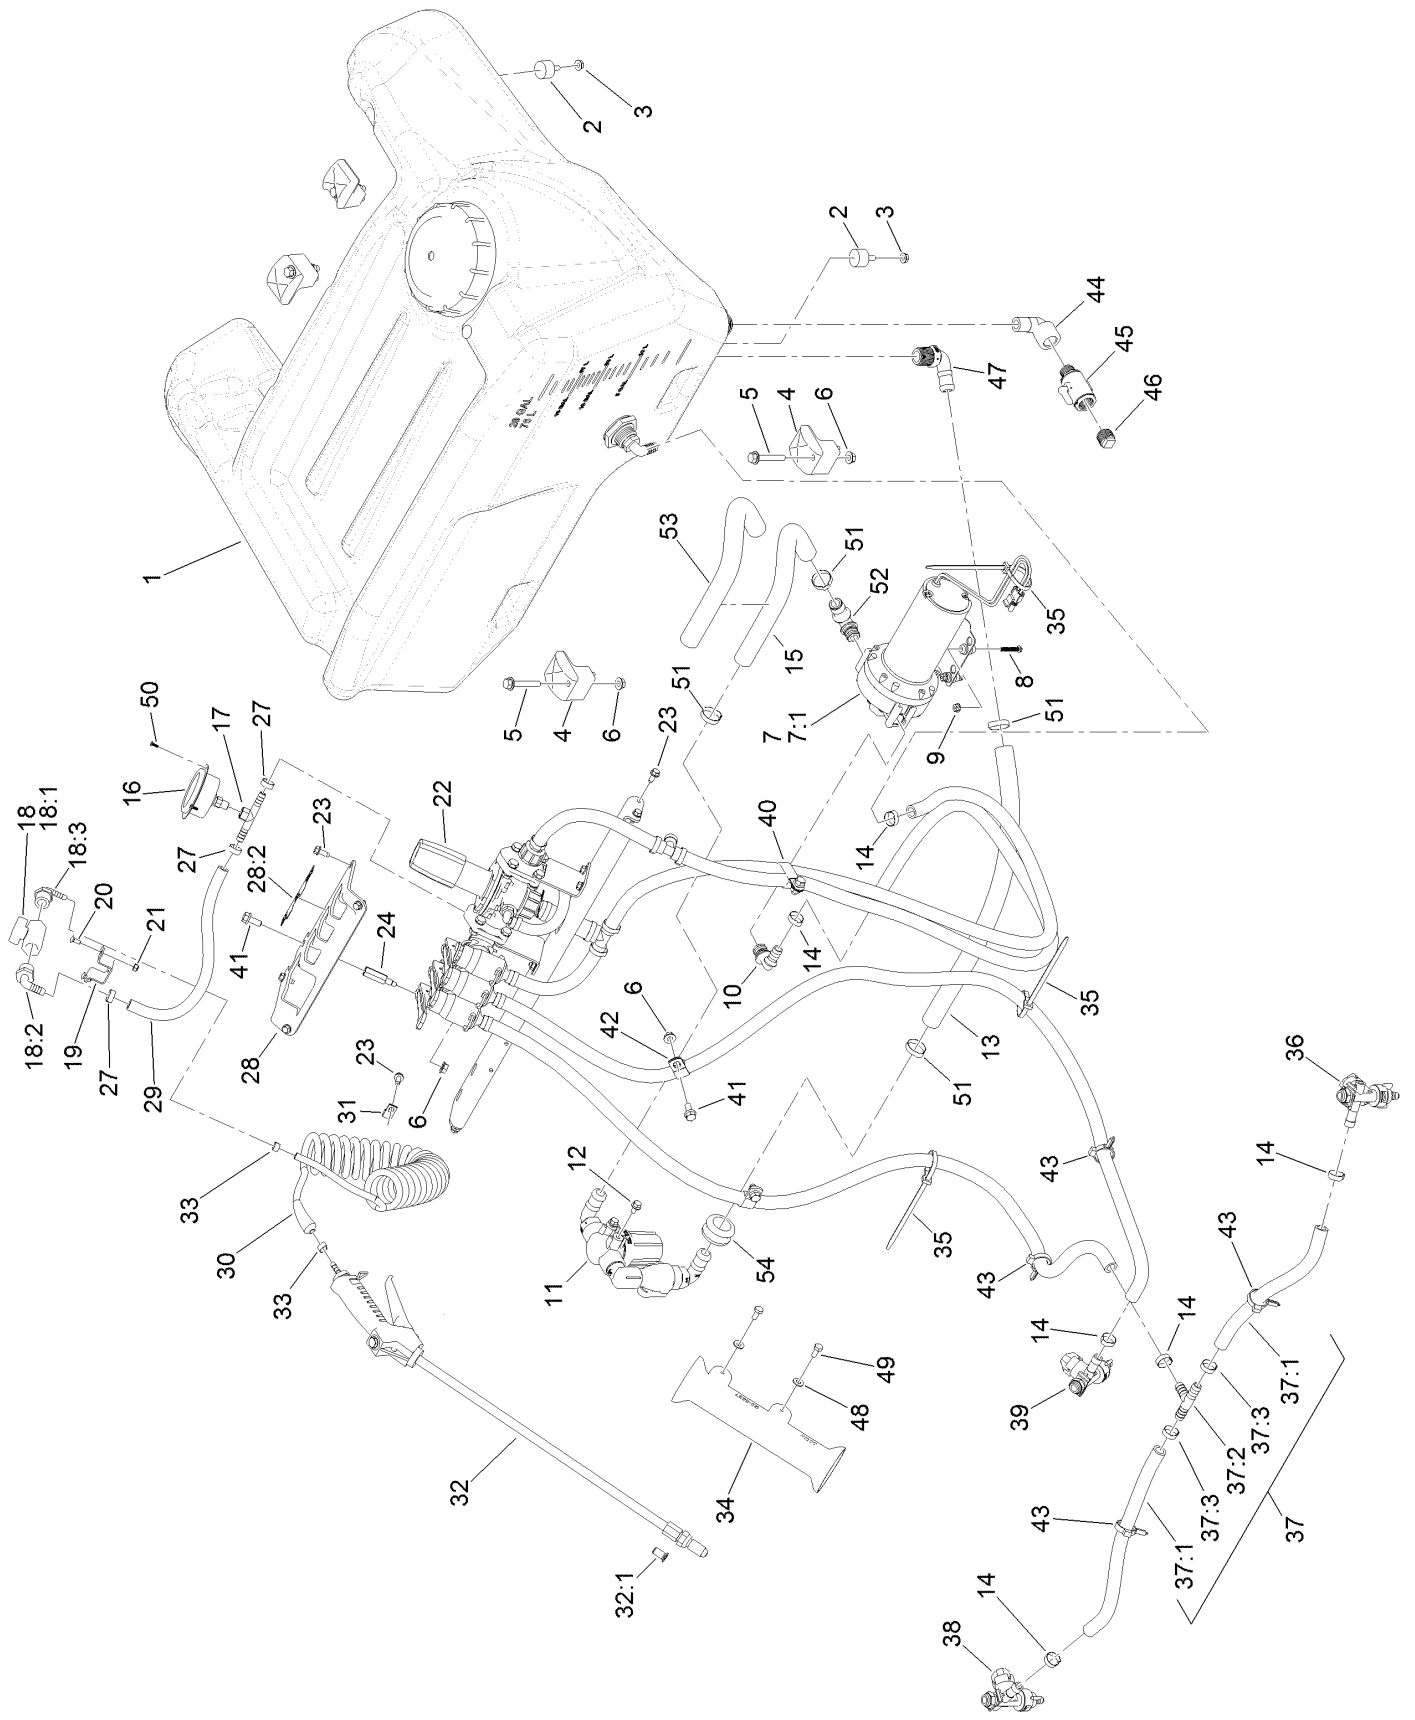


Spray System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0286	1	Tank-Sprayer	29	126-5847	1	Hose-Water, 3/8 Pvc Red
2	1-523420	4	Bumper	30	126-1493	1	Hose-Coiled
3	135-2880	5	Nut-HF	31	2412-89	1	Clamp-R
4	107-4543	4	Clamp	32	126-8000	1	Spray Wand ASM
5	126-2711	4	Screw-HHF	32:1	126-3943	1	Strainer-Nozzle, 50M 5PSI
6	135-2881	7	Nut-HF				Check
7	135-2559	1	Pump-Diaphragm, 3.8 GPM	33	126-2707	2	Clamp
7:1	135-2477	1	Kit-Diaphragm Pump	34	126-3987	1	Holder-Wand
8	692501	4	Screw-SHWH	35	1-303335	5	Tie-Plastic
9	126-2645	4	Nut-HF	36	126-3667	1	Left Nozzle Sub ASM
10	126-0961	1	Fitting-Elbow, Barbed	37	126-2252	1	Hose ASM
11	126-4358	1	Strainer ASM	37:1	126-2264	2	Hose-Water
12	126-2713	2	Screw-HHF	37:2	126-0968	1	Fitting-Tee
13	126-4422	1	Hose-Water	37:3	126-4778	2	Clamp
14	126-4778	6	Clamp	38	126-3669	1	Right Nozzle Sub ASM
15	126-4637	1	Hose-Water	39	126-3668	1	Center Nozzle Sub ASM
16	126-4110	1	Gauge-Pressure	40	120-1959	1	Clamp
17	126-2348	1	Fitting-Tee	41	126-2712	4	Screw-HHF
18		1	Wand Control ASM ●	42	1-633396	2	Clip-Loom
18:1	126-0242	1	Valve-Ball	43	105-1853	4	Clamp-Hose
18:2	126-4992	1	Fitting-Elbow-90	44	108-3573	1	Elbow-90 DEG
18:3	126-4993	1	Fitting-Elbow-90	45	126-1494	1	Microvalve
19	126-0239-03	1	Bracket-Valve	46	363-3125	1	Plug
20	1-807513	2	Bolt-CARR	47	119-0490	1	Elbow-Hosebarb
21	3296-2	2	Nut-Lock, NI	48	360-0140	2	Washer-Flat
22		1	Control Valve Manifold ASM ●	49	126-1290	2	Screw-HH
23	32144-10	9	Screw-HWH	50	363-8552	3	Screw-TAP
24	126-4914	1	Spacer-Mount, Manifold	51	126-4779	6	Clamp
27	126-3749	3	Clamp	52	126-4420	1	Fitting-Elbow
28	126-4180	1	Cover-Controls	53	126-5065	1	Sleeve-Corrugated, Split
28:2	126-4161	1	Decal-Control, Lever	54	126-7410	1	Grommet

● Not serviced separately

Sprayer Tank Assembly

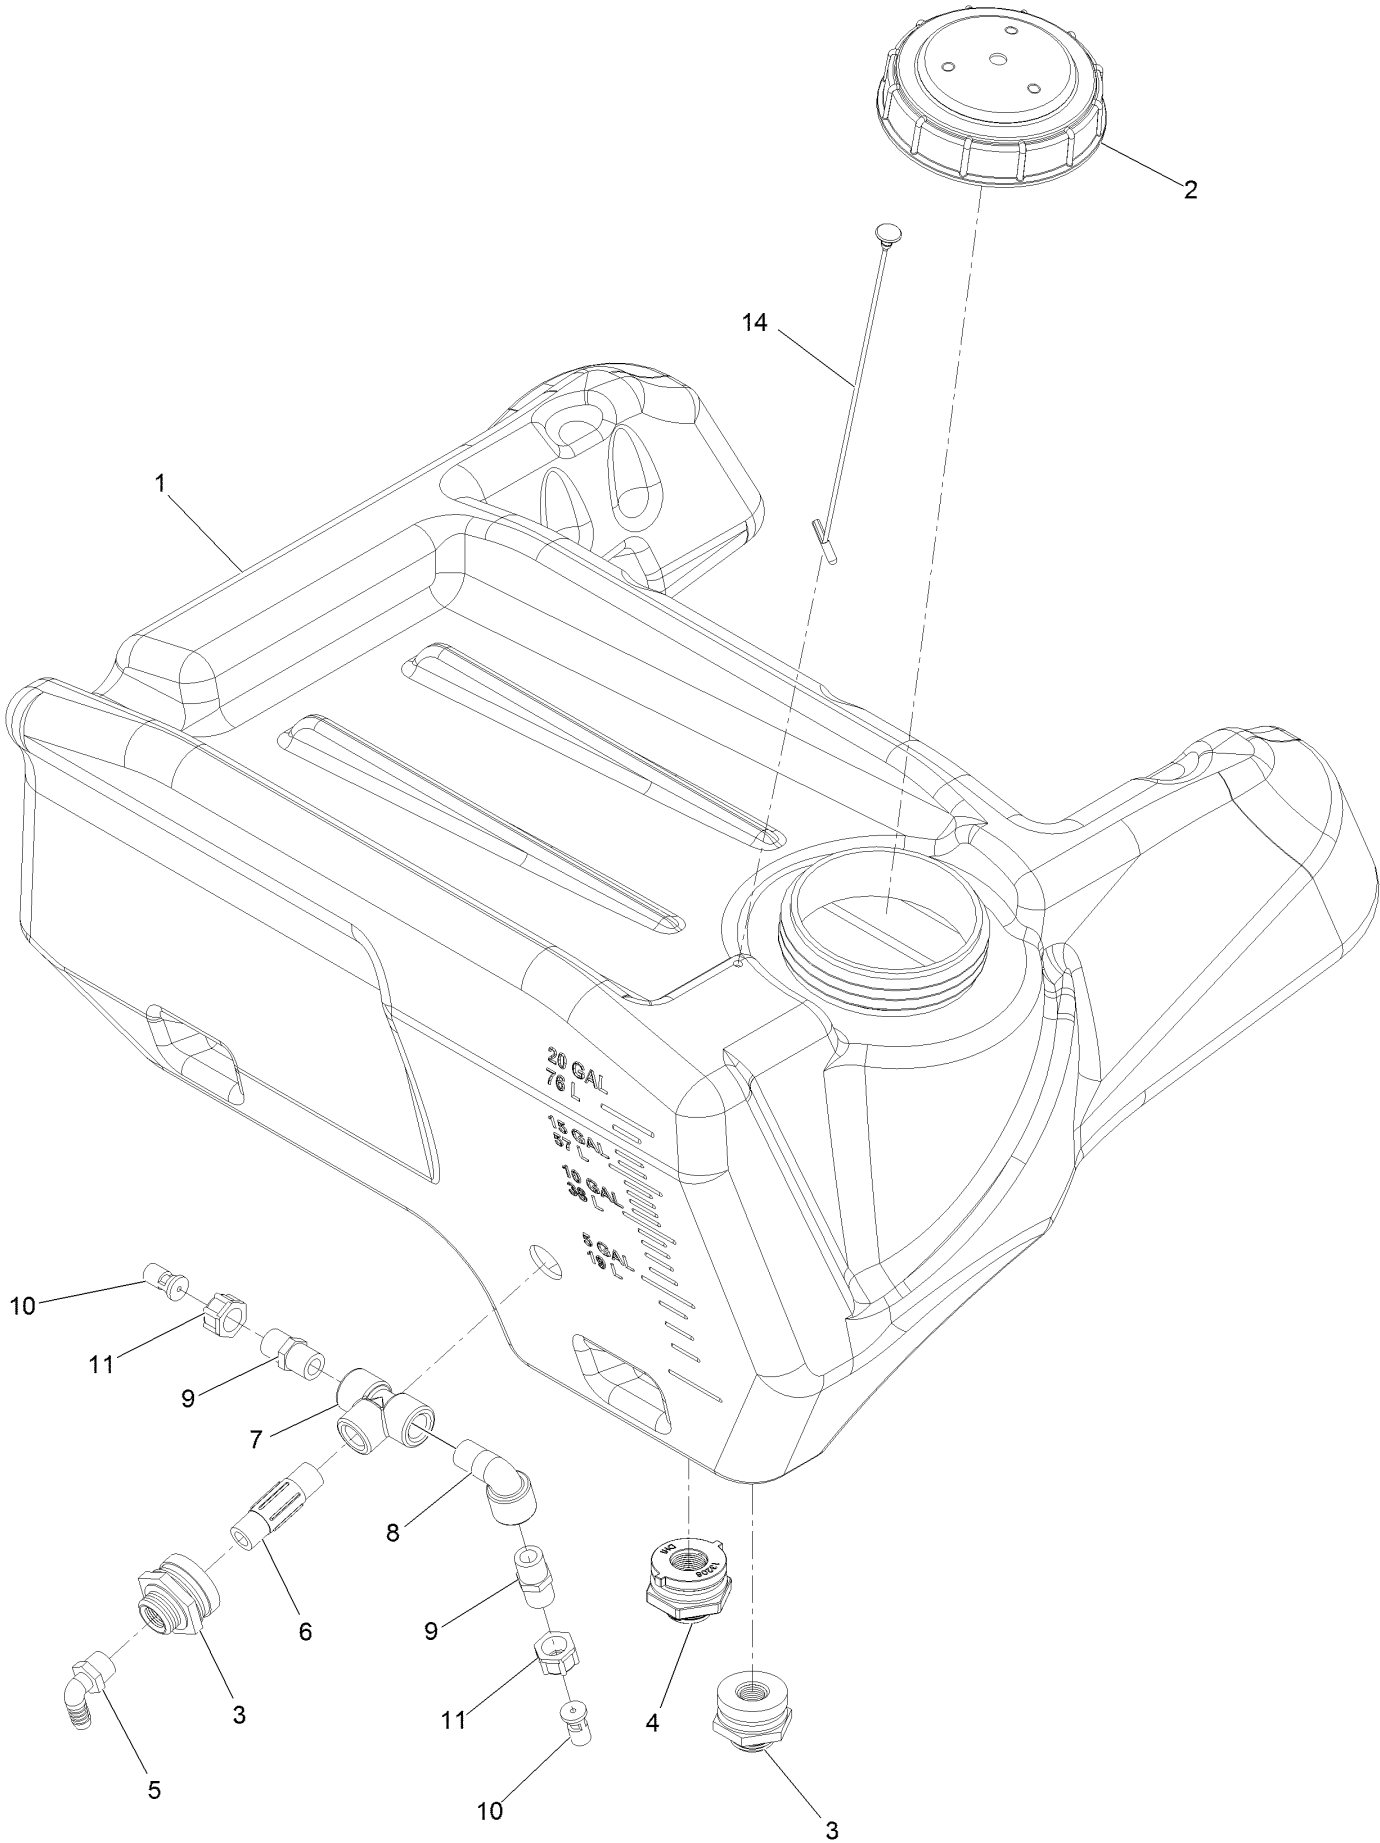


Sprayer Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Tank-Sprayer ●	8	108-3573	1	Elbow-90 DEG
2	126-0285	1	Cap-Water, 5 Inch Vent	9	108-3574	2	Nipple-Short
3	126-0400	2	Fitting-Bulkhead	10	100-6705	2	Nozzle-Agitation
4	126-4393	1	Fitting-Bulkhead	11	99-0766	2	Nut
5	42046	1	Elbow-90 DEG	14	126-3381	1	Lanyard-Cap, Self Anchoring (12 Inch)
6	94-7103	1	Nipple				
7	94-7100	1	Tee				

● Not serviced separately

Strainer Assembly No. 126-4358

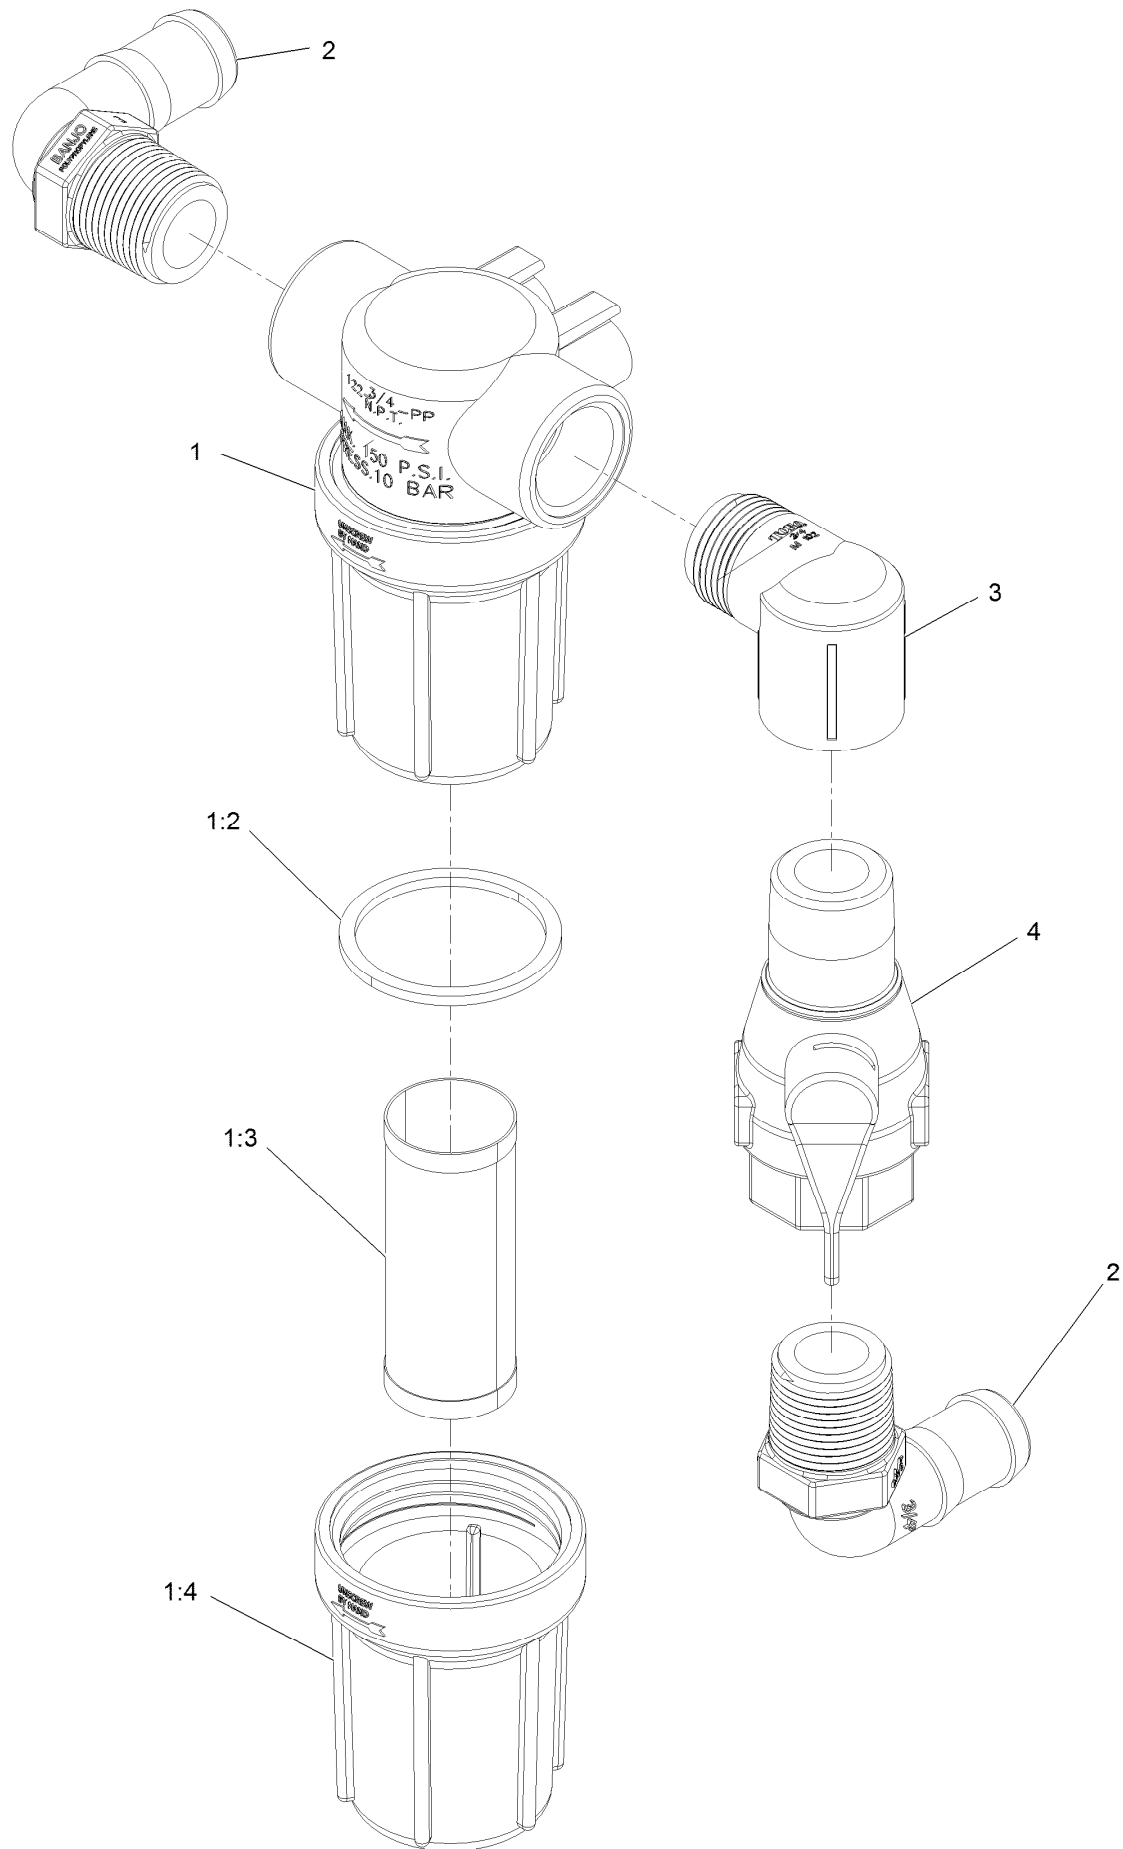


Strainer Assembly No. 126-4358 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-4374	1	Strainer-Line
1:2	126-2272	1	Gasket-Head, Line Strainer
1:3	126-2273	1	Screen-Strainer, 30 Mesh SS

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:4	126-7195	1	Bowl-Strainer
2	119-0490	2	Elbow-Hosebarb
3	102-4272	1	Elbow
4	126-4451	1	Valve-Ball


Control Valve Manifold Assembly

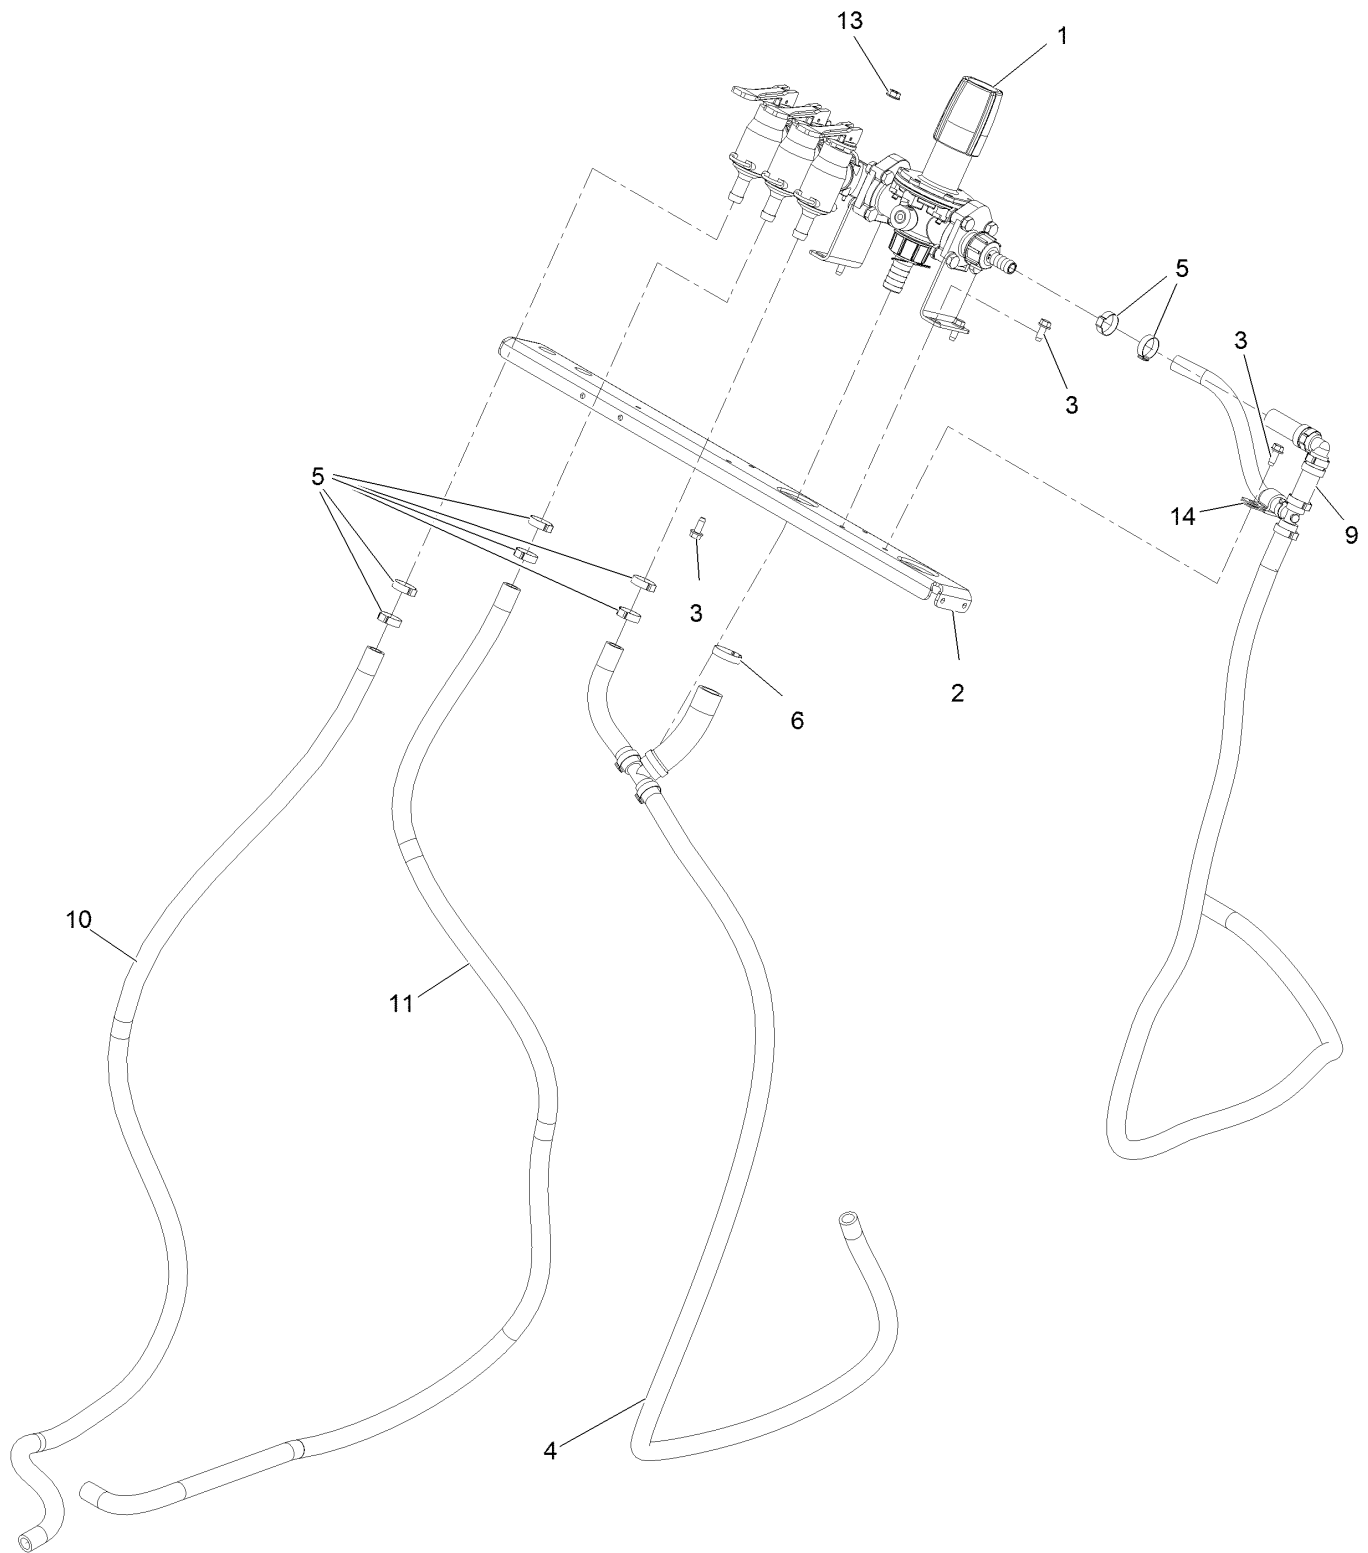

Control Valve Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7635	1	Spray Manifold Assembly	9	126-7304	1	Hose ASM
2	126-7302-03	1	Crossmember-Column	10	126-2263	1	Hose-Water
3	32144-10	5	Screw-HWH	11	126-2261	1	Hose-Water
4	126-2250	1	Hose ASM	13	135-2880	1	Nut-HF
5	126-4778	8	Clamp	14	1-633396	1	Clip-Loom
6	126-4779	1	Clamp				

Spray Manifold Assembly No. 126-7635

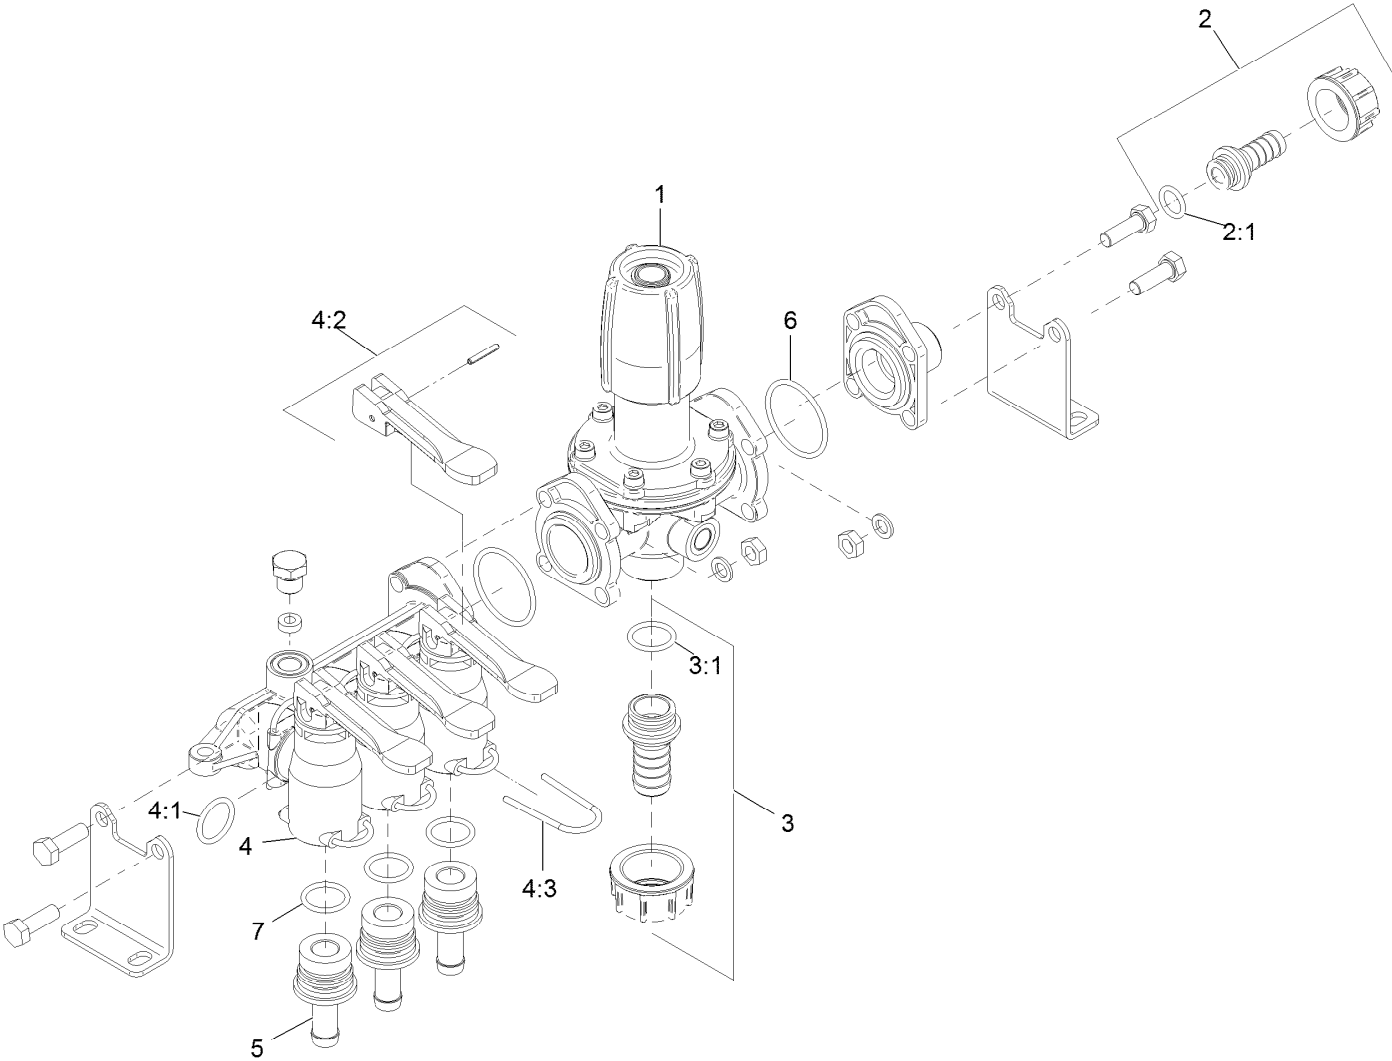


Spray Manifold Assembly No. 126-7635 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-6303	1	Regulator
2	126-6304	1	Flynut Assembly
2:1	126-6322	1	O-Ring Kit, Regulator Inlet Barb
3	126-6317	1	Flynut Assembly
3:1	126-6323	1	O-Ring Kit, Regulator Outlet Barb
4	126-7641	1	Valve Assembly W/ O-Ring

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4:1	126-6328	1	O-Ring Kit, Valve Inlet
4:2	126-6319	1	Lever And Pin Assembly
4:3	126-6332	1	Wireform Retainer Kit
5	126-6321	1	Hose Barb
6	126-6326	1	O-Ring Kit, Regulator Flange
7	126-6327	1	O-Ring Kit, Valve Outlet Barb

Hose Assembly No. 126-2250

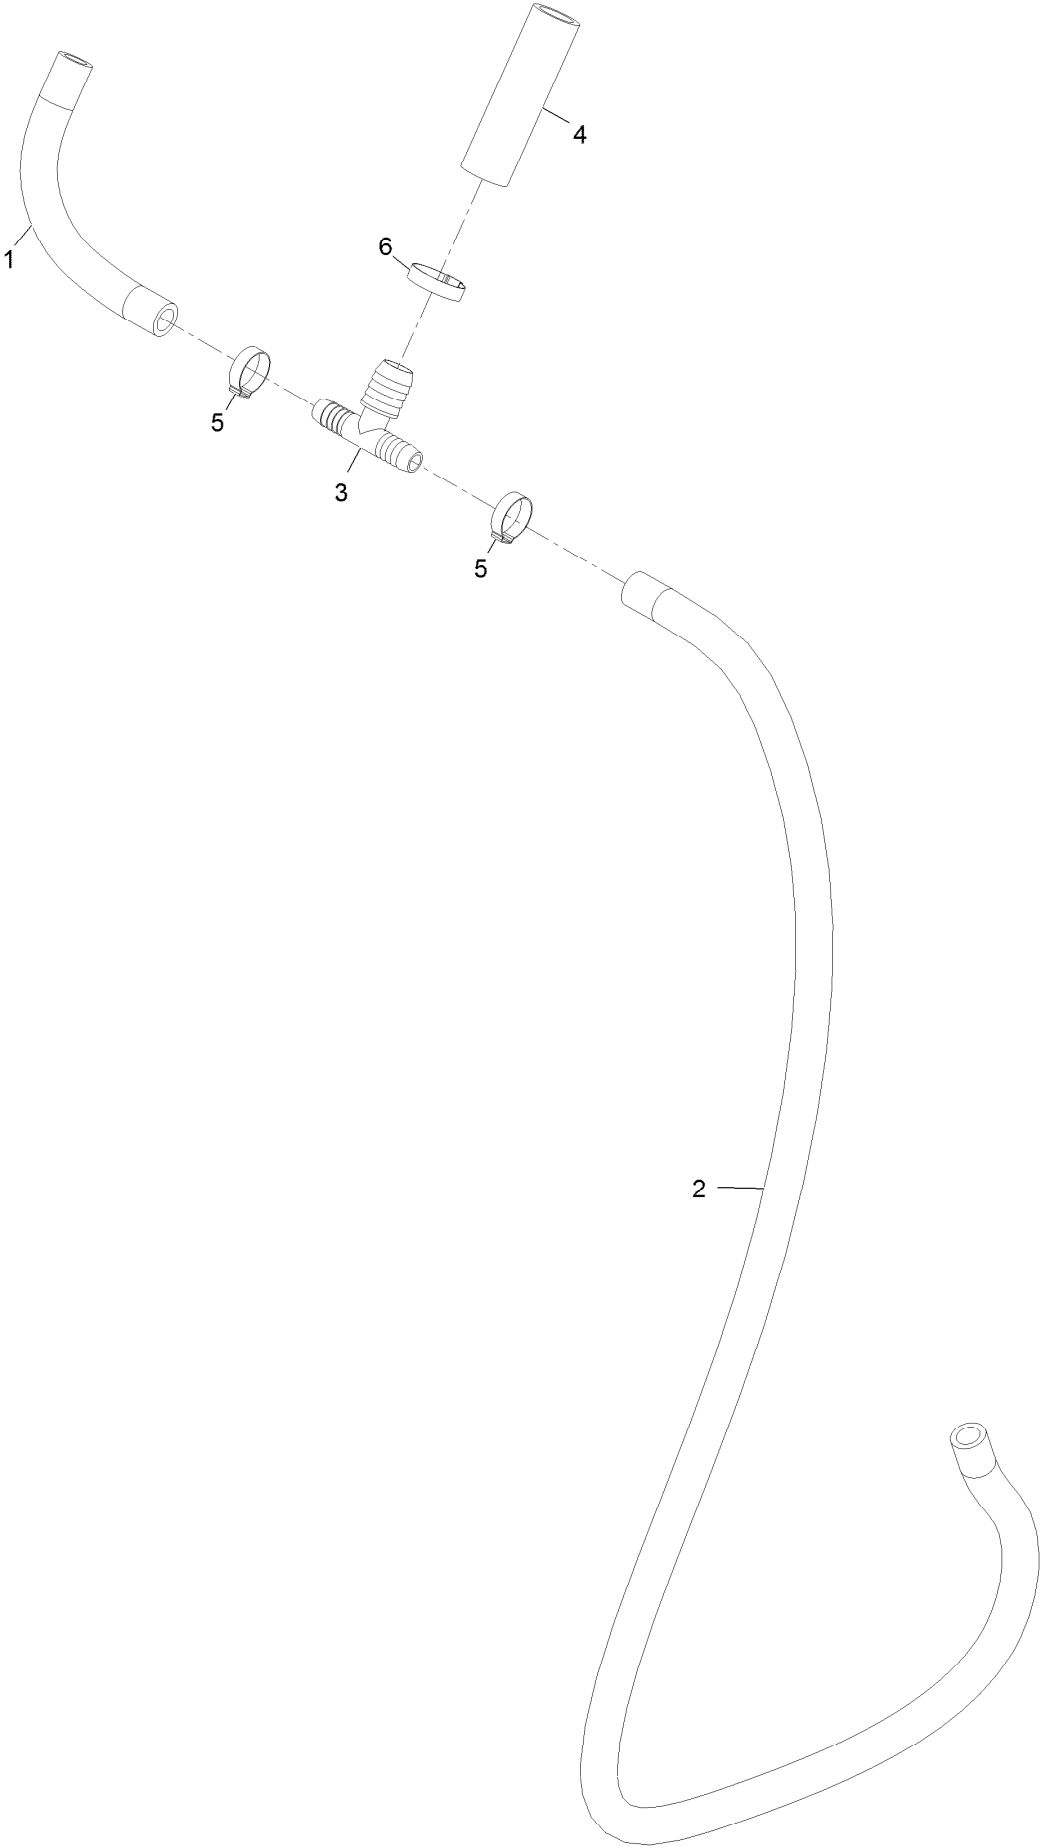


Hose Assembly No. 126-2250 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-2257	1	Hose-Water
2	126-2259	1	Hose-Water
3	126-0969	1	Fitting-Tee

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	126-0865	1	Hose-Water
5	126-4778	2	Clamp
6	126-4779	1	Clamp

Hose Assembly No. 126-7304

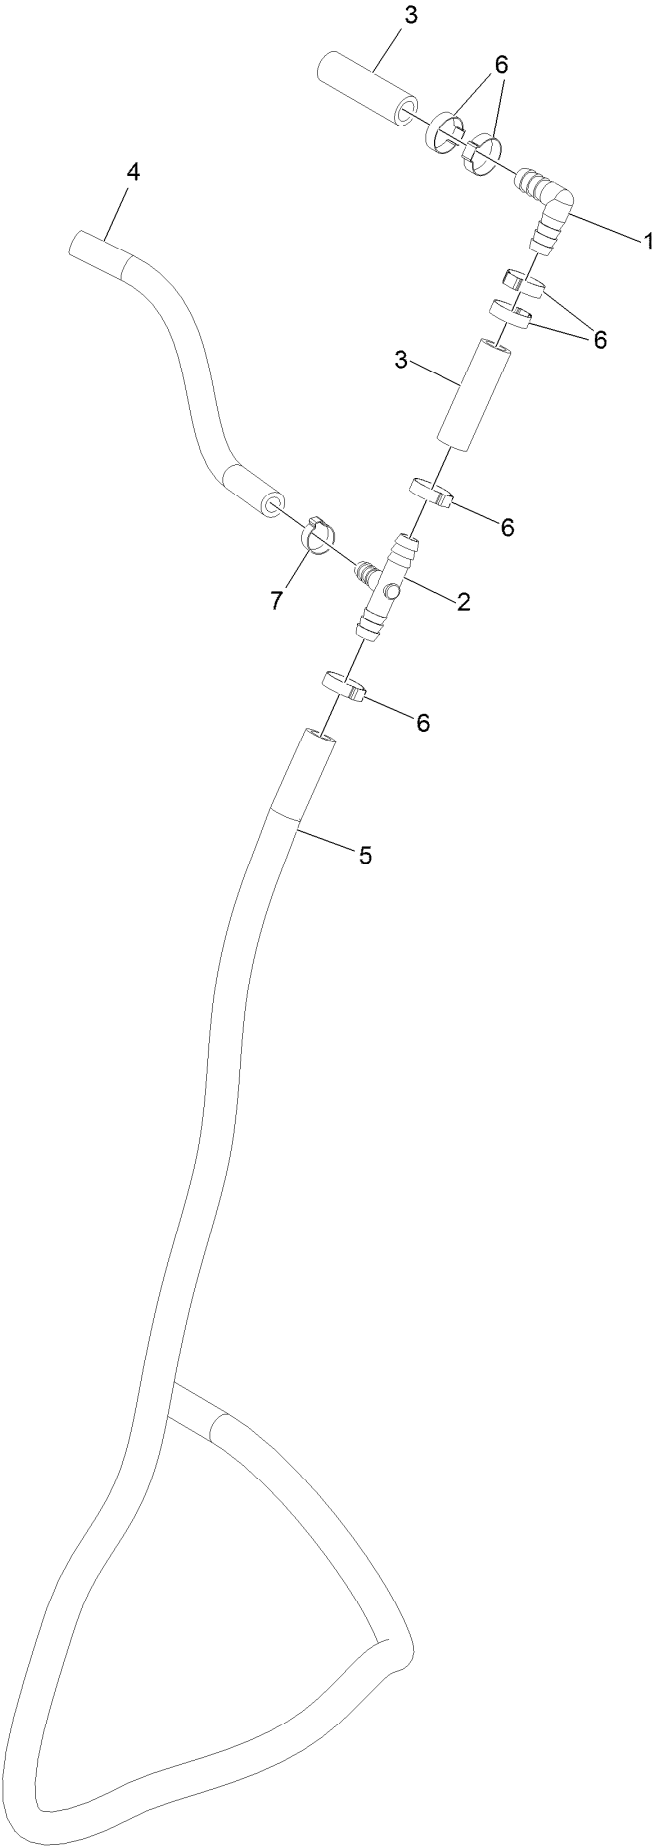


Hose Assembly No. 126-7304 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1001	1	Fitting-Elbow-90
2	99-7371	1	Connector-Tee
3	126-7231	2	Hose-Water
4	126-7307	1	Hose-Water

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	126-7306	1	Hose-Water
6	126-4778	6	Clamp
7	126-3749	1	Clamp

Left Nozzle Assembly No. 126-3667

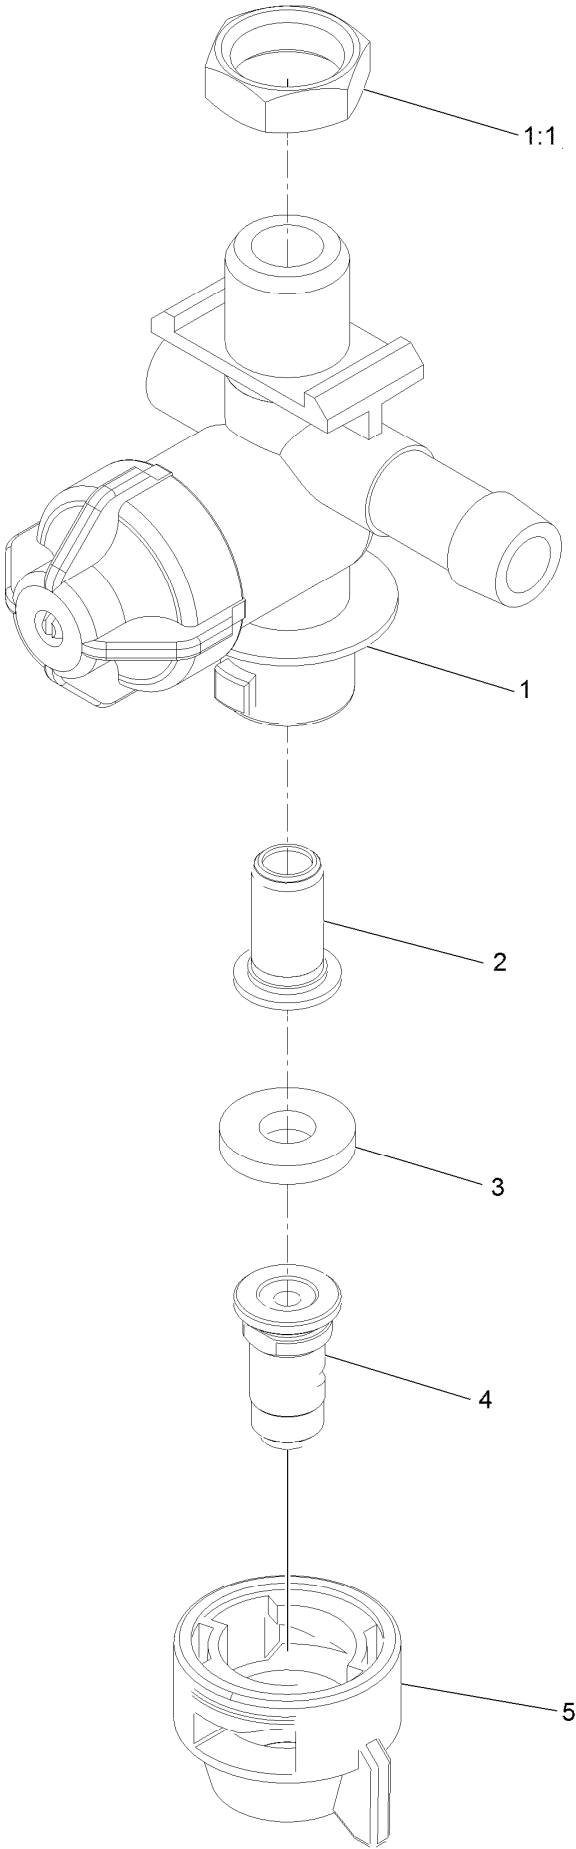


Left Nozzle Assembly No. 126-3667 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9790	1	LH Nozzle Body ASM	5	116-9796	1	Cap-Nozzle
1:1	126-2801	1	Nut-Nylon	99	126-7172	1	Nozzle-Spray, Blue ●■
2	126-1212	1	Strainer-Tip	99	126-7171	1	Nozzle-Spray, Brown ●■
3	116-9797	1	Gasket-Seal	99	126-7170	1	Nozzle-Spray, Gray ●■
4	116-9798	1	Nozzle-Spray, White	99	126-2566	1	Nozzle-Spray, Red ●■

● Not illustrated

■ Sold separately

Center Nozzle Assembly No. 126-3668

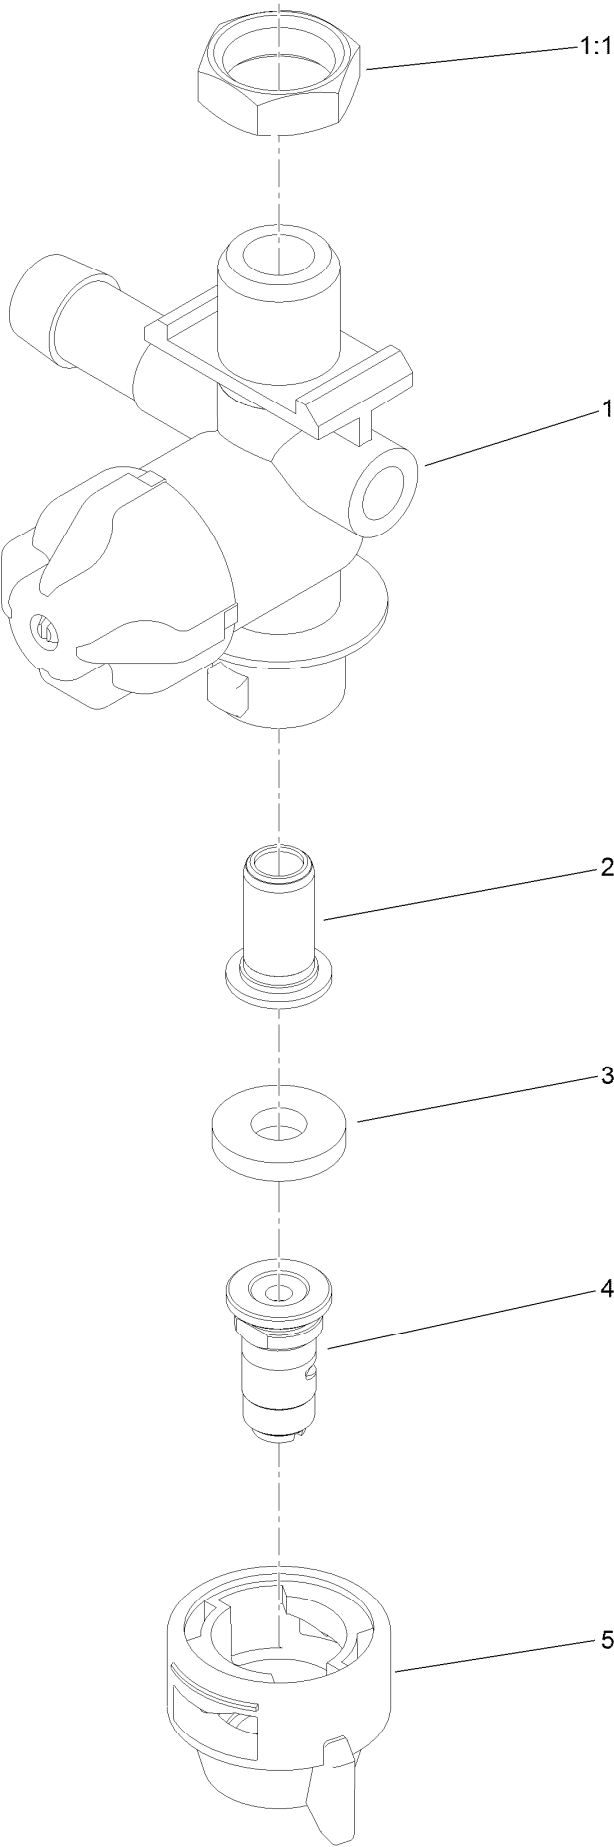

Center Nozzle Assembly No. 126-3668 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	126-2566	1	Nozzle-Spray, Red

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	116-9796	1	Cap-Nozzle
99	126-7170	1	Nozzle-Spray, Gray ●■
99	116-9798	1	Nozzle-Spray, White ●■
99	126-7171	1	Nozzle-Spray, Brown ●■
99	126-7172	1	Nozzle-Spray, Blue ●■

● Not illustrated

■ Sold separately

Right Nozzle Assembly No. 126-3669

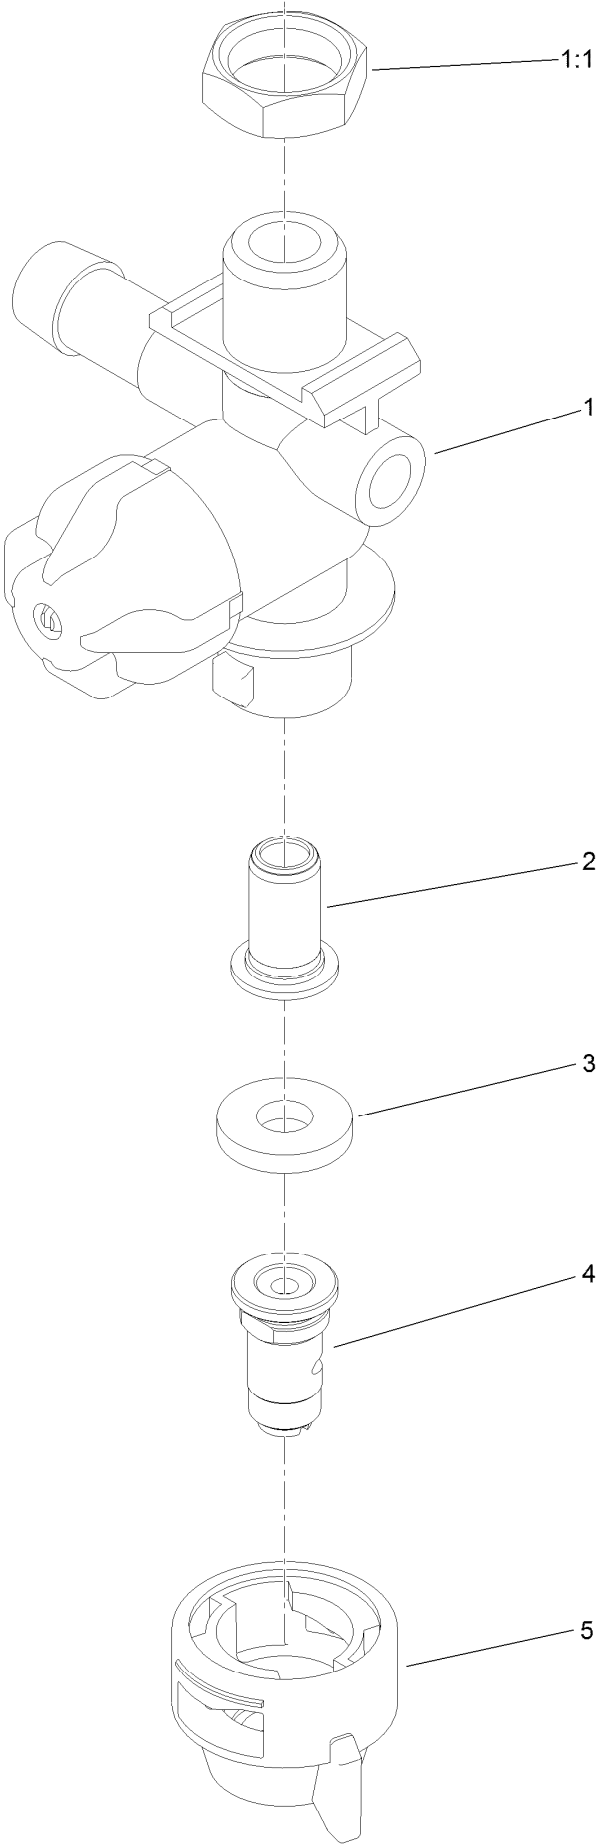


Right Nozzle Assembly No. 126-3669 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	116-9798	1	Nozzle-Spray, White

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	116-9796	1	Cap-Nozzle
99	126-7172	1	Nozzle-Spray, Blue ●
99	126-7171	1	Nozzle-Spray, Brown ●
99	126-7170	1	Nozzle-Spray, Gray ●
99	126-2566	1	Nozzle-Spray, Red ●

● Not illustrated

Spreader Assembly

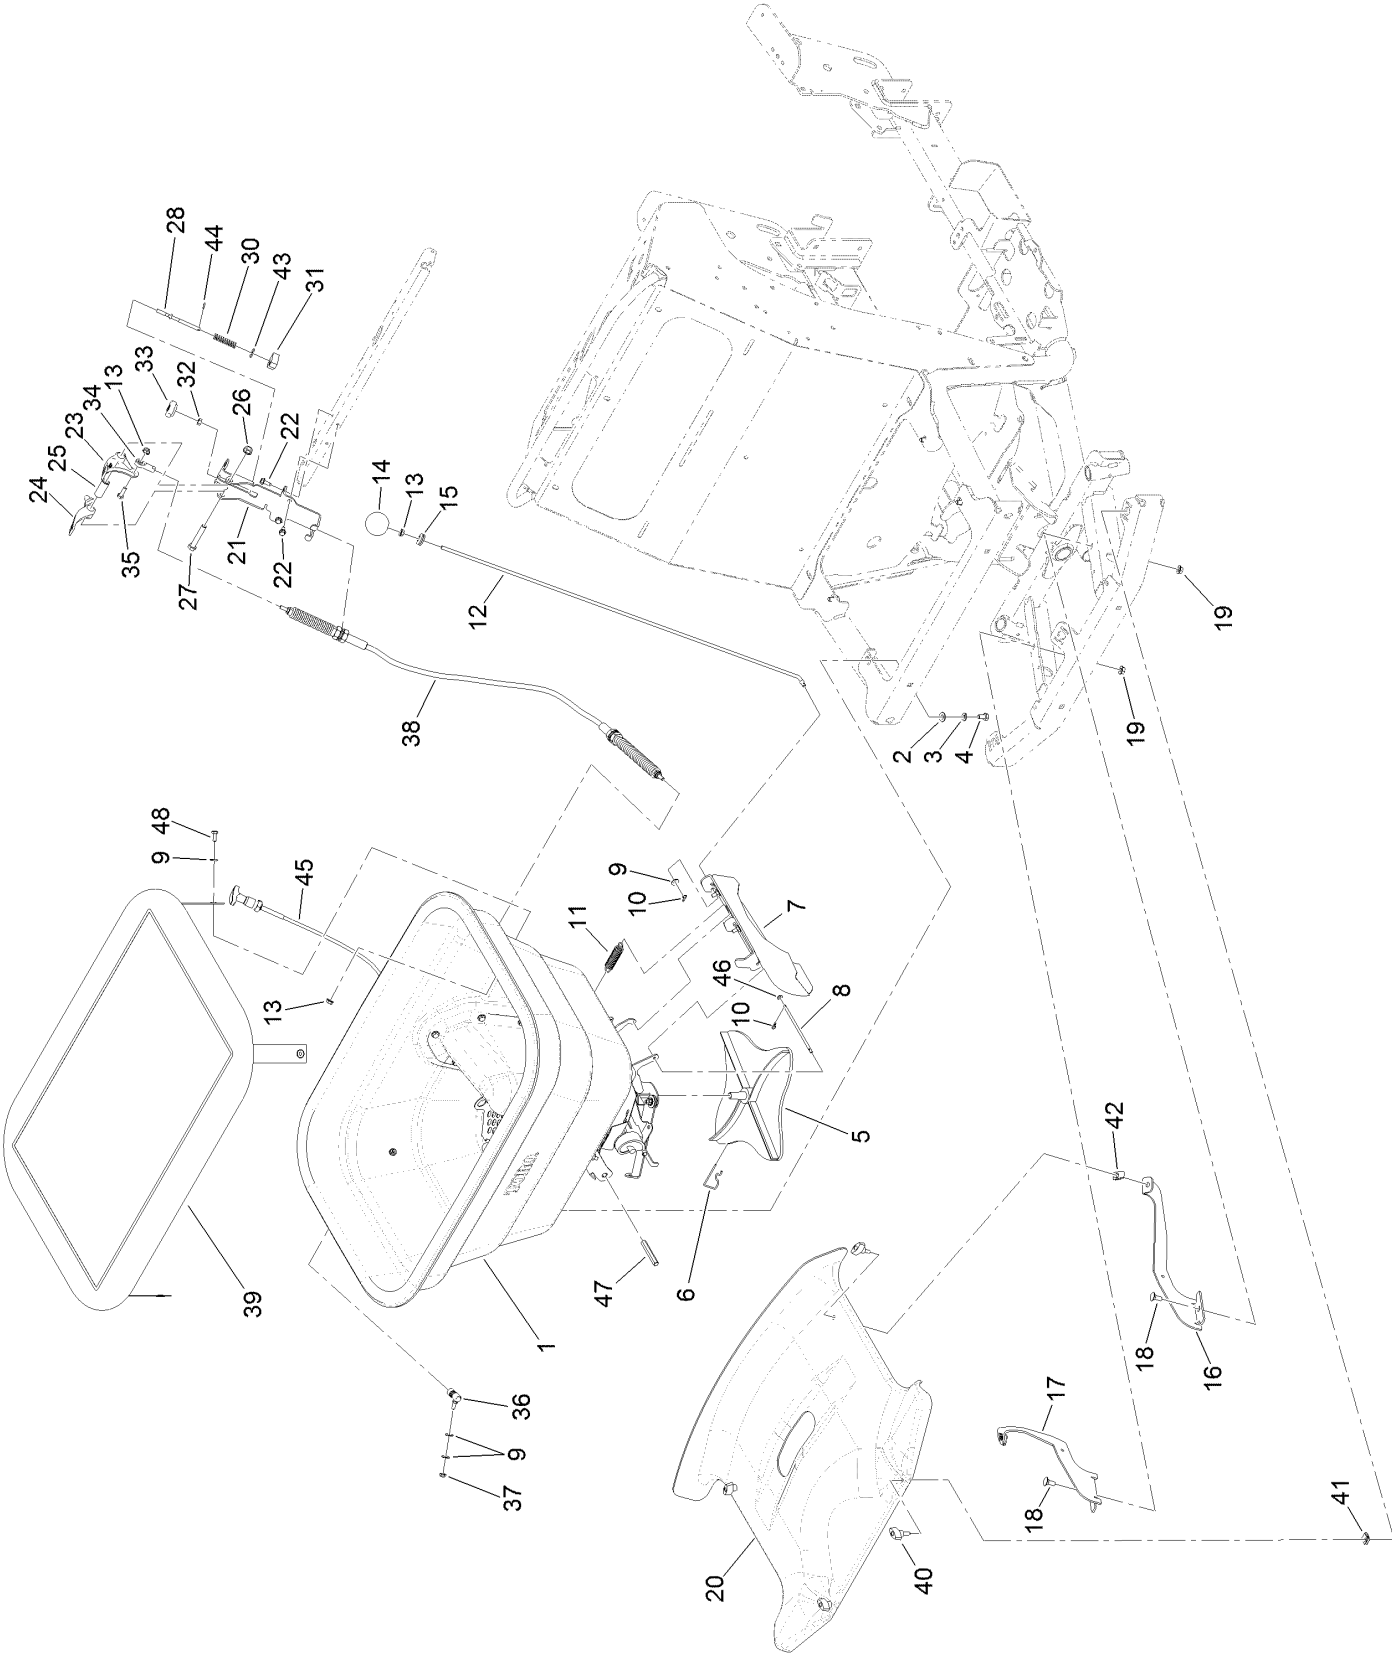


Spreader Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Spreader Hopper ASM ●	24	126-3948	1	Lever-Spread, Narrow
2	107-0279	4	Washer	25	126-3984	1	Spacer
3	107-0280	4	Washer-Lock	26	135-2882	1	Nut-HF
4	126-2506	4	Screw-HH	27	323-11	1	Screw-HH
5	126-0858	1	Spinner-Spreader	28	126-3929	1	Link-Adjust, Narrow
6	126-1246	1	Clip-Spinner	30	125-0547	1	Spring-Compression, Bail
7		1	Side Deflector ASM ●	31	126-3147	1	Stop-Spread, Narrow
8	135-2558	1	Pin-Deflector	32	126-4891	1	Nut-Coupler
9	360-0140	9	Washer-Flat	33	126-3905	1	Knob
10	126-1631	2	Pin-Cotter, Hair	34	2411-41	1	Rod End-Ball Joint
11	126-2127	1	Spring-Extension	35	126-0498	1	Screw-HH
12	126-2190	1	Rod-Control, Deflector	36	126-2005	1	Ball-Joint
13	135-2880	6	Nut-HF	37	126-2725	1	Nut-Hex, NI
14	121-1877	1	Knob-Rate, Flow	38	126-1783	1	Cable
15	1-633630	1	Grommet	39	126-2815	1	Cover-Hopper
16	126-2145	1	Bracket-Cover, Front (LH)	40	126-5846	4	Knob-T
17	126-2146	1	Bracket-Cover, Front (RH)	41	126-3740	2	Nut-Retainer, U Style
18	126-0695	2	Screw-CARR	42	126-3739	2	Nut-Retainer
19	135-2881	2	Nut-HF	43	3256-78	1	Washer-Flat
20	126-2063	1	Cover-Front, Spreader/Sprayer	44	3272-5	1	Pin-Cotter
21	126-3133	1	Mount-Handle	45	126-4150	1	Cable-Control, Turn Lock
22	32144-10	3	Screw-HWH	46	126-0759	1	Washer-Flat
23	126-3947	1	Lever-Spread, Wide	47	126-4655	1	Post-Hex, Diffuser Guide
				48	126-1290	4	Screw-HH

● Not serviced separately

Hopper Assembly

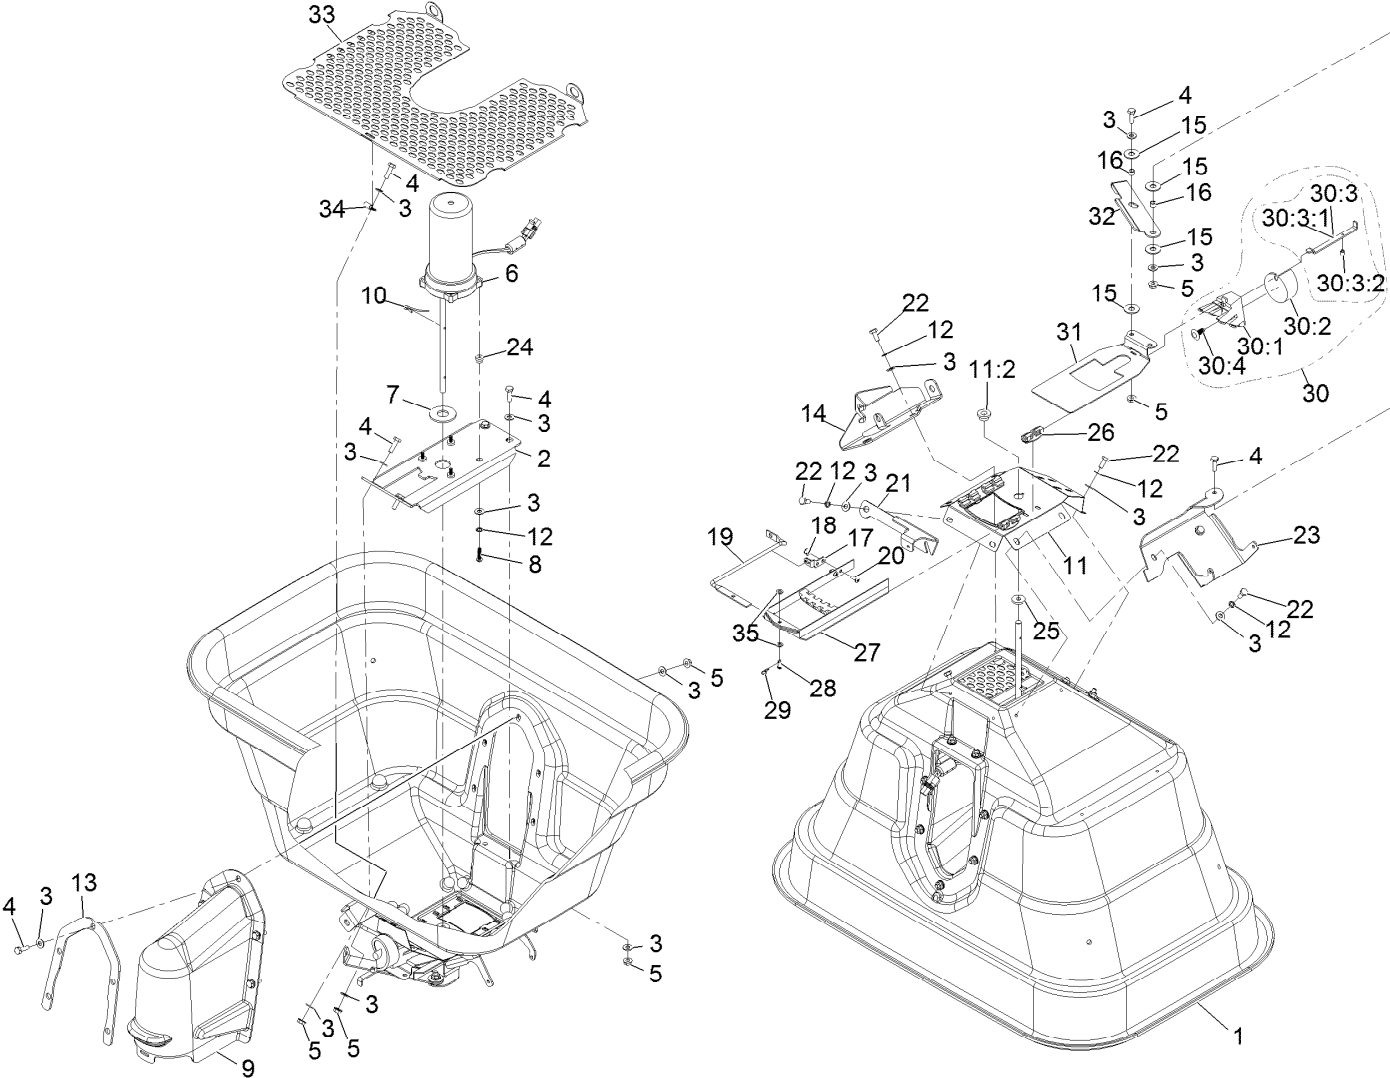


Hopper Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-0671	1	Hopper-Spreader, 175 Lb (Exmark)	22	126-1290	8	Screw-HH 1/4-20 X 5/8 SS
2	126-4245	1	Bracket-Mount, Motor	23	126-1916	1	Bracket-Lever, Hopper Gate
3	360-0140	34	Washer-Flat	24	135-3989	4	Spacer-Flanged
4	126-0498	12	Screw-HH 1/4-20 X 7/8 SS	25	126-1252	1	Washer-Felt
5	135-2880	12	Nut-HF	26	126-0990	4	Guide-Rate, Gate
6	126-6231	1	Spreader Motor ASM	27	126-0991	1	Diffuser
7	83-2400	1	Spacer	28	126-3729	1	Pin-Clevis
8	739001	4	Screw-SHWH 10-32 X 7/8	29	126-1631	1	Pin-Cotter, Hair
9	126-1348	1	Cover-Motor	30	126-0998	1	Rate Dial ASM
10	126-1247	1	Agitator	30:1	126-0985	1	Mount-Dial
11	126-6284	1	Mulch Plate W/ Bearing ASM	30:2	126-0988	1	Dial
11:2	126-0984	1	Bearing-Bottom, Hopper	30:3		1	Rate Gate Link ASM ■
12	363-8641	12	Washer-Lock, Int	30:3:1	126-0987	1	Link-Gate, Rate
13	126-6334	1	Flange-Cover, Motor	30:3:2	126-4196	1	Screw-Shoulder, Slotted
14	126-4650	1	Bracket-Hopper, Gate Controls	30:4	126-0986	1	Clip
15	93-1633	4	Washer	31	126-1903	1	Gate-Rate
16	126-3684	2	Spacer	32	126-4112	1	Lever-Gate
17	126-1237	1	Bracket-Diffuser	33	126-3143	1	Screen-Hopper, Large Hole ●
18	364-0371	2	Nut-Hex	33	126-3240	1	Screen-Hopper, Medium Hole
19	126-1646	1	Rod-Control, Diffuser	33	126-3242	1	Screen-Hopper, Small Hole ●
20	126-9586	2	Screw-PPH	34	126-1624	1	Clamp-Loop
21	126-2082	1	Bracket-Spring, Hopper Deflector	35	126-0759	2	Washer-Flat

● Sold separately

■ Not serviced separately

Spreader Motor Assembly

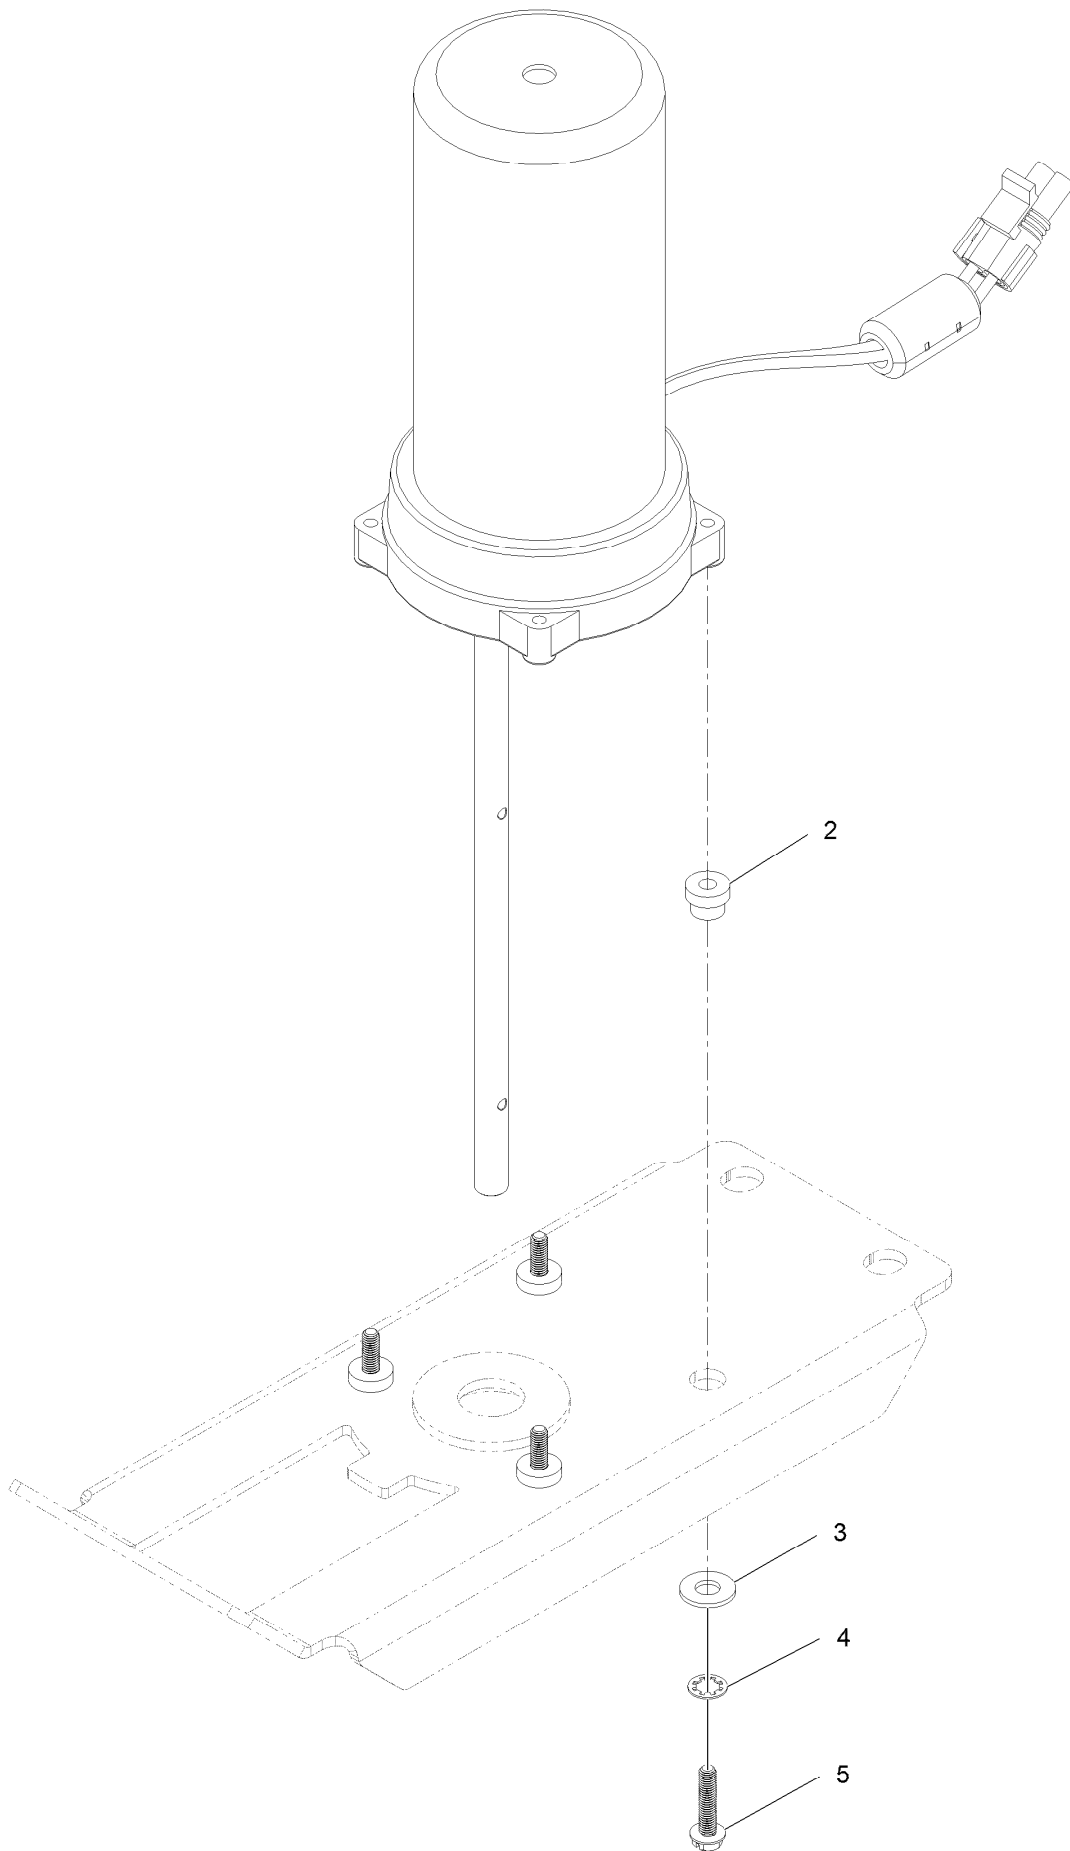


Spreader Motor Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	135-3989	4	Spacer-Flanged
3	360-0140	4	Washer-Flat

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	363-8641	4	Washer-Lock, Int
5	739001	4	Screw-SHWH

Side Deflector Assembly

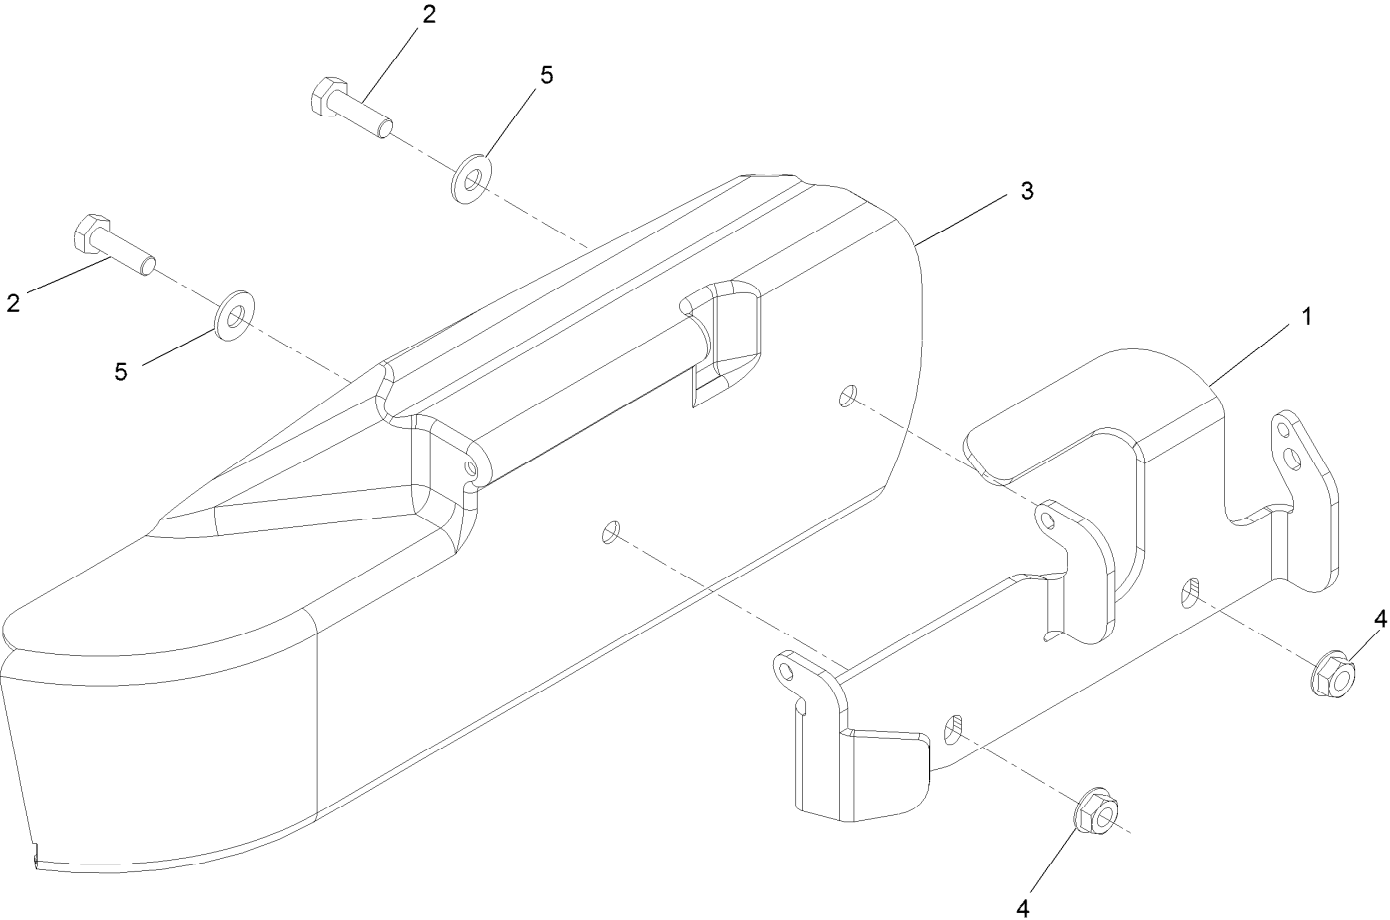


Side Deflector Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-2501	1	Bracket-Deflector, Side
2	126-0498	2	Screw-HH
3	126-1217	1	Deflector-Side

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	135-2880	2	Nut-HF
5	360-0140	2	Washer-Flat


Ground Drive Assembly

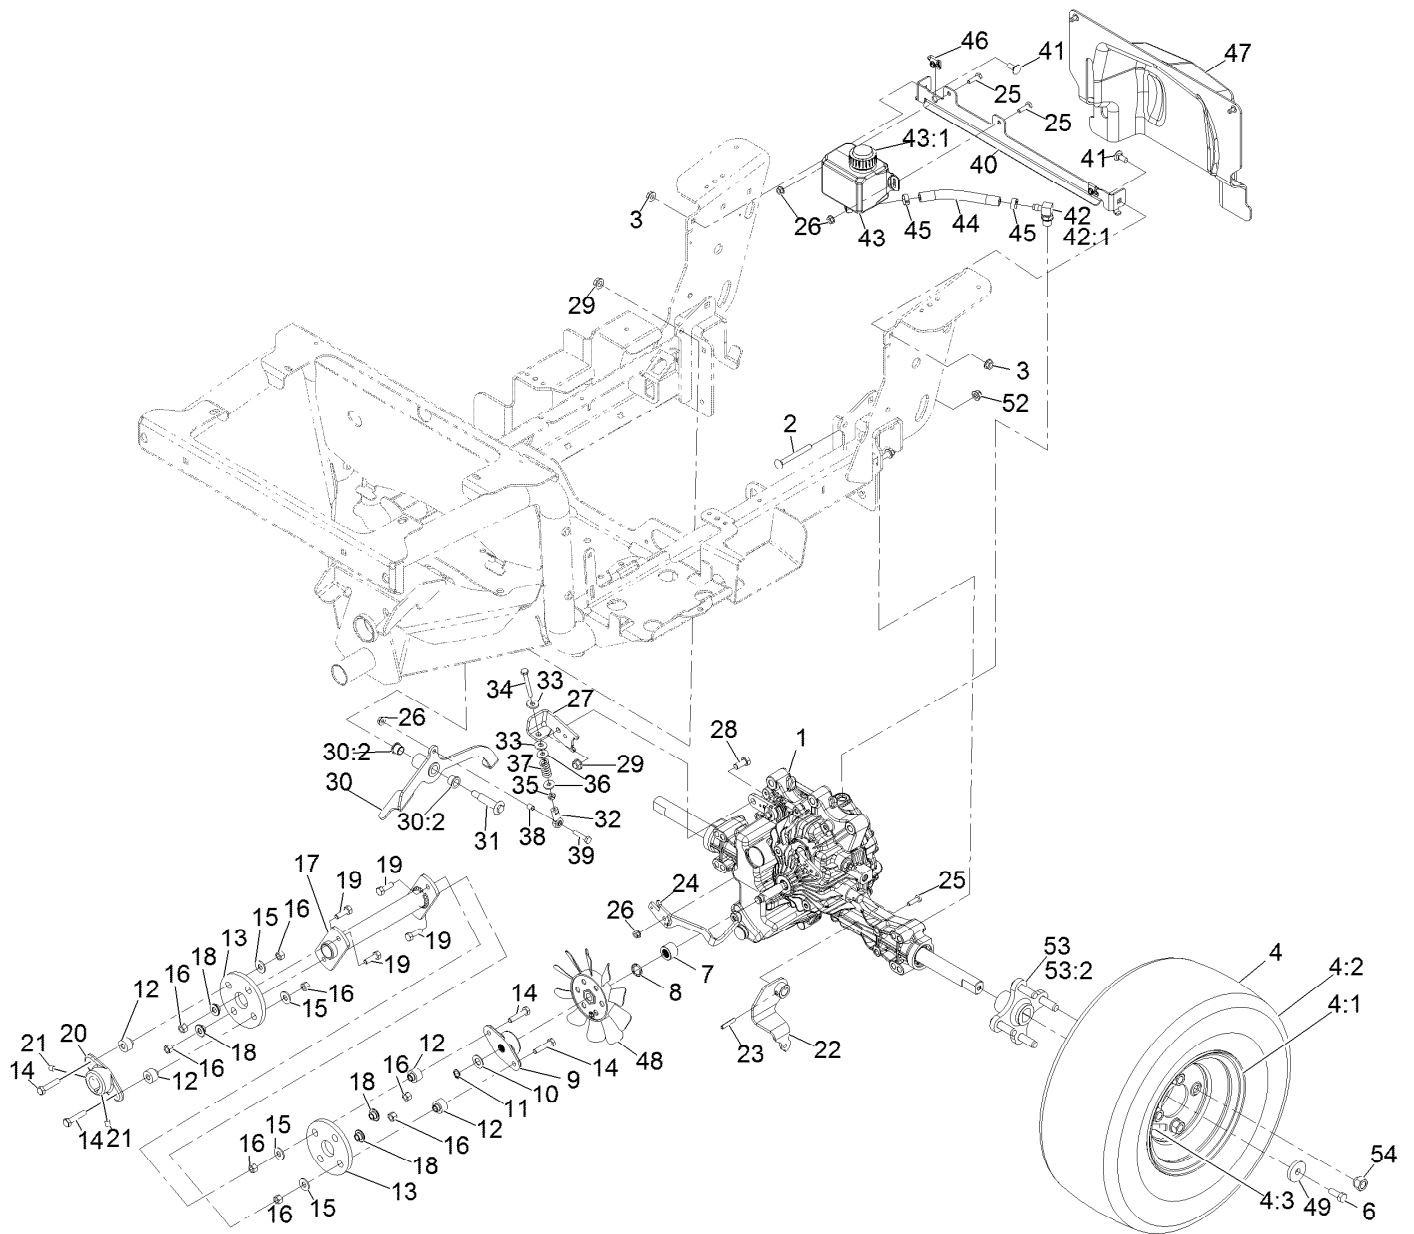

Ground Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-2814	1	Transaxle	28	126-0520	1	Screw-HH
2	3230-26	4	Screw-CARR	29	135-2882	2	Nut-HF
3	135-2881	2	Nut-HF	30	126-0433	1	Brake Lever ASM
4	135-1210	2	Wheel And Tire ASM(18X7.5-8) White	30:2	116-4279	2	Bearing-Flange
4:1	119-8907	1	Tire-4 Ply	31	92-1057	1	Bolt-Shoulder
4:2	135-1211	1	Wheel, 8 X 5.375	32	2411-41	1	Rod End-Ball Joint
4:3	232-27	1	Stem-Valve	33	1-303334	2	Washer-Spring Disc 5/16
6	135-1711	2	Screw-HH	34	126-4009	1	Screw-HH
7	126-2983	1	Spacer-Shaft, Input	35	3220-1	1	Nut-Jam 1/4-28
8	3290-317	1	Washer-Spring	36	3256-78	2	Washer
9	116-9787	1	Hub-Shaft, Transaxle	37	1-323245	1	Spring-Compression
10	605256	1	Spacer	38	612503	1	Spacer
11	32151-61	1	Ring-Retaining	39	321-8	1	Screw-HH 1/4-20 X 1 1/4
12	27-6590	4	Spacer-Coupling, Rubber	40	126-4423-03	1	Bracket-Mount, Tank
13	115-4523	2	Coupling-Rubber	41	126-0695	2	Screw-CARR
14	3210-8	4	Screw-HH 5/16-24 X 1 1/2	42	126-2927	1	Fitting-90 DEG
15	3256-3	4	Washer-5/16 Std	42:1	237-42	1	O-Ring
16	32152-5	8	Nut-Hex 5/16-24	43	126-2578	1	Tank ASM
17	135-5223-03	1	Shaft-Drive	43:1	126-2579	1	Cap-Tank
18	125-9249	4	Spacer-Coupler, Rubber	44	126-2842	1	Hose-Expansion
19	3210-5	4	Screw-HH	45	126-3749	2	Clamp
20	116-9788	1	Hub-Shaft, Engine	46	119-1730	2	Receptacle-Clip, Mini
21	3246-18	2	Setscrew-5/16-18 X 3/8	47	126-1462	1	Transaxle Cover ASM
22	126-6243-03	1	Arm-Motion	48	126-2980	1	Fan-7 Inch
23	126-4295	1	Pin-Spiral	49	1-543610	2	Washer
24	126-2811-03	1	Arm-Release	52	104-8300	4	Nut-Nyloc 5/16-18 Flg
25	126-0498	3	Screw-HH 1/4-20 X 7/8 SS	53	126-9884	2	Wheel Hub ASM
26	135-2880	4	Nut-HF	53:2	10-6830	4	Stud-Type, Drive
27	126-3937-03	1	Arm-Brake	54	242-50	4	Nut-Lug 1/2-20

Transaxle Cover Assembly No. 126-1462

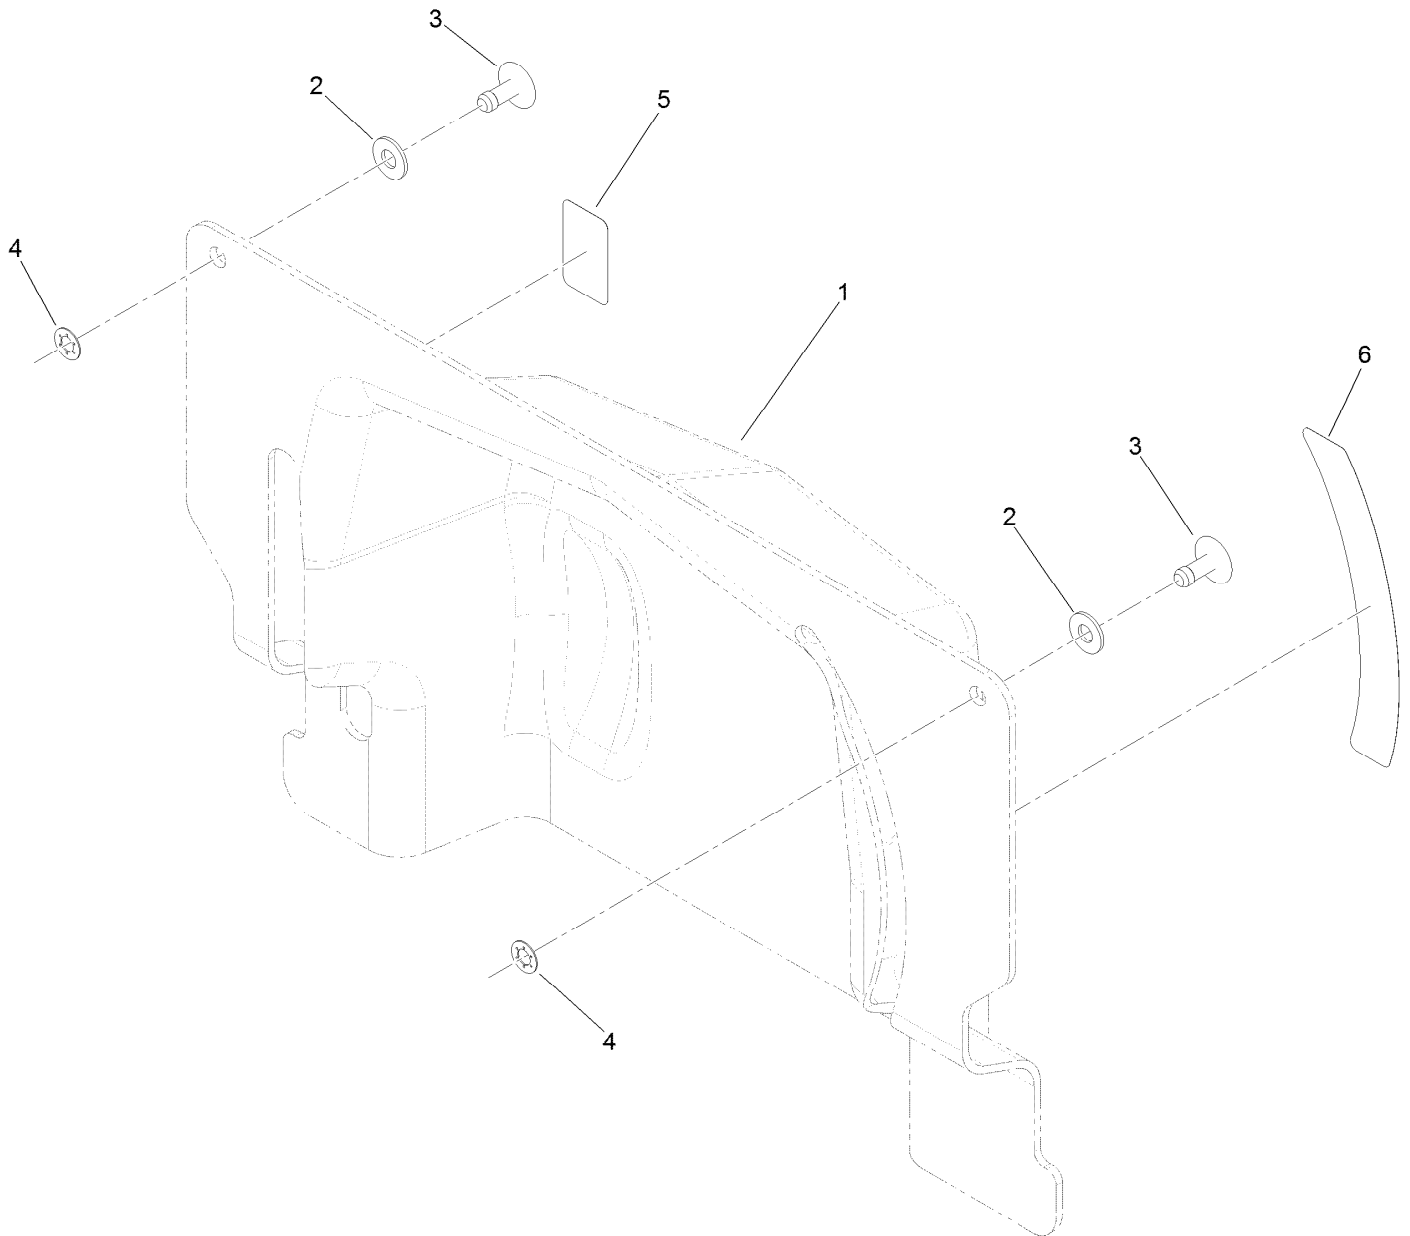


Transaxle Cover Assembly No. 126-1462 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Cover-Transaxle ●
2	360-0140	2	Washer-Flat
3	119-1728	2	Stud-1/4 Turn

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	119-1729	2	Retainer-Stud
5	126-2620	1	Decal-Brake, Park
6	126-2621	1	Decal-Release, Drive

● Not serviced separately



Engine Assembly

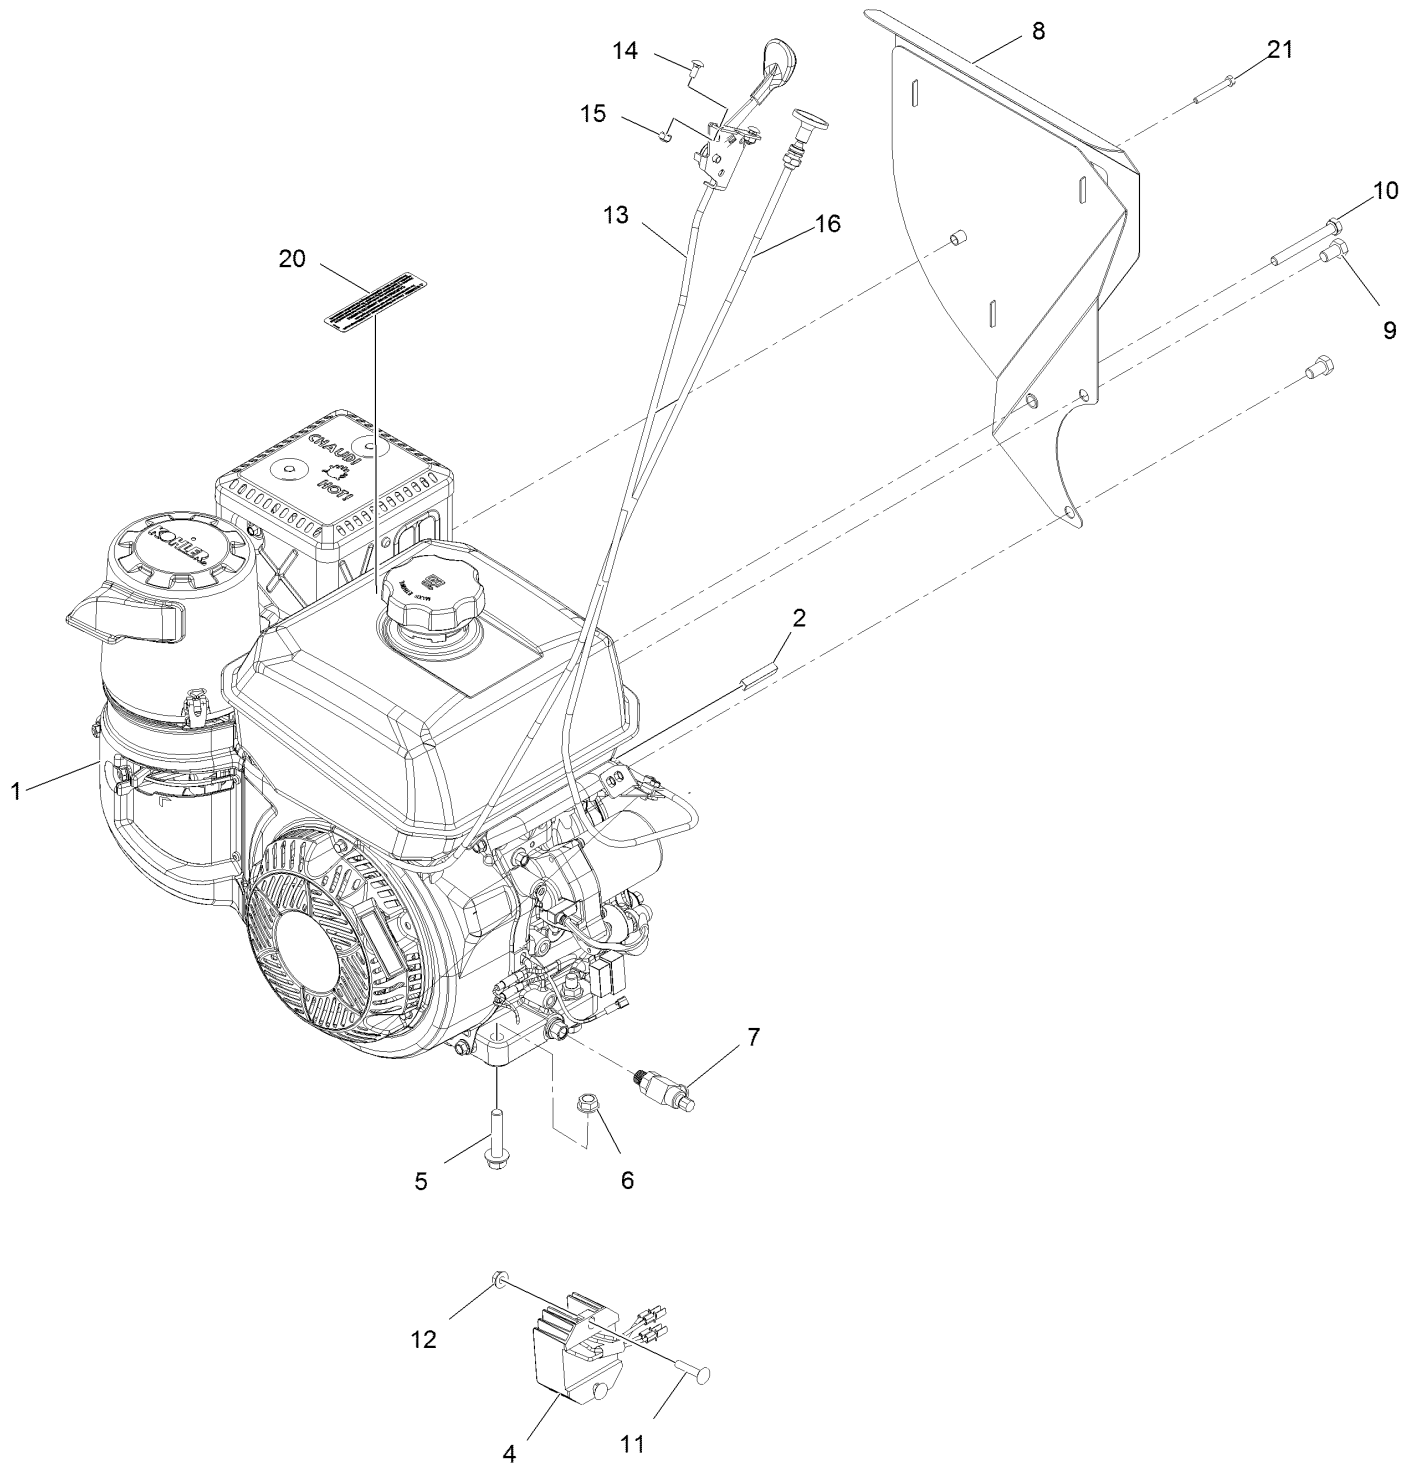

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1359	1	Engine-Kohler, Ch395	11	135-4340	2	Screw-CARR
2	135-3980	1	Key-Square, 7Mm	12	135-2880	2	Nut-HF
4	135-7026	1	Regulator-Trombetta, 18A	13	135-3149	1	Control-Throttle
5	126-2710	4	Screw-HHF	14	1-807513	2	Bolt-Carriage #10-24 X 1/2
6	135-2882	4	Nut-HF	15	3296-2	2	Nut-Nyloc #10-24
7	126-9978	1	Valve-Drain, Oil	16	135-3150	1	Cable-Choke, Push/Pull
8	126-2225	1	Heat Shield ASM	20	133-8062	1	Decal-Arrestor, Spark
9	115-8486	2	Screw-HH	21	135-4328	1	Bolt-M5X0.8Mm X 40 Mm
10	120-1177	1	Screw-HH				Long

Electrical Assembly

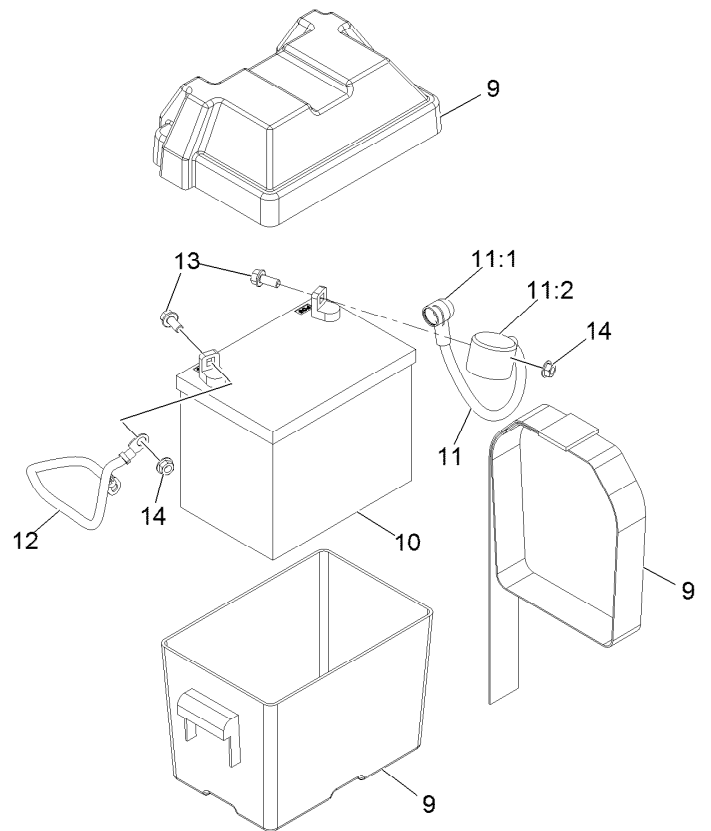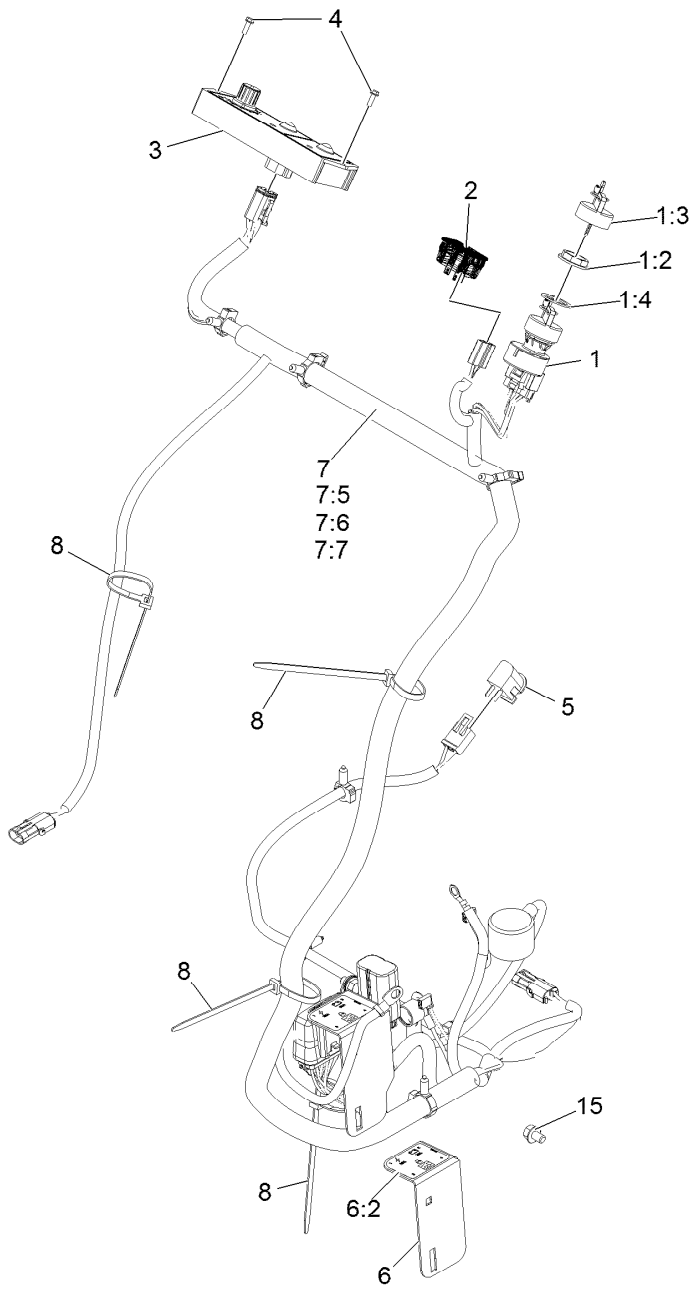

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-6285	1	Ignition Switch ASM	7:7	135-5221	1	Relay-Coil, NC, Mp280
1:2	108-8660	1	Nut-Mounting	8	1-303335	4	Tie-Cable 7 15/16 (Large)
1:3	106-5270	1	Ignition Key Set	9	126-1424	1	Battery Box
1:4	108-8659	1	Washer-Backup	10		1	Battery ●
2	126-3931	1	Meter-Hour	11	135-4669	1	Positive Battery Cable ASM
3	126-6622	1	Controller-DC	11:1	1-543393	1	Insulator-Solenoid
4	32144-87	2	Screw-HWHTF	11:2	109-2407	1	Insulator-Battery
5	82-2190	1	Switch	12	114-9715	1	Cable-Battery, Negative
6	135-4714	1	Fuse Bracket ASM	13	126-2712	2	Screw-HHF 5/16-18 X 3/4 SS
6:2	135-6949	1	Decal-Pdm	14	135-2881	2	Nut-HF
7	135-4709	1	Harness-Wiring	15	68-9410	1	Screw-HHF
7:5	121-8868	2	Fuse-Mini Blade, 20 Amp				
7:6	126-3991	1	Relay-Micro				

● Not serviced separately

Notes:

Notes:

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	OPERATOR CONTROLLED DISCHARGE
FULL SUSPENSION SEAT	SUN SHADE
DECK LIFT ASSIST KIT	TRASH CONTAINER
HITCH KIT	TURF STRIPER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
12V POWER PORT	ULTRA VAC QUICK DISPOSAL SYSTEM
MICRO-MULCH SYSTEM	

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	SNOW BLADE
DUAL-TAIL WHEEL	SNOWBLOWER
FLOOR PAN EXTENDER	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)	WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER	TURF STRIPER
MICRO-MULCH SYSTEM	STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2019 Exmark Mfg. Co., Inc.
2101 Ashland Ave
Beatrice, NE 68310
All Rights Reserved

Part No. 4503-933 Rev. B
(402) 223-6375
Fax (402) 223-5489
Printed in the USA.



* 4 5 0 3 - 9 3 3 * B

www.exmark.com