



Proline 53cm Recycler /Rear Bagging Mower Model No. 22173—200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	3	Control Equipment	14
Gear Case Assembly	5	Fuel Tank/Fuel Valve	15
Engine and BBC Assembly	6	Electric Equipment	16
Fuel Tank and Bracket Assembly	7	Carburetor	17
Handle and Handle Latch Assembly	8	Piston/Crankshaft	18
Controls, Panel and Bail Assembly	9	Air Filter/Muffler	19
Wheel and Tire Assembly No. 74–1720	10	Cooling Equipment	20
Grass Bag Assembly No. 99–2535	11	Lubrication Equipment	21
Cylinder/Crankcase	12	Starter	22
Valve/Camshaft	13		

 
Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Discharge Kit No. 59113	94–1613		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

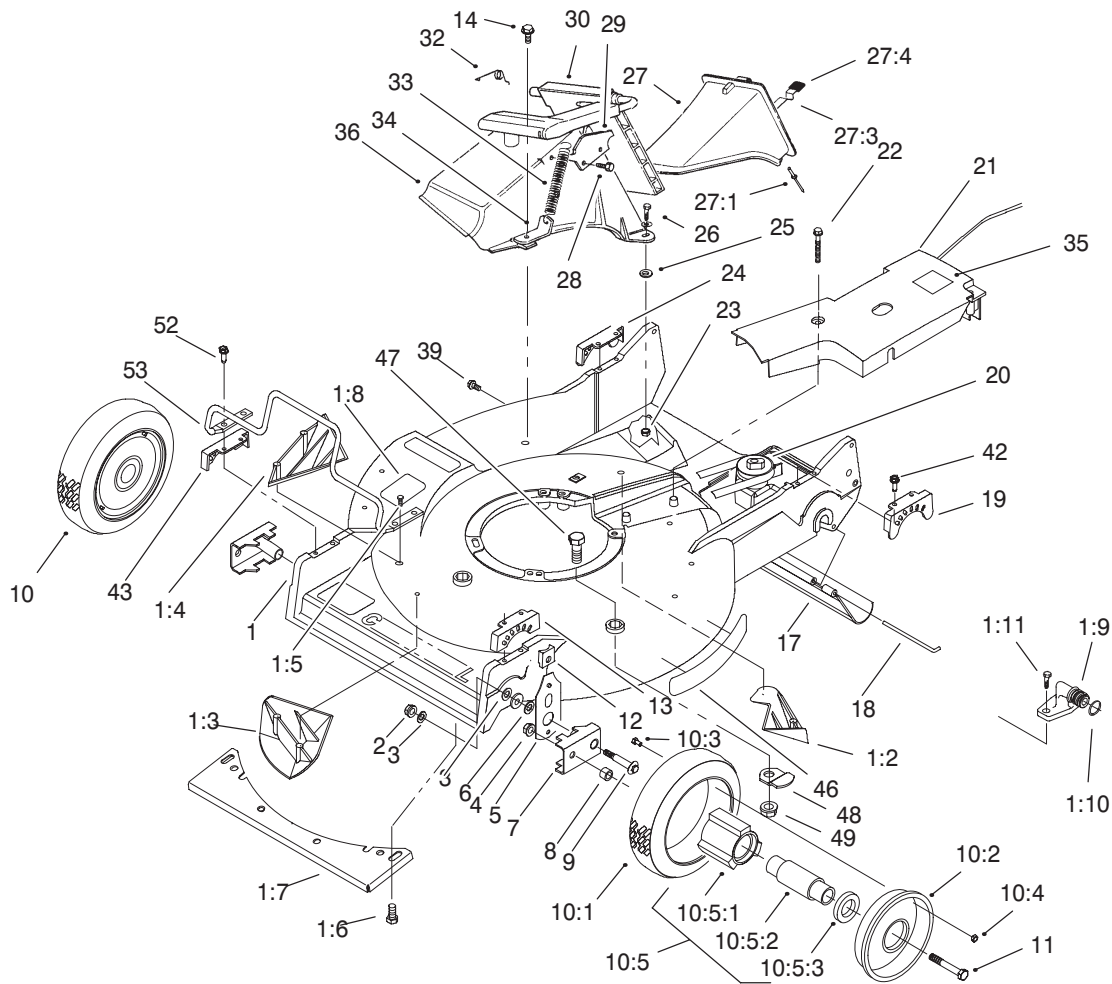

Sheet No.:2
C-2948

Housing Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-7144	1	Housing	10:5:2	52-2440	1	Spacer-Bearing
1:2	92-1750	1	Kicker-Rear	10:5:3	52-2450	2	Bearing-Wheel
1:3	92-1720	1	Kicker-Front	11	323-12	2	Screw-HH
1:4	92-1730	1	Kicker-RH	12	25-7740	2	Knob-Arm
1:5	32144-111	6	Screw-PPH	13	49-8760	1	Quadrant-Front, LH
1:6	32144-70	4	Screw-HH	14	46-6811	3	Screw-HWH
1:7	46-5400-03	1	Shield	17	44-0580	1	Shield-Trailing
1:8	93-6654	1	Decal-Danger, Covers	18	33-3208	1	Rod-Shield
1:9	95-2747	1	Fitting-Washout	19	49-8740	1	Quadrant-Rear, LH
1:10	46-6290	1	O-Ring	20	74-1861	1	Gear Case ASM
1:11	46-6811	2	Screw-HWH	21	99-6298	1	Cover-Belt
2	3296-6	2	Nut-Lock, NI	22	37-7260	2	Screw-HH
3	40-1940	4	Washer	23	3296-42	2	Nut-Lock
4	32152-2	2	Nut-Conelock	24	49-8750	1	Quadrant-Rear, RH
5	66-7560	2	Front Spring Arm ASM	25	3256-22	2	Washer-Flat
6	257-3	2	Washer-Thrust	26	321-7	2	Screw-HH
7	61-8300	2	Arm-Pivot, Front	27	77-0502	1	Discharge Plug ASM
8	52-2480	2	Spacer-Wheel	27:1	3295-35	1	Rivet-Head, Flat
9	27-6232	2	Bolt-Wheel	27:3	76-4640	1	Latch-Plug, Discharge
10	53-7720	2	Wheel & Tire ASM	27:4	76-4650	1	Grip-Latch
10:1	53-7740	1	Tire	28	46-8090	2	Screw-Plastite
10:2	53-7780-06	2	Plate-Wheel, Half	29	93-3154	1	Latch-Plate
10:3	321-2	4	Screw-HH	30	93-7351	1	Discharge Door ASM
10:4	3296-42	4	Nut-Lock	32	80-3770	1	Retainer-Door
10:5		1	Hub & Bearing ASM	33	76-4660	1	Spring-Door
10:5:1	52-2410	1	Hub-Bearing	34	71-9350	1	Bracket-Spring

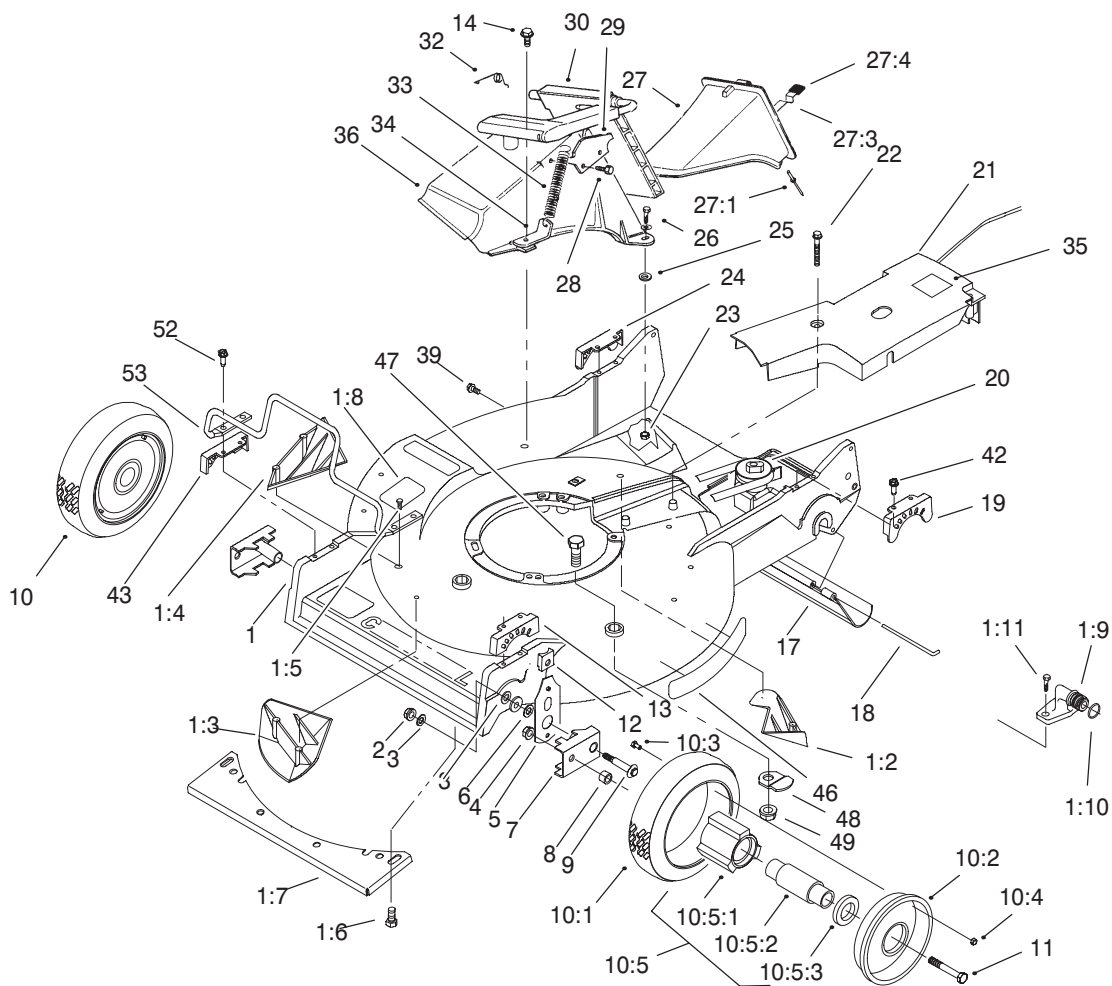 


Sheet No.:2
C-2948

Housing Assembly

Ref. No.	Part No.	Qty.	Description
35	93-6664	1	Decal-Grease, Int'l
36	82-9151	1	Tunnel-Discharge
39	46-6810	1	Screw & Washer ASM
42	49-2040	4	Screw-Taptite
43	49-8770	1	Quadrant-Front, RH
46	92-7988	1	Decal - Recycler
47	323-6	3	Screw-HH
48	84-8930	2	Shield-Retainer
49	3296-39	3	Nut-Lock, NI
52	32144-86	4	Screw-HH
53	99-6722	1	Guard-Engine


Ref. No.	Part No.	Qty.	Description

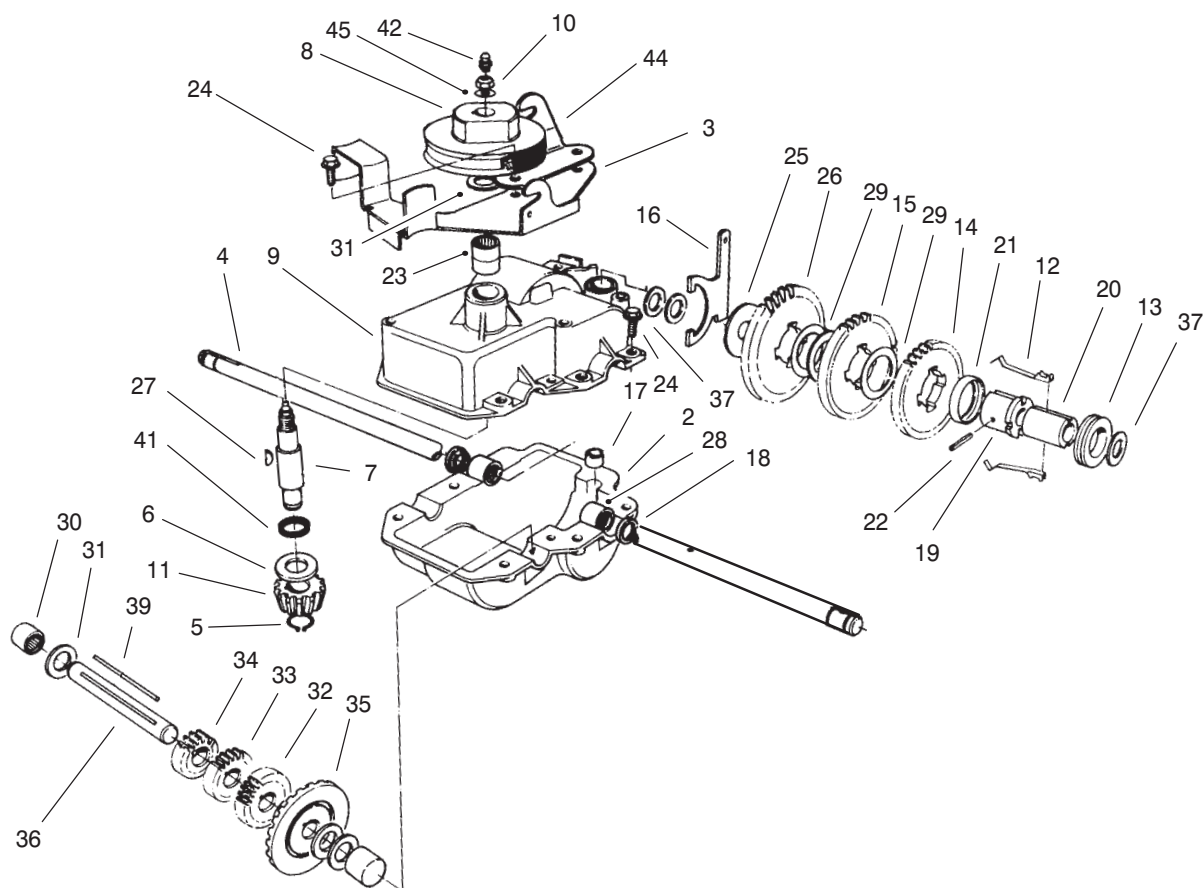 

Sheet No.:A1

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	74-1920	1	Case-Gear, Lower	28	48-2060	2	Bearing-Roller
3	49-8461-03	1	Bracket-Guide, Belt	29	36-4770	3	Washer
4	74-1890	1	Shaft-Output	30	252-103	2	Bearing-Closed
5	32151-57	1	Ring-Retaining	31	36-4792	4	Washer-Thrust
6	47-2910	1	Washer-Thrust	32	39-6650	1	Gear-18t
7	68-8190	1	Shaft-Input	33	46-3550	1	Gear-14t
8	39-6740	1	Pulley	34	46-3540	1	Gear-12t
9	74-1880	1	Case-Gear, Upper	35	74-1760	1	Gear-Bevel
10	3296-5	1	Nut-Lock, NI	36	53-7950	1	Shaft-Intermediate
11	39-6660	1	Pinion-Bevel	37	36-4780	3	Washer
12	29-9330	2	Key	39	39-7842	1	Key
13	29-9340	1	Collar-Shift	41	47-7260	1	Seal
14	42-4740	1	Gear-38 Tooth	42	302-63	1	Zerk
15	29-9271	1	Gear-42 Tooth	44	74-1750-03	1	Brake-Engage, Traction
16	60-8870	1	Yoke-Shift	45	3256-45	1	Washer-Flat
17	29-9570	1	Bushing-Yoke				
18	47-6730	2	Seal-Oil				
19	55-8010	1	Sleeve-Gear				
20	39-6720	1	Sleeve				
21	55-8020	1	Retainer-Key				
22	3285-19	1	Pin-Groove				
23	47-7270	2	Bearing				
24	49-2040	6	Screw-Taptite				
25	29-9690	1	Washer				
26	46-3560	1	Gear				
27	3257-1	2	Key-Woodruff				

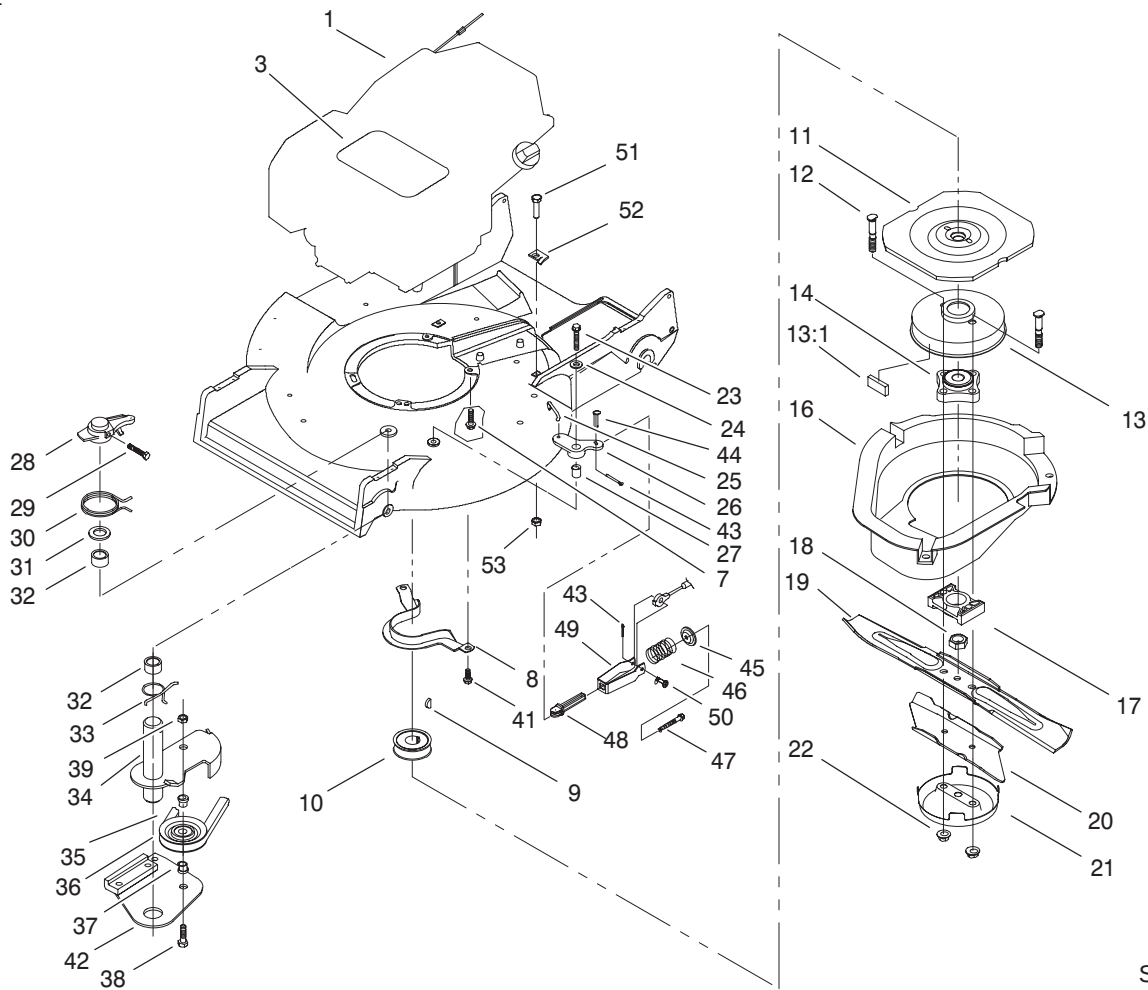 


Sheet No.:3

Engine and BBC Assembly

Ref. No.	Part No.	Qty.	Description
1		1	Engine-Kawasaki FC150V ES-33
3	99-6297	1	Decal-Engine
7	100-2835	3	Screw-Mount, Engine
8	66-0570-03	1	Bracket-Guide, Belt
9	3257-17	1	Key-Hi-Pro
10	56-6180	1	Driver-Pulley
11	56-6160	1	Flywheel
12	42-3190	2	Bolt-Blade
13	94-9431	1	Brake Drum ASM
13:1	52-3480	2	Dampner-Vibration
14	42-6890	1	Hub ASM
16	46-5693	1	Shield
17	62-4280	1	Spacer-Blade
18	3296-33	1	Nut-Lock NI
19	91-2256-03	1	Blade - Recycler li
20	91-2255-03	1	Stiffener-Blade
21	80-2770	1	Cup-Anti-Scalp
22	54-9190	2	Nut-Lock
23	32104-107	1	Screw-HH
24	3256-23	1	Washer-Flat
25	49-2810	1	Link - Control
26	49-7960	1	Bellcrank
27	49-7950	1	Sleeve-Bellcrank
28	49-2820	1	Lever
29	32104-96	1	Screw-HH

Ref. No.	Part No.	Qty.	Description
30	49-7970	1	Spring-Torsion
31	70-1160	1	Washer
32	68-9780	2	Bearing
33	85-6880	1	Spring-Torsion
34	84-9130	1	Plate-Brake
35	42-0884	1	V-Belt
36	46-5650	1	Pulley-Idler
37	46-5631	2	Hub-Pulley, Idler
38	322-6	1	Screw-HH
39	3296-47	1	Nut-Lock, NI
41	32144-70	3	Screw-HH
42	84-9180	1	Brake Plate ASM
43	3272-1	2	Pin-Cotter
44	84-9050	1	Pin-Spring
45	65-5280	1	Retainer-Spring
46	84-9100	1	Spring
47	46-7040	1	Screw-Forming, Thread
48	84-8870	1	Guide-Spring
49	84-8880-03	1	Bracket-Spring
50	84-9040	1	Pin-Cable
51	322-6	1	Screw-HH
52	62-3720	1	Clamp-Cable
53	3296-58	1	Nut-Lock NI

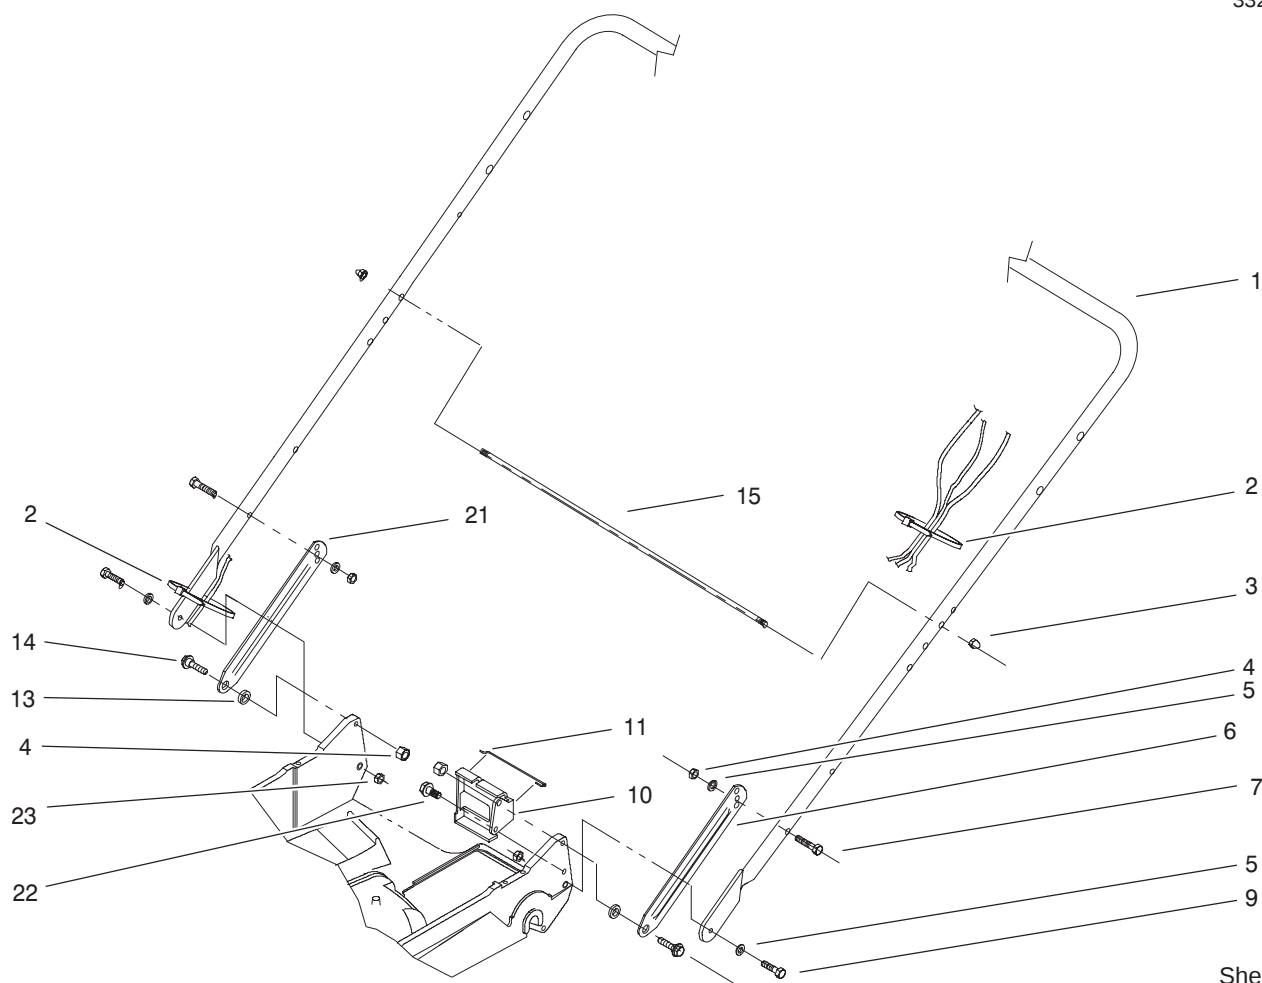 


Sheet No.:4

Fuel Tank and Bracket Assembly

Ref. No.	Part No.	Qty.	Description
1	98-2385-03	1	Handle
2	3290-378	2	Tie-Cable
3	32111-7	2	Nut-Cap
4	3296-29	4	Nut-Lock, NI
5	3290-456	4	Washer-Belleville
6	100-3298-03	1	Latch-Handle, LH
7	322-7	2	Screw-HH
9	322-6	2	Screw-HH
10	74-1741	1	Bracket-Traction Adj.
11	46-7030	1	Retainer-Cable
13	3-3287	2	Spacer-Latch, Handle
14	27-7210	2	Screw-Shoulder
15	48-2810	1	Rod-Support, Bag
21	100-3297-03	1	Latch-Handle, RH
22	32144-70	1	Screw-HH
23	3296-47	2	Nut-Lock, NI

Ref. No.	Part No.	Qty.	Description

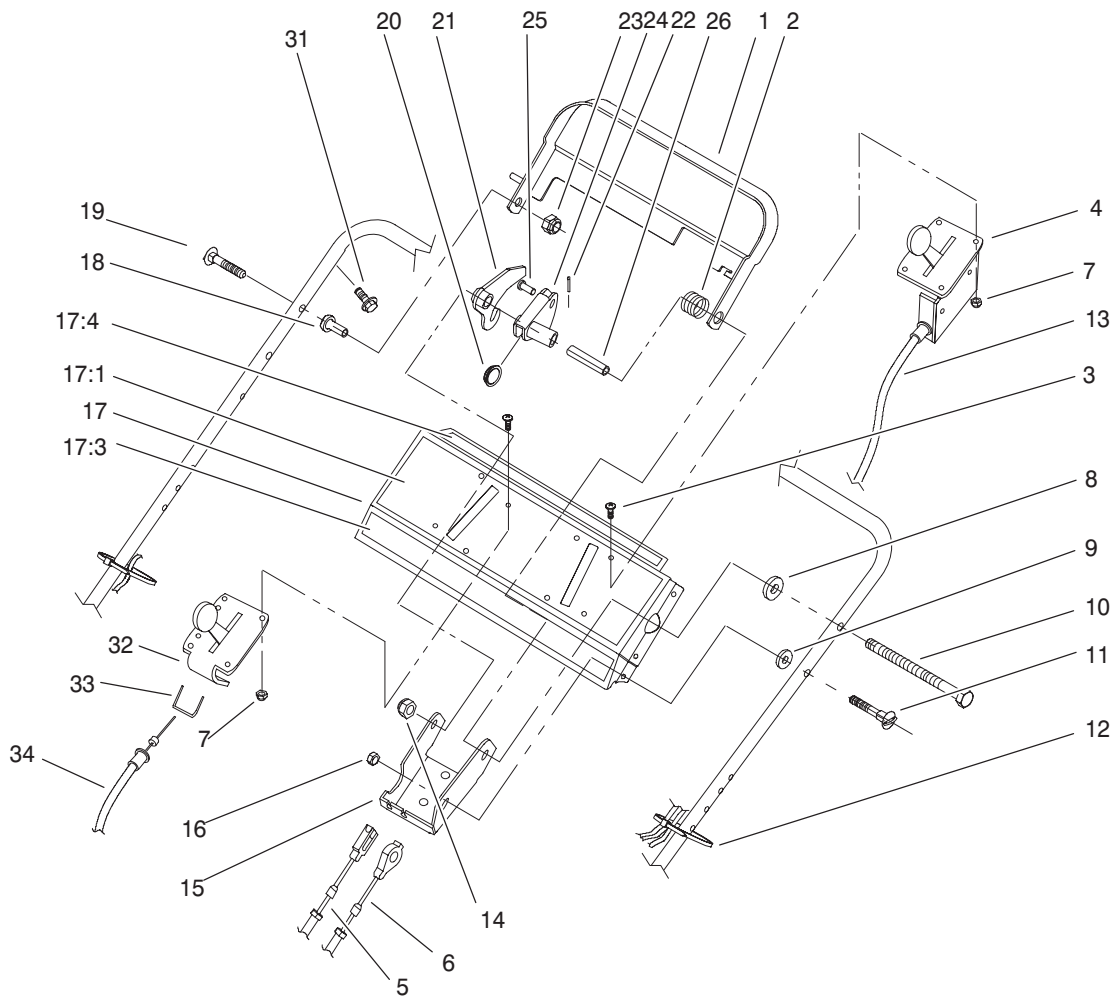 


Sheet No.:5

Handle and Handle Latch Assembly

Ref. No.	Part No.	Qty.	Description
1	84-8940-03	1	Bar-Control
2	85-6750	1	Spring-Control
3	3250-12	8	Screw-PPH
4	85-6770	1	Control-Throttle
5	84-9120	1	Cable-Traction
6	84-9110	1	Cable-Clutch
7	3296-2	8	Nut-Lock
8	71-9310	1	Spacer
9	71-9320	1	Spacer
10	322-19	1	Screw-HH
11	46-6430	1	Screw-Handle
12	3290-378	2	Tie-Cable
13	100-2839	1	Cable-Throttle
14	3296-29	1	Nut-Lock, NI
15	92-1778-03	1	Bracket-Control
16	3296-42	1	Nut-Lock
17	99-8137	1	Panel ASM
17:1	98-2006	1	Decal-Panel, Control
17:3	85-6720	1	Decal-Panel, Proline
17:4	93-6655	1	Decal-Panel, Rear
18	49-1631	1	Spacer-Support
19	17-9427	1	Screw
20	86-9320	1	Bushing-Flange
21	84-9000	1	Lever-Traction
22	3272-1	1	Pin-Cotter
23	3296-58	1	Nut-Lock NI

Ref. No.	Part No.	Qty.	Description
24	84-8990	1	Lever-Bbc
25	84-9040	1	Pin-Cable
26	84-9030	1	Spacer-Bracket, Control
*	85-6780	1	Retainer-Cable, Throttle
31	32104-76	6	Screw-Slot, Acorn
32	99-2542	1	Control-Shift, Bbc
33	85-6780	1	Retainer-Cable, Throttle
34	99-2541	1	Cable-Shift, Bbc

 
* Not illustrated

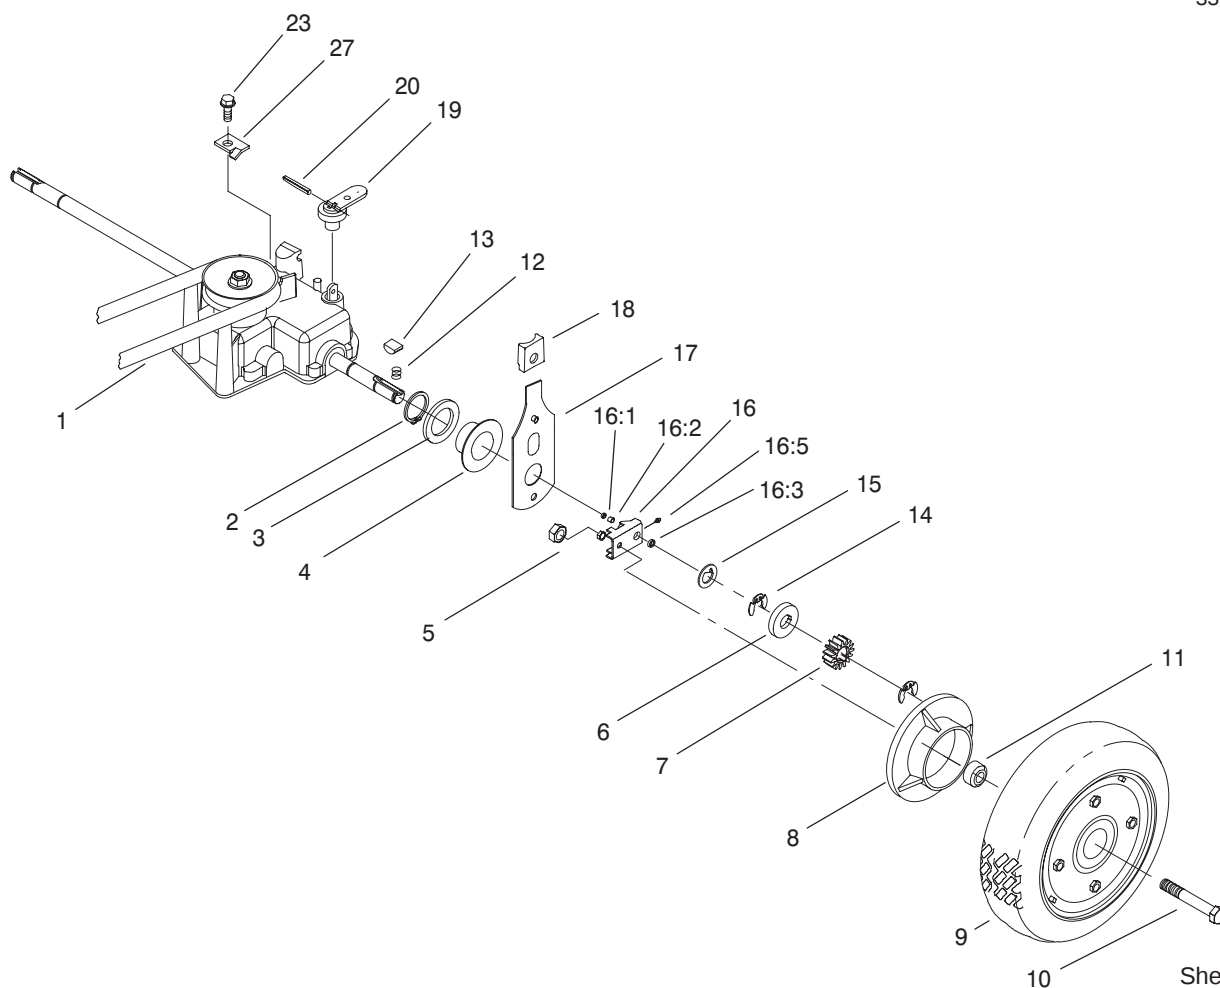

Controls, Panel and Bail Assembly

Ref. No.	Part No.	Qty.	Description
1	36-8070	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	48-2170	2	Cap-End
5	32152-2	2	Nut-Conelock
6	62-3830	2	Washer-Thrust, Outer
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	74-1720	2	Wheel & Tire ASM
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Cover, Wheel
12	39-9650	2	Spring-Comp
13	612066	2	Key
14	32151-68	4	Ring-Retaining
15	49-7700	2	Washer-Thrust, Outer
16	74-1851	2	Pivot Arm ASM
16:1	47-6730	1	Seal-Oil
16:2	48-2060	1	Bearing-Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92-6316	1	Zerk-Drive, Special
17	66-7561	2	Rear Spring Arm ASM
18	25-7740	2	Knob-Arm
19	29-9560	1	Lever-Shift
20	32121-99	1	Pin-Coil
23	32144-70	1	Screw-HH
27	62-3720	1	Clamp-Cable

Ref. No.	Part No.	Qty.	Description

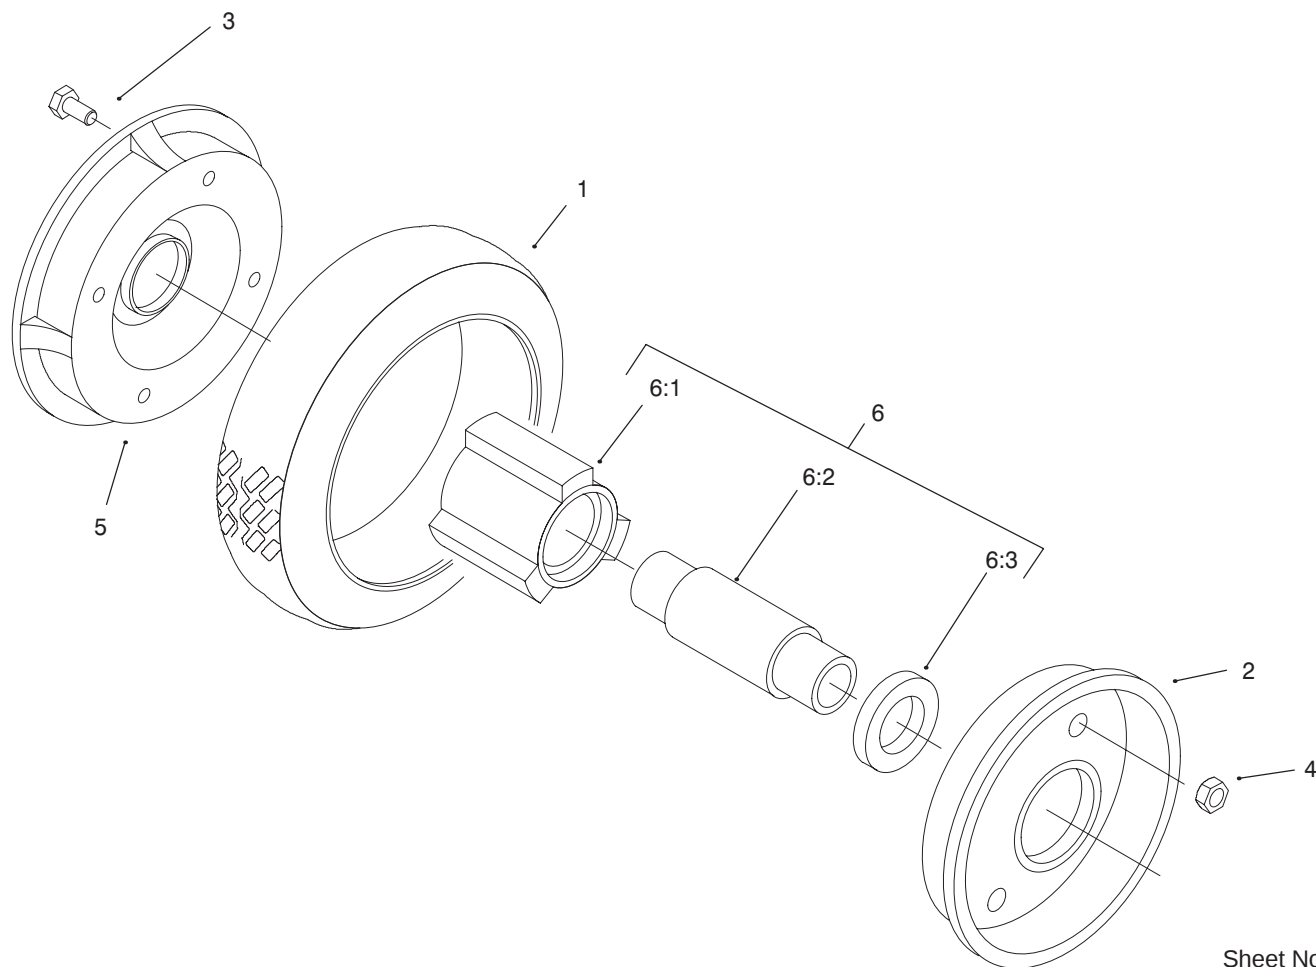 


Sheet No.:A2

Wheel and Tire Assembly No. 74-1720

Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire
2	53-7780-06	1	Plate-Wheel, Half
3	321-2	4	Screw-HH
4	3296-42	4	Nut-Lock
5	92-4957-06	1	Wheel Half/Gear ASM
6		1	Hub & Bearing ASM
6:1	52-2410	1	Hub-Bearing
6:2	52-2440	1	Spacer-Bearing
6:3	52-2450	2	Bearing-Wheel

Ref. No.	Part No.	Qty.	Description

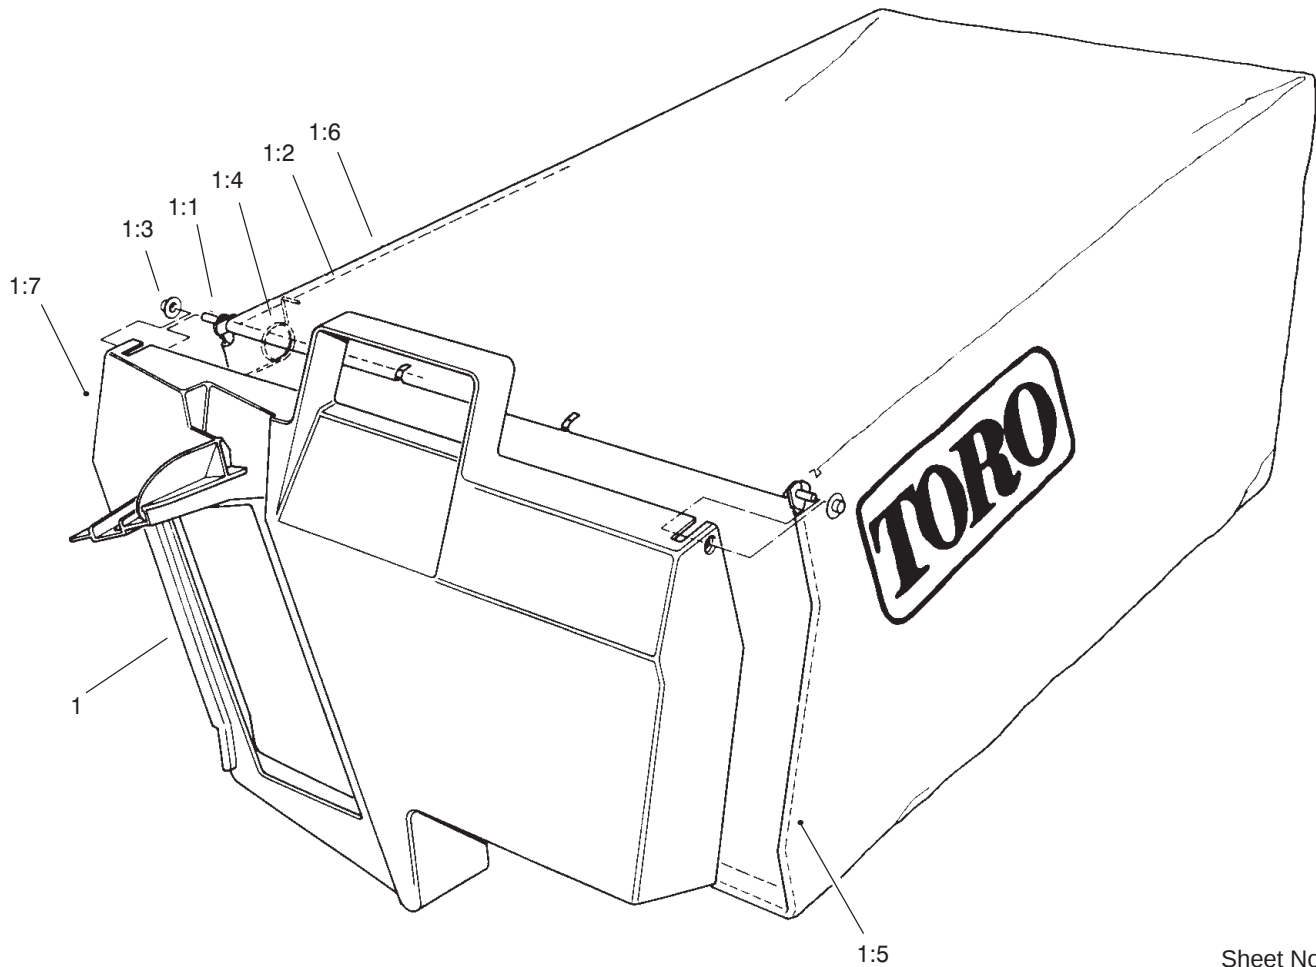 


Sheet No.:A3

Grass Bag Assembly No. 99-2535

Ref. No.	Part No.	Qty.	Description
1	98-9220	1	Grass Bag ASM
1:1	33-4820	1	Hinge-Door, Bag
1:2	42-4030	1	Frame-Bag, Upper
1:3	3290-422	2	Nut-Push
1:4	36-6910	2	Spring
1:5	42-4020	1	Frame-Bag
1:6	98-9225	1	Bag-Grass
1:7	48-2840	1	Door-bag, Grass

Ref. No.	Part No.	Qty.	Description

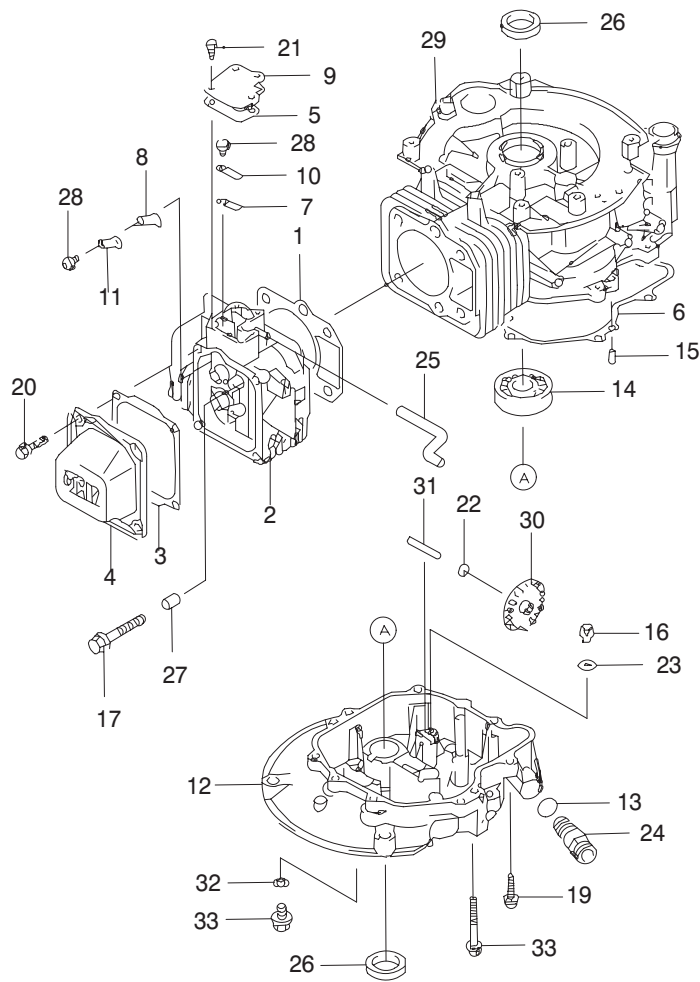 


Sheet No.:3

Cylinder/Crankcase

Ref. No.	Part No.	Qty.	Description
1	100-2742	1	Gasket-Head
2	100-2743	1	Head-Cylinder, Complete
3	100-2744	1	Case-Rocker, Gasket
4	100-2745	1	Case-Rocker
5	100-2746	1	Cover-Gasket
6	100-2747	1	Gasket-Cover, Crankcase
7	100-2748	1	Plate
8	100-2749	1	Plate
9	100-2779	1	Cover
10	100-2780	1	Valve
11	100-2781	1	Valve
12	100-2782	1	Cover-Crankcase
13	100-2840	1	O-Ring
14	100-2841	1	Bearing-Ball
15	93-8516	2	Pin
16	100-2842	1	Bolt
17	Kw10035	4	Bolt-Flanged
18	Kw10033	1	Bolt-Flanged
19	100-2610	6	Bolt-Flanged
20	100-2804	4	Bolt-Flanged
21	100-2609	4	Bolt-Flanged
22	100-2843	1	Washer
23	100-2844	1	Washer
24	100-2854	1	Plug

Ref. No.	Part No.	Qty.	Description
25	100-2846	1	Tube
26	100-2847	2	Seal-Oil
27	100-2848	2	Pin
28	93-8549	2	Screw
29	100-2849	1	Crankcase-Complete
30	99-6728	1	Slinger-Oil
31	99-6729	1	Shaft
32	99-6730	1	Gasket
33	100-2855	1	Bolt-Flanged

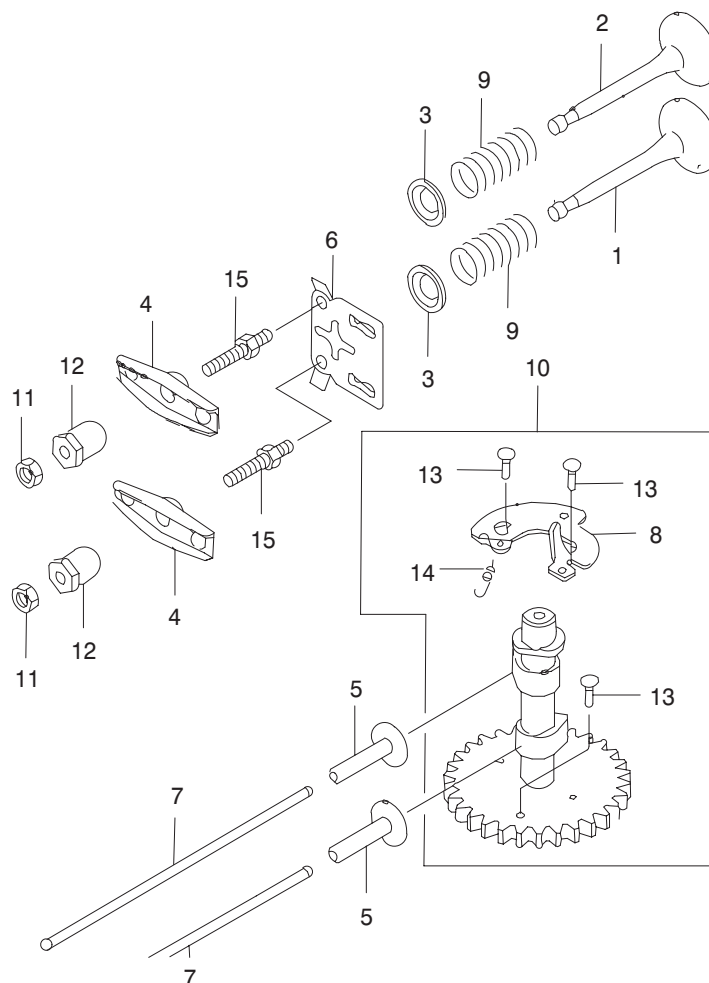 


Sheet No.:4

Valve/Camshaft

Ref. No.	Part No.	Qty.	Description
1	100-2727	1	Valve-Intake
2	100-2728	1	Valve-Exhaust
3	100-2729	2	Retainer-Spring, Valve
4	100-2730	2	Arm-Rocker
5	100-2731	2	Tappet
6	100-2732	1	Guide
7	100-2733	2	Rod-Push
8	100-2734	1	Decompressor
9	100-2735	2	Spring-Valve, Engine
10	100-2736	1	Camshaft-Complete
11	93-8533	2	Nut
12	93-8534	2	Nut
13	100-2739	3	Pin
14	100-2740	1	Spring
15	100-2741	2	Bolt

Ref. No.	Part No.	Qty.	Description

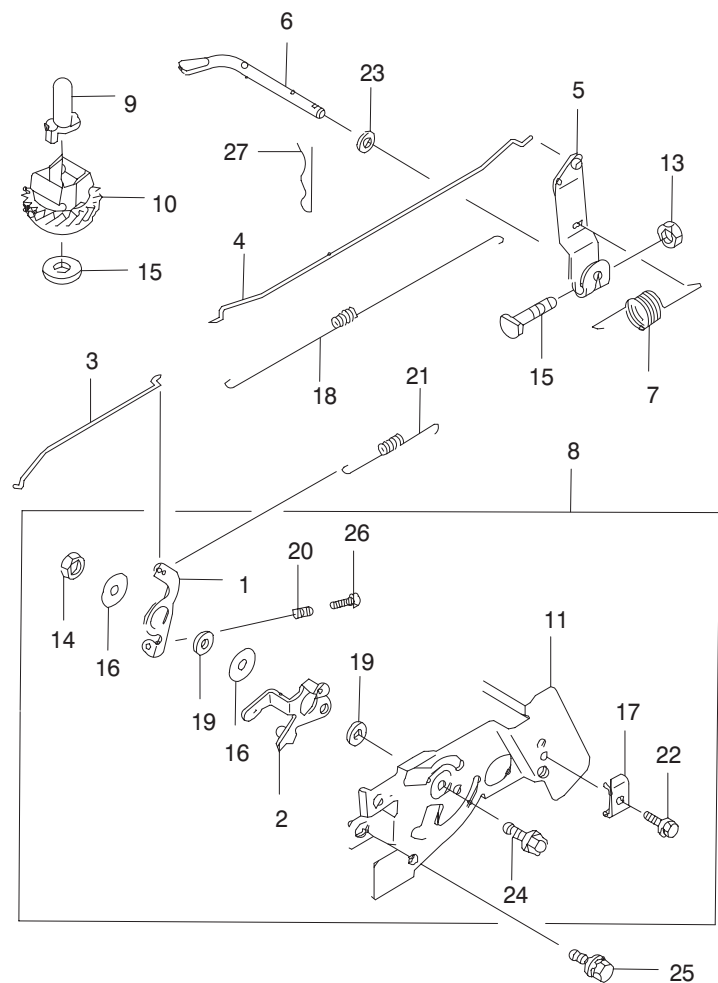 


Sheet No.:5

Control Equipment

Ref. No.	Part No.	Qty.	Description
1	100-2700	1	Lever
2	100-2701	1	Lever
3	100-2702	1	Link-Choke
4	100-2703	1	Link
5	100-2704	1	Arm ASM
6	100-2705	1	Arm-Pivot
7	100-2706	1	Spring-Governor
8	100-2707	1	Control Panel ASM
9	100-2708	1	Sleeve
10	93-8611	1	Governor ASM
11	100-2710	1	Panel-Control
12	93-8608	1	Washer
13	93-8631	1	Nut
14	93-8595	1	Nut
15	94-6842	1	Washer
16	100-2715	2	Washer
17	95-9849	1	Clamp
18	100-2717	1	Link-Spring
19	100-2718	2	Collar
20	93-8588	1	Spring
21	100-2720	1	Spring
22	95-9853	1	Bolt
23	93-8608	1	Washer
24	95-9837	1	Bolt – Flanged
25	100-2724	2	Bolt


Ref. No.	Part No.	Qty.	Description
26	100-2725	1	Screw-Pan
27	93-8607	1	Pin-Snap

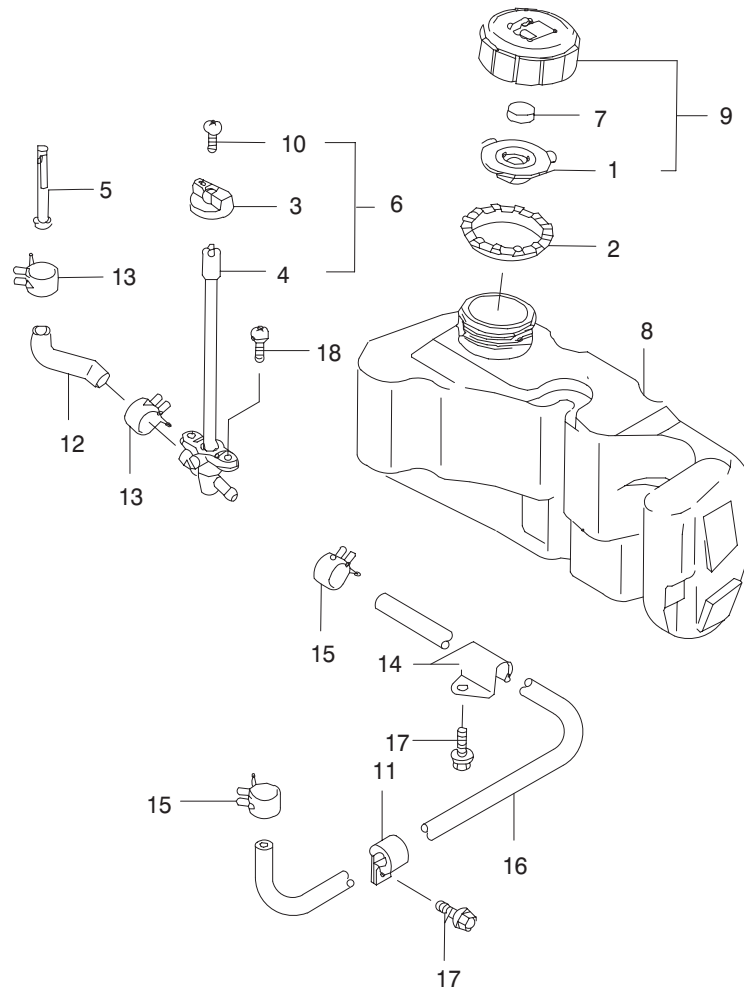 

Sheet No.:6

Fuel Tank/Fuel Valve

Ref. No.	Part No.	Qty.	Description
1	100-2808	1	Gasket
2	100-2809	1	Guide
3	100-2810	1	Lever
4	100-2811	1	Filter-Complete
5	100-2812	1	Filter-Fuel
6	100-2814	1	Valve - Fuel
7	100-2813	1	Element-Breather
8	100-2815	1	Tank-Fuel, Complete
9	100-2816	1	Tank Cap ASM
10	100-2817	1	Screw
11	100-2818	1	Clamp
12	100-2819	1	Tube
13	100-2820	2	Clamp
14	100-2821	1	Clamp
15	100-2822	2	Clamp
16	100-2823	1	Tube
17	100-2804	2	Bolt-Flanged
18	100-2825	2	Screw-Pan

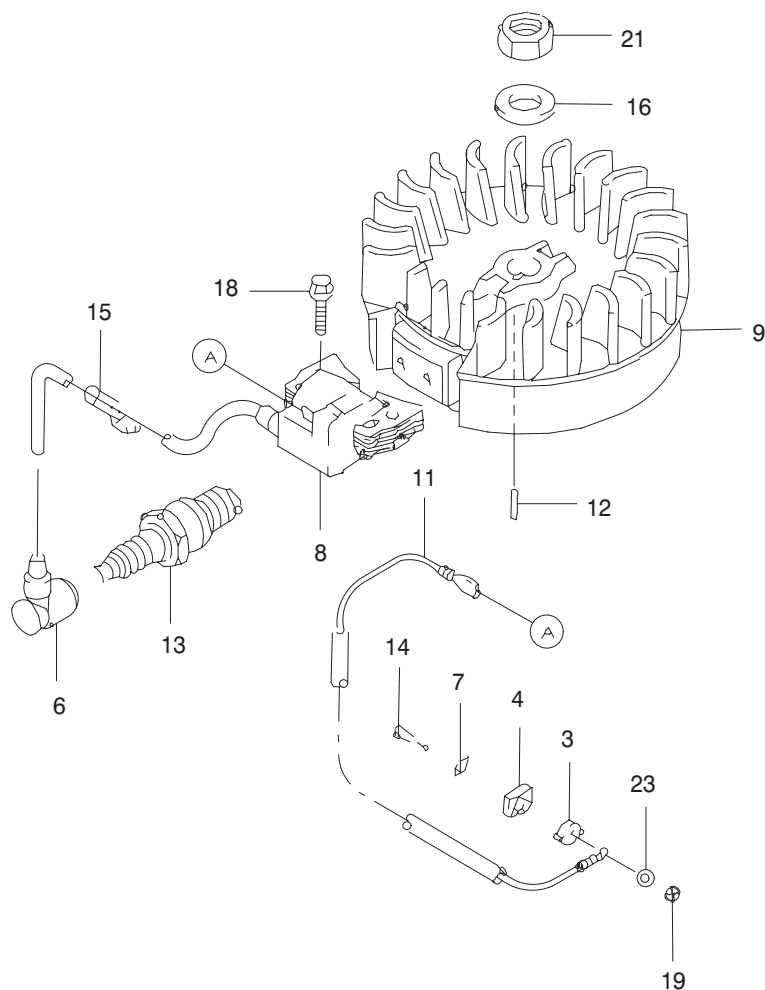 


Sheet No.:7

Electric Equipment

Ref. No.	Part No.	Qty.	Description
3	100-2652	1	Cover
4	100-2653	1	Insulator
6	Kw10087	1	Plug-Cap
7	100-2796	1	Terminal
8	100-2657	1	Ignition Coil ASM
9	100-2658	1	Flywheel-Complete
11	100-2660	1	Wire-Lead
12	93-8571	1	Key
13	Kw10676	1	Plug-Spark
14	100-2663	1	Bolt
15	100-2664	1	Clamp
16	100-2665	1	Washer
18	100-2610	2	Bolt-Flanged
19	100-2668	1	Nut-Hex
21	93-8568	1	Nut
23	100-2798	1	Washer-Plain


Ref. No.	Part No.	Qty.	Description

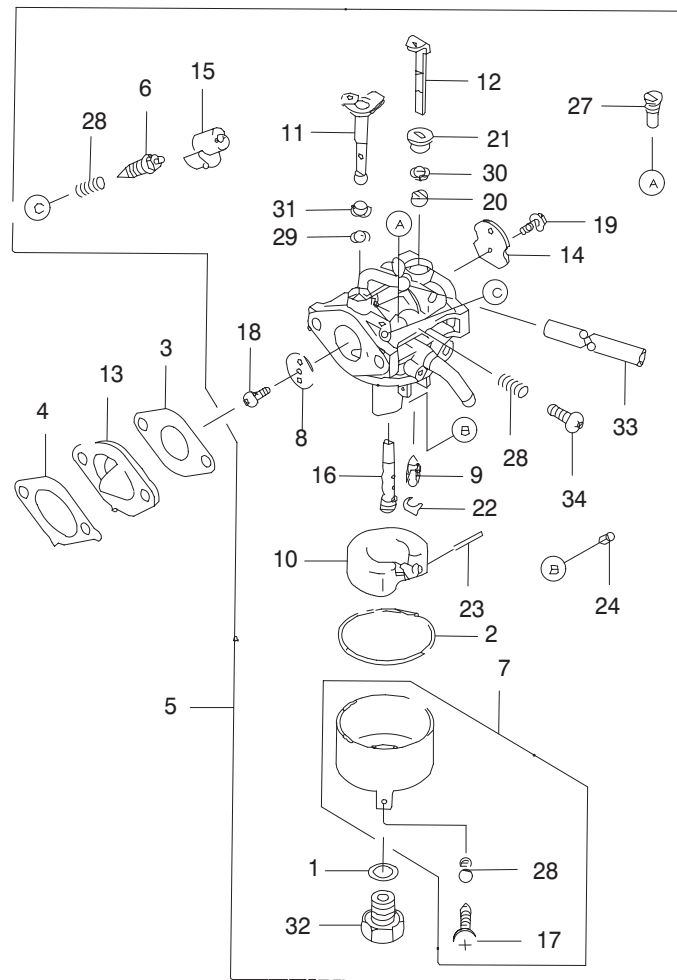 

Sheet No.:8

Carburetor

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2611	1	Gasket	27	100-2635	1	Jet-Pilot
2	100-2612	1	Gasket	28	100-2636	3	Spring
3	100-2613	1	Gasket-Carburetor	29	100-2637	1	Seal
4	100-2614	1	Gasket-Insulator	30	100-2638	1	Seal
5	100-2615	1	Carburetor ASM	31	100-2639	1	Collar
6	100-2616	1	Screw-Pilot, Air	32	100-2640	1	Bolt
7	100-2617	1	Float-Chamber	33	100-2641	1	Tube
8	100-2618	1	Valve-Throttle	34	100-2642	1	Screw-Pan
9	100-2619	1	Valve-Float				
10	100-2620	1	Float				
11	100-2621	1	Shaft-Throttle, Carburetor				
12	100-2622	1	Shaft-Choke, Carburetor				
13	100-2623	1	Insulator				
14	100-2624	1	Valve				
15	100-2625	1	Limiter				
16	100-2626	1	Nozzle-Main				
17	100-2627	1	Screw				
18	100-2628	1	Screw				
19	100-2629	2	Screw				
20	100-2630	1	Collar				
21	100-2631	1	Collar				
22	Kw10297	1	Clip				
23	100-2633	1	Pin				
24	100-2634	1	Jet-Main				

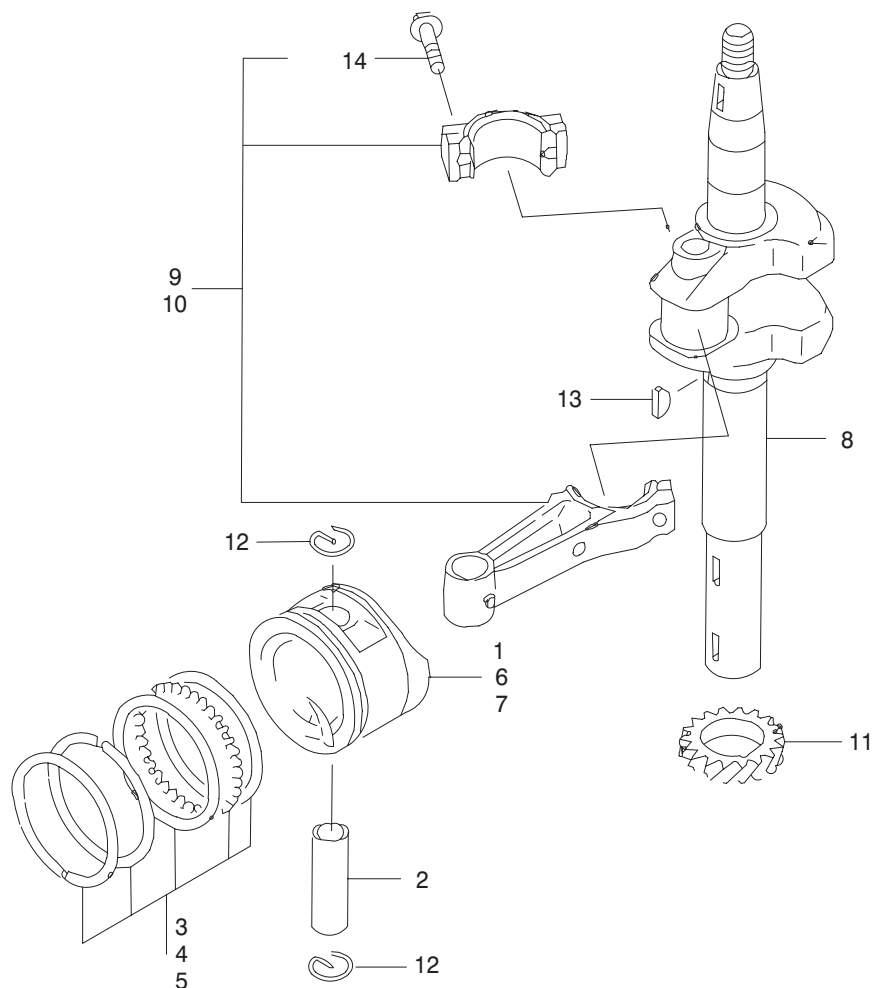 


Sheet No.:9

Piston/Crankshaft

Ref. No.	Part No.	Qty.	Description
1	100-2672	1	Piston-Engine
2	100-2673	1	Pin-Piston
3	100-2674	1	Set-Ring, Piston
4	100-2675	1	Set-Ring, Piston-L0.25
5	100-2676	1	Set-Ring, Piston-L0.50
6	100-2677	1	Piston-Engine, L0.25
7	100-2678	1	Piston-Engine, L0.50
8	100-2828	1	Crankshaft
9	100-2680	1	Connecting Rod ASM
10	100-2681	1	Connecting Rod ASM (U/S=0.50)
11	100-2682	1	Gear-Helical
12	100-2683	2	Ring-Snap
13	93-8526	1	Key
14	93-8527	2	Bolt-Rod


Ref. No.	Part No.	Qty.	Description

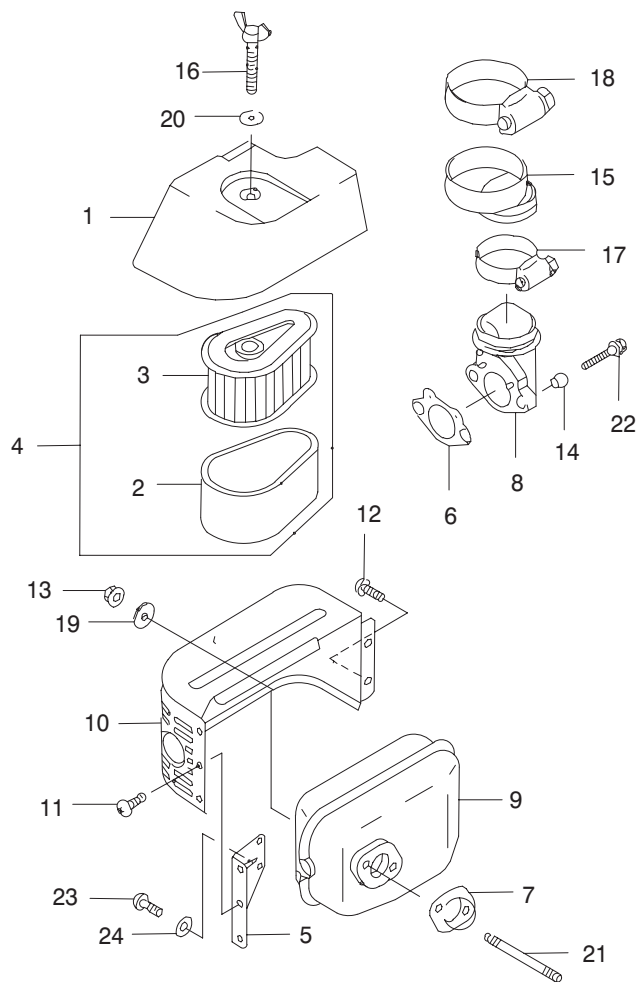 

Sheet No.:10

Air Filter/Muffler

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2691	1	Cap-Filter, Air				
2	100-2692	1	Element-Filter, Air				
3	100-2693	1	Element-Filter, Air				
4	100-2694	1	Air Filter Element ASM				
5	100-2695	1	Bracket				
6	100-2696	1	Gasket-Pipe, Intake				
7	100-2697	1	Gasket-Muffler				
8	100-2698	1	Pipe-Intake				
9	100-2699	1	Muffler-Complete				
10	100-2750	1	Cover-Muffler				
11	93-8549	3	Screw				
12	95-9716	2	Screw				
13	93-8631	2	Nut				
14	100-2754	2	Spacer				
15	100-2755	1	Tube				
16	100-2756	1	Bolt				
17	100-2757	1	Clamp				
18	100-2758	1	Clamp				
19	100-2759	2	Washer				
20	100-2760	1	Washer				
21	100-2761	2	Bolt-Stud				
22	100-2762	2	Bolt				
23	100-2763	2	Screw-Pan				
24	93-8639	2	Washer				


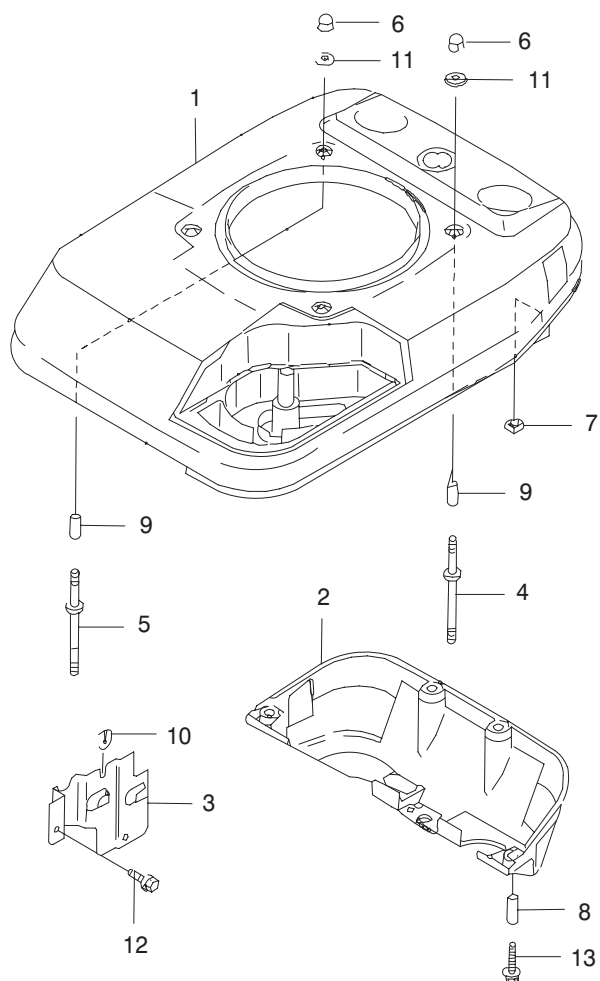 


Sheet No.:11

Cooling Equipment

Ref. No.	Part No.	Qty.	Description
1	100-2600	1	Cover-Upper
2	100-2793	1	Cover-Lower
3	100-2794	1	Cover
4	100-2601	3	Stud
5	100-2602	1	Stud
6	100-2603	4	Nut
7	100-2604	4	Nut
8	100-2606	4	Spacer
9	100-2605	4	Spacer
10	100-2607	1	Grommet
11	100-2760	4	Washer
12	100-2609	2	Bolt-Flanged
13	100-2610	4	Bolt-Flanged

Ref. No.	Part No.	Qty.	Description

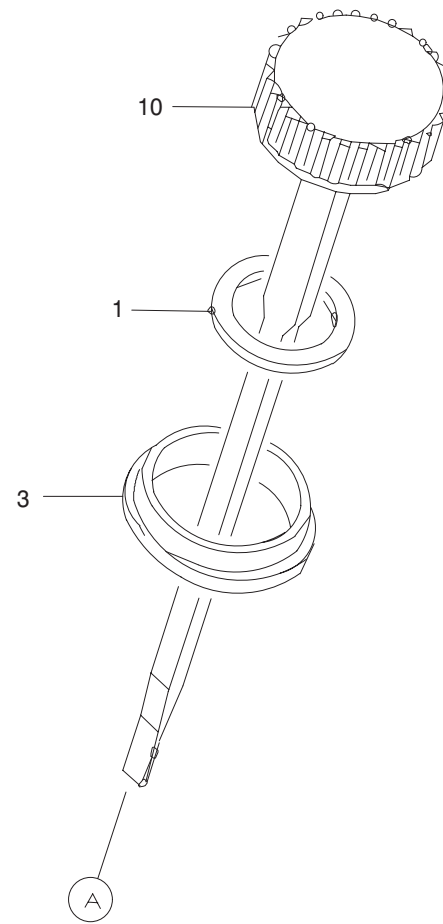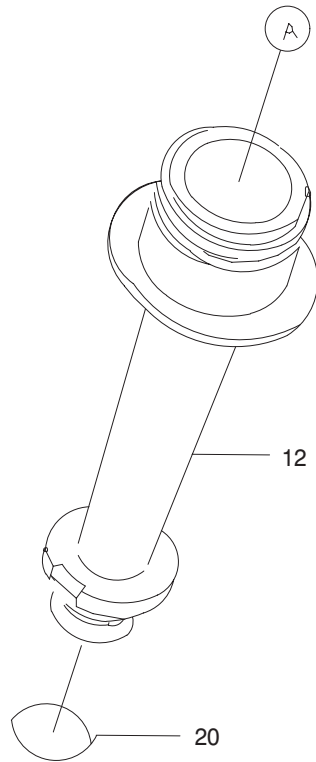  


Sheet No.:12

Lubrication Equipment

Ref. No.	Part No.	Qty.	Description
1	Kw10010	1	Gasket
3	100-2687	1	Guide
10	100-2688	1	Gauge
12	100-2689	1	Filler
20	100-2690	1	O-Ring
*21	100-2831	1	O-Ring
*22	100-2830	1	Cover
*23	100-2804	3	Bolt-Flanged

Ref. No.	Part No.	Qty.	Description

 * Not illustrated

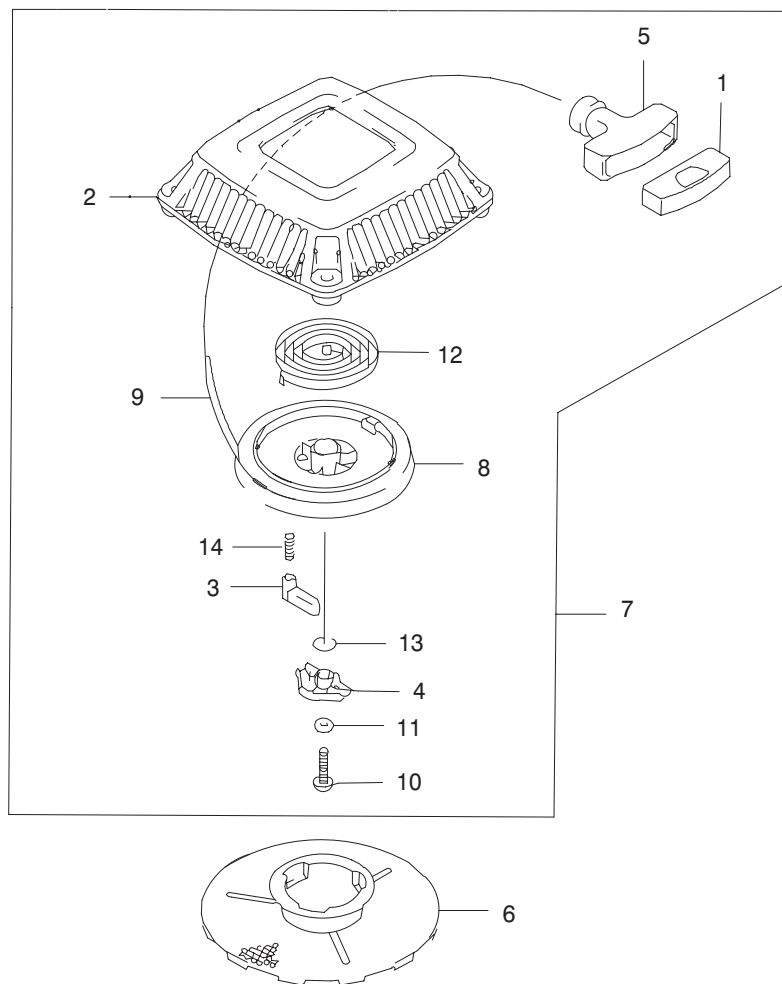

Sheet No.:13

Starter

Ref. No.	Part No.	Qty.	Description
1	94-9044	1	Cap - Grip
2	100-2766	1	Holder
3	100-2767	1	Pawl-Starter, Recoil
4	100-2768	1	Retainer-Spring
5	100-2769	1	Grip-Starter, Recoil
6	100-2770	1	Pulley-Starting
7	100-2837	1	Starter-Recoil
8	100-2772	1	Reel-Starter, Recoil
9	100-2773	1	Rope
10	100-2774	1	Screw
11	100-2775	1	Washer
12	100-2776	1	Spring-Recoil
13	100-2777	1	Spring
14	93-8555	1	Spring-return

Ref. No.	Part No.	Qty.	Description

