



42" Snowthrower

Model No. 79263—200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Blower Assembly	3	Auger Assembly	5
Chute Assembly	4	Pulley And Hitch Assembly	6

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

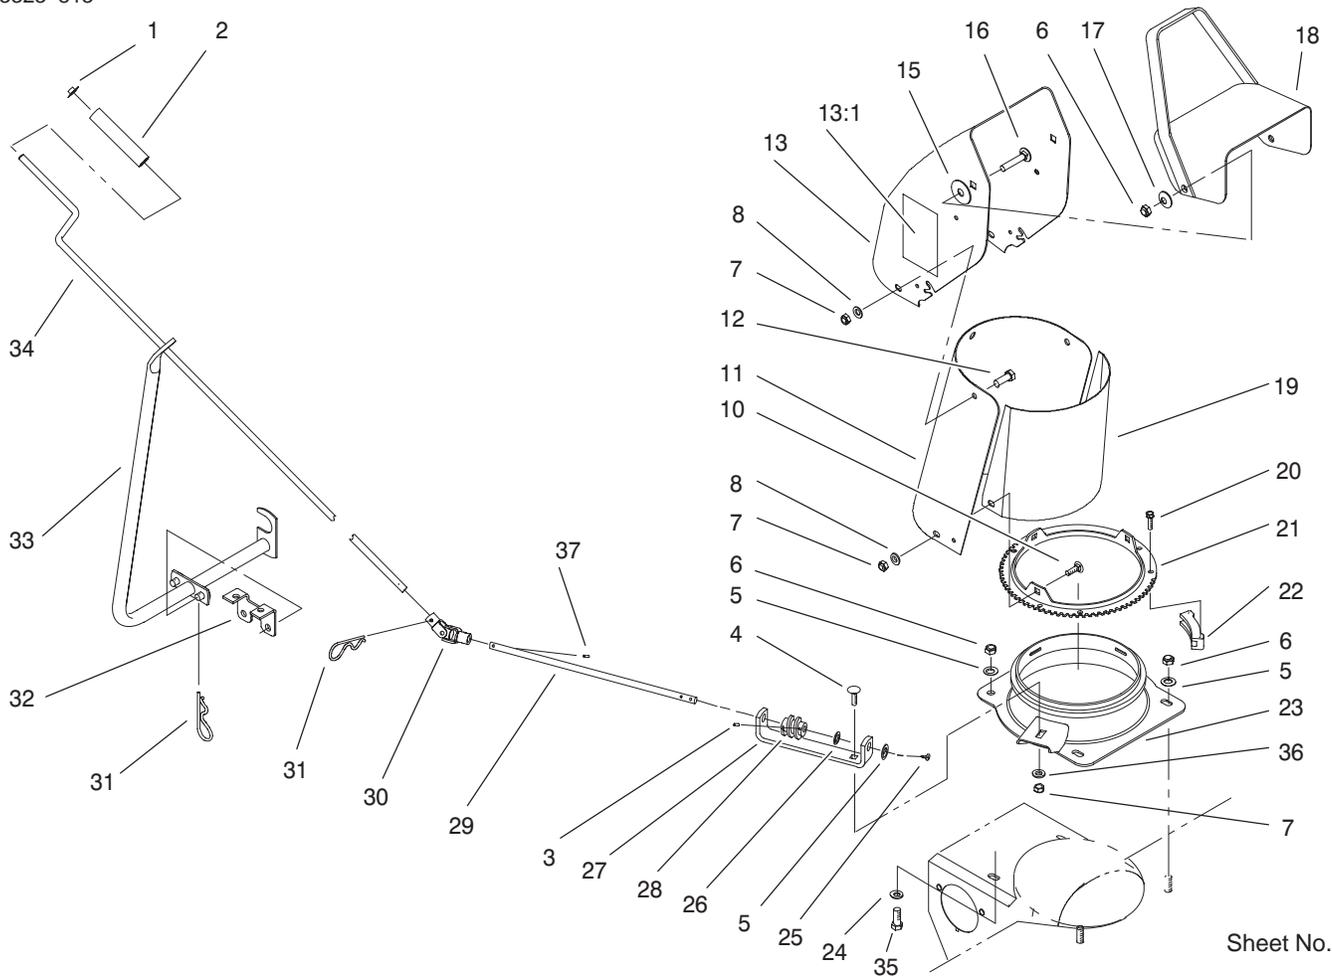


Sheet No.:3

Chute Assembly

Ref. No.	Part No.	Qty.	Description
1	3290-320	1	Nut-Push
2	40-8230	1	Grip-Control
3	32121-50	1	Pin-Roll
4	3230-2	1	Screw-CARR
5	3256-24	5	Washer-Flat
6	3296-39	6	Nut-Lock
7	3296-29	7	Nut-Lock
8	3256-23	6	Washer-Flat
10	3230-1	3	Screw-CARR
11	26-1110-01	1	Extender-Chute
12	322-2	3	Screw-HH
13	94-1832	1	Chute-ASM
13:1	94-8078	2	Decal-Danger
15	20-4320	2	Washer-Rubber
16	3231-2	2	Screw-CARR
17	3290-340	2	Washer-Spring
18	11-7120-01	1	Deflector
19	94-9787-01	1	Shield-Deflector
20	27-0220	6	Screw-Special HWH
21	78-0160-01	1	Ring-Swivel
22	25-5450	3	Retainer-Chute
23	78-0330-01	1	Adapter
24	9202414	2	Washer-Flat
25	3272-10	1	Pin-Cotter
26	3290-212	1	Washer-Wave
27	79-3770-03	1	Bracket-Gear

Ref. No.	Part No.	Qty.	Description
28	8-8600	1	Gear-Worm
29	92-7046	1	Rod
30	94-2686	1	Joint-ASM
31	9335054	3	Pin-Hair
32	78-0441-03	1	Bracket
33	92-7043-03	1	Support
34	79-4090	1	Rod-Control
35	323-6	2	Screw-HH
36	3290-238	1	Washer-Pyramid
37	32121-47	1	Pin-Roll

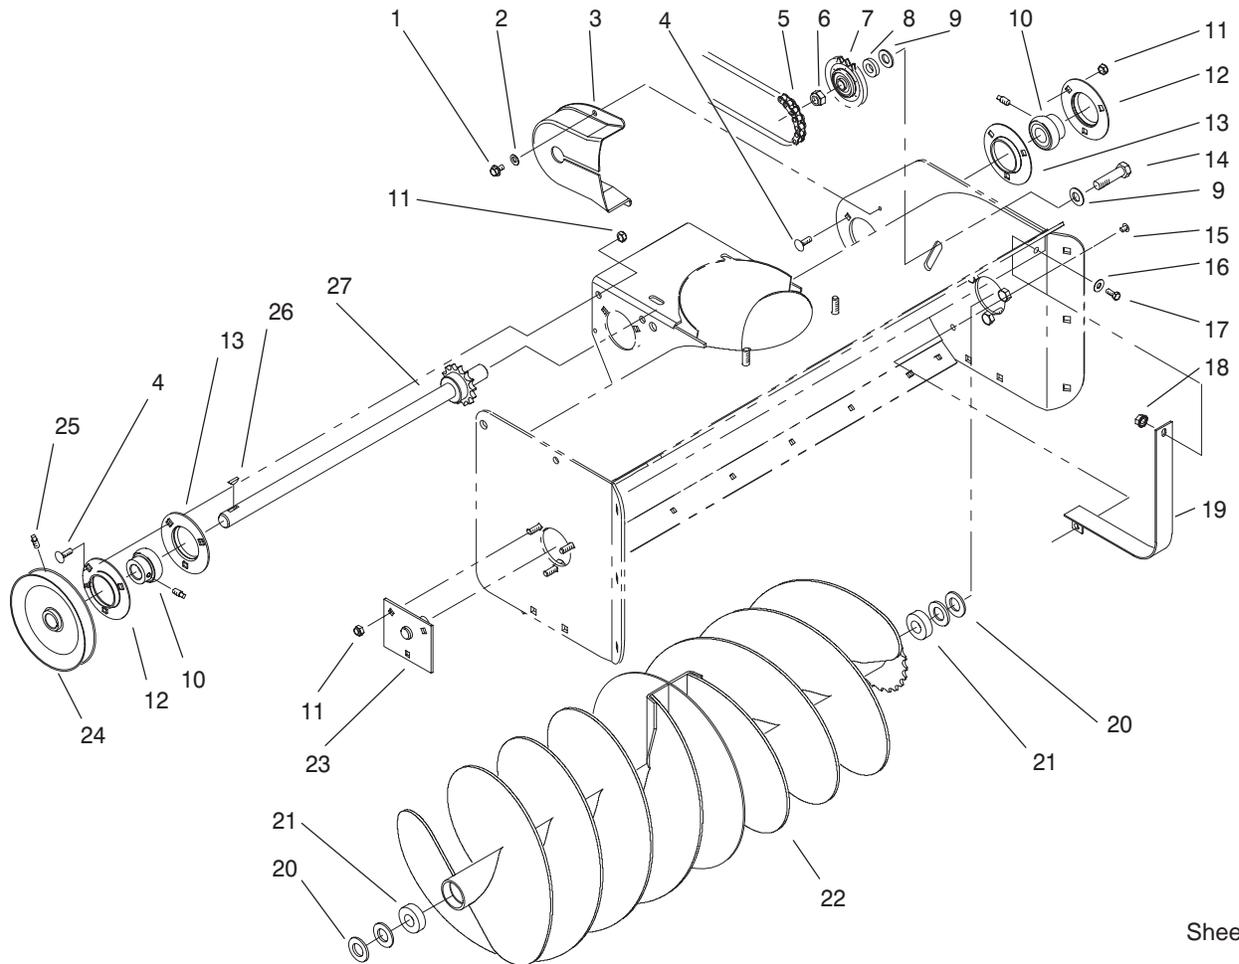


Sheet No.:4

Auger Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	9266714	2	Screw-HWHTF	26	937159	1	Key
2	3256-22	2	Washer-Flat	27	79-4840-01	1	Shaft W/Sprocket
3	79-4000	1	Guard-Chain				
4	3230-1	6	Screw-CARR				
5	115165	1	Chain				
6	3296-23	1	Nut-Lock				
7	93-1614-01	1	Sprocket-Idler				
8	6417	1	Spacer-Flat				
9	3256-26	2	Washer-Flat				
10	110569	2	Bearing & Collar				
11	3296-29	12	Nut-Lock				
12	110567	2	Flange-Relube With Zerk				
13	110568	2	Flange-Plain				
14	325-8	1	Screw-HH				
15	3234-26	1	Screw-HFH				
16	3256-2	1	Washer-Flat				
17	321-3	1	Screw-HH				
18	32149-2	1	Nut-Hex Lock				
19	93-1619-01	1	Guard				
20	3256-28	4	Washer-Flat				
21	101480	2	Bearing-Ball				
22	93-1615-01	1	Auger				
23	93-1618-01	2	Support				
24	94-2998	1	Pulley				
25	3242-2	2	Screw-SQH, Set				

3323-813

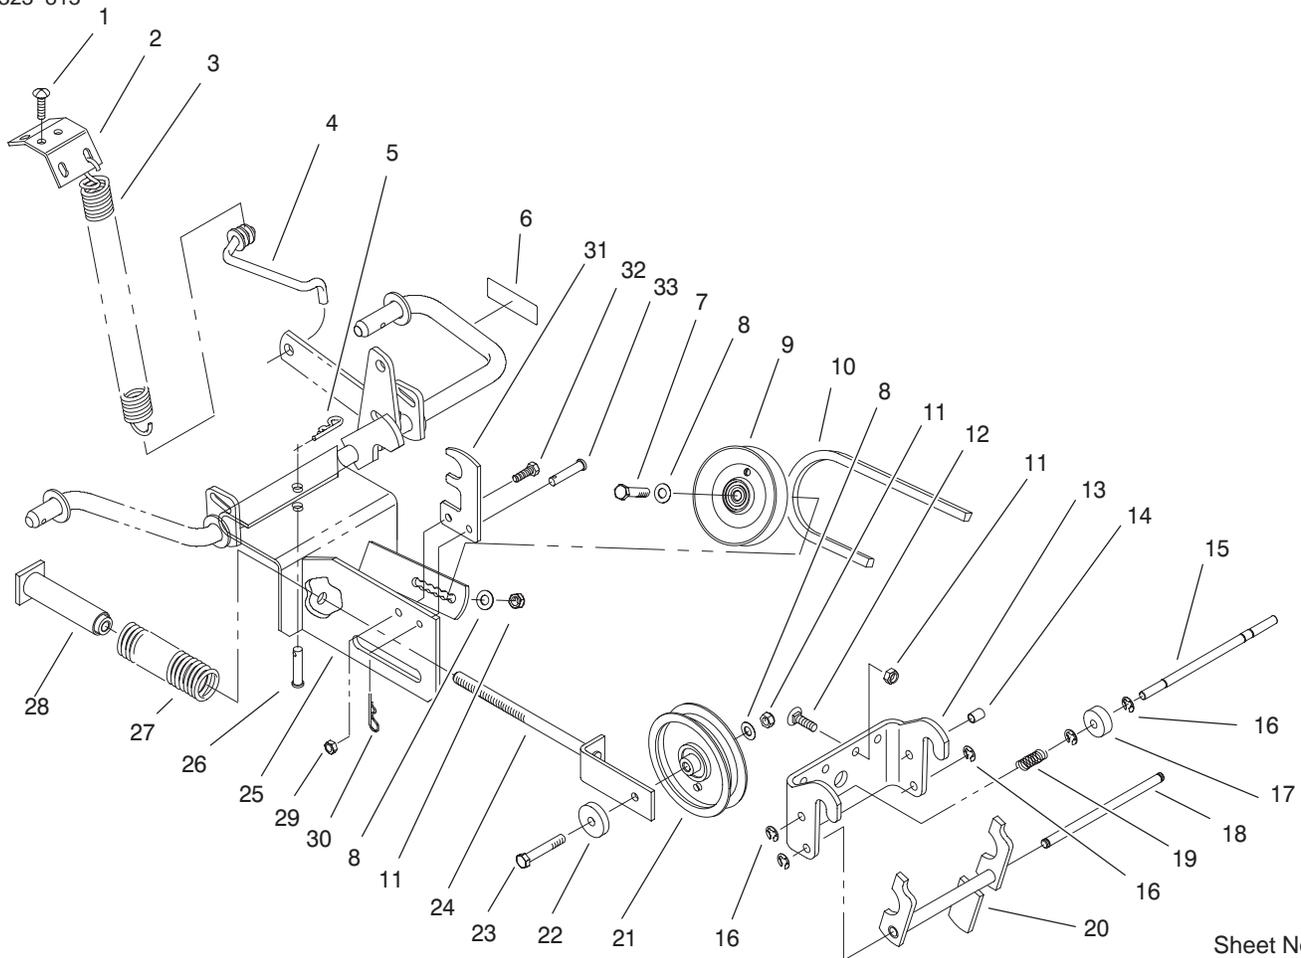

Sheet No.:5

Pulley And Hitch Assembly

Ref. No.	Part No.	Qty.	Description
1	3230-3	2	Screw-CARR
2	93-1123-03	1	Bracket
3	92-9821	1	Spring-Extension
4	93-3161	1	Rod
5	9335054	1	Pin-Hair
6	85-7490	2	Decal-Warning
7	323-9	1	Screw-HH
8	3256-24	3	Washer-Flat
9	92-7099	1	Pulley-Idler
10	94-2999	1	Belt-V
11	3296-39	6	Nut-Lock
12	3231-22	4	Bolt-CARR
13	78-1720-01	1	Hitch-Front
14	105316	1	Cap-Rod, Plunger
15	101751	1	Rod-Lock
16	105797	5	Ring-Retaining
17	101707	1	Lock-Attachment
18	101750	1	Rod-Latch Pivot
19	8616	1	Spring
20	93-1613	1	Latch-Front Hitch
21	94-1737	1	Pulley-Flat Idler
22	79-3720	1	Bushing
23	323-11	1	Screw-HH
24	94-1740	1	Idler Slide
25	94-1736-03	1	Idler Support
26	9329664	1	Pin-Clevis

Ref. No.	Part No.	Qty.	Description
27	93-1621	1	Spring-Compression
28	79-3270-03	1	Spring Tensioner
29	3296-29	1	Nut-Lock
30	9335044	1	Pin-Hair
31	93-0528	1	Catch-Idler Support
32	322-5	1	Screw-HH
33	9321204	1	Pin-Clevis

