



Count on it.

Form No. 3435-891 Rev A


Parts Catalog

Out-Front Brush Kit

Greensmaster® 1018, 1021, or 1026 Mower

Model No. 139-4371



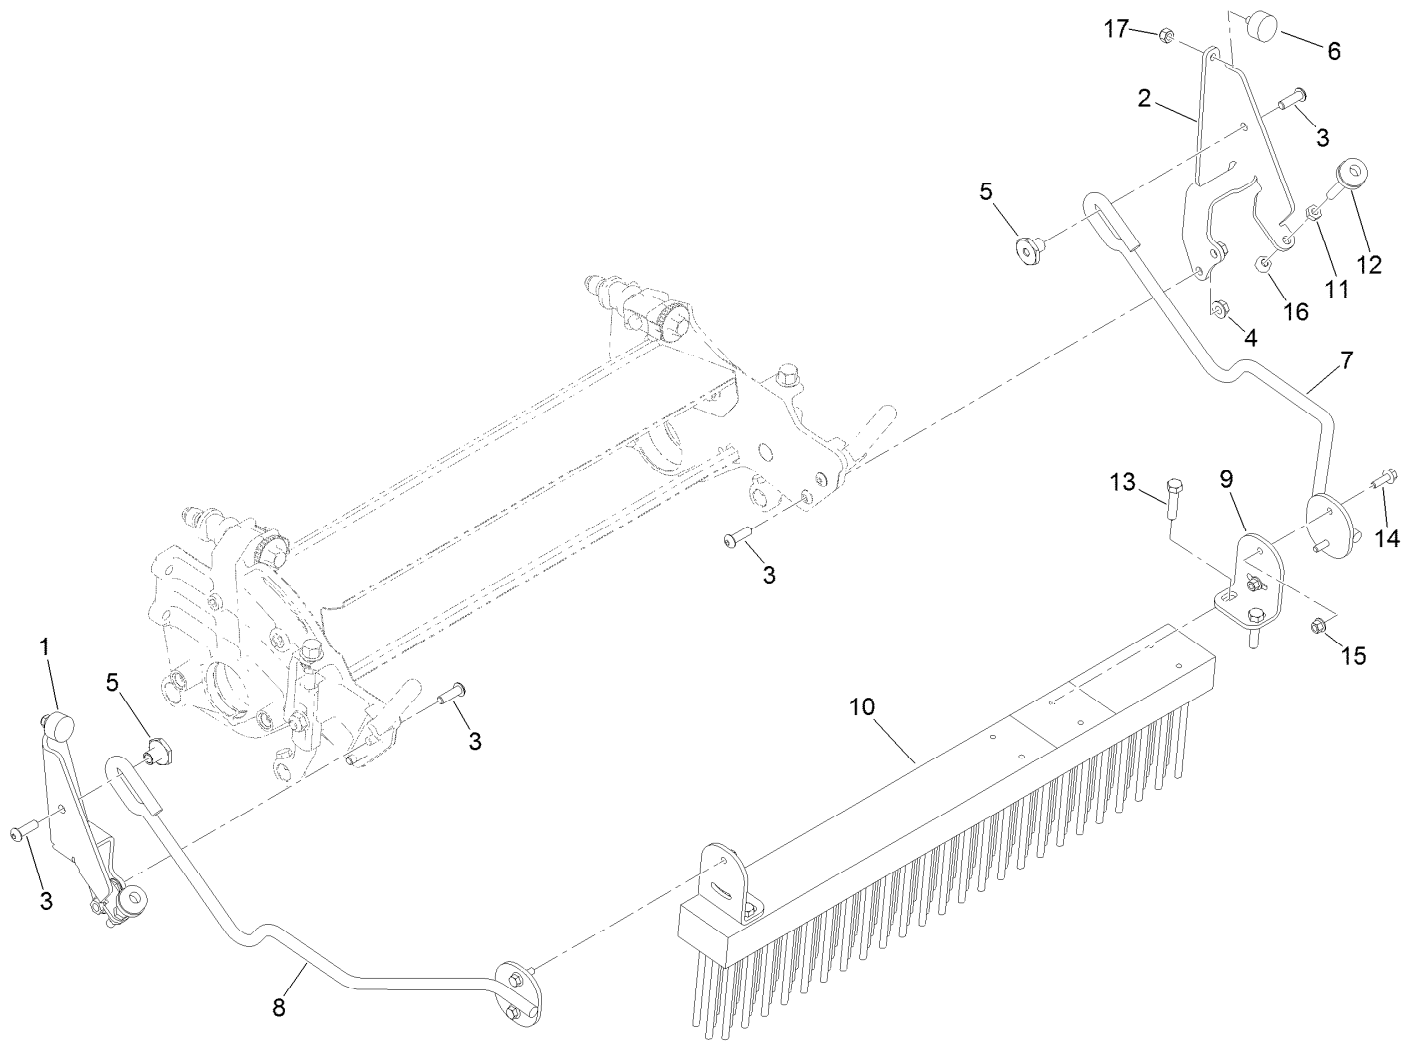

Out-Front Brush Kit Assembly No. 139-4371

Ref.	Part Number	Qty.	Description
1	140-3370-01	1	Bracket-Brush, RH
2	140-3371-01	1	Bracket-Brush, RH
3	109-4872	6	Screw-HSH
4	32128-25	4	Nut-HF
5	139-7428	2	Nut-Spacer
6	240-14	2	Bumper-Rubber
7	140-3369	1	Rod ASM, LH
8	140-3368	1	Rod ASM, RH
9	139-7445	2	Tab-Brush

Ref.	Part Number	Qty.	Description
10	139-7416	1	Brush-Greensmower
11	120-9638	2	Nut-Jam
12	32141-36	2	Screw-Adjustment, Level
13	108505	4	Screw-HLH
14	33103-020	4	Screw-HHF
15	81-0130	4	Nut-Flange, NI
16	119-4038	2	Nut-Hex
17	3296-42	2	Nut-Lock, NI