Installation Instructions

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Description	Qty.	Use
No parts required	_	Prepare the machine.
Bucket-support bracket	1	
Upper bucket bracket	1	Install the bucket mount kit.
Lower bucket bracket	1	
Rubber bumper	1	
Locking pin	1	
Carriage bolt (5/16 x 7/8 inch)	1	
Handle knob	1	
Flange-head bolt (5/16 x 3/4 inch)	2	
Flange nut (5/16 inch)	2	
Spring	1	

Preparing the Machine

- Park the machine on a level surface.
- 2. Disengage the blade-control switch.
- 3. Engage the parking brake.
- Move the motion-control levers outward to the NEUTRAL-LOCK position.
- 5. Shut off the engine and remove the key.

Installing the Bucket Mount Kit

1. Insert the rubber bumper into the bucket-support bracket (Figure 1).

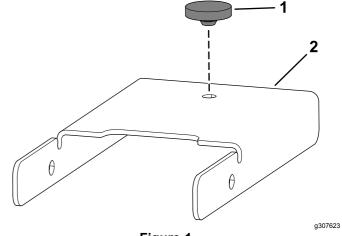



Figure 1

1. Rubber bumper

2. Bucket-support bracket

Register at www.Toro.com.

  ϵ





2. Secure the lower bucket bracket to the bucket-support bracket using the spring and locking pin (Figure 2).


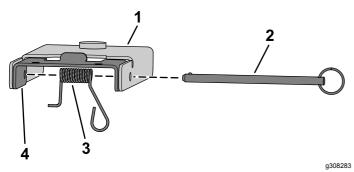


Figure 2

- 1. Bucket-support bracket
- Spring
- 2. Locking pin
- 4. Lower bucket bracket
- 3. Secure the assembled lower bucket bracket and bucket-support bracket to the engine guard using 2 flange-head bolts (5/16 x 3/4 inch) and 2 flange nuts (5/16 inch) as shown in Figure 3.

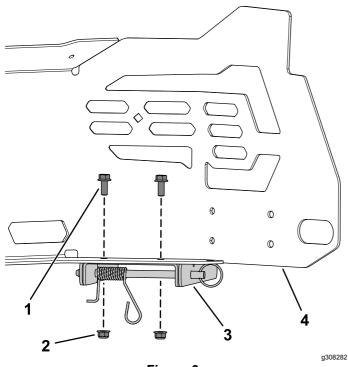

- Figure 3
 Flange-head bolt (5/16 x 3.
 - 3. Assembled bracket
- 2. Flange nut (5/16 inch)

3/4 inch)

4. Engine guard

4. Secure the upper bucket bracket to the engine guard using the carriage bolt (5/16 x 7/8 inch) and handle knob (Figure 4).

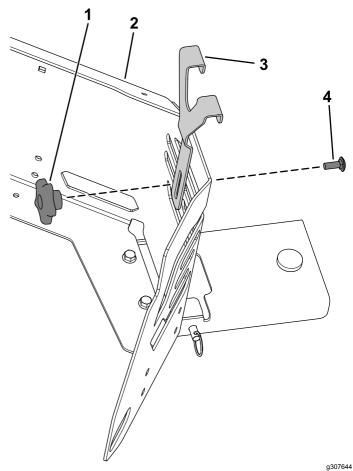


Figure 4

93070

- 1. Handle knob
- 2. Engine guard
- 3. Upper bucket bracket
- 4. Carriage bolt (5/16 x 7/8 inch)