

Rubber Track Kit For Dingo® Compact Utility Loader Model No. 22662

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form \mathbf{nX} \mathbf{y} . The \mathbf{n} represents the quantity of the part, the \mathbf{X} is the multiplication symbol, and the \mathbf{y} represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.



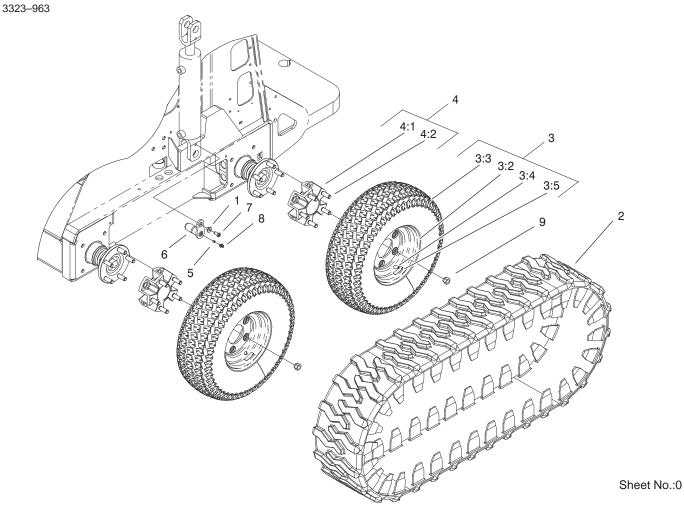

Rubber Track Assembly

Ref. No.	Part No.	Qty.	Description
1 2 3 3:2 3:3 3:4 3:5 4 4:1 4:2 5 6 7 8 9	98–2661 98–2662 232–27 100–8831 100–8844 100–1729–03 10–6830 3245–35	2 2 4 1 1 1 1 4 1 5 2 2 2 2 2 2 2 2 0 2 0	Bushing–Flange Track–Dingo Wheel/Decal ASM Wheel Tire Stem–Valve Decal–20psi Hub ASM Spacer–Wheel Stud–Type, Drive Screw–HS Pivot Pin ASM Screw–Button Head Fitting–Lube Nut–lug

Ref. No.	Part No.	Qty.	Description