

LAWN-BOY®

53 cm Recycler®/Rear Bagging

Lawnmower

Model No. 10928-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Deck Assembly	3	Gear Case Assembly No. 62–6673	8
Engine & Blade Assembly	4	Control Assembly	9
Handle Assembly	5	Engine Assembly	10–11
Bag Assembly	6	Short Block Assembly	12
Rear Drive Assembly	7	Carburetor Assembly	13


Accessories

Description	Model / Part No.	Description	Model / Part No.
Dethatcher Kit	59131 / 77–0260	Leaf Shredder Kit	59180 / 77–0690

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

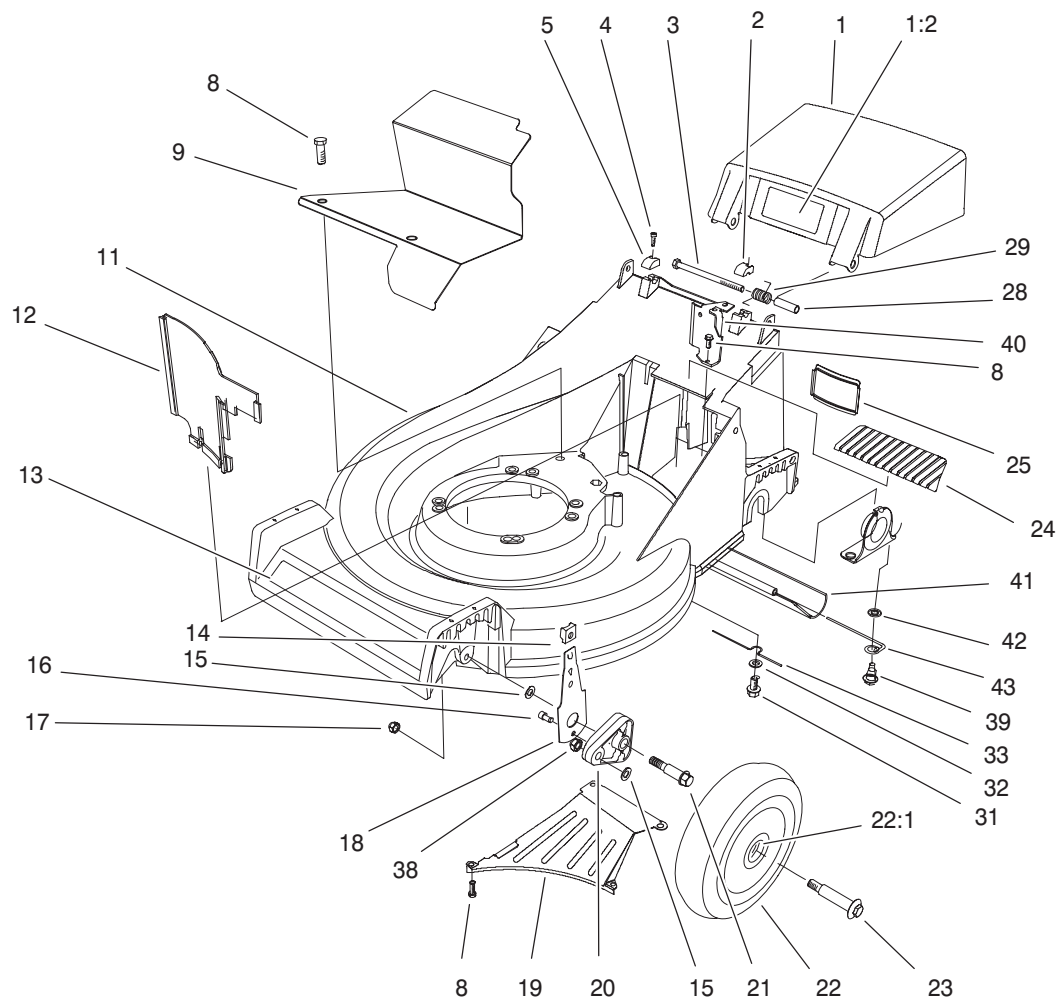

Sheet No.: 2

Deck Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	17-1569	1	Bag Door	29	71-9840	2	Door Spring
1:2	93-4105	1	Decal - Danger	31	32144-15	1	Screw
2	71-7900	1	Cap-Hinge Bolt LH	32	3256-24	1	Washer-Flat
3	322-29	2	Screw-HH	33	66-0620	1	Belt Retainer
4	65-5210	2	Screw-Allen Hd	38	603773	2	Nut
5	71-7910	1	Cap-Hinge Bolt RH	39	5-2490	2	Screw-Shoulder
8	32144-70	7	Screw-HH	40	66-0030-03	1	Bracket-Cable Support
9	100-4381-03	1	Panel-Screen	41	65-5350	1	Trailing Shield
11	104-0219	1	Housing	42	3256-23	2	Washer-Flat
12	66-0020	1	Vertical Panel	43	76-1980	2	Shield Hanger
13	100-8778	1	Decal-Deck				
14	25-7740	2	Knob-Arm				
15	40-1940	4	Washer				
16	32144-85	2	Screw-HH				
17	3296-6	2	Nut-Lock, NI				
18	66-0541	2	Spring Arm ASM-Front				
19	71-9640-03	1	Discharge Ramp				
20	66-0580	2	Arm-Pivot, Front				
21	66-0560	2	Screw-Shoulder				
22	92-9592	2	Wheel ASM				
22:1	27-6250	2	Bushing				
23	92-1057	2	Bolt-Shoulder				
24	71-9920	1	Cover - Top				
25	71-9650	1	Access Cover				
28	71-8580	2	Door Spacer				

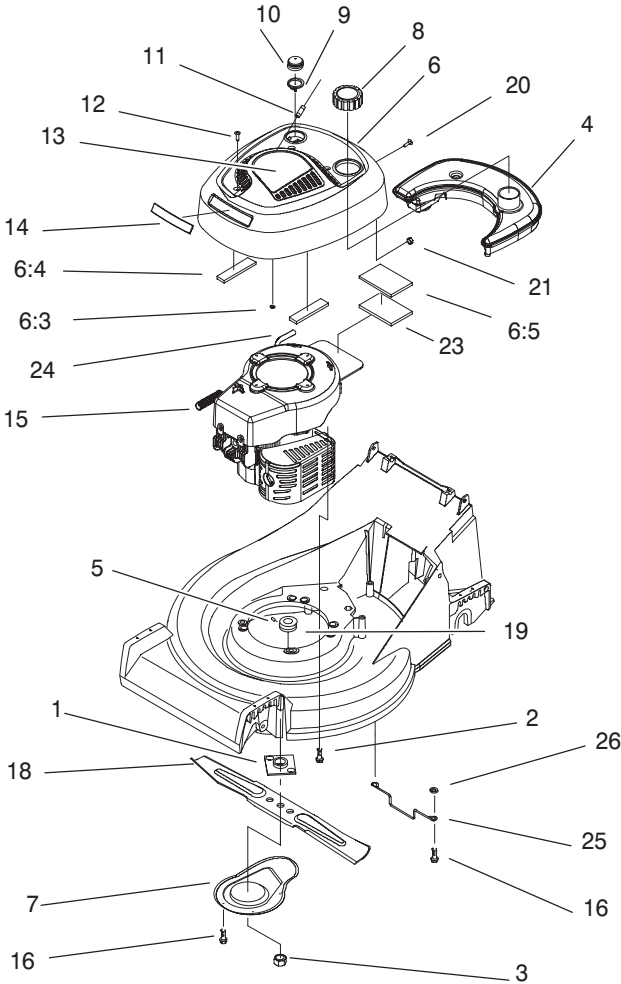

Sheet No.: 3

Engine & Blade Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	677525	1	Plate & Collar ASM	25	98-2679	1	Guide-Belt,Engine
2	613500	3	Screw-Sems	26	3256-23	2	Washer-Flat
3	603164	1	Nut-Blade				
4	95-1897	1	Tank				
5	104-0214	1	Screw-Set,Cone Point				
6	100-6398	1	Shroud & Recoil Cover ASM				
6:3	613329	2	Push Nut				
6:4	99-1522	2	Strip-Foam				
6:5	99-1521	1	Strip-Foam				
7	65-5200-03	1	Shield				
8	98-8344	1	Cap ASM-Fuel & Oil				
9	44-2750	1	Body-Primer				
10	66-7460	1	Bulb-Primer				
11	92-1701	1	Stop-Rope				
12	95-7621	3	Screw-Pan Sems				
13	100-8777	1	Decal-Recoil				
14	100-8794	1	Decal-Shroud				
15	93-4306	1	Spring - Compression				
16	32144-70	6	Screw-HH				
18	612543	1	Blade				
19	95-1878	1	Pulley				
20	314576	1	Screw				
21	306531	1	Nut-Hex				
23	98-1386	1	Pad-Foam				
24	612782	1	Fuel Line				

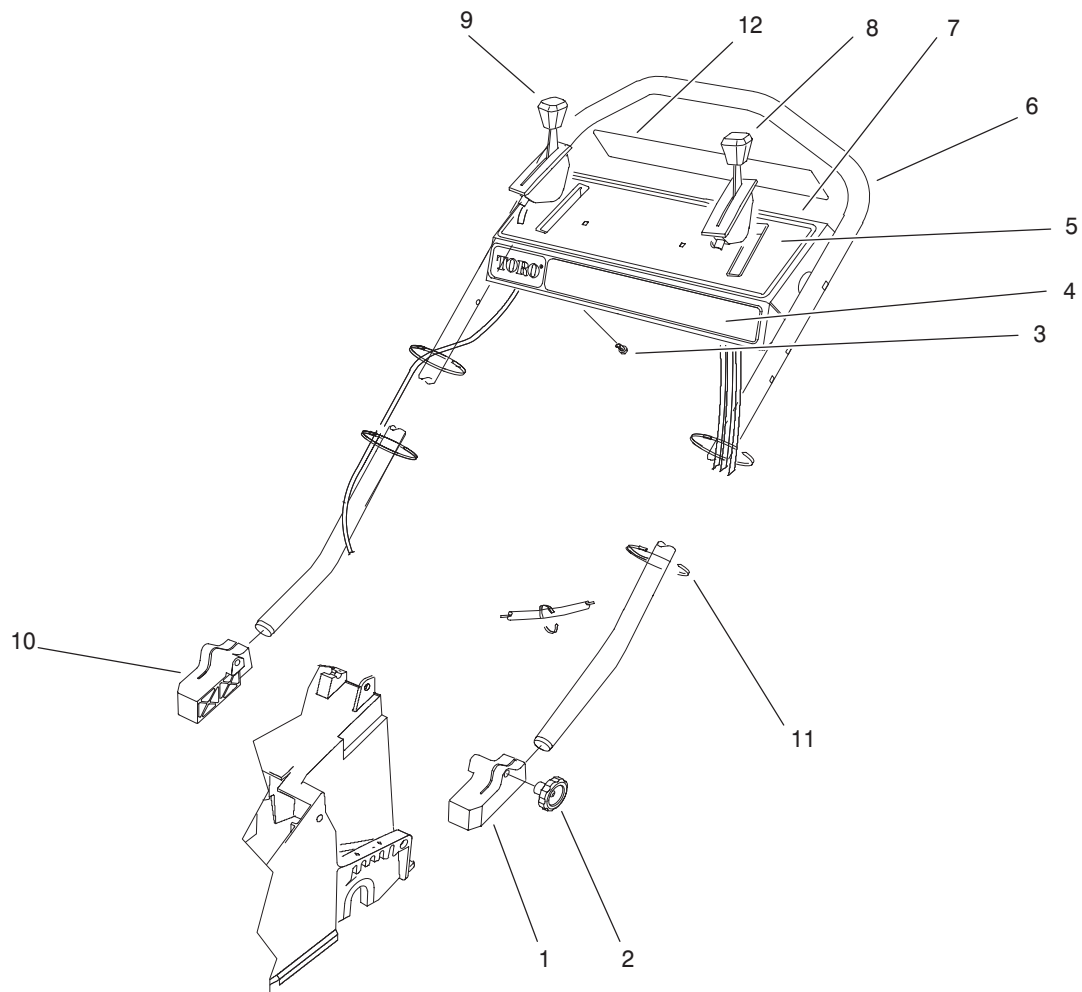

Sheet No.: 4

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	71-8090	1	LH Handle Mount
2	19-4050	2	Knob
3	92-9665	5	Screw
4	100-8779	1	Decal-Panel
5	93-6662	1	Decal - Instruction
6	98-3229-05	1	Handle
7	16-8729	1	Panel
8	95-7410	1	Cable - Throttle
9	93-6632	1	Control - Ground Speed
10	71-8100	1	RH Handle Mount
11	3290-378	5	Tie-Cable
12	93-6655	1	Decal-Panel, Rear

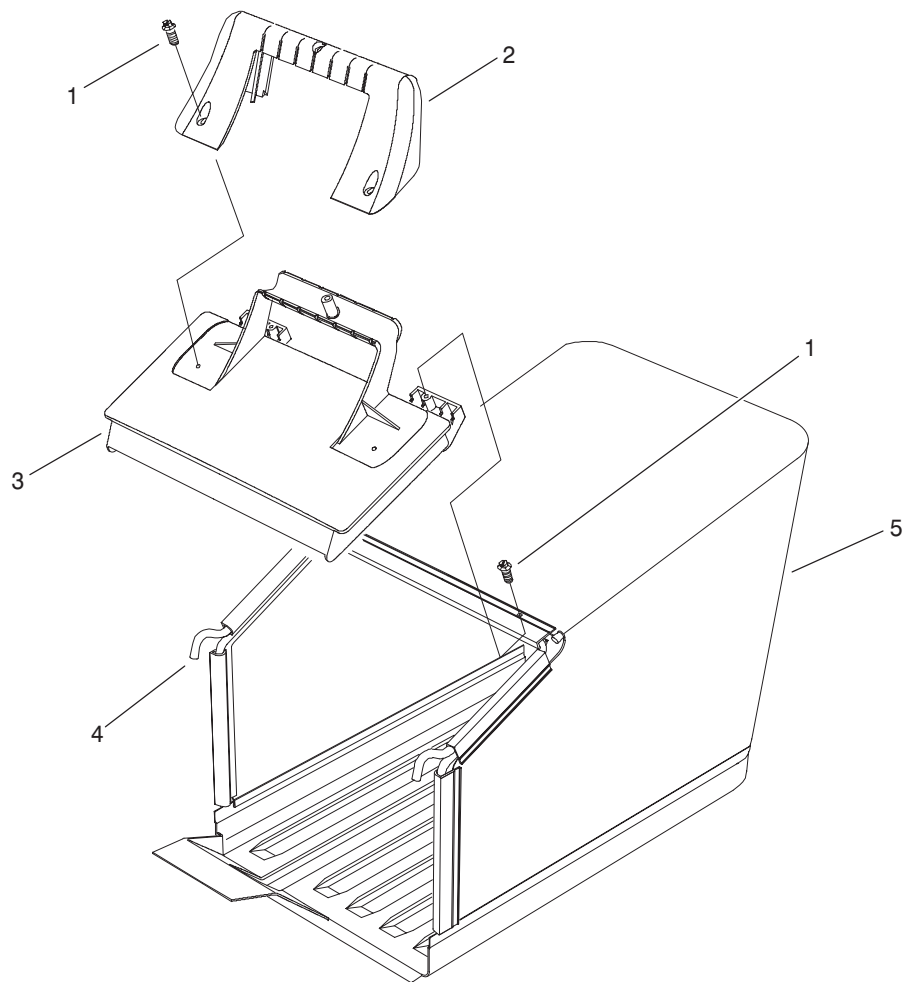


Sheet No.: 5

Bag Assembly


Ref. No.	Part No.	Qty.	Description
1	32144-111	5	Screw-PPH
2	71-9480	1	Handle-Door
3	71-9470	1	Bag Door
4	71-9930-03	1	Frame
5	100-8790	1	Bag-Grass

Ref. No.	Part No.	Qty.	Description

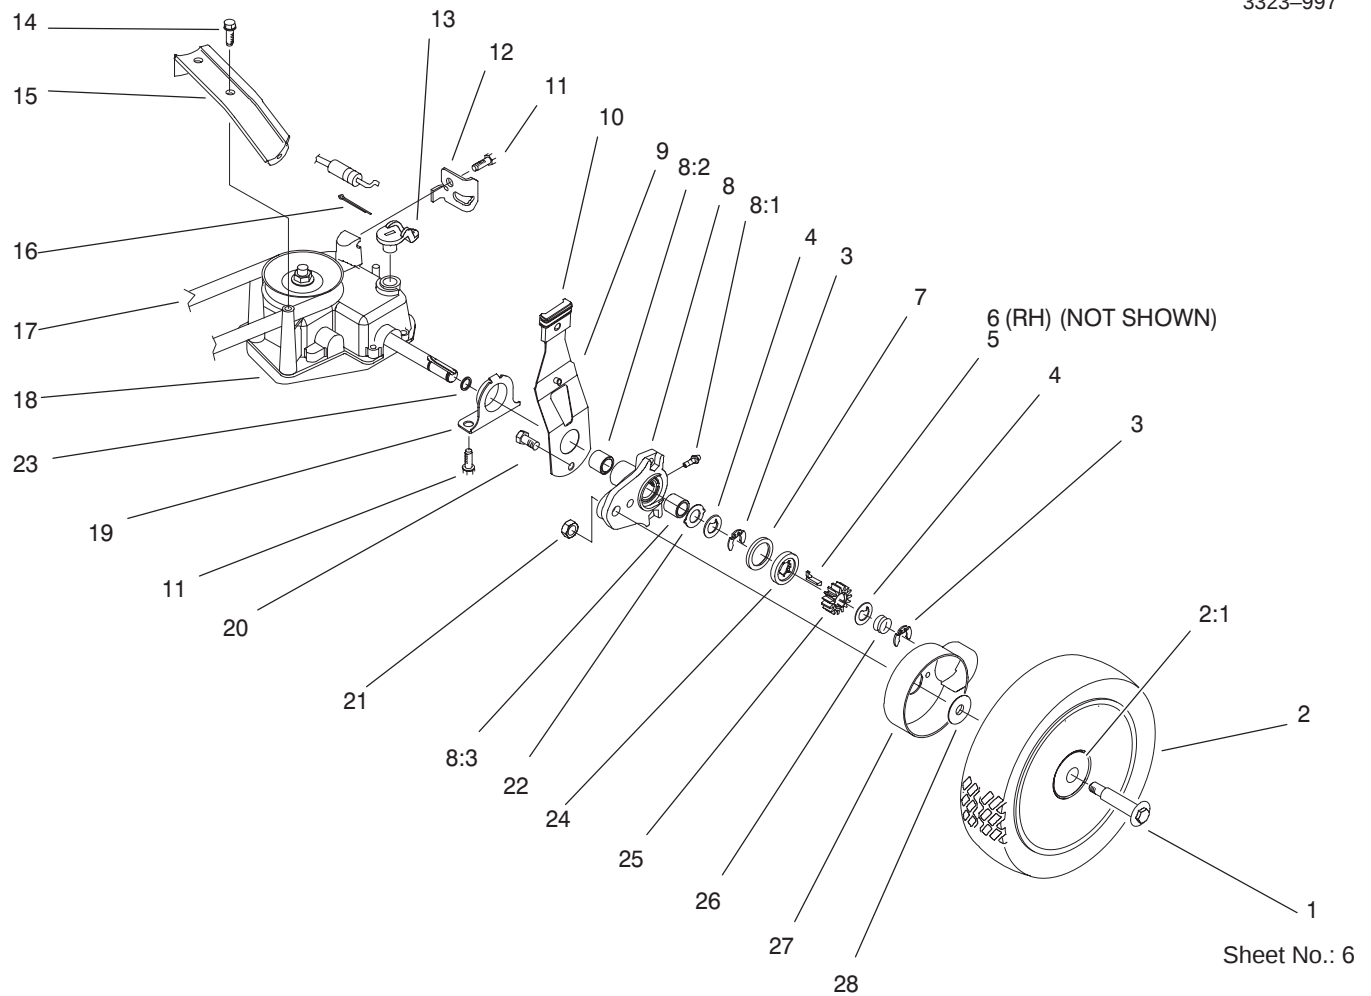

Rear Drive Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder	22	65-4730	2	Washer-Arm, Pivot
2	99-8136	2	Wheel ASM	23	237-153	2	O-Ring
2:1	27-6250	2	Bushing	24	65-4760	2	Washer-Clutch
3	65-2720	4	Ring-Klip	25	65-4750	2	Gear-Pinion
4	65-4740	4	Washer-Thrust, Keyed	26	65-4720	2	Spring-Compression
5	66-6050	1	Key-Rocking, LH	27	74-1660	2	Cover-Wheel
6	66-6040	1	Key-Rocking, RH	28	74-1671	2	Spacer-Cover, Wheel
7	65-4710	2	Ring-Friction				
8	65-5043	2	Pivot Arm Assembly				
8:1	302-56	1	Fitting-Zerk				
8:2	47-2890	1	Bushing				
8:3	70-9760	1	Bushing				
9	65-5441	2	Spring Arm ASM				
10	25-7740	2	Knob-Arm				
11	32144-70	5	Screw-HH				
12	76-2930	1	Cable Retainer				
13	76-0920	1	Shift Lever				
14	49-2040	2	Screw-Taptite				
15	65-5190-03	1	Bracket-Guide, Belt				
16	3272-5	1	Pin-Cotter				
17	36-8070	1	V-Belt				
18	62-6673	1	Gearcase Assembly				
19	66-0360	2	Cap-End				
20	32144-85	2	Screw-HH				
21	603773	2	Nut				

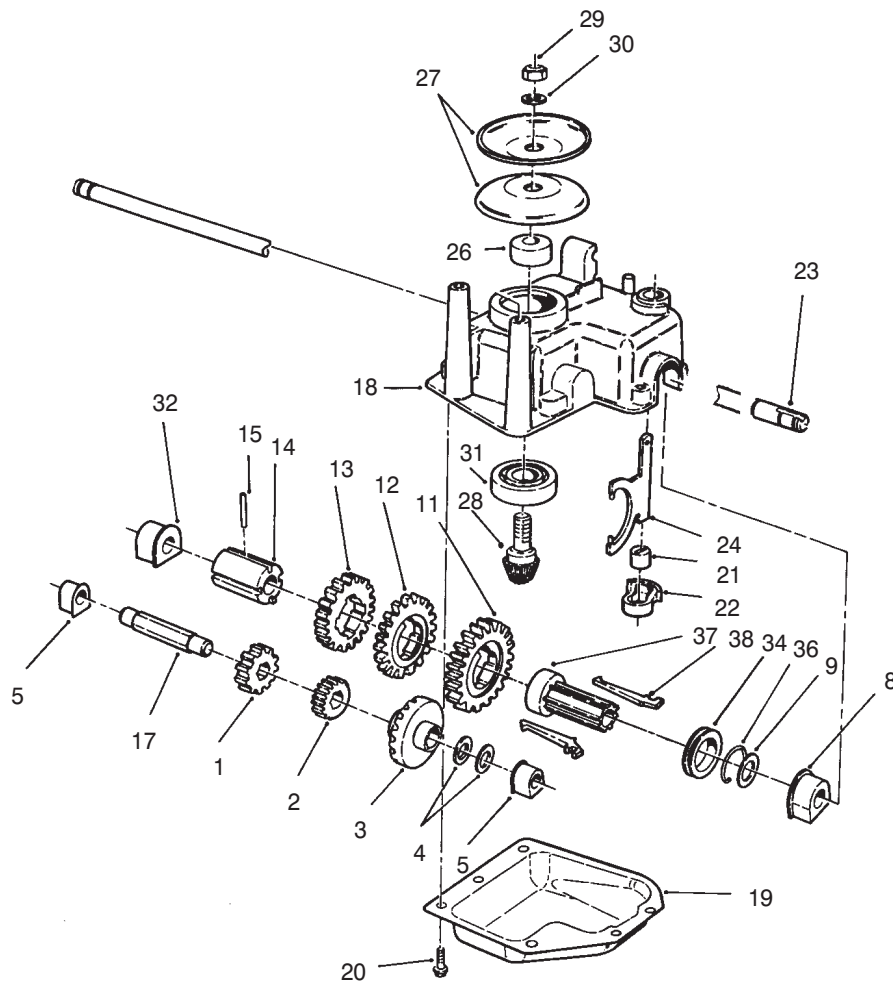


Sheet No.: A3

Gear Case Assembly No. 62-6673

Ref. No.	Part No.	Qty.	Description
1	55-3800	1	25 T Pinion
2	55-3780	1	20 T Pinion
3	55-3760	1	Gear-Bevel
4	36-4791	2	Washer-Thrust
5	60-8750	2	Bushing
8	60-8770	1	Bushing- Output
9	36-4780	1	Washer
11	55-3770	1	49 T Gear
12	55-3790	1	44 T Gear
13	55-3810	1	39 T Gear
14	60-8790	1	Sleeve - Gear
15	32121-120	1	Pin-Spring
17	60-8800	1	Shaft-Intermediate
18	60-8710	1	Case-Gear, Upper
19	60-8730-03	1	Cover-Gear Case
20	49-2040	6	Screw-Taptite
21	29-9570	1	Bushing-Yoke
22	60-8810	1	Retainer- Shift Fork
23	65-4770	1	Shaft-Output
24	60-8870	1	Yoke-Shift
26	62-6660	1	Spacer
27	100-1176	2	Pulley-Half
28	60-8890	1	Gear-Bevel, Pinion
29	3296-5	1	Nut-Lock, NI
30	3256-24	1	Washer-Flat
31	38-7820	1	Bearing-Ball


Ref. No.	Part No.	Qty.	Description
32	60-8850	1	Bushing-Output
34	76-0770	1	Collar-Shift
36	65-5250	1	Clip-Spring
37	76-0780	1	Sleeve-Key, Shift
38	76-0760	2	Key-Shift

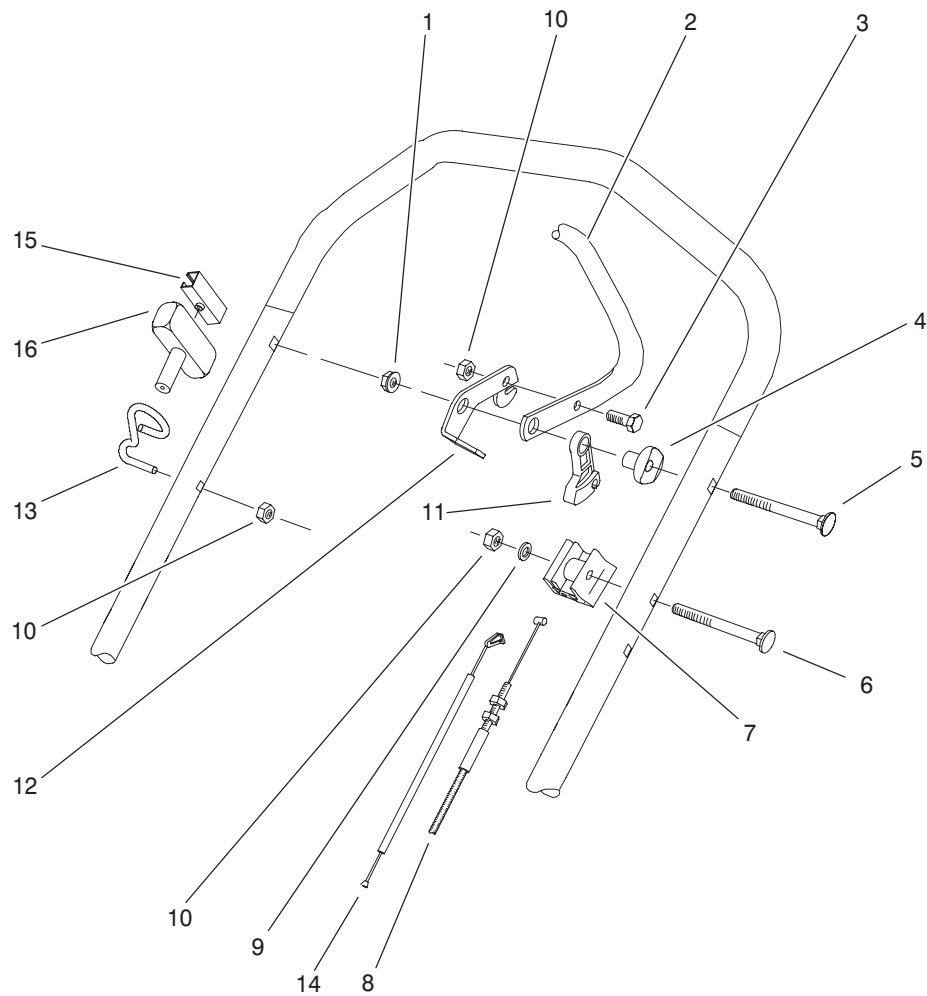

Sheet No.: 7

Control Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-74	2	Nut-Lock NI
2	52-7430-05	1	Bar-Control
3	321-39	1	Screw-HH
4	66-0330	2	Spacer-Support
5	17-9428	2	Handle Screw
6	92-2270	1	Screw - Handle
7	71-0960	1	Cable Support
8	93-6634	1	Cable - Traction
9	3256-1	1	Washer-Flat
10	3296-73	3	Nut-Lock, NI
11	46-5520	1	Lever-Traction
12	66-5351-03	1	Lever-Control
13	95-4457	1	Guide - Rope
14	104-0215	1	Cable-Brake
15	612824	1	Starter-Clip
16	612825	1	Handle-start

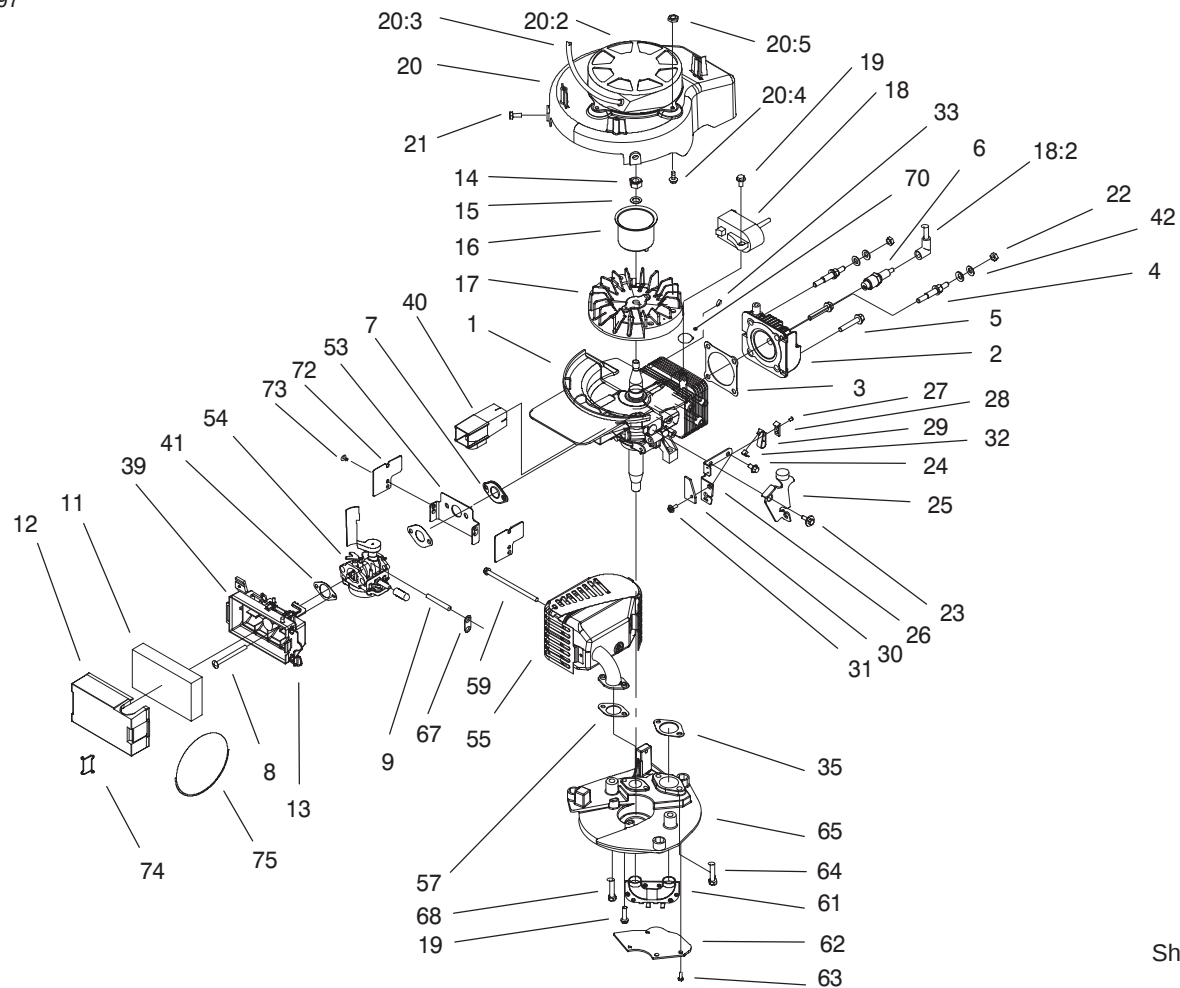


Sheet No.: 2

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2946	1	Short Block ASM
2	94-5776	1	Head-Cylinder
3	94-5778	1	Gasket-Head
4	94-5779	2	Stud
5	94-5780	2	Bolt - Head
6	50-1170	1	Plug-Spark
7	94-5795	2	Gasket-Intake
8	612507	2	Screw
9	95-1861	1	Hose-Primer
11	95-5574	1	Filter-Air
12	100-9112	1	Cover Air Filter Modified
13	100-9110	1	Retainer Cover
14	130743	1	Nut
15	316959	1	Washer-Lock
16	95-1786	1	Cup-Starter
17	95-1866	1	Flywheel
18	99-2911	1	Module-Ignition
*18:1	99-6721	1	Clip-High Tension Lead
18:2	99-6719	1	Lead-High Tension
19	613208	4	Screw
20	95-1868	1	Shroud-Recoil
20:2	99-6713	1	Recoil ASM
20:3	613773	1	Rope
20:4	3290-321	4	Screw-HWH

Ref. No.	Part No.	Qty.	Description
20:5	3296-2	4	Nut-Lock
21	700094	2	Screw-HH
22	146501	2	Nut
23	95-1870	1	Screw-Shoulder
24	95-1871	1	Screw-HWH
25	93-4312	1	Brake Plate ASM
26	84-7820	1	Plate-Brake
27	3290-459	2	Rivet-Plastic
28	92-2925	1	Strap-Insulation
29	60-9010	1	Strap-Ground
30	100-2929	1	Stop-Ground Strap
31	12-5450	1	Screw
32	98-7037	1	Lead Wire-Brake Switch
33	607199	1	Key
35	95-1778	1	Gasket-Exhaust
39	95-5588	1	Air Base ASM
40	95-5578	1	Tunnel-Inlet
41	95-7613	1	Gasket-Filter
42	3290-456	4	Washer-Belleville
*51	609790	1	Sealer-Loctite 50cc
53	98-7015	1	Shield - Carburetor
54	98-7042	1	Carburetor ASM


* Not illustrated

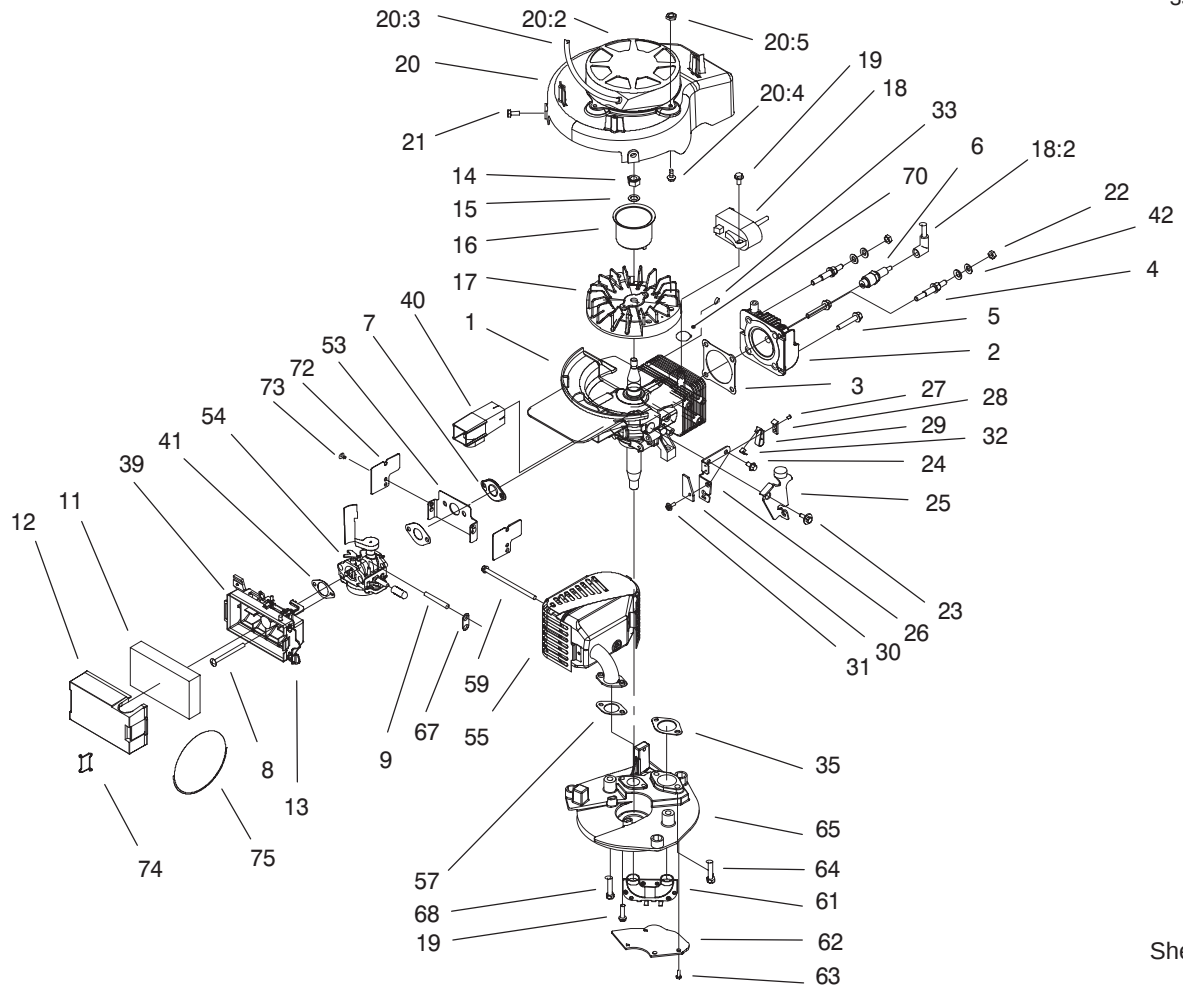

Sheet No.: 2

Engine Assembly (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
55	100-9514	1	Muffler And Guard ASM				
57	98-1392	1	Gasket				
59	611228	1	Bolt-Console				
61	98-1557	1	Pipe-Transfer				
62	98-1591	1	Cover-Muffler				
63	700822	4	Screw-HH				
64	322-17	2	Screw-HH				
65	98-1384	1	Plate-Muffler				
67	95-7615	1	Hose-Retainer				
68	322-7	2	Screw-HH				
70	317893	1	Strap-Tie				
72	93-4316	2	Shield - Governor				
73	613269	4	Screw				
74	100-9111	1	Hook Cover				
75	100-9113	1	O-Ring-Cover				

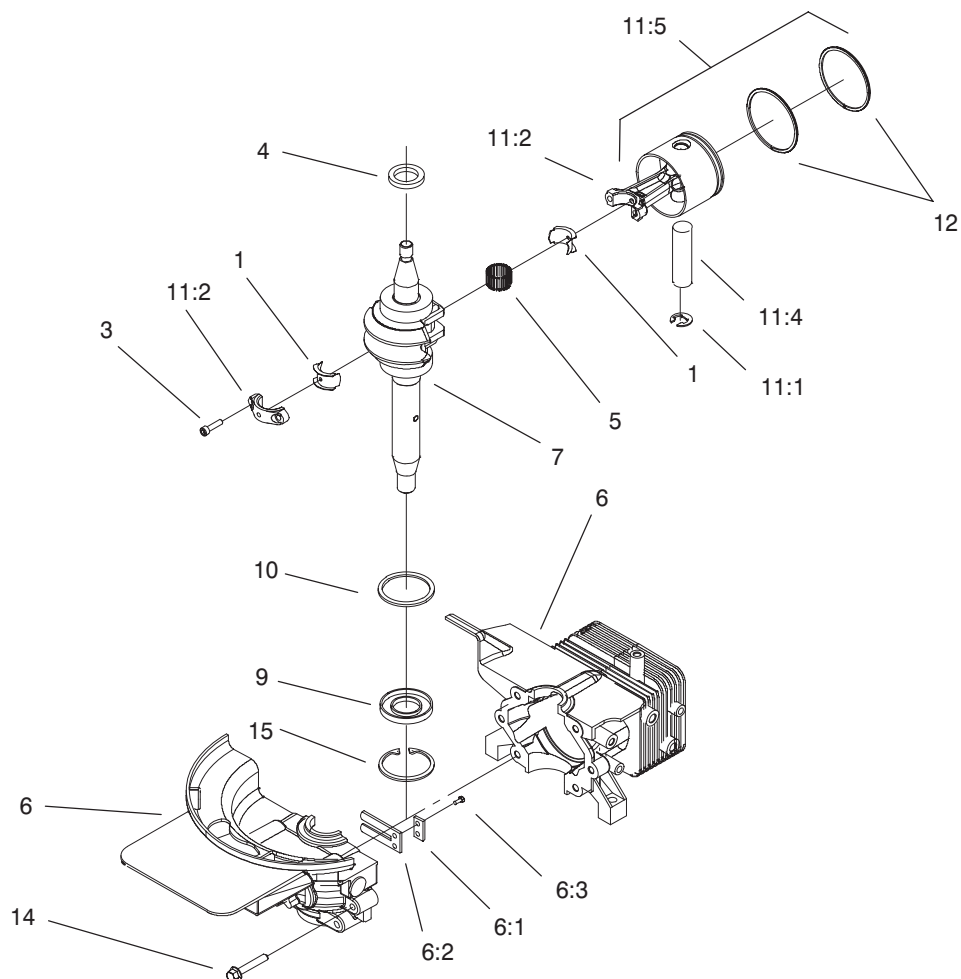


Sheet No.: A1

Short Block Assembly

Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner ASM
*2	610372	1	Sealer–Loctite 6cc
*2	609790	1	Sealer–Loctite 50cc
3	611393	2	Screw–HSH
4	611396	1	Seal–Oil
5	683911	1	Bearing–Needle
6	95–7631	1	Cylinder And Crankcase ASM
6:1	602587	1	Plate–Backup, Reed
6:2	602588	1	Reed–Carburetor
6:3	612872	2	Screw–HH
7	100–2947	1	Crankshaft And Bearing ASM Service
9	94–5764	1	Seal–Oil
10	94–5765	1	Ring–Retaining
11		1	Piston And Connecting Rod ASM
11:1	303712	2	Ring – Retaining
11:2	95–7629	1	Connecting Rod ASM
11:4	94–5774	1	Pin–Wrist
11:5	100–2916	1	Piston And Rings ASM
12	100–2917	1	Ring Set
14	94–5781	6	Screw
15	98–7046	1	Ring – Retaining

Ref. No.	Part No.	Qty.	Description

* Not illustrated

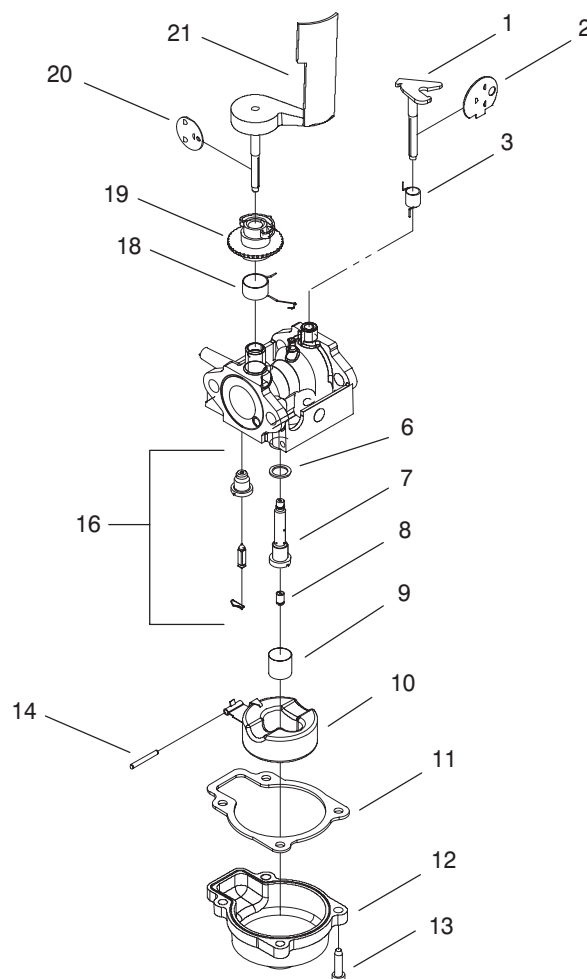

Sheet No.: A2

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description
1	95-5581	1	Shaft-Choke
2	94-5788	1	Disc-Choke
3	95-5583	1	Spring-Choke
6	612383	1	Washer
7	98-7001	1	Nozzle
8	98-1357	1	Jet-Main
9	94-5787	1	Filter-Fuel
10	95-1899	1	Float & Arm ASM
11	98-1362	1	Gasket
12	92-9691	1	Chamber-Float
13	608850	4	Screw-HH
14	92-6389	1	Pin-Straight
16	92-9697	1	Valve/Seat-Float
18	98-7011	1	Spring-Throttle
19	610834	1	Collar-Adjust, Airvane
20	98-7047	1	Disc-Throttle
21	92-6376	1	Air Vane & Shaft

Maintenance Record

[illegible]

LAWN-BOY®