

LAWN-BOY®

51 cm Recycler®/Rear Bagging Lawnmower

Model No. 10927-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Housing, Handle Brackets & Wheel Assembly .	3	Rear Bagger Assembly	9
Gear Case Assembly No. 93–0240	4	Engine Assembly	10
Engine & Blade Assembly	5	Short Block Assembly	11
Gear Case & Wheel Assembly	6	Muffler & Brake Assembly	12
Handle & Controls Assembly	7	Carburetor Assembly	13
RB Discharge Chute Assembly	8		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

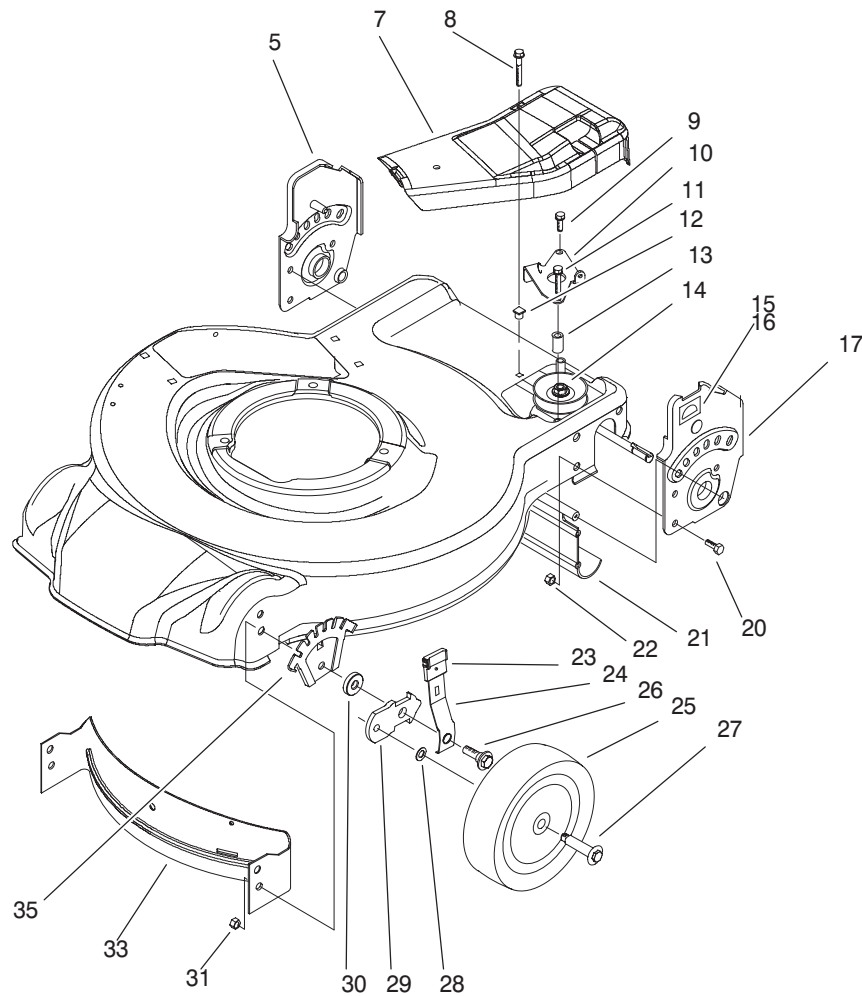

Sheet No.: 2

Housing, Handle Brackets & Wheel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
5	93-0234	1	ASM – RH Handle Bracket	30	92-4890	2	Adjustment Washer – Wheel
7	93-0209	1	Cover – Transmission	31	3296-39	2	Nut–Lock, NI
8	32144-119	1	Screw–Pth	33	100-1179-03	1	Baffle–Front
9	49-2040	1	Screw–Taptite	35	92-4881-03	2	Plate – Height Adjustment
10	93-0228-03	1	Guide – Transmission				
11	92-1616	1	Screw–HWHTF				
12	605120	1	Grommet				
13	614673	1	Bushing–Plate, Actuator				
14	93-0240	1	Transmission ASM				
15	93-6670	1	Decal – HOC				
16	93-6671	1	Decal – HOC				
17	93-0233	1	ASM – LH Handle Bracket				
20	322-3	6	Screw–HH				
21	92-8647	1	Shield – Trailing				
22	3296-29	6	Nut–Lock, NI				
23	92-1008	4	Knob–Lever, Height Adjustment				
24	614687	2	Arm–Front Spring				
25	92-9591	2	Wheel ASM				
26	614650	2	Bolt–Shoulder				
27	614672	2	Bolt–Shoulder				
28	40-1940	2	Washer				
29	95-7403-03	2	Bracket–Wheel Height				

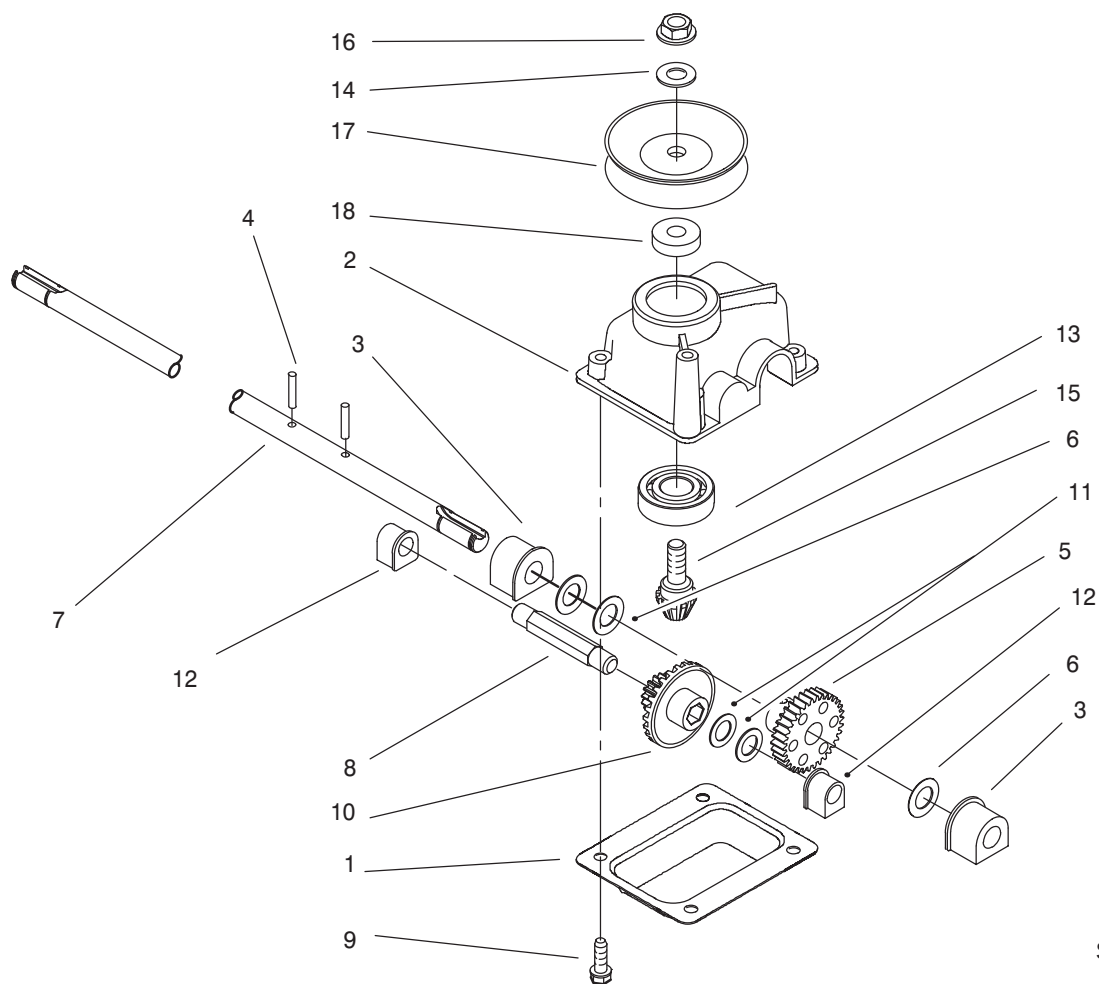


Sheet No.: A1

C-2963

Gear Case Assembly No. 93-0240

Ref. No.	Part No.	Qty.	Description
1	614668-03	1	Cover-Gear Case
2	92-7727	1	Gearcase
3	60-8850	2	Bushing-Output
4	3285-19	2	Pin-Groove
5	614596	1	Gear
6	36-4780	2	Washer
7	93-0239	1	Shaft - Output
8	614696	1	Shaft-Intermediate
9	49-2040	4	Screw-Taptite
10	55-3760	1	Gear-Bevel
11	36-4791	2	Washer-Thrust
12	60-8750	2	Bushing
13	38-7820	1	Bearing-Ball
14	3256-24	1	Washer-Flat
15	60-8890	1	Gear-Bevel, Pinion
16	3296-5	1	Nut-Lock, NI
17	100-1176	2	Pulley-Half
18	62-6660	1	Spacer


Ref. No.	Part No.	Qty.	Description

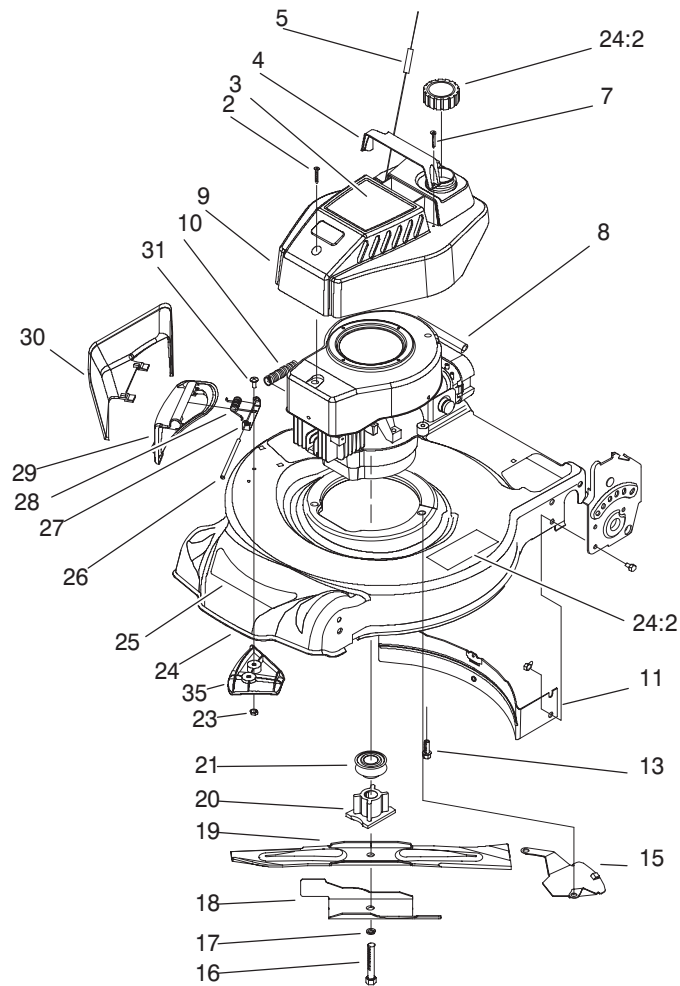

Sheet No.: 3

Engine & Blade Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	93-4302	3	Screw	29	99-5294	1	Cover-Side
3	100-8782	1	Decal-Recoil	30	99-5295	1	Chute-Side
4	93-1200	1	Strap - Tank	31	3229-11	2	Screw-CARR
5	92-1701	1	Rope - Stop	35	99-6349	1	Baffle
6	55-3578	1	Gas Cap Assembly				
7	32104-118	2	Screw-PPH				
8	68-3632	1	Fuel Line				
9	92-6396	1	Tank/Shroud				
10	66-5370	1	Spring-Comp				
11	93-0223-03	1	Baffle - Rear				
13	95-1726	3	Screw-Taptite w/Patch				
15	93-4196-03	1	Shield - Grass				
16	26-0670	1	Screw-Blade				
17	3253-22	1	Washer-Lock/Sp				
18	93-0219-03	1	Accelerator				
19	93-0241	1	Blade				
20	52-7320	1	Blade Retainer				
21	93-0278	1	Pulley - Driver				
23	32128-32	2	Nut-HHF				
24	104-0216	1	Housing				
24:2	93-4105	1	Decal - Danger				
25	100-8781	1	Decal-Deck				
26	99-5291	1	Rod-Cover				
27	99-5292	1	Bracket-Cover				
28	99-5293	1	Spring-Torsion				

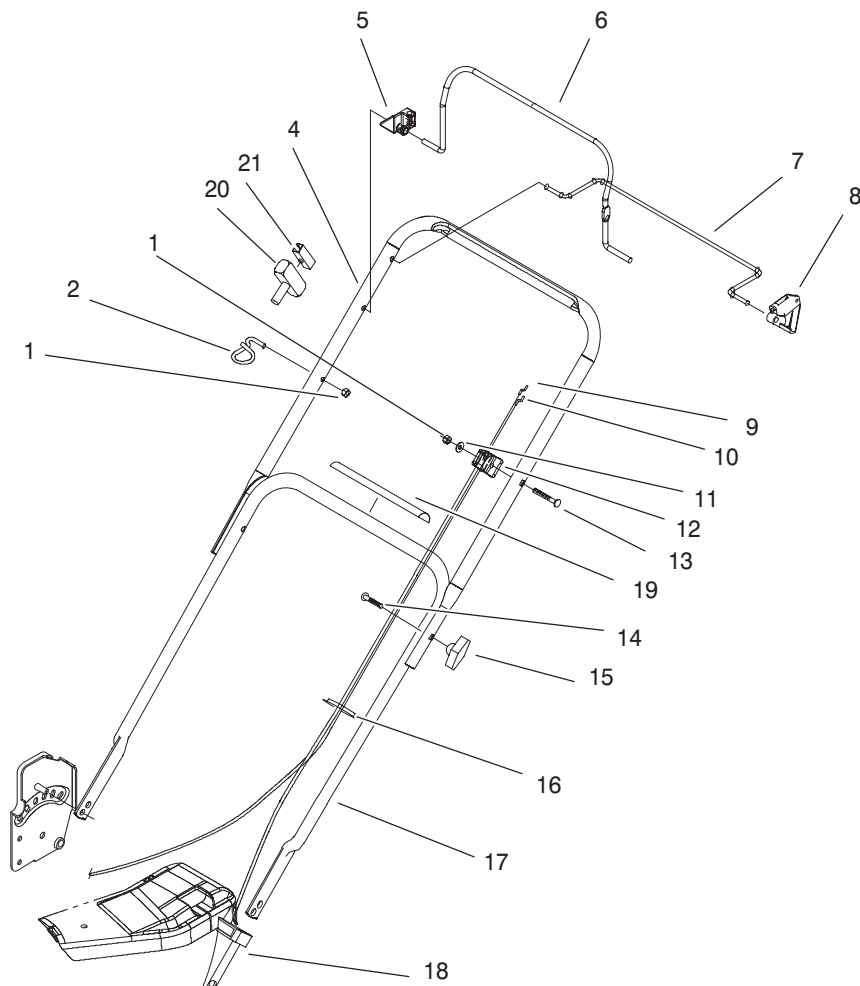

Sheet No.: 5

Handle & Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-73	2	Nut-Lock, NI
2	86-9671	1	Guide-Rope
4	99-1569-05	1	Handle-Upper
5	94-6097	1	Stop
6	99-1570-03	1	Bail-Brake
7	99-1571-03	1	Bail-Traction
8	92-5412	1	Stop-Pivot
9	99-1586	1	Cable-Traction
10	100-9969	1	Brake Cable ASM
11	3256-1	1	Washer-Flat
12	94-6096	1	Anchor - Cable
13	92-2269	1	Screw-Handle
14	92-2260	2	Screw-Handle
15	98-7134	2	Knob-Handle
16	3290-378	1	Tie-Cable
17	99-6021-05	1	Lower Handle
18	93-7380	1	Anchor - Cable
19	98-3248	1	Decal - Operation
20	612825	1	Handle-Start
21	612824	1	Starter-Clip

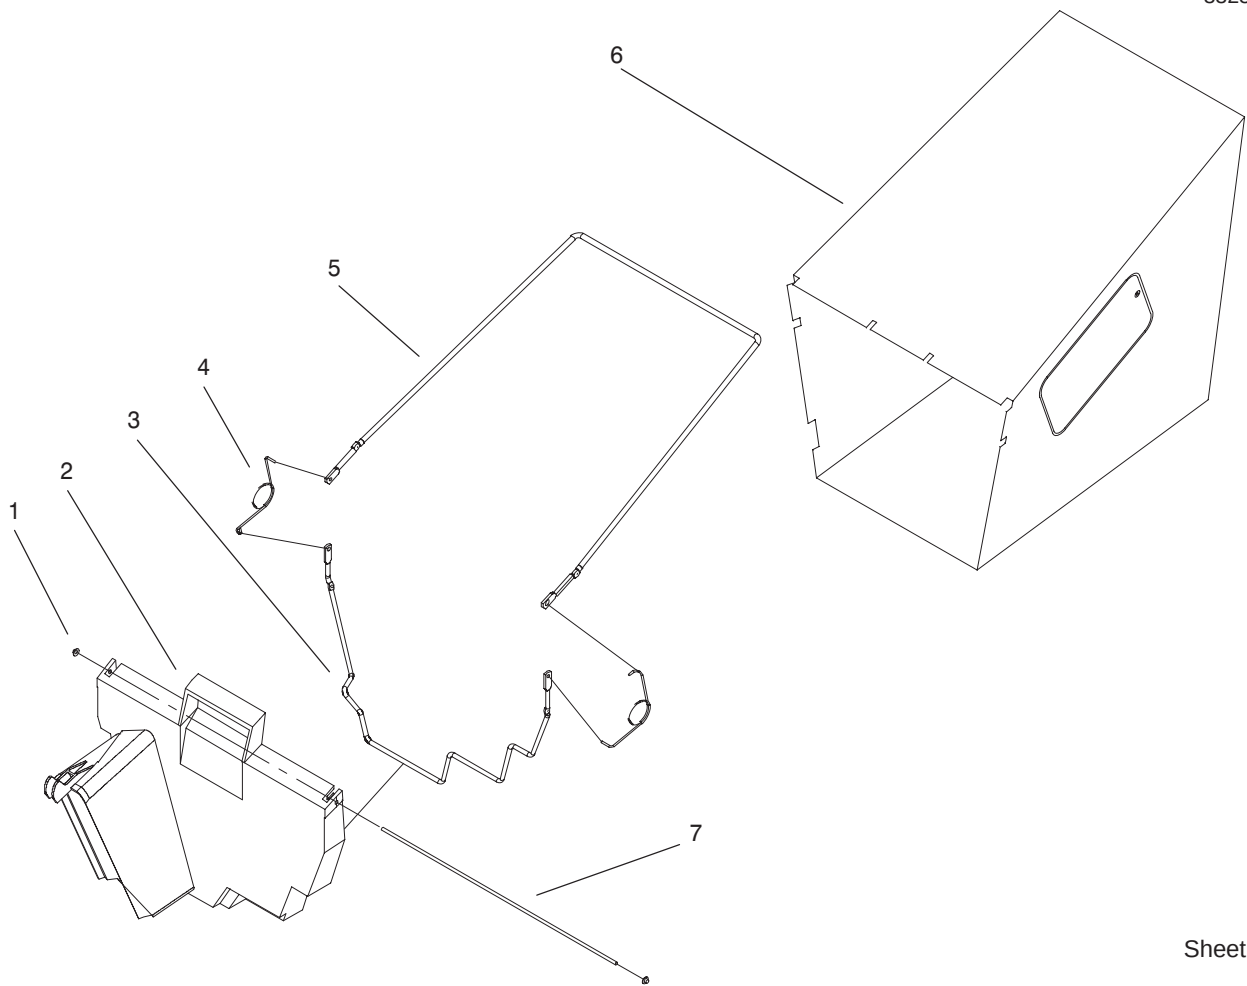


Sheet No.: 7

Rear Bagger Assembly

Ref. No.	Part No.	Qty.	Description
1	3290-422	2	Nut-Push
2	93-0266	1	Door - Bag
3	93-0282	1	Frame - Lower Bag
4	36-6910	2	Spring
5	93-0281	1	Frame - Upper Bag
6	100-8785	1	Bag-Grass
7	93-0283	1	Hinge - Bag Door

Ref. No.	Part No.	Qty.	Description

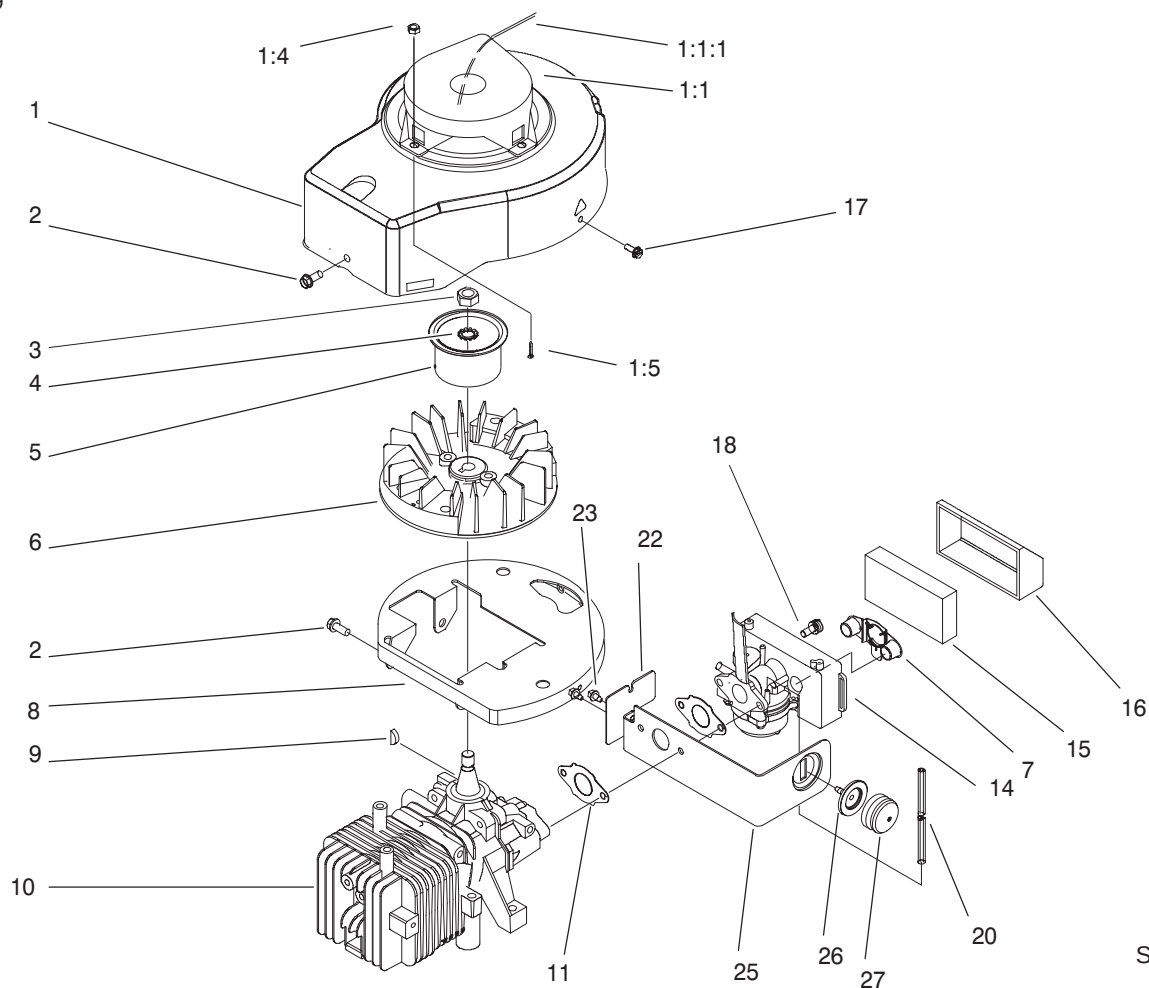


Sheet No.: 2

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	93-1248	1	Shroud/Start
1:1	95-1781	1	Recoil
1:1:1	613773	1	Rope
1:4	3296-2	4	Nut-Lock
1:5	3290-321	4	Screw-HWH
2	614702	5	Screw
3	130743	1	Nut
4	316959	1	Washer-Lock
5	614640	1	Hub Starter
6	684743	1	Flywheel
7	93-4320	1	Shield - Fuel
8	93-1216-03	1	Shroud Base
9	607199	1	Key
10	94-5731	1	Short Block ASM
11	92-4948	2	Gasket-Carburetor
14	100-9541	1	Carburetor ASM
15	609493	1	Element-Air Filter
16	93-1231	1	Cover-Air Filter
17	614699	3	Screw
18	609482	2	Screw
20	44-3172	1	Hose-Primer
22	93-4316	1	Shield - Governor
23	613269	2	Screw
25	100-9510	1	Shield Primer Mounting
26	44-2750	1	Body-Primer
27	66-7460	1	Bulb-Primer


Ref. No.	Part No.	Qty.	Description

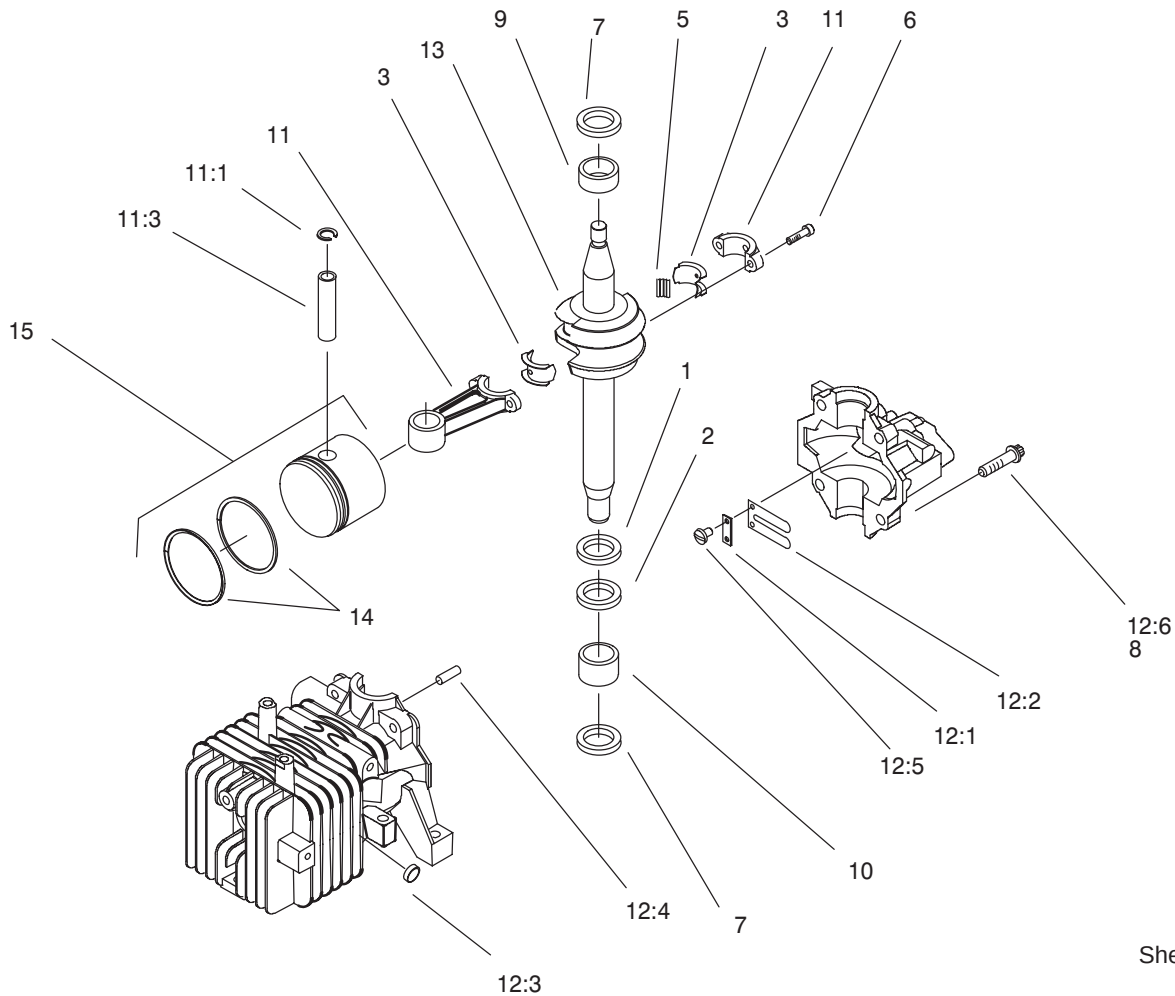

Sheet No.: A1
C-1295

Short Block Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	252-76	1	Bearing-Thrust				
2	252-80	1	Washer-Thrust				
3	677982	1	Liner ASM				
5	683911	1	Bearing-Needle				
6	611393	2	Screw-HSH				
7	611396	2	Seal-Oil				
8	614636	3	Screw-HWH				
9	681830	1	Bearing				
10	681831	1	Bearing				
11	95-7629	1	Connecting Rod ASM				
11:1	303712	2	Ring - Retaining				
11:3	606608	1	Wrist Pin				
12		1	Cylinder & Crank Case ASM				
12:1	602587	1	Plate-Backup, Reed				
12:2	602588	1	Reed-Carburetor				
12:3	609123	4	Plug-Core				
12:4	609629	1	Dowel				
12:5	612872	2	Screw-HH				
12:6	614636	1	Screw-HWH				
13	94-5733	1	Crankshaft				
14	681737	1	F-Ring Set				
15	92-4923	1	Piston & Ring				

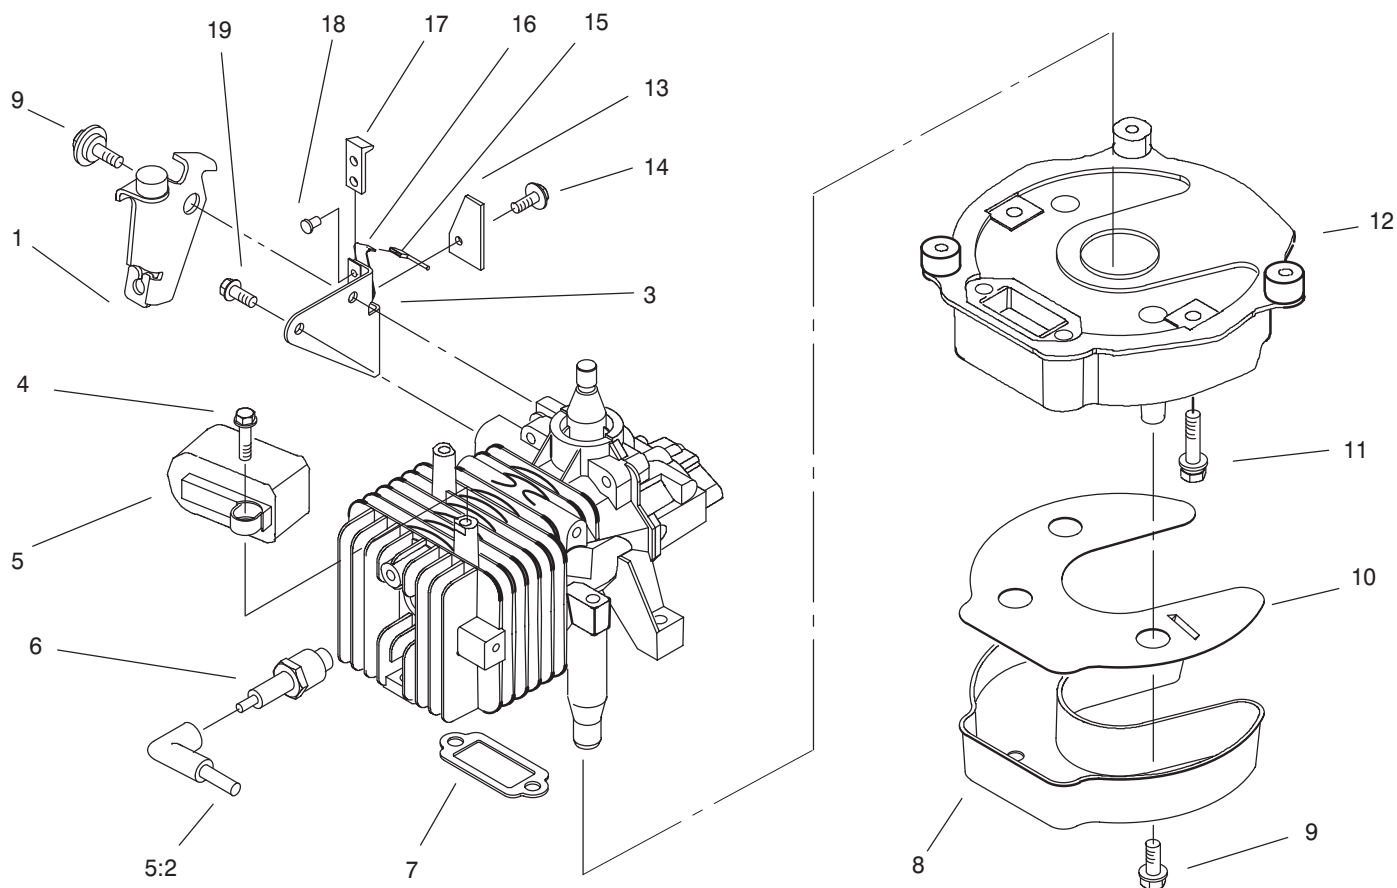

Sheet No.: 3


C-1296

Muffler & Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	93-4312	1	Brake Plate ASM
2	614702	1	Screw
3	84-7820	1	Plate-Brake
4	613208	2	Screw
5	99-2911	1	Module-Ignition
*5:1	99-6721	1	Clip-High Tension Lead
5:2	99-6719	1	Lead-High Tension
6	614009	1	Spark Plug
7	93-1233	1	Gasket-Exhaust
8	93-1108-03	1	Cover-Muffler
9	609471	3	Screw
10	93-1217	1	Baffle-Muffler
11	607601	4	Screw
12	614654	1	Plate-Muffler
13	100-2929	1	Stop-Ground Strap
14	12-5450	1	Screw
15	92-1156	1	Electrical Lead ASM
16	60-9010	1	Strap-Ground
17	92-2925	1	Strap-Insulation
18	3290-459	2	Rivet-Plastic
19	92-9698	1	Screw-shoulder

* Not illustrated

Ref. No.	Part No.	Qty.	Description

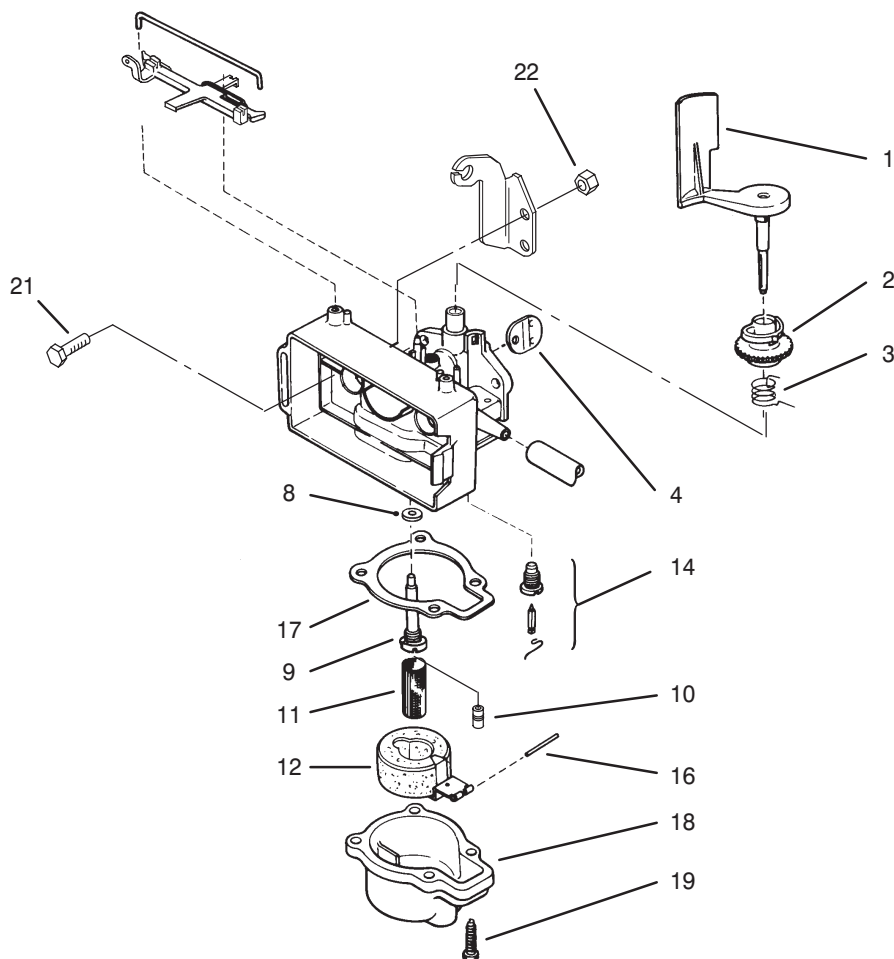

Sheet No.: A2

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description
1	92-6376	1	Air Vane & Shaft
2	610834	1	Collar-Adjust, Airvane
3	610833	1	Spring-Throttle
4	92-6373	1	Disc-Throttle
8	612383	1	Washer
9	92-6371	1	Nozzle
10	92-6370	1	Main Jet
11	611071	1	Filter-Fuel
12	678113	1	Float & Arm ASM
14	92-9697	1	Valve/Seat-Float
16	92-6389	1	Pin-Straight
17	98-1362	1	Gasket
18	92-9691	1	Chamber-Float
19	608850	4	Screw-HH
21	613269	2	Screw
22	306531	2	Nut-Hex

Maintenance Record

[illegible]

LAWN-BOY®