



Greensmaster[®] Flex 21

Traction Unit

Model No. 04021—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	3	Roller Assembly	15
Reel Drive Assembly	4	Reel Drive Assembly	16
Drum Drive and Basket Assembly	5	Crankcase Assembly	17
Engine Installation Assembly	6	Camshaft and Valves Assembly	18
Gearbox Assembly No. 99–3775	7	Ignition Assembly	19
Handle Assembly	10	Governor Assembly	20
Roller Option Assembly	12	Carburetor Assembly	21
Right and Left Side Plate Assembly	13	Air Filter and Muffler Assembly	22
Reel Assembly	14	Fuel Tank Assembly	23


Accessories

Description	Model / Part No.	Description	Model / Part No.
11 Blade Cutting Unit	04200	Clip Kit	105–5325
Wheel Kit	04122	Hour Meter Kit	105–5350
Light Kit	04058	Groomer	04201

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

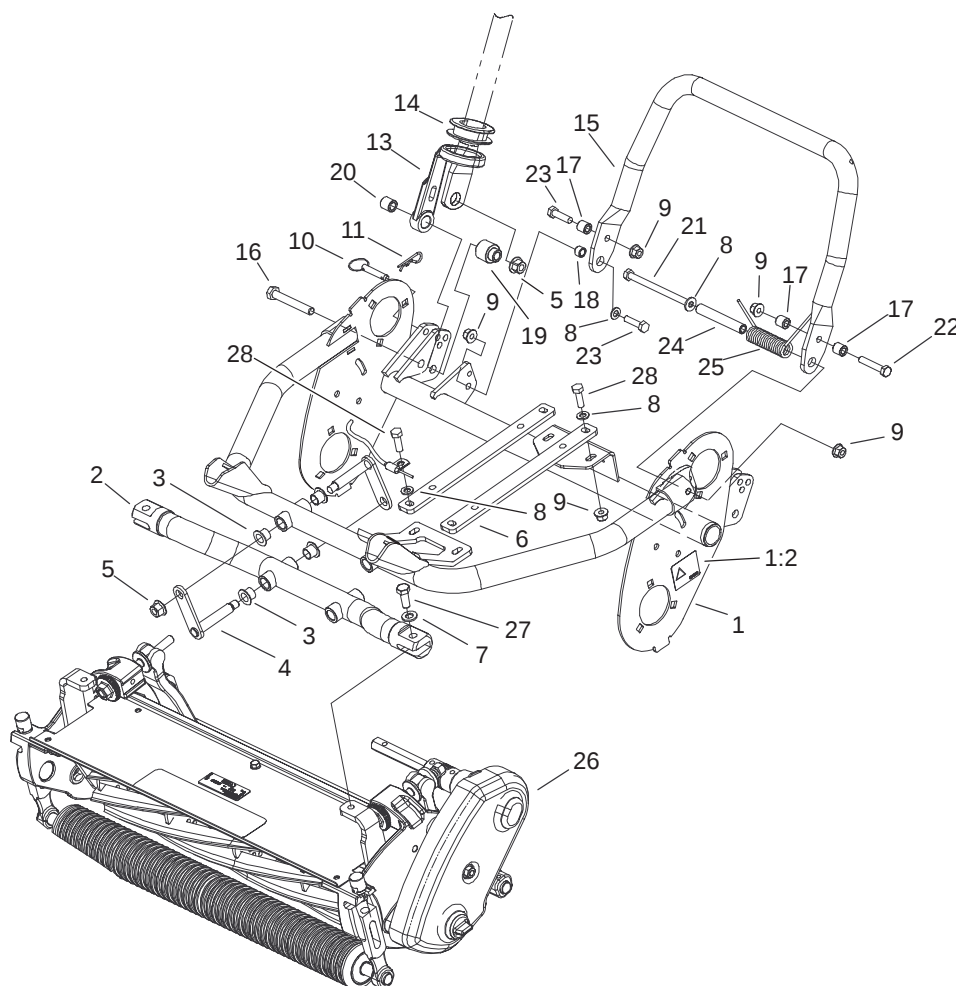

Sheet No.:2

Frame Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	104-2630	1	Rear Frame ASM	23	33114-030	2	Screw-HH
1:2	93-9389	2	Decal-Warning, Belt (Japan)	24	104-0502	1	Spacer-Kickstand, Long
1:2	93-9356	2	Decal-Warning, Belt	25	99-2011	1	Spring-Torsion
2	105-2445-01	1	Front Frame ASM	27	33115-025	2	Screw-HH
3	93-2561	8	Bushing - Flange	28	33114-025	4	Screw-HH
4	99-2063	4	Link ASM				
5	104-2611	6	Nut-HF				
6	99-2070-01	2	Base-Engine				
7	33095-00	2	Washer-Flat				
8	33094-00	6	Washer-Flat				
9	104-2612	8	Nut-HF				
10	93-6029	2	Pin-Clevis, Ring				
11	3290-467	2	Pin-Hair				
13	99-3774-03	2	Arm-Handle				
14	65-7510	2	Grommet-Handle				
15	99-3778-03	1	Kickstand				
16	33115-070	2	Screw-HH				
17	93-6024	3	Bushing-Support, Handle				
18	65-7910	1	Spacer				
19	99-2053	2	Pin-Pivot				
20	99-2058	2	Spacer-Support, Handle				
21	33114-100	1	Screw-HH				
22	33114-045	1	Screw-HH				

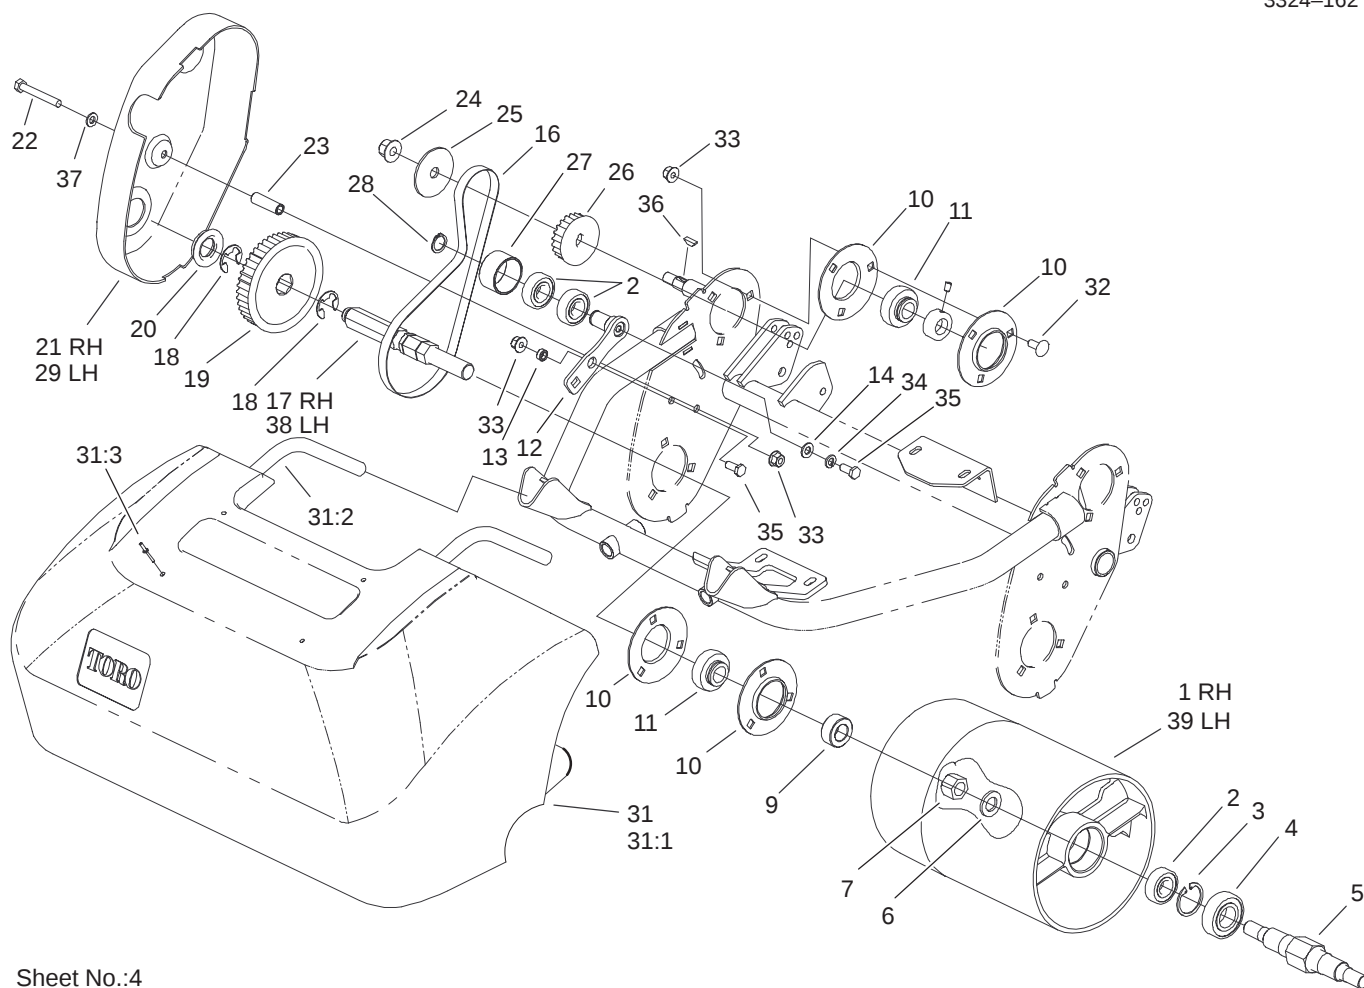

Sheet No.:4

Drum Drive and Basket Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-3845	1	Drum-Traction, RH	29	99-3790	1	Cover-Traction, LH
2	38-7820	6	Bearing-Ball	31	104-2600	1	Basket ASM
3	32120-42	2	Ring-Retaining	31:1	105-2439	1	Basket-Grass
4	251-82	2	Bearing-Ball	31:2	99-4282-03	1	Basket Frame ASM
5	99-3848	1	Spindle-Drum	31:3	3269-4	5	Rivet-Pop
6	33098-00	2	Washer-Flat	32	33124-020	12	Screw-CARR
7	33028-00	2	Nut-Lock NI	33	104-2612	16	Nut-HF
9	104-0537	2	Spacer-Drum	34	3253-4	2	Washer-Lock
10	65-6710	8	Flangette	35	33114-020	4	Screw-HH
11	104-0538	4	Bearing-Aligning, Self	36	3257-30	2	Key-Woodruff
12	99-2027	2	Idler	37	33094-00	2	Washer-Flat
13	99-2018	2	Spacer-Arm, Idler	38	99-3844	1	Shaft-Hex, LH
14	3256-23	2	Washer-Flat	39	99-3846	1	Drum-Traction, LH
16	99-2023	2	Belt-Drum				
17	99-2037	1	Shaft-Hex, RH				
18	32151-103	4	Ring-Snap				
19	99-3799	2	Pulley-Drum				
20	104-0533	2	Seal-Cover, Drum				
21	99-3789	1	Cover-Traction, RH				
22	33114-060	2	Screw-HH				
23	99-2033	2	Spacer-Cover				
24	104-2610	2	Nut-HF				
25	104-0532	2	Washer-Pulley				
26	99-2081	2	Pulley-22 Tooth				
27	104-2609	2	Sleeve-Pulley				
28	32151-12	2	Ring-Retaining				

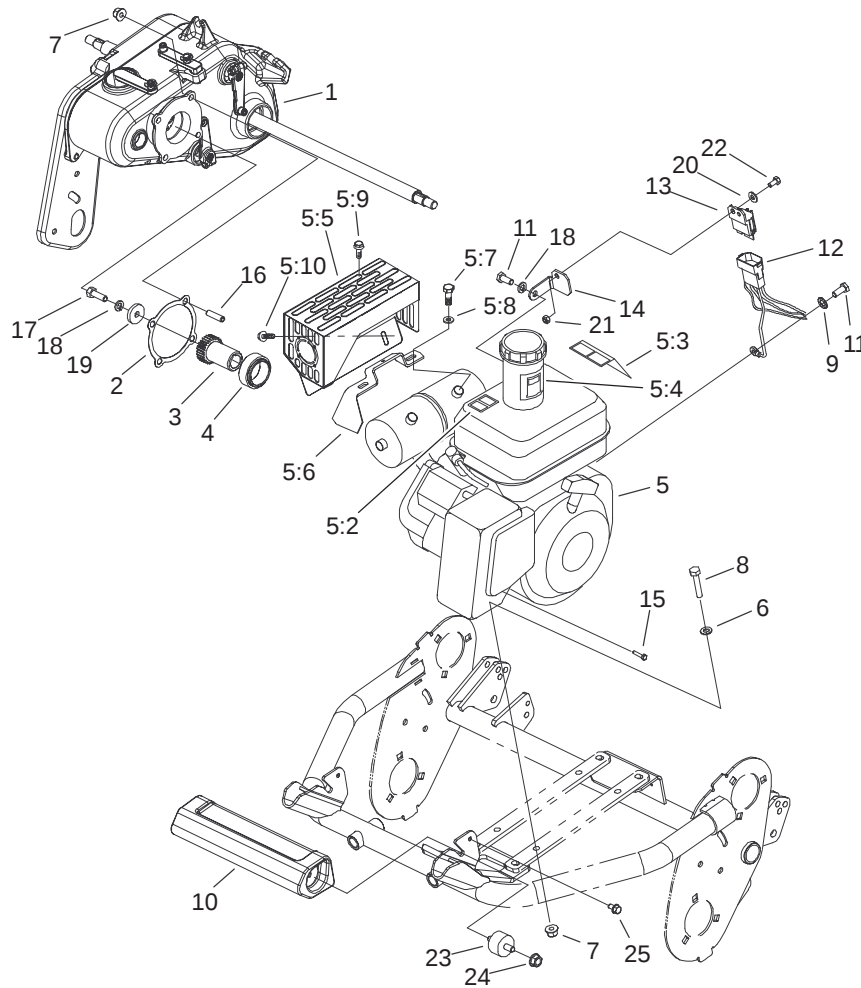


Sheet No.:5

Engine Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	99-3775	1	Gearbox ASM
2	99-2052	1	Gasket-Flange
3	99-2002	1	Gear-Engine
4	99-2001	1	Adapter-Engine
5	99-4265	1	Engine-Kawasaki
5:2	105-5309	1	Decal-Hot Surface
5:2	83-2560	1	Decal-Surface, Hot (Japan)
5:3	92-4813	1	Decal-Danger (Japan)
5:3	93-7348	1	Decal-Danger
5:4	93-9886	1	Decal-Fuel
5:5	98-3432-03	1	Guard - Muffler
5:6	98-3421	1	Bracket-Guard, Muffler
5:7	33113-012	2	Screw-HH
5:8	3256-22	2	Washer-Flat
5:9	46-6810	1	Screw & Washer ASM
5:10	93-8550	1	Bolt-Flanged
6	33094-00	4	Washer-Flat
7	104-2612	8	Nut-HF
8	33114-040	4	Screw-HH
9	3255-9	1	Washer-Lock/Ext
10	105-5304-01	1	Damper ASM
11	33114-016	2	Screw-HH
12	104-4227	1	Module-Harness, Wire
13	94-5860	1	Module - Interlock

Ref. No.	Part No.	Qty.	Description
14	94-5861	1	Bracket - Module
15	94-9015	1	Screw - HH
16	99-2039	4	Screw-Set
17	3210-5	1	Screw-HH
18	3253-4	2	Washer-Lock
19	65-8270	1	Washer
20	3256-22	1	Washer-Flat
21	33023-00	1	Nut-Lock
22	33113-016	1	Screw-HH
23	105-5303	2	Mount-Isolator
24	32128-26	2	Nut-HF
25	104-2628	2	Screw-HWH

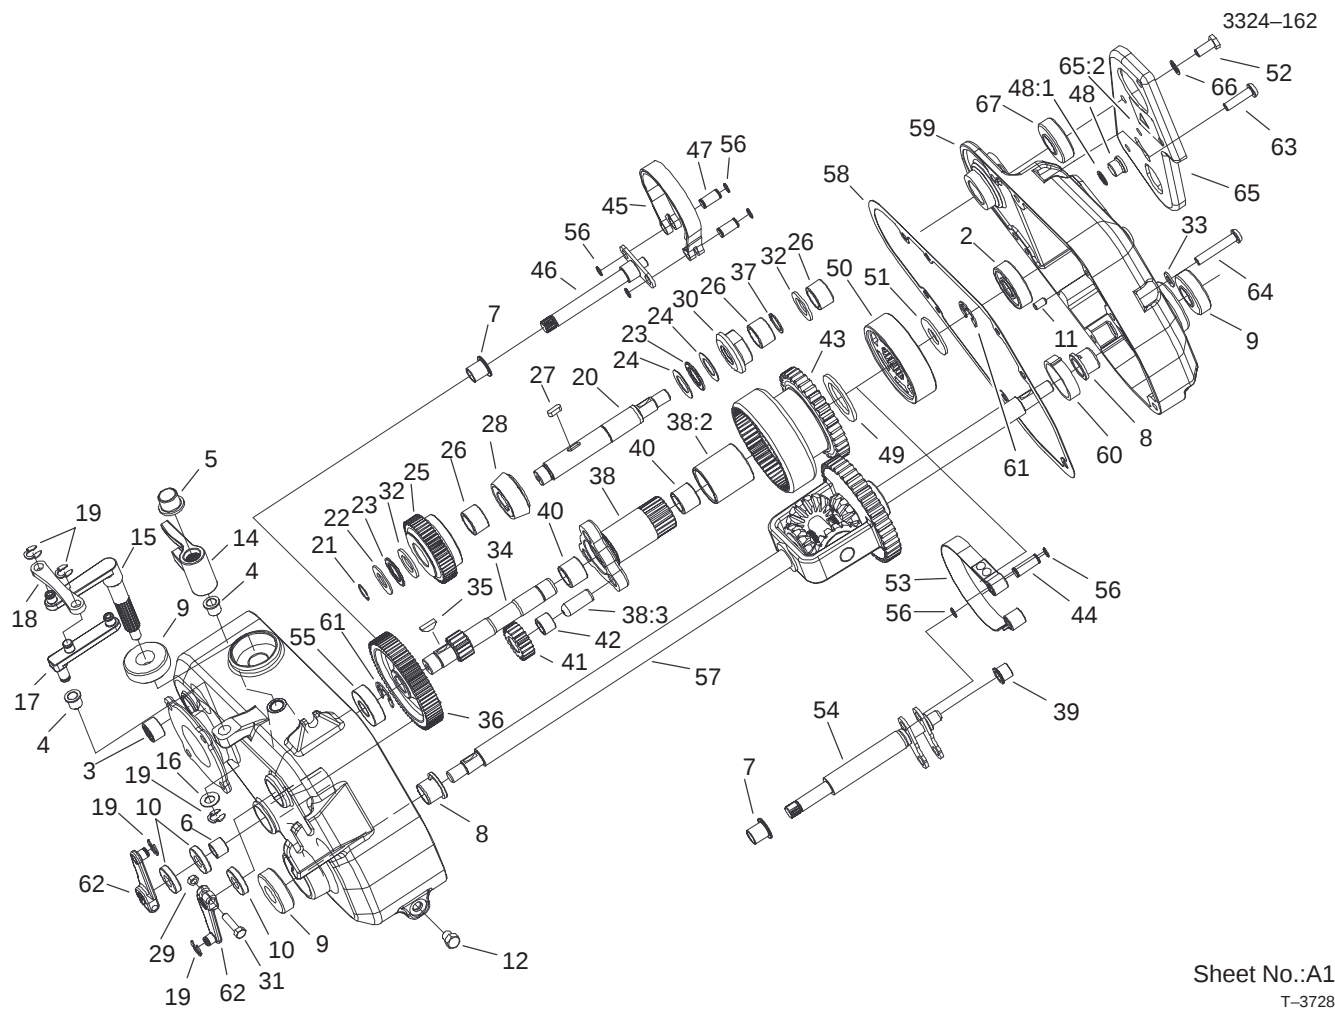

Sheet No.:A1


T-3728

Gearbox Assembly No. 99-3775

Ref. No.	Part No.	Qty.	Description
2	99-2041	1	Bearing-Ball
3	98-4194	1	Bearing-Needle, Caged
4	256-316	2	Bushing
5	256-287	1	Bushing
6	256-1	1	Bushing
7	256-219	2	Bushing
8	99-2062	2	Bushing-Keyed, Flanged
9	99-3842	3	Seal-Oil
10	99-2056	3	Seal-Oil
11	95-0715	2	Pin - Dowel
12	353-948	1	Plug
14	99-2014	1	Fork-Clutch
15	99-2015	1	Shaft-Fork
16	37-8080	1	Washer-Thrust
17	99-3779	1	Bellcrank
18	99-3780	1	Link
19	32151-47	5	Ring-Retaining
20	99-2009	1	Shaft-Clutch
21	99-3805	1	Ring-Retaining
22	99-3806	1	Washer-Thrust
23	99-3836	2	Bearing-Thrust
24	99-3837	2	Washer-Thrust
25	99-2008	1	Gear-Clutch
26	1523	3	Bearing-Needle

Ref. No.	Part No.	Qty.	Description
27	99-2059	2	Key
28	105-2430	1	Cone ASM
29	33023-00	2	Nut-Lock
30	99-2013	1	Hub-Plunger
31	33113-025	2	Screw-HH
32	99-3807	2	Washer-Thrust
33	33094-00	4	Washer-Flat
34	99-2003	1	Gear-Sun
35	3257-30	1	Key-Woodruff
36	99-2004	1	Gear-Input
37	32120-72	1	Ring-Snap
☆38		1	Carrier ASM
38:2	104-0524	1	Bushing-Carrier
38:3	98-4052	3	Pin-Dowel
39	104-9776	1	Bushing-Flanged
40	104-0535	2	Bearing-Needle
41	98-4053	3	Gear-Planet
42	48-2060	3	Bearing-Roller
43	99-2006	1	Gear-Ring
44	104-2648	2	Pin-Clevis
45	99-2049	1	Band-Brake
46	99-2020	1	Shaft-Brake
47	99-2060	2	Pin-Clevis
48	353-989	1	Plug-Hex, Hollow
48:1	237-42	1	O-Ring
49	99-2054	1	Washer-Thrust

☆ Not serviced

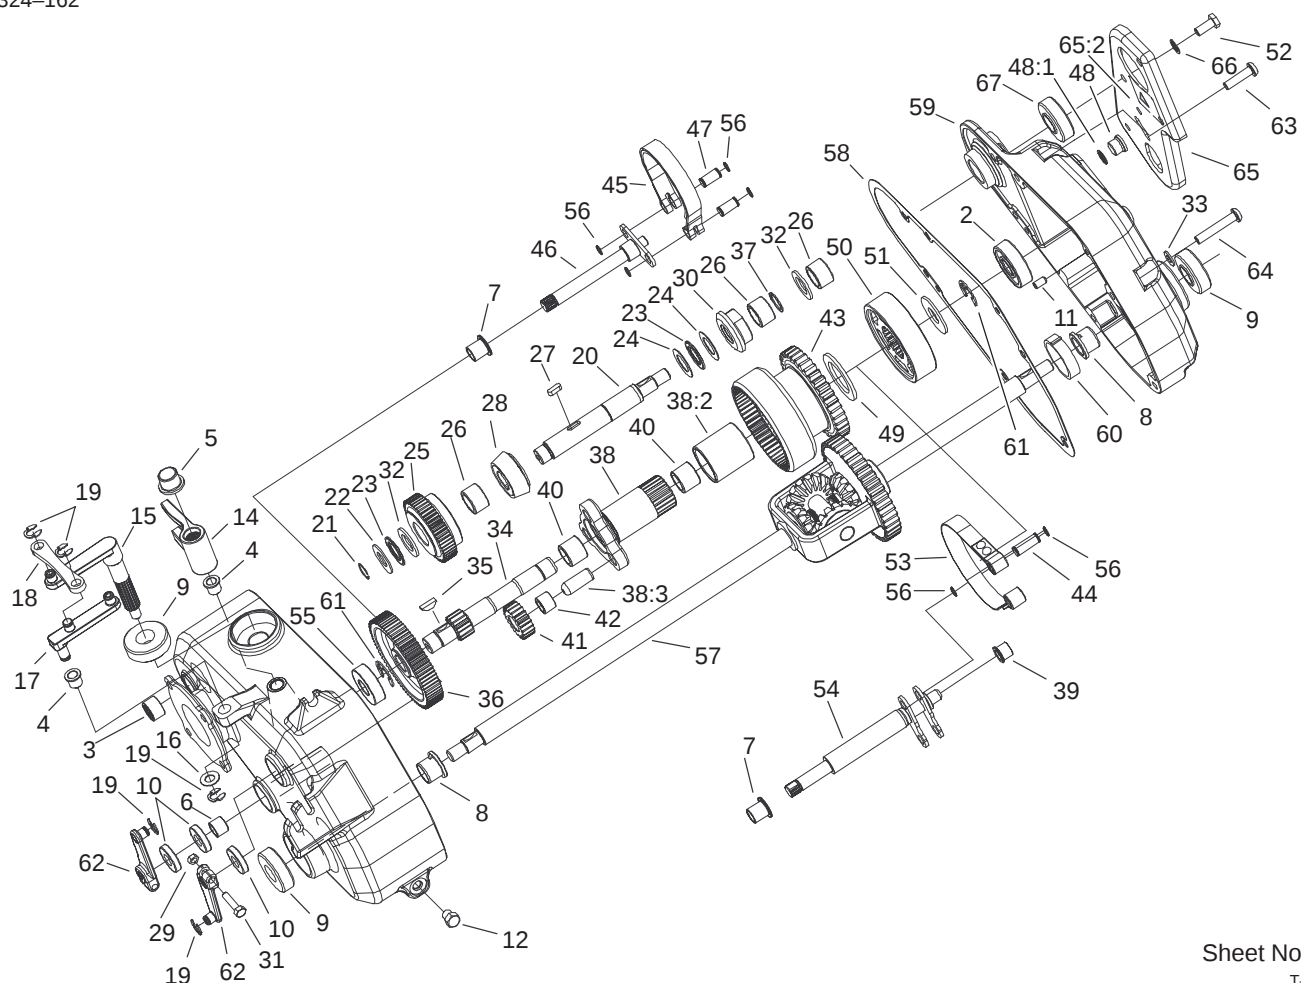


Sheet No.:A1

T-3728

Gearbox Assembly No. 99-3775 (Continued)

Ref. No.	Part No.	Qty.	Description
50	104-2638	1	Traction Drum ASM
51	99-2055	1	Washer-Thrust
52	33114-016	1	Screw-HH
53	104-2637	1	Traction Band ASM
54	99-2016	1	Shaft-Clutch
55	251-6	1	Bearing-Ball
56	32120-46	8	Ring-Retaining
57	99-2038	1	Differential ASM
58	99-2051	1	Gasket
59	99-2026	1	Cover-Gearbox
60	99-2061	1	Bushing-Keyed
61	32151-48	2	E-Ring
62	99-3761	2	Lever-Gearbox
63	99-6208	2	Screw-Sh
64	99-6207	4	Screw-Sh
65	104-2634	1	Drive Shaft Plate ASM
65:2	93-9389	1	Decal-Warning, Belt (Japan)
65:2	93-9356	1	Decal-Warning, Belt
66	3254-2	1	Washer-Lock, Internal
67	105-2429	1	Seal-Oil, High Temp

Ref. No.	Part No.	Qty.	Description

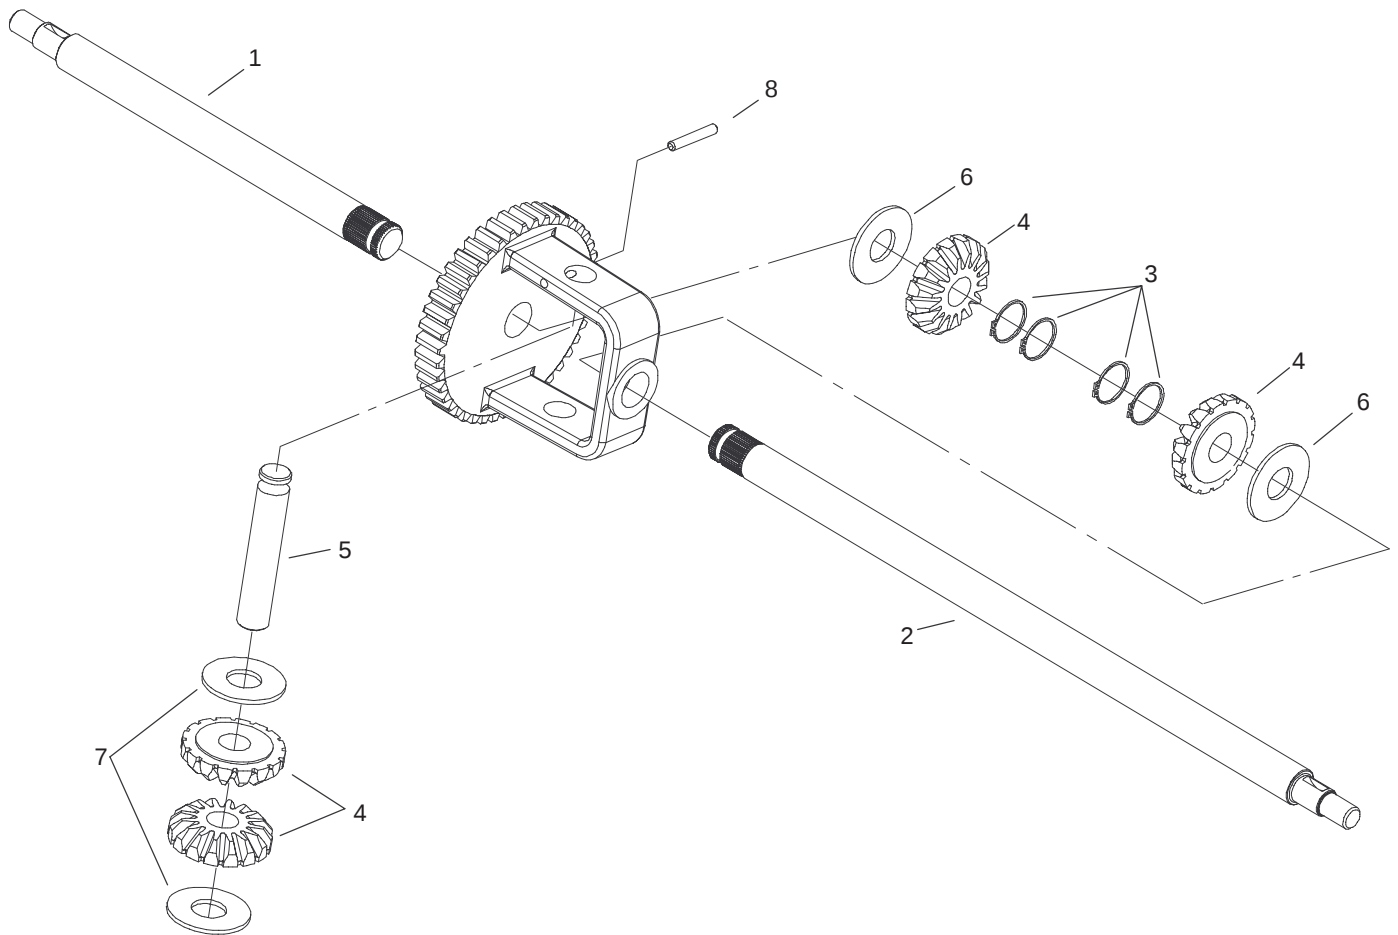


Sheet No.:A2

Differential Assembly No. 99-2038

Ref. No.	Part No.	Qty.	Description
1	105-2402	1	Axle (Short)
2	105-2403	1	Axle (Long)
3	95-5746	2	Ring-Retaining
4	105-2405	1	Set-Gear, Differential
5	105-2404	1	Pin-Drive
6	95-5745	2	Washer
7	105-2406	2	Washer-Thrust
8	32121-79	1	Pin-Roll

Ref. No.	Part No.	Qty.	Description

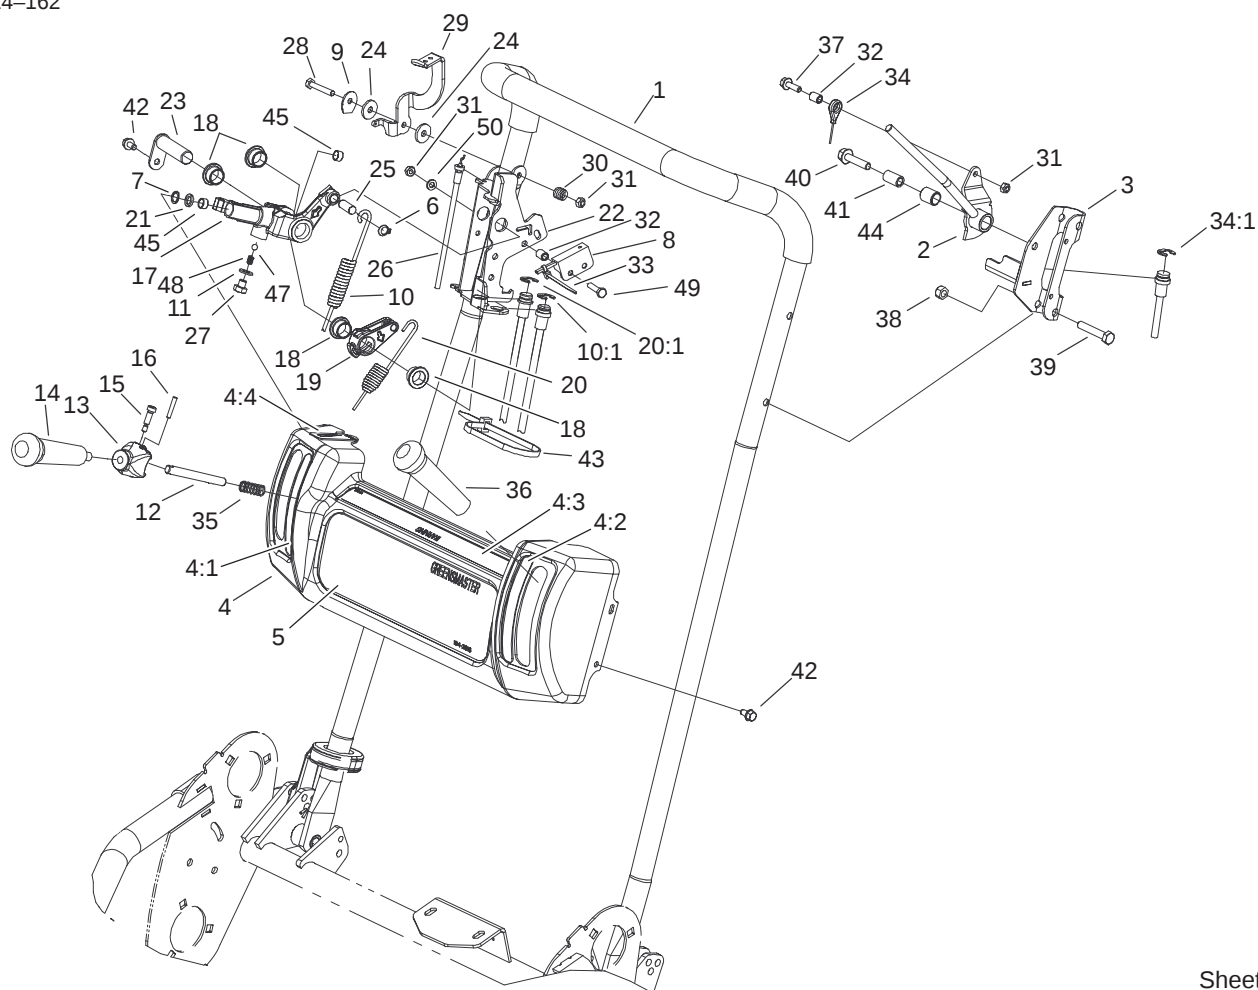


Sheet No.:6

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	104-9788	1	Handle
2	99-3812	1	Lever-Brake
3	99-6222-03	1	Brake Bracket ASM
4	104-2633	1	Console ASM
4:1	104-2617	1	Decal-Lever, Traction
4:2	104-2618	1	Decal-Lever, Brake
4:3	104-2621	1	Decal-Warning
4:4	93-6085	1	Decal - Throttle
5	104-2616	1	Decal-Console
6	105-2410	1	Ring-Retaining
7	105-2408	1	Washer-Retainer
8	100-1270	1	Switch-Proximity
9	104-9756	1	Washer-Retaining
10	99-3764	1	Cable-Clutch, Traction
10:1	32120-47	1	Ring-Retaining
11	33094-00	1	Washer-Flat
12	99-3835	1	Pin
13	104-9761	1	Hub-Handle, Mount
14	104-9760	1	Knob-Black
15	99-6249	1	Bolt-Shoulder
16	32121-51	1	Pin-Roll
17	104-9758	1	Lever-Control, Traction
18	80-1290	4	Bushing
19	99-3830	1	Lever-Reel
20	99-3765	1	Cable-Clutch, Reel


Ref. No.	Part No.	Qty.	Description
20:1	32120-47	1	Ring-Retaining
21	105-2407	1	Wiper
22	104-9778-03	1	Bracket-Control
23	99-3833	1	Pin-Lever, Reel
24	66-2921	2	Washer-Friction
25	104-9782	1	Pin-Dowel
26	104-2620	1	Cable-Throttle
27	33114-008	1	Screw-HH
28	33113-035	1	Screw-HH
29	104-9755	1	Lever-Throttle
30	3-5787	1	Spring-Compression
31	33023-00	4	Nut-Lock
32	105-2401	3	Spacer-Cable, Brake
33	3290-381	1	Tie - Cable
34	99-6214	1	Cable-Brake
34:1	32120-47	1	Ring-Retaining
35	104-9766	1	Spring-Compression
36	104-9774	1	Knob-Red
37	33103-025	1	Screw-HHF
38	33024-00	4	Nut-Lock
39	33114-045	4	Screw-HH
40	33104-035	1	Screw-HHF
41	99-6212	1	Spacer
42	104-2628	5	Screw-HWH
43	3290-378	4	Tie-Cable
44	256-172	1	Bushing

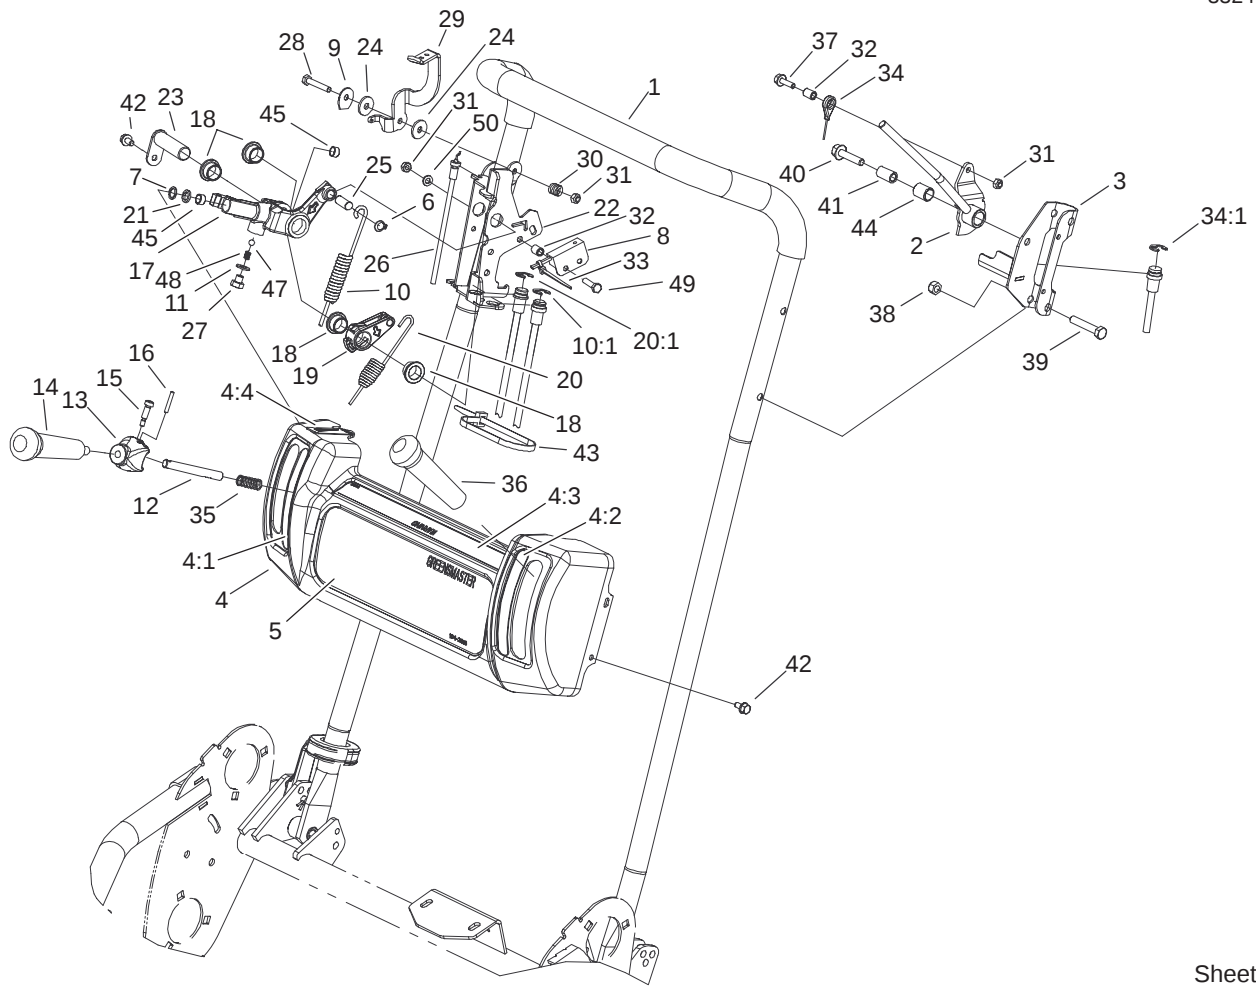

Sheet No.:6

Handle Assembly

Ref. No.	Part No.	Qty.	Description
45	99-6247	2	Bushing-Bronze
47	105-2442	1	Ball-Detent
48	105-2443	1	Spring-Detent
49	33113-025	2	Screw-HH
50	33093-00	2	Washer-Flat

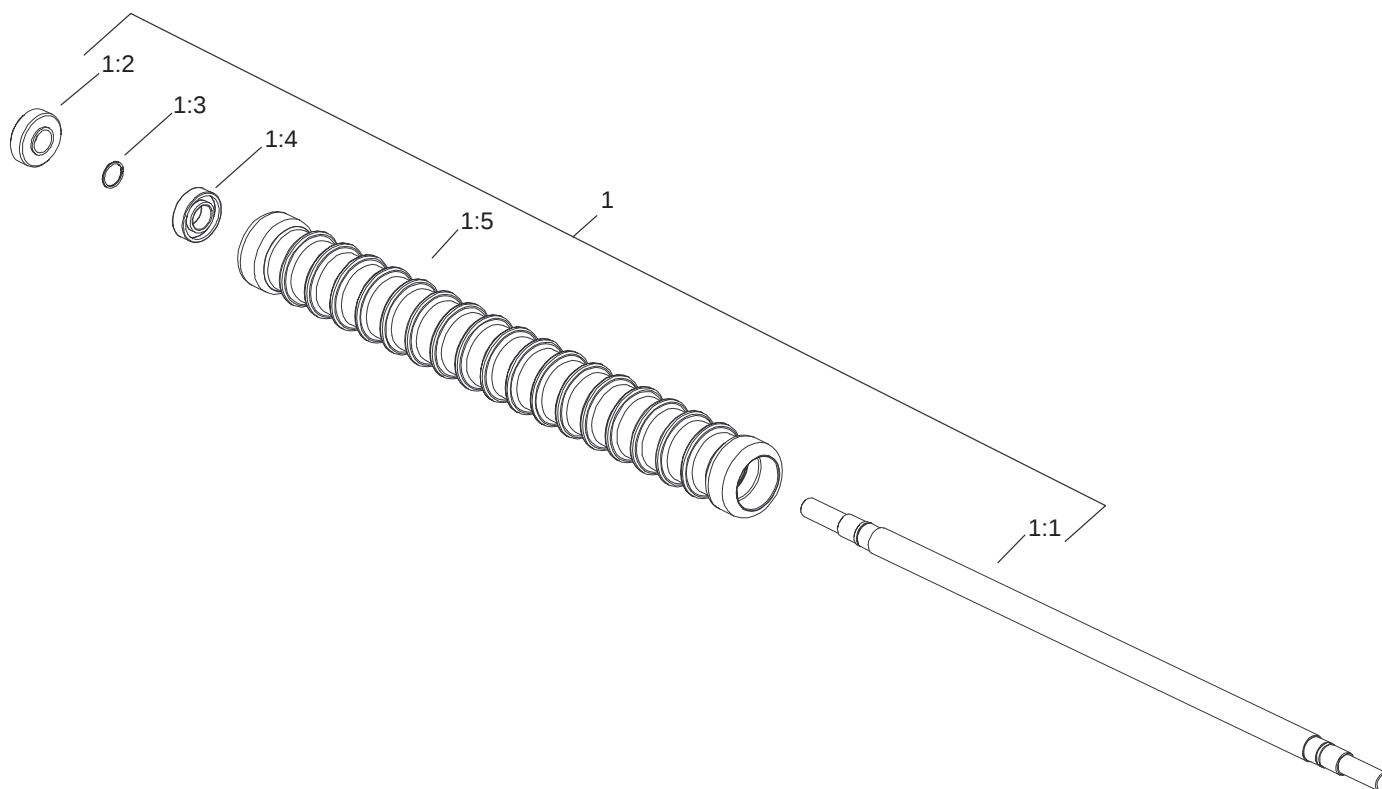


Sheet No.:7

Roller Option Assembly

Ref. No.	Part No.	Qty.	Description
1	99-6215	1	Wiehle Roller ASM
1:1	104-2606	1	Shaft-Roller
1:2	99-3842	2	Seal-Oil
1:3	104-4212	2	Ring – Retaining, Spiral
1:4	251-347	2	Bearing-Ball
1:5	99-6216	1	Roller-Wiehle

Ref. No.	Part No.	Qty.	Description

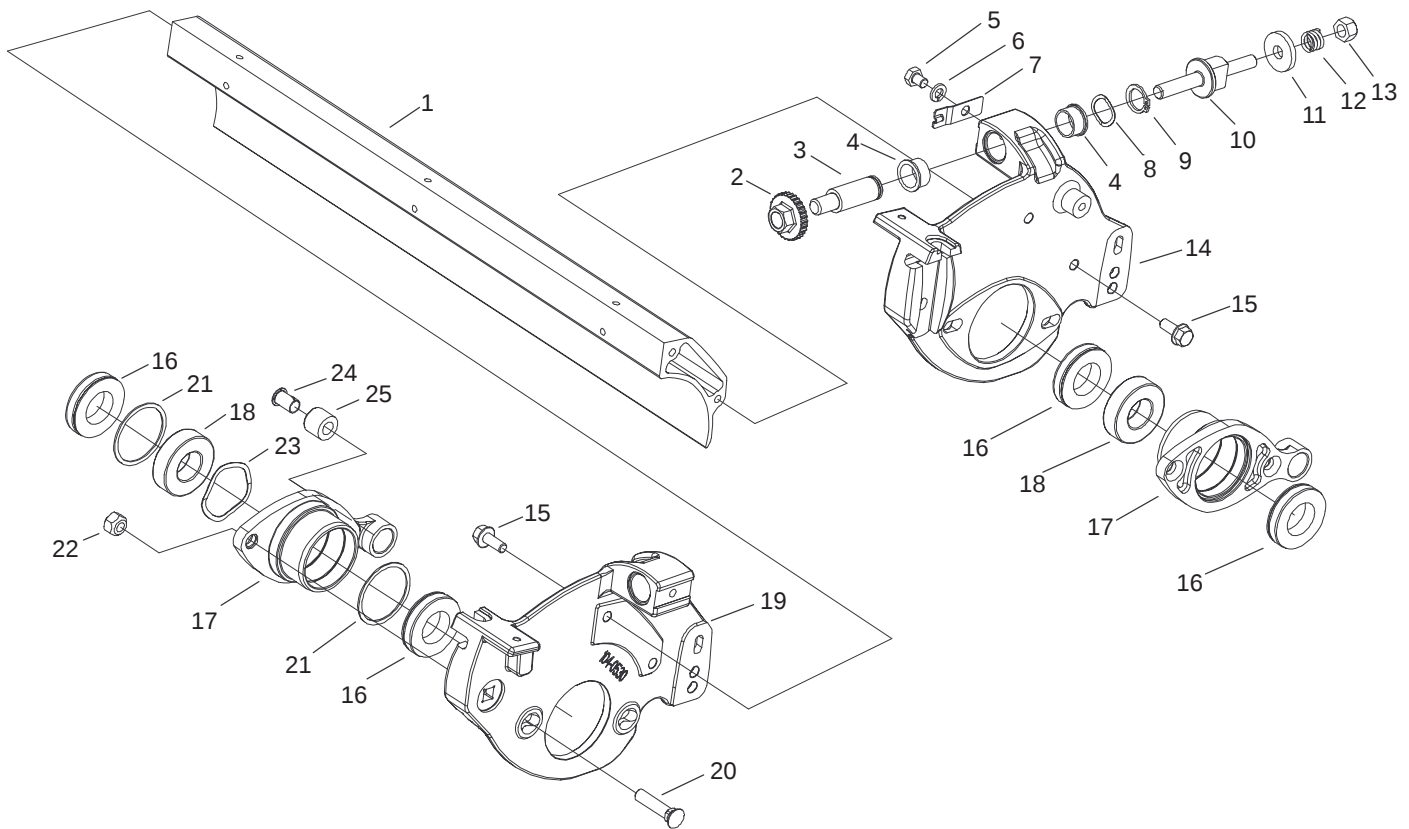


Sheet No.:2

Right and Left Side Plate Assembly

Ref. No.	Part No.	Qty.	Description
1	99-2091	1	Frame-Shield, Extrusion
2	93-2549	2	Nut-Adjust
3	99-2093	2	Nut-Adjuster, Bedbar
4	256-252	4	Bearing-Flange
5	33114-010	2	Screw-HH
6	3253-4	2	Washer-Lock
7	99-2097	2	Detent
8	95-3703	2	Washer-Spring, Wave
9	32120-93	2	Ring-Retaining
10	99-2096	2	Screw-Adjuster, Bedbar
11	99-2098	2	Washer
12	99-3755	2	Spring-Compression
13	33025-00	2	Nut-Lock
14	104-0531	1	Plate-Side, LH
15	33104-020	4	Screw-HHF
16	99-3801	4	Seal-Oil
17	99-3766	2	Housing-Bearing, Reel
18	251-342	2	Bearing-Ball
19	104-0530	1	Plate-Side, RH
20	99-3773	4	Bolt-Plow
21	32151-92	2	Ring-Retaining
22	99-2085	4	Nut-Tapered
23	3290-485	1	Washer - Wave

Ref. No.	Part No.	Qty.	Description
24	52-2890	2	Bushing-Nylon
25	63-9510	2	Bushing

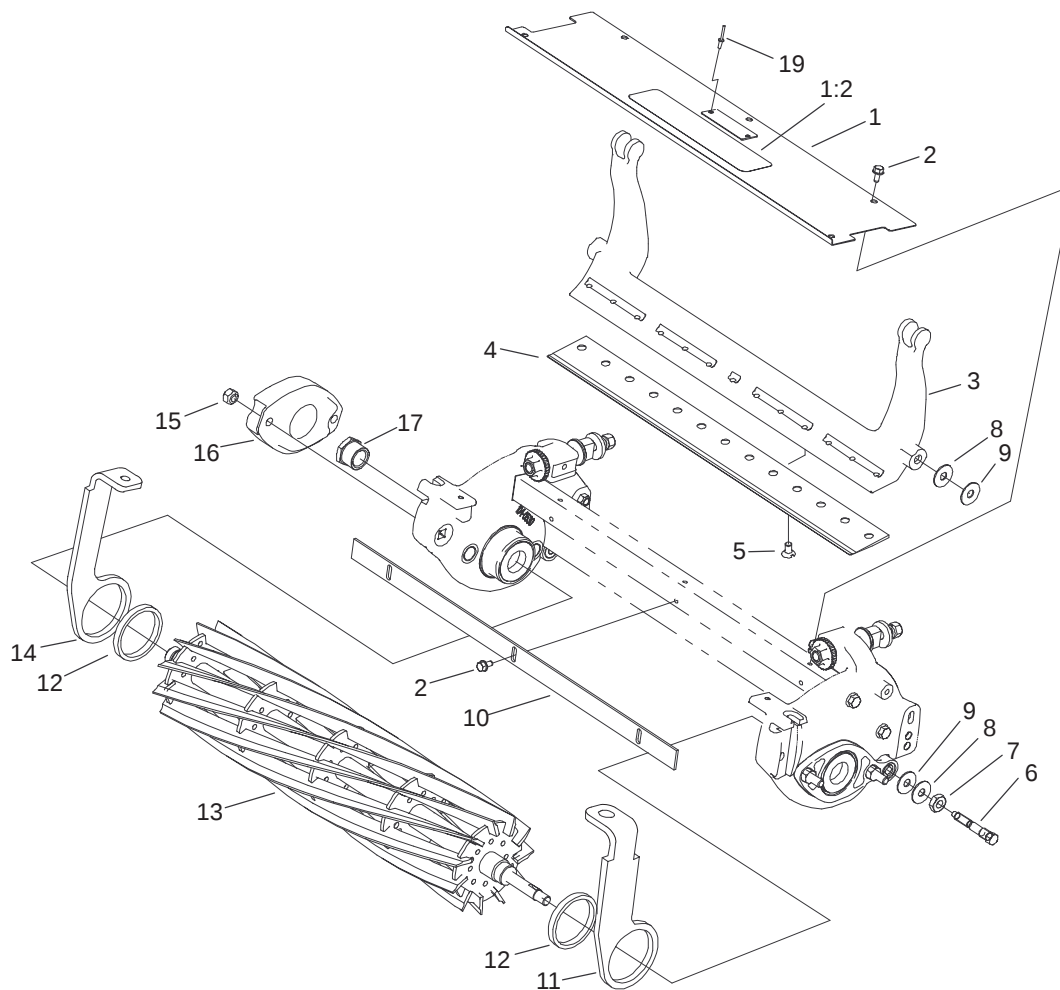


Sheet No.:3

Reel Assembly

Ref. No.	Part No.	Qty.	Description
1	104-2632	1	Grass Shield ASM
1:2	84-6560	1	Decal-Warning (Japan)
1:2	93-8064	1	Decal-Danger (Europe)
2	104-2628	8	Screw-HWH
3	99-3794-01	1	Bedbar
4	93-4262	1	Bedknife-Microcut
4	93-4263	1	Bedknife-Tournament
4	93-4264	1	Bedknife-Lowcut
5	57-4910	13	Screw
6	65-6270	2	Bolt - Bedbar
7	3220-26	2	Nut-Jam
8	52-2860	4	Washer
9	52-2900	4	Washer
10	104-2602-03	1	Bar-Off, Cut
11	105-2448-01	1	Arm-Pitch, LH
12	99-2047	2	Bushing
13	104-0500	1	11 Blade Reel ASM
14	105-2447-01	1	Arm-Pitch, RH
15	3296-59	2	Nut-Lock NI
16	104-0534-03	1	Weight-Reel
17	99-3767	1	Nut-Lock, Bearing
19	3290-271	2	Rivet-Pop


Ref. No.	Part No.	Qty.	Description

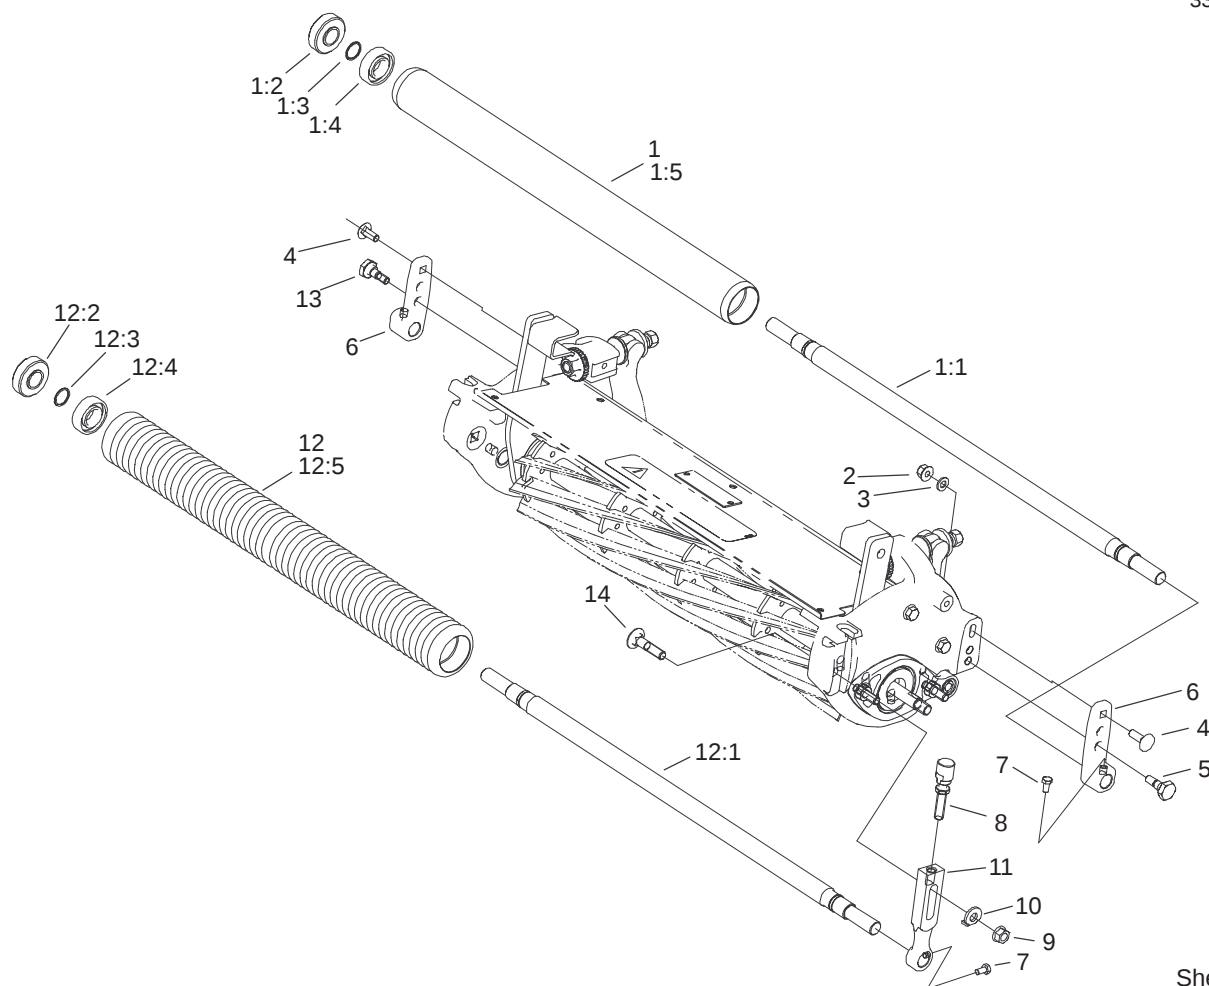

Sheet No.:4

Roller Assembly

Ref. No.	Part No.	Qty.	Description
1	99-3840	1	Full Roller ASM
1:1	104-2606	1	Shaft-Roller
1:2	99-3842	2	Seal-Oil
1:3	104-4212	2	Ring - Retaining, Spiral
1:4	251-347	2	Bearing-Ball
1:5	99-3841	1	Roller-Full
2	104-2612	4	Nut-HF
3	3256-23	4	Washer-Flat
4	33124-025	2	Screw-CARR
5	95-1618	1	Bolt-Shoulder
6	99-3792	2	Bracket-Roller, Rear
7	33113-012	4	Screw-HH
8	99-3782	2	Screw-HOC
9	104-2611	2	Nut-HF
10	104-2603	2	Washer-HOC
11	99-3781	2	Arm-HOC
12	104-9795	1	Wiehle Roller ASM
12:1	104-2606	1	Shaft-Roller
12:2	99-3842	2	Seal-Oil
12:3	104-4212	2	Ring - Retaining, Spiral
12:4	251-347	2	Bearing-Ball
12:5	104-0540	1	Roller-Wiehle
13	95-1617	1	Bolt-Eccentric
14	33125-045	2	Screw-CARR

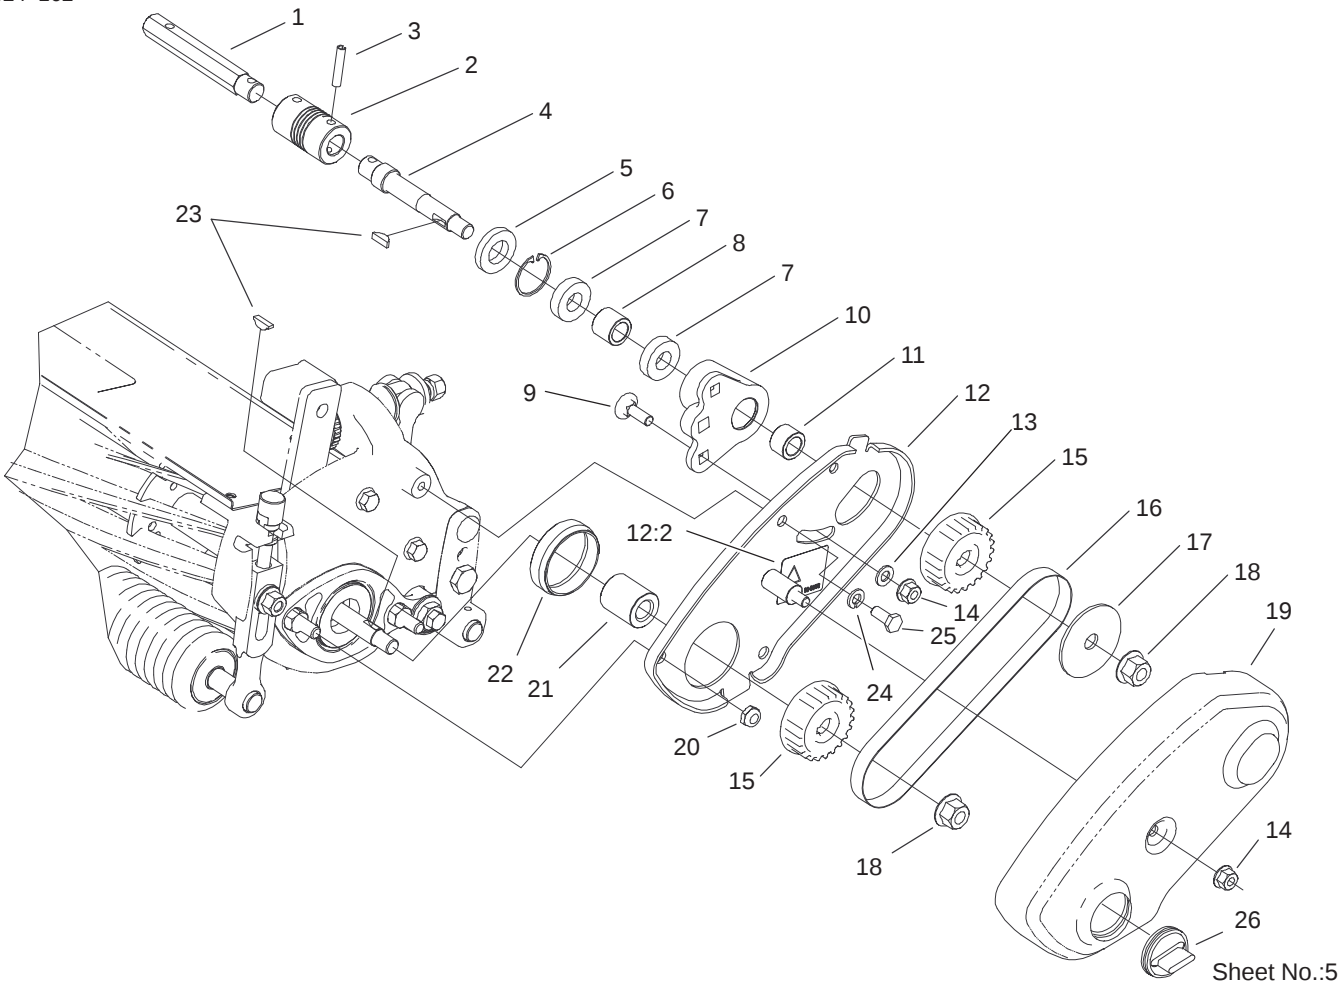


Sheet No.:5

Reel Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	99-3760	1	Shaft-Hex
2	99-3757	1	Coupling-Flex
3	32121-69	2	Pin-Spring
4	99-3756	1	Shaft
5	253-120	1	Seal-Oil
6	32151-51	1	Ring-Retaining
7	251-336	2	Bearing
8	99-2079	1	Spacer
9	33124-025	2	Screw-CARR
10	99-2083	1	Housing-Bearing
11	99-2080	1	Spacer
12	104-2631	1	Reel Drive Plate ASM
12:2	93-9356	1	Decal-Warning, Belt
12:2	93-9389	1	Decal-Warning, Belt (Japan)
13	3256-23	2	Washer-Flat
14	104-2612	3	Nut-HF
15	99-2081	2	Pulley-22 Tooth
16	99-2022	1	Belt
17	104-0532	1	Washer-Pulley
18	104-2610	2	Nut-HF
19	99-3793	1	Cover-Drive, Reel
20	3296-59	2	Nut-Lock NI
21	99-2032	1	Spacer
22	99-2087	1	Spacer
23	3257-30	2	Key-Woodruff

Ref. No.	Part No.	Qty.	Description
24	3253-4	1	Washer-Lock
25	33114-016	1	Screw-HH
26	105-2438	1	Plug

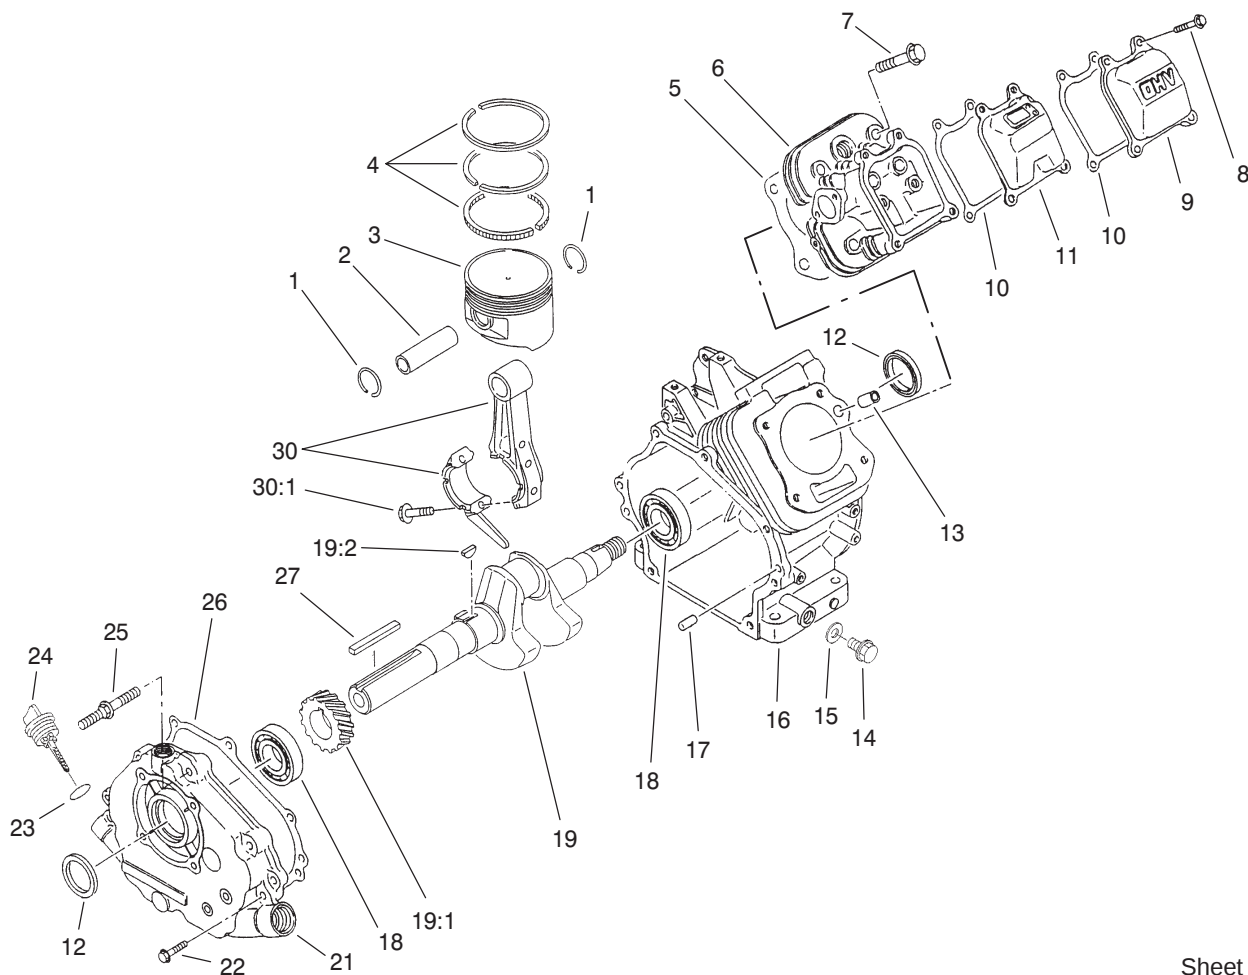


Sheet No.:50

Crankcase Assembly

Ref. No.	Part No.	Qty.	Description
1	93-8500	2	Ring – Retaining
2	93-8501	1	Pin – Piston
3	93-8502	1	Piston
3	94-6836	1	Piston – 0.5 O/S
4	93-8503	1	Set-Ring, Piston
4	94-6837	1	Set-Ring, Piston (.05mm)
5	93-8504	1	Gasket-Head
6	93-8505	1	Head-Cylinder
7	93-8506	4	Bolt-Flanged
8	94-6838	4	Bolt-Flanged
9	93-8508	1	Case-Rocker
10	93-8509	2	Gasket-Rocker
11	93-8510	1	Breather
12	93-8511	2	Seal-Oil
13	93-8512	2	Pin
14	93-8513	2	Plug-Drain
15	93-8514	2	Gasket-Plug, Drain
16	93-8515	1	Crankcase
17	93-8516	2	Pin
18	93-8517	2	Bearing-Ball
19	93-8696	1	Crankshaft ASM
19:1	94-9043	1	Gear – Helical
19:2	93-8526	1	Key
21	93-8697	1	Cover-Crankcase
22	93-8521	7	Bolt-Flanged

Ref. No.	Part No.	Qty.	Description
23	94-9041	2	O-Ring
24	93-8523	2	Cap-Filter, Oil
25	93-8524	1	Stud
26	93-8525	1	Gasket-Crankcase
27	93-8698	1	Key
30	93-8528	1	Connecting Rod ASM
30:1	93-8527	2	Bolt-Rod

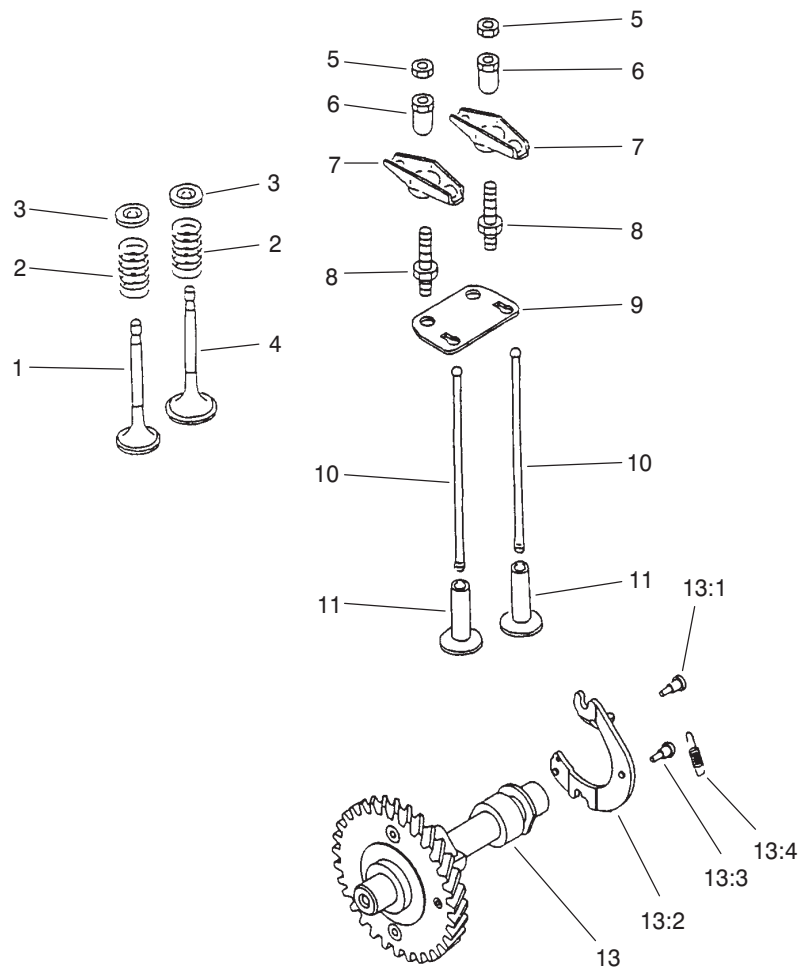


Sheet No.:51

Camshaft and Valves Assembly

Ref. No.	Part No.	Qty.	Description
1	93-8529	1	Valve-Exhaust
2	93-8530	2	Spring-Valve
3	93-8531	2	Retainer-Spring
4	93-8532	1	Valve-Intake
5	93-8533	2	Nut
6	93-8534	2	Nut
7	93-8535	2	Arm-Rocker
8	93-8536	2	Bolt
9	93-8537	1	Guide
10	93-8538	2	Rod-Push
11	93-8539	2	Tappet
13	93-8699	1	Camshaft ASM
13:1	93-8540	2	Pin
13:2	93-8543	1	Decompressor
13:3	93-8542	1	Pin
13:4	93-8541	1	Spring

Ref. No.	Part No.	Qty.	Description

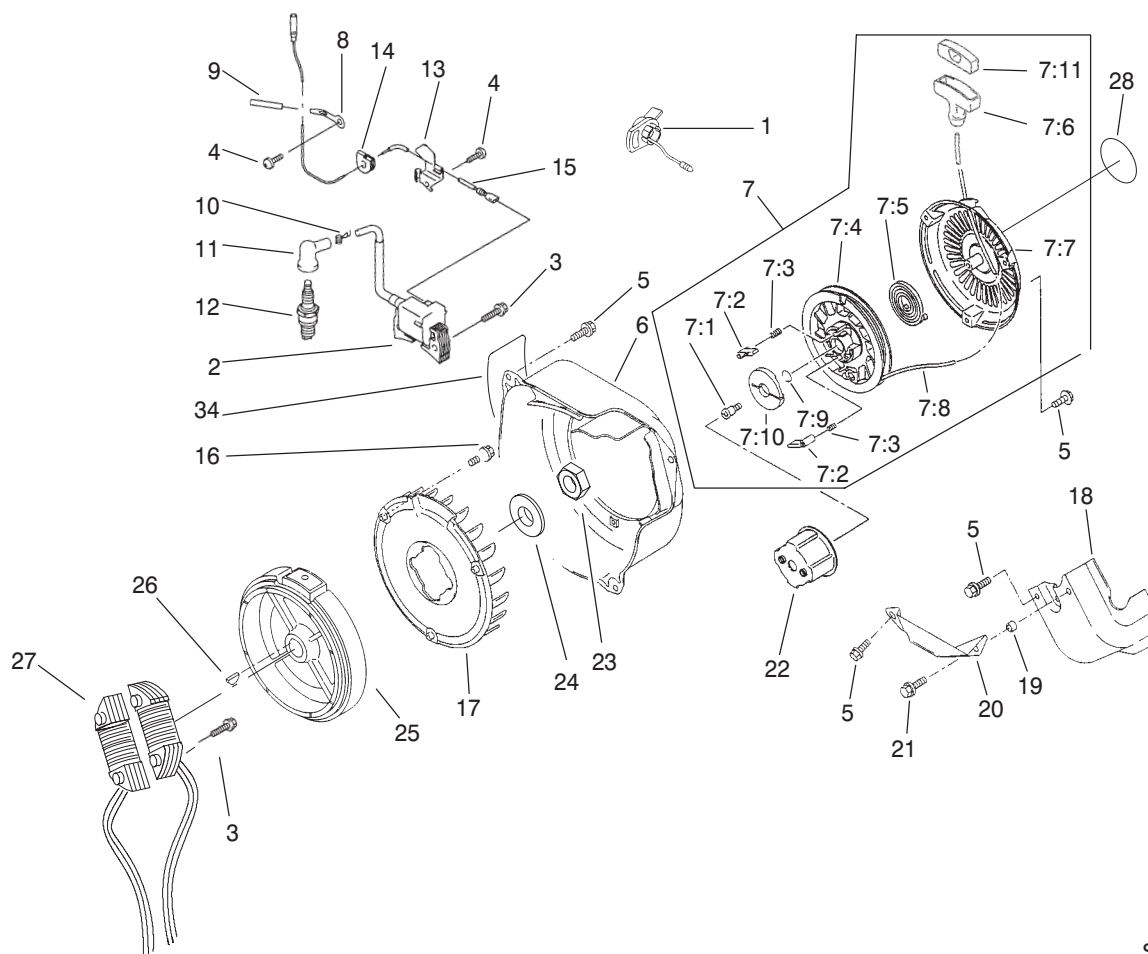


Sheet No.:52

Ignition Assembly

Ref. No.	Part No.	Qty.	Description
1	93-8546	1	Switch
2	94-9031	1	Ignition Coil ASM
3	93-8548	6	Bolt-Flanged
4	93-8549	2	Screw
5	93-8550	10	Bolt-Flanged
6	94-9047	1	Housing - Fan
7	93-8552	1	Recoil Starter ASM
7:1	93-8553	1	Screw
7:2	93-8554	2	Pawl-Recoil
7:3	93-8555	2	Spring-Return
7:4	93-8556	1	Reel-Recoil
7:5	93-8557	1	Spring
7:6	94-9045	1	Grip-Starter, Recoil
7:7	94-9046	1	Case - Recoil
7:8	93-8560	1	Rope
7:9	93-8561	1	Ring-Retaining
7:10	93-8562	1	Guide-Pawl
7:11	94-9044	1	Cap - Grip
8	94-9039	1	Clamp
9	94-9040	1	Tube
10	94-9049	1	Spring-Terminal
11	93-8585	1	Cap-Plug, Spark
12	93-8584	1	Plug-Spark
13	93-8583	1	Clamp
14	93-8582	1	Grommet
15	94-9038	1	Wire - Lead

Ref. No.	Part No.	Qty.	Description
16	94-6840	3	Bolt - Flanged
17	93-8572	1	Fan
18	93-8563	1	Shroud-Engine
19	93-8564	1	Collar
20	93-8565	1	Shroud-Engine
21	93-8566	1	Bolt-Flanged
22	93-8567	1	Pulley-Recoil
23	93-8568	1	Nut
24	93-8569	1	Washer
25	99-6237	1	Flywheel ASM
26	93-8571	1	Key
27	99-4267	1	Coil-Lighting
28	94-9027	1	Label-Recoil
34	93-8689	1	Decal-Instructions

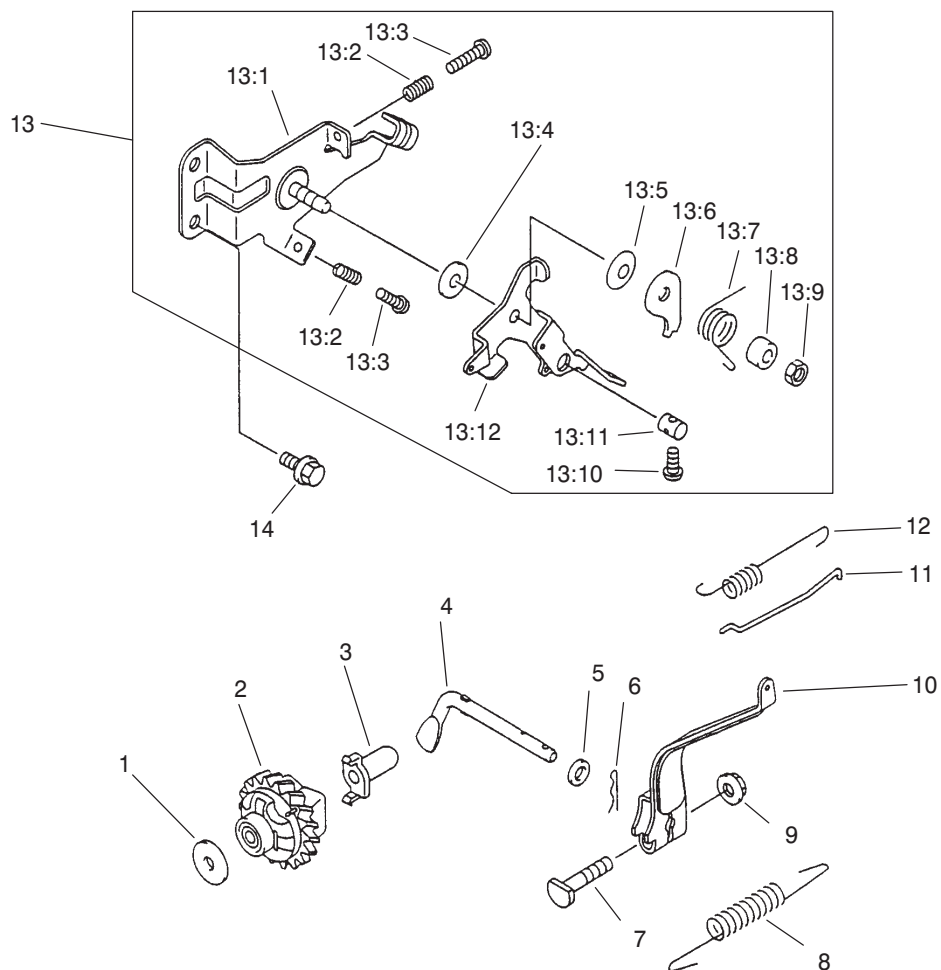


Sheet No.:53

Governor Assembly

Ref. No.	Part No.	Qty.	Description
1	94-6842	1	Washer
2	94-6841	1	Governor ASM
3	93-8610	1	Sleeve
4	93-8609	1	Arm-Pivot
5	93-8608	1	Washer
6	93-8607	1	Pin-Snap
7	93-8606	1	Bolt
8	94-9030	1	Spring-Governor
9	93-8631	1	Nut
10	93-8603	1	Arm-Governor
11	93-8602	1	Rod-Governor
12	93-8601	1	Spring
13	93-8599	1	Control Panel ASM
13:1	93-8587	1	Panel-Control
13:2	93-8588	2	Spring
13:3	93-8589	2	Bolt
13:4	93-8590	1	Washer
13:5	93-8591	1	Spring
13:6	93-8592	1	Plate
13:7	93-8593	1	Spring
13:8	93-8594	1	Spacer
13:9	93-8595	1	Nut
13:10	93-8596	1	Screw-Head, Pan
13:11	93-8597	1	Nut
13:12	93-8598	1	Lever
14	93-8600	2	Bolt-Flanged

Ref. No.	Part No.	Qty.	Description

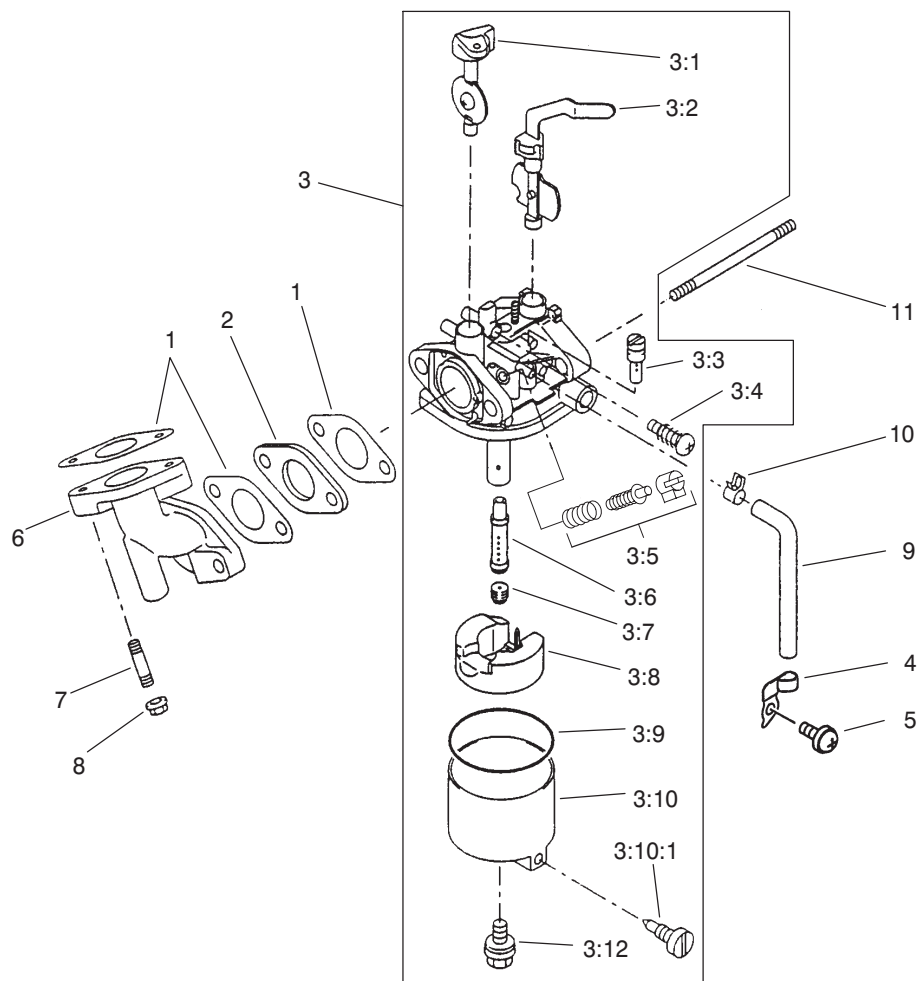


Sheet No.:54

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description
1	93-8613	3	Gasket
2	94-9048	1	Insulator
3	94-9032	1	Carburetor ASM
3:1	94-9033	1	Throttle Valve ASM
3:2	93-8617	1	Valve-Choke
3:3	94-9037	1	Jet-Pilot, #40
3:4	93-8619	1	Screw ASM
3:5	94-9034	1	Limiter
3:6	94-9035	1	Nozzle-Main
3:7	94-9036	1	Jet-Main, #65
3:7	98-8736	2	Jet-Main, #60 High Alt
3:7	98-8735	2	Jet-Main, #62 High Alt
3:8	94-6844	1	Float ASM
3:9	93-8624	1	Gasket
3:10	93-8625	1	Float Chamber ASM
3:10:1	93-8626	1	Screw ASM
3:12	93-8627	1	Bolt
4	94-6846	1	Clamp
5	94-6845	1	Screw
6	93-8633	1	Pipe-Intake
7	93-8632	2	Bolt-Stud
8	93-8631	2	Nut
9	93-8630	1	Tube
10	93-8629	1	Clamp
11	93-8628	1	Bolt-Stud

Ref. No.	Part No.	Qty.	Description

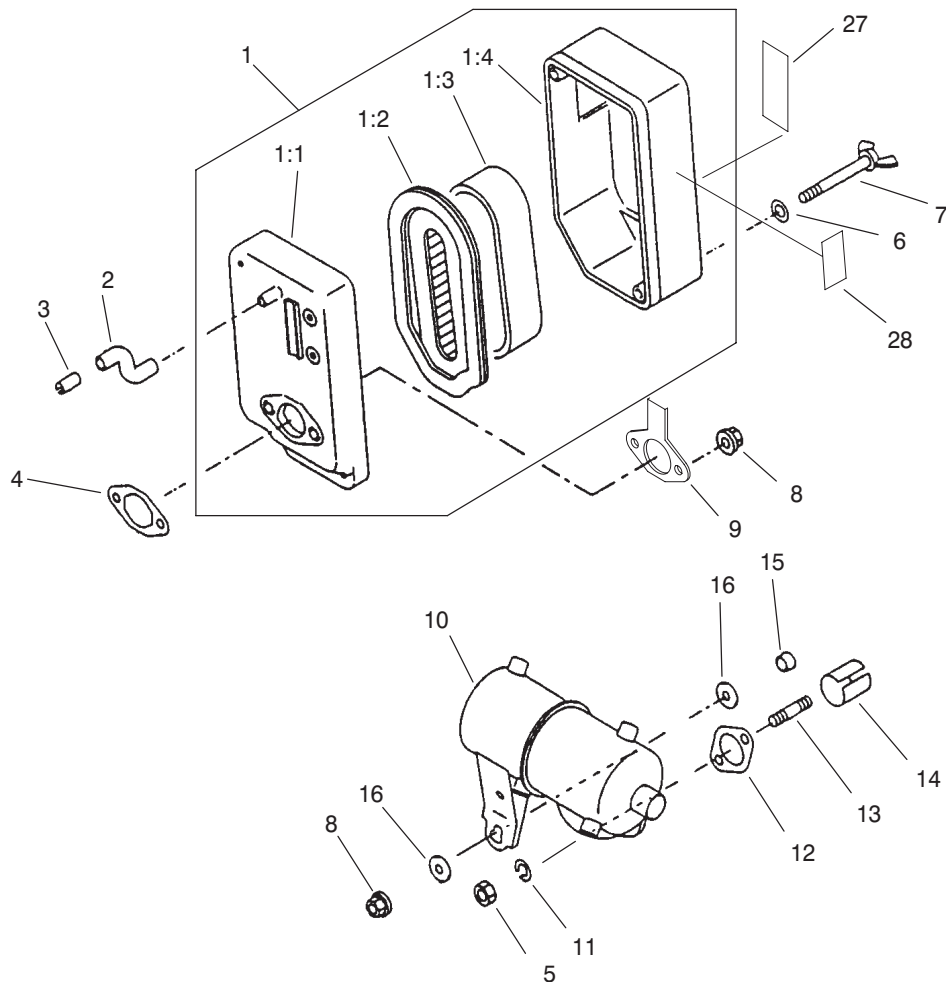


Sheet No.:55

Air Filter and Muffler Assembly

Ref. No.	Part No.	Qty.	Description
1	93-8634	1	Air Filter ASM
1:1	93-8635	1	Case Filter ASM
1:2	93-8636	1	Element-Filter, Air
1:3	93-8637	1	Element-Filter, Air
1:4	93-8638	1	Cap-Filter, Air
2	93-8659	1	Tube
3	93-8658	1	Pipe
4	93-8657	1	Gasket-Filter, Air
5	93-8656	2	Nut-Hex
6	93-8639	2	Washer
7	93-8640	2	Bolt
8	93-8631	3	Nut
9	93-8642	1	Plate-Filter, Air
10	98-3427	1	Muffler
11	93-8655	2	Washer-Spring
12	93-8654	1	Gasket-Muffler
13	94-6848	2	Bolt - Stud
14	93-8652	1	Pipe-Exhaust
15	93-8651	1	Collar
16	93-8650	2	Washer
27	93-8690	1	Decal-Maintenance
28	93-8687	1	Decal-Choke

Ref. No.	Part No.	Qty.	Description

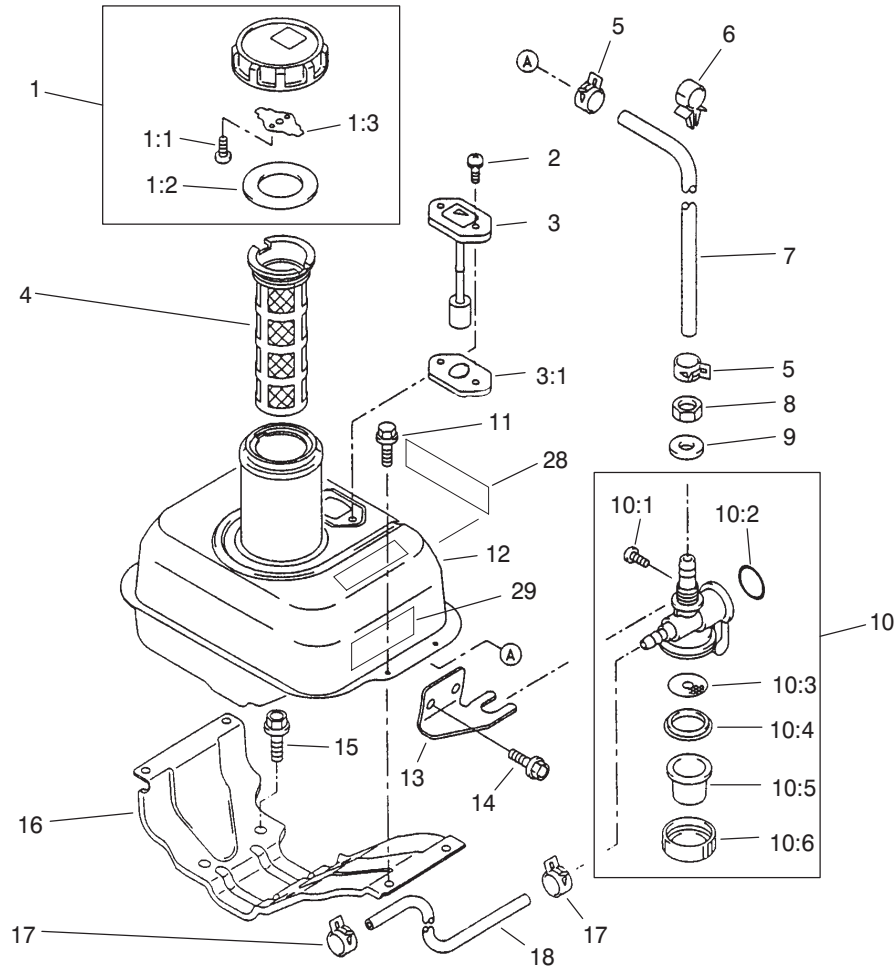

Sheet No.:56

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	93-8660	1	Fuel Cap ASM
1:1	93-8661	2	Screw
1:2	93-8662	1	Gasket
1:3	93-8663	1	Spring
2	93-8686	2	Screw
3	93-8685	1	Gauge-Fuel
3:1	104-2384	1	Gasket-Gauge, Fuel
4	94-6826	1	Filter-Fuel
5	93-8664	2	Clamp
6	93-8665	1	Clamp
7	93-8666	1	Tube
8	94-9042	1	Nut
9	93-8668	1	Washer
10	93-8669	1	TAP ASM
10:1	93-8670	1	Screw
10:2	93-8671	1	O-Ring
10:3	94-6849	1	Filter-TAP
10:4	93-8673	1	Gasket
10:5	93-8674	1	Cup-TAP
10:6	93-8675	1	Nut
11	93-8683	4	Bolt
12	104-2382	1	Tank-Fuel
13	93-8681	1	Bracket
14	93-8680	2	Bolt-Flanged
15	94-6825	4	Bolt-Flanged
16	104-2383	1	Bracket-Tank

Ref. No.	Part No.	Qty.	Description
17	93-8676	2	Clamp
18	93-8677	1	Tube
28	94-9028	1	Label-Kawasaki
29	93-8692	1	Decal-Warning

