

Tiller Attachment For Toro® Sitework™ Systems Model No. 22445—200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form \mathbf{nX} \mathbf{y} . The \mathbf{n} represents the quantity of the part, the \mathbf{X} is the multiplication symbol, and the \mathbf{y} represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

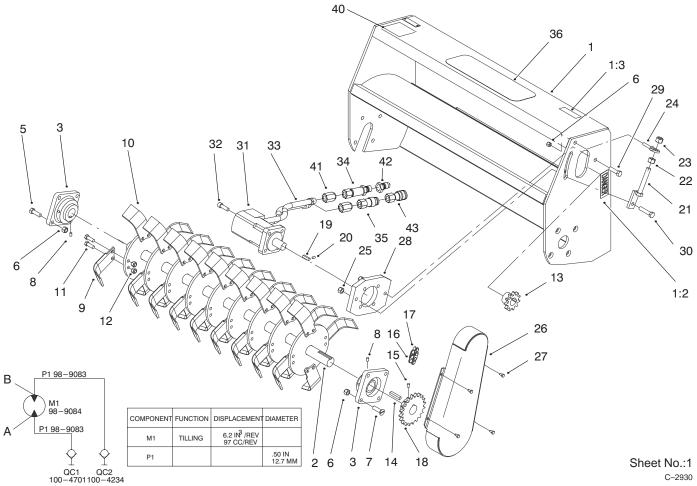


Tiller Assembly

Ref. No.	Part No.	Qty.	Description
1	99–5046	1	Tiller Frame ASM
1:2	93–7321	2	Decal – Danger
1:3	100–4708	1	Decal-Warning
2		1	Shaft – Tine
3		2	Bearing ASM
5		4	Screw-HH
6	3296–23	10	Nut-Lock, NI
7		4	Bolt
8		2	
9		18	
10	99–9985	18	
1	324–29	72	
	32146–7	72	Nut
13	98–9085	1	Sprocket
1	98–9935	1	Key – Square
15		2	Screw-Set
	98–9088		
17		1	Link – Connecting
	98–9086	1	Sprocket
19		1	Key – Square
20	3246–4	2	Screw-Set
21	98–9082	1	Chain Adjustment
			ASM
22		1	Nut–Hex
23	3296–41	1	Nut-Lock NI
24	99–5044	1	Holder–Adjustment

	Ref. No.	Part No.	Qty.	Description
	25	3296–23	1	Nut-Lock, NI
	26	98–9071	1	Cover - Chain, Tiller
	27	321-2	4	Screw-HH
	28	98–9070	1	Plate-Mount, Motor
	29	325–8	1	Screw-HH
	30	325–10	1	Screw-HH
	31	98–9084	1	Motor – Hydraulic
	32	3274–4	4	
	33	98–9083	2	
	34	100–4701	1	Nipple-Connect,
				Pressure
	*34:1	100–6120	1	Kit–Seal
	35		1	Coupler–Face, Flush
		100–6119	1	Kit–Seal
		100–8828	1	Decal-Dingo, Front
	40	00 0_00	1	Decal-Made In USA
	41		2	Adapter-Hyd
	*41:1		1	O–Ring
	42	100–4702	1	Disconnect–Quick,
	40	400 4700	4	Male
	43	100–4703	1	Disconnect–Quick,
	*40.4	100 1105	4	Female
	*43:1	100–4165	1	Seal
Į				

^{*} Not illustrated

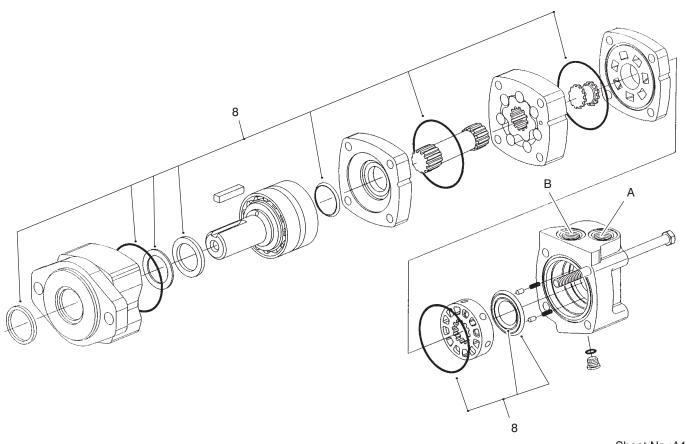

Sheet No.:A1 C-2931

Hydraulic Motor Assembly No. 98–9084

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
8	56–6890	1	Seal Kit				

