



Universal Swivel Auger Head

For Toro[®] Sitework[™] Systems

Model No. 22801—200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page
Auger Head Assembly	2
Hydraulic Motor Assembly No. 100–4657	3

Description	Page
Planetary Gear Assembly No. 98–8260	4

Accessories

Description	Model / Part No.
6" Auger Bit	22402
9" Auger Bit	22403
12" Auger Bit	22404
15" Auger Bit	22405
12" Auger Extension	22448
24" Auger Extension	22449
Capstan Adapter	22450
Screw Anchor Adapter	22451


Description	Model / Part No.
9" Rock Auger	22454
8" Auger Bit	22440
10" Auger Bit	22446
Cement Bowl	22442
Rear Stabilizer	22452
Counterweight	22417
Diesel Counterweight (use with traction models: 22302 and 22302TE)	22417

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSR	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming

Abbreviation	Meaning
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

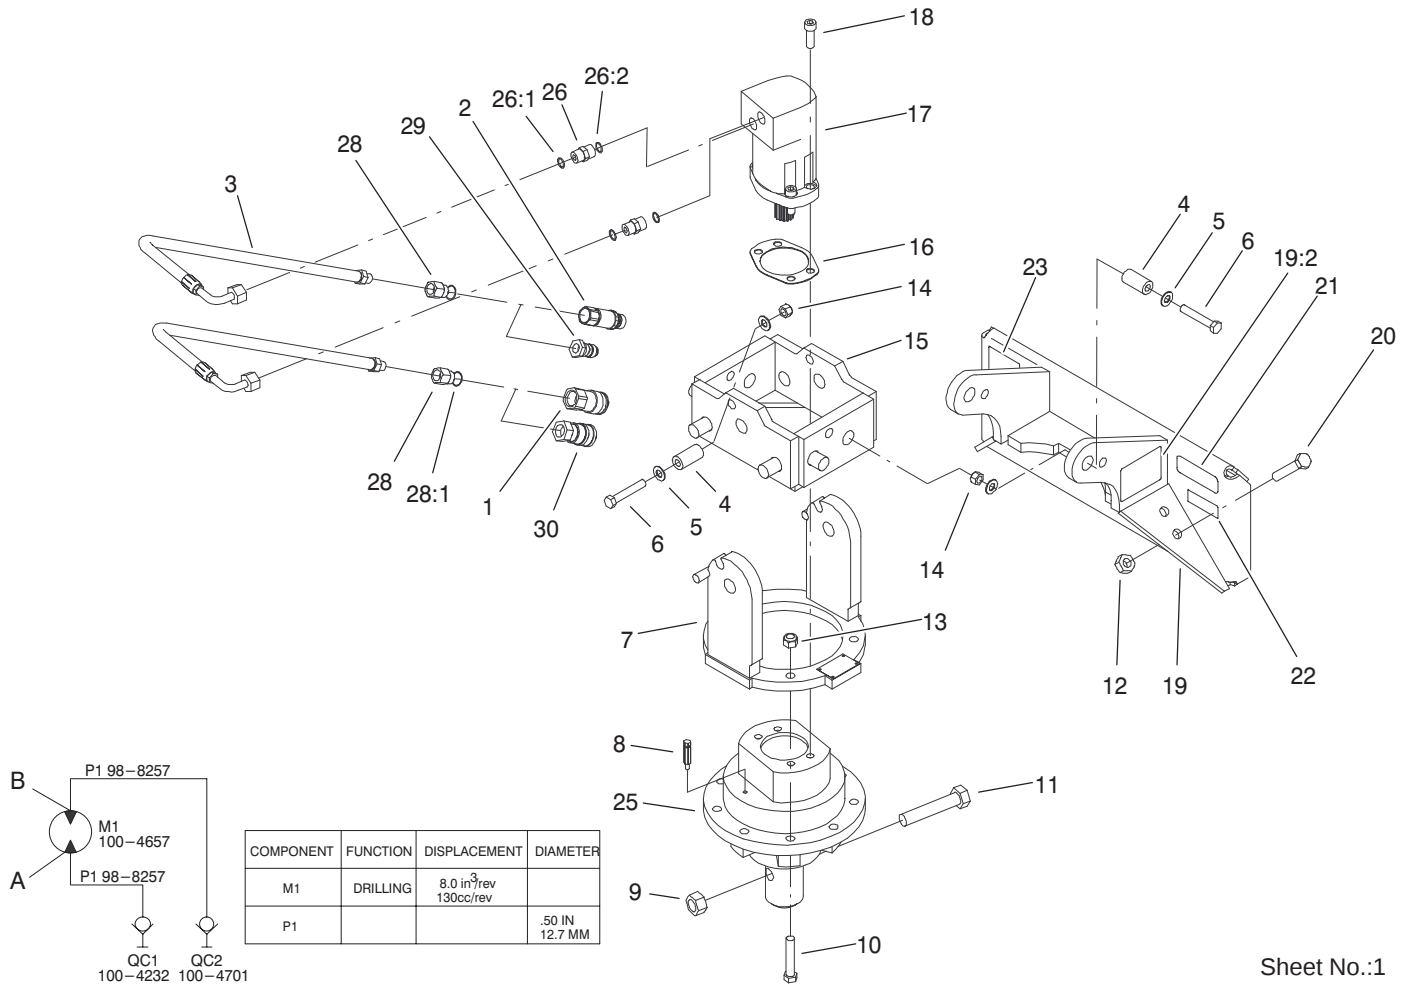


Sheet No.:1

Auger Head Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-4234	1	Coupler-Face, Flush	22	99-9992	1	Decal-Info
*1:1	100-6119	1	Kit-Seal	23	98-3269	1	Decal-Made In USA
2	100-4701	1	Nipple-Connect, Pressure	25	98-8260	1	Drive-Gear, Planetary
*2:1	100-6120	1	Kit-Seal	26	340-6	2	Fitting-Straight
3	98-8257	2	Hose - Hydraulic	26:1	237-30	1	O-Ring
4	99-1406	4	Pin - Pivot	26:2	237-80	1	O-Ring
5	3256-6	8	Washer-Flat	28	100-4617	2	Adapter-Hyd
6	325-12	4	Screw-HH	28:1	237-80	1	O-Ring
7	98-8258	1	Housing - Drive	29	100-4702	1	Disconnect-Quick, Male
8	98-8261	1	Breather ASM	30	100-4703	1	Disconnect-Quick, Female
9	3217-15	1	Nut-Hex	*30:1	100-4165	1	Seal
10	326-1	4	Screw-HH				
11	98-9062	1	Screw				
12	3217-11	4	Nut-Hex				
13	98-2703	4	Locknut				
14	3296-23	4	Nut-Lock, NI				
15	100-4104	1	Swivel Gimbel ASM				
16	99-5032	1	Gasket				
17	100-4657	1	Motor - Hydraulic				
18	3274-4	4	Screw-HSH				
19	100-4659	1	Auger Mount ASM				
19:2	99-9942	2	Decal-Warning				
20	327-14	4	Screw-HH				
21	98-4683	1	Decal-Attachment, Dingo				

* Not illustrated

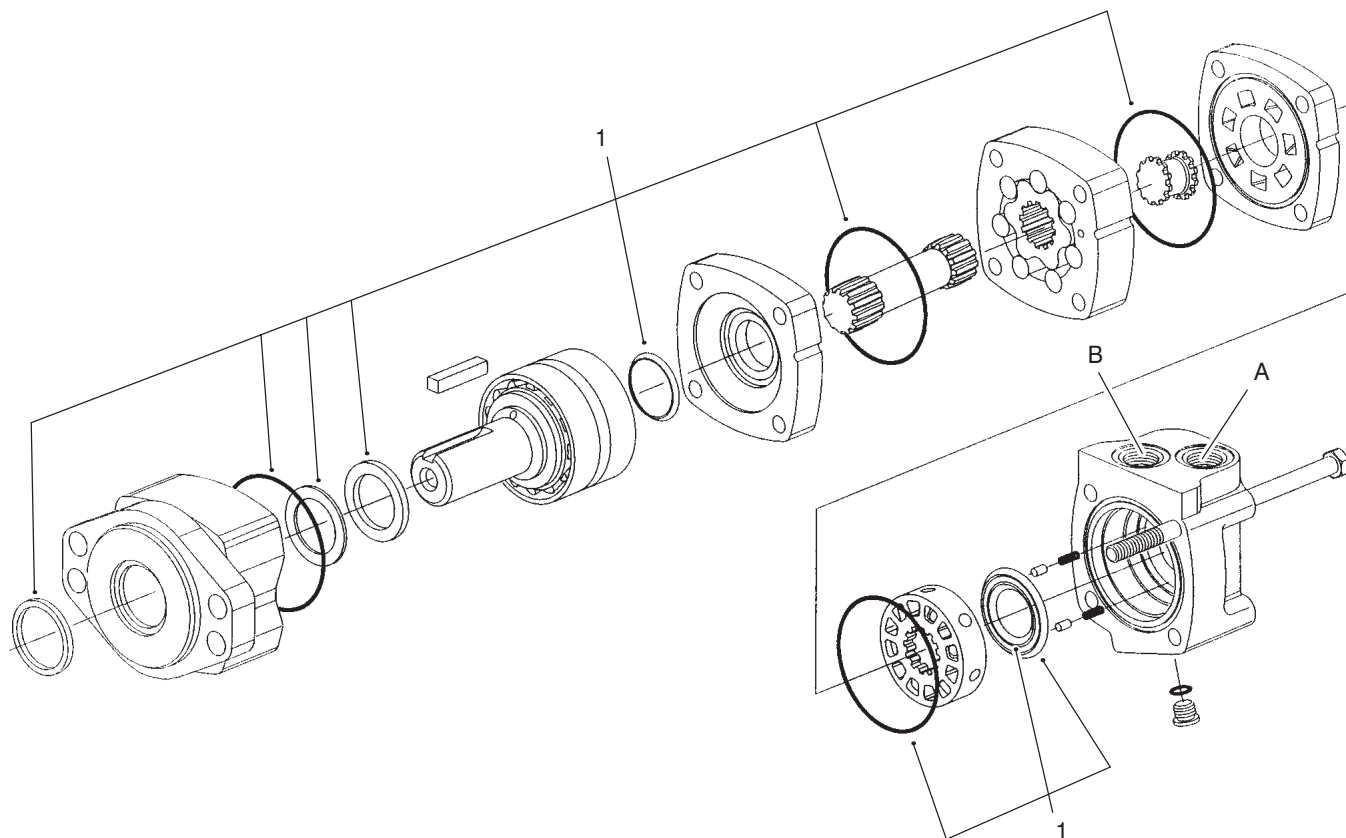


Sheet No.:A1
C-2754

Hydraulic Motor Assembly No. 100-4657

Ref. No.	Part No.	Qty.	Description
1	56-6890	1	Kit-Seal

Ref. No.	Part No.	Qty.	Description

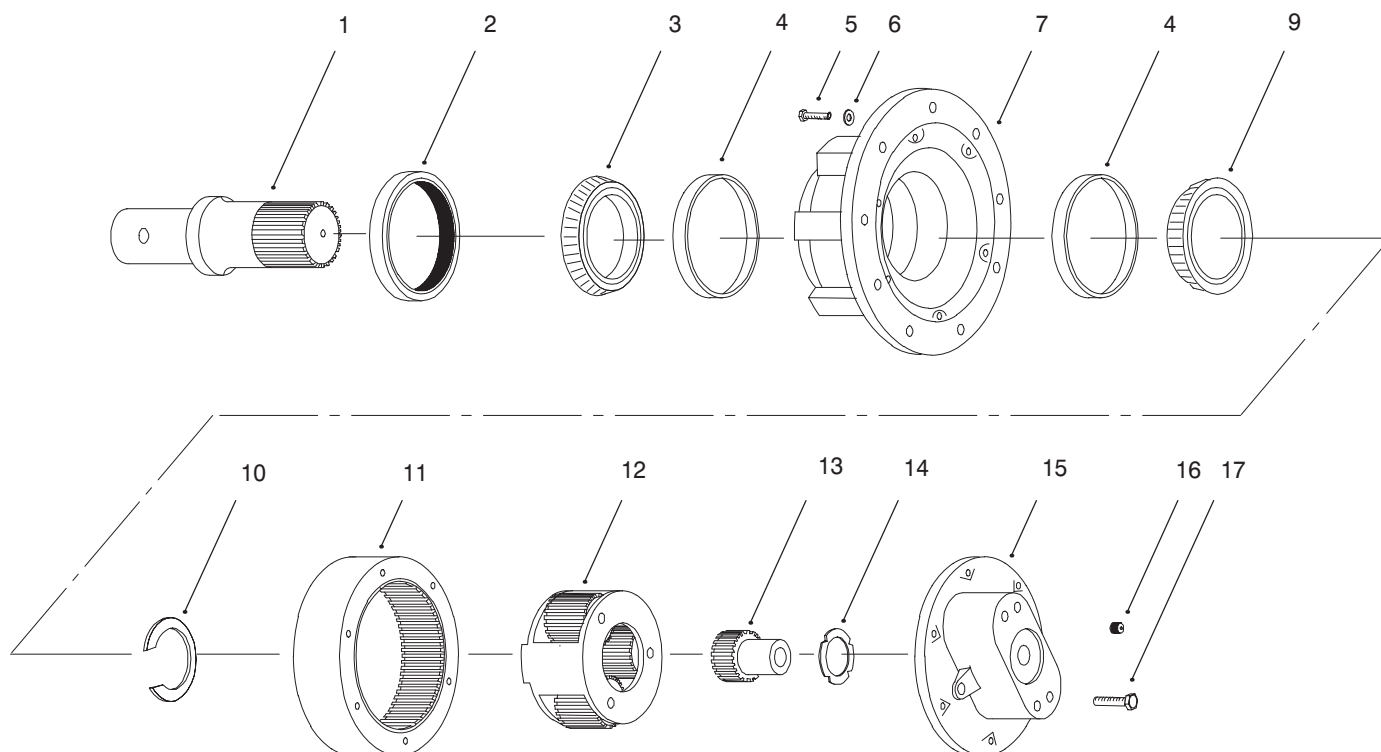

Sheet No.:A2
C-2745

Planetary Gear Assembly No. 98-8260

Ref. No.	Part No.	Qty.	Description
1	98-8264	1	Shaft – Output
2	60-3830	1	Seal
3	60-3840	1	Cone
4	60-3850	2	Cup
5	60-3890	6	Bolt
6	60-3910	6	Washer
7	98-8265	1	Hub w/Holes
9	60-3880	1	Cone
10	62-6450	1	Kit-Repair
11	98-8266	1	Gear – Ring
12	98-8267	1	Carrier ASM
13	98-8268	1	Gear – Sun
14	60-3980	1	Washer
15	98-8271	1	Cover
16	98-8269	1	Plug – Pipe, Magnetic
17	98-8270	8	Bolt

Ref. No.	Part No.	Qty.	Description

Maintenance Record

[illegible]

