Form No. 3324-242

TORO_®

4 IN 1 Bucket Dingo[®] Attachment Model No. 22411—200000201 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2000 All Rights Reserved

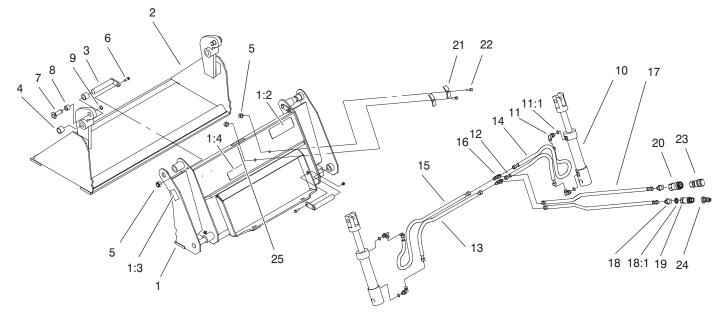

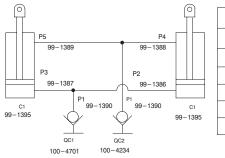

		Function	Size	Dian	neter
	C1	Clamping	Ø 50/32X 120		
	P1			.25 in	6.3mm
	P2			.25 in	6.3mm
	P3			.25 in	6.3mm
	P4			.25 in	6.3mm
	P5			.25 in	6.3mm

Sheet No.:A1 C-2845

4 in 1 Bucket Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98–2706	1	Base ASM	20	100–4234	1	Coupler–Face, Flush
1:2	100–4648	1	Decal–Warning	*20:1	100–6119	1	Kit–Seal
1:3	93–9367	1	Decal–Warning	21	99–1360	2	Clamp – Hose
1:4	100–4689	1	Decal–Load Rating	22	33104–040	2	Screw–HHF
2	99–1359	1	Jaw	23	100–4703	1	Disconnect–Quick,
3	99–1361	4	Pin				Female
4	99–1363	4	Bushing	*23:1	100–4165	1	Kit–Seal
5	33024–00	6	Nut–Lock	24	100–4702	1	Disconnect–Quick,
6	33104–025	4	Screw–HHF				Male
7	99–1362	2	Pin	25	98–4683	1	Decal-Attachment,
8	99–1364	2	Bushing				Dingo
9	32120–72	2	Ring–Snap				
10	99–1395	2	Cylinder – Hydraulic				
11	353–374	4	Elbow – 90°				
11:1	237–42	1	O–Ring				
12	99–1386	1	Hose ASM–Hydraulic				
13	99–1387	1	Hose ASM–Hydraulic				
14	99–1388	1	Hose ASM–Hydraulic				
15	99–1389	1	Hose ASM–Hydraulic				
16	99–1391	2	Adapter – Tee				
17	99–1390	2	Hose ASM–Hydraulic				
18	100–4749	2	Adapter–Hydraulic				
18:1	237–80	1	O-Ring				
19	100–4701	1	Nipple–Connect,				
			Pressure				
*19:1	100–6120	1	Kit–Seal				

Not illustrated

*

1 1

Sheet No.:A2 C-2972

Hydraulic Cylinder No. 99–1395

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99–1417	1	Kit – Seal				

