

Bore Drive Head Dingo® Attachment Model No. 22420—200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form \mathbf{nX} \mathbf{y} . The \mathbf{n} represents the quantity of the part, the \mathbf{X} is the multiplication symbol, and the \mathbf{y} represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

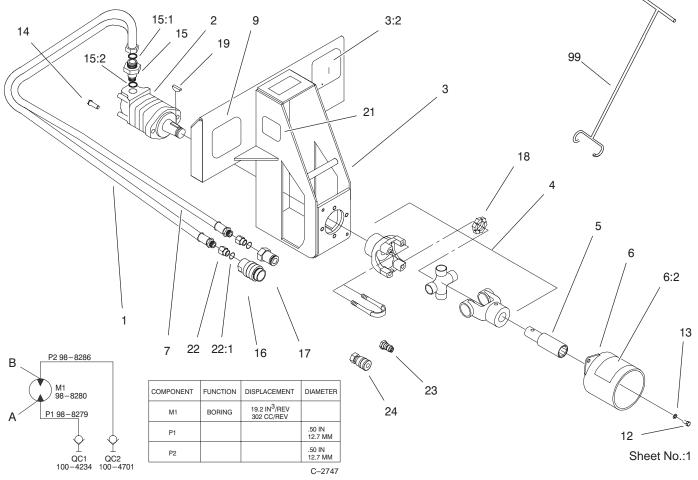


Bore Drive Head Assembly

Ref. No.	Part No.	Qty.	Description
1	98–8286	1	Hose – Hydraulic
2	98-8280	1	Motor – Hydraulic
3	99-4305	1	Frame ASM
3:2	99-9945	1	Decal-Warning
4	98-8282	1	Joint – Universal
5	98-8283	1	Coupler – Spline
6	99-4304	1	Shield ASM
6:2	99-9945	1	Decal-Warning
7	98-8279	1	Hose – Hydraulic
9	100-4762	1	Decal-Dingo
	323-4	2	Screw-HH
13	3253-5	2	Washer–Lock/Sp
14	98-9063	2	Screw
15	340–6	2	Fitting–Straight
	237–30	1	O–Ring
15:2	237–80	1	O–Ring
-	100–4234	1	Coupler–Face, Flush
*16:1	100–6119	1	Kit–Seal
17	100–4701	1	Nipple-Connect,
			Pressure
*17:1	100–6120	1	Kit–Seal
18		1	Nut – Shaft
19		1	Key – Shaft
	98–3269	1	Decal-Made In USA
	100–4617	2	Adapter–Hyd
22:1	237–80	1	O–Ring

Ref. No.	Part No.	Qty.	Description
23	100–4702	1	Disconnect-Quick, Male
24	100–4703	1	Disconnect–Quick, Female
*24:1	100–4165	1	Seal
99	98–9919	1	Rod Guide Tool

^{*} Not illustrated

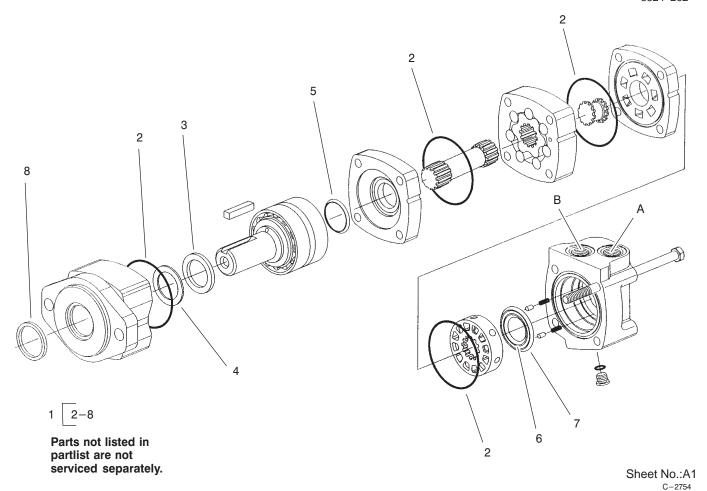

Hydraulic Motor Assembly No. 98-8280

	• • • •	<u> </u>	duile Motor A	<u> </u>	, 1101 0	-	
Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	56–6890	1	Kit-seal				

