



Carrier Frame Conversion Kit

Part No. 99-2485

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part. This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

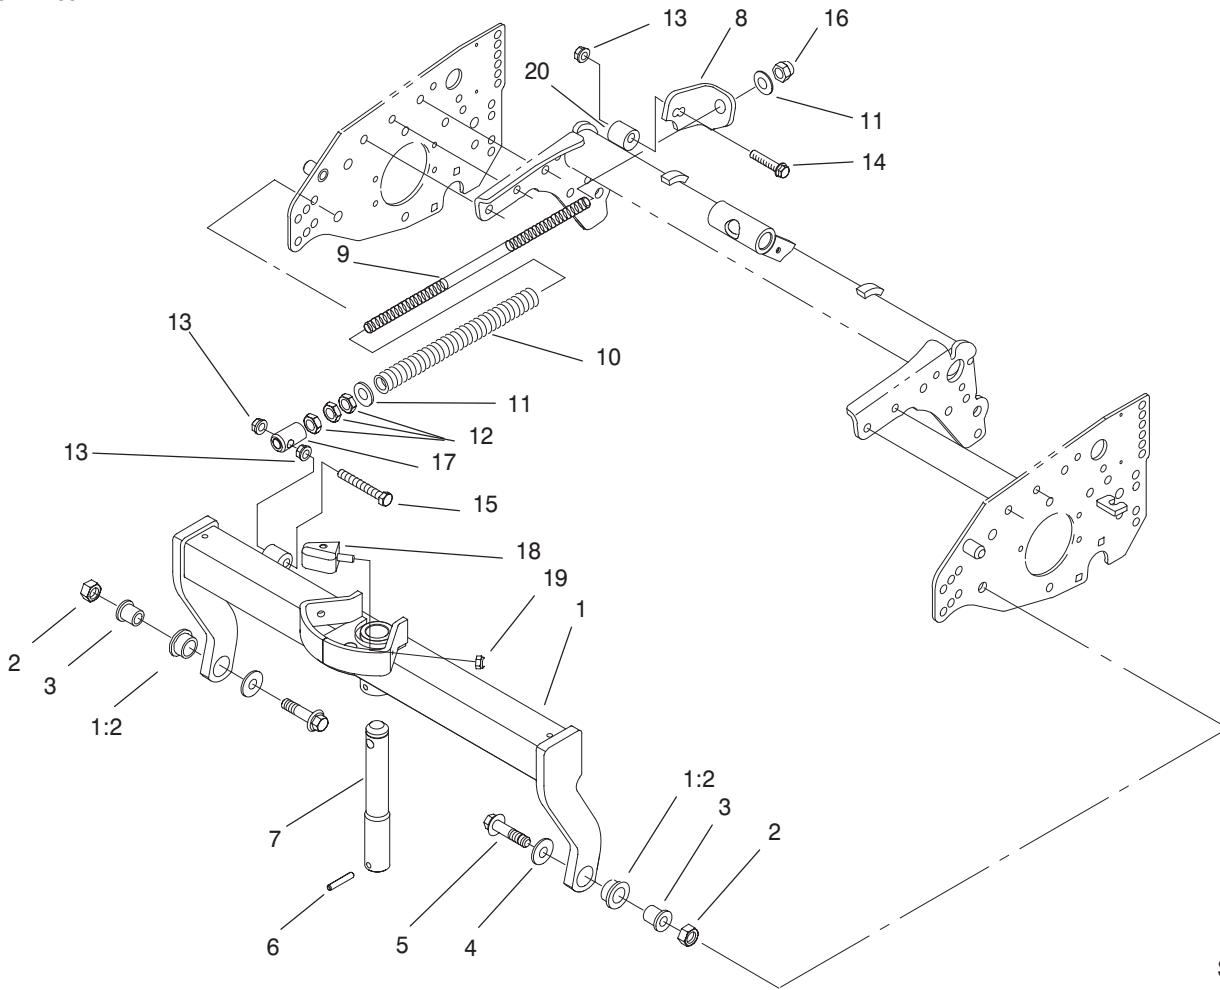

Sheet No.:0

Carrier Frame Conversion Assembly

Ref. No.	Part No.	Qty.	Description
1	98-8107	1	Carrier Frame ASM
1:2	93-2877	2	Bushing
2	94-4307	2	Nut-Hex Lock
3	98-1885	2	Spacer - Frame
4	94-2701	2	Washer - Hardened
5	94-2702	2	Bolt-HH
6	32121-15	1	Pin-Roll
7	98-8803	1	Pin - Pivot
8	99-8669	1	Bracket - Spring
9	99-8661	1	Rod - Spring
10	92-7768	1	Spring-Compression
11	87-7270	2	Washer - Thrust
12	3218-5	3	Nut-Jam
13	3296-39	3	Nut-Lock, NI
14	3234-19	1	Screw-HHF
15	99-8664	1	Screw-HH
16	3296-23	1	Nut-Lock, NI
17	99-8662	1	Tube - Spring
18	99-2484	2	Bumper ASM
19	32128-20	2	Nut-HF
20	98-7990	1	Spacer - Tube

Ref. No.	Part No.	Qty.	Description