



Form No. 3360-954 Rev D

Count on it.

Parts Catalog

TITAN® Z5000

Zero-Turn-Radius Riding Mower

Model No. 74820—Serial No. 290000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame and Front Caster Wheel Assembly 4

Deck Lift Assembly..... 5

Motion Control Assembly 6

Parking Brake Assembly..... 7

Handle Control Assembly 8

Seat Assembly 9

Traction Drive Assembly 10

RH Hydro Assembly..... 12

LH Hydro Assembly 14

Engine, Clutch and Exhaust Assembly..... 16

Fuel Delivery System..... 17

Body and Styling Assembly 18


Electrial Assembly 19

50 Inch Deck Assembly..... 20

50 Inch Deck Decal Assembly No. 117-5373..... 21

50 Inch Deck Spindle and Blade Assembly 22


Attachments and Accessories 23

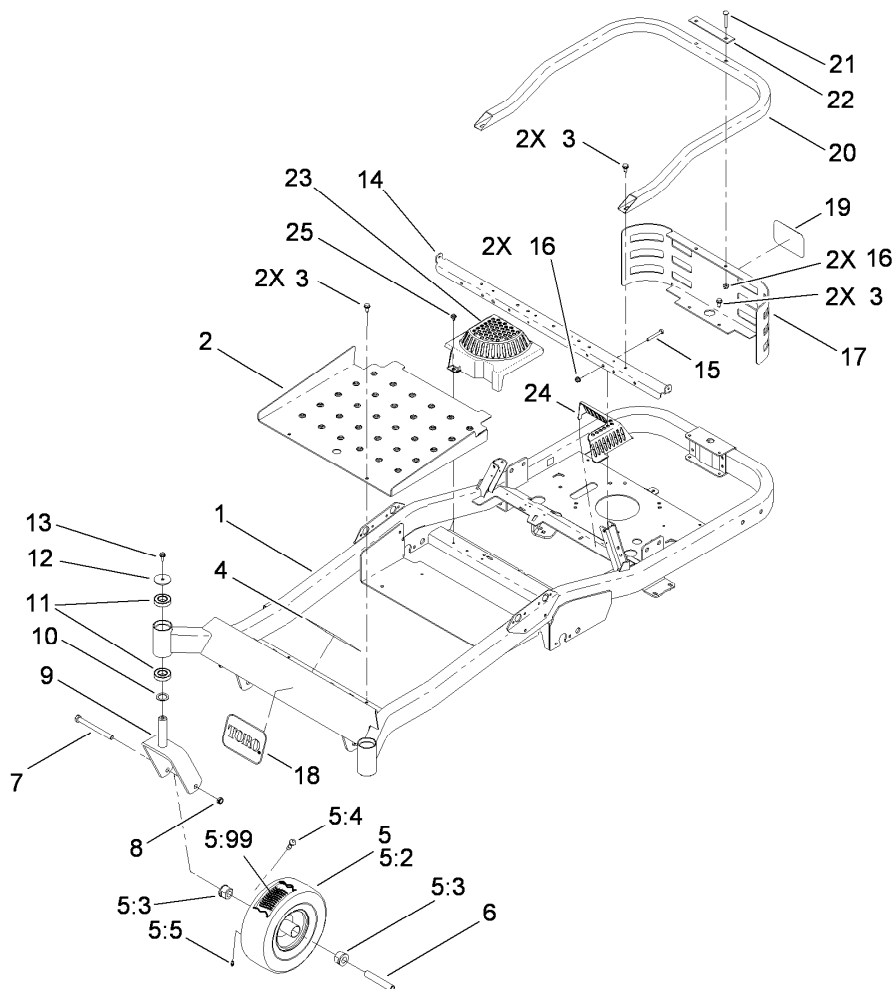

Main Frame and Front Caster Wheel Assembly


Ref.	Part Number	Qty.	Description
1	115-2534-01	1	Frame
2	115-2531-03	1	Floorpan
3	32144-70	6	Screw-HWHTF
4	109-8965	1	Decal-Safety
5	115-2554	2	Tire And Wheel ASM
5:2	115-2557	1	Tire-Smooth
5:3	114-1640	2	Bushing-Flange
5:4	232-27	1	Stem-Valve
5:5	302-5	1	Fitting-Grease
5:99	117-1234	1	Tube-Inner
6	104-3667	2	Bushing-Spanner
7	325-22	2	Screw-HH
8	3296-45	2	Nut-Hex
9	110-6634-01	2	Caster Fork ASM
10	10-8110	2	Washer-Thrust

Ref.	Part Number	Qty.	Description
11	109-3678	4	Bearing-Ball
12	109-3724	2	Washer
13	3234-47	2	Screw-HHF
14	115-2566-03	1	Support-Seat
15	322-11	2	Screw-HH
16	104-8300	4	Nut-HF, NI
17	115-2632-03	1	Guard-Rear, Shield
18	62-5550	1	Decal
19	105-8278	1	Decal
20	115-2565-01	1	Guard-Rear, Tube
21	3230-6	2	Bolt-CARR
22	115-5061-01	1	Plate-Spacer
23	117-1241	1	Cover-Fan, RH
24	117-1242	1	Cover-Fan, LH
25	46-8560	2	Screw-HHFTF

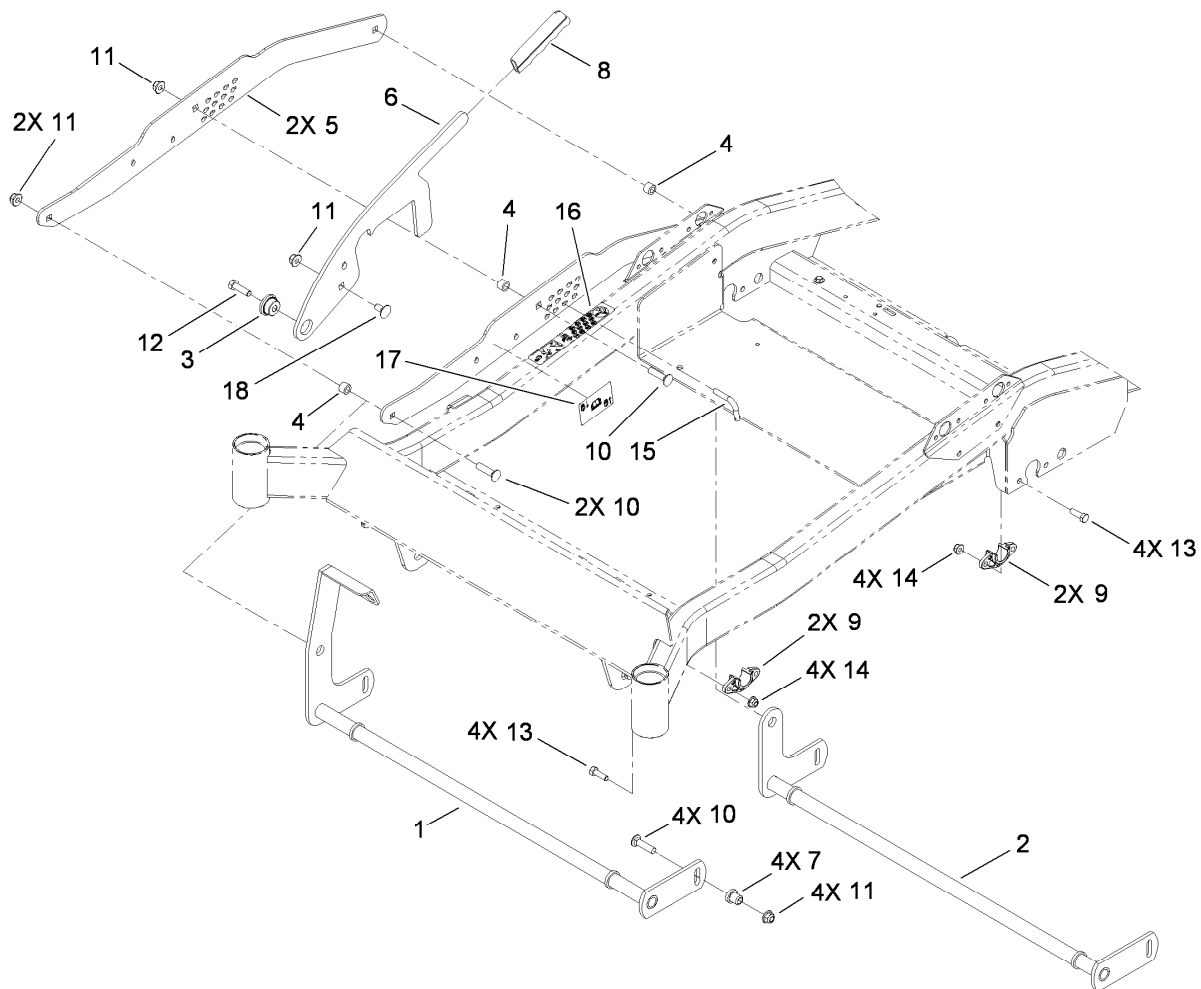

Deck Lift Assembly

Ref.	Part Number	Qty.	Description
1	115-2495-03	1	Pivot-Front
2	115-2498-03	1	Pivot-Rear
3	117-1281	1	Bushing-Mount, HOC
4	115-4986	3	Spacer
5	115-2503-03	2	Plate-Lift, Foot
6	115-2504	1	Plate-Stop, HOC
7	65-5950	4	Bushing-Pulley
8	115-5033	1	Grip
9	115-5065	4	Bushing-Flange
10	3231-4	7	Screw-CARR
11	104-8301	8	Nut-HF, NI
12	323-7	1	Screw-HH
13	322-5	8	Screw-HH
14	104-8300	8	Nut-HF, NI
15	117-1280	1	Pin-Keyed
16	115-9644	1	Decal-HOC
17	117-5344	1	Decal-Lock, Deck
18	3231-1	1	Screw-CARR

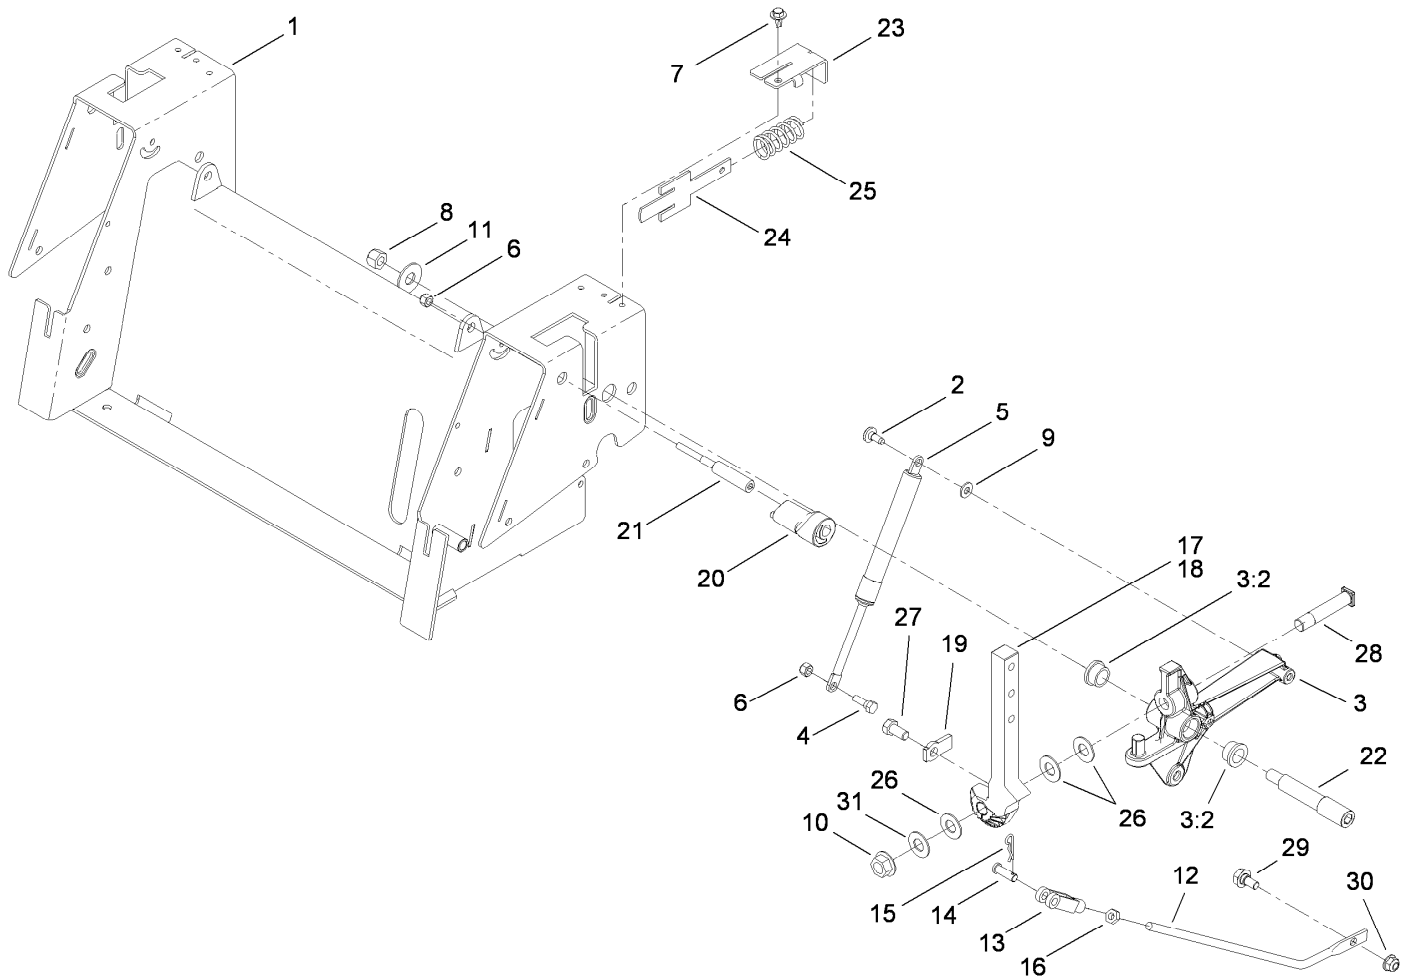


Motion Control Assembly

Ref.	Part Number	Qty.	Description
1	115-2546-03	1	Box-Control
2	112-4004	2	Screw-Shoulder
3	110-6828	2	Activator Arm ASM
3:2	105-3455	2	Bushing
4	106-2214	2	Bolt-Shoulder
5	103-2913	2	Damper-Control, Motion
6	3296-42	4	Nut-Lock, NI
7	46-8560	2	Screw-HHFTF
8	3296-48	2	Nut-Hex
9	3256-22	2	Washer-Flat
10	32128-23	2	Nut-HF
11	3256-5	2	Washer-Flat
12	115-2529	2	Link-Bent, Hydro
13	1-303105	2	Yoke-Adjustable
14	1-808280	2	Pin-Clevis
15	1-806003	2	Pin-Cotter

Ref.	Part Number	Qty.	Description
16	3220-2	2	Nut-Jam
17	110-6783-03	1	Arm-Actuator, LH
18	110-6782-03	1	Arm-Actuator, RH ●
19	115-5023	2	Tab-Stop
20	110-6873	2	Eccentric
21	110-6874	2	Screw-Eccentric
22	110-6875	2	Bolt-Shoulder
23	110-6751	2	Bracket-Return
24	110-6750	2	Plate-Return
25	110-6752	2	Spring-Compression
26	110-6894	6	Washer-Pivot
27	323-4	2	Screw-HH
28	110-6784	2	Bolt-Shoulder
29	37-8771	2	Bolt-Shoulder, HF
30	104-8300	2	Nut-HF, NI
31	112-9771	2	Washer-Teflon


● Not illustrated

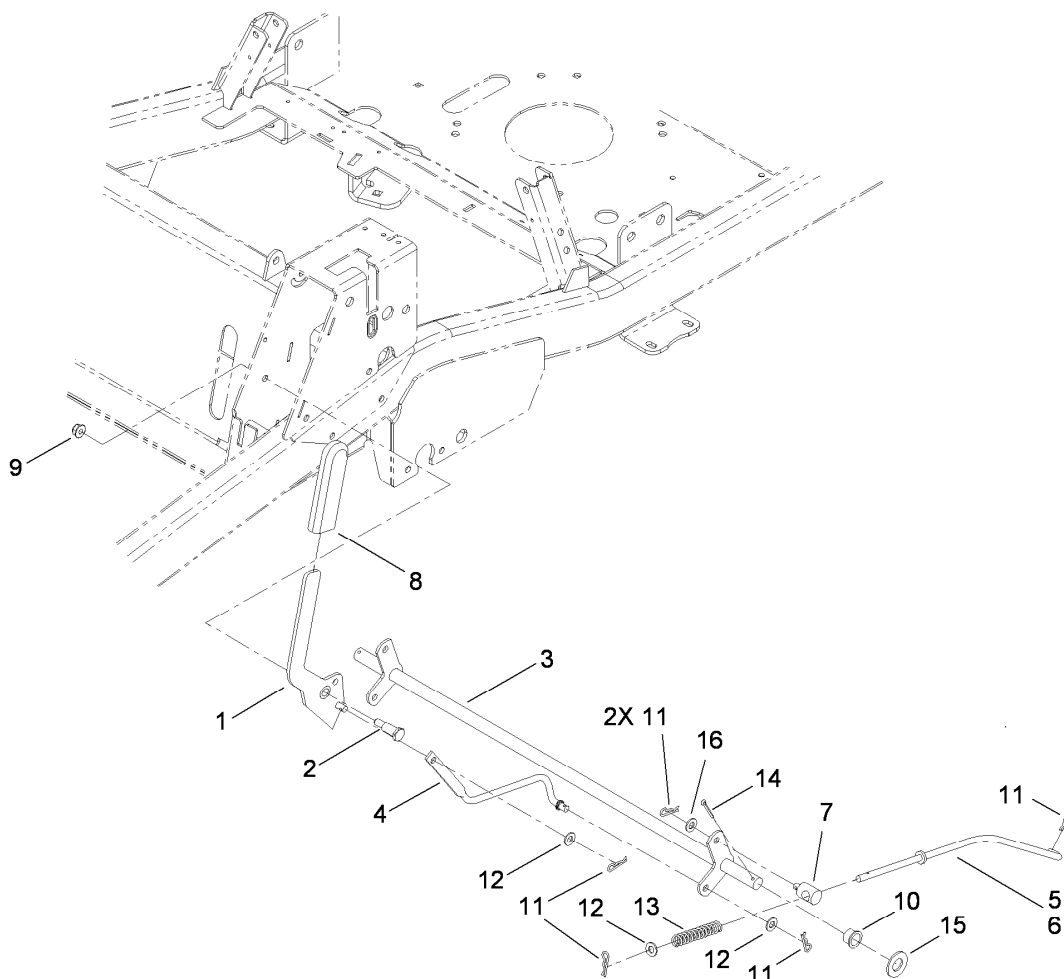

Parking Brake Assembly

Ref.	Part Number	Qty.	Description
1	117-1167	1	Brake Handle ASM
2	63-2650	1	Screw-Shoulder
3	115-5071-03	1	Brake-Bellcrank
4	115-5074	1	Link-Brake
5	115-9679	1	Rod-Brake, LH
6	115-9680	1	Rod-Brake, RH ●
7	115-9681	2	Fitting-Rod
8	1-633268	1	Grip-Lever
9	104-8300	1	Nut-HF, NI
10	256-292	2	Bushing-Flange, NI
11	1-806003	8	Pin-Cotter
12	3256-23	4	Washer-Plain
13	1-603807	2	Spring-Return, Neutral
14	3272-11	2	Pin-Cotter
15	3256-27	2	Washer-Flat
16	40-1940	2	Washer


● Not illustrated

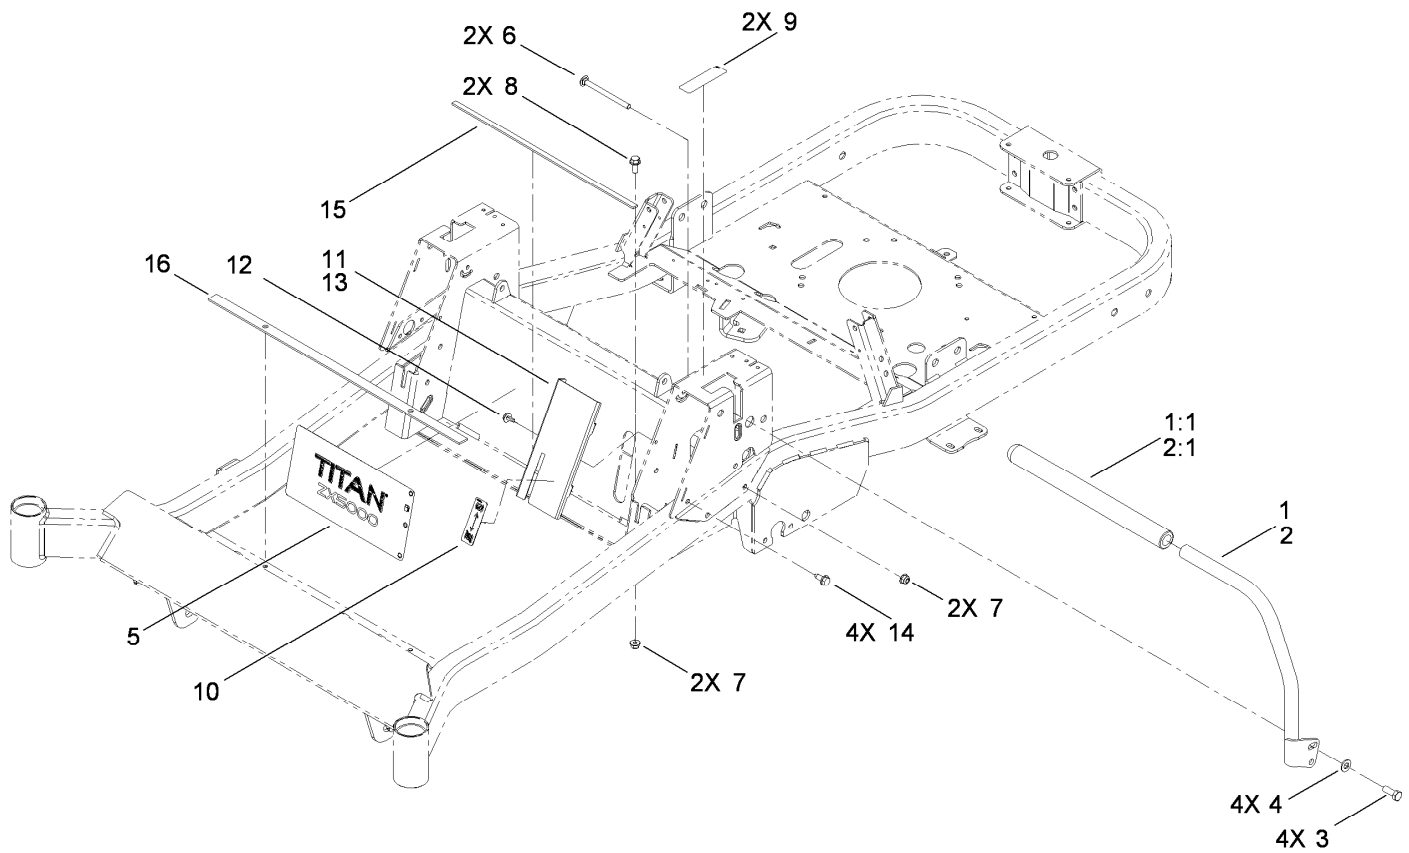

Handle Control Assembly


Ref.	Part Number	Qty.	Description
1	117-5338	1	LH Control Handle ASM
1:1	108-6187	1	Grip
2	117-5339	1	RH Control Handle ASM ●
2:1	108-6187	1	Grip ●
3	323-6	4	Screw-HH
4	3256-24	4	Washer-Flat
5	115-9626	1	Decal
6	106-9758	2	Screw-CARR
7	104-8300	4	Nut-HF, NI
8	3234-47	2	Screw-HHF
9	99-8936	2	Decal-Control, Motion
10	115-9625	1	Decal-Brake, Parking
11	115-2561-03	1	Cover-Control, LH
12	46-8560	2	Screw-HHFTF
13	117-1255-03	1	Cover-Control, RH ●
14	32144-70	4	Screw-HWHTF
15	117-7237	1	Strip-Vibration, Anti
16	117-7238	1	Strip-Vibration, Anti

● Not illustrated

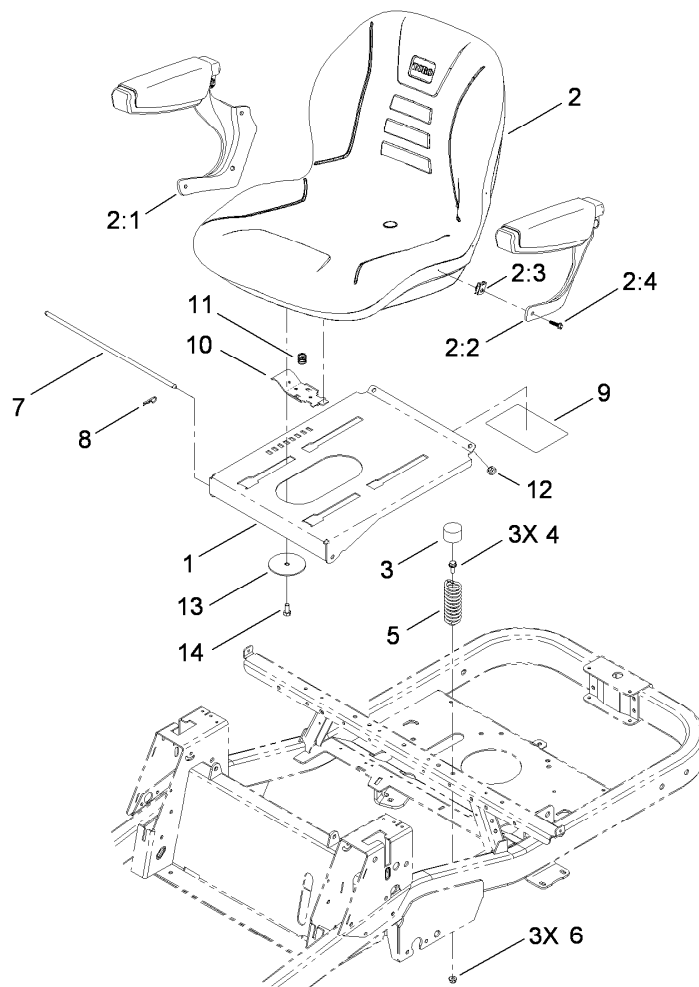

Seat Assembly


Ref.	Part Number	Qty.	Description
1	117-5320-03	1	Pan-Seat
2	115-5053	1	18 Inch Seat ASM
2:1	117-5346	1	Armrest-RH
2:2	117-5347	1	Armrest-LH
2:3	117-5348	6	Nut-Speed
2:4	117-5349	6	Screw-Tapping
3	701178	3	Cap-Protector
4	3234-47	3	Screw-HHF
5	92-7054	3	Spring-Compression
6	104-8300	3	Nut-HF, NI
7	115-4966	1	Rod-Stop
8	3290-250	2	Pin-Cotter
9	115-9630	1	Decal-Maintenance
10	115-9623	1	Latch-Seat
11	115-9624	1	Spring-Compression
12	1-513658	2	Bumper
13	117-5307	1	Washer-Seat
14	323-4	1	Screw-HH

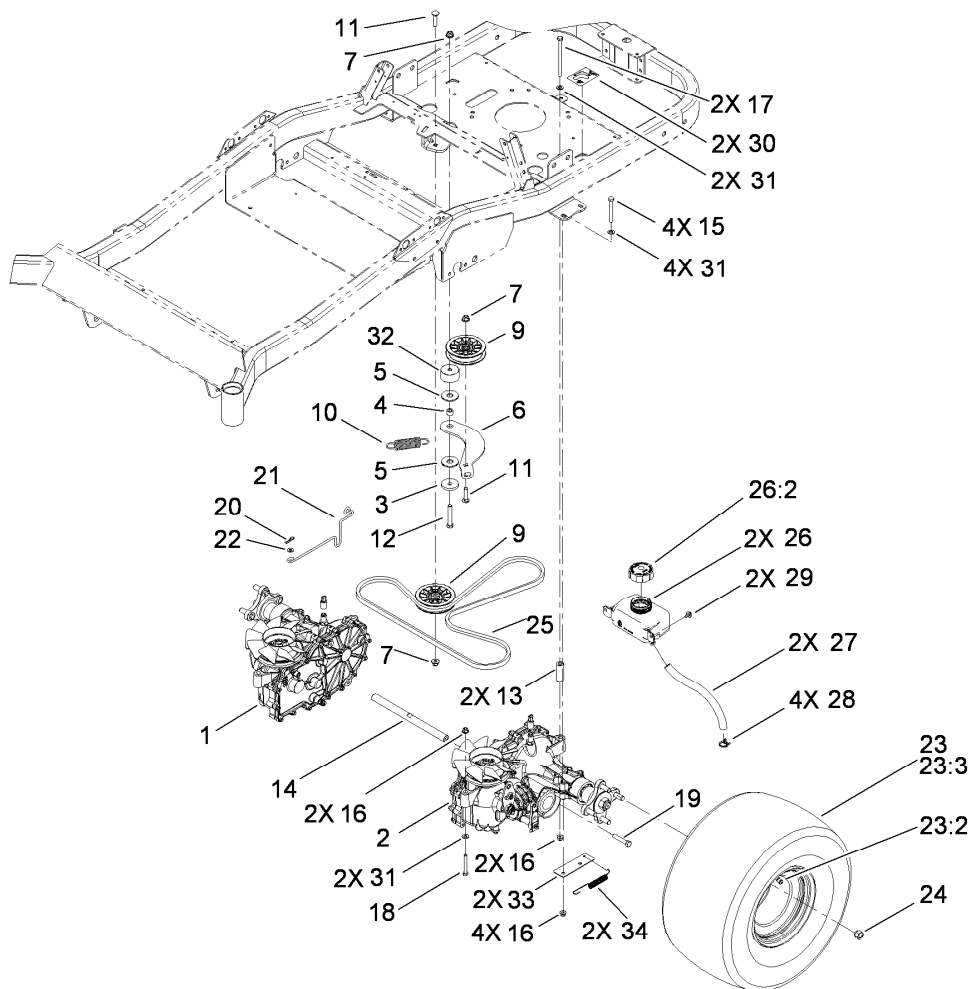

Traction Drive Assembly


Ref.	Part Number	Qty.	Description
1	115-2550	1	RH Hydro Transmission ASM
2	115-2551	1	LH Hydro Transmission ASM
3	110-9981	1	Washer-Plain
4	115-4986	1	Spacer
5	114-0463	2	Washer-Friction, Composite
6	117-5350	1	Arm-Idler
7	104-8301	3	Nut-HF, NI
9	109-3397	2	Pulley-Idler, Flat
10	1-603402	1	Spring-Extension
11	3231-4	2	Screw-CARR
12	323-12	1	Screw-HH
13	109-3652	2	Spacer-Hydro
14	115-2559	1	Shaft-Cross, Hydro
15	322-13	4	Screw-HH
16	104-8300	8	Nut-HF, NI
17	322-38	2	Screw-HH
18	322-11	2	Screw-HH

Ref.	Part Number	Qty.	Description
19	323-10	2	Screw-HH
20	1-806003	2	Pin-Cotter
21	115-4990	2	Rod-Bypass
22	3256-22	2	Washer-Flat
23	115-2594	2	Tire And Rim ASM
23:2	232-27	1	Stem-Valve
23:3	115-2590	1	Tire
24	242-50	8	Nut-Lug
25	115-9613	1	V-Belt
26	115-9618	1	HYD Reservoir ASM
26:2	109-3320	1	Cap-Reservoir, HYD
27	115-4969	2	Hose-Overflow
28	117-1193	4	Clamp-Hose
29	46-8560	2	Screw-HHFTF
30	117-1158	2	Decal-Bypass
31	3256-23	8	Washer-Plain
32	117-5351	1	Spacer
33	117-7248-03	2	Plate-Spring
34	110769	2	Spring-Extension

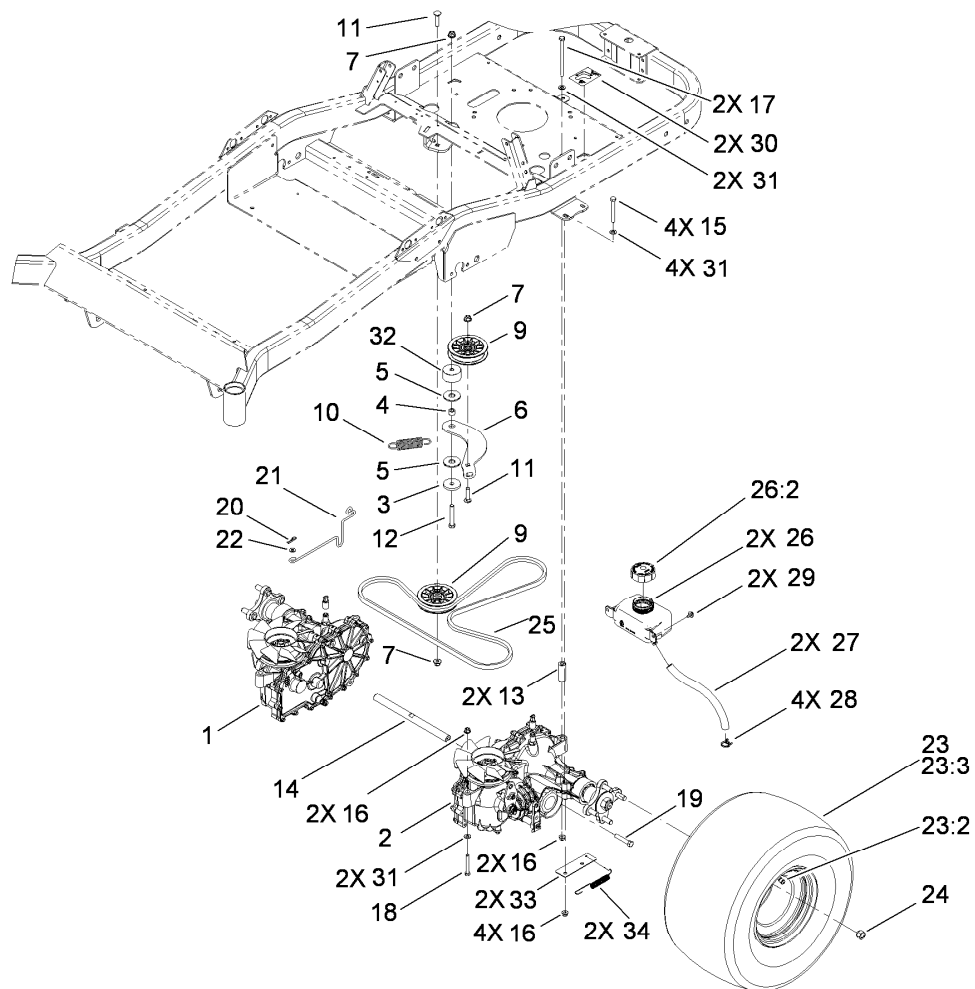

Traction Drive Assembly (continued)

RH Hydro Assembly

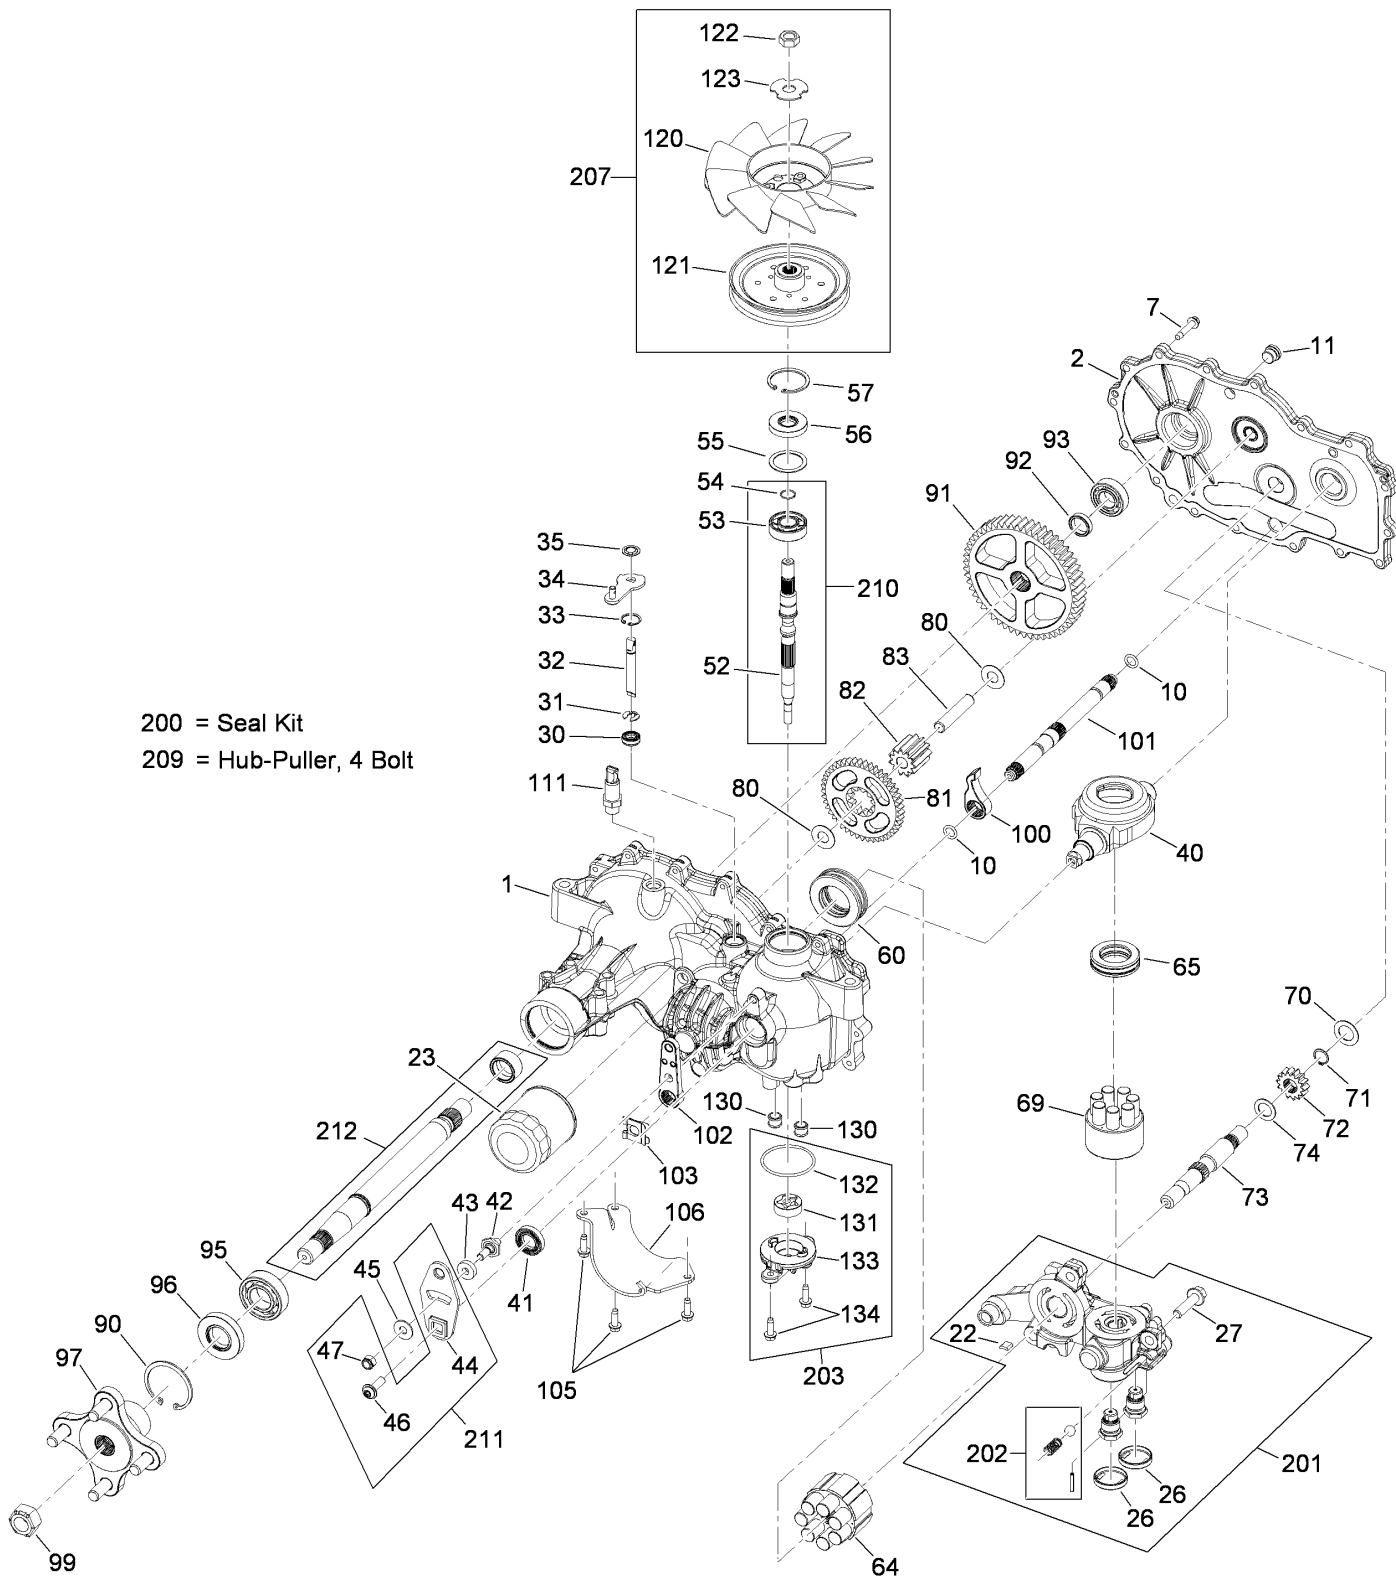


RH Hydro Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-5357	1	RH Main Housing Kit
2	117-5358	1	RH Housing Side Kit
7	117-5359	16	Screw-HHF
10	114-1678	2	O-Ring
11	104-2189	1	Plug-Thread, Straight
22	114-1680	1	Plate-Bypass
23	109-3321	1	Element-Oil Filter, HYD
26	114-1683	2	Seal-Plug
27	114-1684	3	Screw-Hfhc
30	106-8676	1	Seal-Lip
31	106-8677	1	Ring-Retaining, External
32	114-1685	1	Rod-Bypass
33	106-8679	1	Ring-Retaining, Internal
34	107-2490	1	Arm-Bypass
35	106-8681	1	Ring-Retaining, External
40	104-5304	1	Swashplate-Trunnion
41	104-5313	1	Seal-Lip
42	104-2116	1	Stud
43	112-9853	1	Puck-Friction
44	106-8747	1	Arm-Control
45	114-8491	1	Washer
46	107-2488	1	Screw
47	105-1872	1	Nut
52	114-1687	1	Shaft-Input
53	104-5311	1	Bearing-Ball
54	104-5307	1	Ring-Retaining
55	104-5308	1	Spacer
56	104-5310	1	Seal-Lip
57	104-5309	1	Ring-Retaining
60	112-4154	1	Bearing-Thrust
64	114-1689	1	Motor Cylinder Block Kit
65	94-6922	1	Bearing-Thrust
69	110-8561	1	Pump Block ASM
70	104-5339	1	Washer-Flat
71	104-5340	1	Ring-Retaining
72	114-1690	1	Gear-14T
73	114-1691	1	Shaft-Motor
74	104-5360	1	Washer


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
80	94-1933	1	Washer
81	114-1692	1	Gear-45T
82	114-1693	1	Gear-11T
83	104-5329	1	Pin-Jackshaft
90	104-2169	1	Ring-Retaining
91	114-1694	1	Gear-54T
92	114-1695	1	Spacer
93	114-1696	1	Bearing-Ball
95	104-2143	1	Bearing-Ball
96	104-2144	1	Seal
97	109-5939	1	Hub Kit
99	105-1895	1	Nut
100	114-1697	1	Pawl-Brake
101	117-5360	1	Shaft-Brake
102	114-1699	1	Handle-Brake
103	114-8450	1	Clip-Retaining
105	104-2120	3	Screw
106	114-8473	1	Guard-Filter, LH
111	109-3278	1	Adapter-Straight
120	114-8453	1	Fan-7.0
121	114-8454	1	Pulley-5.0 Inch
122	104-2168	1	Nut-Hex
123	107-9122	1	Washer-Slotted
130	114-8455	2	Tube-Connecting
131	104-2122	1	Gerotor ASM
132	109-3540	1	O Ring-Seal
133	114-8457	1	Cover-Charge Pump
134	104-2120	2	Screw
200	109-3537	1	Seal Kit
201	114-8463	1	RH Center Section Kit
202	114-8464	1	Charge Relief Kit
203	114-8465	1	Charge Kit
207	109-5938	1	Fan And Pulley Kit
209	114-8467	1	Puller-Hub, 4 Bolt
210	117-5361	1	Input Shaft Kit
211	117-5362	1	Control Arm Kit
212	114-8470	1	Axle Shaft Kit

LH Hydro Assembly

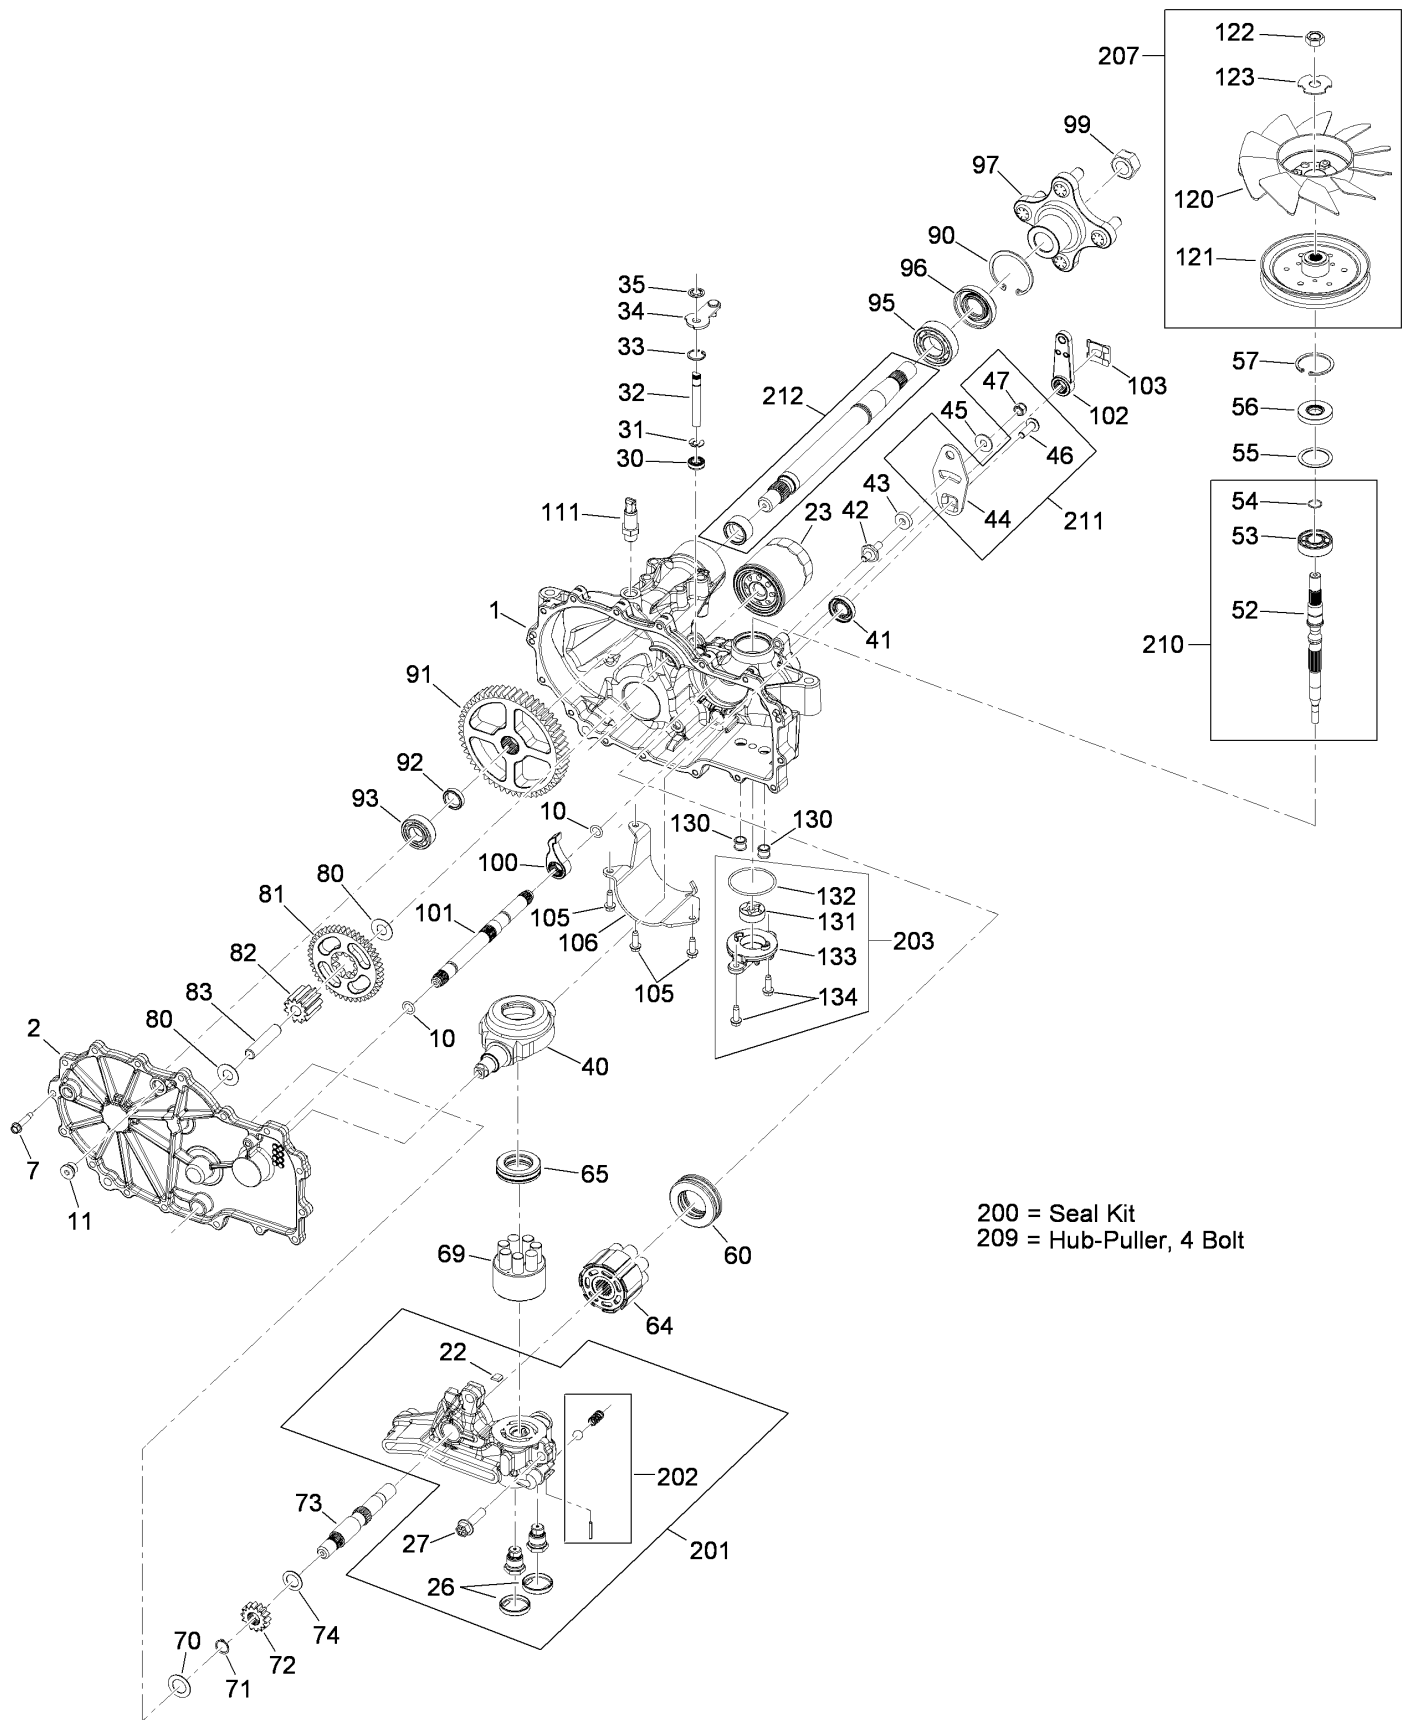

LH Hydro Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-8471	1	LH Main Housing Kit	80	94-1933	2	Washer
2	114-8472	1	LH Side Cover Kit	81	114-1692	1	Gear-45T
7	117-5359	16	Screw-HHF	82	114-1693	1	Gear-11T
10	114-1678	2	O-Ring	83	104-5329	1	Pin-Jackshaft
11	104-2189	1	Plug-Thread, Straight	90	104-2169	1	Ring-Retaining
22	114-1680	1	Plate-Bypass	91	114-1694	1	Gear-54T
23	109-3321	1	Element-Oil Filter, HYD	92	114-1695	1	Spacer
26	114-1683	2	Seal-Plug	93	114-1696	1	Bearing-Ball
27	114-1684	3	Screw-Hfhc	95	104-2143	1	Bearing-Ball
30	106-8676	1	Seal-Lip	96	104-2144	1	Seal
31	106-8677	1	Ring-Retaining, External	97	109-5939	1	Hub Kit
32	114-1685	1	Rod-Bypass	99	109-3536	1	Nut-Hub
33	106-8679	1	Ring-Retaining, Internal	100	114-1697	1	Pawl-Brake
34	107-2490	1	Arm-Bypass	101	117-5360	1	Shaft-Brake
35	106-8681	1	Ring-Retaining, External	102	114-1699	1	Handle-Brake
40	104-5304	1	Swashplate-Trunnion	103	114-8450	1	Clip-Retaining
41	104-5313	1	Seal-Lip	105	104-2120	3	Screw
42	104-2116	1	Stud	106	114-8473	1	Guard-Filter, LH
43	112-9853	1	Puck-Friction	111	109-3278	1	Adapter-Straight
44	106-8747	1	Arm-Control	120	114-8453	1	Fan-7.0
45	114-8491	1	Washer	121	114-8454	1	Pulley-5.0 Inch
46	107-2488	1	Screw	122	104-2168	1	Nut-Hex
47	105-1872	1	Nut	123	107-9122	1	Washer-Slotted
52	114-1687	1	Shaft-Input	130	114-8455	2	Tube-Connecting
53	104-5311	1	Bearing-Ball	131	104-2122	1	Gerotor ASM
54	104-5307	1	Ring-Retaining	132	109-3540	1	O Ring-Seal
55	104-5308	1	Spacer	133	114-8457	1	Cover-Charge Pump
56	104-5310	1	Seal-Lip	134	104-2120	2	Screw
57	104-5309	1	Ring-Retaining	200	109-3537	1	Seal Kit
60	114-1688	1	Bearing-Thrust	201	114-8476	1	LH Center Section Kit
64	114-1689	1	Motor Cylinder Block Kit	202	114-8464	1	Charge Relief Kit
65	94-6922	1	Bearing-Thrust	203	114-8465	1	Charge Kit
69	110-8561	1	Pump Block ASM	207	109-5938	1	Fan And Pulley Kit
70	104-5339	1	Washer-Flat	209	114-8467	1	Puller-Hub, 4 Bolt
71	104-5340	1	Ring-Retaining	210	117-5361	1	Input Shaft Kit
72	114-1690	1	Gear-14T	211	117-5362	1	Control Arm Kit
73	114-1691	1	Shaft-Motor	212	114-8470	1	Axle Shaft Kit
74	104-5360	1	Washer				

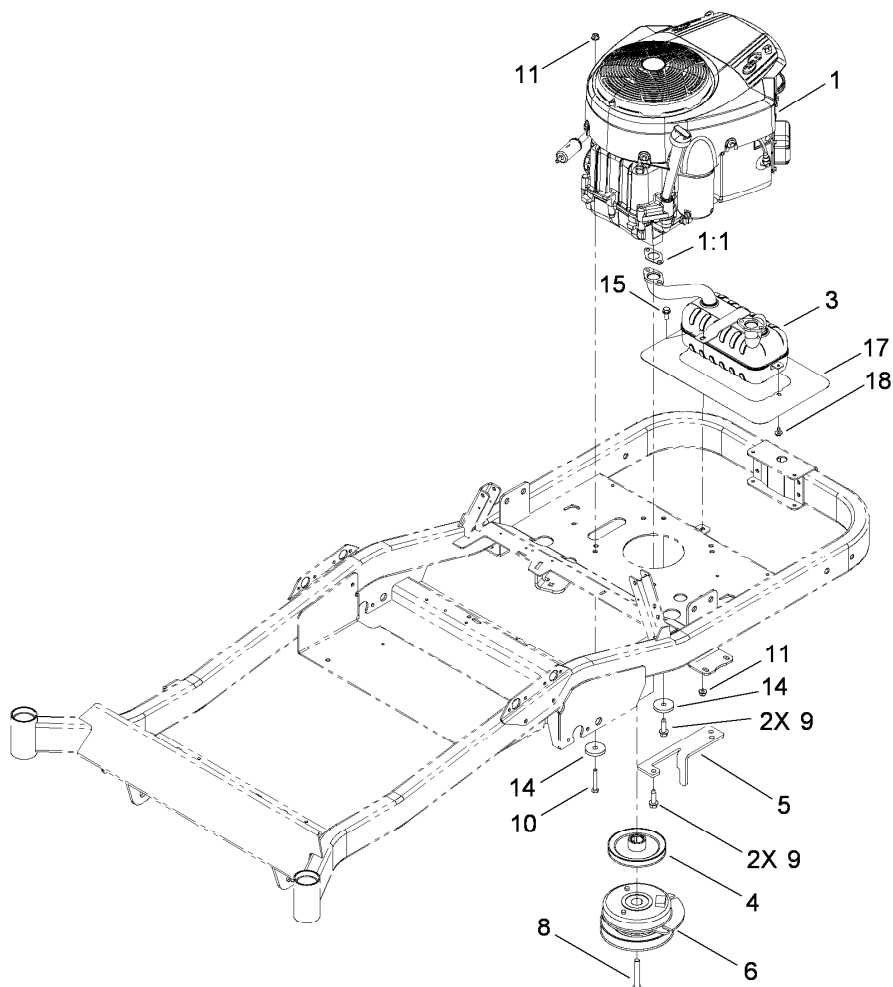


Engine, Clutch and Exhaust Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Briggs, 40H777-0129-B1 ●■
1:1	104-3226	2	Gasket-Exhaust
3	115-9677	1	Muffler-Twin, Briggs
4	115-2568	1	Pulley-Engine
5	117-1269-03	1	Bracket-Stop, PTO
6	110-6766	1	Clutch-Electric, PTO
8	3212-11	1	Screw-HH
9	32144-109	3	Screw-Thd
10	322-10	1	Screw-HH
11	104-8300	2	Nut-HF, NI
14	110-9981	2	Washer-Plain
15	3234-47	1	Screw-HHF
17	117-5331	1	Shield-Heat
18	46-8560	2	Screw-HHFTF


● Not serviced separately

■ Obtain parts from www.briggsandstratton.com

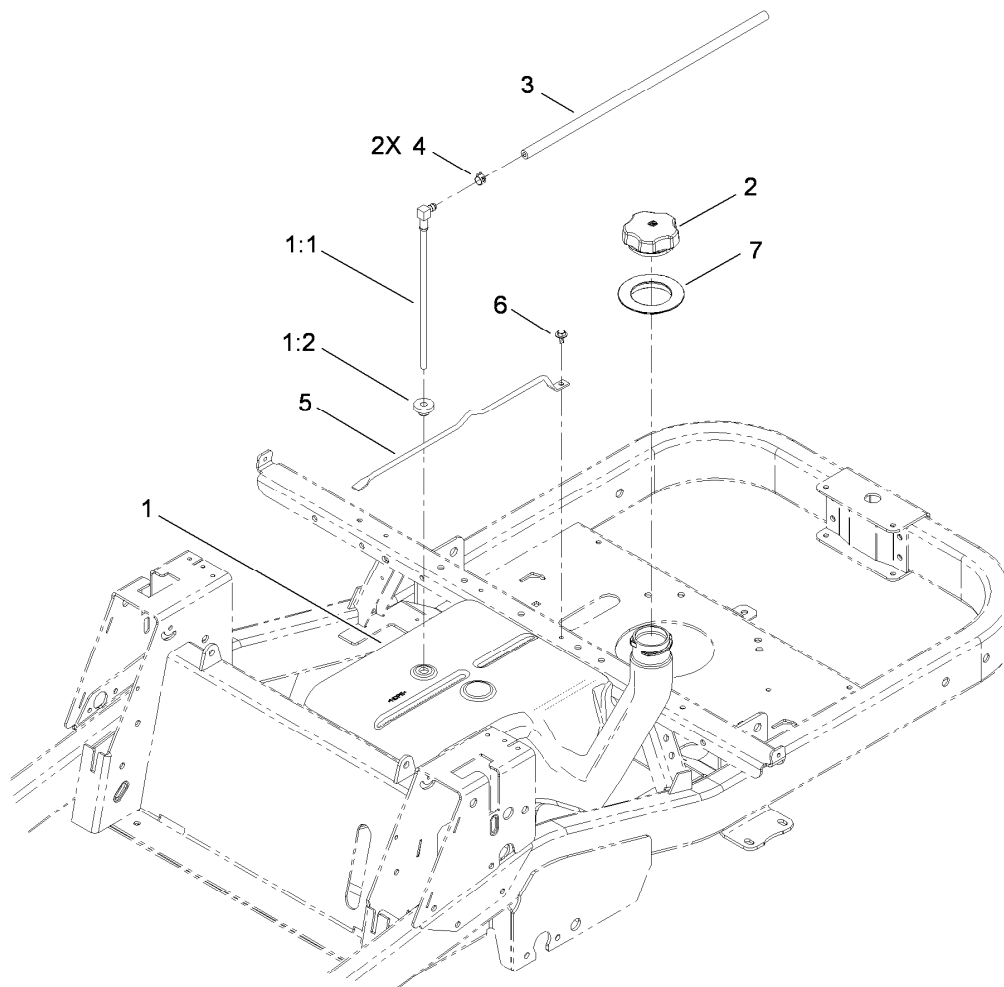


Fuel Delivery System

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-9620	1	5 Gallon Fuel Tank ASM
1:1	115-2564	1	Tube-Drop
1:2	46-6560	1	Bushing
2	115-9601	1	Cap-Fuel, Vented
3	109-0299	1	Hose-Fuel
4	2412-98	2	Clamp-Hose
5	115-2620	1	Rod-Tank, Gas
6	46-8560	1	Screw-HHFTF
7	117-1298	1	Seal-Tank

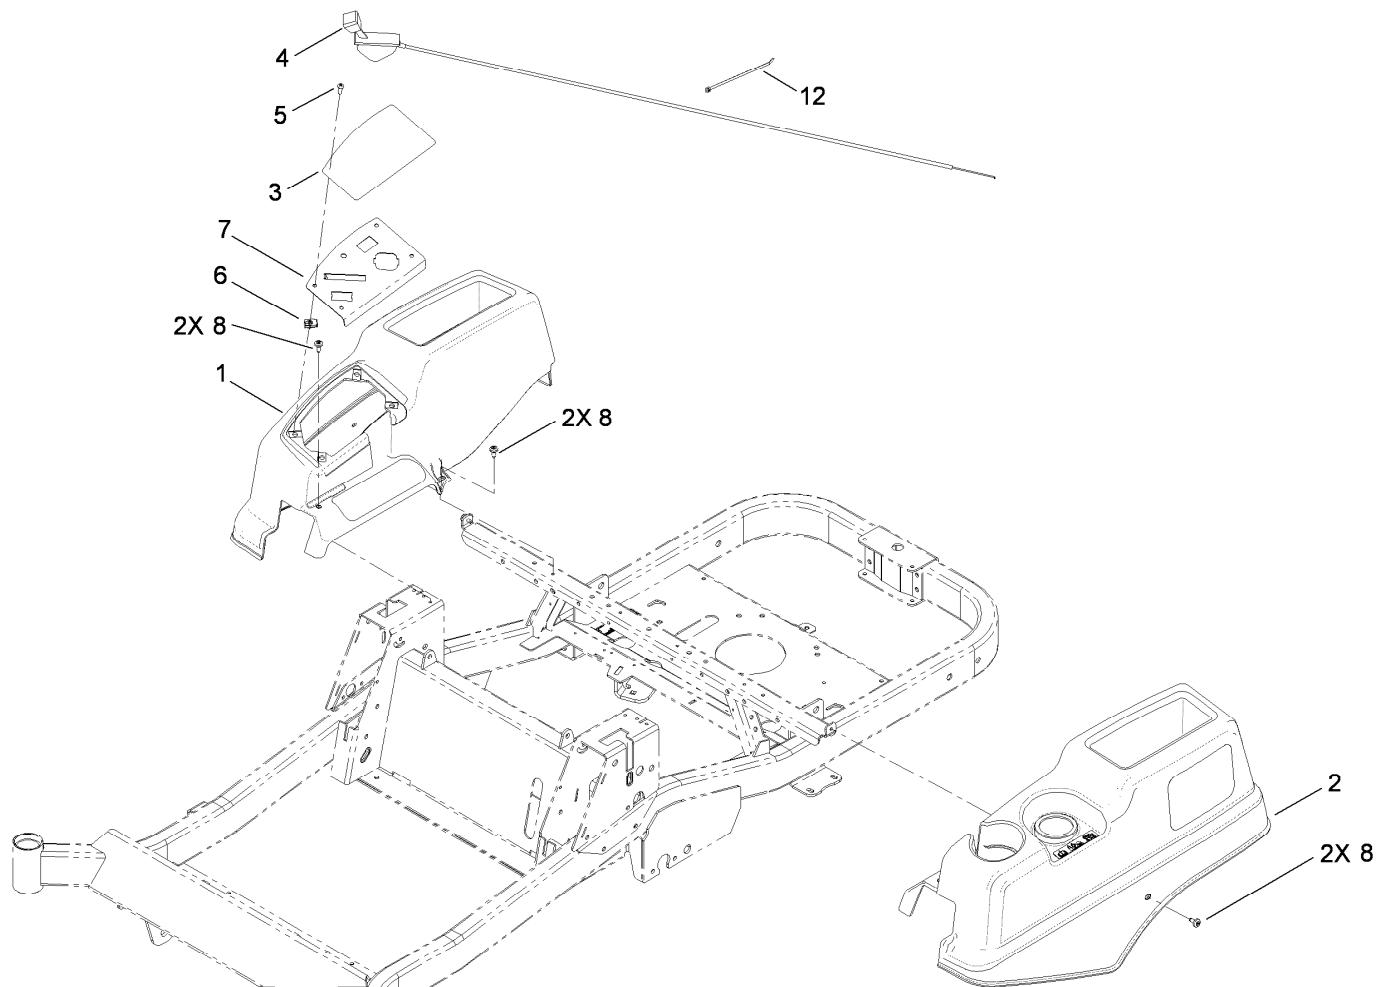

Body and Styling Assembly


Ref.	Part Number	Qty.	Description
1	115-2581	1	Pod-RH
2	115-2582	1	Pod-LH
3	115-9631	1	Decal-Panel, Control
4	117-1196	1	Cable-Throttle
5	3258-166	4	Screw-PRH
6	107069	4	Clip
7	115-2591-03	1	Panel-Control
8	112-4004	6	Screw-Shoulder
12	614249	1	Tie-Cable

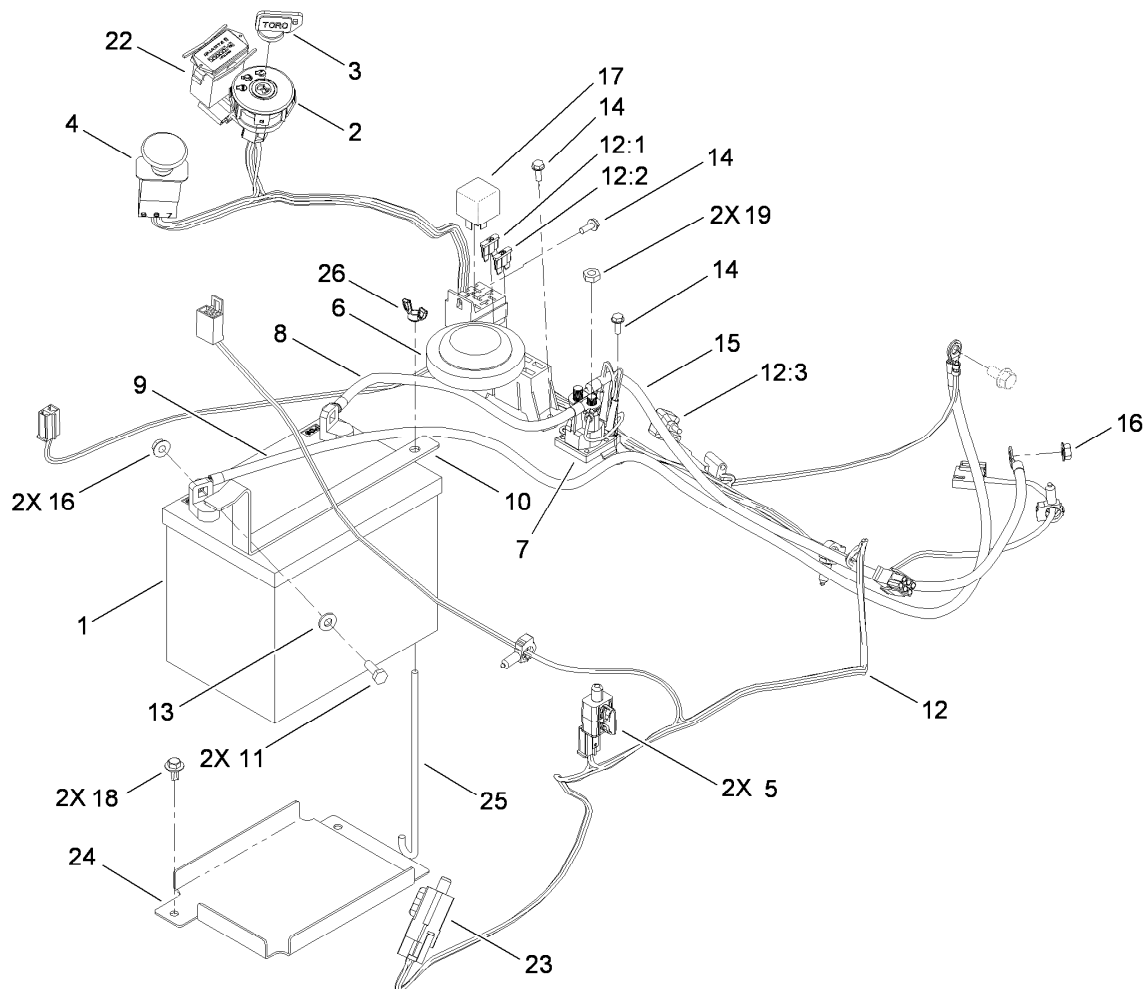

Electrical Assembly


Ref.	Part Number	Qty.	Description
1	104-2493	1	Battery
2	116-0050	1	Switch-Ignition
3	63-8360	1	Key-Ignition
4	93-9998	1	Switch-PTO
5	110-6765	2	Switch
6	100-3524	1	Switch-Seat
7	117-1197	1	Solenoid
8	117-5342	1	Cable-Battery, Positive
9	106-8946	1	Cable-Battery, Negative
10	117-1279-03	1	Strap-Battery
11	321-4	2	Screw-HH
12	117-7243	1	Harness-Wire
12:1	109103	1	Fuse-Blade, 30 Amp
12:2	109102	1	Fuse-Blade, 25 Amp

Ref.	Part Number	Qty.	Description
12:3	100-4918	1	Diode
13	3256-22	2	Washer-Flat
14	32144-1	5	Screw-Taptite
15	92-6989	1	Wire-21 Inch
16	32128-33	3	Nut-HF
17	98-7249	1	Relay
18	46-8560	2	Screw-HHFTF
19	3220-2	2	Nut-Jam
22	1-513374	1	Meter-Hour
23	99-7408	1	Switch-Reverse
24	117-1283-03	1	Tray-Battery
25	1-633651	1	Bolt-Holddown
26	1-543792	1	Wingnut

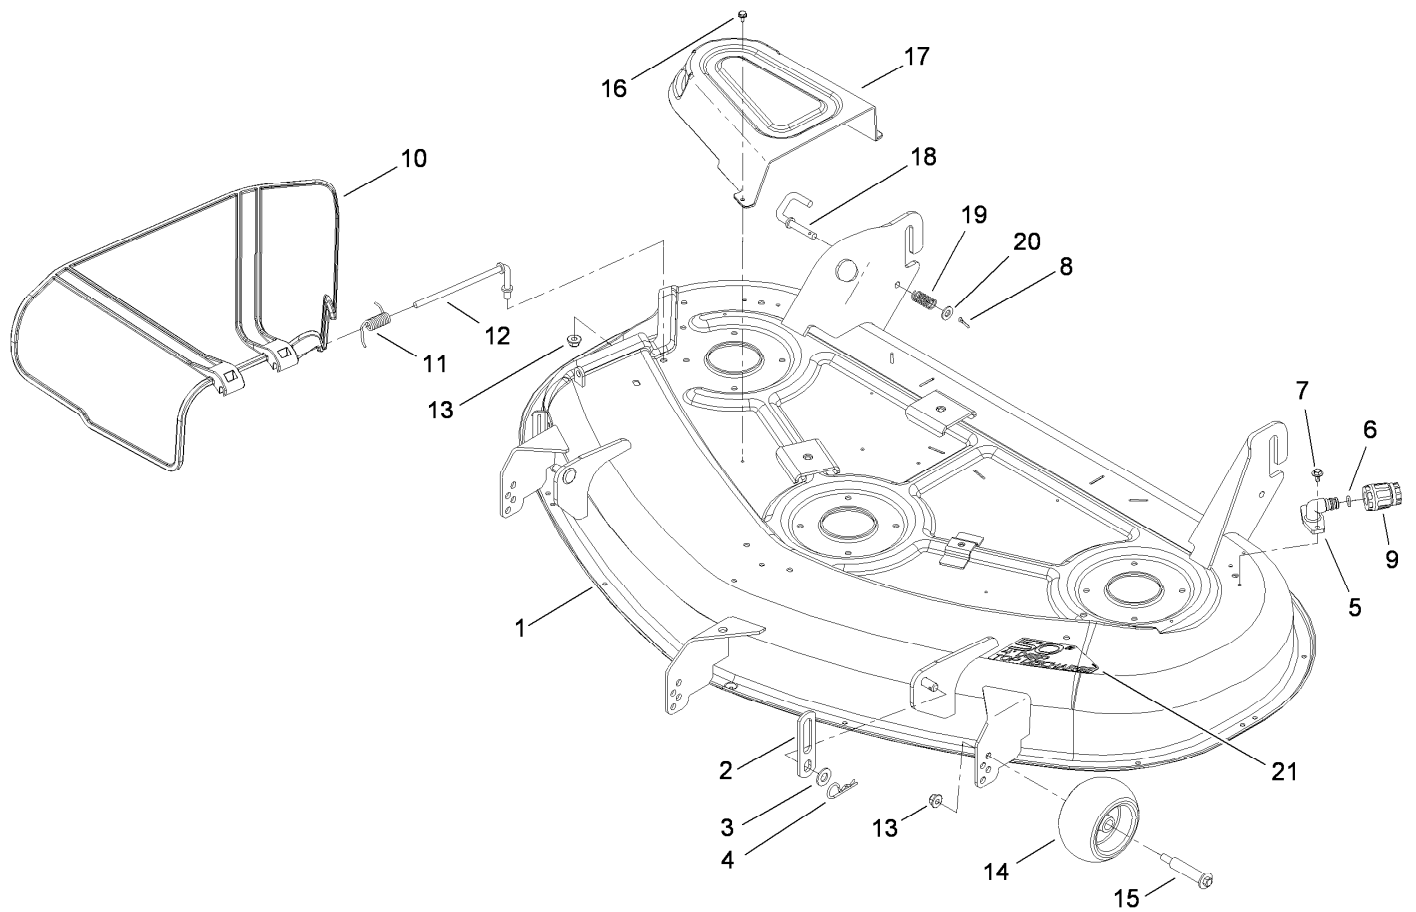


50 Inch Deck Assembly

Ref.	Part Number	Qty.	Description
1	117-5373	1	50 Inch Deck ASM
2	115-2622	2	Link-Lift
3	3256-26	2	Washer-Flat
4	1-806005	2	Pin-Cotter
5	95-2747	2	Fitting-Washout
6	46-6290	2	O-Ring
7	46-8560	4	Screw-HHFTF
8	3272-10	2	Pin-Cotter
9	95-3270	1	Connector-Hose
10	108-7895	1	Deflector
11	110-6694	1	Spring-Torsion
12	112-3950	1	Rod-Pivot
13	104-8301	4	Nut-HF, NI
14	1-603299	3	Roller-Scalp, Anti
15	112-3977	3	Bolt-Shoulder
16	32104-76	6	Screw-HWHTF
17	108-7890	2	Cover-Belt
18	115-2470	2	Pin-Latch
19	101853	2	Spring-Compression
20	3256-24	2	Washer-Flat
21	117-5304	1	Decal-50 Inch

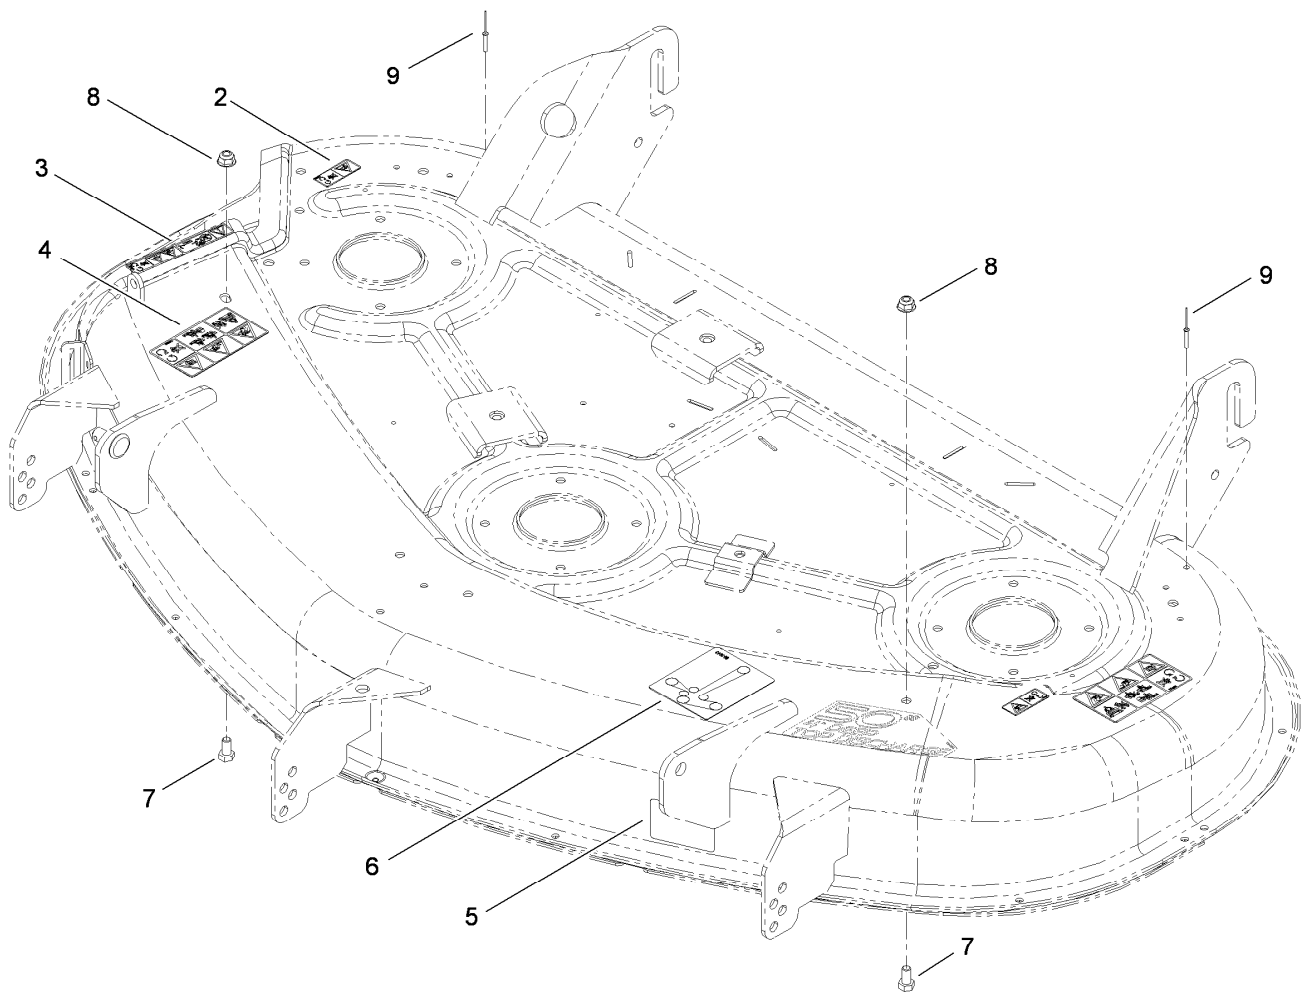

50 Inch Deck Decal Assembly No. 117-5373

Ref.	Part Number	Qty.	Description
2	114-1606	2	Decal-Danger
3	93-7009	1	Decal-Danger
4	110-6691	2	Decal-Danger
5	112-9840	1	Decal-Scalp, Anti
6	99-3943	1	Decal-Routing, Belt
7	322-2	2	Screw-HH
8	104-8300	2	Nut-HF, NI
9	3290-282	2	Rivet-Blind

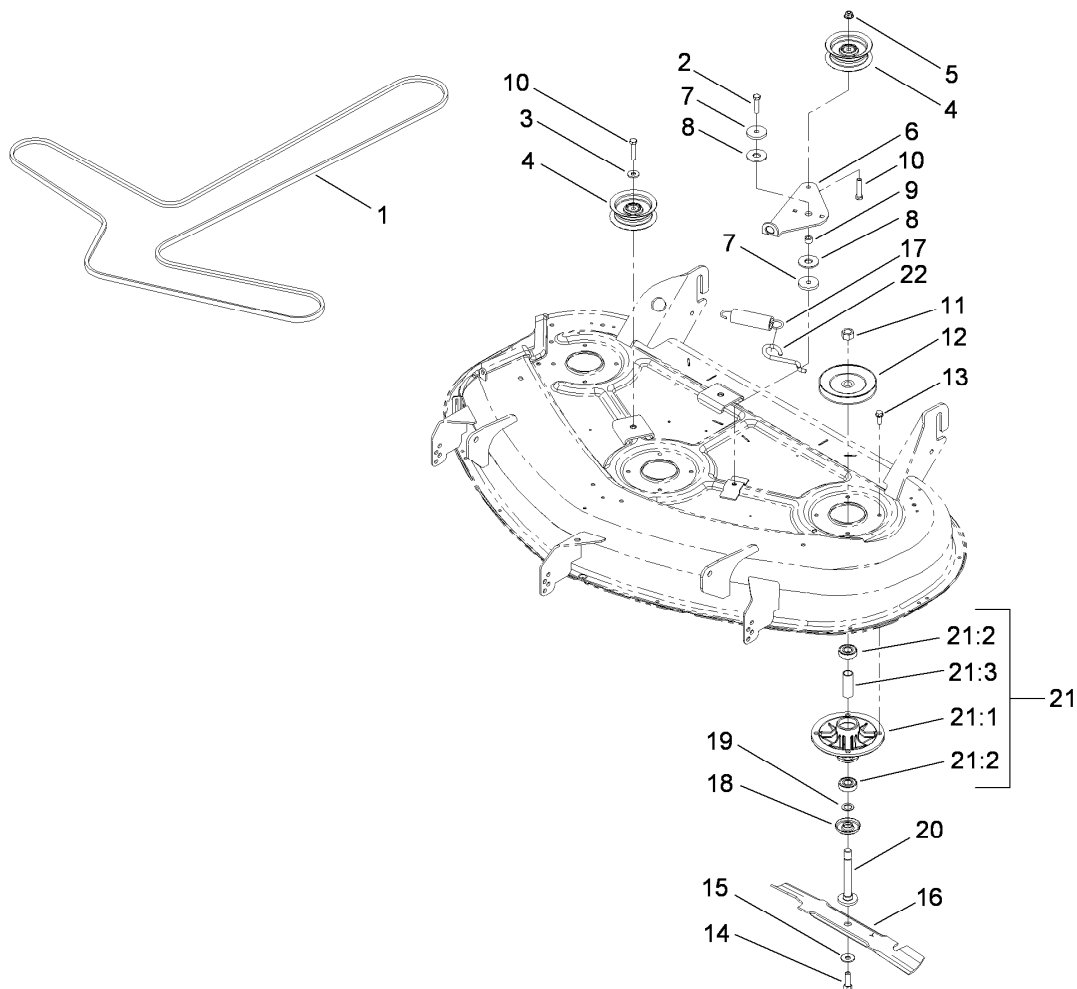

50 Inch Deck Spindle and Blade Assembly

Ref.	Part Number	Qty.	Description
1	115-2649	1	V-Belt
2	323-8	1	Screw-HH
3	80-6990	2	Washer-Hardened
4	106-2175	3	Pulley-Idler, Flat
5	104-8301	1	Nut-HF, NI
6	114-8540	1	Arm-Idler
7	110-9981	2	Washer-Plain
8	114-0463	2	Washer-Friction, Composite
9	115-4986	1	Spacer
10	323-9	3	Screw-HH
11	3219-6	3	Nut-Hex
12	110-6865	3	Pulley
13	32144-41	12	Screw-Taptite

Ref.	Part Number	Qty.	Description
14	26-0671	3	Screw-HH
15	3290-465	3	Washer-Belleville
16	117-1156-03	3	Blade-Hi-Flo, 17.50 Inch
17	1-603414	1	Spring-Extension
18	80-4360	3	Shield-Bearing
19	80-4380	3	Spacer
20	117-1192	3	Shaft-Spindle
21	107-9161	3	Spindle ASM
21:1	88-4510	1	Housing-Spindle
21:2	100-1048	2	Bearing-Ball
21:3	62-3661	1	Spacer
22	112-3973	1	Hook-Return, Spring

Attachments and Accessories

For 74820 TITAN Z5000 Zero-Turn-Radius Riding Mower

Product Name	Model/Part
Deck Ring Kit	114-1608
Striping Kit	114-8545
50in Finishing Kit, Bagger	117-5310
50in Recycler Kit.....	117-5312
Hitch Kit	117-5315
Step Kit	117-5316
Light Kit.....	117-5317
Sunshade	117-5318
Transport Seat Hold Down Kit.....	117-7251
Bagger	79326



Count on it.