



Form No. 3361-792 Rev C

Count on it.

Parts Catalog

TimeCutter® ZD420T Riding Mower

Model No. 74437—Serial No. 290000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

 
Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame Assembly	4
Seat Assembly	5
Control Assembly	6
Drive Assembly	7
LH Hydro Transaxle Assembly No. 112-4760	8
RH Hydro Transaxle Assembly No. 112-4761	10
Styling Assembly	12
Bagging Assembly	13
42 Inch Top Deck Assembly	14
42 Inch Bottom Deck Assembly	15
Spindle Assembly No. 107-9161	16
Engine and Fuel Tank Assembly	17
Electrical Assembly	18
Cylinder and Crankcase Assembly Kawasaki FH541V-CS50	19
Piston and Crankshaft Assembly Kawasaki FH541V-CS50	20
Valve and Camshaft Assembly Kawasaki FH541V-CS50	21
Lubrication Equipment Assembly Kawasaki FH541V-CS50	22
Cooling Equipment Assembly Kawasaki FH541V-CS50	23
Electric Equipment Assembly Kawasaki FH541V-CS50	24
Control Equipment Assembly Kawasaki FH541V-CS50	25
Carburetor Assembly Kawasaki FH541V-CS50	26
Air Filter and Muffler Assembly Kawasaki FH541V-CS50	27
Fuel Tank and Valve Assembly Kawasaki FH541V-CS50	28
Starter Assembly Kawasaki FH541V-CS50	29
Label Assembly Kawasaki FH541V-CS50	30
Attachments and Accessories	31

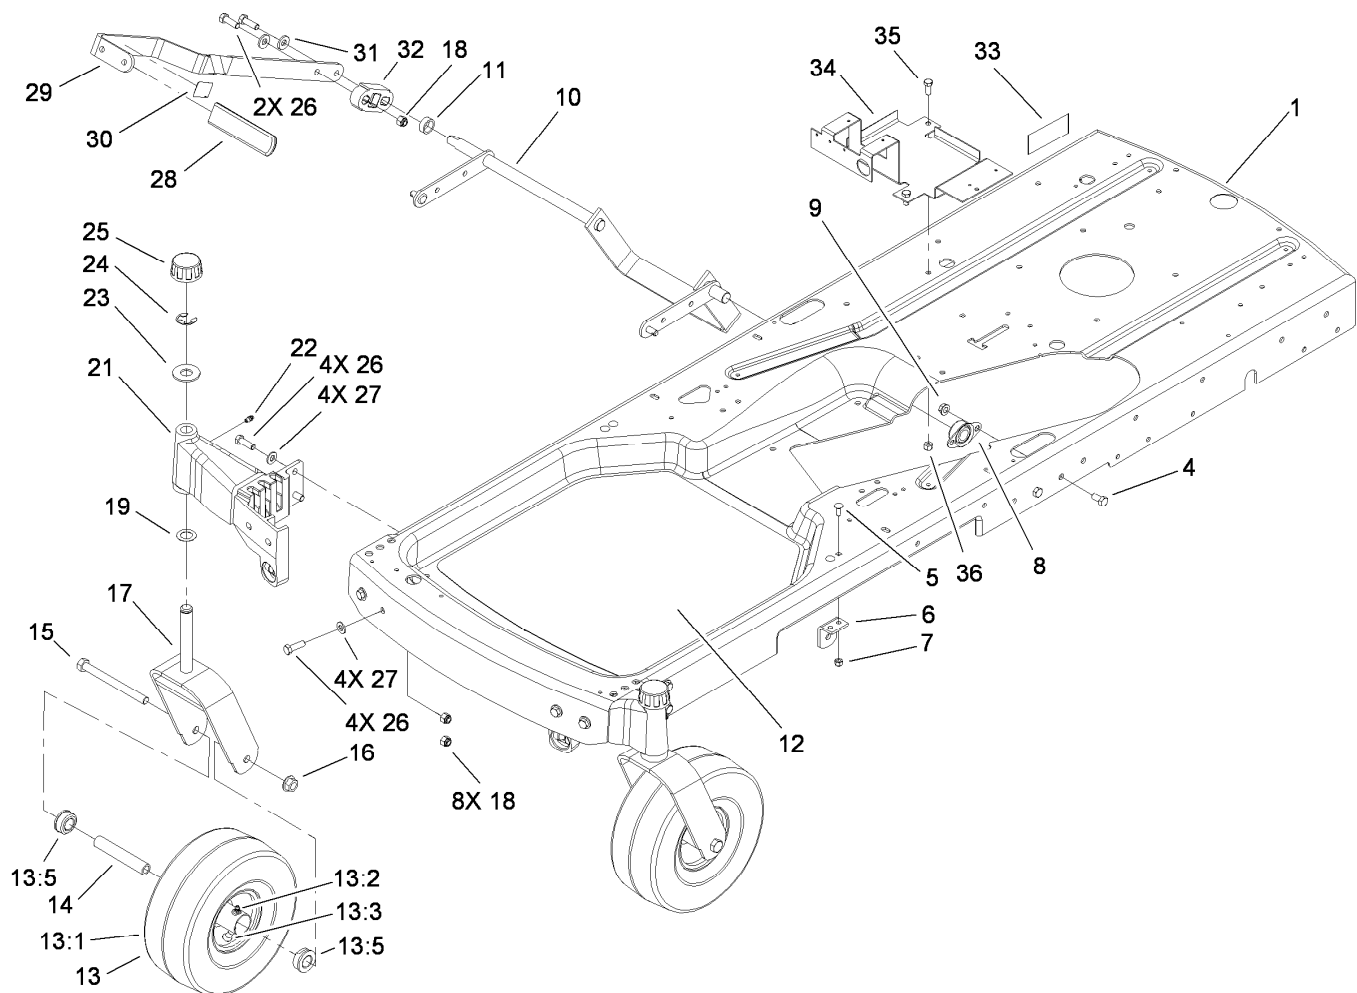


Frame Assembly

Ref.	Part Number	Qty.	Description
1	107-8999-01	1	Frame
4	323-4	4	Screw-HH
5	3229-1	4	Bolt-CARR
6	105-3439	2	Bracket-Lift
7	3296-42	4	Nut-Lock, NI
8	1-633102	2	Bearing-Flange, Side
9	3290-357	4	Nut-HHF, Whiz
10	114-3601-03	1	Lift Arm ASM
11	106-2222	1	Spacer
12	105-3460	1	Pad-Antiskid
13	105-3471	2	Front Wheel And Tire ASM
13:1	105-1943	1	Tire
13:2	302-5	1	Fitting-Grease
13:3	232-27	1	Stem-Valve
13:5	114-1640	2	Bushing-Flange
13:99	93-4244	1	Tube-Inner (W/Valve) ●
14	104-3667	2	Bushing-Spanner
15	325-22	2	Screw-HH
16	32128-23	2	Nut-HF
17	110-6581-01	2	Caster Fork ASM


Ref.	Part Number	Qty.	Description
18	3296-39	9	Nut-Lock, NI
19	3-6498	2	Washer-Thrust
20	105-6986-01	1	Caster-LH ●
21	105-6985-01	1	Caster-RH
22	302-5	2	Fitting-Grease
23	28-2480	2	Washer-Plain
24	32151-103	2	Ring-Retaining, EXT
25	61-9780	2	Cap-Hub
26	323-18	10	Screw-HH
27	3256-24	8	Washer-Flat
28	105-3450	1	Grip-Lever, Lift
29	108-2317-03	1	Lever-Lift
30	106-8743	1	Decal-HOC
31	98-5975	2	Washer-Belleville
32	106-2211	1	Block-Lift
33	106-7043	1	Decal-Transport
34	114-3665-03	1	Holder-Battery
35	322-3	2	Screw-HH
36	3296-29	2	Nut-Lock, NI

 ● Not illustrated

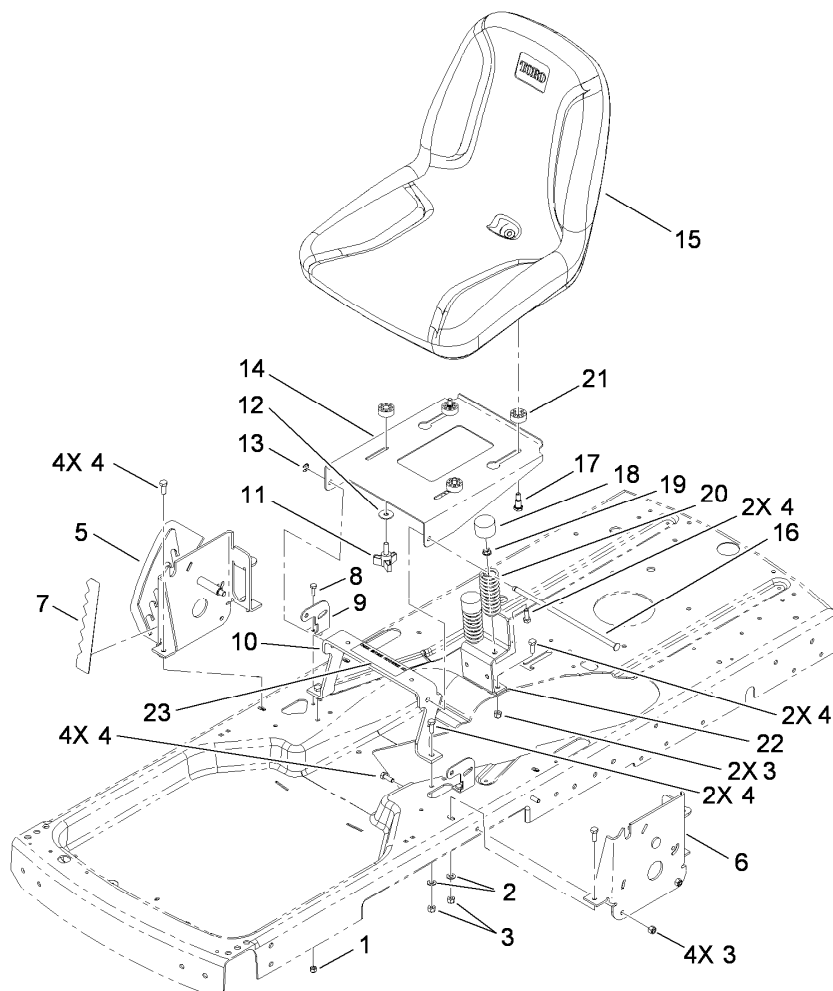

Seat Assembly


Ref.	Part Number	Qty.	Description
1	3296-42	4	Nut-Lock, NI
2	3256-23	6	Washer-Plain
3	3296-29	12	Nut-Lock, NI
4	322-4	14	Screw-HH
5	106-2158-03	1	RH Plate ASM
6	106-2159-03	1	LH Plate ASM
7	106-2223	1	Decal-HOC
8	321-4	4	Screw-HH
9	106-2180	2	Bracket-Bellcrank
10	114-3664-03	1	Brace-Seat
11	106-2240	2	Knob
12	5-4460	2	Washer-Pivot
13	105-7004	1	E-Ring
14	114-9436-03	1	Bracket-Seat
15	108-2329	1	Seat
16	105-6955	1	Pin-Pivot
17	613529	2	Screw-Shoulder
18	701178	2	Cap-Protector
19	32128-25	2	Nut-HF
20	92-7054	2	Spring-Compression
21	107-4902	4	Spacer-Nylon
22	114-9418-03	1	Bracket-Stop, Seat
23	112-7563	1	Decal-Service, CE

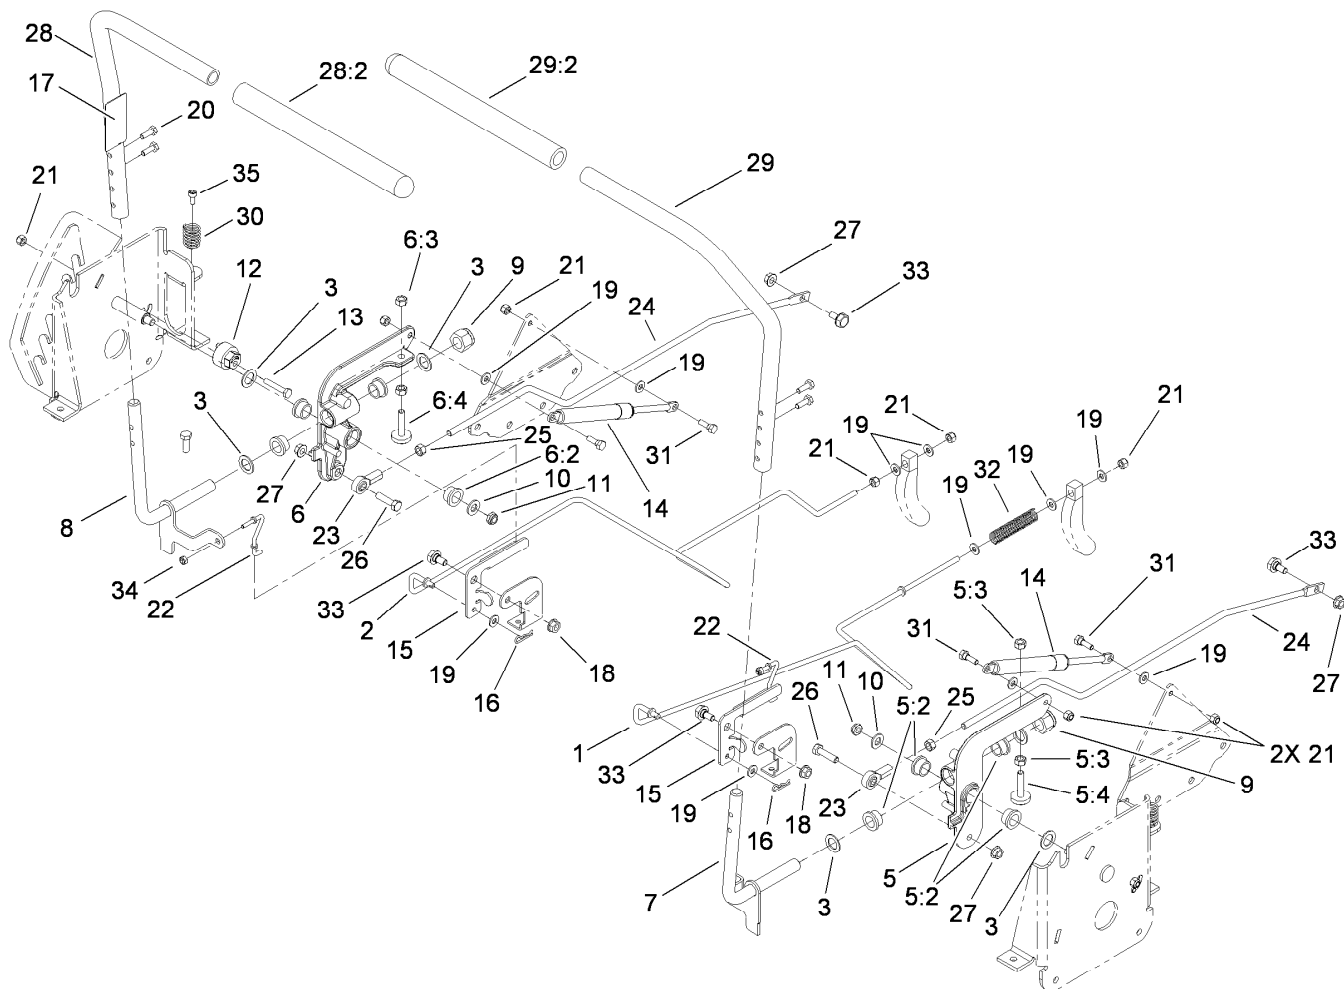 

Control Assembly

Ref.	Part Number	Qty.	Description
1	108-8792	1	Rod-Brake, LH
2	110-1041	1	Rod-Brake, RH
3	105-3481	6	Washer-Thrust
5	110-1869	1	LH Activator Arm ASM
5:2	105-3455	4	Bushing
5:3	3217-6	2	Nut-Hex
5:4	105-3486	1	Stop-Adjustment
6	110-1870	1	RH Activator Arm ASM
6:2	105-3455	4	Bushing
6:3	3217-6	2	Nut-Hex
6:4	105-3486	1	Stop-Adjustment
7	105-3488	1	LH Pivot Shaft ASM
8	105-3487	1	RH Pivot Shaft ASM
9	3296-53	2	Nut-Lock, NI
10	3256-24	2	Washer-Flat
11	3296-59	2	Nut-Lock, NI
12	107-4874	2	Eccentric
13	321-9	2	Screw-HH
14	103-2913	2	Damper-Control, Motion
15	106-2181	2	Bellcrank
16	1-806003	2	Pin-Cotter

Ref.	Part Number	Qty.	Description
17	106-8742	2	Decal
18	32128-25	2	Nut-HF
19	3256-22	11	Washer-Flat
20	321-4	4	Screw-HH
21	3296-42	9	Nut-Lock, NI
22	106-2179	2	Link-Brake
23	1-543017	2	Balljoint-RH
24	105-7048	2	Rod-Hydro
25	3219-2	2	Nut-Hex
26	322-6	2	Screw-HH
27	32128-20	4	Nut-HF
28	108-8746	1	RH Control Handle ASM
28:2	1-633257	1	Grip-Control, Motion
29	108-8747	1	LH Control Handle ASM
29:2	1-633257	1	Grip-Control, Motion
30	105-3469	2	Spring-Compression
31	106-2214	4	Bolt-Shoulder
32	105-3465	1	Spring-Compression
33	37-8771	4	Bolt-Shoulder, HF
34	3296-2	2	Nut-Lock, NI
35	3274-52	2	Screw-HSH

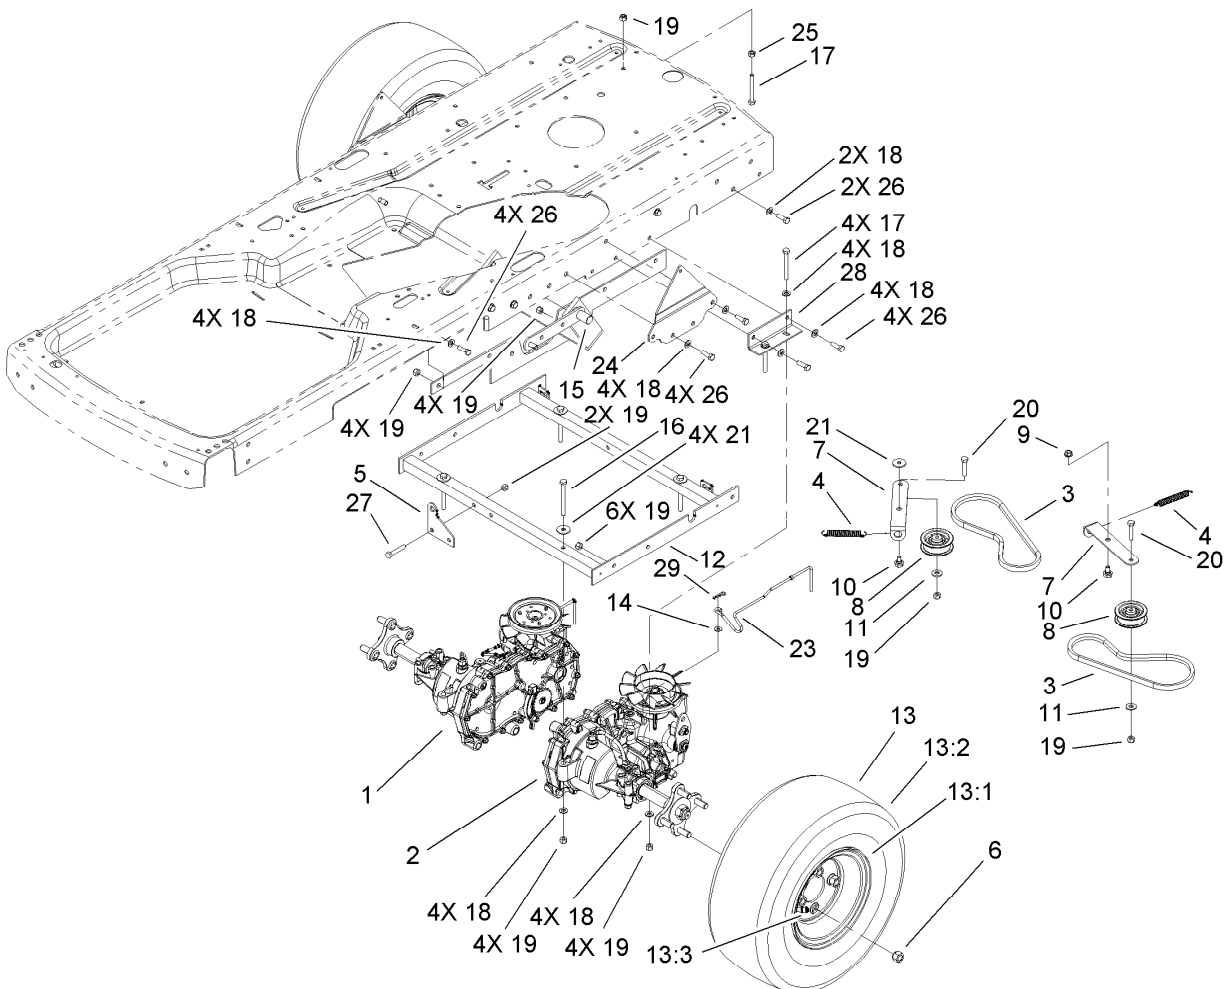


Drive Assembly

Ref.	Part Number	Qty.	Description
1	112-4761	1	Transaxle-Hydro, RH
2	112-4760	1	Transaxle-Hydro, LH
3	106-2174	2	V-Belt
4	95-3805	2	Spring
5	105-7049	1	Bracket-Spring
6	242-50	8	Nut-Lug
7	105-7047	2	Arm-Idler
8	106-2176	2	Pulley-Idler
9	32128-25	1	Nut-HF
10	37-8771	2	Bolt-Shoulder, HF
11	3256-3	2	Washer-Flat
12	108-8733-03	1	Hydro Frame ASM
13	106-7004	2	Wheel And Tire ASM
13:1	242-76	1	Rim
13:2	106-7006	1	Tire
13:3	232-27	1	Stem-Valve
13:99	107-2491	1	Tube-Tire ●

Ref.	Part Number	Qty.	Description
14	3256-1	2	Washer-Flat
15	107-8970-03	1	Brace-Frame, Left Side
16	322-20	4	Screw-HH
17	322-13	5	Screw-HH
18	3256-23	26	Washer-Plain
19	3296-29	27	Nut-Lock, NI
20	322-7	2	Screw-HH
21	5-4460	5	Washer-Pivot
22	107-2464	1	Arm-Bypass, RH ●
23	107-2463	1	Arm-Bypass, LH
24	112-4754-03	2	Anchor-Damper
25	3217-6	1	Nut-Hex
26	322-5	14	Screw-HH
27	322-9	2	Screw-HH
28	105-7039-03	2	Support-Hydro
29	1-806003	2	Pin-Cotter

 ● Not illustrated

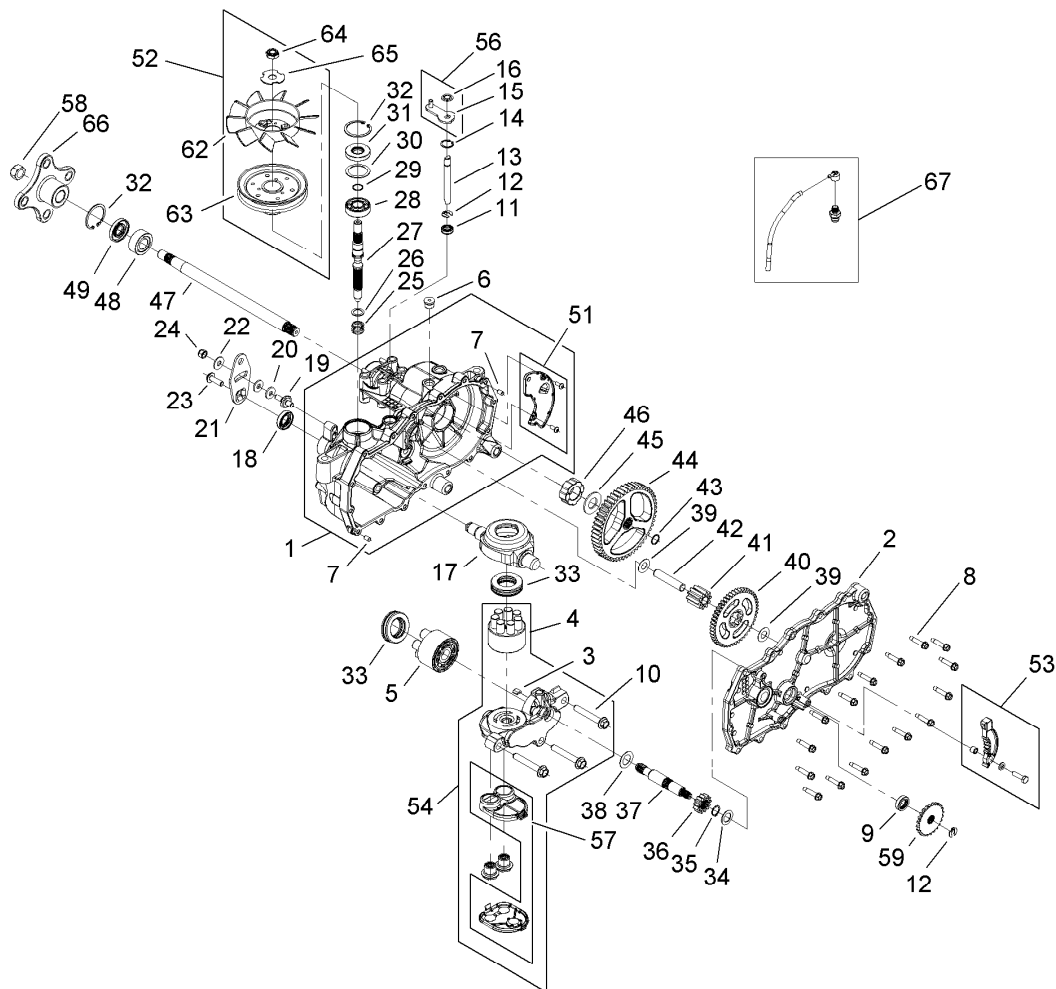


LH Hydro Transaxle Assembly No. 112-4760

Ref.	Part Number	Qty.	Description
1	106-8695	1	Main Housing ASM
2	106-8696	1	Side ASM
3	110-8560	1	Plate-Bypass
4	110-8561	1	Pump Block ASM
5	103-2666	1	Cylinder Block Kit
6	104-2189	1	Plug-Thread, Straight
7	104-2170	2	Pin
8	104-5305	16	Screw-HHF
9	112-9851	1	Brake Seal Kit
10	94-6926	3	Bolt
11	106-8676	1	Seal-Lip
12	106-8677	2	Ring-Retaining, External
13	106-8678	1	Rod-Bypass
14	106-8679	1	Ring-Retaining, Internal
15	107-2490	1	Arm-Bypass
16	106-8681	1	Ring-Retaining, External
17	104-5304	1	Swashplate-Trunnion
18	104-5313	1	Seal-Lip
19	104-2116	1	Stud
20	112-9853	1	Puck-Friction
21	106-8747	1	Arm-Control
22	5-4460	1	Washer-Pivot
23	107-2488	1	Screw
24	105-1872	1	Nut
25	94-1936	1	Spring-Block

Ref.	Part Number	Qty.	Description
26	94-1937	1	Washer-Thrust
27	104-5306	1	Shaft-Input
28	104-5311	1	Bearing-Ball
29	104-5307	1	Ring-Retaining
30	104-5308	1	Spacer
31	104-5310	1	Seal-Lip
32	104-5309	2	Ring-Retaining
33	94-6922	2	Bearing-Thrust
34	104-5339	1	Washer-Flat
35	104-5340	1	Ring-Retaining
36	104-5316	1	Gear-Pinion, 13T
37	106-8683	1	Shaft-Motor
38	104-5360	1	Washer
39	94-1933	2	Washer
40	104-5317	1	Gear-10T/48T
41	104-5318	1	Gear-Jackshaft, 10T
42	104-5329	1	Pin-Jackshaft
43	112-9854	1	Ring-Spiral, Retaining
44	112-9855	1	Gear-52T, Bull
45	112-9856	1	Washer
46	112-9857	1	Bearing-Sleeve
47	112-9858	1	Shaft-Axle
48	112-9859	1	Bushing-Axle
49	112-9860	1	Seal-Lip
50	106-8686	1	Seal Kit ●

● Not illustrated

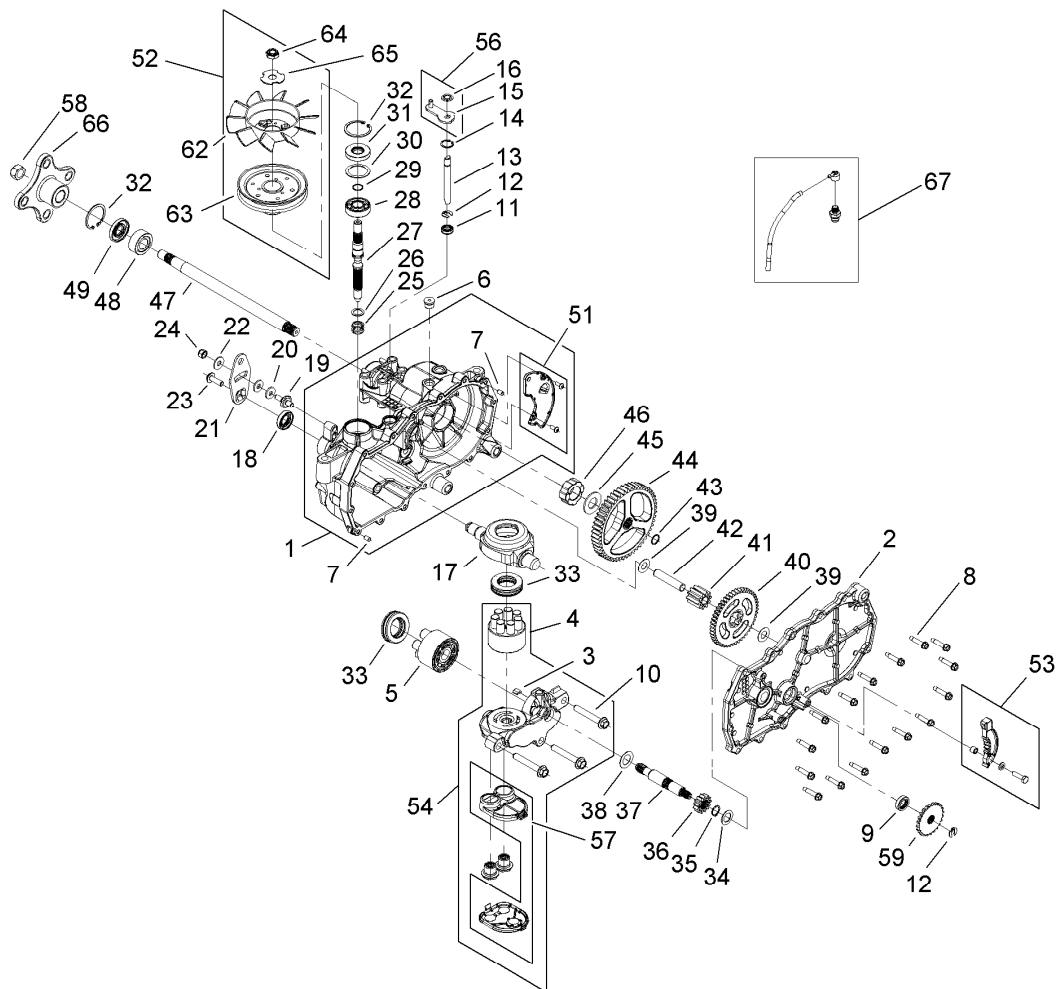


LH Hydro Transaxle Assembly No. 112-4760 (continued)

Ref.	Part Number	Qty.	Description
51	106-8697	1	Expansion Plate Kit
52	106-8698	1	Fan Pulley Kit
53	106-8688	1	Brake Arm Kit
54	112-9861	1	Center Section Filter Kit
55	104-2147	1	Sealant ●
56	107-2489	1	Bypass Arm Kit
57	106-8693	1	Filter Kit
58	110-8563	1	Nut-Lock, HH
59	106-8694	1	Disc-Brake, Cog

Ref.	Part Number	Qty.	Description
60	112-9864	1	Hose ●
61	108-8562	1	Pinch-Clamp, Single Ear ●
62	110-8566	1	Fan-6 Inch, 10 Blade
63	104-1754	1	Pulley
64	105-1875	1	Nut-Lock
65	107-9122	1	Washer-Slotted
66	105-1894	1	Hub ASM
67	112-9866	1	Breather Kit

● Not illustrated

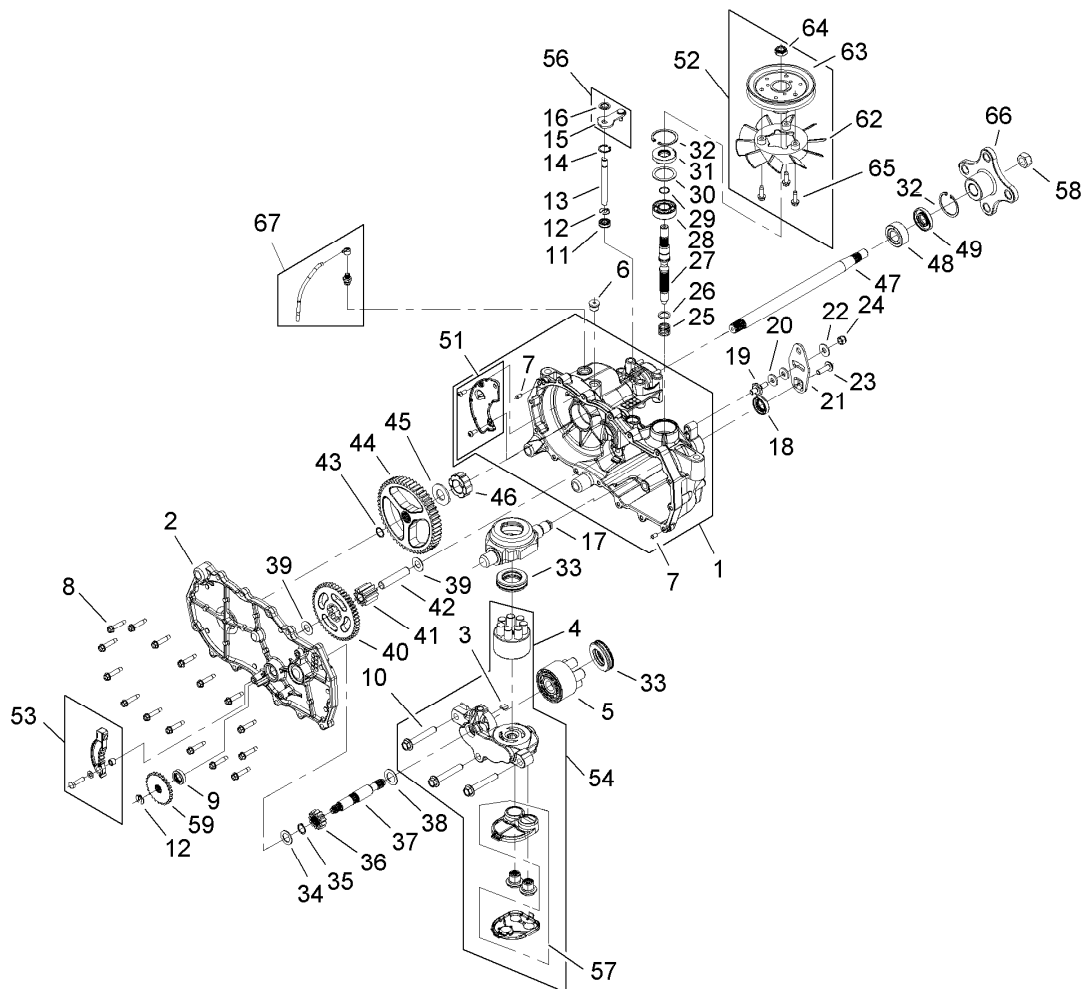


RH Hydro Transaxle Assembly No. 112-4761

Ref.	Part Number	Qty.	Description
1	106-8674	1	Main Housing ASM
2	106-8675	1	Side ASM
3	110-8560	1	Plate-Bypass
4	110-8561	1	Pump Block ASM
5	103-2666	1	Cylinder Block Kit
6	104-2189	1	Plug-Thread, Straight
7	104-2170	2	Pin
8	104-5305	16	Screw-HHF
9	112-9851	1	Brake Seal Kit
10	94-6926	3	Bolt
11	106-8676	1	Seal-Lip
12	106-8677	2	Ring-Retaining, External
13	106-8678	1	Rod-Bypass
14	106-8679	1	Ring-Retaining, Internal
15	112-9852	1	Arm-Bypass
16	106-8681	1	Ring-Retaining, External
17	104-5304	1	Swashplate-Trunnion
18	104-5313	1	Seal-Lip
19	104-2116	1	Stud
20	112-9853	1	Puck-Friction
21	106-8747	1	Arm-Control
22	5-4460	1	Washer-Pivot
23	107-2488	1	Screw
24	105-1872	1	Nut
25	94-1936	1	Spring-Block

Ref.	Part Number	Qty.	Description
26	94-1937	1	Washer-Thrust
27	104-5306	1	Shaft-Input
28	104-5311	1	Bearing-Ball
29	104-5307	1	Ring-Retaining
30	104-5308	1	Spacer
31	104-5310	1	Seal-Lip
32	104-5309	2	Ring-Retaining
33	94-6922	2	Bearing-Thrust
34	104-5339	1	Washer-Flat
35	104-5340	1	Ring-Retaining
36	104-5316	1	Gear-Pinion, 13T
37	106-8683	1	Shaft-Motor
38	104-5360	1	Washer
39	94-1933	1	Washer
40	104-5317	1	Gear-10T/48T
41	104-5318	1	Gear-Jackshaft, 10T
42	104-5329	1	Pin-Jackshaft
43	112-9854	1	Ring-Spiral, Retaining
44	112-9855	1	Gear-52T, Bull
45	112-9856	1	Washer
46	112-9857	1	Bearing-Sleeve
47	112-9858	1	Shaft-Axle
48	112-9859	1	Bushing-Axle
49	112-9860	1	Seal-Lip
50	106-8686	1	Seal Kit ●

● Not illustrated

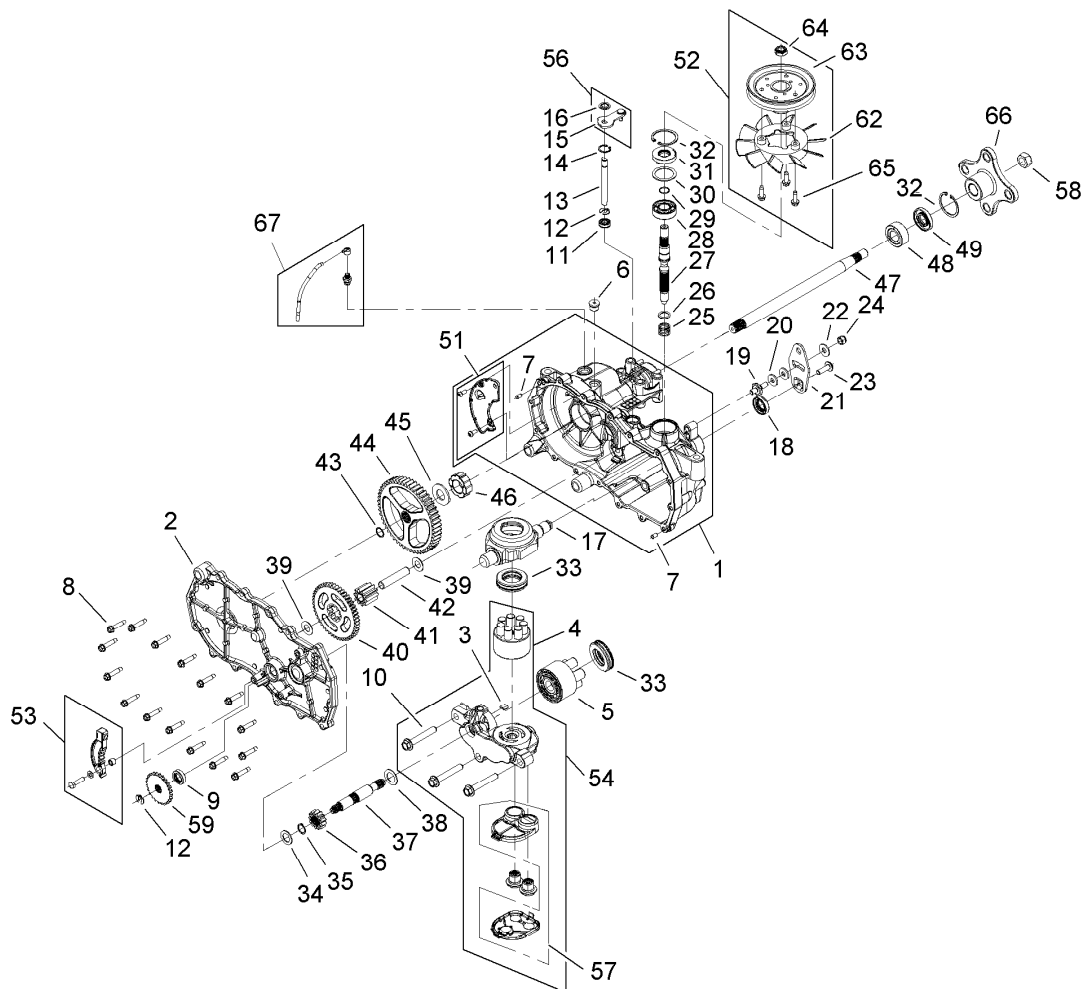


RH Hydro Transaxle Assembly No. 112-4761 (continued)

Ref.	Part Number	Qty.	Description
51	106-8687	1	Expansion Plate Kit
52	105-1928	1	Fan Pulley Kit
53	106-8688	1	Brake Arm Kit
54	112-9862	1	Center Section Filter Kit
55	104-2147	1	Sealant ●
56	107-2489	1	Bypass Arm Kit
57	106-8693	1	Filter Kit
58	105-1895	1	Nut
59	106-8694	1	Disc-Brake, Cog

Ref.	Part Number	Qty.	Description
60	112-9865	1	Hose ●
61	108-8562	1	Pinch-Clamp, Single Ear ●
62	105-1927	1	Fan
63	105-1896	1	Pulley
64	105-1875	1	Nut-Lock
65	104-2120	3	Screw
66	105-1894	1	Hub ASM
67	112-9866	1	Breather Kit

 
● Not illustrated

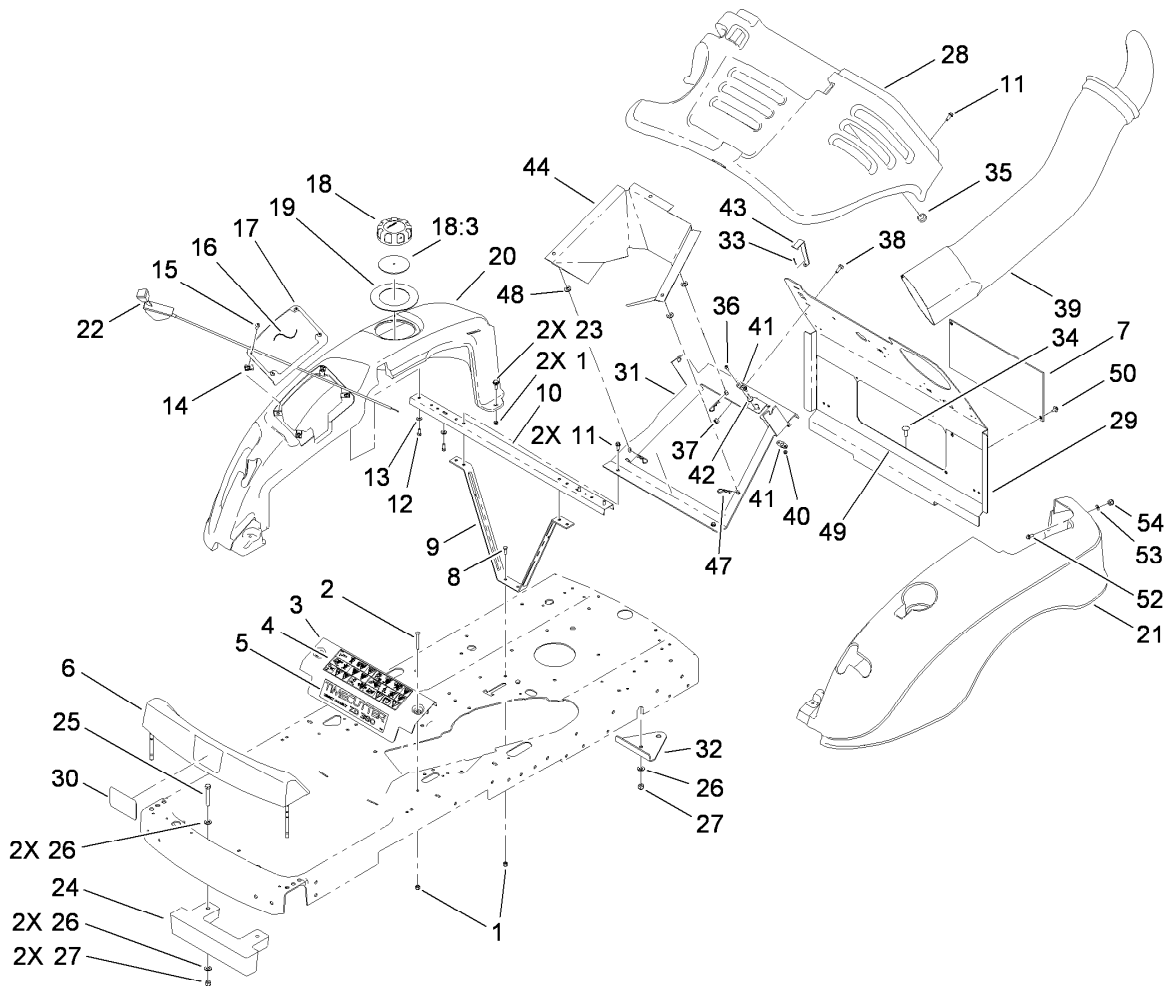

Styling Assembly


Ref.	Part Number	Qty.	Description
1	3296-42	5	Nut-Lock, NI
2	3229-7	2	Screw-CARR
3	106-2164-03	1	Bracket-Support, Front
4	110-6567	1	Decal-Danger
5	108-8765	1	Decal
6	105-6965	1	Footrest ASM
7	114-3699	1	Access Door ASM
8	321-4	2	Screw-HH
9	106-6994-03	1	Brace ASM
10	108-2313-03	1	Channel-Cross
11	32144-44	4	Screw-HWH, Thread Roll
12	46-8090	4	Screw-Plastite
13	3256-22	4	Washer-Flat
14	107069	4	Clip
15	3258-166	4	Screw-PRH
16	106-2224	1	Decal-Control
17	106-2167-03	1	Panel-Control
18	88-3980	1	Gas Cap ASM
18:3	88-4010	1	Gasket-Cap, Gas
19	106-7042	1	Seal-Rubber
20	106-2161	1	Cover-Side, RH
21	114-9426	1	Cover-Side,LH
22	104-8081	1	Cable-Throttle
23	11-9030	1	Screw-Shoulder
24	105-6972-03	1	Weight-Bagger
25	323-12	2	Screw-HH

Ref.	Part Number	Qty.	Description
26	3256-24	5	Washer-Flat
27	3296-39	3	Nut-Lock, NI
28	114-3613	1	Cover-Engine
29	114-3657-03	1	Shield-Heat, Bag
30	105-6971	1	Decal
31	112-7565-03	1	Offset Hinge ASM
32	114-3658-03	1	Hitch-Trailer
33	3272-6	1	Pin-Cotter
34	3231-22	1	Screw-CARR
35	108-2305	1	Grommet
36	3274-39	2	Screw-HSBH
37	3296-29	4	Nut-Lock, NI
38	322-3	4	Screw-HH
39	110-3626	1	Tube-Discharge
40	3296-12	2	Nut-Lock, NI
41	107-9199	2	Plate
42	107-9198	1	Pin-Hood
43	114-3603	1	Tab-Switch
44	114-9444-03	1	Duct-Engine Fan
47	3290-467	3	Pin-Hair
48	62-1230	3	Washer-Rubber
49	114-3692	1	Foil-Heat Shield, Bag
50	46-8560	2	Screw-HHFTF
52	3234-33	2	Screw-HHF
53	3256-1	2	Washer-Flat
54	3296-73	2	Nut-Lock, NI

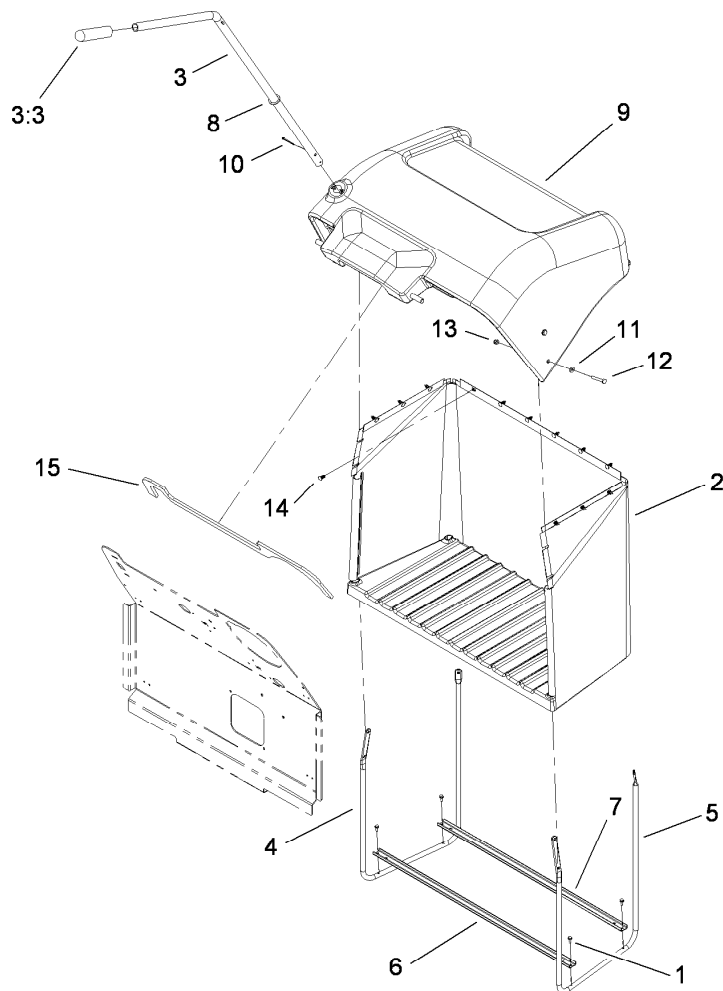 

Bagging Assembly


Ref.	Part Number	Qty.	Description
1	32144-1	4	Screw-Taptite
2	112-6686	1	Grass Bag ASM
3	114-9437	1	Lift Handle ASM
3:3	110-1037	1	Grip-Handle
4	112-6684-03	1	Frame-Bag, Right
5	112-6683-03	1	Frame-Bag, Left
6	112-6688-03	1	Support-Base, Front
7	112-6689-03	1	Support-Base, Rear
8	1-303352	1	Washer-Spindle
9	114-3652	1	Cover-Catcher, Grass
10	3272-12	1	Pin-Cotter
11	3256-1	6	Washer-Flat
12	321-53	6	Screw-HH
13	3296-73	6	Nut-Lock, NI
14	114-4899	12	Rivet-Push
15	114-3660	1	Seal-Bag, Grass

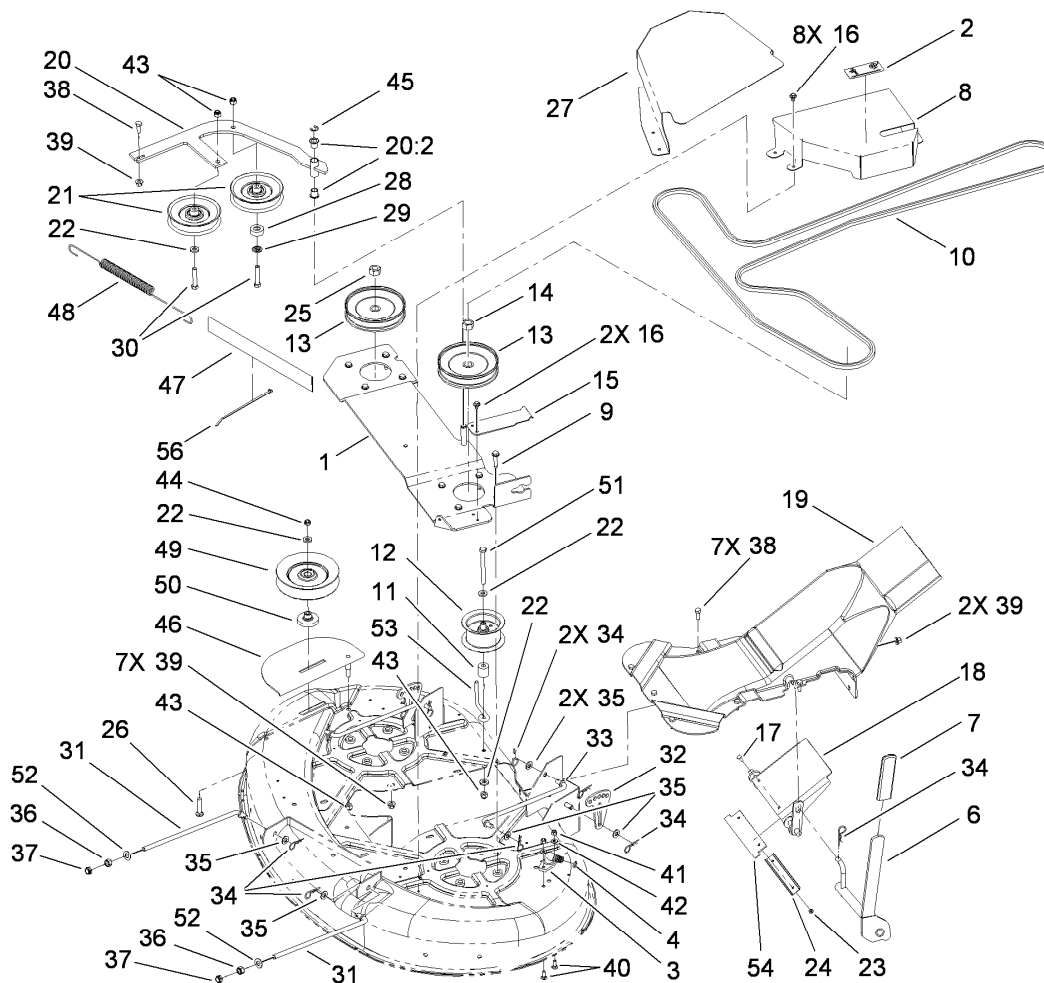 

42 Inch Top Deck Assembly


Ref.	Part Number	Qty.	Description
1	112-6737-03	1	Stiffener ASM
2	108-8769	1	Decal-Bag On Demand
3	95-2747	1	Fitting-Washout
4	46-6290	1	O-Ring
6	110-8811-03	1	Control Lever ASM
7	105-3450	1	Grip-Lever, Lift
8	112-3481-03	1	Cover-Belt, LH
9	32144-57	8	Screw
10	108-9459	1	Belt-Aa
11	61-2220	1	Spacer
12	107280	1	Pulley-Idler
13	88-5330	2	Pulley
14	3219-6	1	Nut-Hex
15	112-6675	1	Spring-Detent
16	46-8560	10	Screw-HHFTF
17	3229-34	2	Screw-CARR
18	112-3428-03	1	38 Inch Door ASM
19	108-8865	1	Adapter-Discharge
20	110-3681	1	Idler Arm W/Bushings ASM
20:2	256-219	2	Bushing
21	94-2447	2	Pulley-Idler
22	65-9130	4	Washer
23	3296-12	2	Nut-Lock, NI
24	110-8575	1	Plate-Seal, Door
25	3219-16	1	Nut-Hex
26	3231-5	1	Screw-CARR
27	112-3480-03	1	Cover-Belt, RH
28	108-8807	1	Slider

Ref.	Part Number	Qty.	Description
29	108-8808	1	Washer-Shoulder
30	323-10	2	Screw-HH
31	105-3437	2	Rod-Hanger
32	88-5570-03	2	Link-Adjusting, HOC
33	108-8834	2	Rod-Lift, Deck
34	9335054	11	Pin-Hair
35	3256-24	8	Washer-Flat
36	3219-4	2	Nut-Hex
37	3296-38	2	Nut-Lock, NI
38	322-4	8	Screw-HH
39	3296-58	10	Nut-Lock, NI
40	3229-1	2	Bolt-CARR
41	3296-42	2	Nut-Lock, NI
42	3256-1	2	Washer-Flat
43	3296-39	4	Nut-Lock, NI
44	3296-59	1	Nut-Lock, NI
45	32120-47	1	Ring-Retaining, External
46	110-3625-03	1	Idler Bracket ASM
47	74-3280	1	Guard-Splash
48	112-4763	1	Spring-Arm, Idler
49	1-633166	1	Pulley-Idler
50	108-8802	1	Idler Bushing And Spacer ASM
51	323-42	1	Screw-HH
52	3256-25	2	Washer-Flat
53	112-4787	1	Guide-Belt, Idler
54	114-3600	1	Seal-Door, Recycle
56	614249	1	Tie-Cable

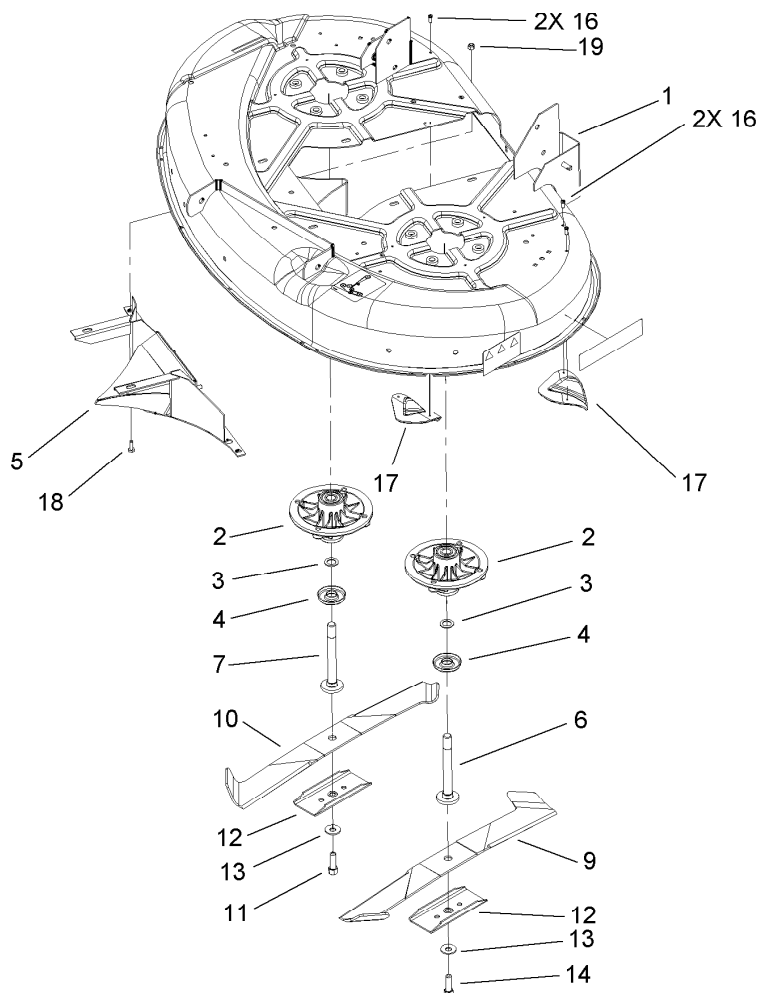 


42 Inch Bottom Deck Assembly

Ref.	Part Number	Qty.	Description
1	110-8555	1	42 Inch Deck ASM
2	107-9161	2	Spindle ASM
3	80-4380	2	Spacer
4	80-4360	2	Shield-Bearing
5	112-4794-03	1	42 Inch Rear Baffle ASM
6	80-4341	1	Shaft-Spindle
7	108-8801	1	Shaft-Spindle
9	107-8959-03	1	Blade-LH, 21.60 Inch
10	107-8958-03	1	Blade-RH, 21.60 Inch
11	108-8823	1	Screw-HH
12	106-2248-03	2	Stiffener-Blade
13	3290-465	2	Washer-Belleville
14	26-0671	1	Screw-HH
16	32144-111	4	Screw-PPH
17	76-2160	2	Plate-Kicker
18	321-4	3	Screw-HH
19	3296-42	3	Nut-Lock, NI

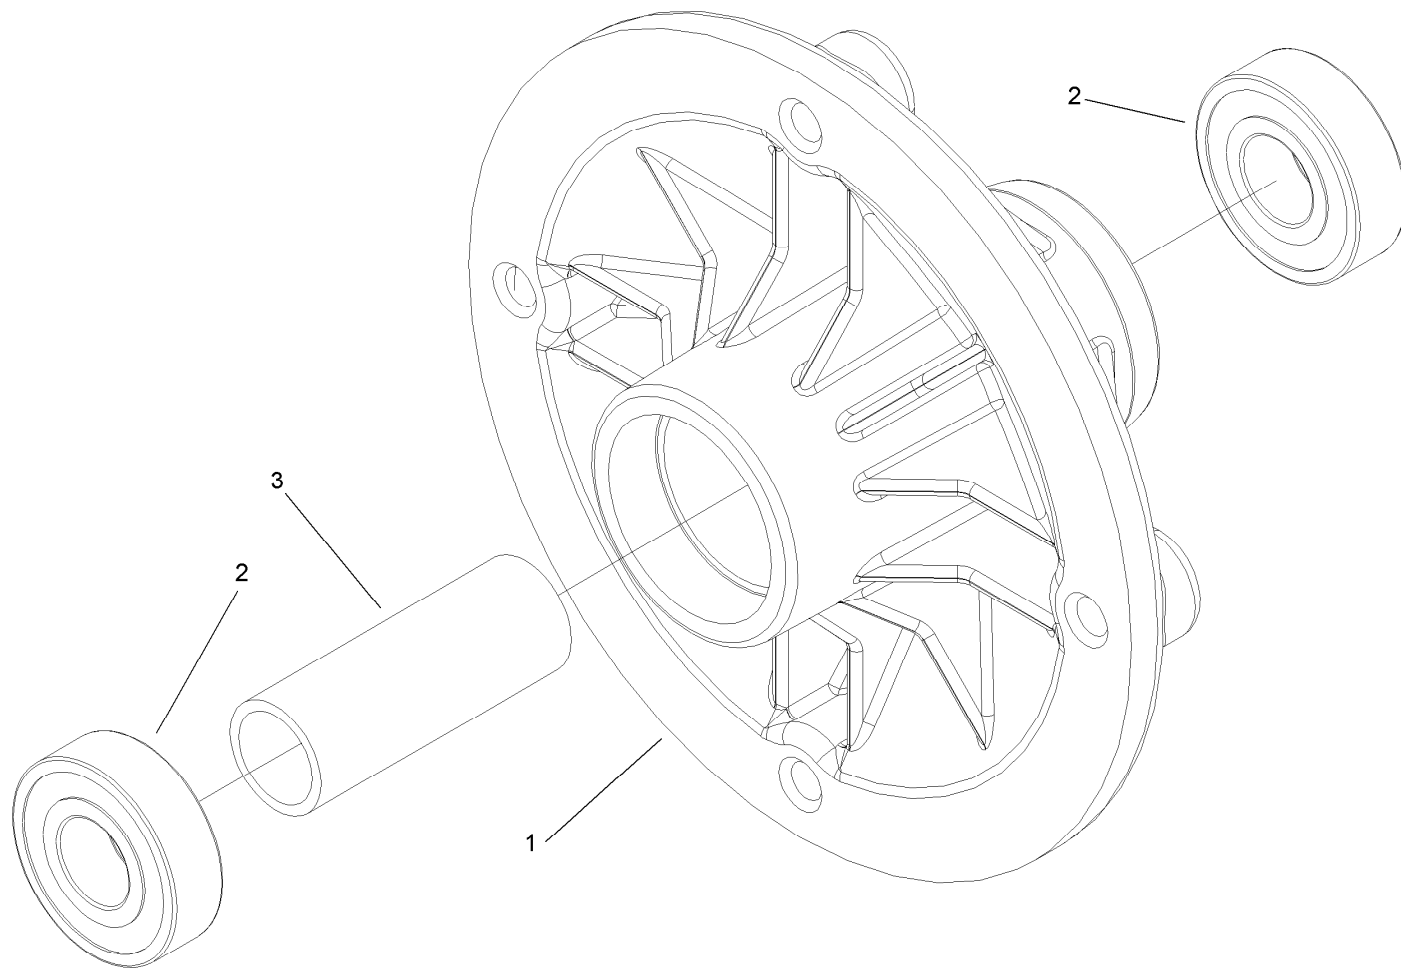 

Spindle Assembly No. 107-9161

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	88-4510	1	Housing-Spindle
2	136-5441	2	Bearing-Ball
3	62-3661	1	Spacer

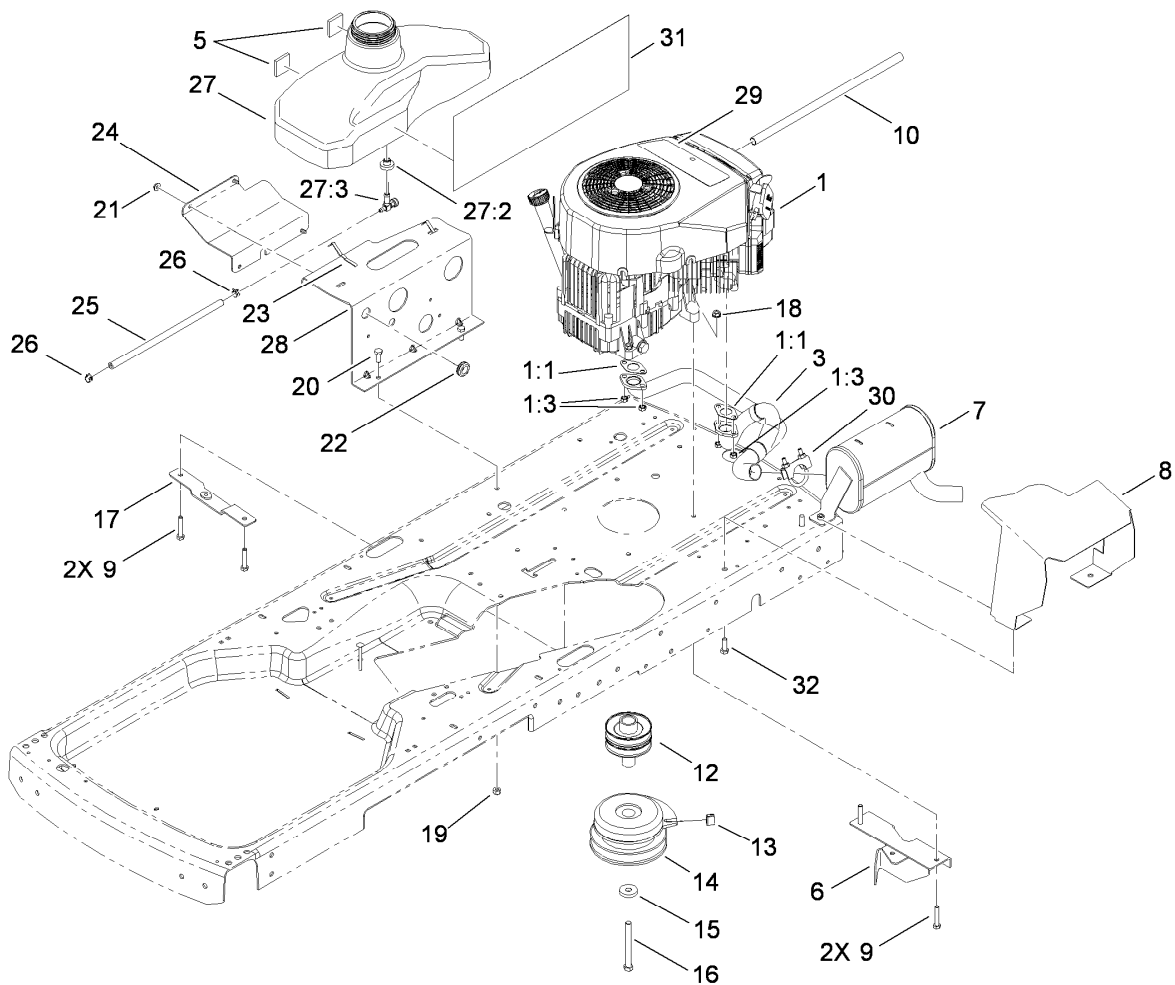 


Engine and Fuel Tank Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, FH541V-Cs50 ●■
1:1	114-3661	2	Gasket-Exhaust
1:3	114-3693	4	Nut-M8
3	114-3667	1	Manifold
5	104-2488	2	Foam-Switch, Seat
6	107-4873	1	Bracket-Pivot
7	114-3666	1	Muffler
8	114-9425-03	1	Shield-Muffler
9	322-9	4	Screw-HH
10	106-7022	1	Tube-Drain, Oil
12	105-3472	1	Pulley-Engine
13	98-5023	1	Bumper
14	104-3334	1	Clutch-Electric
15	112843	1	Washer
16	3212-16	1	Screw-HH
17	106-2156	1	Plate-Mount, Idler

Ref.	Part Number	Qty.	Description
18	32128-25	4	Nut-HF
19	3296-29	2	Nut-Lock, NI
20	322-4	2	Screw-HH
21	46-8560	4	Screw-HHFTF
22	237-124	1	Grommet
23	609830	2	Spring
24	108-2315-03	1	Plate-Support
25	114-9448	1	Hose-Fuel
26	2412-98	2	Clamp-Hose
27	105-3464	1	Gas Tank ASM
27:2	46-6560	1	Bushing
27:3	110-6565	1	Valve-Fuel
28	108-2314-03	1	Plate-Tank
29	107-9246	1	Decal
30	114-3668	1	Clamp-Muffler
31	112-4776	1	Foil-Shield, Heat
32	33114-025	1	Screw-HH

● Not serviced separately

 
■ Obtain parts from www.briggsandstratton.com

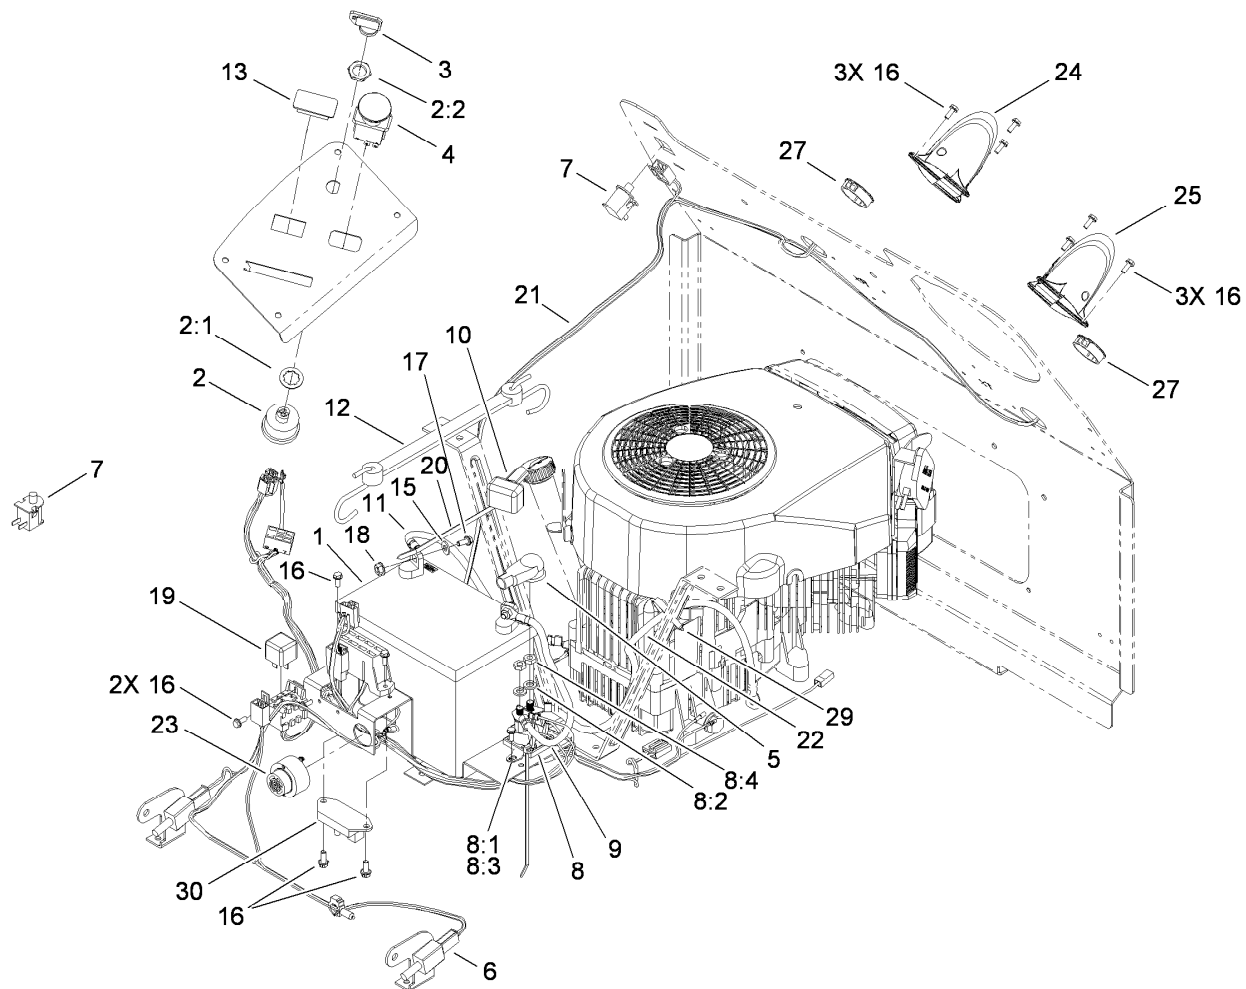

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	104-2493	1	Battery
2	88-9830	1	Key Switch ASM
2:1	3254-5	1	Washer-Lock
2:2	218-461	1	Nut-HH
3	63-8360	1	Key-Ignition
4	95-7489	1	Switch-PTO
5	28-8080	1	Boot-Terminal
6	106-2216	2	Switch
7	82-2190	2	Switch-Bail
8	1-513075	1	Switch-Solenoid
8:1	3253-17	2	Washer-Lock
8:2	3253-4	2	Washer-Lock
8:3	3219-14	2	Nut-Hex
8:4	3220-2	2	Nut-Jam
9	100-3540	1	Cable-Battery, Positive
10	93-3190	1	Boot-Insulator, Terminal
11	95-7654	1	Cable-Negative, Black

Ref.	Part Number	Qty.	Description
12	104-2466	1	Holddown-Battery
13	99-7420	1	Plug-Hole
15	3256-22	2	Washer-Flat
16	32144-1	13	Screw-Taptite
17	321-4	2	Screw-HH
18	32128-33	3	Nut-HF
19	98-7249	1	Relay
20	614249	1	Tie-Cable
21	114-9420	1	Harness-Wire, Kawasaki
22	92-6989	1	Wire-21 Inch
23	103-0205	1	Alarm-Tone, Dual
24	112-9890	1	Bag Sensor ASM
25	110-8018	1	Bag Sensor ASM
27	110-8589	2	Bushing-Harness, Wire
29	105-1853	1	Clamp-Hose
30	100-6170	1	Module-Delay

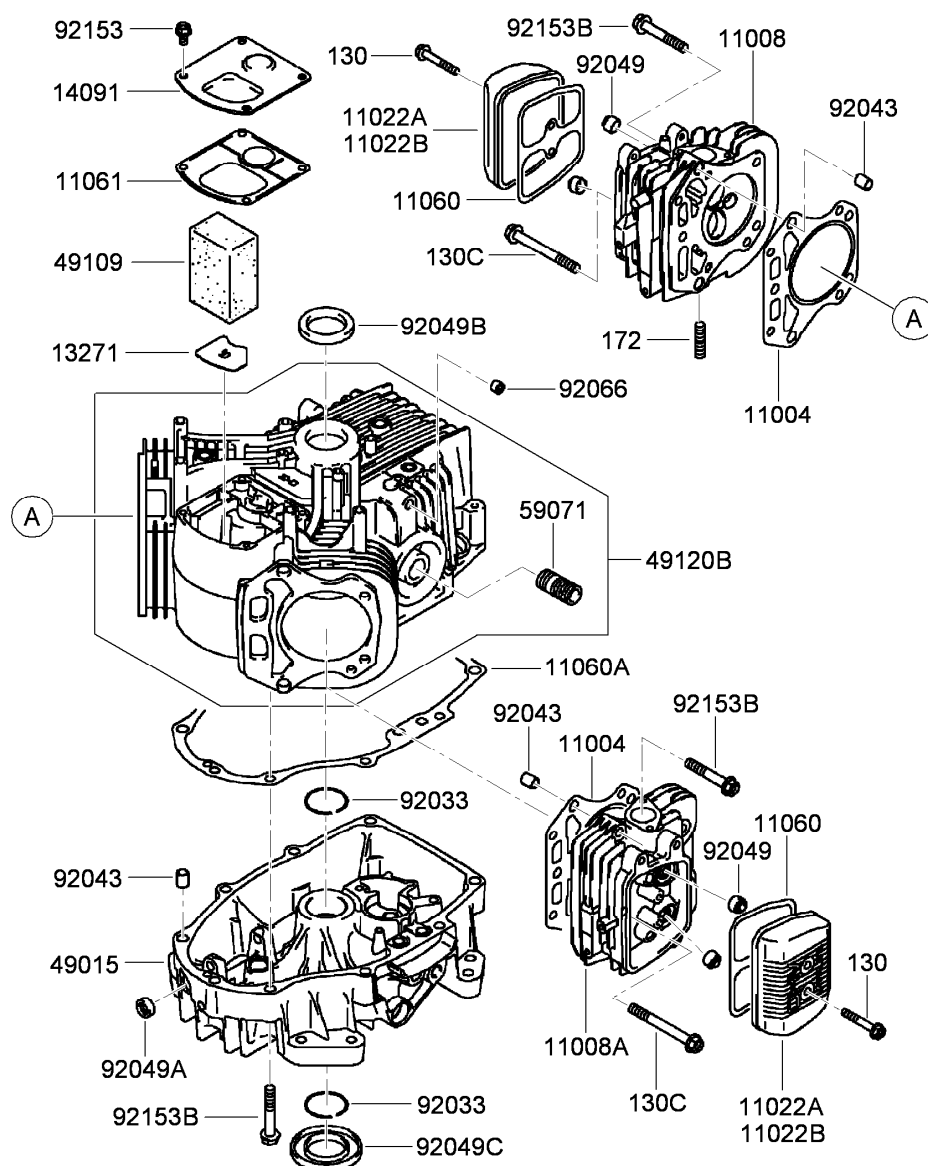 


Cylinder and Crankcase Assembly Kawasaki FH541V-CS50

Ref.	Part Number	Qty.	Description
130	130AA0640	4	Bolt-Flanged (6X40) ●
130C	130CA0875	2	Bolt-Flanged (8X75) ●
172	172BA0818	4	Bolt-Stud (8X18) ●
11004	11004-7016	2	Gasket-Head ●
11008	11008-6043	1	Head-Cylinder, No. 1 ●
11008A	11008-7020	1	Head-Cylinder, No. 2 ●
11022A	11022-7018	1	Case-Rocker ●■
11022B	11022-7028	2	Case-Rocker ●
11060	11060-7001	2	Gasket-Case, Rocker ●
11060A	11060-7008	1	Gasket-Cover, Crankcase ●
11061	11061-7001	1	Gasket-Breather ●
13271	13271-7016	1	Plate ●
14091	14091-7006	1	Cover ●
49015	49015-6253	1	Cover-Crankcase ●
49109	49109-7002	1	Element-Breather ●

Ref.	Part Number	Qty.	Description
49120B	49120-7113	1	Crankcase ●
59071	59071-2079	1	Joint ●
92033	92033-7003	2	Ring-Snap ●
92043	92043-7001	6	Pin ●
92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2) ●
92049A	92049-7005	1	Seal-Oil, S O (8X14X5 H S) ●
92049B	92049-7010	1	Seal-Oil, Sd (35X48X8 R Hs) ●
92049C	92049-7011	1	Seal-Oil, S D (35X62X8 L H S) ●
92066	92066-7026	1	Plug ●
92153	92153-7043	4	Bolt (6X12) ●
92153B	92153-7054	17	Bolt (8X50) ●

● Obtain parts from www.kawpower.com

 
■ This part can be used as substitute on the product and is supplied until stock is exhausted

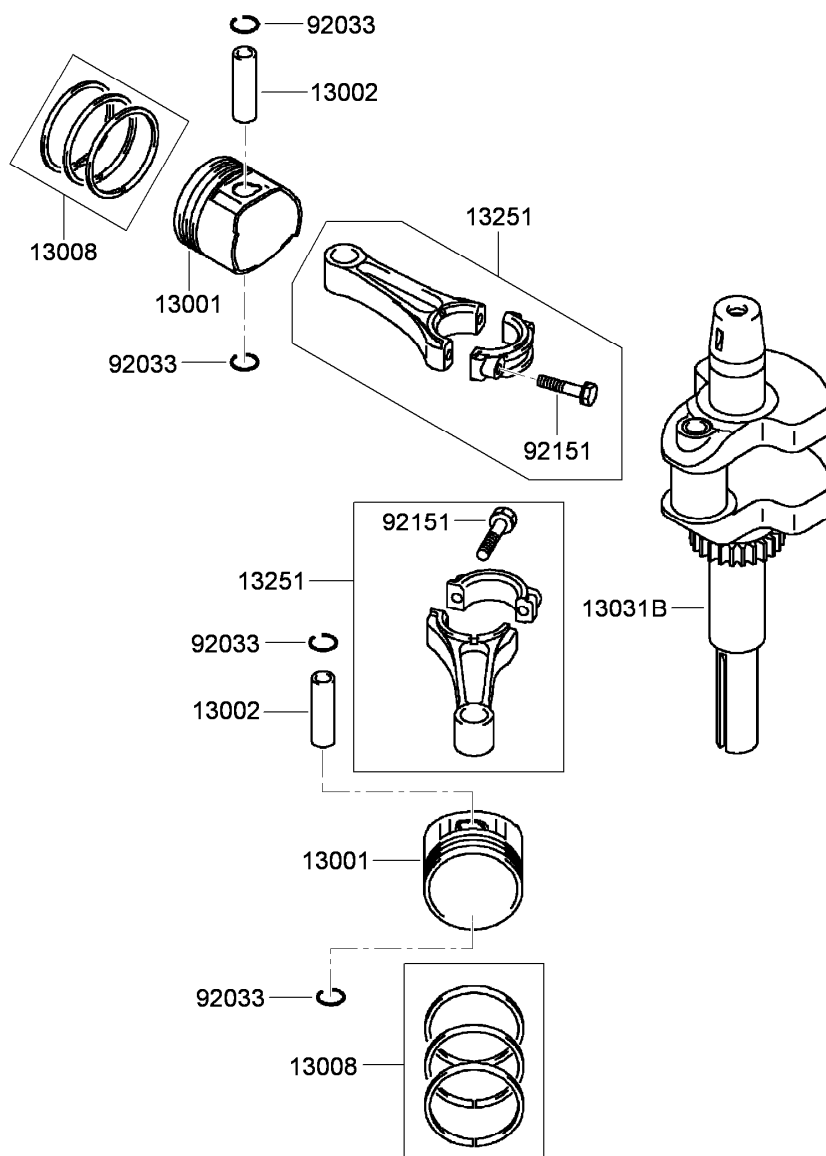

Piston and Crankshaft Assembly Kawasaki FH541V-CS50

Ref.	Part Number	Qty.	Description
13001	13001-7010	2	Piston-Engine ●
13002	13002-7001	2	Pin-Piston ●
13008	13008-6060	2	Piston Ring Set ●
13031B	13031-7073	1	Crankshaft ●
13251	13251-7010	2	Connecting Rod ASM ●
92033	92033-7002	4	Ring-Snap ●
92151	92151-7017	4	Bolt (6X35) ●

 ● Obtain parts from www.kawpower.com

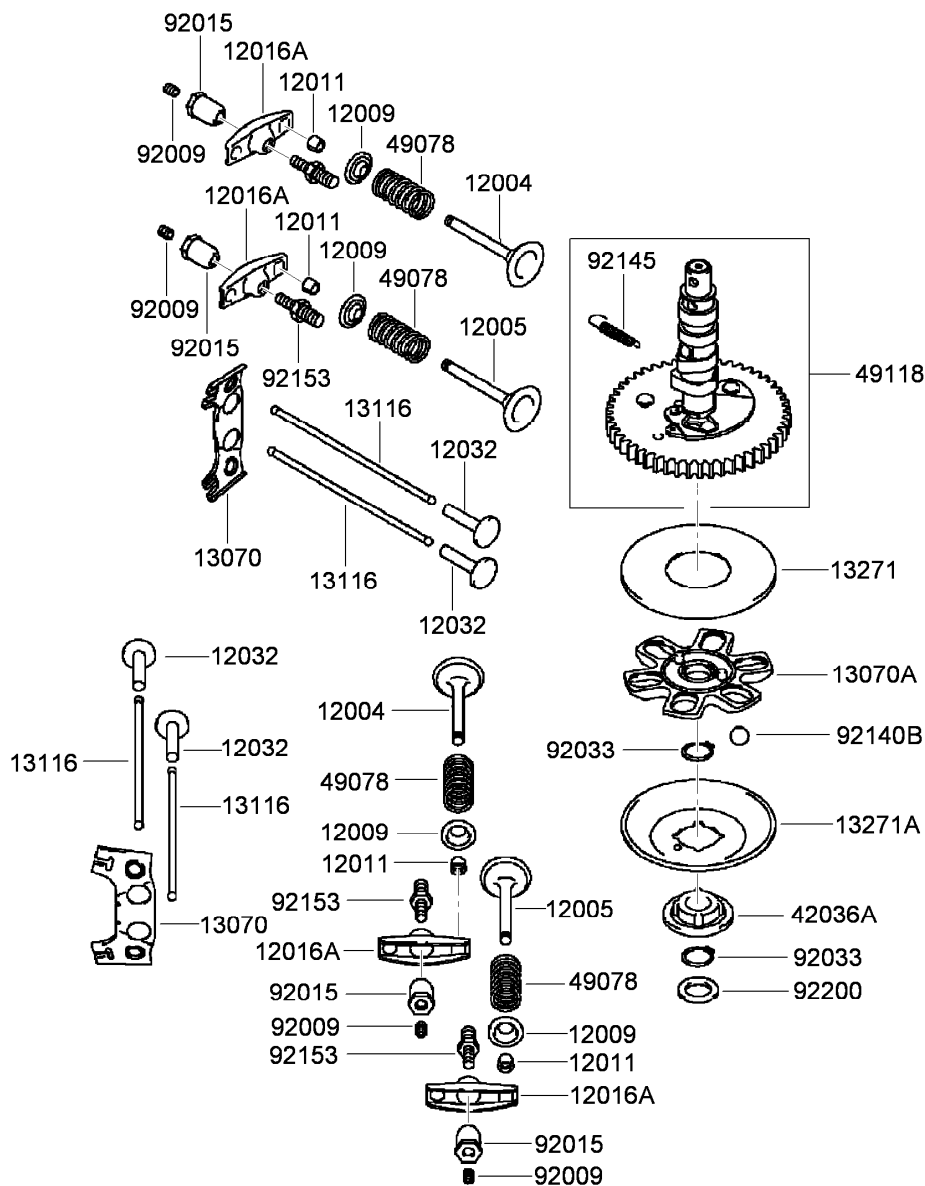


Valve and Camshaft Assembly Kawasaki FH541V-CS50

Ref.	Part Number	Qty.	Description
12004	12004-7003	2	Valve-Intake ●
12005	12005-7003	2	Valve-Exhaust ●
12009	12009-7001	4	Retainer-Spring, Valve ●
12011	12011-2056	8	Collet ●
12016A	12016-7008	4	Arm-Rocker ●
12032	12032-7001	4	Tappet ●
13070	13070-7001	2	Guide ●
13070A	13070-7004	1	Guide ●
13116	13116-2057	4	Rod-Push ●
13271	13271-7007	1	Plate ●
13271A	13271-7021	1	Plate-Governor ●

Ref.	Part Number	Qty.	Description
42036A	42036-7010	1	Sleeve ●
49078	49078-7001	4	Spring-Valve, Engine ●
49118	49118-7004	1	Camshaft ●
92009	92009-2341	4	Screw ●
92015	92015-2253	4	Nut ●
92033	92033-7001	2	Ring-Snap ●
92140B	92140-7005	6	Ball ●
92145	92145-7001	1	Spring ●
92153	92153-7019	4	Bolt ●
92200	92200-7001	1	Washer ●

 ● Obtain parts from www.kawpower.com

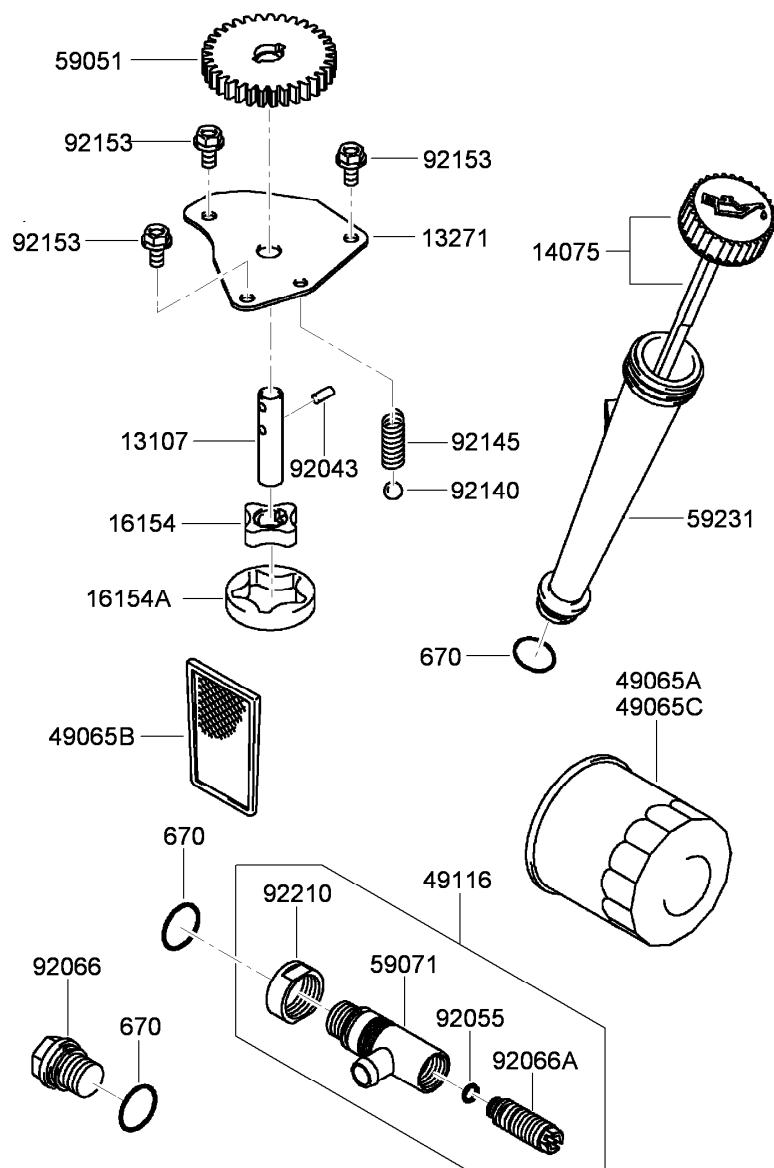

Lubrication Equipment Assembly Kawasaki FH541V-CS50

Ref.	Part Number	Qty.	Description
670	670D2016	3	O-Ring (16Mm) ●
13107	13107-7009	1	Shaft ●
13271	13271-7017	1	Plate ●
14075	14075-7009	1	Cap ASM ●
16154	16154-2053	1	Rotor-Pump (In) ●
16154A	16154-2054	1	Rotor-Pump (Out) ●
49065A	49065-2078	1	Filter-Oil ●■
49065B	49065-7004	1	Filter-Oil ●
49065C	49065-7010	1	Filter-Oil ●
49116	49116-7001	1	Valve ASM ●
59051	59051-7011	1	Gear-Spur ●

Ref.	Part Number	Qty.	Description
59071	59071-7008	1	Joint ●
59231	59231-7005	1	Filler ●
92043	92043-7003	2	Pin ●
92055	92055-7002	1	O-Ring (6Mm) ●
92066	92066-7003	1	Plug ●
92066A	92066-7007	1	Plug ●
92140	92140-7003	1	Ball ●
92145	92145-7002	1	Spring ●
92153	92153-7043	3	Bolt (6X12) ●
92210	92210-7012	1	Nut (M22) ●


● Obtain parts from www.kawpower.com

■ This part can be used as substitute on the product and is supplied until stock is exhausted



<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
49089B	49089-7034	1	Shroud-Engine ●
59041	59041-7012	1	Fan ●
59066	59066-7011	1	Housing-Fan ●
92026	92026-7007	1	Spacer ●
92151	92151-7012	3	Bolt (6X12) ●
92153	92153-7007	3	Bolt ●
92153A	92153-7008	1	Bolt ●
92153B	92153-7043	4	Bolt (6X12) ●

 
3361-792C

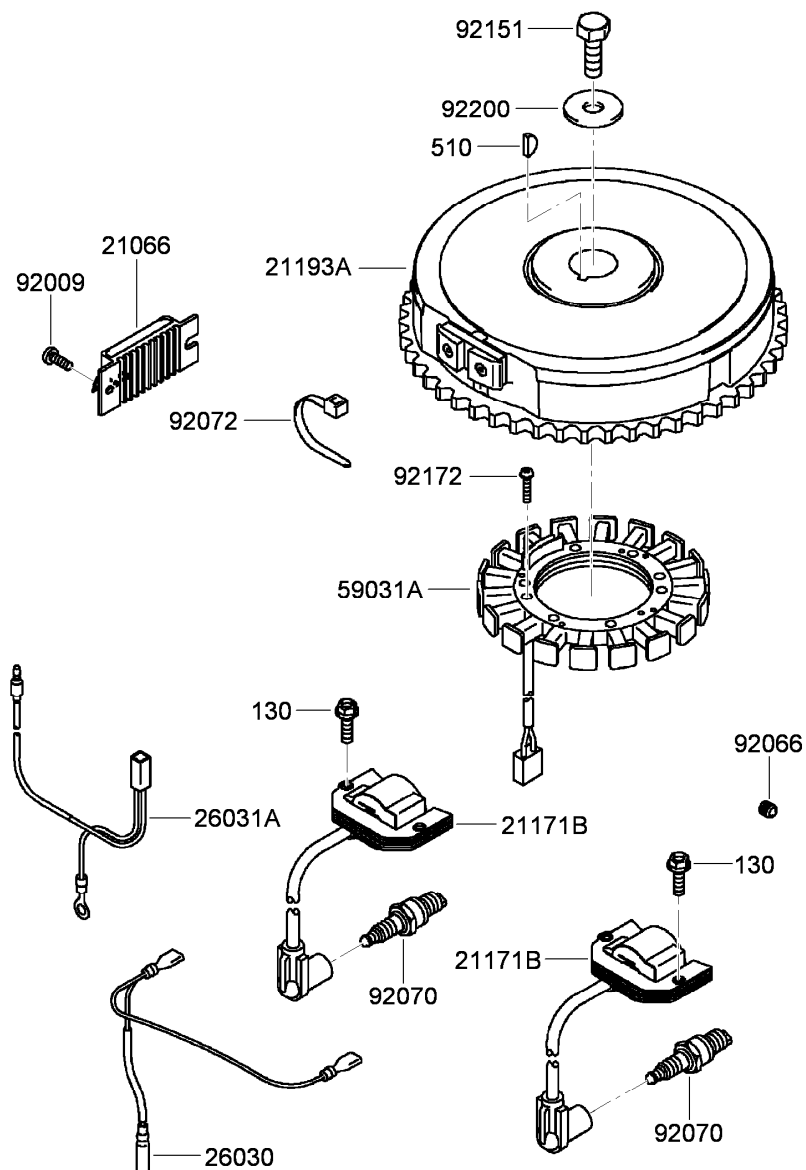

Electric Equipment Assembly Kawasaki FH541V-CS50

Ref.	Part Number	Qty.	Description
130	130AA0620	4	Bolt-Flanged (6X20) ●
510	510A5100	1	Key-Woodruff ●
21066	21066-7011	1	Regulator-Voltage ●
21171B	21171-7034	2	Ignition Coil ASM ●
21193A	21193-7032	1	Flywheel ASM ●
26030	26030-7001	1	Harness ●
26031A	26031-7012	1	Harness ●
59031A	59031-7014	1	Coil-Charging ●
92009	92009-2308	1	Screw ●
92066	92066-7026	1	Plug ●
92070	92070-7003	2	Spark Plug (R C J 8 Y, Solid) ●
92072	92072-7003	3	Band ●
92151	92151-2097	1	Bolt (12X30) ●
92172	92172-7018	4	Screw (5X20) ●
92200	92200-7002	1	Washer ●

 ● Obtain parts from www.kawpower.com

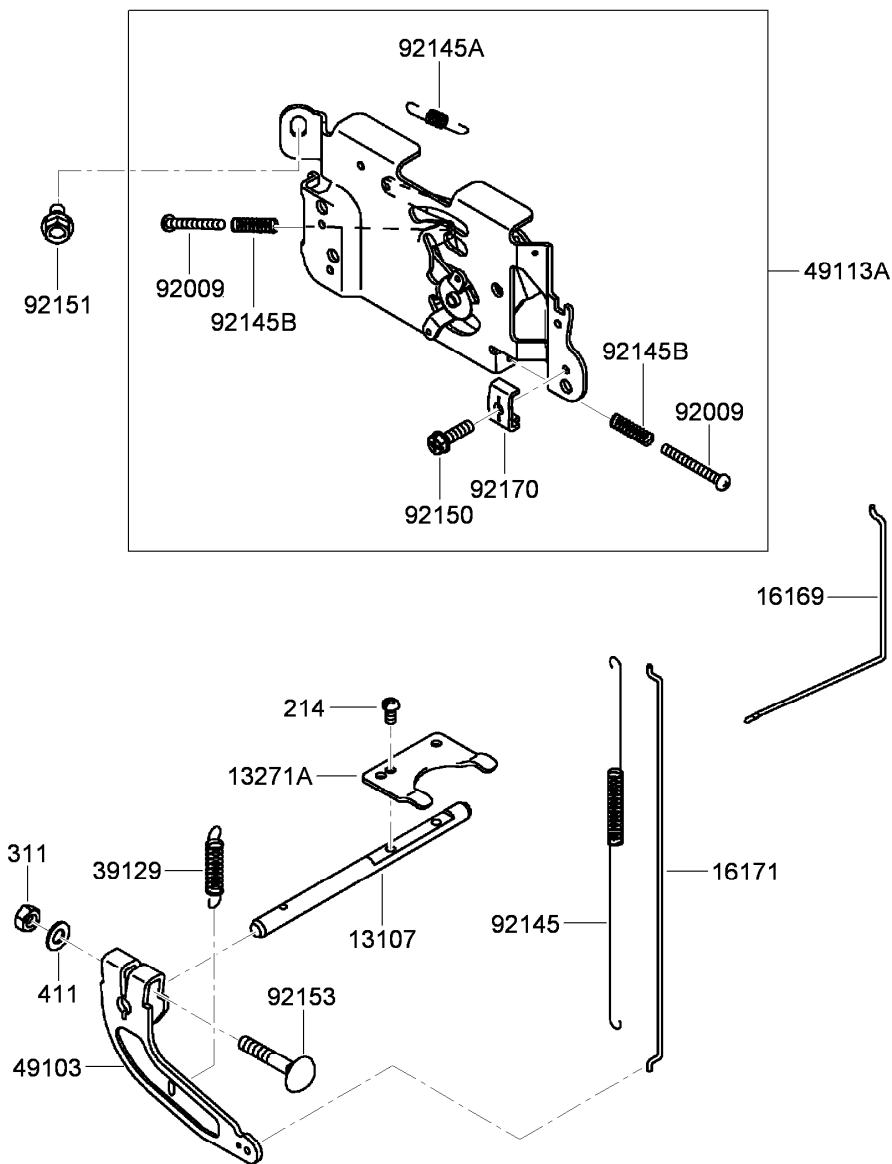


Control Equipment Assembly Kawasaki FH541V-CS50

Ref.	Part Number	Qty.	Description
214	214AA0408	2	Screw-Pan +-(4X8) ●
311	311AA0600	1	Nut-Hex (6Mm) ●
411	411AA0600	1	Washer-Plain (6Mm) ●
13107	13107-7010	1	Shaft ●
13271A	13271-7032	1	Plate ●
16169	16169-7010	1	Link-Choke ●
16171	16171-7001	1	Link ●
39129	39129-7003	1	Spring-Governor ●
49103	49103-7004	1	Arm-Governor ●

Ref.	Part Number	Qty.	Description
49113A	49113-7056	1	Control Panel ASM ●
92009	92009-7007	2	Screw (4X35) ●
92145	92145-7003	1	Spring ●
92145A	92145-7004	1	Spring ●
92145B	92145-7005	2	Spring ●
92150	92150-2182	1	Bolt (5X18) ●
92151	92151-7012	2	Bolt (6X12) ●
92153	92153-7033	1	Bolt (6X35) ●
92170	92170-7001	1	Clamp ●

 ● Obtain parts from www.kawpower.com

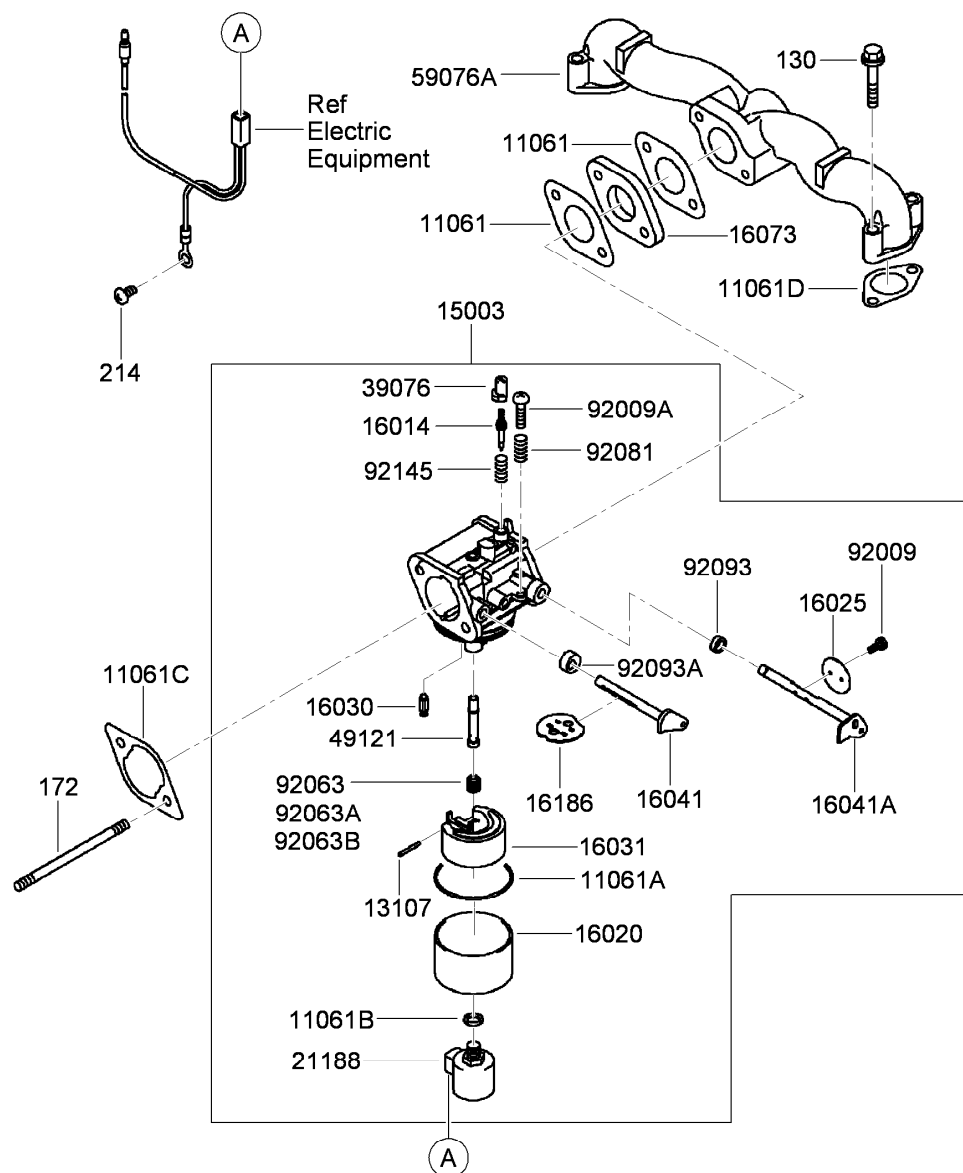


Carburetor Assembly Kawasaki FH541V-CS50

Ref.	Part Number	Qty.	Description
130	130AA0635	4	Bolt-Flanged (6X35) ●
172	172BA0685	2	Bolt-Stud (6X85) ●
214	214AA0510	1	Screw-Pan +/- (5X10) ●
11061	11061-7004	2	Gasket-Insulator ●
11061A	11061-7009	1	Gasket-Chamber ●
11061B	11061-7010	1	Gasket-Screw ●
11061C	11061-7018	1	Gasket-Cleaner, Air ●
11061D	11061-7019	2	Gasket ●
13107	13107-7018	1	Shaft ●
15003	15003-7086	1	Carburetor ASM ●
16014	16014-7007	1	Screw-Air, Pilot ●
16020	16020-7003	1	Chamber-Float ●
16025	16025-7006	1	Valve-Throttle ●
16030	16030-7003	1	Valve-Float ●
16031	16031-7002	1	Float ●
16041	16041-7016	1	Shaft-Choke, Carburetor ●
16041A	16041-7018	1	Shaft-Throttle, Carburetor ●

Ref.	Part Number	Qty.	Description
16073	16073-7007	1	Insulator ●
16186	16186-7004	1	Choke Valve ASM ●
21188	21188-7002	1	Solenoid ●
39076	39076-7001	1	Limiter ●
49121	49121-7007	1	Nozzle-Main ●
59076A	59076-7017	1	Manifold-Intake ●
92009	92009-2083	2	Screw ●
92009A	92009-2349	1	Screw ●
92063	92063-7046	1	Jet-Main (No. 100) ●
92063A	92063-7047	1	Jet-Main (No. 098, 3280 Ft) ●
92063B	92063-7063	1	Jet-Main (No. 096, 6560 Ft) ●
92081	92081-2234	1	Spring ●
92093	92093-2100	1	Seal ●
92093A	92093-7003	1	Seal ●
92145	92145-7015	1	Spring ●

 ● Obtain parts from www.kawpower.com

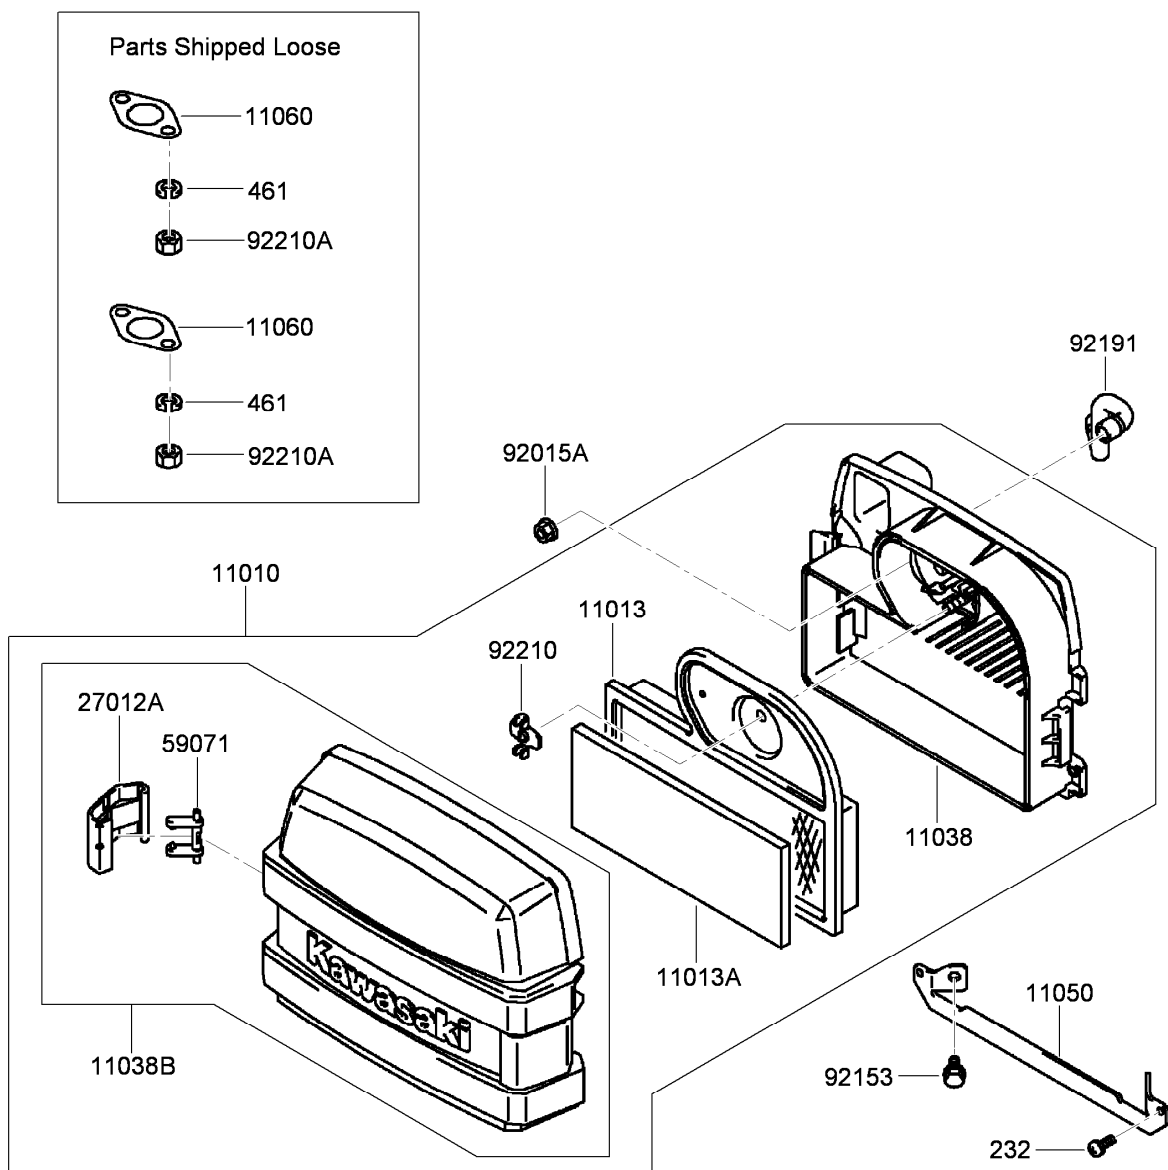


Air Filter and Muffler Assembly Kawasaki FH541V-CS50

Ref.	Part Number	Qty.	Description
232	232AA0514	2	Screw-Pan-Ws+- (5X14) ●
461	461DA0800	4	Washer-Spring (8Mm) ●
11010	11010-7013	1	Air Filter ASM ●
11013	11013-7002	1	Element-Filter, Air ●
11013A	11013-7033	1	Element-Filter, Air ●
11038	11038-7006	1	Air Filter Case ASM ●
11038B	11038-7013	1	Air Filter Case ASM ●
11050	11050-7006	1	Bracket ●

Ref.	Part Number	Qty.	Description
11060	11060-7021	2	Gasket-Muffler ●
27012A	27012-7003	2	Hook ●
59071	59071-7017	2	Joint ●
92015A	92015-1367	2	Nut ●
92153	92153-7043	2	Bolt (6X12) ●
92191	92191-7001	1	Tube ●
92210	92210-7004	1	Nut (M6) ●
92210A	92210-7027	4	Nut (M8) ●

 ● Obtain parts from www.kawpower.com

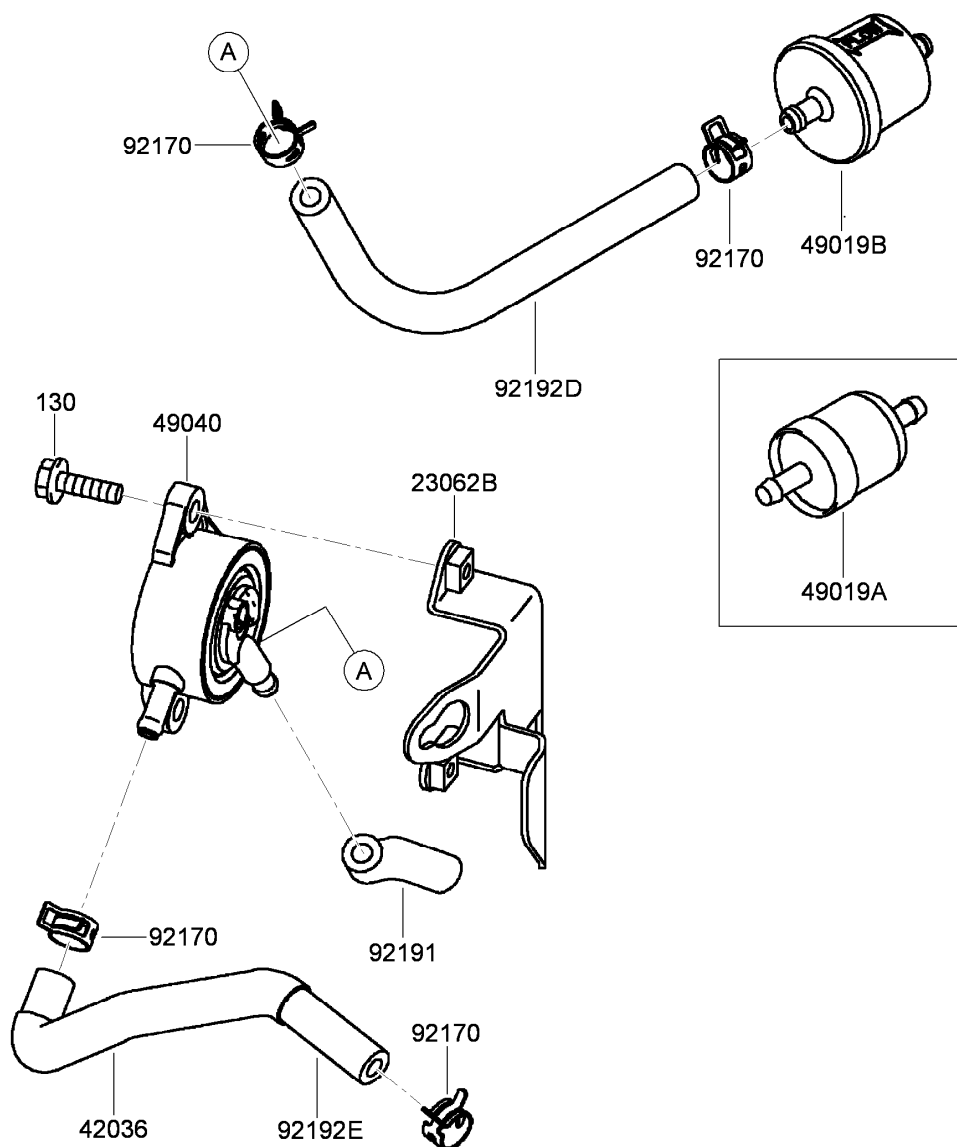


Fuel Tank and Valve Assembly Kawasaki FH541V-CS50

Ref.	Part Number	Qty.	Description
130	130AA0620	2	Bolt-Flanged (6X20) ●
23062B	23062-7019-9H	1	Bracket ●
42036	42036-7012	1	Sleeve ●
49019A	49019-7001	1	Filter-Fuel ●■
49019B	49019-7005	1	Filter-Fuel ●
49040	49040-7001	1	Pump-Fuel ●
92170	92170-2009	4	Clamp ●
92191	92191-7002	1	Tube ●
92192D	92192-7135	1	Tube (6.35X12.7X160) ●
92192E	92192-7136	1	Tube (6.35X12.7X180) ●

● Obtain parts from www.kawpower.com

 ■ This part can be used as substitute on the product and is supplied until stock is exhausted

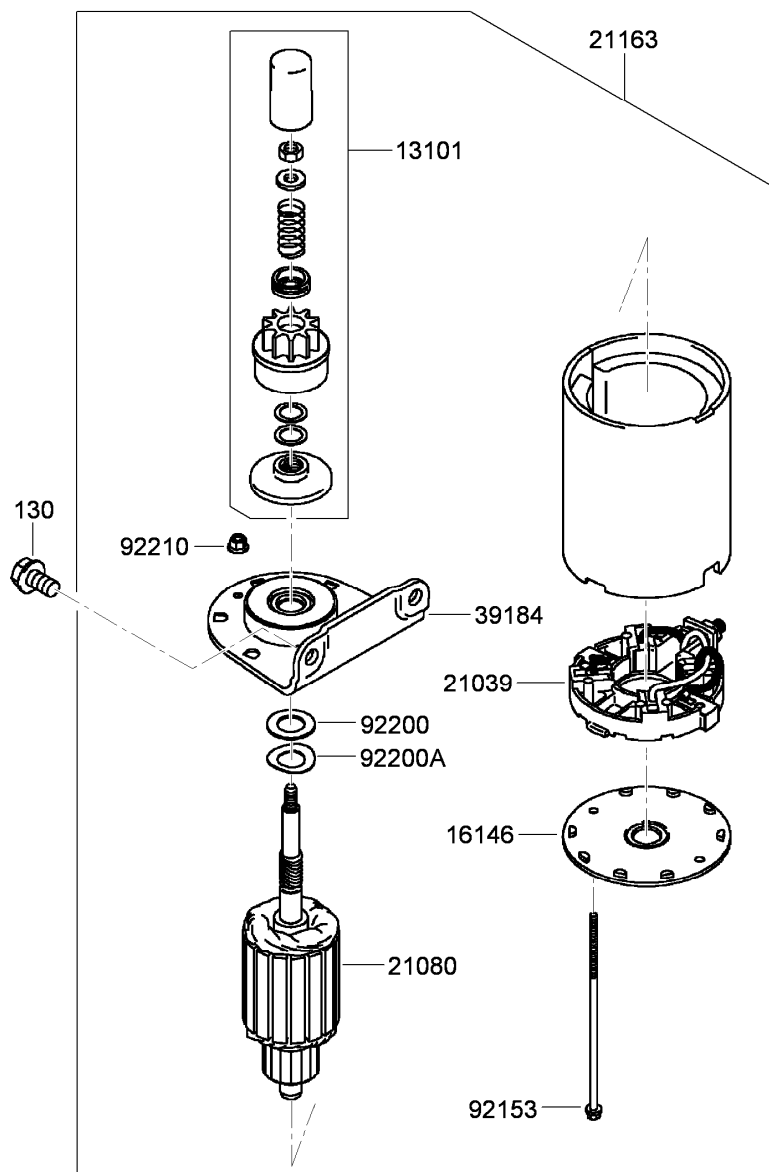


Starter Assembly Kawasaki FH541V-CS50

Ref.	Part Number	Qty.	Description
130	130AA0814	2	Bolt-Flanged (8X14) ●
13101	13101-7010	1	Gear ASM ●
16146	16146-7013	1	Cover ASM ●
21039	21039-7002	1	Brush ●
21080	21080-7007	1	Armature ●
21163	21163-7031	1	Starter-Electric ●
39184	39184-7009	1	Bracket ASM ●
92153	92153-7034	2	Bolt ●
92200	92200-7023	1	Washer ●
92200A	92200-7024	1	Washer ●
92210	92210-7037	2	Nut ●

● Obtain parts from www.kawpower.com

 56070

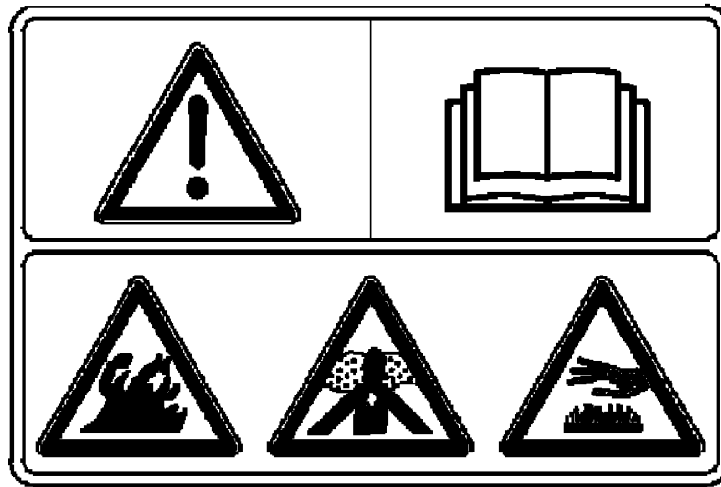

Label Assembly Kawasaki FH541V-CS50

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
56070	56070-2021	1	Label-Warning ●

Attachments and Accessories

For 74437 TimeCutter ZD420T Riding Mower

Product Name	Model/Part
Rear Deflector Kit	74435
48 Inch Snow Blade CE Completion Kit	74436



Count on it.