



Form No. 3358-169 Rev C

Count on it.

Parts Catalog

TimeCutter® ZD530

Riding Mower

Model No. 74434—Serial No. 270000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame Assembly	4
Seat Assembly	5
Control Assembly	6
Drive Assembly	7
LH Hydro Transaxle Assembly No. 112-4760	8
RH Hydro Transaxle Assembly No. 112-4761	10
Styling Assembly	12
Grass Bag Assembly	13
42 Inch Top Deck Assembly	14
42 Inch Bottom Deck Assembly	15
Spindle Housing No. 107-9161 Assembly	16
Engine Assembly	17
Electrical Assembly	18
Cylinder Assembly Honda GXV530 EXA2	19
Crankcase Assembly Honda GXV530 EXA2	20
Oil Pan Assembly Honda GXV530 EXA2	21
Crankshaft Assembly Honda GXV530 EXA2	22
Piston and Connecting Rod Assembly Honda GXV530 EXA2	23
Camshaft Assembly Honda GXV530 EXA2	24
Fan Cover Assembly Honda GXV530 EXA2	25
Carburetor Assembly Honda GXV530 EXA2	26
Exhaust Pipe Assembly Honda GXV530 EXA2	27
Fuel Pump Assembly Honda GXV530 EXA2	28
Flywheel Assembly Honda GXV530 EXA2	29
Ignition Coil Assembly Honda GXV530 EXA2	30
Starter Motor Assembly Honda GXV530 EXA2	31
Control Assembly Honda GXV530 EXA2	32
Regulator Rectifier and Sub-Wire Harness Assembly Honda GXV530 EXA2	33
Label Assembly Honda GXV530 EXA2	34
Attachments and Accessories	35

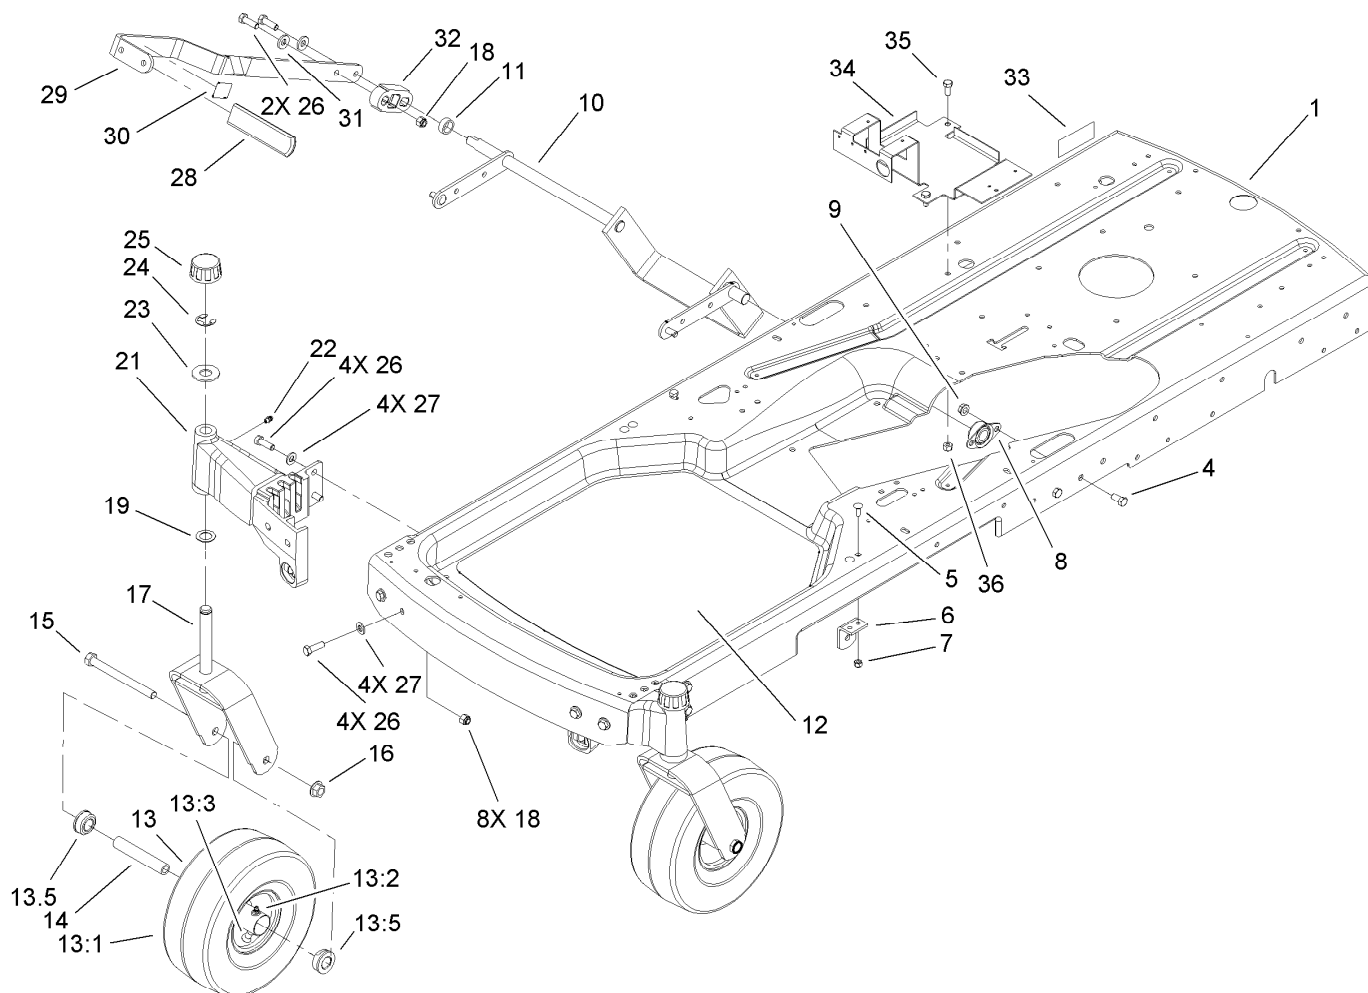


Frame Assembly

Ref.	Part Number	Qty.	Description
1	107-8999-01	1	Frame
4	323-4	4	Screw-HH
5	3229-1	4	Bolt-CARR
6	105-3439	2	Bracket-Lift
7	3296-42	4	Nut-Lock, NI
8	1-633102	2	Bearing-Flange, Side
9	3290-357	4	Nut-HHF, Whiz
10	114-3601-03	1	Lift Arm ASM
11	106-2222	1	Spacer
12	105-3460	1	Pad-Antiskid
13	105-3471	2	Front Wheel And Tire ASM
13:1	105-1943	1	Tire
13:2	302-5	1	Fitting-Grease
13:3	232-27	1	Stem-Valve
13:5	114-1640	2	Bushing-Flange
13:99	93-4244	1	Tube-Inner (W/Valve) ●
14	104-3667	2	Bushing-Spanner
15	325-22	2	Screw-HH
16	32128-23	2	Nut-HF
17	110-6581-01	2	Caster Fork ASM


Ref.	Part Number	Qty.	Description
18	3296-39	9	Nut-Lock, NI
19	3-6498	2	Washer-Thrust
20	105-6986-01	1	Caster-LH ●
21	105-6985-01	1	Caster-RH
22	302-5	2	Fitting-Grease
23	28-2480	2	Washer-Plain
24	32151-103	2	Ring-Retaining, EXT
25	61-9780	2	Cap-Hub
26	323-18	10	Screw-HH
27	3256-24	8	Washer-Flat
28	105-3450	1	Grip-Lever, Lift
29	108-2317-03	1	Lever-Lift
30	106-8743	1	Decal-HOC
31	98-5975	2	Washer-Belleville
32	106-2211	1	Block-Lift
33	106-7043	1	Decal-Transport
34	112-7562-03	1	Holder-Battery
35	322-3	2	Screw-HH
36	3296-29	2	Nut-Lock, NI

● Not illustrated

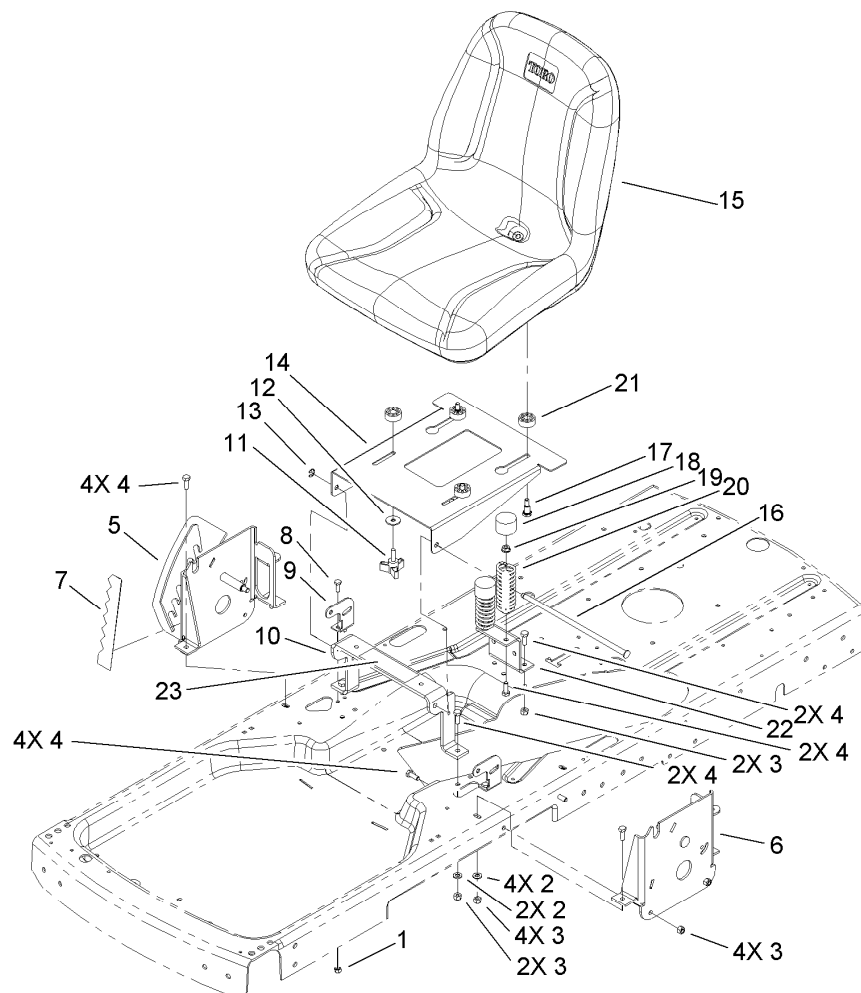

Seat Assembly

Ref.	Part Number	Qty.	Description
1	3296-42	4	Nut-Lock, NI
2	3256-23	6	Washer-Plain
3	3296-29	12	Nut-Lock, NI
4	322-4	14	Screw-HH
5	106-2158-03	1	RH Plate ASM
6	106-2159-03	1	LH Plate ASM
7	106-2223	1	Decal-HOC
8	321-4	4	Screw-HH
9	106-2180	2	Bracket-Bellcrank
10	108-8742-03	1	Brace-Seat, DC
11	106-2240	2	Knob
12	5-4460	2	Washer-Pivot
13	105-7004	1	E-Ring
14	105-6953-03	1	Bracket-Seat
15	108-2329	1	Seat
16	105-6955	1	Pin-Pivot
17	613529	2	Screw-Shoulder
18	701178	2	Cap-Protector
19	32128-25	2	Nut-HF
20	92-7054	2	Spring-Compression
21	107-4902	4	Spacer-Nylon
22	107-8964-03	1	Brace-Seat
23	112-7563	1	Decal-Service, CE

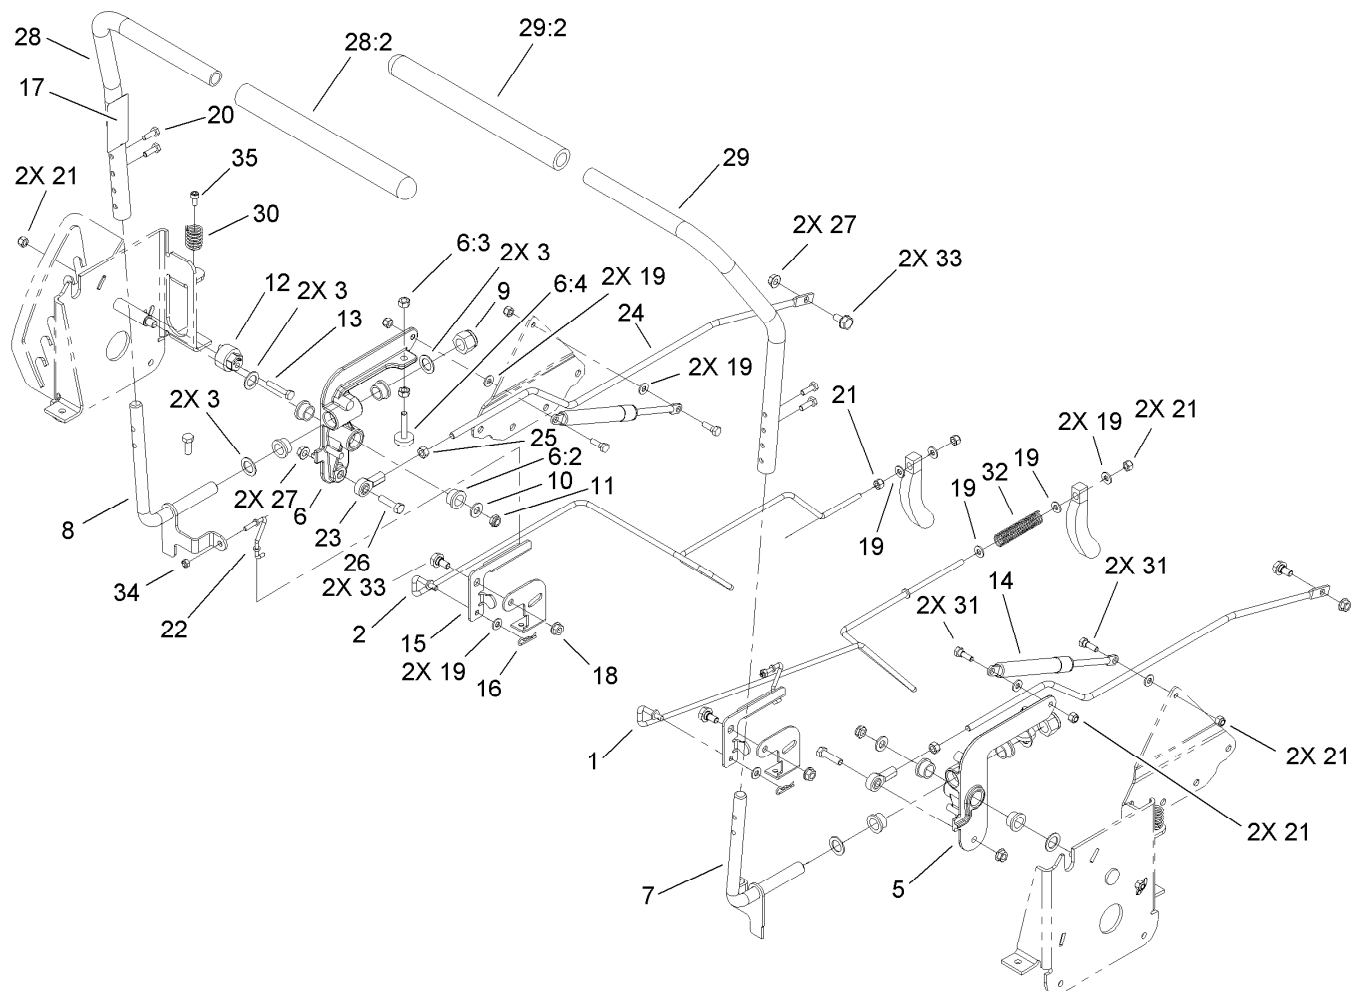


Control Assembly

Ref.	Part Number	Qty.	Description
1	108-8792	1	Rod-Brake, LH
2	110-1041	1	Rod-Brake, RH
3	105-3481	6	Washer-Thrust
5	110-1869	1	LH Activator Arm ASM
5:2	105-3455	4	Bushing ●
5:3	3217-6	2	Nut-Hex ●
5:4	105-3486	1	Stop-Adjustment ●
6	110-1870	1	RH Activator Arm ASM
6:2	105-3455	4	Bushing
6:3	3217-6	2	Nut-Hex
6:4	105-3486	1	Stop-Adjustment
7	105-3488	1	LH Pivot Shaft ASM
8	105-3487	1	RH Pivot Shaft ASM
9	3296-53	2	Nut-Lock, NI
10	3256-24	2	Washer-Flat
11	3296-59	2	Nut-Lock, NI
12	107-4874	2	Eccentric
13	321-9	2	Screw-HH
14	103-2913	2	Damper-Control, Motion
15	106-2181	2	Bellcrank
16	1-806003	2	Pin-Cotter

Ref.	Part Number	Qty.	Description
17	106-8742	2	Decal
18	32128-25	2	Nut-HF
19	3256-22	11	Washer-Flat
20	321-4	4	Screw-HH
21	3296-42	9	Nut-Lock, NI
22	106-2179	2	Link-Brake
23	1-543017	2	Balljoint-RH
24	105-7048	2	Rod-Hydro
25	3219-2	2	Nut-Hex
26	322-6	2	Screw-HH
27	32128-20	4	Nut-HF
28	108-8746	1	RH Control Handle ASM
28:2	1-633257	1	Grip-Control, Motion
29	108-8747	1	LH Control Handle ASM
29:2	1-633257	1	Grip-Control, Motion
30	105-3469	2	Spring-Compression
31	106-2214	4	Bolt-Shoulder
32	105-3465	1	Spring-Compression
33	37-8771	4	Bolt-Shoulder, HF
34	3296-2	2	Nut-Lock, NI
35	3274-52	2	Screw-HSH

● Not illustrated

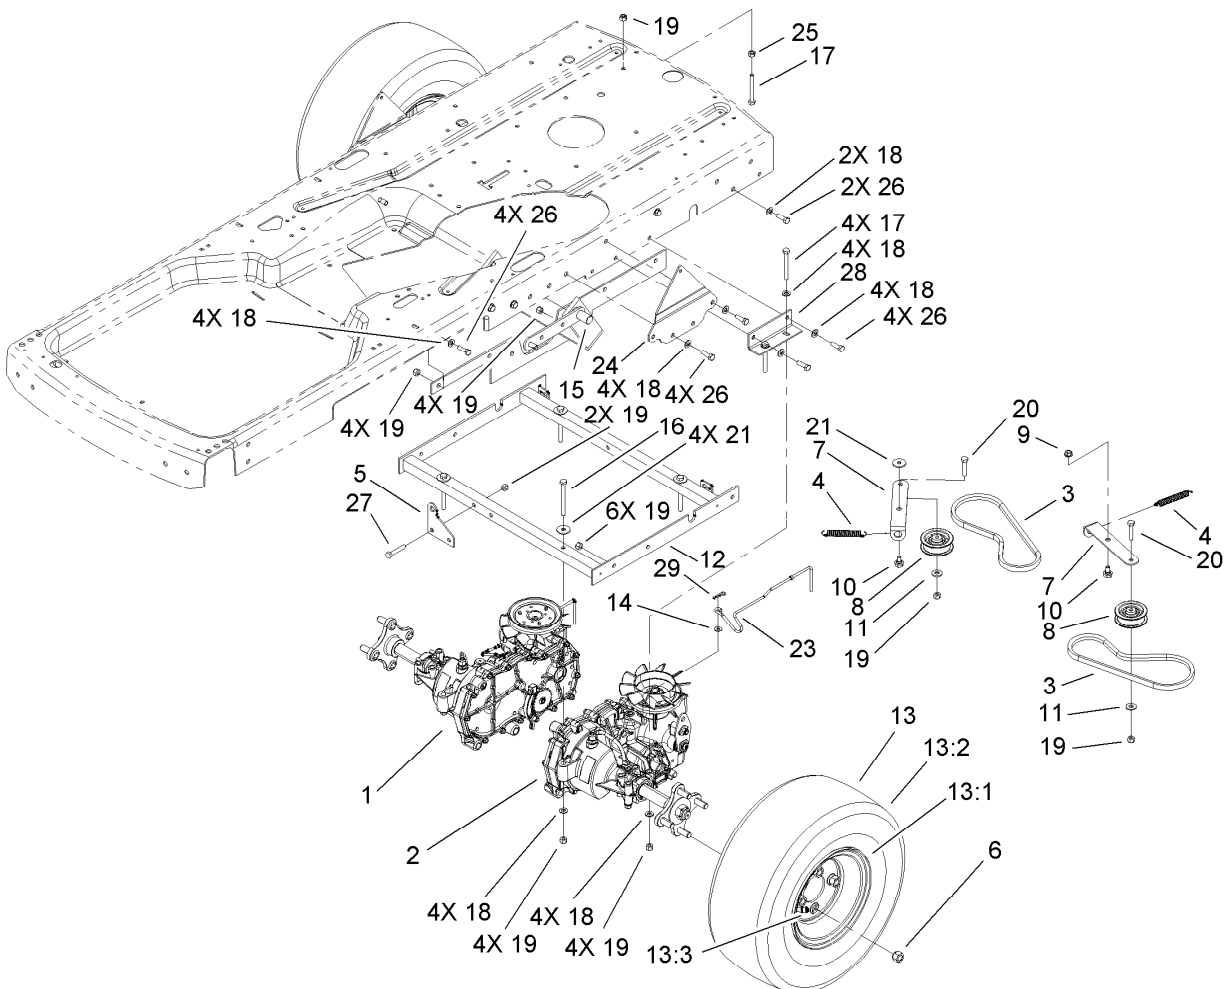


Drive Assembly

Ref.	Part Number	Qty.	Description
1	112-4761	1	Transaxle-Hydro, RH
2	112-4760	1	Transaxle-Hydro, LH
3	106-2174	2	V-Belt
4	95-3805	2	Spring
5	105-7049	1	Bracket-Spring
6	242-50	8	Nut-Lug
7	105-7047	2	Arm-Idler
8	106-2176	2	Pulley-Idler
9	32128-25	1	Nut-HF
10	37-8771	2	Bolt-Shoulder, HF
11	3256-3	2	Washer-Flat
12	108-8733-03	1	Hydro Frame ASM
13	106-7004	2	Wheel And Tire ASM
13:1	242-76	1	Rim
13:2	106-7006	1	Tire
13:3	232-27	1	Stem-Valve
13:99	107-2491	1	Tube-Tire ●

Ref.	Part Number	Qty.	Description
14	3256-1	2	Washer-Flat
15	107-8970-03	1	Brace-Frame, Left Side
16	322-20	4	Screw-HH
17	322-13	5	Screw-HH
18	3256-23	26	Washer-Plain
19	3296-29	27	Nut-Lock, NI
20	322-7	2	Screw-HH
21	5-4460	5	Washer-Pivot
22	107-2464	1	Arm-Bypass, RH ●
23	107-2463	1	Arm-Bypass, LH
24	112-4754-03	2	Anchor-Damper
25	3217-6	1	Nut-Hex
26	322-5	14	Screw-HH
27	322-9	2	Screw-HH
28	105-7039-03	2	Support-Hydro
29	1-806003	2	Pin-Cotter

● Not illustrated

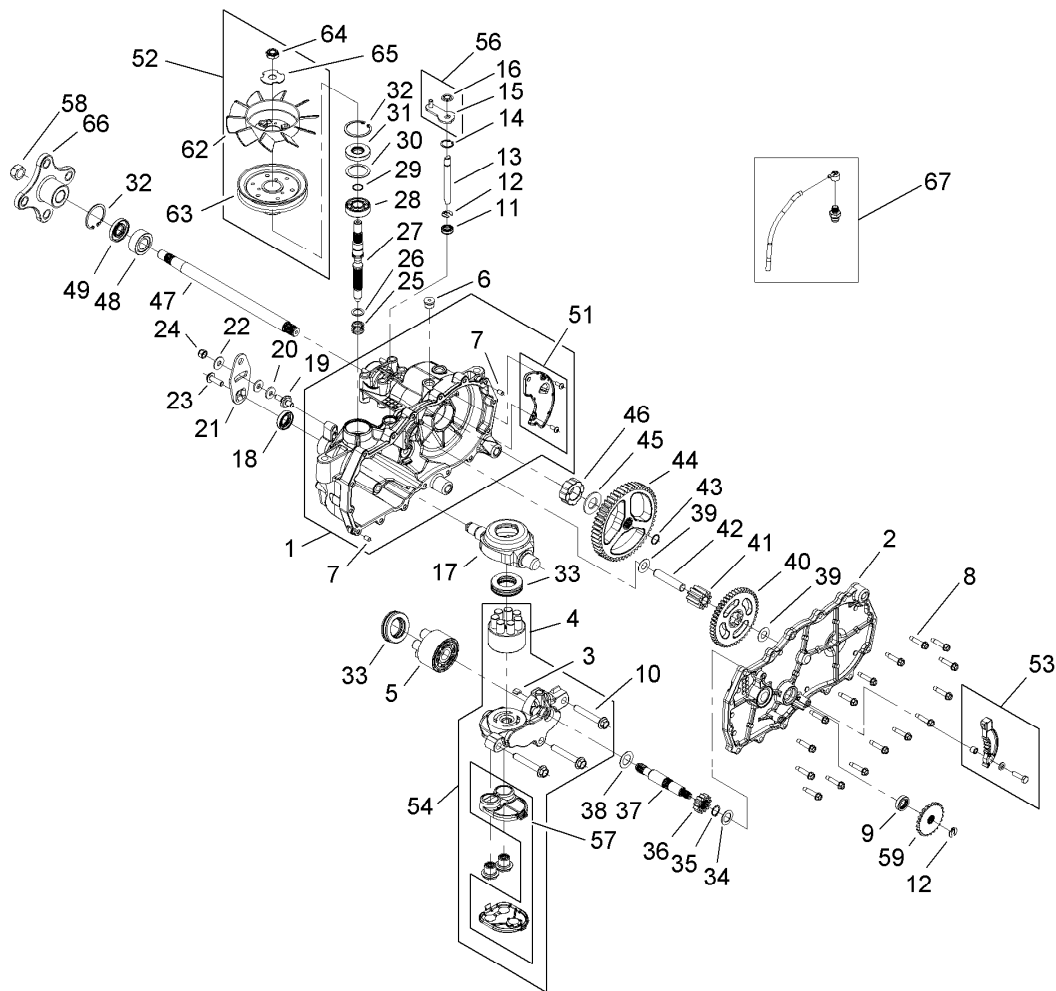


LH Hydro Transaxle Assembly No. 112-4760

Ref.	Part Number	Qty.	Description
1	106-8695	1	Main Housing ASM
2	106-8696	1	Side ASM
3	110-8560	1	Plate-Bypass
4	110-8561	1	Pump Block ASM
5	104-2106	1	Cylinder Block ASM
6	112-9850	1	Plug
7	104-2170	2	Pin
8	104-5305	16	Screw-HHF
9	112-9851	1	Brake Seal Kit
10	94-6926	3	Bolt
11	106-8676	1	Seal-Lip
12	106-8677	2	Ring-Retaining, External
13	106-8678	1	Rod-Bypass
14	106-8679	1	Ring-Retaining, Internal
15	107-2490	1	Arm-Bypass
16	106-8681	1	Ring-Retaining, External
17	104-5304	1	Swashplate-Trunnion
18	104-5313	1	Seal-Lip
19	104-2116	1	Stud
20	112-9853	1	Puck-Friction
21	106-8747	1	Arm-Control
22	5-4460	1	Washer-Pivot
23	107-2488	1	Screw
24	105-1872	1	Nut
25	94-1936	1	Spring-Block

Ref.	Part Number	Qty.	Description
26	94-1937	1	Washer-Thrust
27	104-5306	1	Shaft-Input
28	104-5311	1	Bearing-Ball
29	104-5307	1	Ring-Retaining
30	104-5308	1	Spacer
31	104-5310	1	Seal-Lip
32	104-5309	2	Ring-Retaining
33	94-6922	2	Bearing-Thrust
34	104-5339	1	Washer-Flat
35	104-5340	1	Ring-Retaining
36	104-5316	1	Gear-Pinion, 13T
37	106-8683	1	Shaft-Motor
38	104-5360	1	Washer
39	94-1933	2	Washer
40	104-5317	1	Gear-10T/48T
41	104-5318	1	Gear-Jackshaft, 10T
42	104-5329	1	Pin-Jackshaft
43	112-9854	1	Ring-Spiral, Retaining
44	112-9855	1	Gear-52T, Bull
45	112-9856	1	Washer
46	112-9857	1	Bearing-Sleeve
47	112-9858	1	Shaft-Axle
48	112-9859	1	Bushing-Axle
49	112-9860	1	Seal-Lip
50	106-8686	1	Seal Kit ●

● Not illustrated

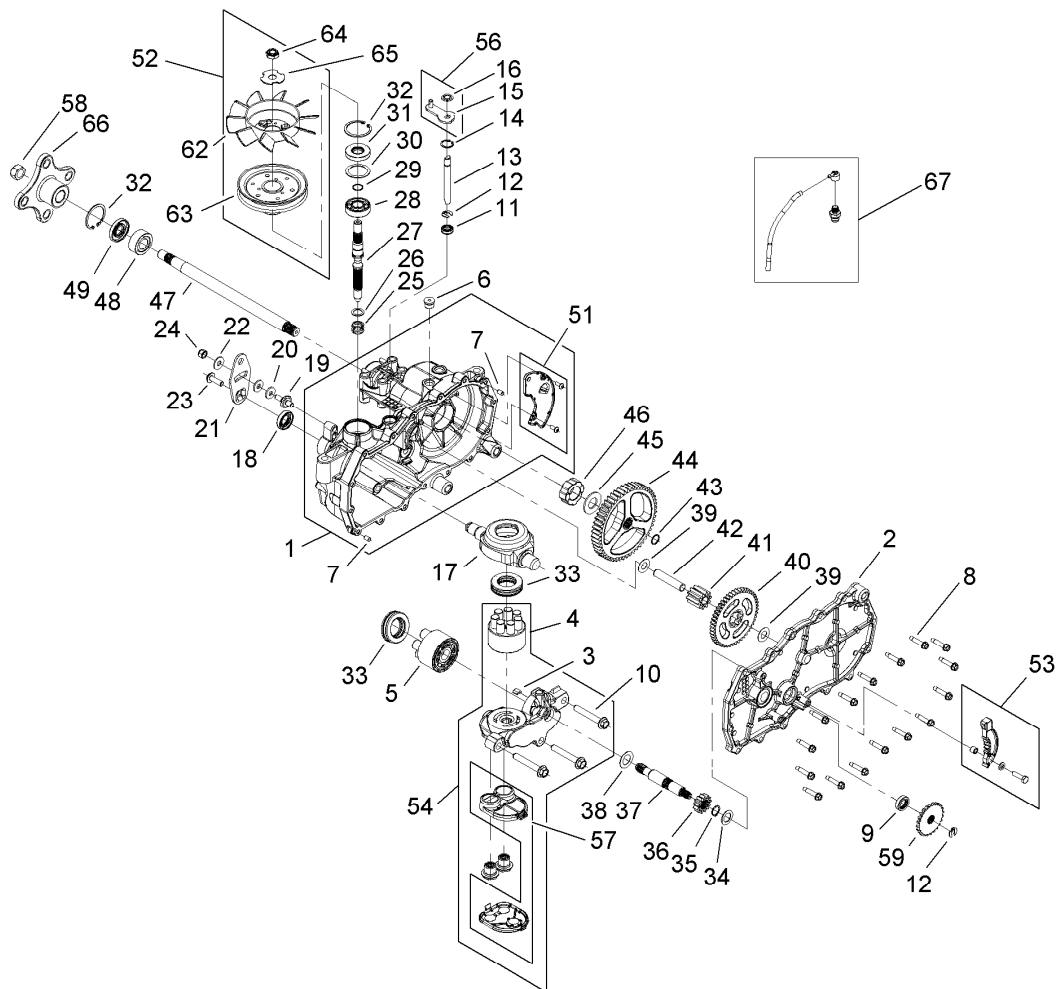


LH Hydro Transaxle Assembly No. 112-4760 (continued)

Ref.	Part Number	Qty.	Description
51	106-8697	1	Expansion Plate Kit
52	106-8698	1	Fan Pulley Kit
53	106-8688	1	Brake Arm Kit
54	112-9861	1	Center Section Filter Kit
55	112-9863	1	*obs* Tube-Sealant (Xref 104-2147) ●
56	107-2489	1	Bypass Arm Kit
57	106-8693	1	Filter Kit
58	110-8563	1	Nut-Lock, HH

Ref.	Part Number	Qty.	Description
59	106-8694	1	Disc-Brake, Cog
60	112-9864	1	Hose ●
61	108-8562	1	Pinch-Clamp, Single Ear ●
62	110-8566	1	Fan-6 Inch, 10 Blade
63	104-1754	1	Pulley
64	105-1875	1	Nut-Lock
65	107-9122	1	Washer-Slotted
66	105-1894	1	Hub ASM
67	112-9866	1	Breather Kit

● Not illustrated

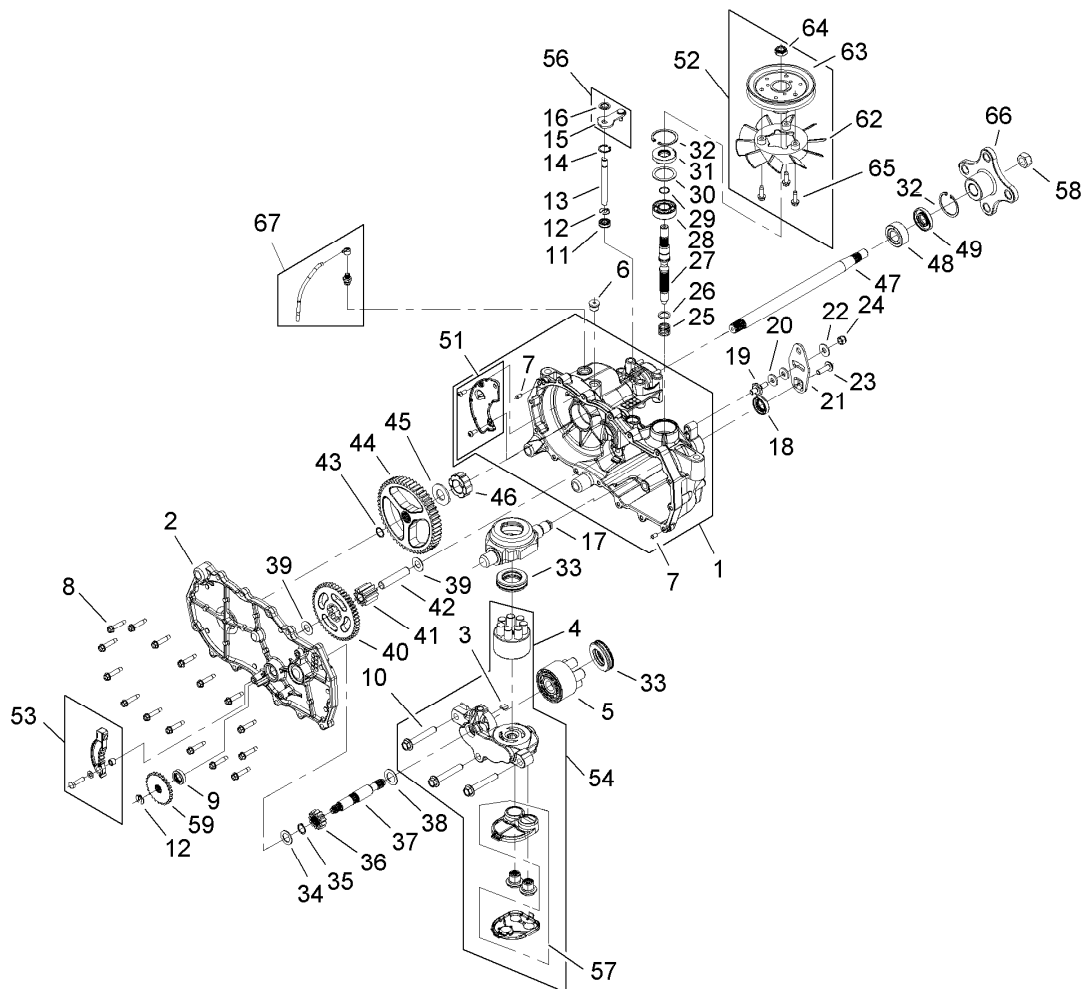


RH Hydro Transaxle Assembly No. 112-4761

Ref.	Part Number	Qty.	Description
1	106-8674	1	Main Housing ASM
2	106-8675	1	Side ASM
3	110-8560	1	Plate-Bypass
4	110-8561	1	Pump Block ASM
5	104-2106	1	Cylinder Block ASM
6	112-9850	1	Plug
7	104-2170	2	Pin
8	104-5305	16	Screw-HHF
9	112-9851	1	Brake Seal Kit
10	94-6926	3	Bolt
11	106-8676	1	Seal-Lip
12	106-8677	2	Ring-Retaining, External
13	106-8678	1	Rod-Bypass
14	106-8679	1	Ring-Retaining, Internal
15	112-9852	1	Arm-Bypass
16	106-8681	1	Ring-Retaining, External
17	104-5304	1	Swashplate-Trunnion
18	104-5313	1	Seal-Lip
19	104-2116	1	Stud
20	112-9853	1	Puck-Friction
21	106-8747	1	Arm-Control
22	5-4460	1	Washer-Pivot
23	107-2488	1	Screw
24	105-1872	1	Nut
25	94-1936	1	Spring-Block

Ref.	Part Number	Qty.	Description
26	94-1937	1	Washer-Thrust
27	104-5306	1	Shaft-Input
28	104-5311	1	Bearing-Ball
29	104-5307	1	Ring-Retaining
30	104-5308	1	Spacer
31	104-5310	1	Seal-Lip
32	104-5309	2	Ring-Retaining
33	94-6922	2	Bearing-Thrust
34	104-5339	1	Washer-Flat
35	104-5340	1	Ring-Retaining
36	104-5316	1	Gear-Pinion, 13T
37	106-8683	1	Shaft-Motor
38	104-5360	1	Washer
39	94-1933	1	Washer
40	104-5317	1	Gear-10T/48T
41	104-5318	1	Gear-Jackshaft, 10T
42	104-5329	1	Pin-Jackshaft
43	112-9854	1	Ring-Spiral, Retaining
44	112-9855	1	Gear-52T, Bull
45	112-9856	1	Washer
46	112-9857	1	Bearing-Sleeve
47	112-9858	1	Shaft-Axle
48	112-9859	1	Bushing-Axle
49	112-9860	1	Seal-Lip
50	106-8686	1	Seal Kit ●

● Not illustrated

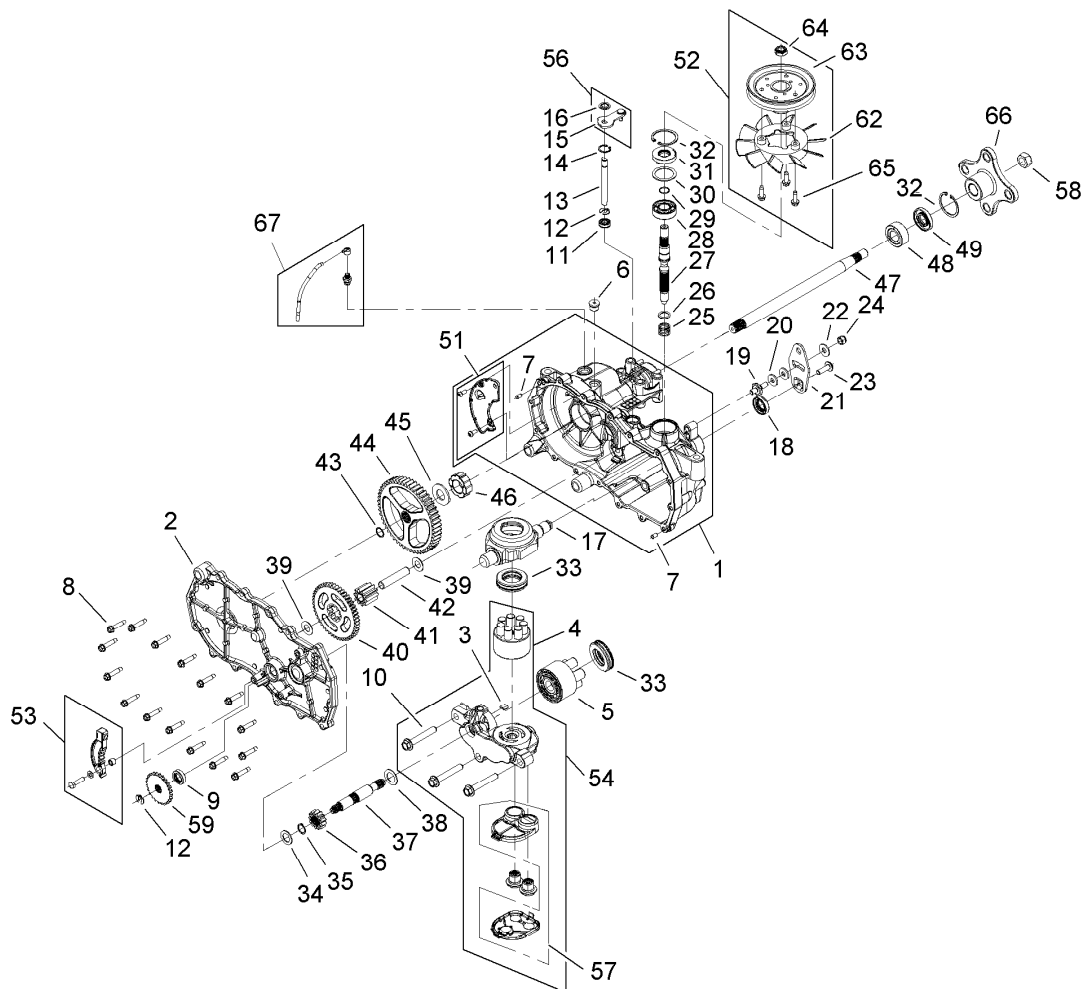


RH Hydro Transaxle Assembly No. 112-4761 (continued)

Ref.	Part Number	Qty.	Description
51	106-8687	1	Expansion Plate Kit
52	105-1928	1	Fan Pulley Kit
53	106-8688	1	Brake Arm Kit
54	112-9862	1	Center Section Filter Kit
55	112-9863	1	*obs* Tube-Sealant (Xref 104-2147) ●
56	107-2489	1	Bypass Arm Kit
57	106-8693	1	Filter Kit
58	105-1895	1	Nut

Ref.	Part Number	Qty.	Description
59	106-8694	1	Disc-Brake, Cog
60	112-9865	1	Hose ●
61	108-8562	1	Pinch-Clamp, Single Ear ●
62	105-1927	1	Fan
63	105-1896	1	Pulley
64	105-1875	1	Nut-Lock
65	104-2120	3	Screw
66	105-1894	1	Hub ASM
67	112-9866	1	Breather Kit


● Not illustrated

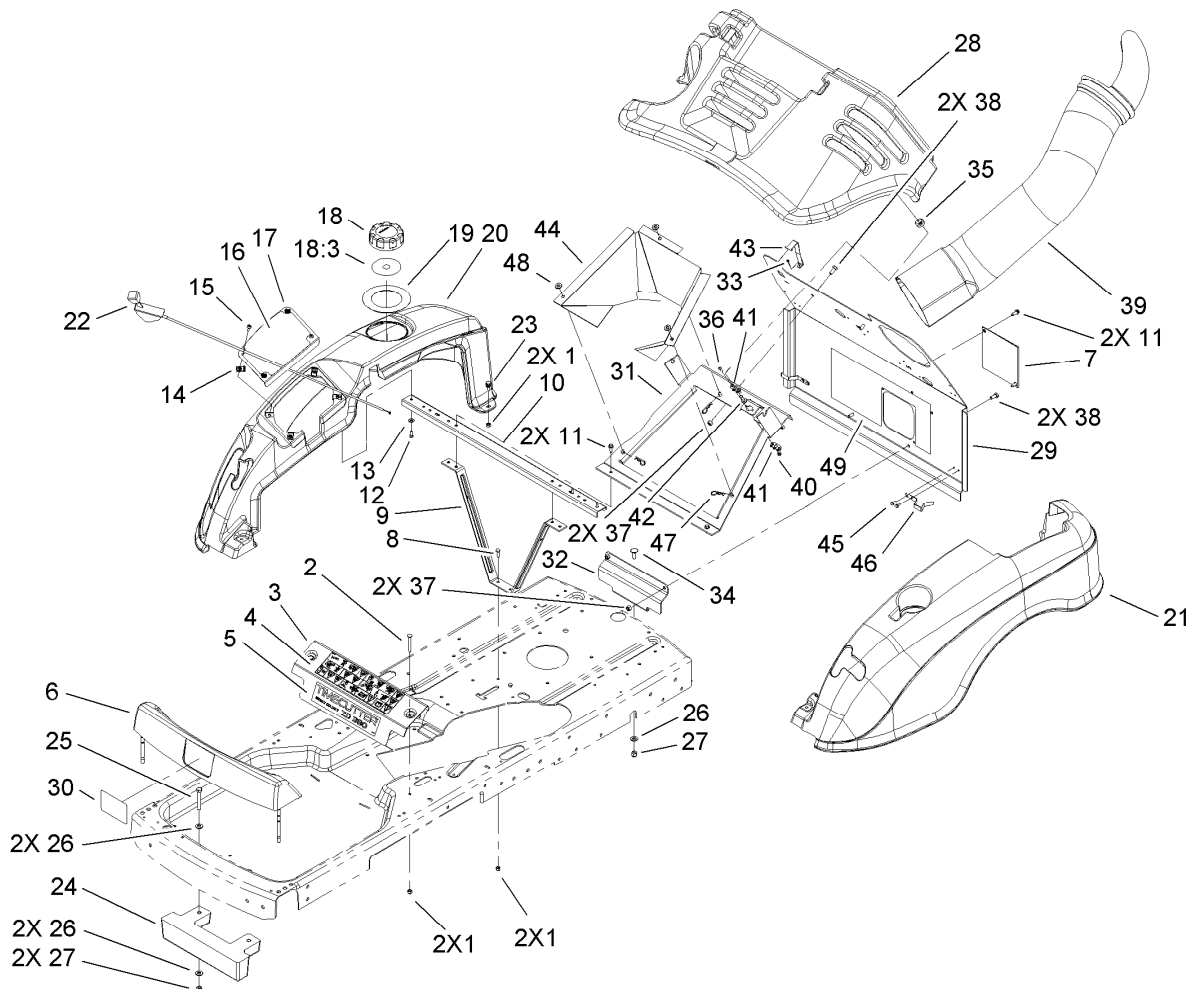

Styling Assembly


Ref.	Part Number	Qty.	Description
1	3296-42	6	Nut-Lock, NI
2	3229-7	2	Screw-CARR
3	106-2164-03	1	Bracket-Support, Front
4	110-6567	1	Decal-Danger
5	112-7551	1	Decal
6	105-6965	1	Footrest ASM
7	112-7571	1	Access Door ASM
8	321-4	2	Screw-HH
9	106-6994-03	1	Brace ASM
10	108-2313-03	1	Channel-Cross
11	32144-44	4	Screw-HWH, Thread Roll
12	46-8090	4	Screw-Plastite
13	3256-22	4	Washer-Flat
14	107069	4	Clip
15	3258-166	4	Screw-PRH
16	106-2224	1	Decal-Control
17	106-2167-03	1	Panel-Control
18	88-3980	1	Gas Cap ASM
18:3	88-4010	1	Gasket-Cap, Gas
19	106-7042	1	Seal-Rubber
20	106-2161	1	Cover-Side, RH
21	108-8824	1	Cover-Side, LH
22	104-8081	1	Cable-Throttle
23	11-9030	2	Screw-Shoulder
24	105-6972-03	1	Weight-Bagger

Ref.	Part Number	Qty.	Description
25	323-12	2	Screw-HH
26	3256-24	5	Washer-Flat
27	3296-39	3	Nut-Lock, NI
28	110-3647	1	Cover-Engine
29	112-7553-03	1	Shield-Heat, Bag
30	105-6971	1	Decal
31	112-7565-03	1	Offset Hinge ASM
32	112-7552-03	1	Hitch-Trailer
33	3272-6	1	Pin-Cotter
34	3231-22	1	Screw-CARR
35	108-2305	1	Grommet
36	3274-39	2	Screw-HSBH
37	3296-29	4	Nut-Lock, NI
38	322-3	4	Screw-HH
39	110-3626	1	Tube-Discharge
40	3296-12	2	Nut-Lock, NI
41	107-9199	2	Plate
42	107-9198	1	Pin-Hood
43	114-3603	1	Tab-Switch
44	112-7555-03	1	Duct-Fan, Engine
45	32144-1	4	Screw-Taptite
46	112-7557	2	Clip-Retainer, Bag
47	3290-467	3	Pin-Hair
48	62-1230	3	Washer-Rubber
49	112-7567	1	Foil-Heat Shield, Bag

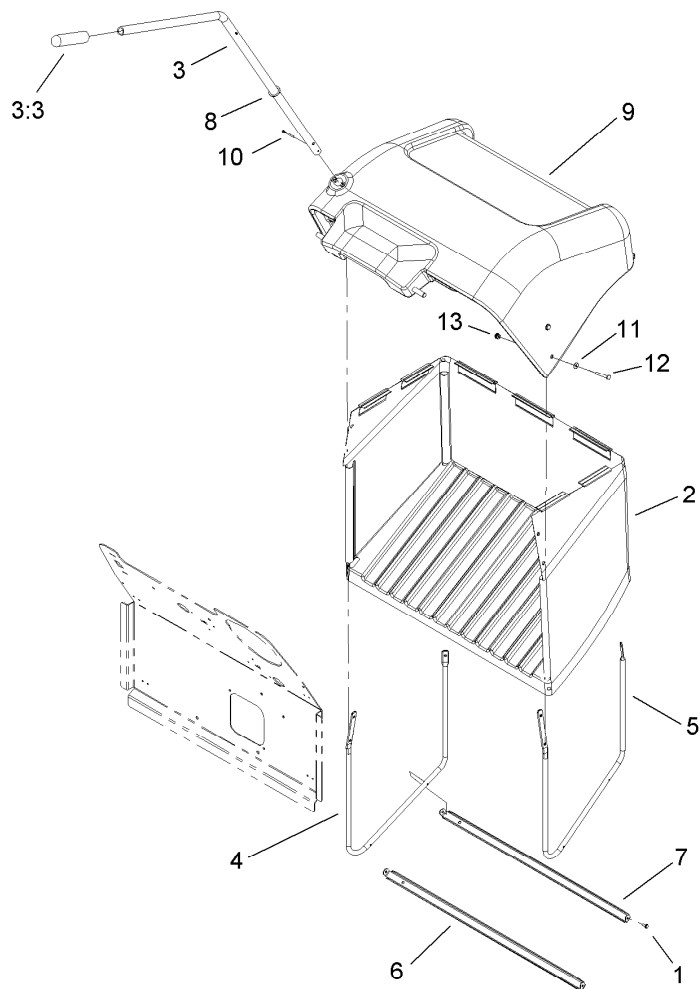

Grass Bag Assembly


Ref.	Part Number	Qty.	Description
1	32144-1	4	Screw-Taptite
2	110-3604	1	Grass Bag ASM
3	114-3604	1	Lift Handle ASM
3:3	110-1037	1	Grip-Handle
4	110-3606-03	1	Frame-Bag, RH
5	110-3607-03	1	Frame-Bag, LH
6	110-1005-03	1	Support-Base Front
7	110-1006-03	1	Support-Base Rear
8	1-303352	1	Washer-Spindle
9	110-3605	1	Cover-Grass Catcher
10	3272-12	1	Pin-Cotter
11	3256-1	6	Washer-Flat
12	321-53	6	Screw-HH
13	3296-73	6	Nut-Lock, NI

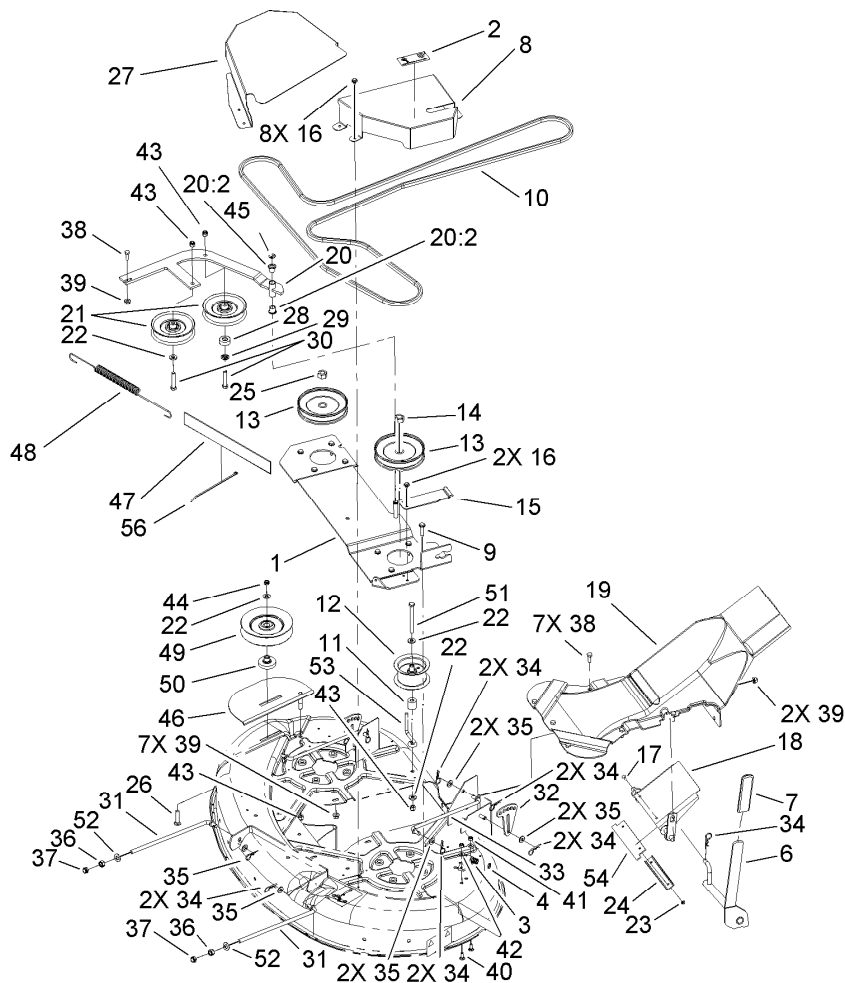

42 Inch Top Deck Assembly


Ref.	Part Number	Qty.	Description
1	112-6737-03	1	Stiffener ASM
2	108-8769	1	Decal-Bag On Demand
3	95-2747	1	Fitting-Washout
4	46-6290	1	O-Ring
6	110-8811-03	1	Control Lever ASM
7	105-3450	1	Grip-Lever, Lift
8	112-3481-03	1	Cover-Belt, LH
9	32144-57	8	Screw
10	108-9459	1	Belt-Aa
11	61-2220	1	Spacer
12	107280	1	Pulley-Idler
13	88-5330	2	Pulley
14	3219-6	1	Nut-Hex
15	112-6675	1	Spring-Detent
16	46-8560	10	Screw-HHFTF
17	3229-34	2	Screw-CARR
18	112-3428-03	1	38 Inch Door ASM
19	108-8865	1	Adapter-Discharge
20	110-3681	1	Idler Arm W/Bushings ASM
20:2	256-219	2	Bushing
21	94-2447	2	Pulley-Idler
22	65-9130	4	Washer
23	3296-12	2	Nut-Lock, NI
24	110-8575	1	Plate-Seal, Door
25	3219-16	1	Nut-Hex
26	3231-5	1	Screw-CARR
27	112-3480-03	1	Cover-Belt, RH
28	108-8807	1	Slider

Ref.	Part Number	Qty.	Description
29	108-8808	1	Washer-Shoulder
30	323-10	2	Screw-HH
31	105-3437	2	Rod-Hanger
32	88-5570-03	2	Link-Adjusting, HOC
33	108-8834	2	Rod-Lift, Deck
34	9335054	11	Pin-Hair
35	3256-24	8	Washer-Flat
36	3219-4	2	Nut-Hex
37	3296-38	2	Nut-Lock, NI
38	322-4	8	Screw-HH
39	3296-58	10	Nut-Lock, NI
40	3229-1	2	Bolt-CARR
41	3296-42	2	Nut-Lock, NI
42	3256-1	2	Washer-Flat
43	3296-39	4	Nut-Lock, NI
44	3296-59	1	Nut-Lock, NI
45	32120-47	1	Ring-Retaining, External
46	110-3625-03	1	Idler Bracket ASM
47	74-3280	1	Guard-Splash
48	112-4763	1	Spring-Arm, Idler
49	1-633166	1	Pulley-Idler
50	108-8802	1	Idler Bushing And Spacer ASM
51	323-42	1	Screw-HH
52	3256-25	2	Washer-Flat
53	112-4787	1	Guide-Belt, Idler
54	114-3600	1	Seal-Door, Recycle
56	614249	1	Tie-Cable

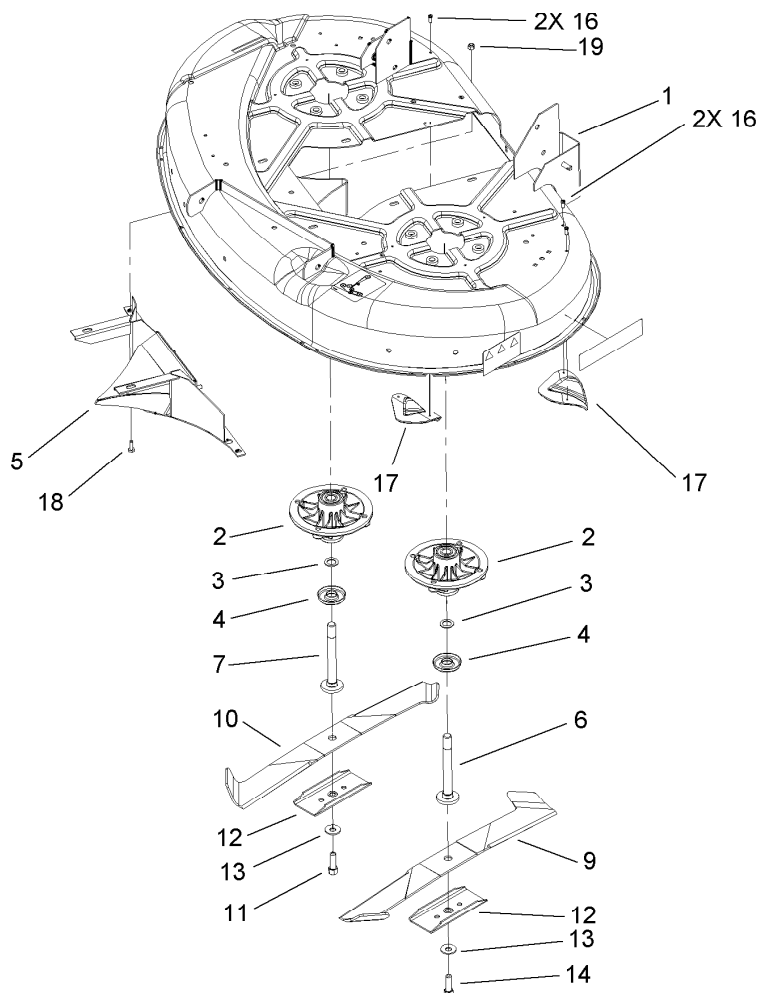


42 Inch Bottom Deck Assembly

Ref.	Part Number	Qty.	Description
1	110-8555	1	42 Inch Deck ASM
2	107-9161	2	Spindle ASM
3	80-4380	2	Spacer
4	80-4360	2	Shield-Bearing
5	112-4794-03	1	42 Inch Rear Baffle ASM
6	80-4341	1	Shaft-Spindle
7	108-8801	1	Shaft-Spindle
9	107-8959-03	1	Blade-LH, 21.60 Inch
10	107-8958-03	1	Blade-RH, 21.60 Inch
11	108-8823	1	Screw-HH
12	106-2248-03	2	Stiffener-Blade
13	3290-465	2	Washer-Belleville
14	26-0671	1	Screw-HH
16	32144-111	4	Screw-PPH
17	76-2160	2	Plate-Kicker
18	321-4	3	Screw-HH
19	3296-42	3	Nut-Lock, NI

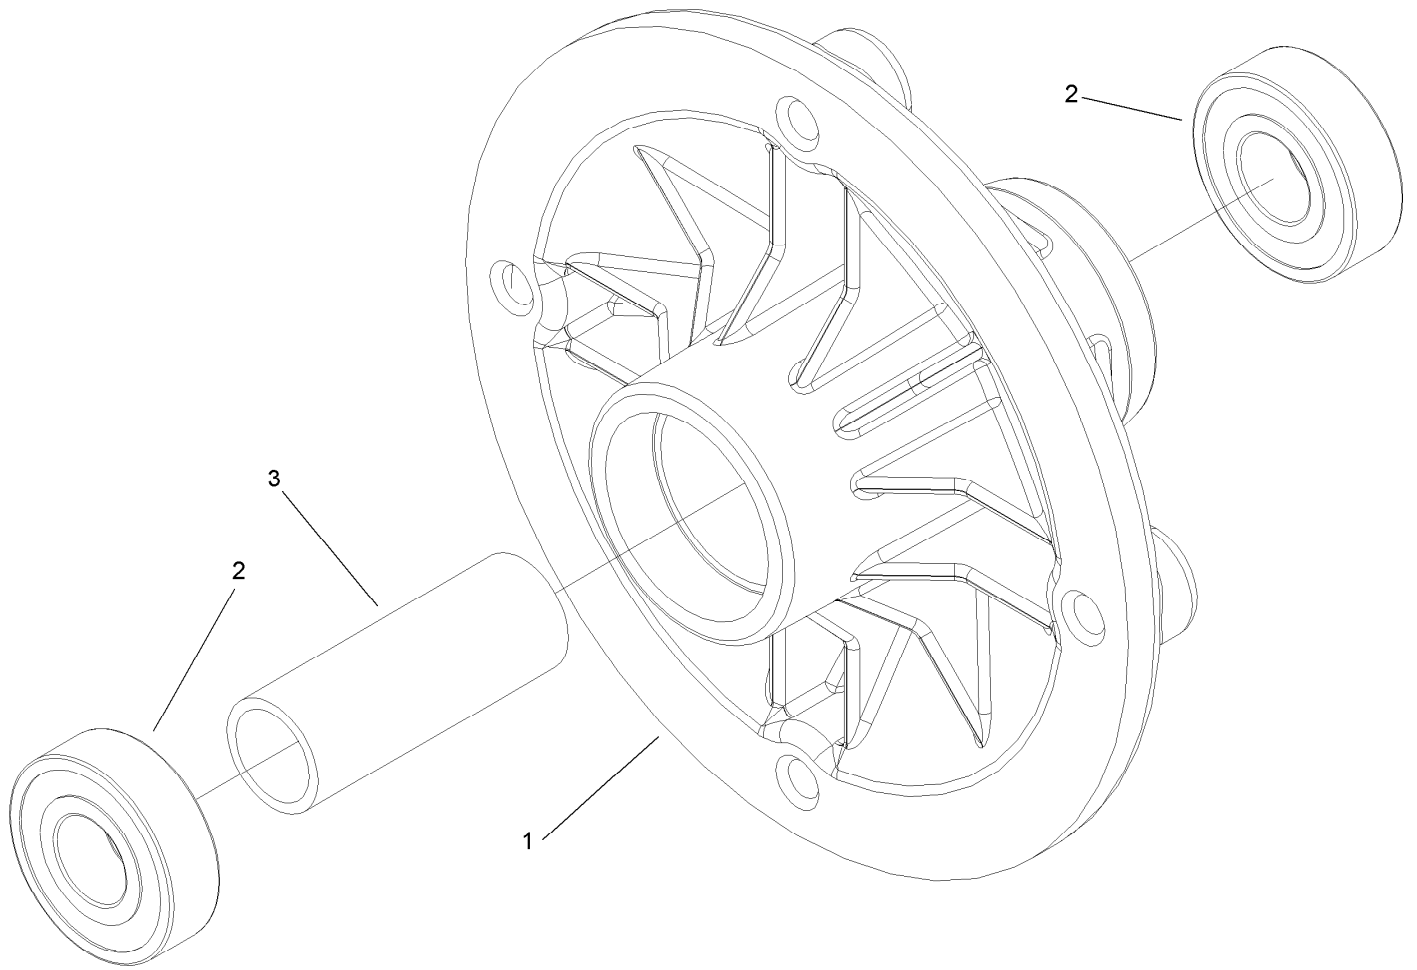

Spindle Housing No. 107-9161 Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	88-4510	1	Housing-Spindle
2	136-5441	2	Bearing-Ball
3	62-3661	1	Spacer

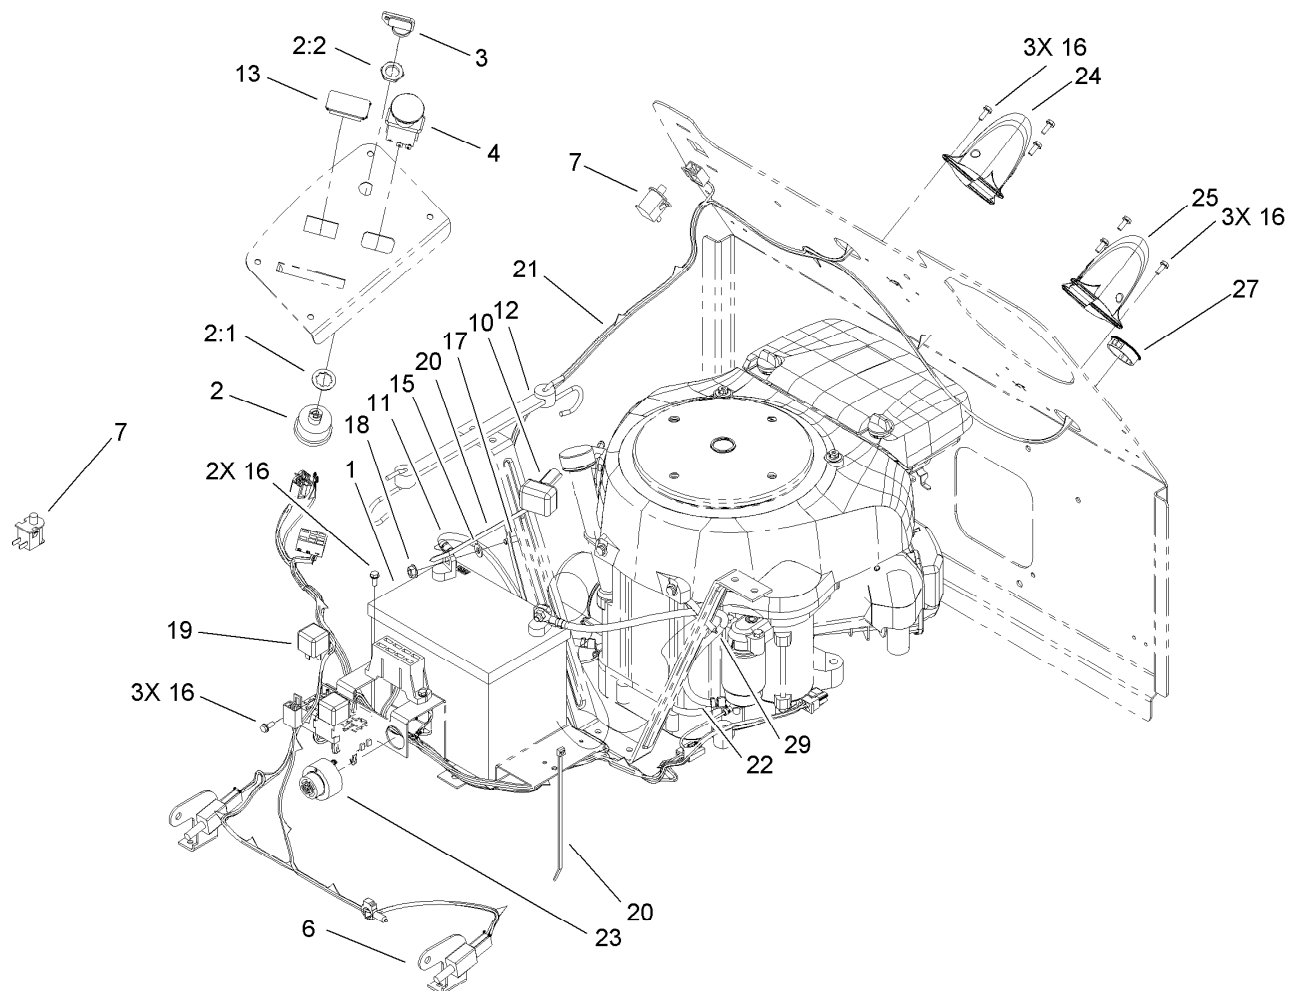

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	104-2493	1	Battery
2	88-9830	1	Key Switch ASM
2:1	3254-5	1	Washer-Lock
2:2	218-461	1	Nut-HH
3	63-8360	1	Key-Ignition
4	95-7489	1	Switch-PTO
6	106-2216	2	Switch
7	82-2190	2	Switch-Bail
10	93-3190	1	Boot-Insulator, Terminal
11	95-7654	1	Cable-Negative, Black
12	104-2466	1	Holddown-Battery
13	99-7420	1	Plug-Hole
15	3256-22	2	Washer-Flat


Ref.	Part Number	Qty.	Description
16	32144-1	11	Screw-Taptite
17	321-4	2	Screw-HH
18	32128-33	2	Nut-HF
19	98-7249	3	Relay
20	614249	2	Tie-Cable
21	112-7559	1	Harness-Wire
22	92-6989	1	Wire-21 Inch
23	103-0205	1	Alarm-Tone, Dual
24	112-9890	1	Bag Sensor ASM
25	110-8018	1	Bag Sensor ASM
27	110-8589	2	Bushing-Harness, Wire
29	105-1853	1	Clamp-Hose

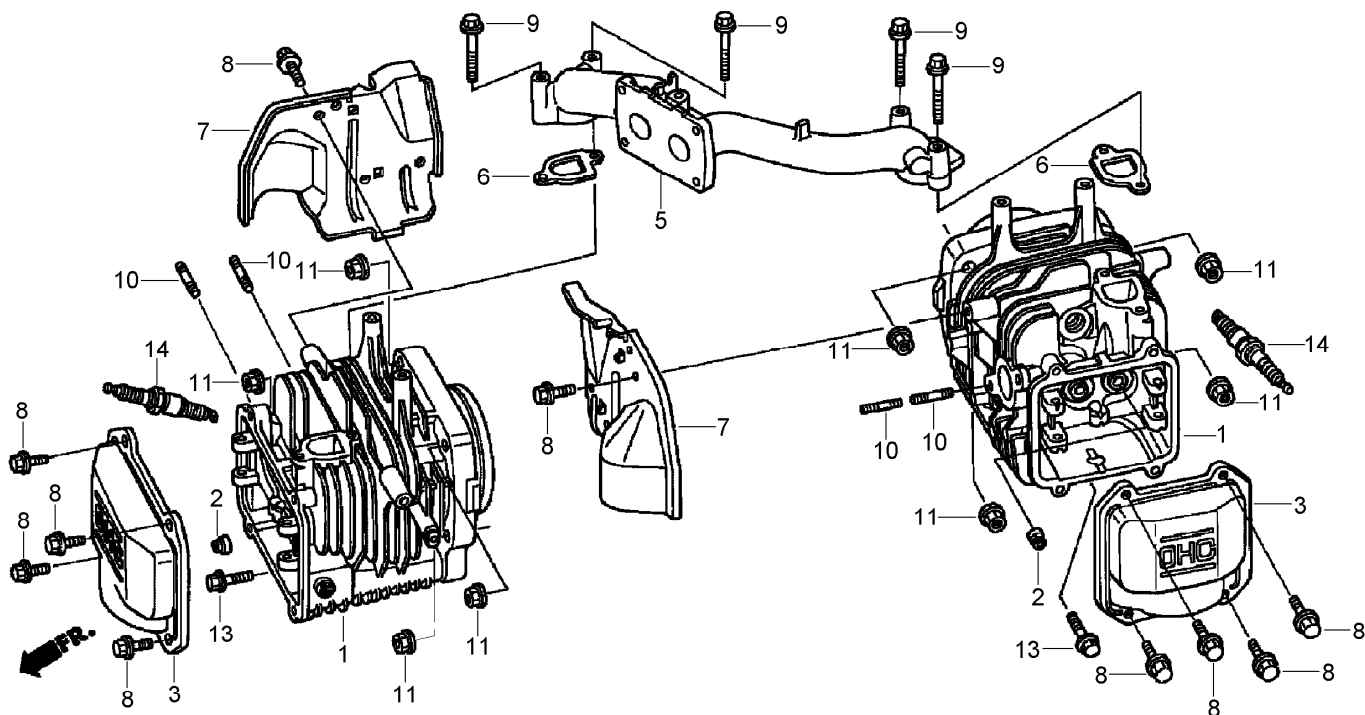

Cylinder Assembly Honda GXV530 EXA2

Ref.	Part Number	Qty.	Description
1	12100-Z0A-406	2	Cylinder ●
2	12209-422-005	2	Seal-Stem, Valve ●
3	12311-Z0A-000	2	Cover-Head ●
5	17101-Z0A-000	1	Manifold-Intake ●
6	17151-Z0A-000	2	Gasket-Manifold, Intake ●
7	19631-Z0A-000	2	Shroud ●
8	90013-883-000	10	Bolt-Flange (6X12) (C T200) ●
9	90016-ZE8-000	4	Bolt-Flange (6X45) (C T200) ●
10	90045-892-000	4	Bolt-Stud (6X28) ●
11	90201-Z0A-000	8	Nut-Flange (8Mm) ●
13	95701-06030-00	2	Bolt-Flange (6X30) ●
14	98079-54846	2	Spark Plug (B P R4E S) (N G K) ●
14	98079-54855	2	Spark Plug (W14E P R-U) (Denso) ●
14	98079-55846	2	Spark Plug (B P R 5E S) (N G K) ●
14	98079-55855	2	Spark Plug (W16E P R-U) (Denso) ●


● Obtain parts from www.honda-engines.com

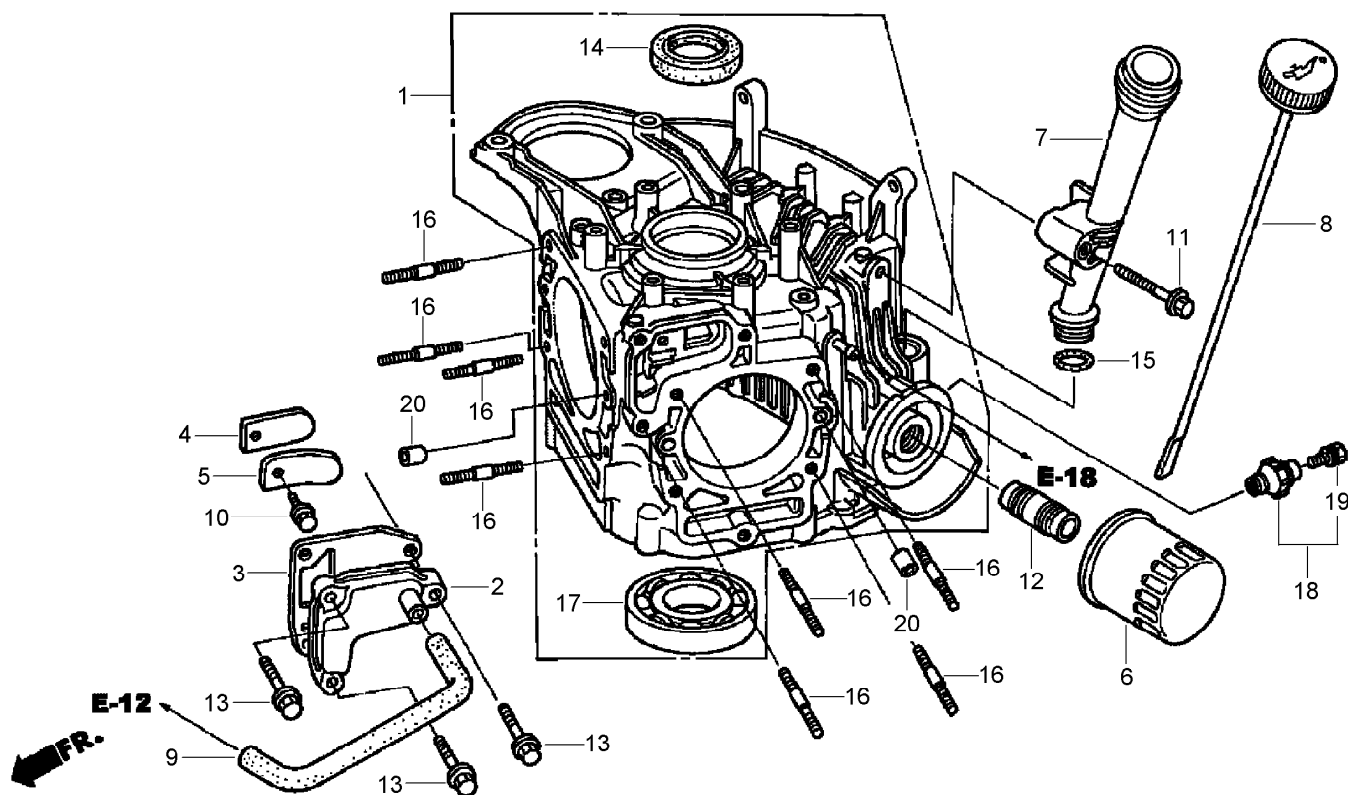

Crankcase Assembly Honda GXV530 EXA2

Ref.	Part Number	Qty.	Description
1	11100-Z0A-409	1	Crankcase ASM (840) ●
2	12356-Z0A-000	1	Cover-Breather ●
3	12358-Z0A-000	1	Gasket-Cover, Breather ●
4	12372-ZA0-701	1	Plate-Valve ●
5	12374-Z0A-000	1	Stopper-Valve ●
6	15410-MCJ-000	1	Filter-Oil (Toyo Roki) ●
7	15631-Z0A-000	1	Extension-Filler, Oil ●
8	15655-Z0A-800	1	Dipstick-Oil ●
9	15721-Z0A-000	1	Tube-Breather ●
10	90002-892-000	1	Bolt-Flange (5X10) ●
11	90016-ZE8-000	1	Bolt-Flange (6X45) (C T200) ●
12	90018-PN3-000	1	Holder-Filter, Oil ●
13	90121-952-000	3	Bolt-Flange (6X25) (C T 200) ●
14	91201-ZE3-004	1	Seal-Oil (35X5X8) ●
15	91301-ZE9-003	1	O-Ring (22.5X2.2) ●
16	92900-08028-0E	8	Bolt-Stud (8X28) ●
17	96100-62070-00	1	Bearing-Ball, Radial ●
18	35490-Z0A-003	1	Oil Pressure Switch ASM ●
19	90002-PA6-003	1	Bolt-Washer (4X8) (Denso) ●
20	94301-08140	4	Pin-Dowel (8X14) ●


● Obtain parts from www.honda-engines.com

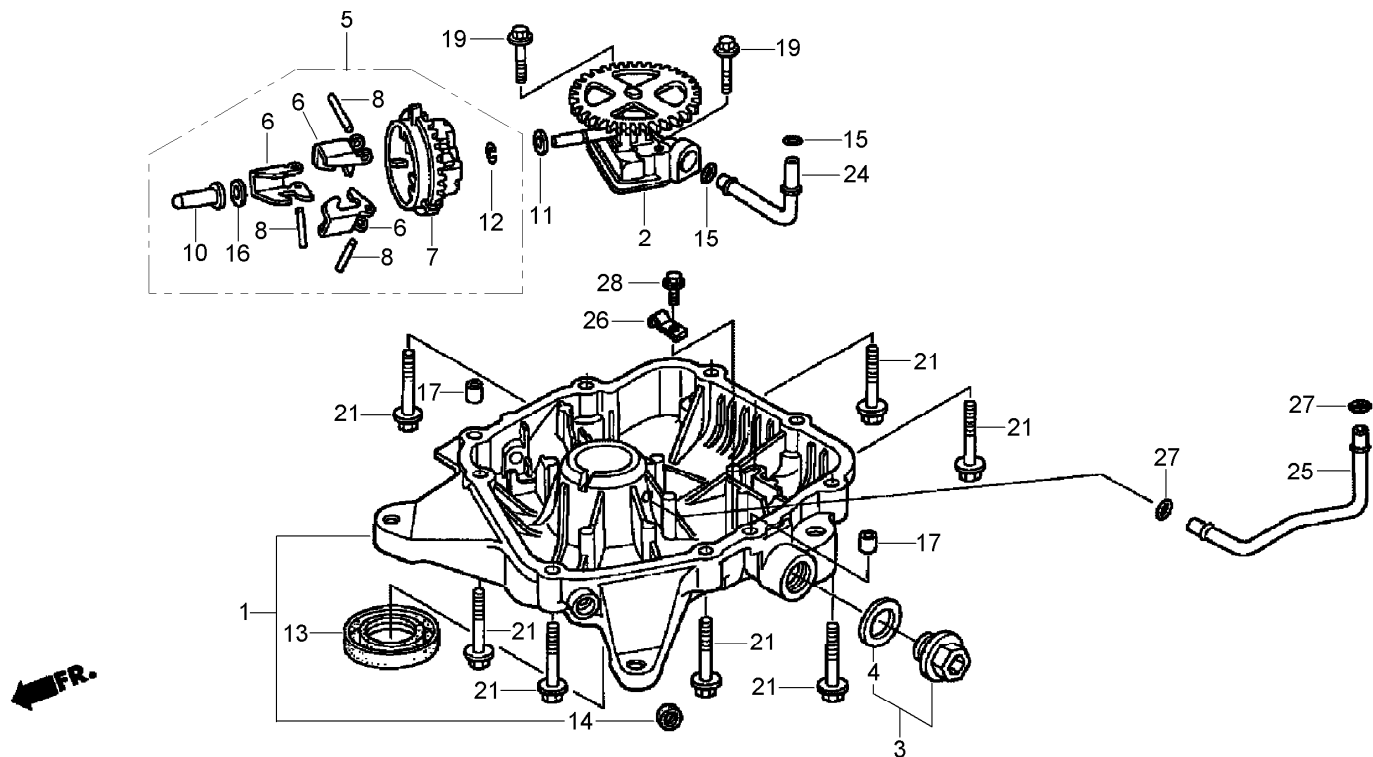

Oil Pan Assembly Honda GXV530 EXA2

Ref.	Part Number	Qty.	Description
1	11300-Z0A-830	1	Oil Pan ASM ●
2	15100-Z0A-811	1	Oil Pump ASM ●
3	15550-Z0A-810	1	Drain Cap ASM ●
4	15625-ZE1-003	1	Gasket-Cap, Oil Filler ●
5	16510-Z0A-000	1	Governor ASM ●
6	16511-Z0A-000	3	Weight-Governor ●
7	16512-Z0A-000	1	Holder-Weight, Governor ●
8	16513-ZE2-000	3	Pin-Weight, Governor ●
10	16531-Z0A-000	1	Slider-Governor ●
11	90473-147-000	1	Washer (6X16) ●
12	90602-ZE1-000	1	Clip-Holder, Governor ●
13	91202-Z0A-003	1	Seal-Oil (31X50X8) ●
14	91259-VM0-000	1	Seal-Oil (10X16X4.5) ●
15	91301-Z0A-003	2	O-Ring (7.5X2.3) ●
16	94101-06800	1	Washer-Plain (6Mm) ●
17	94301-08140	2	Pin-Dowel (8X14) ●
19	95701-06035-00	1	Bolt-Flange (6X35) ●
21	95701-08040-00	7	Bolt-Flange (8X40) ●
24	15161-Z0A-000	1	Pipe-Pump, Oil ●
25	15162-Z0A-800	1	Pipe-Supply, Oil ●
26	15163-Z0A-000	1	Holder-Pipe, Oil ●
27	91302-Z0A-003	2	O-Ring (5.8X2) ●
28	95701-06012-00	1	Bolt-Flange (6X12) ●


● Obtain parts from www.honda-engines.com

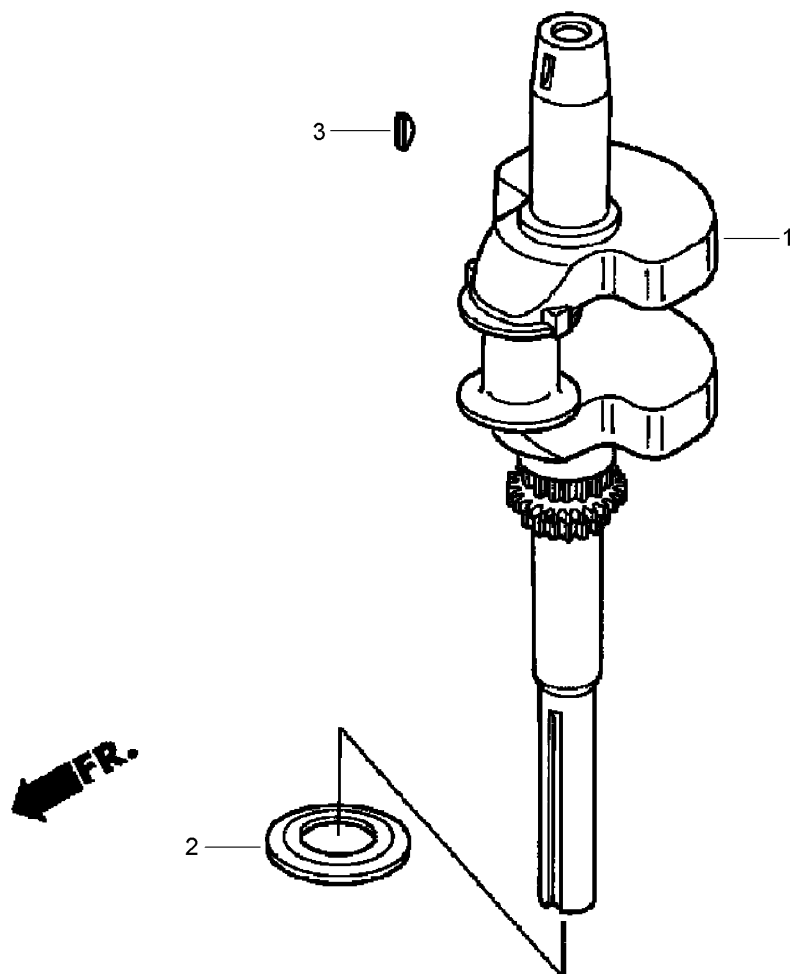

Crankshaft Assembly Honda GXV530 EXA2

Ref.	Part Number	Qty.	Description
1	13310-Z0A-800	1	Crankshaft ●
2	90401-Z0A-000	1	Washer-Thrust ●
3	90741-ZE2-000	1	Key-Woodruff, Special (25X18) ●



● Obtain parts from www.honda-engines.com

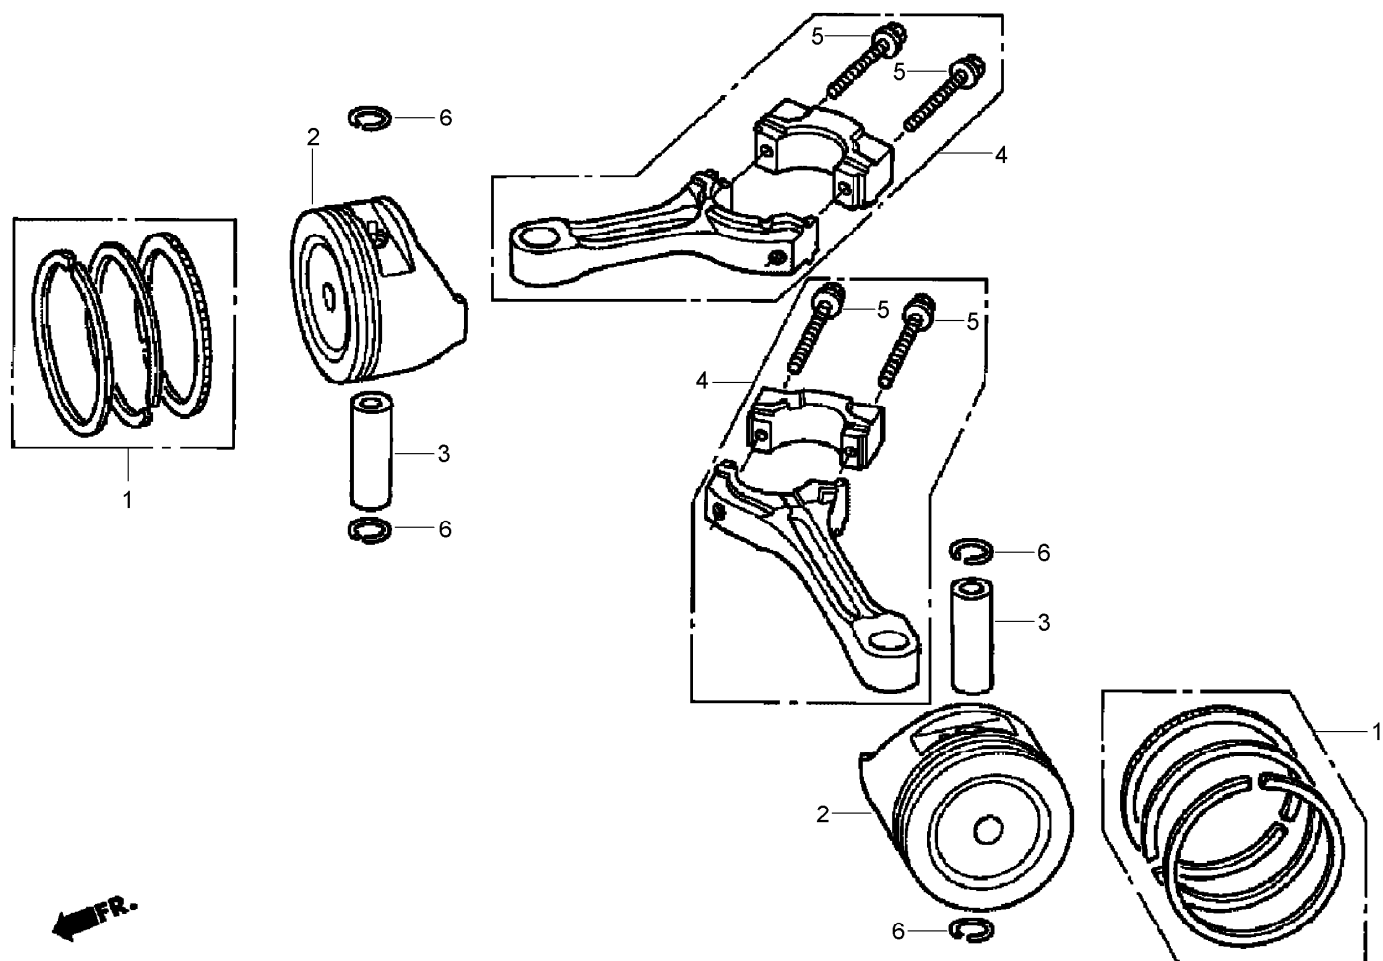

Piston and Connecting Rod Assembly Honda GXV530 EXA2

Ref.	Part Number	Qty.	Description
1	13010-Z0A-003	2	Piston Ring Set (STD) (Nippon) ●
1	13010-Z0A-014	2	Piston Ring Set ●
2	13101-Z0A-800	2	Piston (STD) ●
3	13111-ZJ1-840	2	Pin-Piston ●
4	13200-Z0A-801	2	Connecting Rod ASM ●
5	90001-ZN1-000	4	Bolt-Rod, Connecting (6X37) ●
6	90551-ZE1-000	4	Clip-Pin, Piston (18 Mm) ●


● Obtain parts from www.honda-engines.com

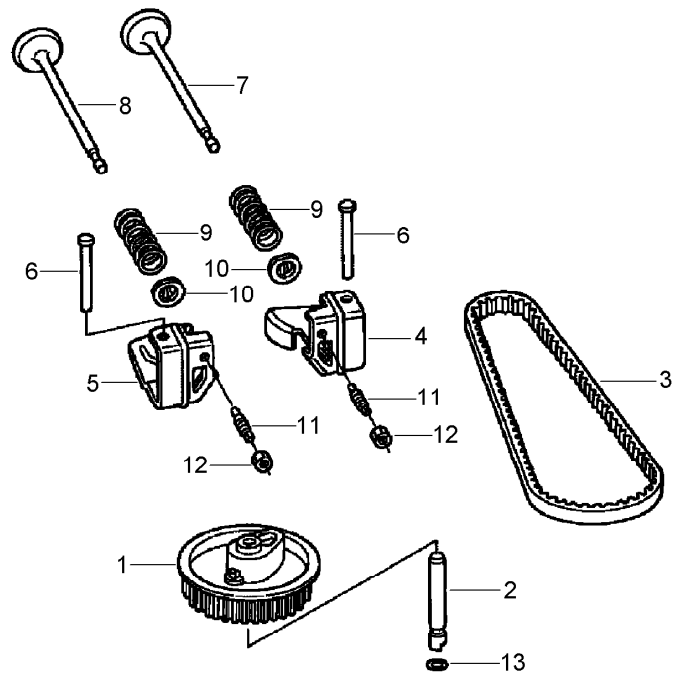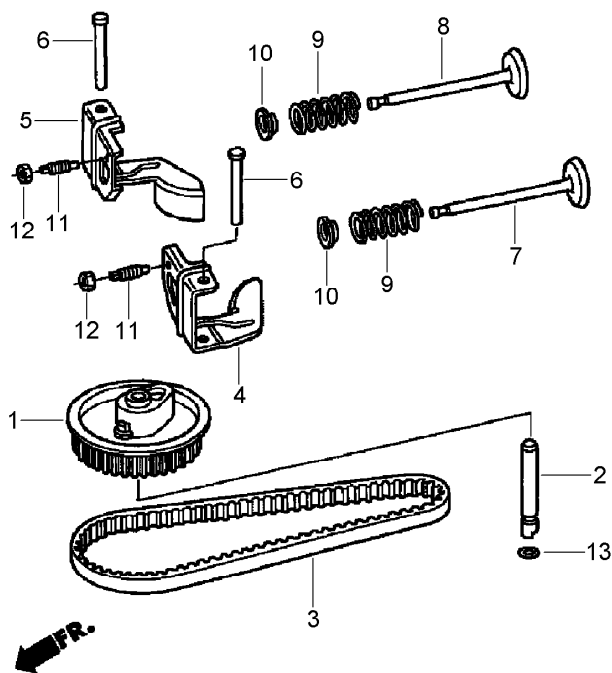

Camshaft Assembly Honda GXV530 EXA2

Ref.	Part Number	Qty.	Description
1	14320-Z0A-000	2	Pulley-Camshaft ●
2	14324-ZL8-000	2	Shaft-Pulley, Cam ●
3	14400-Z0A-003	2	Belt-Timing (97Hu8 G-200) ●
4	14431-Z0A-000	2	Arm-Valve Rocker, Intake ●
5	14441-Z0A-000	2	Arm-Valve Rocker, Exhaust ●
6	14461-Z0A-000	4	Shaft-Arm, Rocker ●
7	14711-Z0A-000	2	Valve-Intake ●
8	14721-Z0A-000	2	Valve-Exhaust ●
9	14751-ZE1-000	4	Spring-Valve ●
10	14771-ZE1-000	4	Retainer-Spring, Valve (Intake) ●
11	90012-333-000	4	Screw-Adjusting, Tappet ●
12	90206-001-000	4	Nut-Adjusting, Tappet ●
13	91301-ZM0-V31	2	O-Ring (6.8X19) (Arai) ●


● Obtain parts from www.honda-engines.com

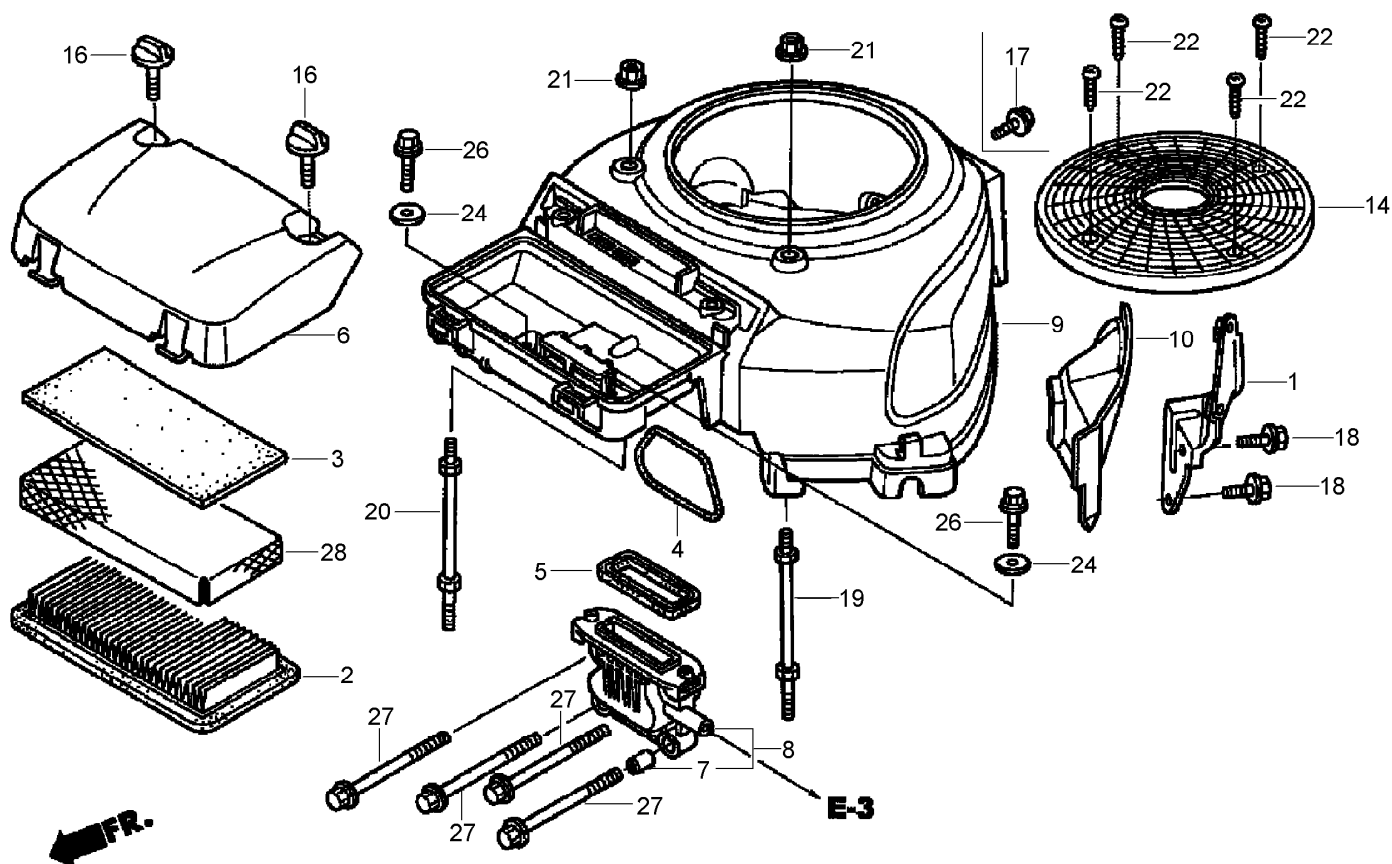

Fan Cover Assembly Honda GXV530 EXA2

Ref.	Part Number	Qty.	Description
1	16711-Z0A-000	1	Stay-Pump, Fuel ●
2	17211-Z0A-013	1	Element-Cleaner, Air ●
3	17218-Z0A-810	1	Filter (Outer) ●
4	17228-Z0A-003	1	Gasket-Cleaner, Air ●
5	17229-Z0A-000	1	Seal-Housing, Air Cleaner ●
6	17231-Z0A-000	1	Cover-Cleaner, Air ●
7	17238-ZJ4-830	4	Collar A-Cleaner, Air ●
8	17410-Z0A-010	1	Elbow-Cleaner, Air ●
9	19611-Z0A-010ZA	1	Cover-Fan (Nh1) (Black) ●
10	19612-Z0A-000	1	Plate-Side ●
14	28452-Z0A-000ZA	1	Grid-Screen Nh105 (Matte Black) ●
16	90004-Z0A-000	2	Bolt (6Mm) ●
17	90013-ZL8-000	2	Bolt-Flange (6X14) (Ct200) ●
18	90014-952-000	2	Bolt-Flange (6X14) (C T200) ●
19	90044-Z0A-000	1	Bolt-Stud, Left (Ignition Coil) ●
20	90045-Z0A-000	1	Bolt-Stud, Right (Ignition Coil) ●
21	90201-ZM0-000	2	Nut-Flange (6Mm) ●
22	93913-24410	4	Screw-Tapping (4X16) ●
22	93913-24780	4	Screw-Tapping (4X30) (P0) ●
24	94103-06800	2	Washer-Plain (6Mm) ●
26	95701-06012-00	2	Bolt-Flange (6X12) ●
27	95801-06100-00	4	Bolt-Flange (6X100) ●
28	17212-Z0A-000	1	Grid-Cleaner, Air ●


● Obtain parts from www.honda-engines.com

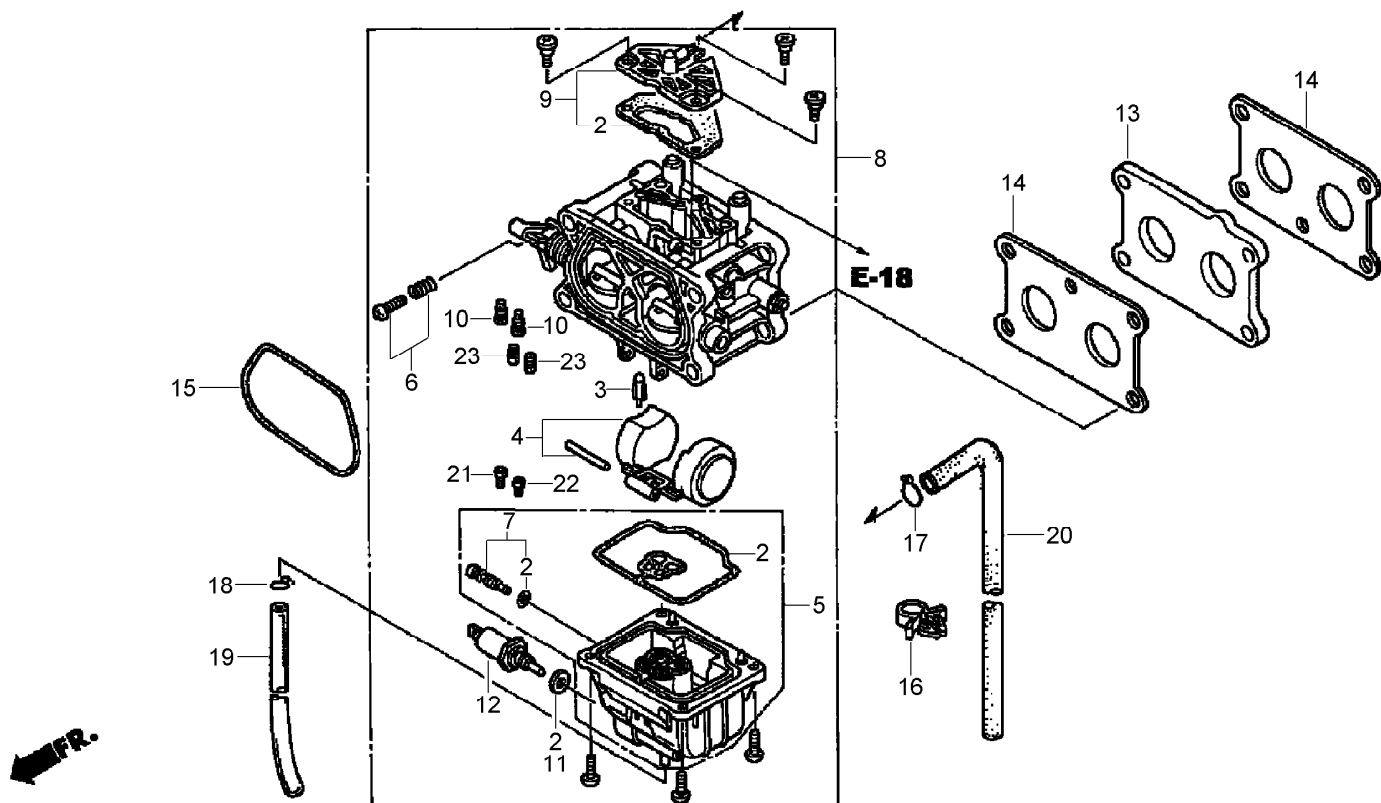

Carburetor Assembly Honda GXV530 EXA2

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
2	16010-Z0A-802	1	Gasket Set ●	14	16212-Z0A-000	2	Gasket-Insulator ●
3	16011-Z0A-004	1	Valve-Float ●	15	17228-Z0A-003	1	Gasket-Cleaner, Air ●
4	16013-Z0A-004	1	Float Set ●	16	90659-680-013	1	Clip-Harness, Wire ●
5	16015-Z0A-802	1	Float Chamber Set ●	17	95002-02080	1	Clip-Tube (B8) ●
6	16016-Z0A-004	1	Screw-Set ●	18	95002-02650	1	Clip-Tube (B6.5) ●
7	16024-Z0A-004	1	Screw-Set, Drain ●	19	95003-07008-60M	1	Hose-Bulk, Vinyl (4X7X8000) (4X7X300) ●
8	16100-Z0A-813	1	Carburetor ASM (Up To Engine Serial No. 1014986) ●	19	95003-07008-60M	1	Hose-Bulk, Vinyl (4X7X8000) (4X7X300) ●
8	16100-Z0A-814	1	Carburetor ASM (Bw02B C) (Up To Engine Serial No. 1027210) ●	20	95005-45001-20M	1	Hose-Bulk, Vacuum (45X1000) (45X400) ●
8	16100-Z0A-815	1	Carburetor ASM (Bw02B C) (From Engine Serial No.1027211 To 1061017) ●	20	95005-45001-20M	1	Hose-Bulk, Vacuum (45X1000) (45X400) ●
8	16100-Z0P-V02	1	Carburetor ASM (Bw02C A) (From Engine Serial No. 1061018) ●	21	99131-Z0A-0820	1	Jet-Main (No. 82.5) ●
9	16139-Z0A-004	1	Air Vent Cover Set ●	21	99131-Z0A-0850	1	Jet-Main (No. 85) ●
10	16168-Z0A-004	2	Cap ●	21	99131-Z0A-0870	1	Jet-Main (No. 87.5) ●
11	16178-Z0A-802	1	Gasket ●	22	99131-Z0A-0850	1	Jet-Main (No. 85) ●
12	16200-Z0A-802	1	Solenoid Valve ASM ●	22	99131-Z0A-0870	1	Jet-Main (No. 87.5) ●
13	16211-Z0A-000	1	Insulator-Carburetor ●	22	99131-Z0A-0900	1	Jet-Main (No. 90) ●
				23	99133-Z0A-0370	2	Jet-Pilot (No. 37.5) ●
				23	99134-Z0A-0370	2	Jet-Pilot (No. 37.5) ●


● Obtain parts from www.honda-engines.com

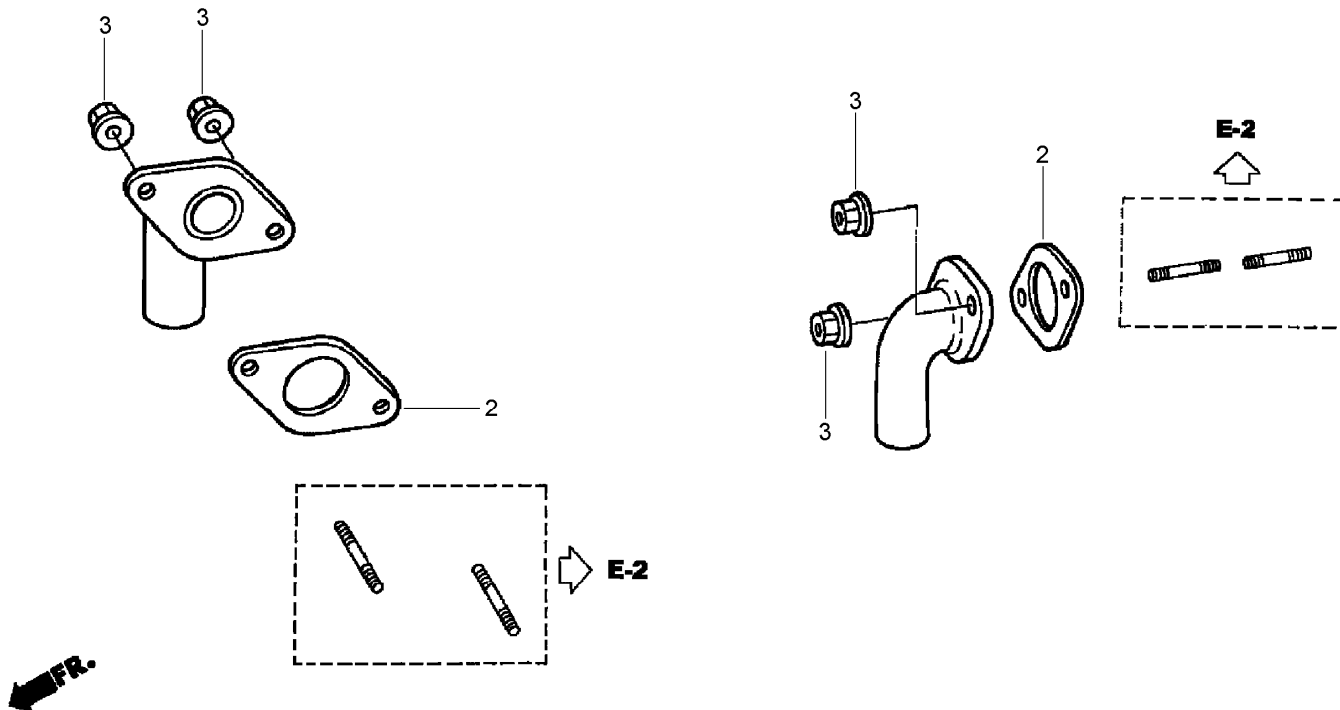

Exhaust Pipe Assembly Honda GXV530 EXA2

Ref.	Part Number	Qty.	Description
2	18333-Z0A-000	2	Gasket-Pipe, Exhaust ●
3	94050-06000	4	Nut-Flange (6 Mm) ●


● Obtain parts from www.honda-engines.com

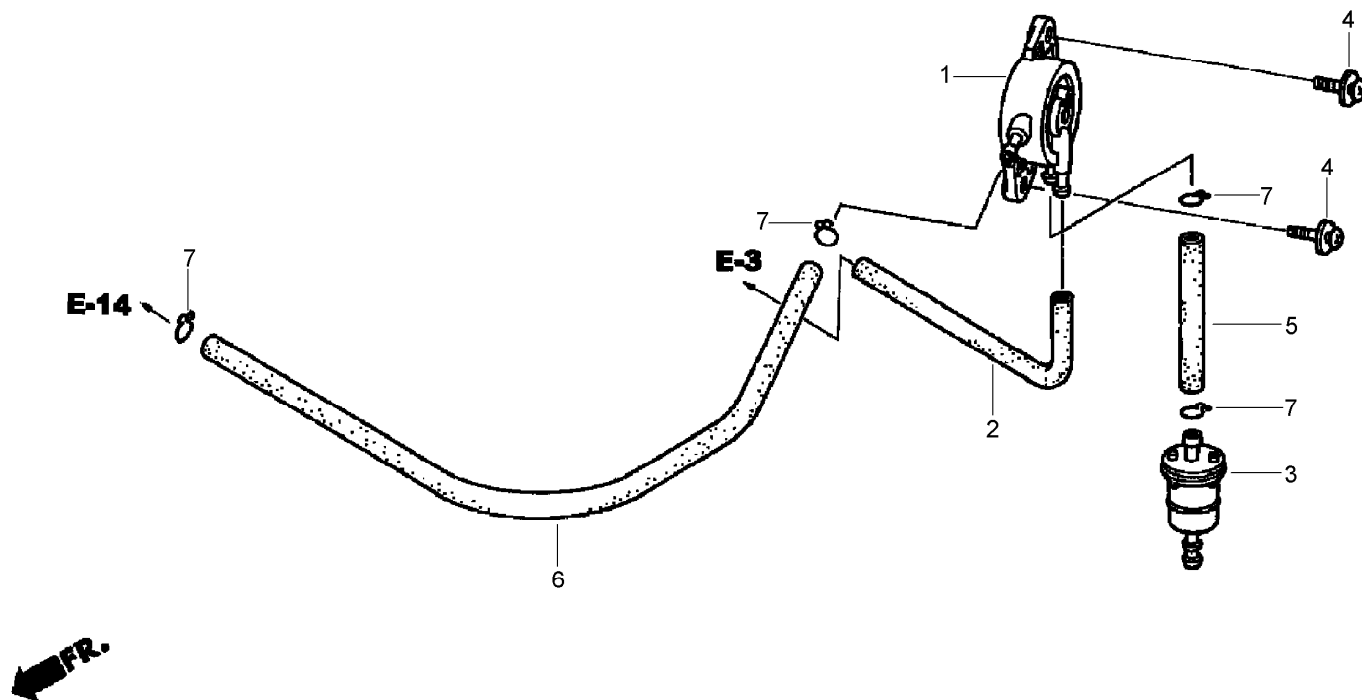

Fuel Pump Assembly Honda GXV530 EXA2

Ref.	Part Number	Qty.	Description
1	16700-ZL8-013	1	Fuel Pump ASM ●
2	16882-Z0A-000	1	Tube-Diaphragm ●
3	16910-ZV4-015	1	Filter-Fuel ●
4	93894-05016-00	2	Screw-Washer (5X16) ●
5	95001-55008-60M	1	Fuel-Hose (5.5X8000) (5.5X100) ●
6	95001-55008-60M	1	Fuel-Hose (5.5X8000) (5.5X100) ●
7	95002-02100	4	Clip-Tube (B10) ●


● Obtain parts from www.honda-engines.com

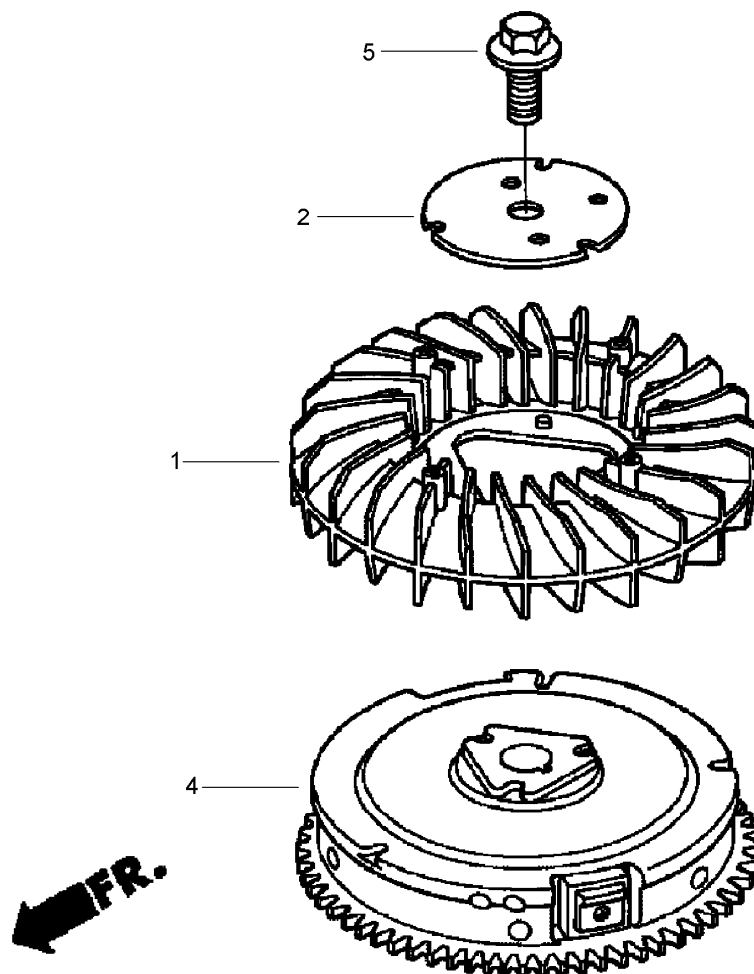

Flywheel Assembly Honda GXV530 EXA2

Ref.	Part Number	Qty.	Description
1	19511-Z0A-000	1	Fan-Cooling ●
2	19513-Z0A-000	1	Plate-Setting, Cooling Fan ●
4	31110-Z0A-800	1	Flywheel (6P) ●
5	90011-Z0A-000	1	Bolt-Flange (16X35) ●


● Obtain parts from www.honda-engines.com

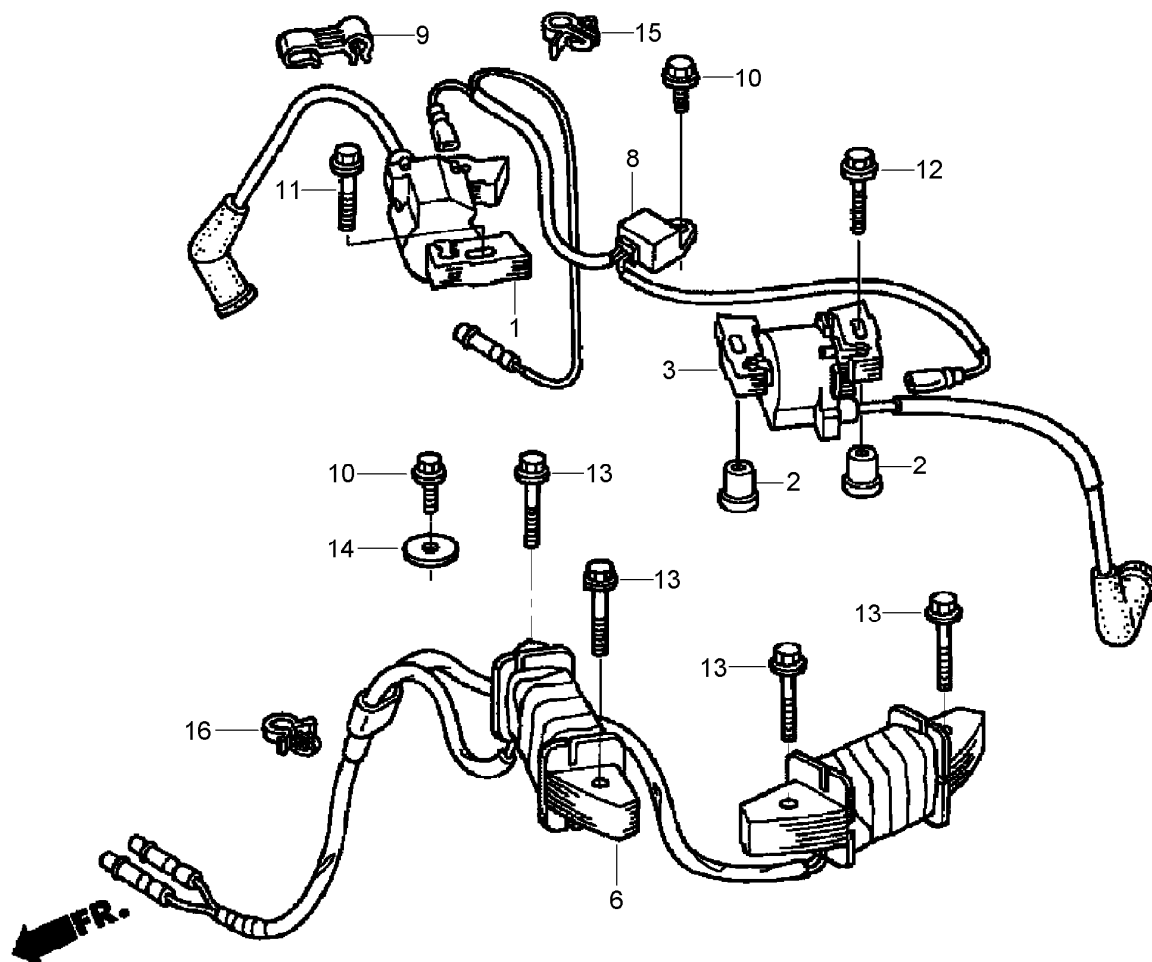

Ignition Coil Assembly Honda GXV530 EXA2

Ref.	Part Number	Qty.	Description
1	30500-Z0A-013	1	Ignition Coil ASM (No. 1) ●
2	30509-Z0A-000	2	Collar-Coil, Ignition ●
3	30550-Z0A-013	1	Ignition Coil ASM (No. 2) ●
6	31630-Z0A-811	1	Charge Coil ASM (12V-12A) ●
8	31740-Z0A-003	1	Engine Stop Diode ASM ●
9	32768-PJ7-000	1	Clamp-Wire, Center ●
10	90013-883-000	2	Bolt-Flange (6X12) (C T200) ●
11	95701-06028-00	1	Bolt-Flange (6X28) ●
12	90016-ZE8-000	1	Bolt-Flange (6X45) (C T200) ●
13	95701-06032-00	4	Bolt-Flange (6X32) ●
14	90136-428-870	1	Washer-Setting, Tank ●
15	90654-SA4-003	1	Clip-Harness, Wire (6Mm) (White) ●
16	90659-PG6-000	1	Clip-Harness, Wire ●


● Obtain parts from www.honda-engines.com

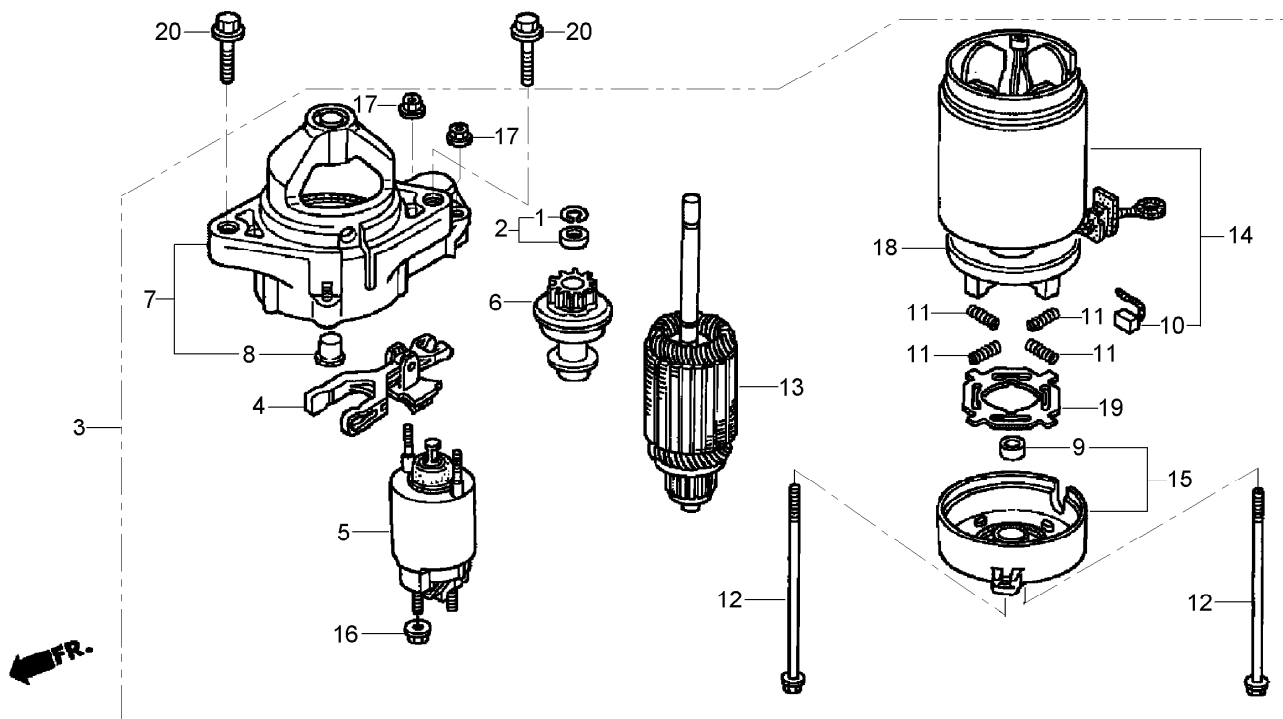

Starter Motor Assembly Honda GXV530 EXA2

Ref.	Part Number	Qty.	Description
1	30201-PH9-004	1	Ring-Snap (Denso) ●
2	30202-PZ1-003	1	Clutch Stop Collar Set ●
3	31200-Z0A-003	1	Starter Motor ASM ●
4	31203-PH9-004	1	Lever-Drive, Pinion ●
5	31204-ZG4-801	1	Magnetic Switch ASM ●
6	31207-Z0A-003	1	Clutch-Overrunning ●
7	31208-Z0A-003	1	Housing-Drive Side ●
8	31209-PH9-004	1	Bearing (A) ●
9	31210-PH9-004	1	Bearing (B) ●
10	31211-PH9-004	4	Brush ●
11	31212-PH9-004	4	Spring-Brush ●
12	31214-PH9-004	2	Bolt-Through ●
13	31217-Z0A-003	1	Armature ●
14	31218-P64-N01	1	Yoke ●
15	31219-Z0A-003	1	Frame-End, Commutator ●
16	31220-PH9-004	1	Nut-Hex (8Mm) ●
17	31223-PA0-006	2	Nut-Flange (5Mm) ●
18	31231-PH9-004	1	Holder-Brush ●
19	31233-PH9-004	1	Insulator-Holder, Brush ●
20	95701-10040-00	2	Bolt-Flange (10X40) ●


● Obtain parts from www.honda-engines.com

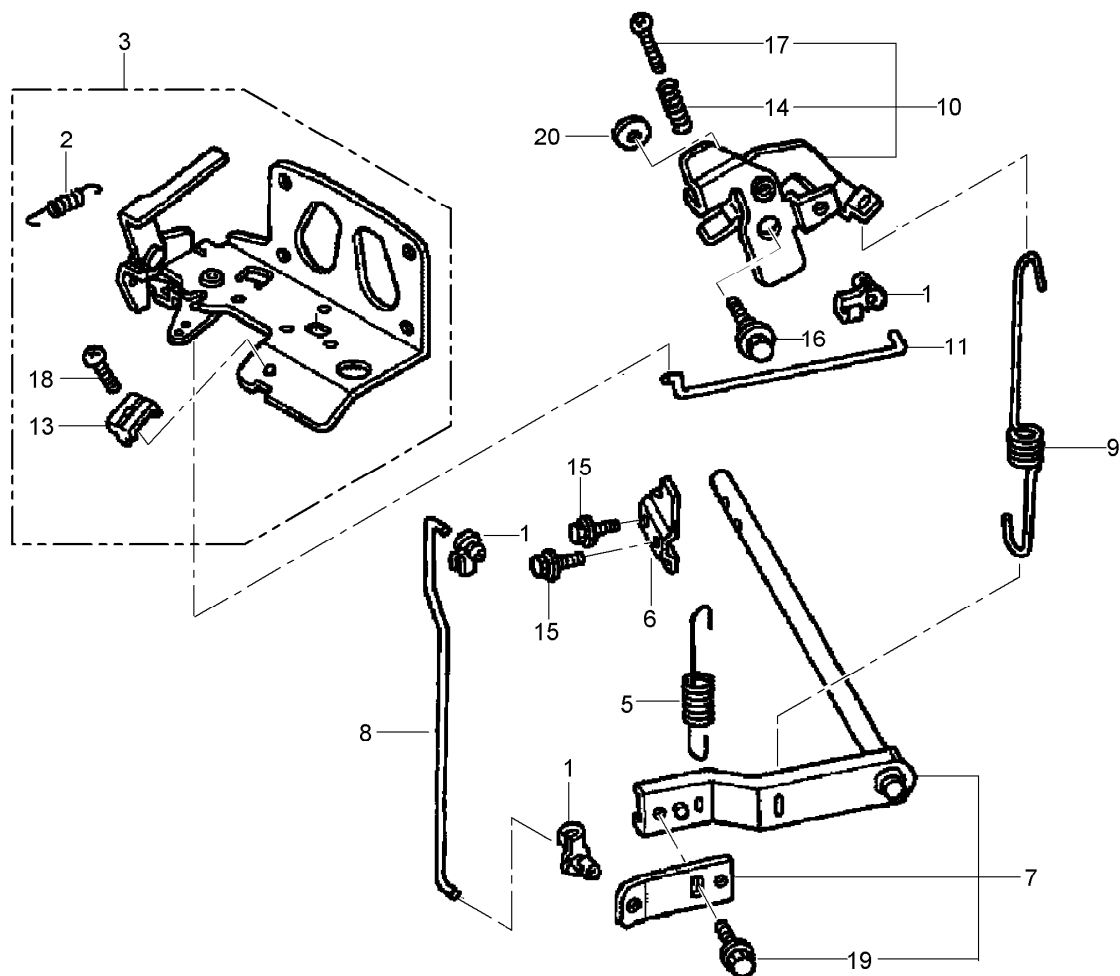

Control Assembly Honda GXV530 EXA2

Ref.	Part Number	Qty.	Description
1	16263-ZJ7-871	3	Rod-Joint ●
2	16268-Z0A-300	1	Spring-Return, Choke ●
3	16500-Z0A-000	1	Control ASM (1-Lever) ●
5	16534-Z0A-000	1	Spring-Starter (Up To Engine Serial No. 1038645) ●
5	16534-Z0P-V00	1	Spring-Starter (From Engine Serial No. 1038646) ●
6	16542-Z0A-000	1	Fork-Governor ●
7	16550-Z0A-000	1	Arm-Governor ●
8	16555-Z0A-000	1	Rod-Governor ●
9	16561-Z0A-000	1	Spring-Governor ●
10	16565-Z0A-000	1	Link-Governor ●
11	16566-Z0A-000	1	Rod-Link, Governor ●
13	16576-891-000	2	Holder-Cable ●
14	16584-883-300	1	Spring-Adjusting, Control ●
15	90002-892-000	2	Bolt-Flange (5X10) ●
16	90015-Z0A-000	1	Bolt-Flange (6Mm) (C T200) ●
17	90016-ZG9-N30	1	Screw-Recessed (5X25) ●
18	90016-Z0A-V00	2	Screw-Recessed (5X18) ●
19	95701-06010-00	1	Bolt-Flange (6X10) ●
20	94101-06800	1	Washer-Plain (6Mm) ●


● Obtain parts from www.honda-engines.com

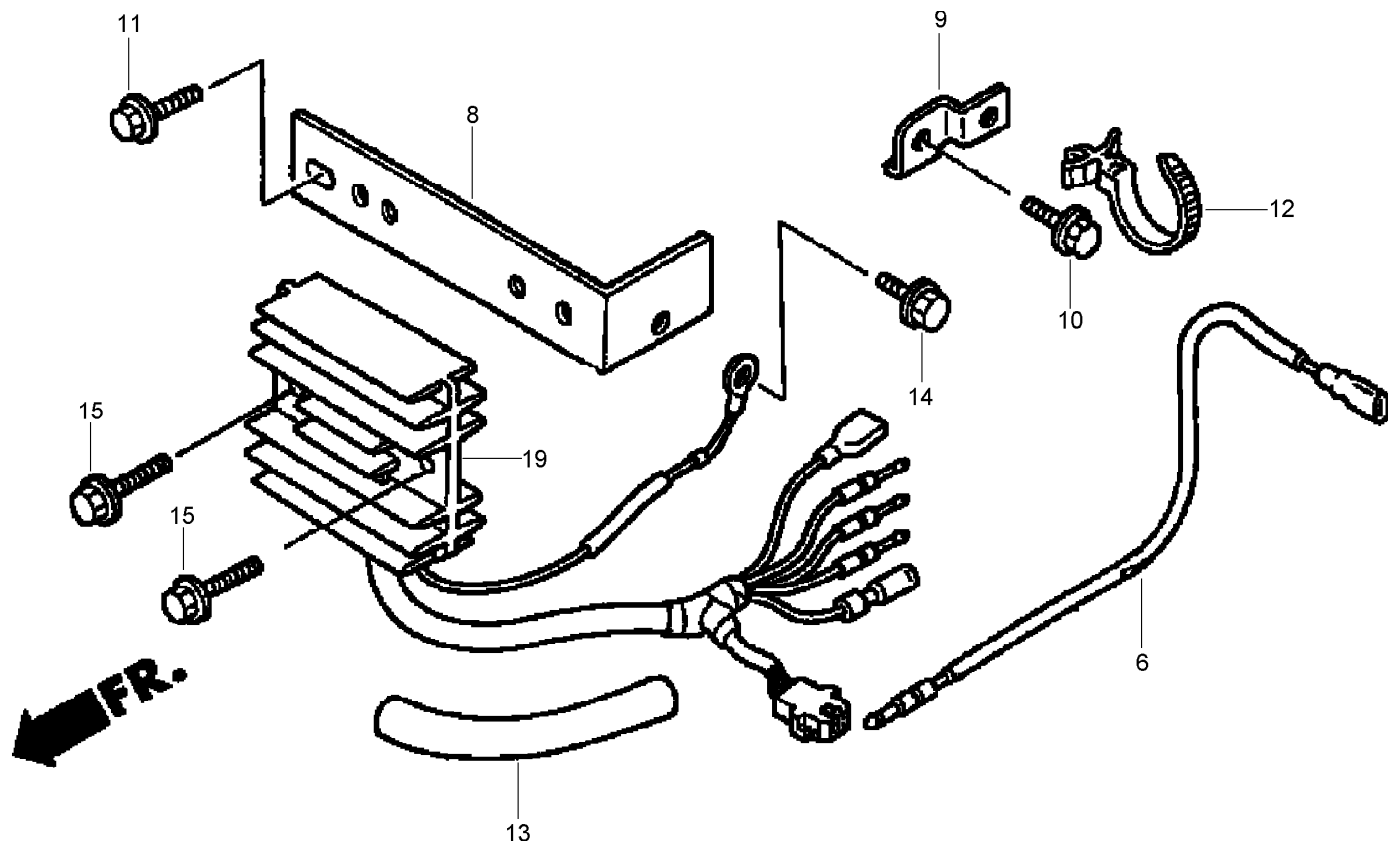

Regulator Rectifier and Sub-Wire Harness Assembly Honda GXV530 EXA2

Ref.	Part Number	Qty.	Description
6	32105-Z0A-000	1	Sub-Wire Harness ASM ●
8	31758-Z0A-800	1	Bracket-Regulator ●
9	35806-752-630	1	Base-Clip ●
10	90013-883-000	1	Bolt-Flange (6X12) (C T200) ●
11	90014-952-000	2	Bolt-Flange (6X14) (C T200) ●
12	90672-SB2-003	1	Strap-Cable (105Mm) (N H1 Black) ●
13	91406-ZB3-740	1	Tube-Wire ●
14	95701-06008-00	1	Bolt-Flange (6X8) ●
15	95701-06020-00	2	Bolt-Flange (6X20) ●
19	31750-Z0A-V01	1	Regulator Rectifier ASM ●

● Obtain parts from www.honda-engines.com

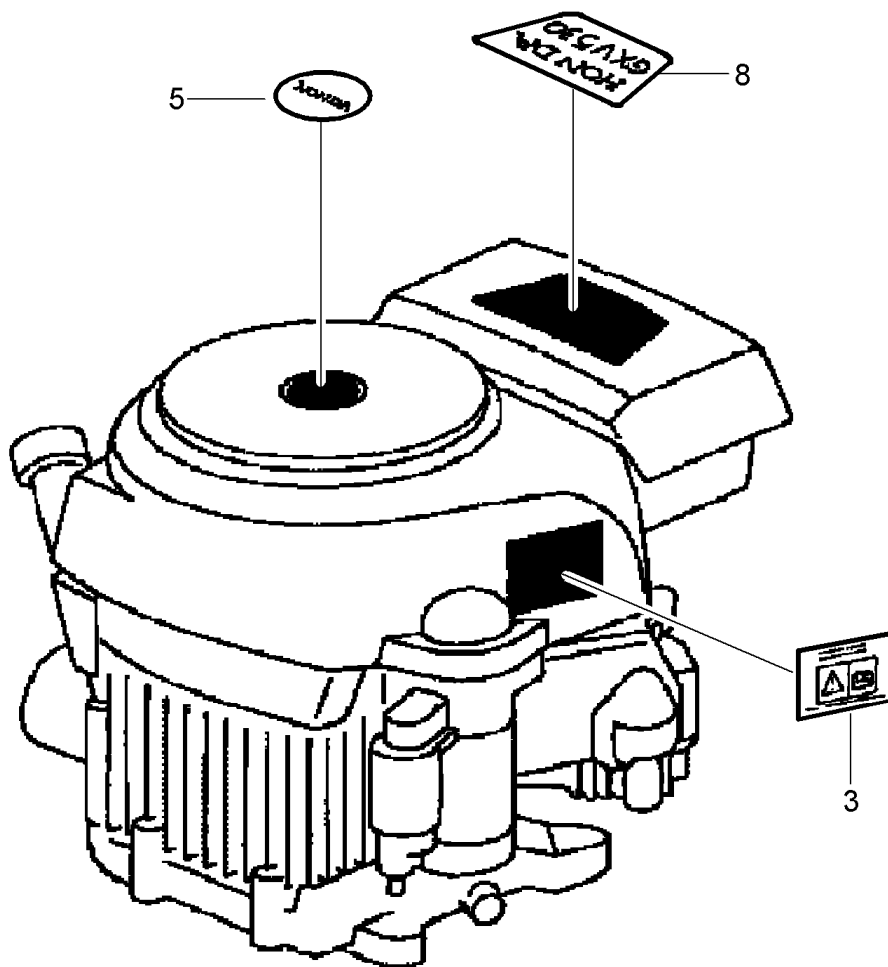

Label Assembly Honda GXV530 EXA2

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	87516-Z0A-010	1	Mark-Caution, Operator ●
5	87531-Z0A-010	1	Mark-Honda ●
8	87101-Z0P-010	1	Mark-Emblem (Gxv530) ●

● Obtain parts from www.honda-engines.com

Attachments and Accessories

For 74434 TimeCutter ZD530 Riding Mower

Product Name	Model/Part
Rear Deflector Kit	74435
48 Inch Snow Blade CE Completion Kit	74436



Count on it.