



Form No. 3352-187 Rev C

Count on it.

Parts Catalog

TimeCutter® ZX525

Riding Mower

Model No. 74407—Serial No. 250000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

 
Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame and Caster Assembly	4
Height-of-Cut Assembly	5
Seat and Rear Frame Assembly	6
Fuel Tank and Control Pod Assembly	7
Parking Brake Assembly	8
Motion Control Assembly	9
Hydro and Belt Drive Assembly	10
Engine and Clutch Assembly	11
Electrical Assembly	12
Deck Assembly	13
Deck Decal Assembly No. 108-8573	14
Spindle and Belt Drive Assembly	15
Deck Baffle Assembly	16
Cylinder and Crankcase Assembly Kawasaki FH541V-AS50	17
Valve and Camshaft Assembly Kawasaki FH541V-AS50	19
Piston and Crankshaft Assembly Kawasaki FH541V-AS50	20
Lubrication Equipment Assembly Kawasaki FH541V-AS50	22
Cooling Equipment Assembly Kawasaki FH541V-AS50	24
Electric Equipment Assembly Kawasaki FH541V-AS50	25
Control Equipment Assembly Kawasaki FH541V-AS50	26
Carburetor Assembly Kawasaki FH541V-AS50	27
Air Filter and Muffler Assembly Kawasaki FH541V-AS50	28
Fuel Tank and Valve Assembly Kawasaki FH541V-AS50	29
Starter Assembly Kawasaki FH541V-AS50	30
Label Assembly Kawasaki FH541V-AS50	32
Attachments and Accessories	33

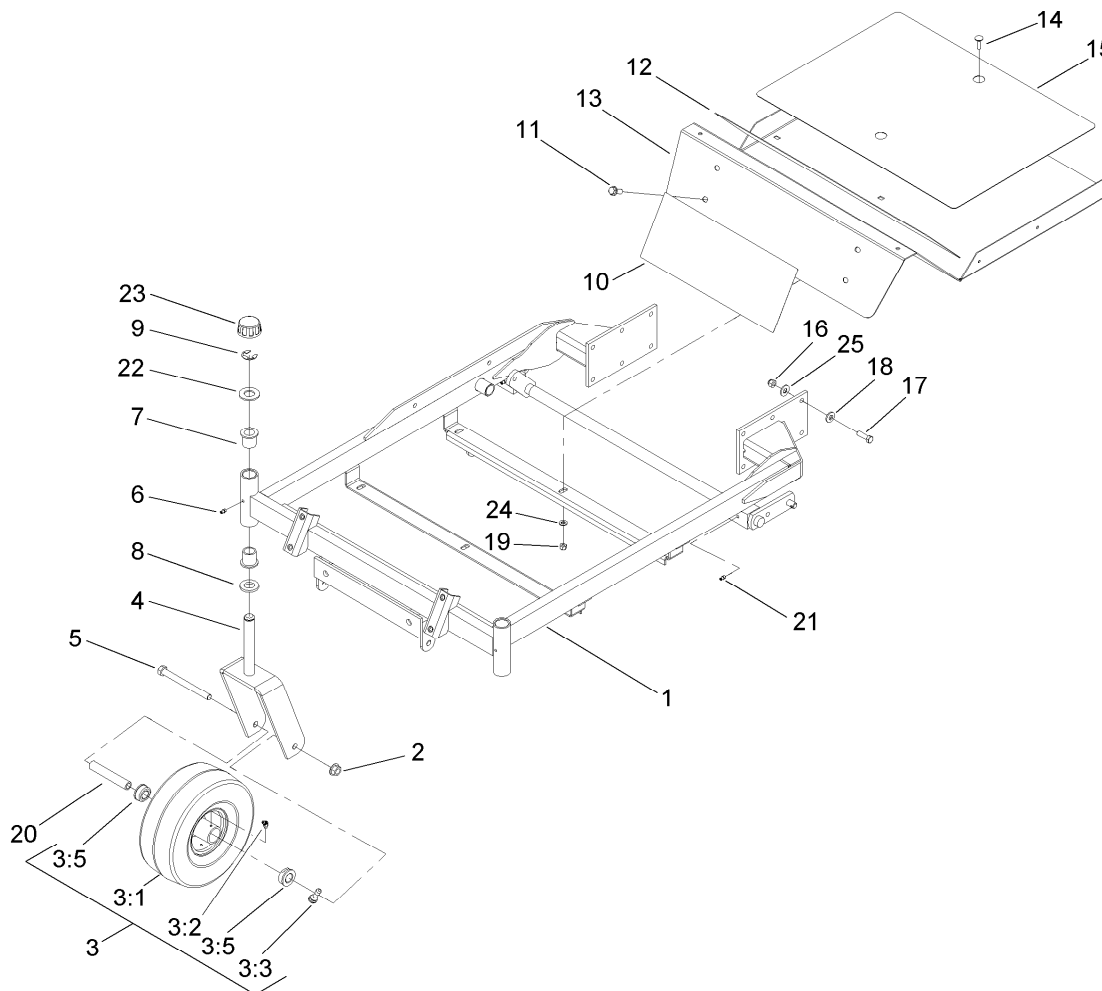


Frame and Caster Assembly

Ref.	Part Number	Qty.	Description
1	108-2311-01	1	Carrier Frame ASM
2	32128-23	2	Nut-HF
3	105-3471	2	Front Wheel And Tire ASM
3:1	105-1943	1	Tire
3:2	302-5	1	Fitting-Grease
3:3	232-27	1	Stem-Valve
3:5	114-1640	2	Bushing-Flange
3:99	93-4244	1	Tube-Inner (W/Valve) ●
4	100-7363-01	2	Caster Fork ASM
5	325-22	2	Screw-HH
6	302-5	2	Fitting-Grease
7	1-303514	4	Bearing-Flanged
8	1-513338	2	Washer-Flat
9	32151-103	2	Ring-Retaining, EXT
10	67-7320	1	Decal


Ref.	Part Number	Qty.	Description
11	66-9300	4	Screw-HHF
12	104-3639	1	Pad-Skid, Anti
13	100-7386-03	1	Floorpan
14	3230-28	6	Screw-CARR
15	104-3640	1	Pad-Skid, Anti
16	3296-39	12	Nut-Lock, NI
17	323-7	12	Screw-HH
18	98-5975	12	Washer-Belleville
19	3296-29	6	Nut-Lock, NI
20	104-3667	2	Bushing-Spanner
21	302-19	2	Fitting-Grease
22	104-8076	2	Washer
23	61-9780	2	Cap-Hub
24	3256-23	6	Washer-Plain
25	1-809107	12	Washer-Hardened

 ● Not illustrated

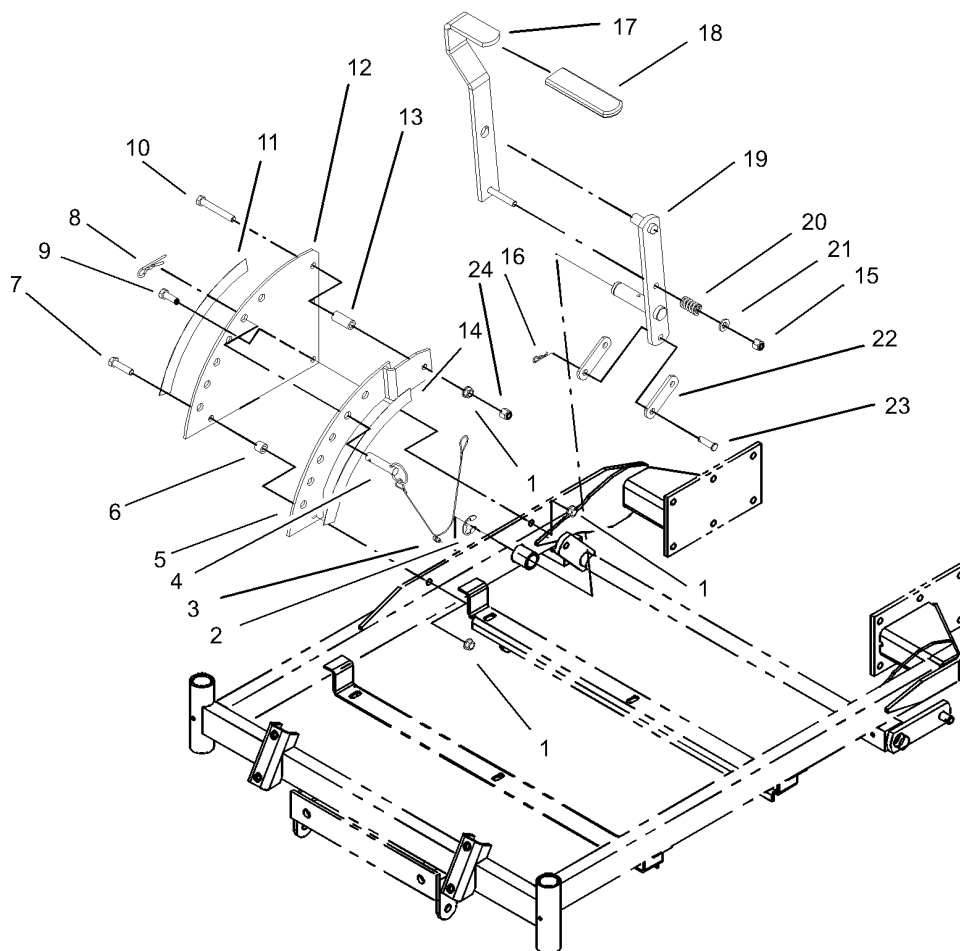

Height-of-Cut Assembly


Ref.	Part Number	Qty.	Description
1	3290-357	3	Nut-HHF, Whiz
2	32151-103	1	Ring-Retaining, EXT
3	302-5	1	Fitting-Grease
4	104-3678	1	Pin-Hitch
5	100-7335-01	1	Plate-Lift
6	1-413088	1	Bushing-Lever, Lift
7	323-8	1	Screw-HH
8	1-806005	1	Pin-Cotter
9	323-6	1	Screw-HH
10	323-13	1	Screw-HH
11	104-8063	1	Decal-Height, Deck
12	100-7384-01	1	Plate-Deck Lift
13	1-633082	1	Bushing-Lever, Lift
14	104-8062	1	Decal-Height, Deck
15	3296-39	1	Nut-Lock, NI
16	1-806003	2	Pin-Cotter
17	1-652023-03	1	Lever-Lift
18	1-633295	1	Grip-Lever, Lift
19	1-652027-03	1	Arm-Deck, Lift
20	1-633325	1	Spring-Compression
21	3256-24	1	Washer-Flat
22	1-633068	2	Arm-Lift, Deck
23	283-2	2	Pin-Clevis
24	32128-21	1	Nut-HF

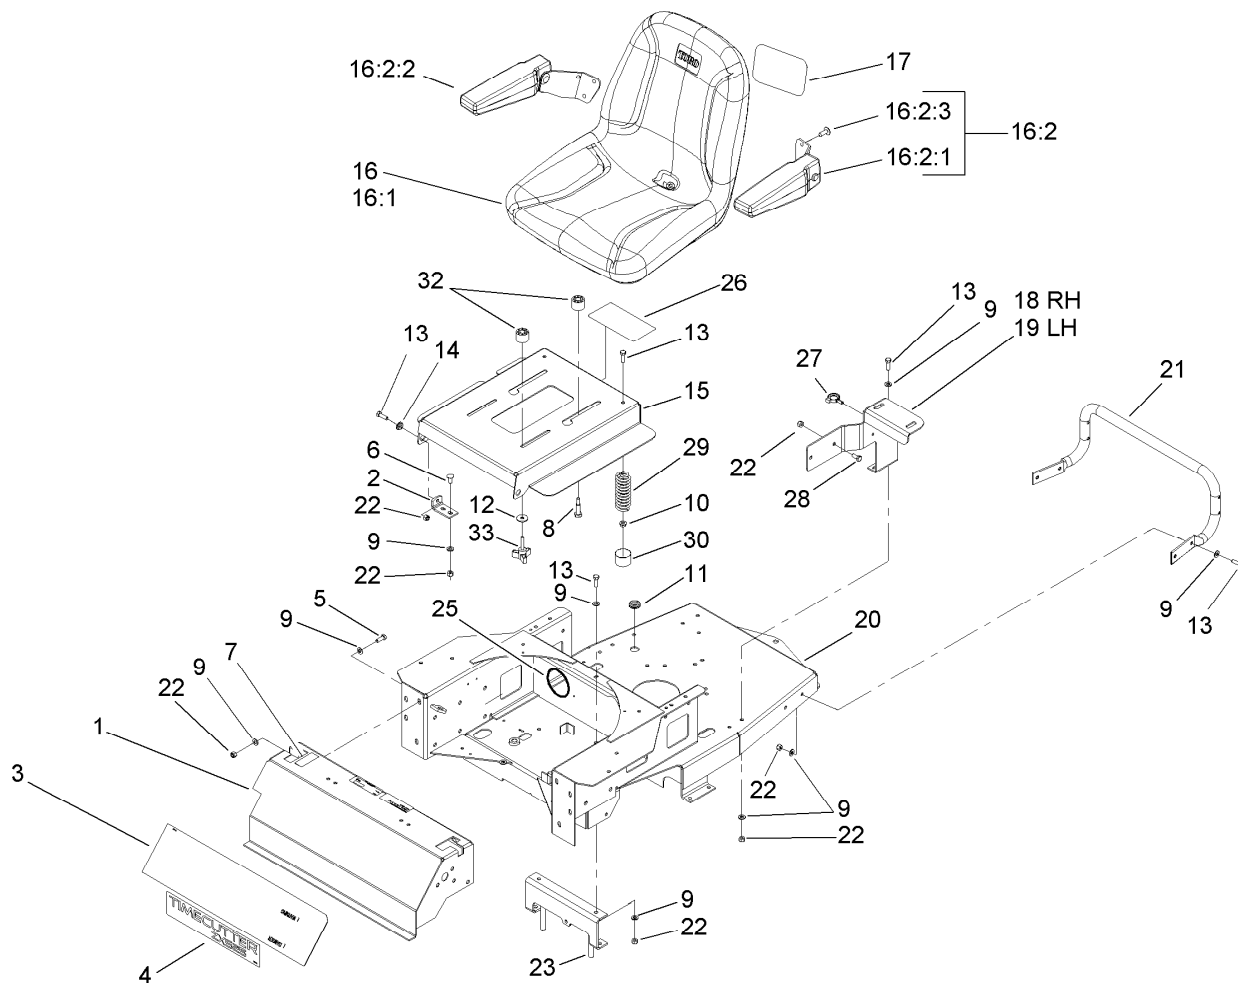 

Seat and Rear Frame Assembly


Ref.	Part Number	Qty.	Description
1	104-8040-03	1	Console
2	104-8057-03	2	Bracket-Pivot
3	107-2482	1	Decal-Danger
4	108-7132	1	Decal
5	322-4	6	Screw-HH
6	3230-23	4	Screw-CARR
7	99-8936	2	Decal-Control, Motion
8	7-0030	2	Screw-Shoulder, HH
9	3256-23	32	Washer-Plain
10	32128-25	2	Nut-HF
11	237-124	1	Grommet
12	5-4460	2	Washer-Pivot
13	322-5	14	Screw-HH
14	105503	2	Bushing
15	108-9572-03	1	Seat Pan ASM
16	106-6447	1	Seat (With Arm Rests)
16:1	108-2329	1	Seat
16:2	108-6163	1	Armrest Kit

Ref.	Part Number	Qty.	Description
16:2:1	108-6177	1	LH Armrest ASM
16:2:2	108-6178	1	RH Armrest ASM
16:2:3	108-6179	6	Screw-HSBH
17	93-7340	1	Decal
18	100-7376-01	1	Bracket-RH
19	100-7368-01	1	Bracket-LH
20	108-2310-01	1	Rear Frame ASM
21	100-7332-03	1	Rod-Support, Rear
22	3296-29	26	Nut-Lock, NI
23	105-6987-03	1	Bracket
25	105-1854	1	Cover-Conduit
26	107-2474	1	Decal-Service
27	105-1853	2	Clamp-Hose
28	322-3	4	Screw-HH
29	92-7054	2	Spring-Compression
30	701178	2	Cap-Protector
32	108-2327	4	Spacer
33	108-2356	2	Knob

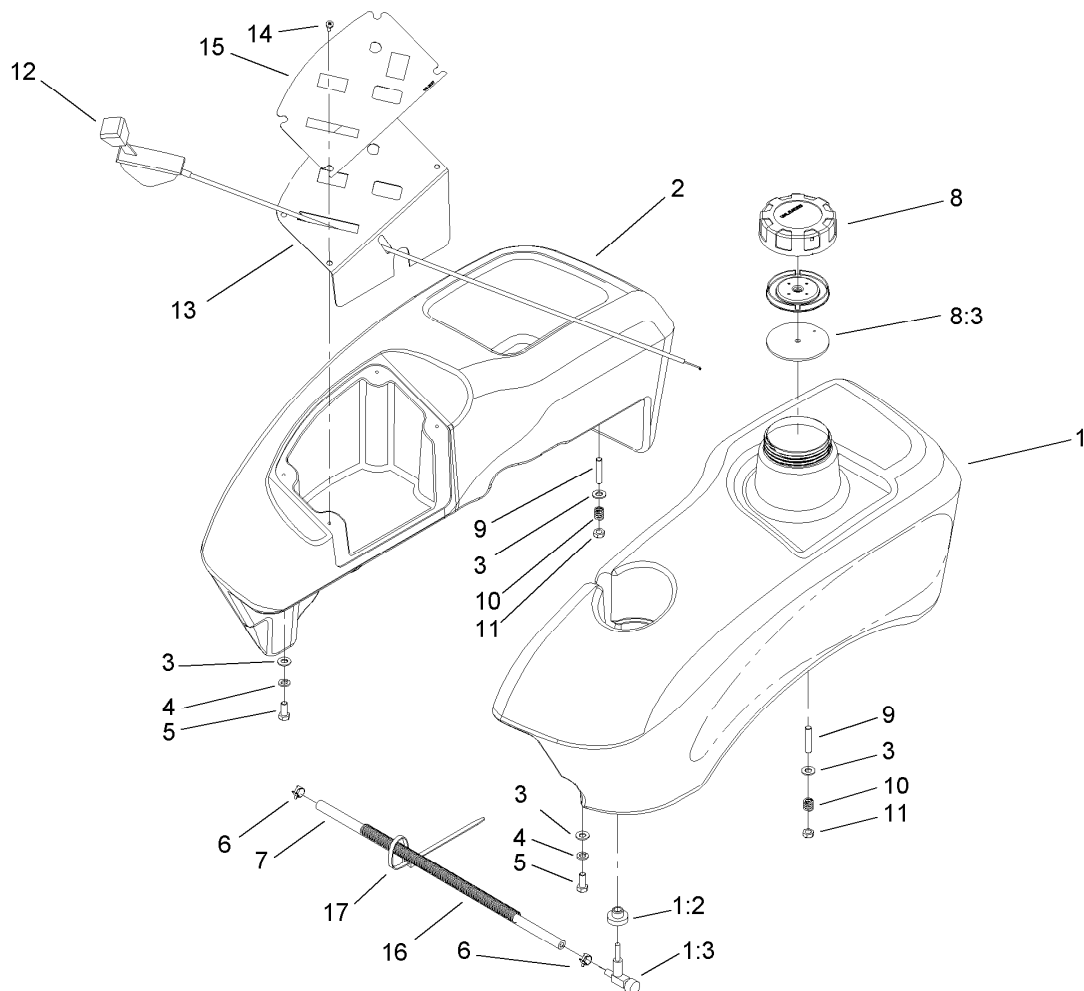 

Fuel Tank and Control Pod Assembly

Ref.	Part Number	Qty.	Description
1	105-3494	1	Fuel Tank ASM
1:2	46-6560	1	Bushing
1:3	104048	1	Valve-Fuel
2	105-1918	1	Tank-Console
3	3256-23	8	Washer-Plain
4	3253-4	4	Washer-Lock
5	322-3	4	Screw-HH
6	2412-98	2	Clamp-Hose
7	104-8060	1	Hose-Fuel
8	88-3980	1	Gas Cap ASM
8:3	88-4010	1	Gasket-Cap, Gas
9	1-633023	4	Stud
10	1-633349	4	Spring-Tank, Fuel
11	3296-47	4	Nut-Lock, NI
12	104-8081	1	Cable-Throttle
13	104-3664-03	1	Panel-Control
14	3250-14	4	Screw-PPH
15	104-8009	1	Decal-Panel, Control
16	105-1854	1	Cover-Conduit
17	614249	1	Tie-Cable

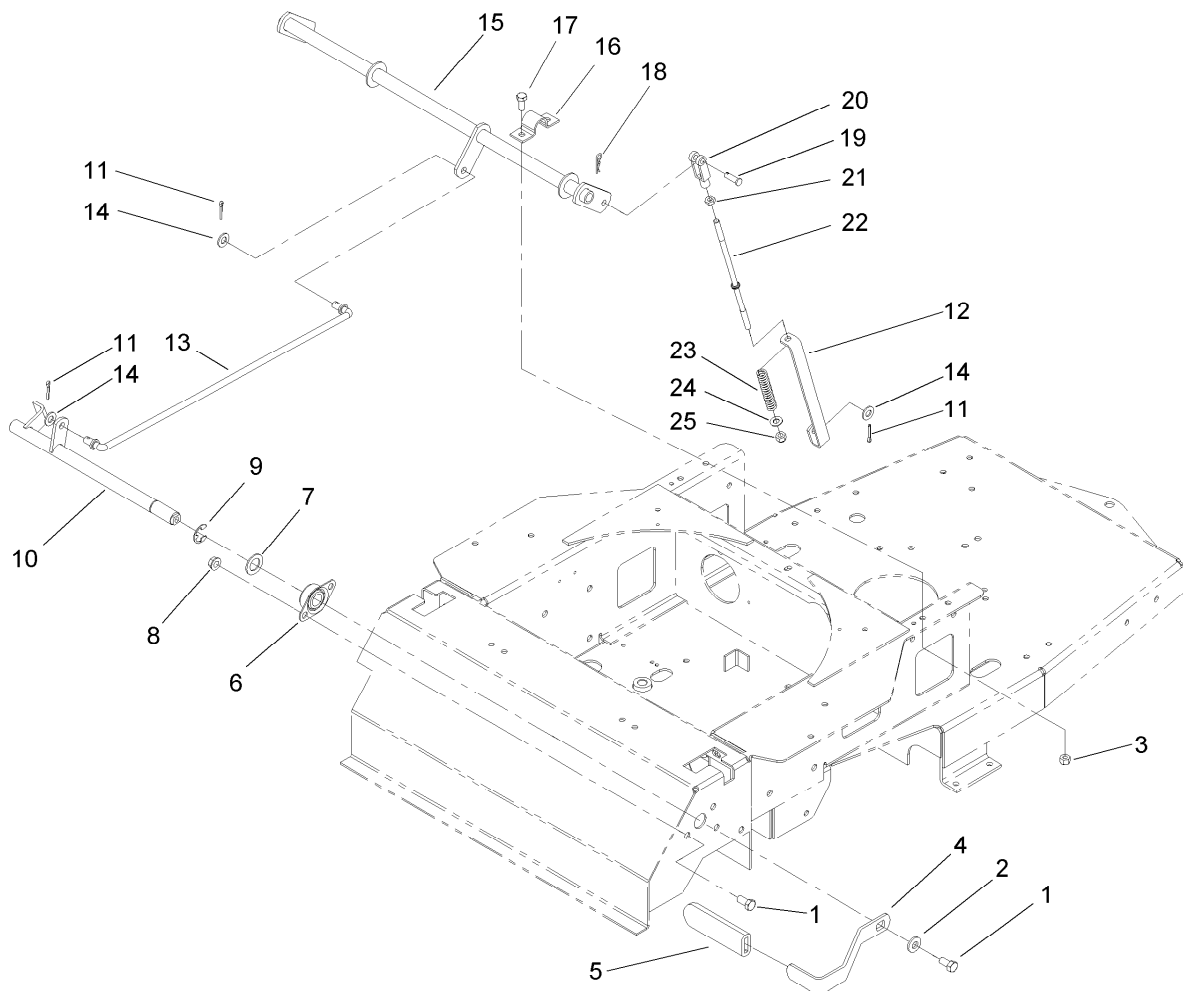 

Parking Brake Assembly


Ref.	Part Number	Qty.	Description
1	323-4	5	Screw-HH
2	98-5975	1	Washer-Belleville
3	3296-29	4	Nut-Lock, NI
4	100-7346-03	1	Handle-Brake, Park
5	1-633268	1	Grip-Lever
6	1-633102	2	Bearing-Flange, Side
7	1-303007	1	Washer
8	3290-357	4	Nut-HHF, Whiz
9	32151-48	1	E-Ring
10	100-7318	1	Brake Shaft ASM
11	3272-10	4	Pin-Cotter
12	104-3675	2	Bracket-Spring, Brake
13	104-8046	1	Rod-Brake, Upper

Ref.	Part Number	Qty.	Description
14	3256-24	4	Washer-Flat
15	104-3670-03	1	Shaft-Brake
16	88-4730	2	Clamp-Pivot, HOC
17	322-3	4	Screw-HH
18	1-806003	2	Pin-Cotter
19	1-808280	2	Pin-Clevis
20	1-303105	2	Yoke-Adjustable
21	3219-2	2	Nut-Hex
22	104-3674	2	Rod-Brake, Upper
23	38-4520	2	Spring
24	3256-23	2	Washer-Plain
25	3296-4	2	Nut-Lock



Ref.	Part Number	Qty.	Description
22:1	1-633257	1	Grip-Control, Motion ●
23	103-0632	1	RH Lever ASM
23:1	1-633257	1	Grip-Control, Motion
24	103-0407	2	Arm-Shaft, Control
25	323-6	4	Screw-HH
26	98-5975	4	Washer-Belleville
27	3296-39	2	Nut-Lock, NI
28	323-4	6	Screw-HH
29	322-5	8	Screw-HH
30	3219-2	4	Nut-Hex
31	1-543017	6	Balljoint-RH
32	1-633152	2	Balljoint-LH
33	1-804524	2	Nut
34	1-603737	2	Bolt-Return, Neutral
35	100-7336	2	Washer
36	933156	2	Pin-Roll
37	302-11	2	Fitting-Lube, 45 DEG
38	104-3606	1	Linkage-Lower, RH
39	104-3607	1	Linkage-Lower, LH
40	104-3605	2	Linkage-Upper
41	32128-20	2	Nut-HF

 3352-187C

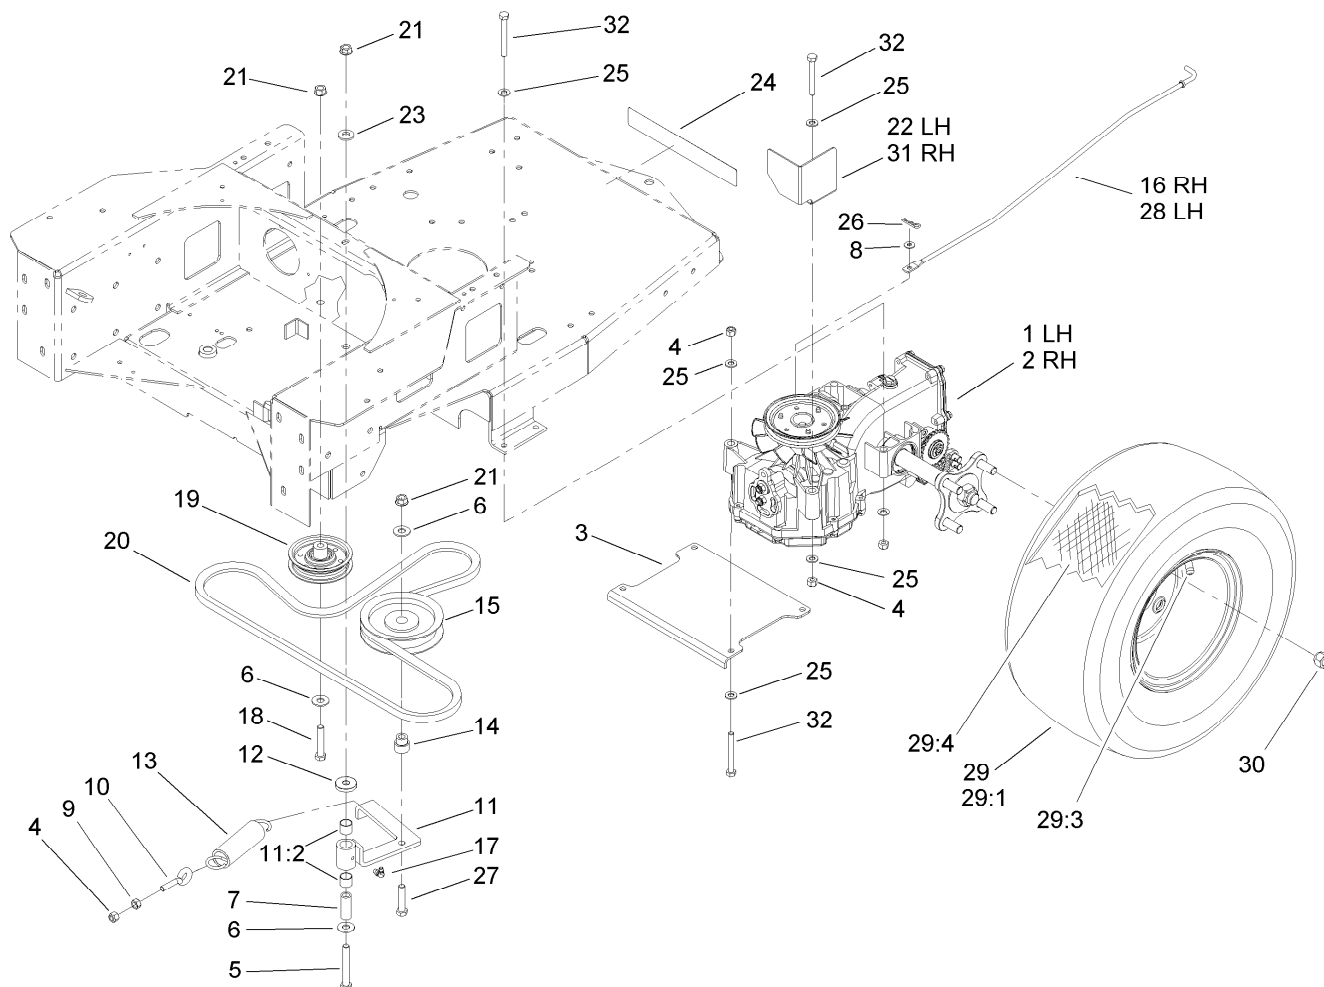


Hydro and Belt Drive Assembly

Ref.	Part Number	Qty.	Description
1	108-8507	1	Hydro-LH
2	108-8506	1	Hydro-RH
3	100-7317-03	1	Plate-Hydro, Lower
4	3296-29	13	Nut-Lock, NI
5	323-13	1	Screw-HH
6	3256-4	3	Washer-Flat
7	1-603044	1	Bushing
8	3256-1	2	Washer-Flat
9	32128-20	1	Nut-HF
10	55-9420	1	Bolt-Eye
11	104-3614	1	Idler Arm ASM
11:2	1-513034	2	Sleeve-Bearing
12	104-8005	1	Spacer
13	1-603414	1	Spring-Extension
14	1-603496	1	Bushing-Idler
15	1-603843	1	Pulley-Idler
16	104-3668	1	Rod-RH
17	302-40	1	Fitting-Grease, 90 DEG

Ref.	Part Number	Qty.	Description
18	323-10	1	Screw-HH
19	104-3630	1	Pulley-Idler
20	104-3622	1	Belt-V
21	32128-21	3	Nut-HF
22	104-8033-03	1	Guard-Fan, LH
23	98-5975	1	Washer-Belleville
24	104-8061	1	Decal
25	3256-23	24	Washer-Plain
26	1-806003	2	Pin-Cotter
27	323-9	1	Screw-HH
28	104-3669	1	Rod-LH
29		2	Wheel And Tire ASM ●
29:1	105-1945	1	Tire
29:3	232-27	1	Stem-Valve
29:4	105-4070	1	Tube-Inner
30	242-50	8	Nut-Lug
31	104-8013-03	1	Guard-Fan, RH
32	322-13	12	Screw-HH

 
● Not serviced separately

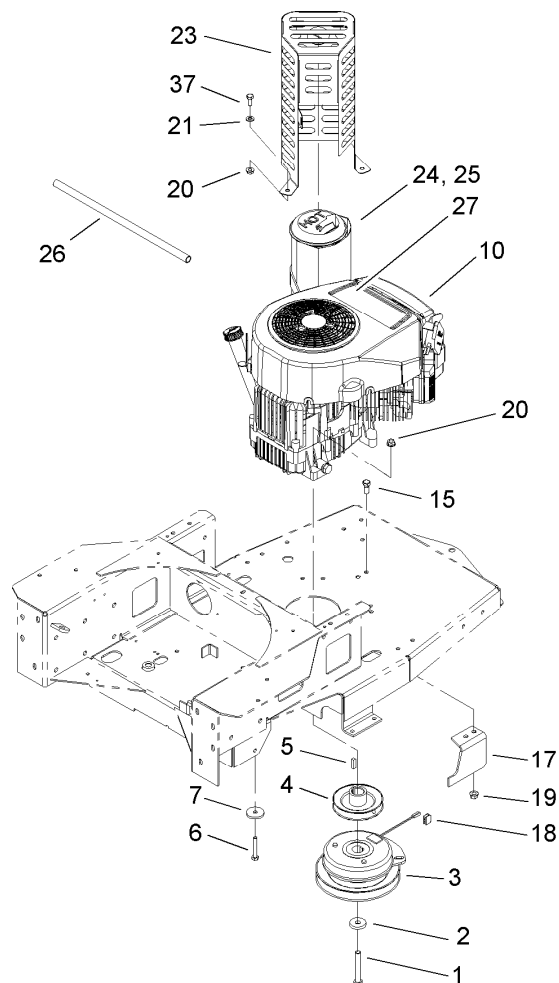

Engine and Clutch Assembly

Ref.	Part Number	Qty.	Description
1	3212-12	1	Screw-HH
2	112843	1	Washer
3	108-9512	1	Clutch-PTO, Electric
4	100-7314	1	Pump Drive Pulley ASM
5	5-7280	1	Key
6	322-7	4	Screw-HH
7	62-7190	4	Spacer-Steel
10		1	Engine-Kawasaki, FH541V-As05 ●
15	323-4	2	Screw-HH
17	104-3613-03	1	Stop-Clutch
18	98-5023	1	Bumper
19	32128-21	2	Nut-HF
20	32128-25	6	Nut-HF
21	3256-23	2	Washer-Plain
23	105-7013-03	1	Guard-Muffler
24	100-6467	1	Muffler
25	100-6468	1	Clamp-Muffler
26	106-7022	1	Tube-Drain, Oil
27	107-9246	1	Decal
37	322-3	2	Screw-HH

 
● Obtain parts from www.kawpower.com

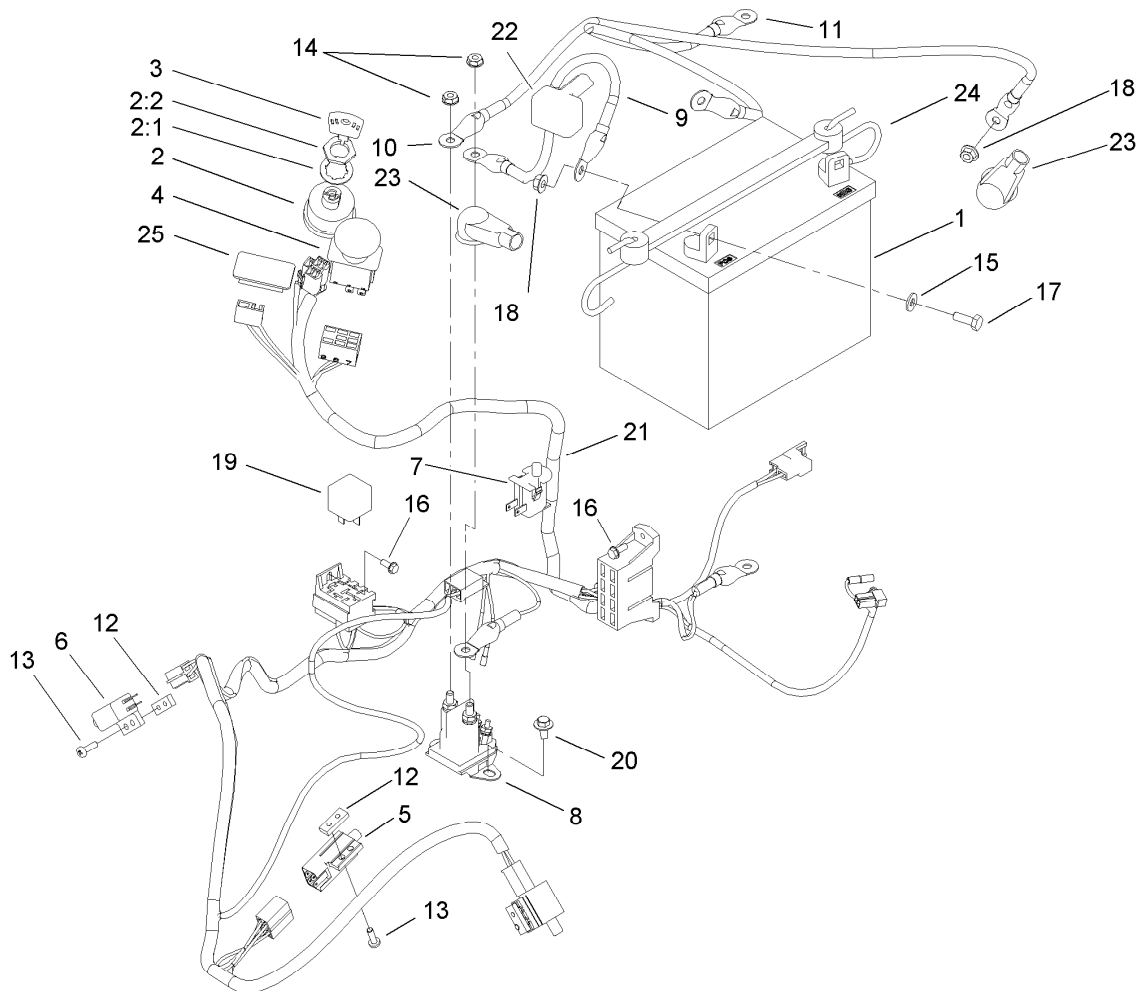

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	104-2491	1	Battery
2	88-9830	1	Key Switch ASM
2:1	3254-5	1	Washer-Lock
2:2	218-461	1	Nut-HH
3	63-8360	1	Key-Ignition
4	95-7489	1	Switch-PTO
5	86-4690	1	Switch-Interlock
6	65-7410	2	Switch-Pole, Single
7	82-2190	1	Switch-Bail
8	106-8245	1	Solenoid-Starter
9	56-7670	1	Wire ASM
10	106-8269	1	Cable-Battery, Red
11	93-0324	1	Cable
12	1-633181	3	Plate-Tapped


Ref.	Part Number	Qty.	Description
13	32144-8	6	Screw-PPHTF
14	32149-2	2	Nut-Keps
15	3256-22	2	Washer-Flat
16	32144-1	3	Screw-Taptite
17	321-4	2	Screw-HH
18	32128-33	3	Nut-HF
19	98-7249	1	Relay
20	46-8560	2	Screw-HHFTF
21	107-2504	1	Harness-Wire
22	28-8080	1	Boot-Terminal
23	93-3190	2	Boot-Insulator, Terminal
24	104-2466	1	Holddown-Battery
25	99-7420	1	Plug-Hole

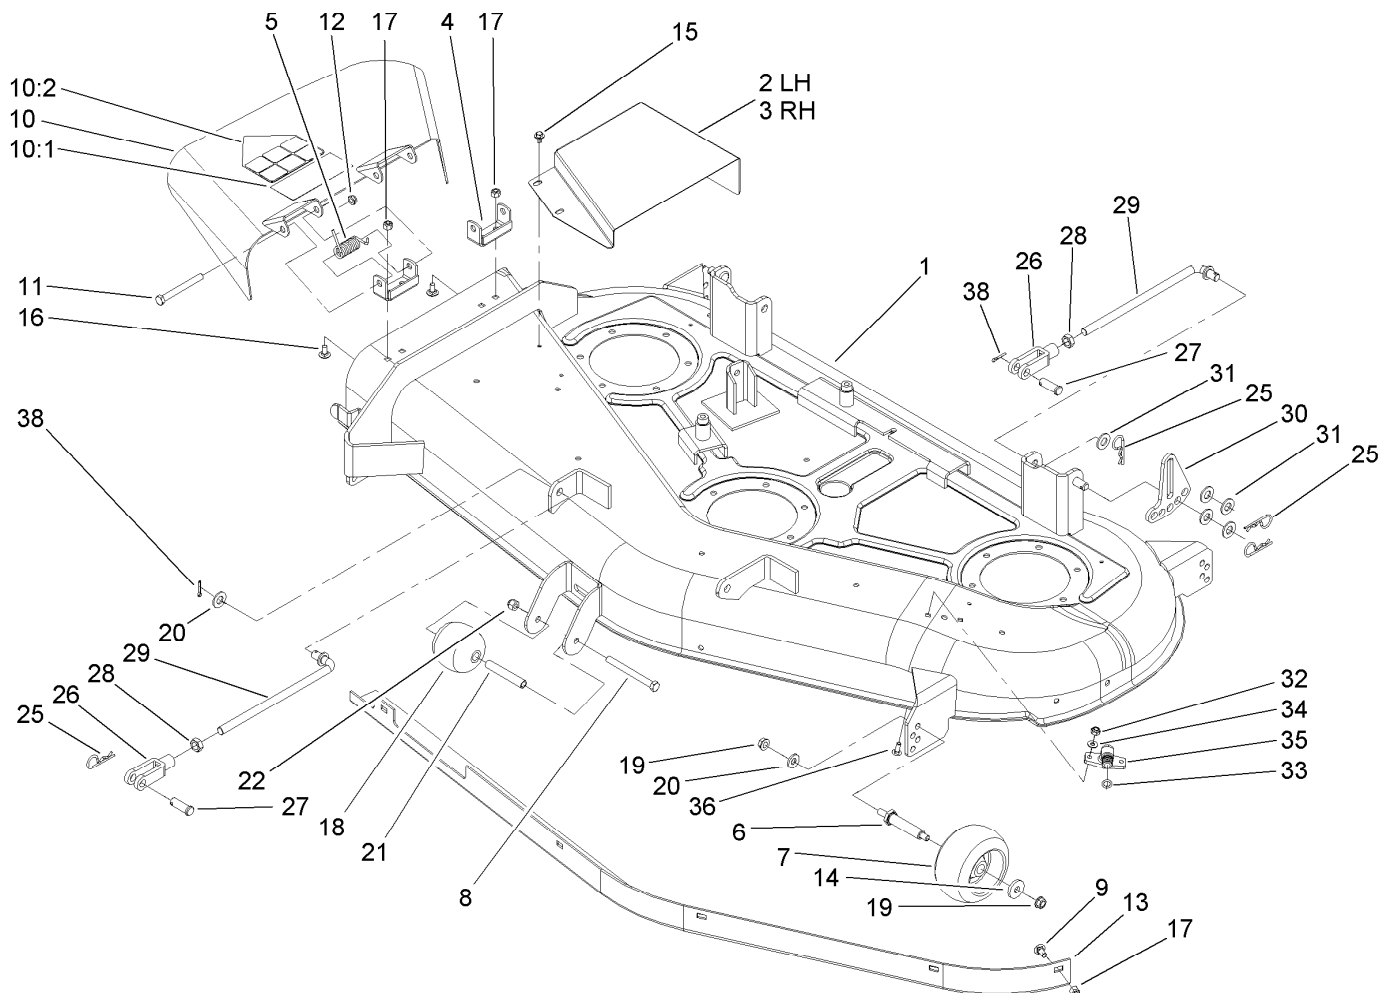 

Deck Assembly


Ref.	Part Number	Qty.	Description
1	108-8573	1	52 Inch Deck ASM
2	108-8532-03	1	Cover-Belt, LH
3	108-8531-03	1	Cover-Belt, RH
4	29-5590-03	2	Bracket-Pivot
5	40-6230	2	Spring
6	99-2842	4	Spacer
7	1-603299	4	Roller-Scalp, Anti
8	323-16	1	Screw-HH
9	3230-18	5	Screw-CARR
10	94-1581	1	Deflector ASM
10:1	93-7317	1	Decal-Danger
10:2	93-7316	1	Decal-Danger
11	3211-15	2	Screw-HH
12	3296-5	2	Nut-Hex
13	67-2150-03	1	Baffle
14	1-373034	4	Washer
15	46-8560	5	Screw-HHFTF
16	3230-18	4	Screw-CARR
17	3296-29	9	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
18	29-4820	1	Roller
19	3290-357	8	Nut-HHF, Whiz
20	98-5975	4	Washer-Belleville
21	94-2500	1	Tube-Spacer, Wheel
22	3296-39	1	Nut-Lock, NI
25	1-806005	8	Pin-Cotter
26	100-7338	4	Clevis
27	104-3634	4	Pin-Clevis
28	3220-5	4	Nut-Jam
29	104-8047	4	Rod-Trunion
30	104-3699-01	2	Link-HOC, Adjusting
31	3256-26	12	Washer-Flat
32	3296-16	2	Nut-Lock, NI
33	46-6290	1	O-Ring
34	3256-1	2	Washer-Flat
35	95-2747	1	Fitting-Washout
36	3229-1	2	Bolt-CARR
38	3272-10	4	Pin-Cotter

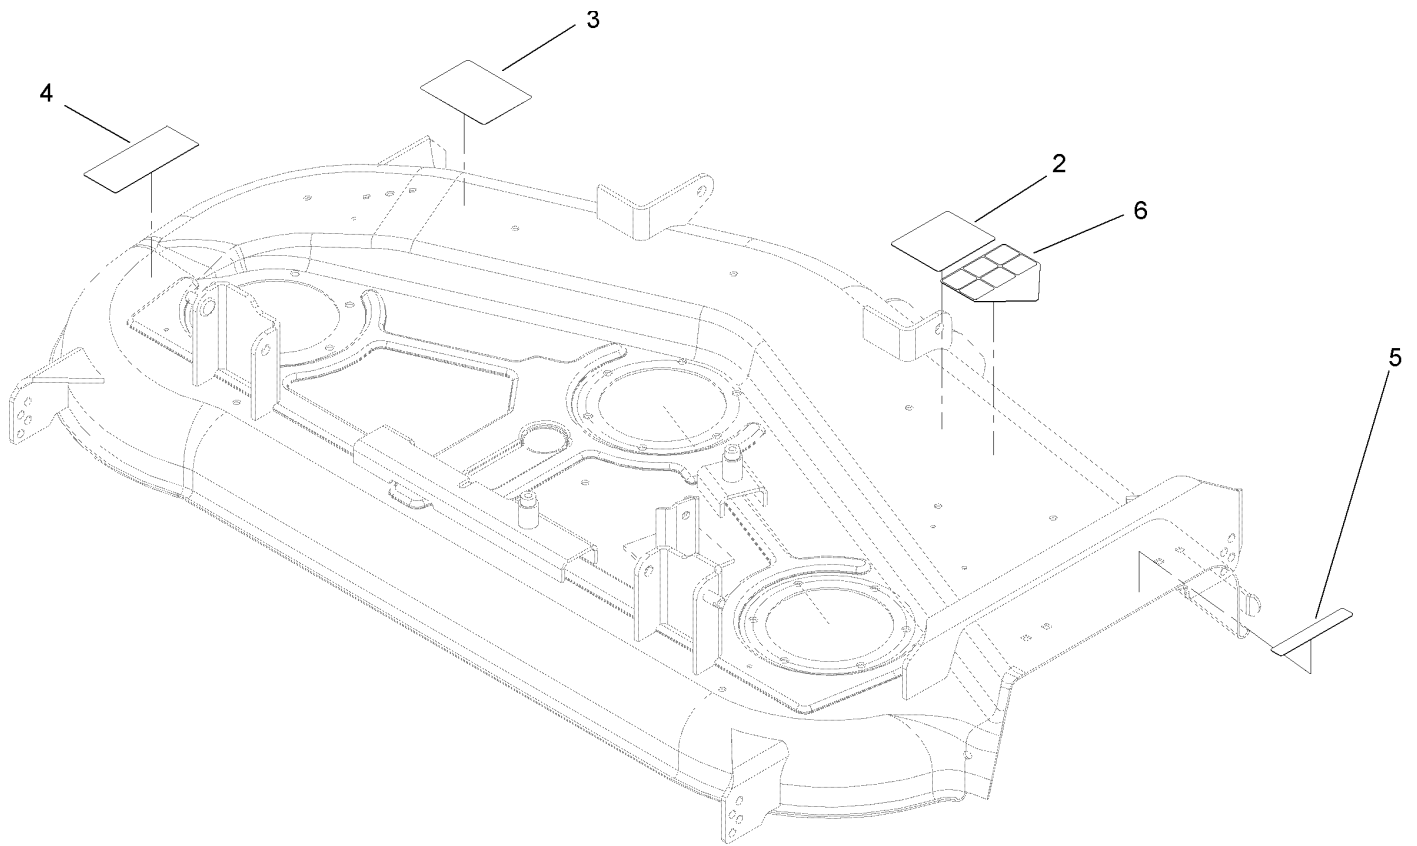 

Deck Decal Assembly No. 108-8573


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	99-3943	1	Decal-Routing, Belt
3	99-8939	1	Decal-Anti Scalp
4	93-7317	1	Decal-Danger
5	93-7009	1	Decal-Danger
6	93-7316	1	Decal-Danger

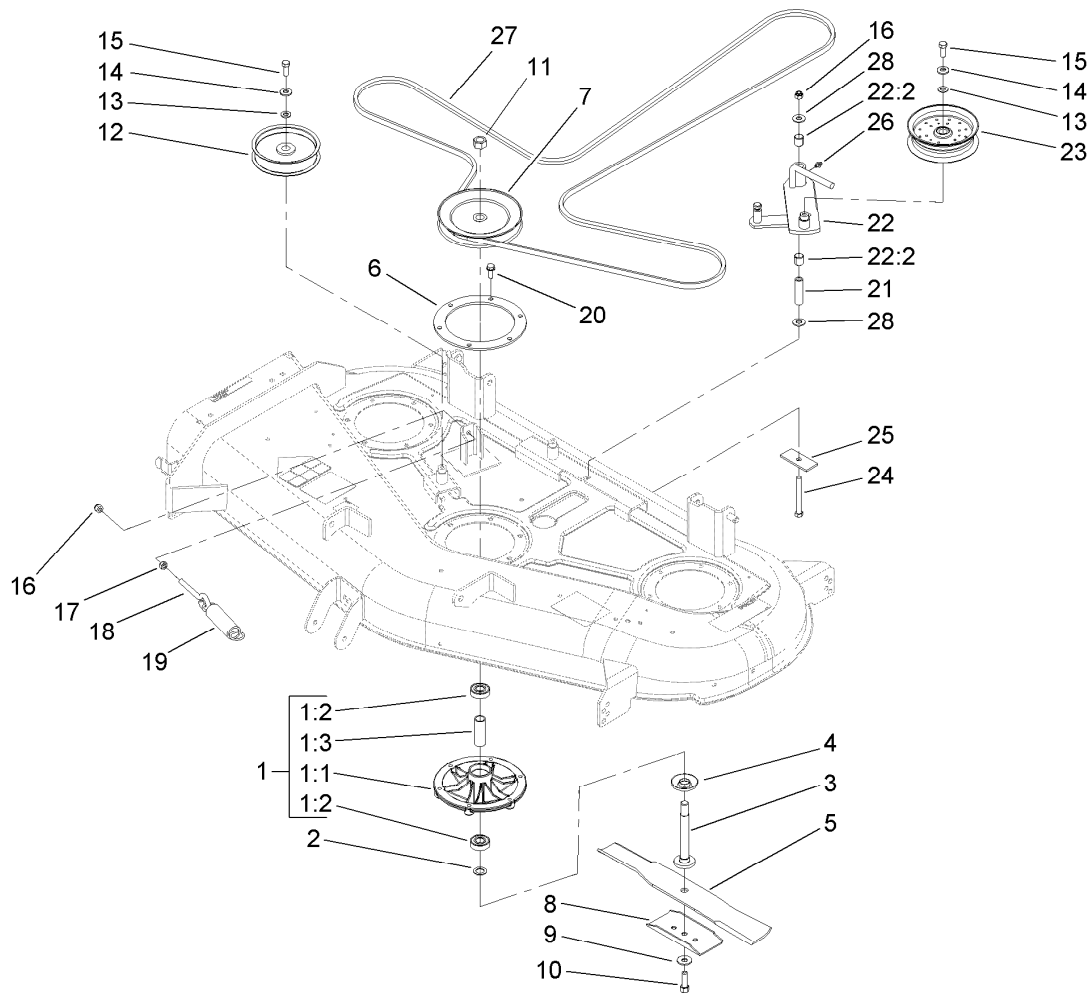 

Spindle and Belt Drive Assembly


Ref.	Part Number	Qty.	Description
1	107-9162	3	Spindle ASM
1:1	107-1739	1	Housing-Spindle
1:2	100-1048	2	Bearing-Ball
1:3	62-3661	1	Spacer
2	80-4380	3	Spacer
3	80-4341	3	Shaft-Spindle
4	80-4360	3	Shield-Bearing
5	107-1742-03	3	Blade-Recycler
6	107-1743-03	3	Ring-Support, Deck
7	107-1740	3	Pulley And Hub ASM
8	80-0510-03	3	Stiffener-Blade
9	3290-465	3	Washer-Belleville
10	26-0671	3	Screw-HH
11	3219-6	3	Nut-Hex
12	1-613098	2	Pulley-Idler
13	3256-24	3	Washer-Flat

Ref.	Part Number	Qty.	Description
14	98-5975	3	Washer-Belleville
15	323-6	3	Screw-HH
16	3296-39	2	Nut-Lock, NI
17	3217-7	1	Nut-Hex
18	94-2547	1	Bolt-Eye
19	105-6992	1	Spring-Extension
20	32144-41	18	Screw-Taptite
21	1-603384	1	Bushing-Pivot, Idler
22	105-7010	1	Idler Arm ASM
22:2	1-513034	2	Sleeve-Bearing
23	99-8912	1	Pulley-Idler, Flat
24	1-800805	1	Screw-HH
25	104-8037-03	1	Plate-Bolt, Retainer
26	302-19	1	Fitting-Grease
27	106-2217	1	Belt-V
28	1-809107	2	Washer-Hardened

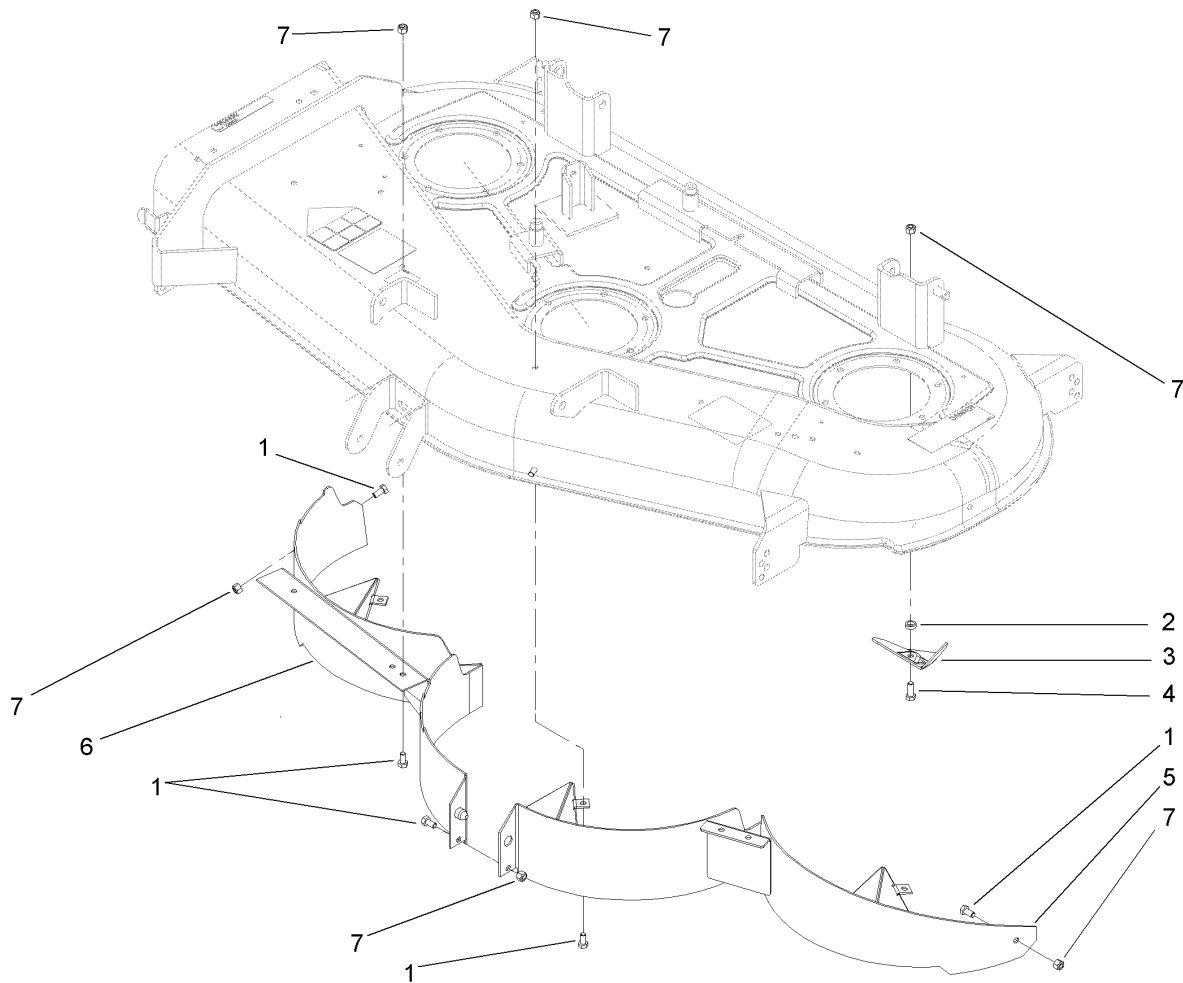 

Deck Baffle Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	322-2	9	Screw-HH
2	59-4310	3	Spacer
3	84-5760	3	Plate-Kicker
4	322-4	3	Screw-HH
5	94-2505-03	1	Left Baffle ASM
6	94-2504-03	1	Right Baffle ASM
7	3296-29	12	Nut-Lock, NI

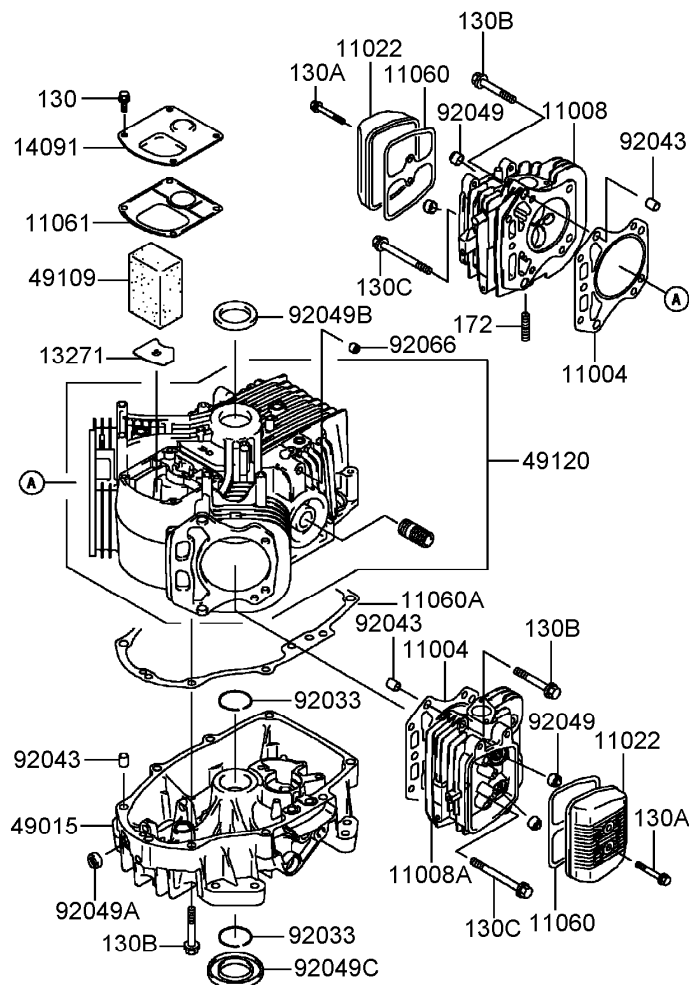 

Cylinder and Crankcase Assembly Kawasaki FH541V-AS50

Ref.	Part Number	Qty.	Description
11004	11004-7016	2	Gasket-Head ●
11008	11008-6043	1	Head-Cylinder, No. 1 ●
11008A	11008-7020	1	Head-Cylinder, No. 2 ●
11022	11022-7003	2	Case-Rocker ●
11060	11060-7001	2	Gasket-Case, Rocker ●
11060A	11060-7008	1	Gasket-Cover, Crankcase ●
11061	11061-7001	1	Gasket-Breather ●
13271	13271-7016	1	Plate ●
14091	14091-7006	1	Cover ●
49015	49015-6253	1	Cover-Crankcase ●
49109	49109-7002	1	Element-Breather ●
49120	49120-7023	1	Crankcase ●
92033	92033-7003	2	Ring-Snap ●
92043	92043-7001	6	Pin ●
92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2) ●
92049A	92049-7005	1	Seal-Oil, S O (8X14X5 H S) ●
92049B	92049-7010	1	Seal-Oil, Sd (35X48X8 R Hs) ●
92049C	92049-7011	1	Seal-Oil, S D (35X62X8 L H S) ●
92066	92066-7002	1	Plug ●
130	130B0612	4	Bolt-Flanged (6X12) ●
130A	130B0640	4	Bolt-Flanged (6X40) ●
130B	130T0850	17	Bolt-Flanged (8X50) ●

 
● Obtain parts from www.kawpower.com

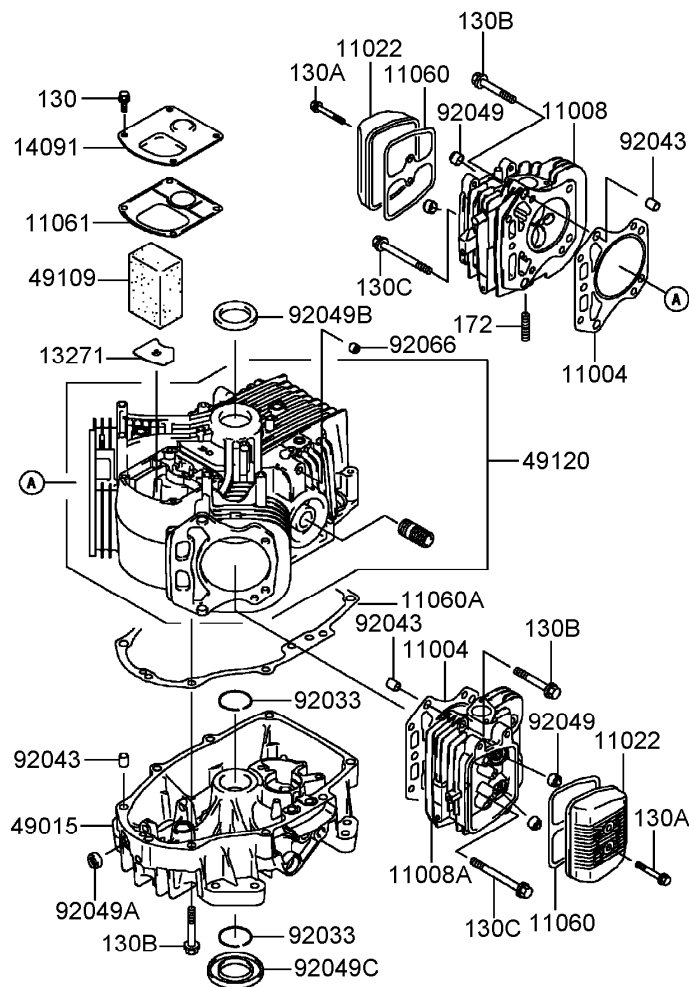

Cylinder and Crankcase Assembly Kawasaki FH541V-AS50 (continued)

Ref.	Part Number	Qty.	Description
130C	130T0875	2	Bolt-Flanged (8X75) ●
172	172G0818	4	Bolt-Stud (8X18) ●

 ● Obtain parts from www.kawpower.com

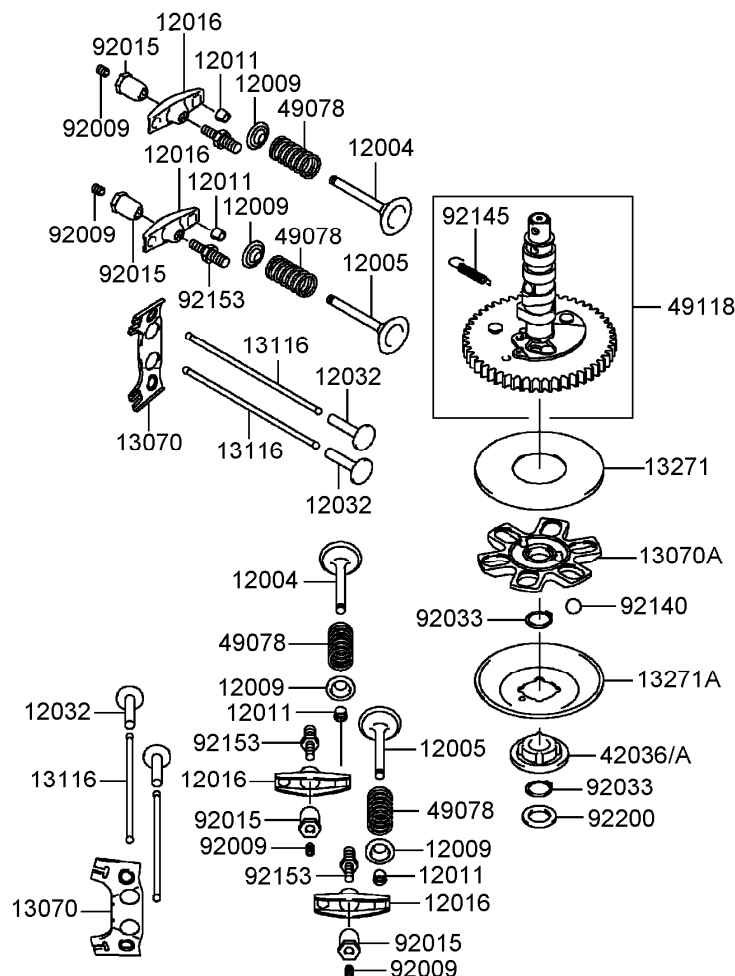


Valve and Camshaft Assembly Kawasaki FH541V-AS50

Ref.	Part Number	Qty.	Description
12004	12004-7003	2	Valve-Intake ●
12005	12005-7003	2	Valve-Exhaust ●
12009	12009-7001	4	Retainer-Spring, Valve ●
12011	12011-2056	8	Collet ●
12016	12016-7001	4	Arm-Rocker ●
12032	12032-7001	4	Tappet ●
13070	13070-7001	2	Guide ●
13070A	13070-7004	1	Guide ●
13116	13116-2057	4	Rod-Push ●
13271	13271-7007	1	Plate ●
13271A	13271-7021	1	Plate-Governor ●
42036	42036-7009	1	Sleeve ●
42036A	42036-7010	1	Sleeve ●
49078	49078-7001	4	Spring-Valve, Engine ●
49118	49118-7004	1	Camshaft ●
92009	92009-2341	4	Screw ●
92015	92015-2253	4	Nut ●
92033	92033-7001	2	Ring-Snap ●
92140	92140-7002	6	Ball ●
92145	92145-7001	1	Spring ●
92153	92153-7019	4	Bolt ●
92200	92200-7001	1	Washer ●

● Obtain parts from www.kawpower.com

 Piston and Crankshaft Assembly Kawasaki FH541V-AS50

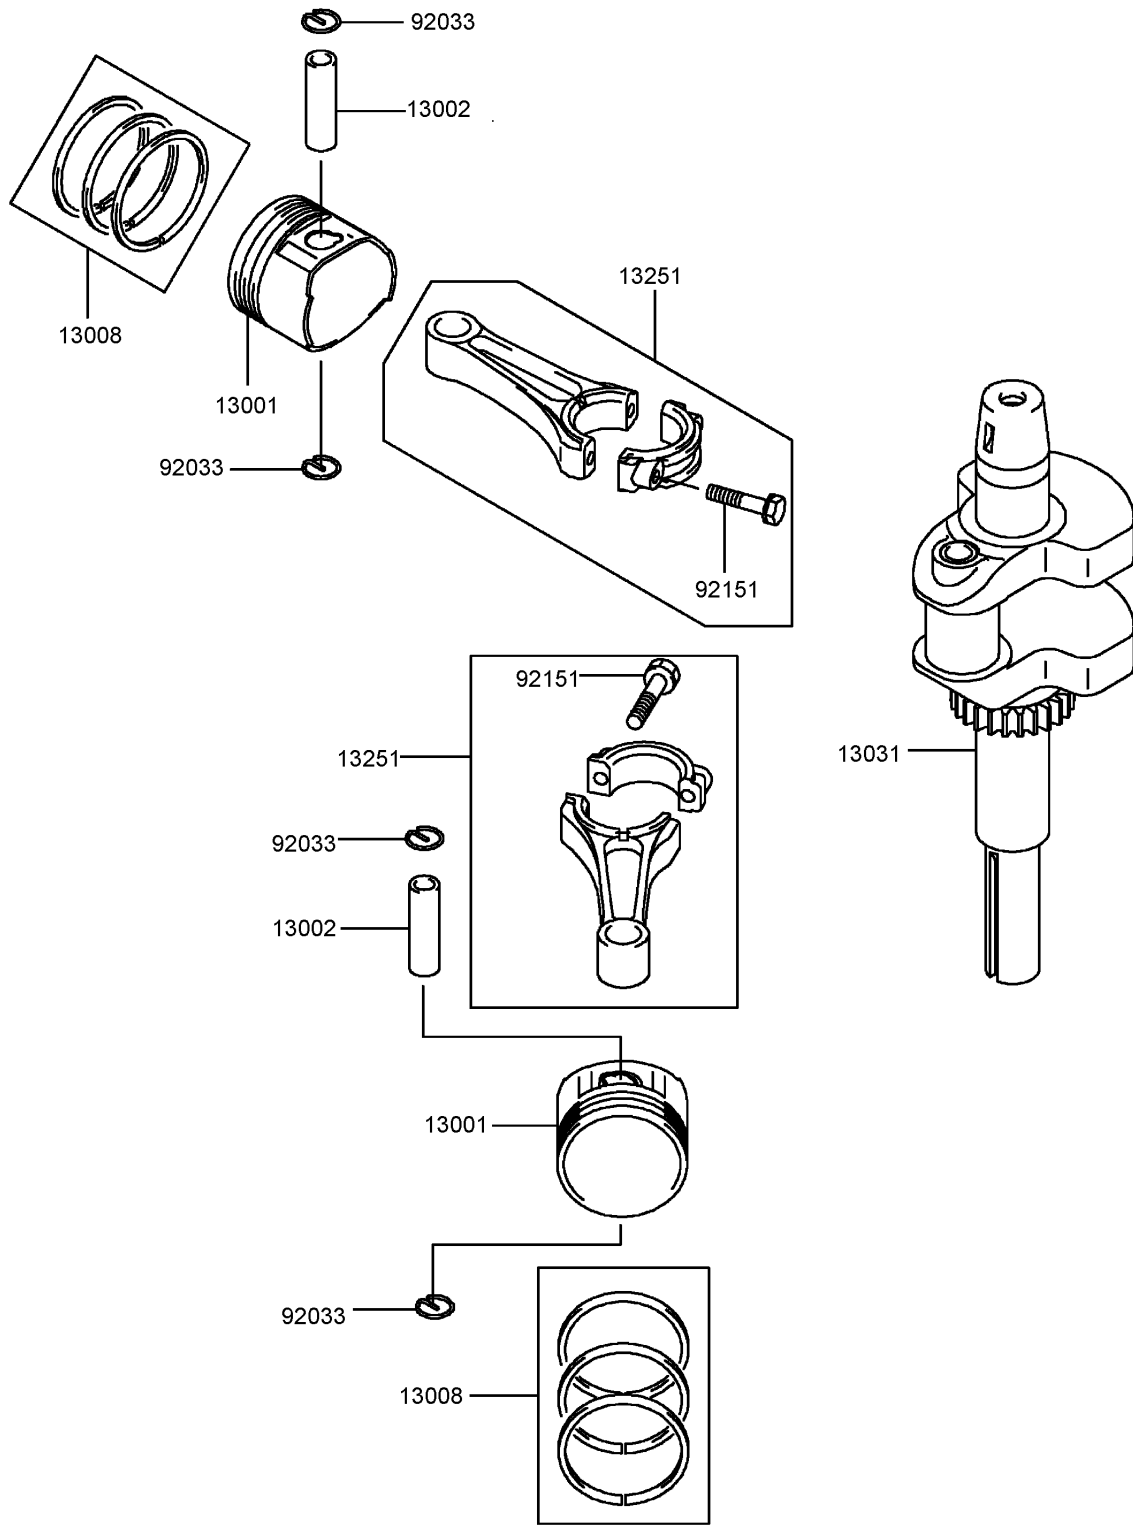


Piston and Crankshaft Assembly Kawasaki FH541V-AS50 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13001	13001-7010	2	Piston-Engine ●
13002	13002-7001	2	Pin-Piston ●
13008	13008-6060	2	Piston Ring Set ●
13031	13031-7036	1	Crankshaft ●

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13251	13251-7010	2	Connecting Rod ASM ●
92033	92033-7005	4	Ring-Snap ●
92151	92151-7017	4	Bolt (6X35) ●

● Obtain parts from www.kawpower.com

 Lubrication Equipment Assembly Kawasaki FH541V-AS50

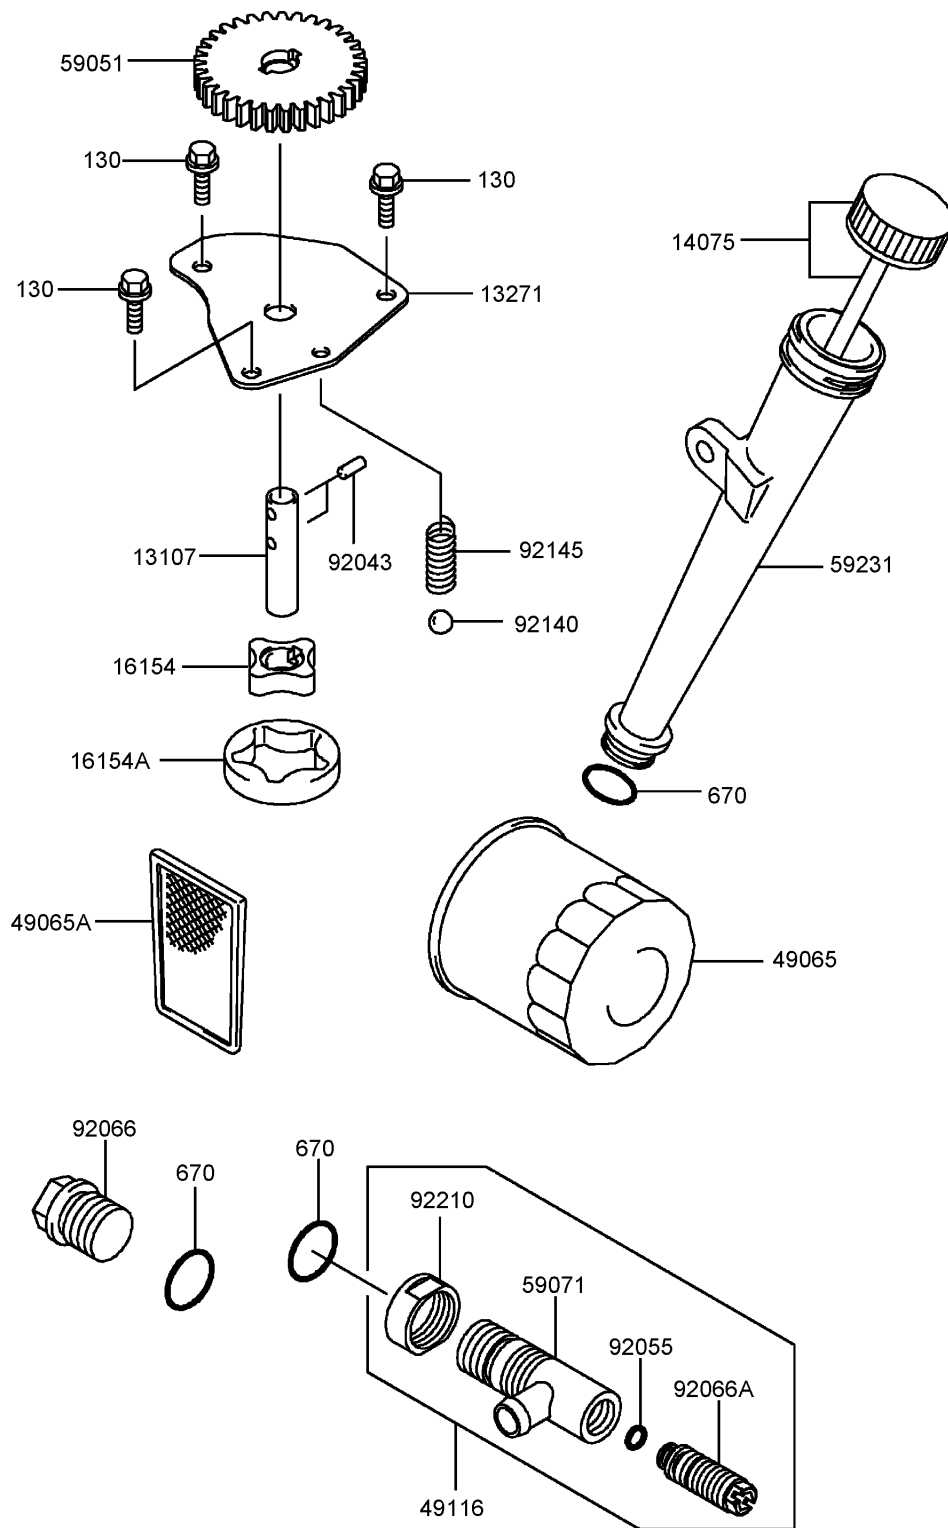


Lubrication Equipment Assembly Kawasaki FH541V-AS50 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13107	13107-7009	1	Shaft ●
13271	13271-7017	1	Plate ●
14075	14075-7009	1	Cap ASM ●
16154	16154-2053	1	Rotor-Pump (In) ●
16154A	16154-2054	1	Rotor-Pump (Out) ●
49065	49065-2078	1	Filter-Oil ●
49065A	49065-7004	1	Filter-Oil ●
49116	49116-7001	1	Valve ASM ●
59051	59051-7011	1	Gear-Spur ●
59071	59071-7008	1	Joint ●

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
59231	59231-7005	1	Filler ●
92043	92043-7003	2	Pin ●
92055	92055-7002	1	O-Ring (6Mm) ●
92066	92066-7003	1	Plug ●
92066A	92066-7007	1	Plug ●
92140	92140-7003	1	Ball ●
92145	92145-7002	1	Spring ●
92210	92210-7012	1	Nut (M22) ●
130	130B0612	3	Bolt-Flanged (6X12) ●
670	670D2016	3	O-Ring (16Mm) ●

 
● Obtain parts from www.kawpower.com

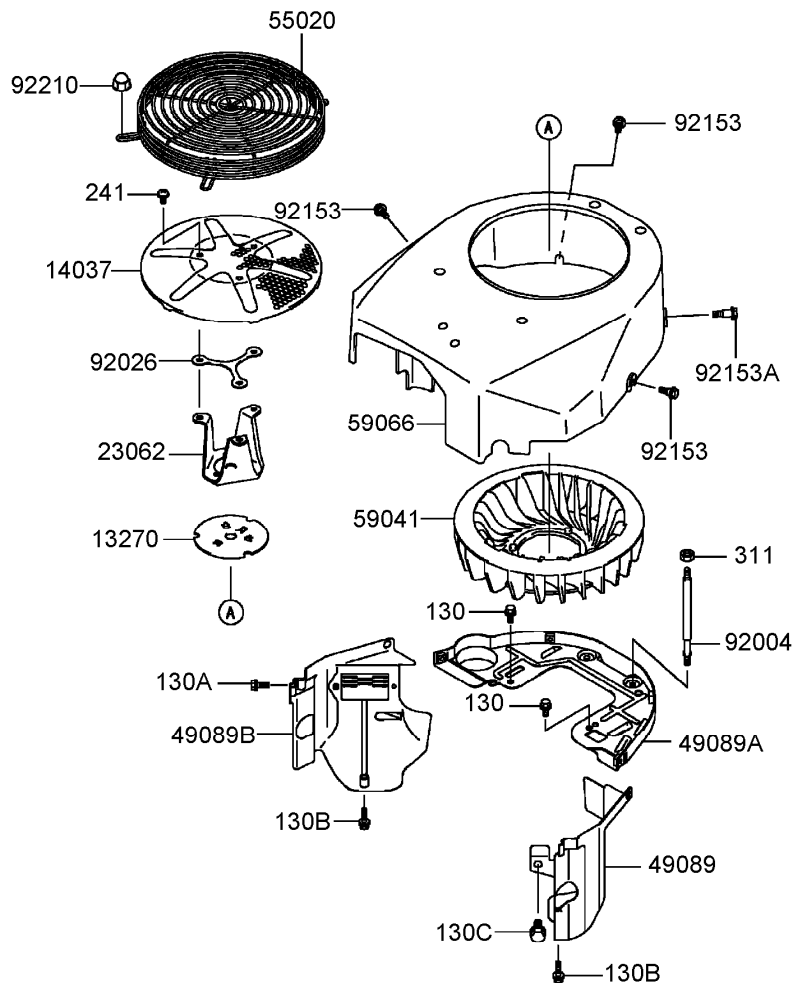

Cooling Equipment Assembly Kawasaki FH541V-AS50

Ref.	Part Number	Qty.	Description
13270	13270-7007	1	Plate ●
14037	14037-7020-9H	1	Screen ●
23062	23062-7010	1	Bracket ●
49089	49089-7002	1	Shroud-Engine ●
49089A	49089-7032	1	Shroud-Engine ●
49089B	49089-7034	1	Shroud-Engine ●
55020	55020-7004	1	Guard ●
59041	59041-7010	1	Fan ●
59066	59066-7002	1	Housing-Fan ●
92004	92004-7006	2	Stud ●
92026	92026-7007	1	Spacer ●
92153	92153-7007	3	Bolt ●
92153A	92153-7008	1	Bolt ●
92210	92210-0003	4	Nut ●
130	130B0612	2	Bolt-Flanged (6X12) ●
130A	130B0616	2	Bolt-Flanged (6X16) ●
130B	130B0625	2	Bolt-Flanged (6X25) ●
130C	130B0816	1	Bolt-Flanged (8X16) ●
241	241B0612	3	Bolt-Flanged ●
311	311B0600	2	Nut-Hex (6Mm) ●


 
● Obtain parts from www.kawpower.com

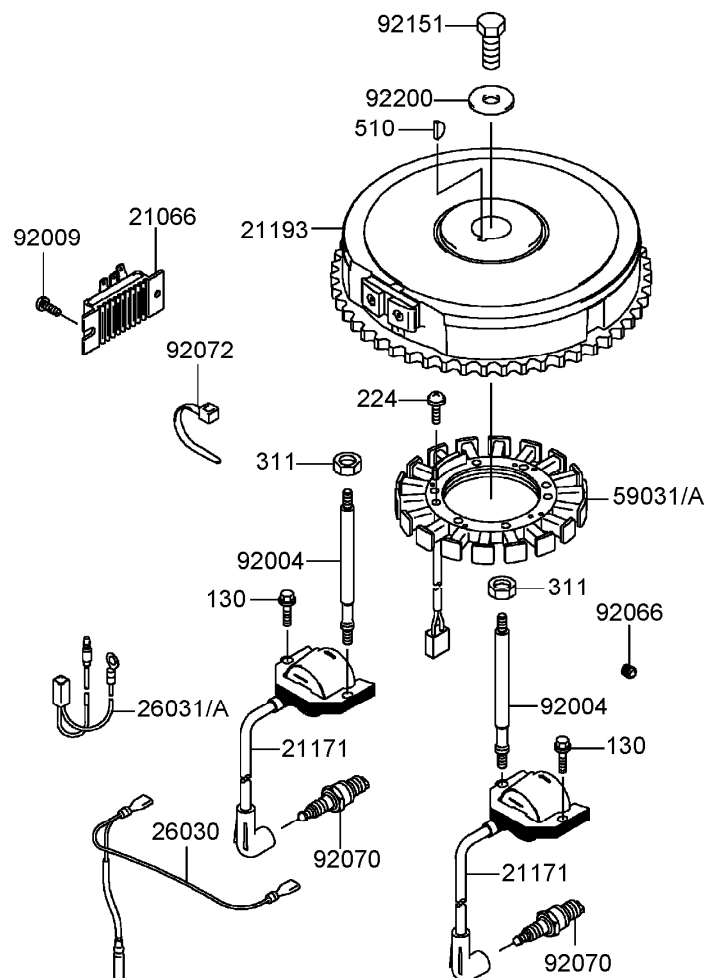

Electric Equipment Assembly Kawasaki FH541V-AS50

Ref.	Part Number	Qty.	Description
21066	21066-7011	1	Regulator-Voltage ●
21171	21171-7013	2	Ignition Coil ASM ●
21193	21193-7007	1	Flywheel ASM ●
26030	26030-7001	1	Harness ●
26031	26031-7002	1	Harness ●
26031A	26031-7012	1	Harness ●
59031	59031-7001	1	Coil-Charging ●
59031A	59031-7009	1	Coil-Charging ●
92004	92004-7009	2	Stud ●
92009	92009-2308	1	Screw ●
92066	92066-7002	1	Plug ●
92070	92070-7003	2	Spark Plug (R C J 8 Y, Solid) ●
92072	92072-7003	2	Band ●
92151	92151-2097	1	Bolt (12X30) ●
92200	92200-7002	1	Washer ●
130	130B0620	2	Bolt-Flanged (6X20) ●
224	224B0520	4	Screw-Pan (5X20) ●
311	311B0600	2	Nut-Hex (6Mm) ●
510	510A5100	1	Key-Woodruff ●

  
● Obtain parts from www.kawpower.com

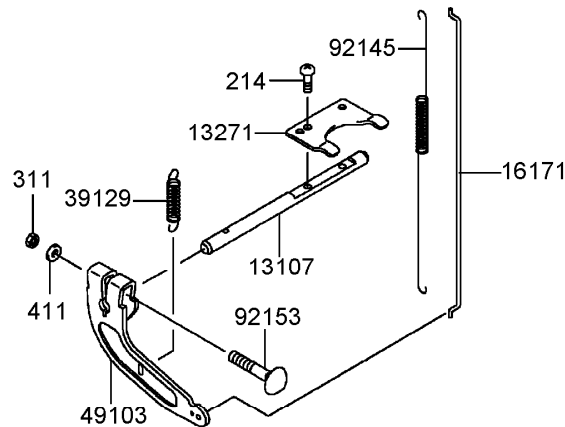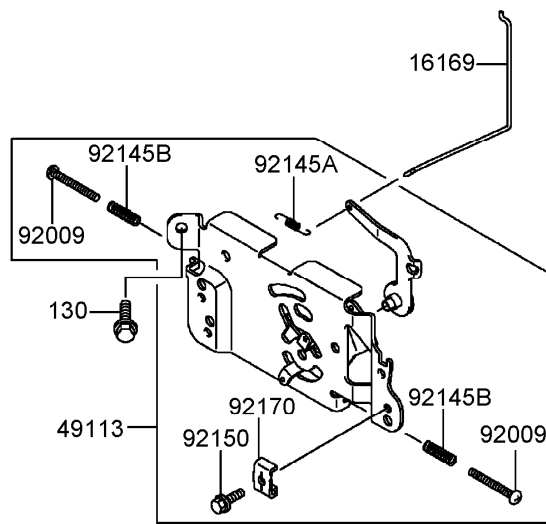

Control Equipment Assembly Kawasaki FH541V-AS50

Ref.	Part Number	Qty.	Description
13107	13107-7010	1	Shaft ●
13271	13271-7018	1	Plate ●
16169	16169-7010	1	Link-Choke ●
16171	16171-7001	1	Link ●
39129	39129-7003	1	Spring-Governor ●
49103	49103-7004	1	Arm-Governor ●
49113	49113-7027	1	Panel-Control ●
92009	92009-7007	2	Screw (4X35) ●
92145	92145-7003	1	Spring ●
92145A	92145-7004	1	Spring ●
92145B	92145-7005	2	Spring ●
92150	92150-2182	1	Bolt (5X18) ●
92153	92153-7033	1	Bolt (6X35) ●
92170	92170-7001	1	Clamp ●
130	130B0612	2	Bolt-Flanged (6X12) ●
214	214B0408	2	Screw-Pan (4X8) ●
311	311B0600	1	Nut-Hex (6Mm) ●
411	411B0600	1	Washer-Plain (6Mm) ●

 
● Obtain parts from www.kawpower.com

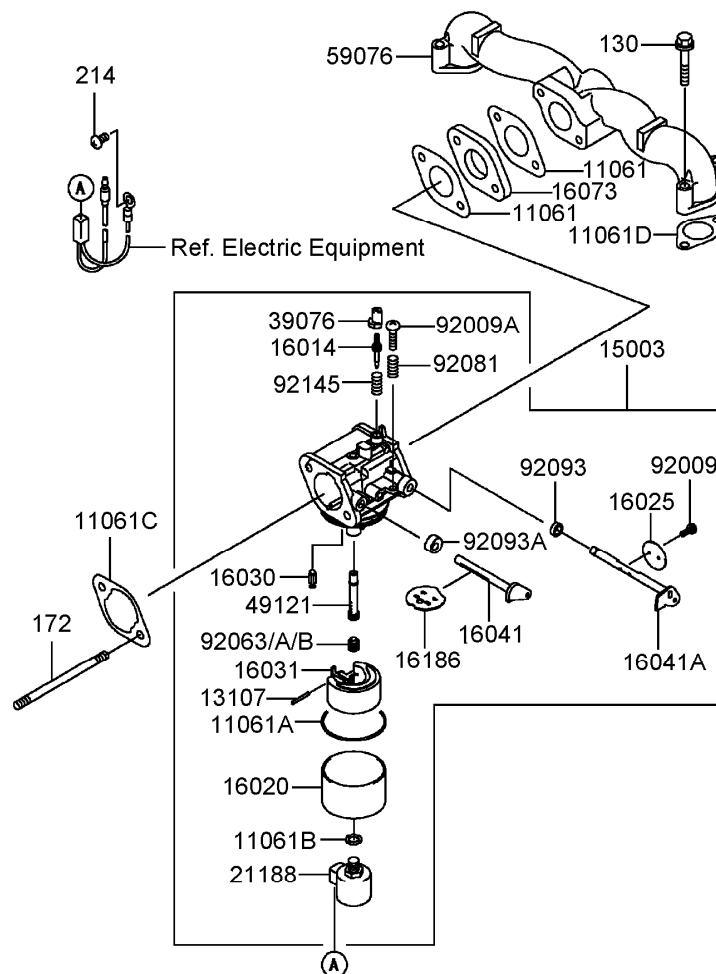

Carburetor Assembly Kawasaki FH541V-AS50

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
11061	11061-7004	2	Gasket-Insulator ●	39076	39076-7001	1	Limiter ●
11061A	11061-7009	1	Gasket-Chamber ●	49121	49121-7007	1	Nozzle-Main ●
11061B	11061-7010	1	Gasket-Screw ●	59076	59076-7001	1	Manifold-Intake ●
11061C	11061-7018	1	Gasket-Cleaner, Air ●	92009	92009-2083	2	Screw ●
11061D	11061-7019	2	Gasket ●	92009A	92009-2349	1	Screw ●
13107	13107-7018	1	Shaft ●	92063	92063-7046	1	Jet-Main (No. 100) ●
15003	15003-7086	1	Carburetor ASM ●	92063A	92063-7047	1	Jet-Main (No. 098, 3280 Ft) ●
16014	16014-7007	1	Screw-Air, Pilot ●	92063B	92063-7063	1	Jet-Main (No. 096, 6560 Ft) ●
16020	16020-7003	1	Chamber-Float ●	92081	92081-2234	1	Spring ●
16025	16025-7006	1	Valve-Throttle ●	92093	92093-2100	1	Seal ●
16030	16030-7003	1	Valve-Float ●	92093A	92093-7003	1	Seal ●
16031	16031-7002	1	Float ●	92145	92145-7015	1	Spring ●
16041	16041-7016	1	Shaft-Choke, Carburetor ●	130	130B0635	4	Bolt-Flanged (6X35) ●
16041A	16041-7018	1	Shaft-Throttle, Carburetor ●	172	172G0685	2	Bolt-Stud ●
16073	16073-7007	1	Insulator ●	214	214B0510	1	Screw-Pan (5X10) ●
16186	16186-7004	1	Choke Valve ASM ●				
21188	21188-7002	1	Solenoid ●				

 
● Obtain parts from www.kawpower.com

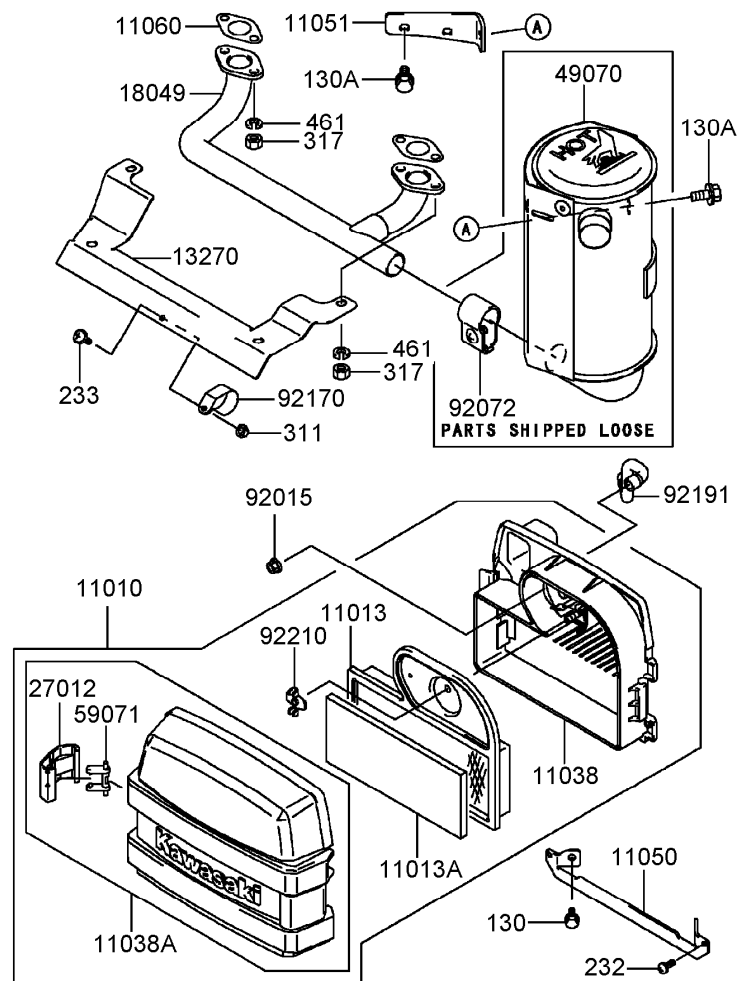

Air Filter and Muffler Assembly Kawasaki FH541V-AS50

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
11010	11010-7013	1	Air Filter ASM ●	92015	92015-1193	2	Nut ●
11013	11013-7002	1	Element-Filter, Air ●	92072	92072-7008	1	Band ●
11013A	11013-7033	1	Element-Filter, Air ●	92170	92170-7002	1	Clamp ●
11038	11038-7006	1	Air Filter Case ASM ●	92191	92191-7001	1	Tube ●
11038A	11038-7013	1	Air Filter Case ASM ●	92210	92210-7004	1	Nut (M6) ●
11050	11050-7006	1	Bracket ●	130	130B0612	2	Bolt-Flanged (6X12) ●
11051	11051-7005-9H	1	Bracket ●	130A	130B0816	2	Bolt-Flanged (8X16) ●
11060	11060-7021	2	Gasket-Muffler ●	232	232B0514	2	Screw-Pan ●
13270	13270-7008	1	Plate ●	233	233B0416	1	Screw (4X16) ●
18049	18049-7001	1	Pipe-Exhaust ●	311	311B0400	1	Nut-Hex (4Mm) ●
27012	27012-7003	2	Hook ●	317	317R0800	4	Nut-Hex, Small (8Mm) ●
49070	49070-7015	1	Muffler ●	461	461F0800	4	Washer-Spring (8Mm) ●
59071	59071-7017	2	Joint ●				

 ● Obtain parts from www.kawpower.com

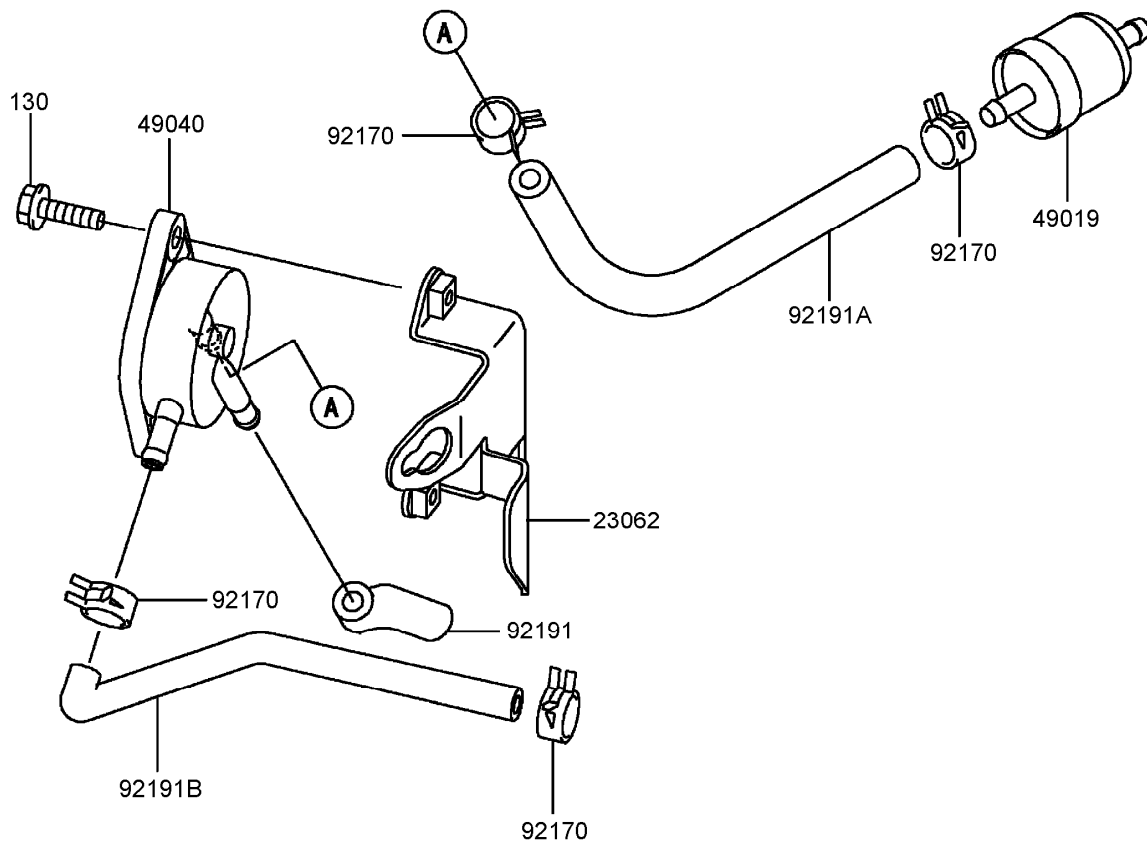


Fuel Tank and Valve Assembly Kawasaki FH541V-AS50

Ref.	Part Number	Qty.	Description
23062	23062-7004-9H	1	Bracket ●
49019	49019-7001	1	Filter-Fuel ●
49040	49040-7001	1	Pump-Fuel ●
92170	92170-2088	4	Clamp ●
92191	92191-7002	1	Tube ●
92191A	92191-7003	1	Tube (6.35X12.7X160) ●
92191B	92191-7004	1	Tube ●
130	130B0620	2	Bolt-Flanged (6X20) ●

● Obtain parts from www.kawpower.com

 Starter Assembly **Kawasaki FH541V-AS50**

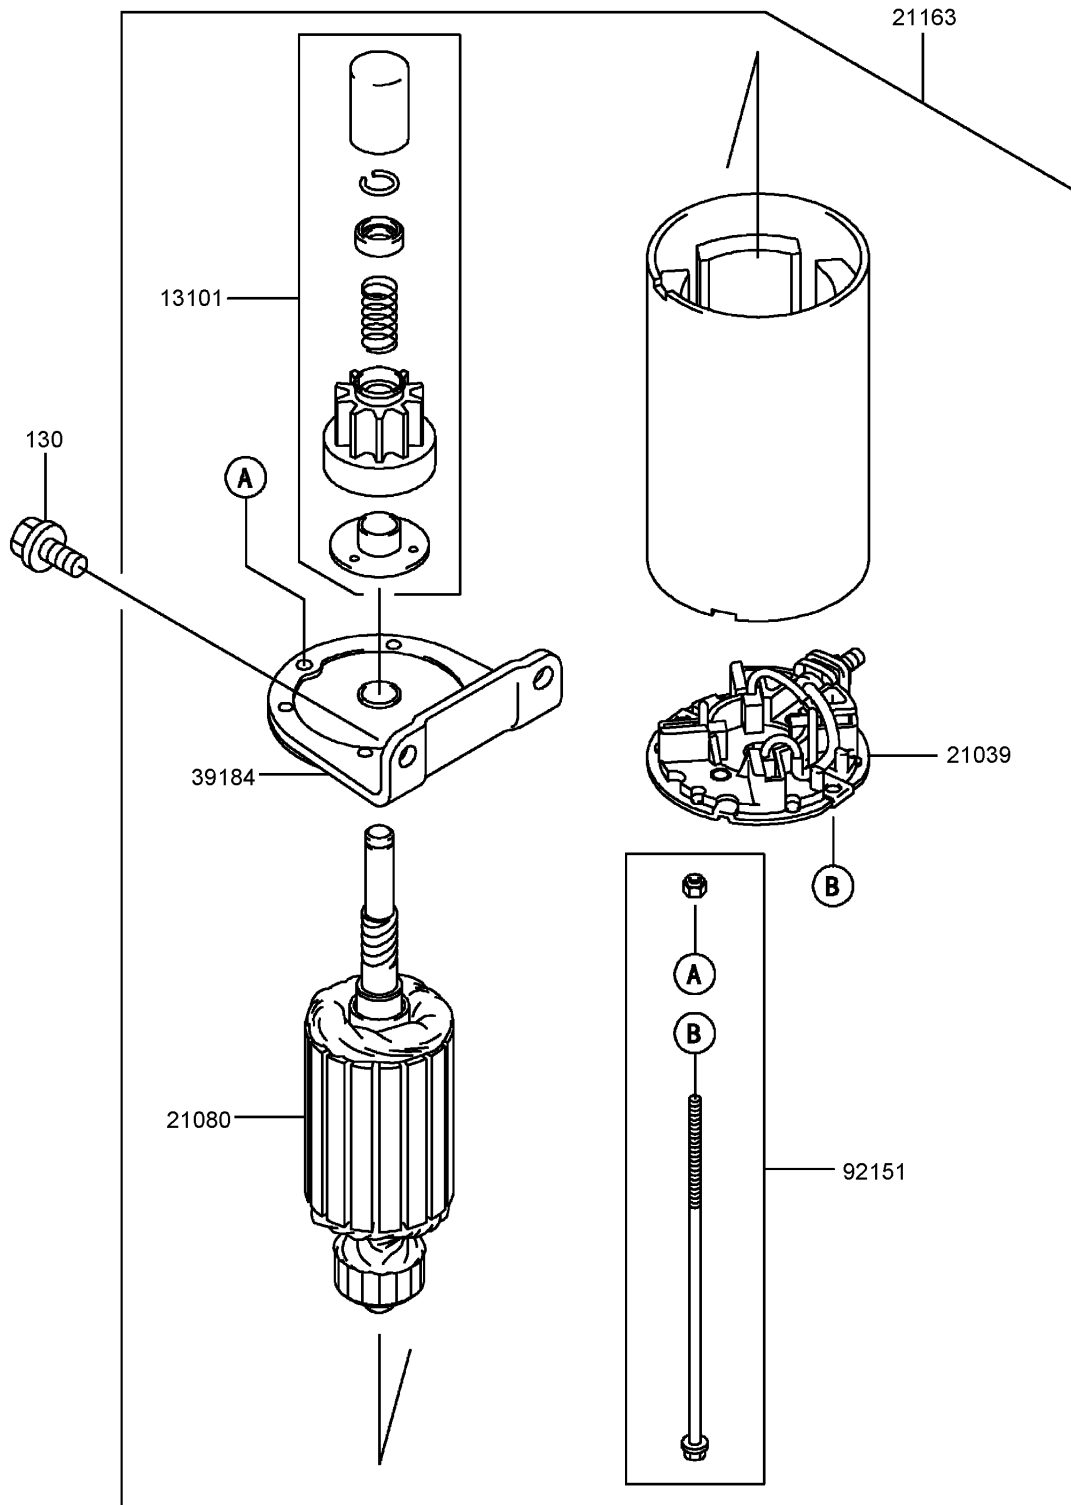

Starter Assembly

Kawasaki FH541V-AS50 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13101	13101-7003	1	Gear ASM ●
21039	21039-7004	1	Brush ●
21080	21080-7001	1	Armature ●
21163	21163-7010	1	Starter-Electric ●


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
39184	39184-7004	1	Bracket ASM ●
92151	92151-7013	1	Bolt ●
130	130B0816	2	Bolt-Flanged (8X16) ●

● Obtain parts from www.kawpower.com

56070



 56033



Label Assembly Kawasaki FH541V-AS50

Ref.	Part Number	Qty.	Description
56033	56033-7003	1	Label-Manual ●
56070	56070-7001	1	Label-Warning ●

● Obtain parts from www.kawpower.com

Attachments and Accessories

For 74407 TimeCutter ZX525 Riding Mower

Product Name	Model/Part
Light Kit.....	104-8041
Tire Chain Kit	105-1851
Smooth Caster Wheel Kit.....	105-1856
French Decal Kit	107-2493
Armrest Kit.....	108-6163
56 Inch Snow Blade.....	79165
52 Inch Recycler Kit.....	79186

Notes:

Notes:



Count on it.