Installation Instructions

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	No parts required	ı	Prepare the machine.
2	No parts required	_	Remove the existing seat.
3	Seat back Bolt (5/16 x 1–1/2 inches) Nut (5/16 inch) Seat-base assembly	1 2 2 1	Install the deluxe seat kit.
4	No parts required	_	Test the safety-interlock system.



Preparing the Machine

No Parts Required

Procedure

- Park the machine on a level surface.
- 2. Disengage the blade-control switch.
- Move the motion-control levers outward to the NEUTRAL-LOCK position to engage the parking brake.
- 4. Shut off the engine and remove the key.





Removing the Existing Seat Assembly

No Parts Required

Procedure

- Tilt the seat up as shown in Figure 1.
- Unhook the tilt cable from the seat pan (Figure 1).

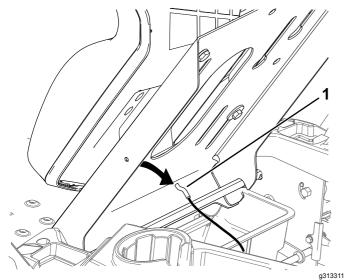


Figure 1

- 1. Tilt cable
- 3. Disconnect the harness from the seat switch (Figure 2).


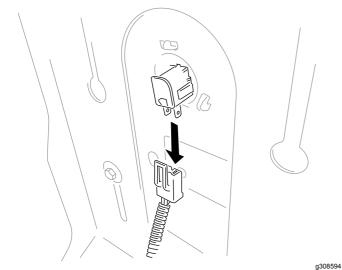



Figure 2

- Tilt the seat down.
- Remove the 2 bolts holding the existing seat 5. assembly on the pivot rod (Figure 3).

Note: Retain the 2 bolts for installation of the deluxe seat assembly.

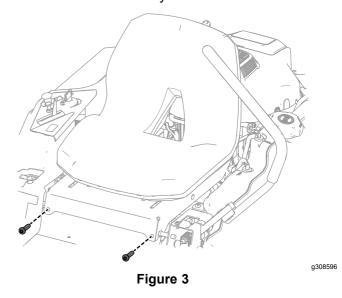

Remove the seat assembly from the machine (Figure 4).

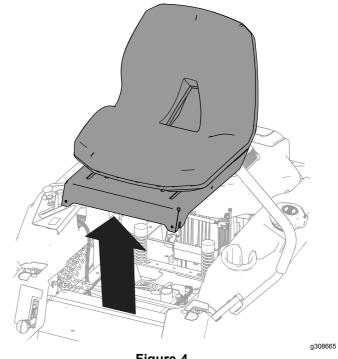


Installing the Deluxe Seat Kit

Parts needed for this procedure:

1	Seat back
2	Bolt (5/16 x 1-1/2 inches)
2	Nut (5/16 inch)
1	Seat-base assembly

Procedure

 Secure the seat-base assembly onto the pivot rod with the 2 bolts previously removed (Figure 5).

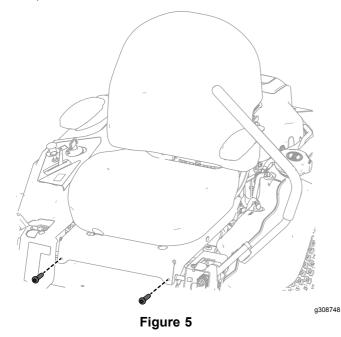

- 2. Slide the seat back onto the seat-base posts and align the holes (Figure 6).
- 3. Secure the seat back using 2 bolts (5/16 x 1–1/2 inches) and 2 nuts (5/16 inch); refer to Figure 6. Torque the bolts to 24 N·m (18 ft-lb).

Note: Insert the bolts from back to front. You may need to shift the seat fabric to install the nuts.



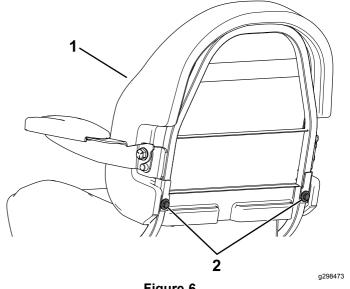


Figure 6

- 1. Seat back
- 2. Bolts and nuts
- 4. Tilt the seat assembly up.
- 5. Connect the seat switch (Figure 7).

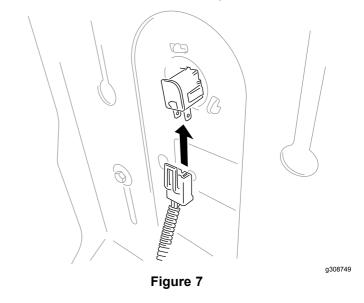

- 6. Tilt the seat back partway.
- 7. Attach the seat-tilt cable from inside the seat pan (Figure 8).

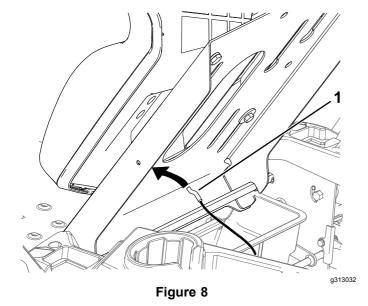

1. Seat-tilt cable



Testing the Safety-Interlock System

No Parts Required

Procedure

A CAUTION

If safety interlock switches are disconnected or damaged the machine could operate unexpectedly causing personal injury.

- Do not tamper with the interlock switches.
- Check the operation of the interlock switches daily and replace any damaged switches before operating the machine.

Refer to your *Operator's Manual* for the correct procedure to check the safety-interlock system.

Test the safety-interlock system before you use the machine each time. If the safety system does not operate as described in your *Operator's Manual*, have an Authorized Service Dealer repair the safety system immediately.

Product OverviewControls

Fore/Aft Adjustment Lever

The seat can move forward and backward. Position the seat where you have the best control of the machine and are most comfortable (Figure 9).

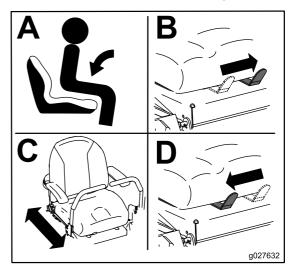


Figure 9

g027632