

# Installation

## **Preparing the Machine**

- 1. Park the machine on a level surface, disengage the PTO, and engage the parking brake.
- 2. Shut off the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
- 3. Raise the rear of the machine so that the wheels are off the ground. Support the machine using jack stands.

**Note:** Use jack stands rated for your machine. Refer to the *Operator's Manual* for your machine to determine the weight.

#### A WARNING


Mechanical or hydraulic jacks may fail to support the machine and cause serious injury.

Use jack stands when supporting the machine.

### Installing the Tires

- 1. Remove the 2 existing tires.
- 2. Install the 2 snow tires using the existing lug nuts that you removed.
- 3. Torque the lug nuts to 115 to 142 N·m (85 to 105 ft-lb).
- 4. Ensure that air pressure in the tires is 83 to 97 kPa (12 to 14 psi).

**Note:** Depending on conditions, lowering tire pressure can increase traction.

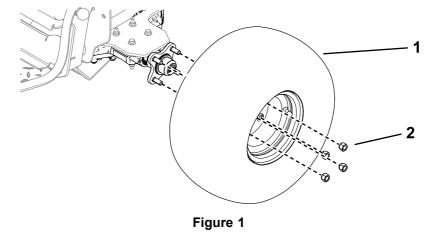

2. Lug nut (4)

g314322





### Count on it.