



1638XL, 1638 XLE

Lawn Tractor

Model No. 71223-20000001 and Up

Model No. 71226-20000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Frame & Body Assembly	3	38" Deck Components Assembly	14
Hood & Tower Assembly	4	38" Deck Blade Drive & Braking Components Assembly	15
Rear Body & Seat Assembly	5	38" Deck Engagement Components Assembly .	16
Steering Components Assembly	6	Height of Cut Components Assembly	17
Steering Components Assembly	7	Electrical Components Assembly	18
Fixed Steering Assembly	8	Wire Schematic	19
Engine Systems Components Assembly	9	Peerless Transaxle Model MST 205-509 ...	20-21
Traction Clutching Components Assembly	10	Engine Briggs & Stratton	
Shifting Components Assembly	11	Model 28Q777-0690-E1	22-30
5 Speed Transaxle Assembly	12	Maintenance	31
38" Deck Components Assembly	13		

 
Accessories

Description	Model / Part No.	Description	Model / Part No.
-------------	------------------	-------------	------------------

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

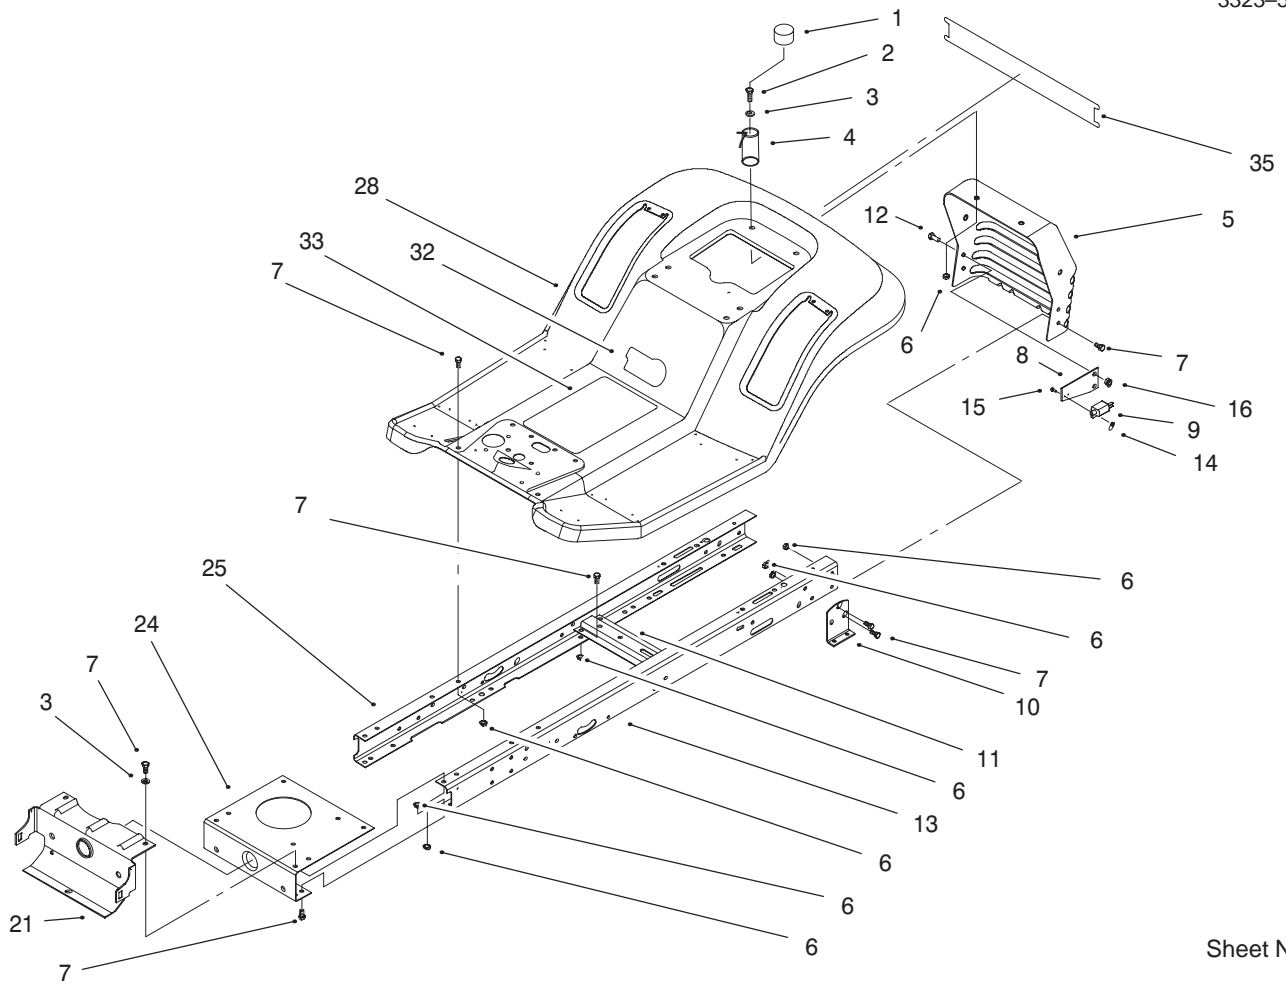


Sheet No.:2

Frame & Body Assembly

Ref. No.	Part No.	Qty.	Description
1	701178	2	Cap-Protector
2	322-5	2	Screw-HH
3	3256-23	4	Washer-Flat
4	88-6220	2	Spring - Compression
5	99-2957-03	1	Panel-Rear Hitch
6	3296-29	24	Nut-Lock
7	322-3	22	Screw-HH
8	99-2953-03	1	Plate-Switch
9	95-1653	1	Switch - Single Pole
10	88-5260-03	2	Bracket-Transaxle Mtg
11	88-4620-03	1	Bracket-Idler Pivot
12	322-3	2	Screw-HH
13	99-2958-03	1	Rail- LH Frame
14	3296-1	2	Nut-Lock Ni
15	3290-392	2	Screw - Hex Head Slot
16	3296-29	2	Nut-Lock
21	98-3575-03	1	Support-Front Axle
24	88-4630-03	1	Plate-Eng Mtg
25	99-2959-03	1	Rail- RH Frame
28	99-2971	1	Body ASM-Rear
32	76-1340	1	Decal - USA (only on: 71223)
33	93-6675	1	Decal - Gear Instr. Intl (only on: 71226)

Ref. No.	Part No.	Qty.	Description
33	99-6094	1	Decal - Instruction (only on: 71223)
35	95-0809	1	Decal-Rear Body

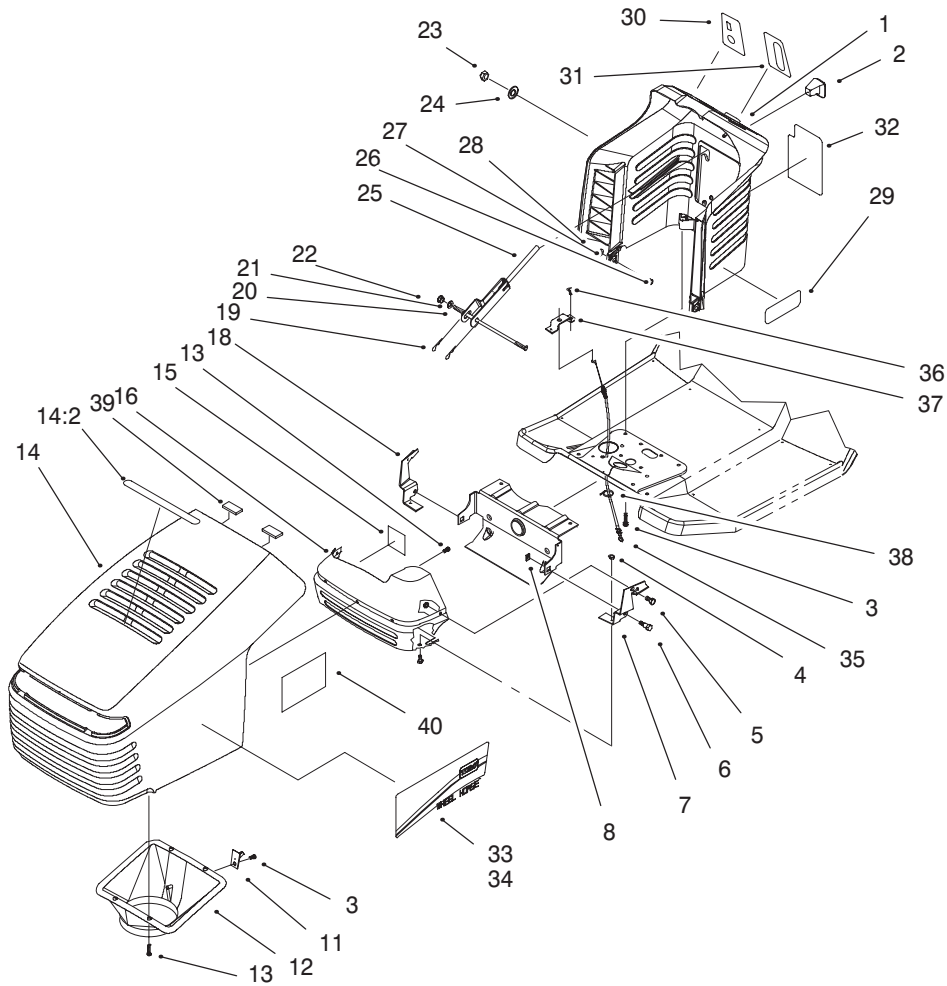 


Sheet No.:3

Hood & Tower Assembly

Ref. No.	Part No.	Qty.	Description
1	99-1947	1	Tower-Steering
2	94-5565	1	Knob - Shift
3	46-8091	3	Special-HWH
4	3296-42	4	Nut-Lock
5	321-2	4	Screw-HH
6	28-0540	2	Bolt-Shoulder
7	88-6050-03	1	Bracket-LH Hinge
8	3290-496	2	Nut-Retainer
11	94-1984	1	Latch - Pin
12	88-4050	1	Duct-Air
13	46-8090	7	Screw-Plastite
14	92-8650	1	Hood-V-Chassis Toro
14		1	Hood-w/Decal Toro
14:2	92-5748	1	Decal-Air Duct Toro
15	92-5782	3	Foil Tape
16	93-3864-03	1	Shield - Heat
18	88-6040-03	1	Bracket-RH Hinge
19	3290-307	2	Cotter-Hairpin
20	100-7401	1	Rod-Tower Pivot
21	3256-24	2	Washer-Flat
22	3218-3	2	Nut-Jam
23	100-7402	2	Nut-Cap
24	100-7403	2	Washer-Flat
25	88-5190-03	1	Deck Engage Lev Wa
26	3296-29	2	Nut-Lock


Ref. No.	Part No.	Qty.	Description
27	3256-23	2	Washer-Flat
28	322-3	2	Screw-HH
29	100-6247	2	Decal-1638 XI
30	99-8141	1	Decal-Ignition/Lights (only on: 71226)
30	99-8139	1	Decal-Ignition/Lights (only on: 71223)
31	92-2461	1	Decal - Throttle (only on: 71223)
31	92-5730	1	Decal - Throttle (only on: 71226)
32	92-2462	1	Decal - Deck Engage (only on: 71223)
32	93-6673	1	Decal - Deck Engage (only on: 71226)
33	95-0808	1	Decal - Hood Left
34	95-0807	1	Decal - Hood Right
35	99-6837	1	Cable ASM-Deck, 38"
36	9266714	2	Screw-HWH
37	93-3849	1	Brkt-Upper Cable
38	614249	1	Strap-Tie, Small
39	94-1980	2	Foam - Hood
40	100-6221	1	Decal-Service, 71223 (only on: 71223)

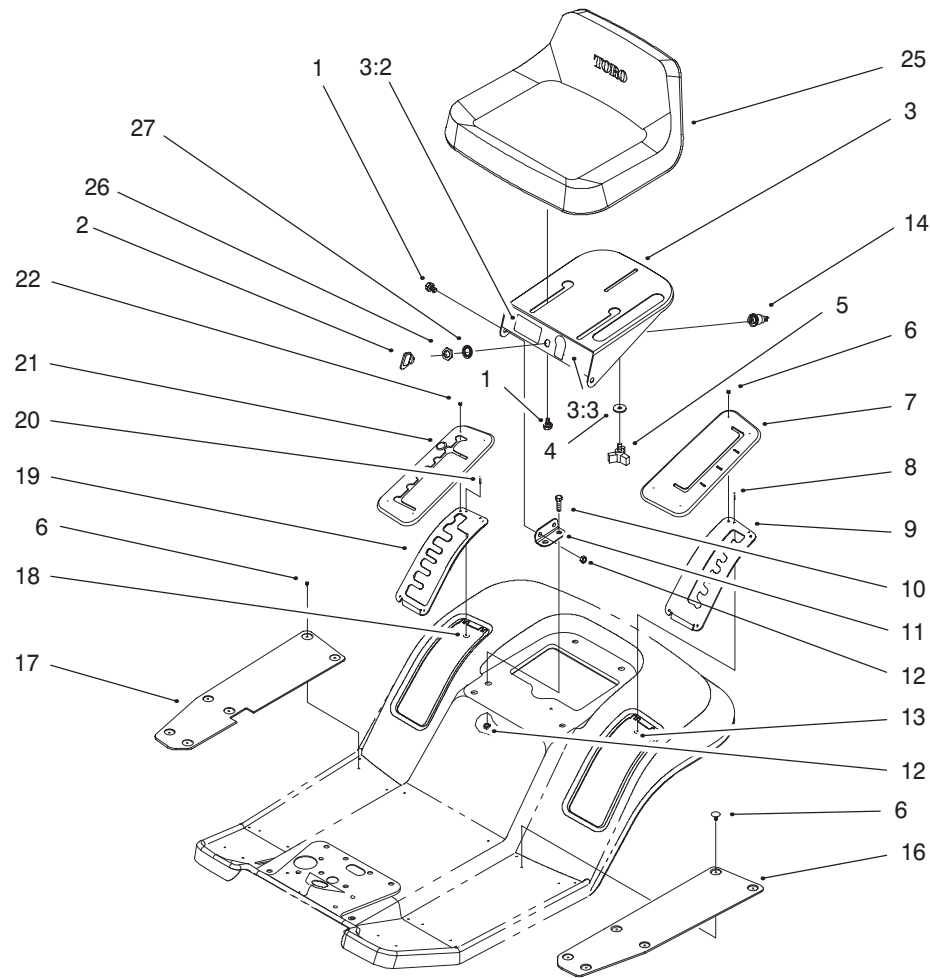 

Sheet No.:4

Rear Body & Seat Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	37-8770	4	Bolt-Shoulder	13	3269-26	2	Washer-Flat
2	63-8360	1	Key-Ignition w/Shield	14	46-5780	1	Switch-Starter
3	99-5831	1	Support ASM-Seat (only on: 71226)	16	88-5240	1	Mat-LH Foot
3	99-5830	1	Support ASM-Seat (only on: 71223)	17	88-5220	1	Mat-RH Foot
3:2	99-2985	1	Decal-Danger (only on: 71223)	18	3269-26	2	Washer-Flat
3:2	99-2986	1	Decal-Danger Intl (only on: 71226)	19	88-5020-03	1	Plate-Shift Gate
3:3	99-5340	1	Decal-Nmir Switch Intl (only on: 71226)	20	3290-282	2	Rivet-Stl Pop
3:3	99-5339	1	Decal-Nmir Switch (only on: 71223)	21	88-5160	1	Cover-Shift Gate (only on: 71223)
4	5-4460	1	Washer-Pivot	21	93-7656	1	Cover - Shift, Intl (only on: 71226)
5	92-9674	1	Knob	22	3290-479	4	Fastener-Panel
6	3290-479	16	Fastener-Panel	25	88-3950	1	Seat - Medium Back V411
7	88-5170	1	Cover - HOC (only on: 71223)	26	218-461	1	Nut-HH
7	93-7657	1	Cover - HOC, Intl (only on: 71226)	27	3254-5	1	Washer-Lock/Intl
8	3290-282	2	Rivet-Stl Pop				
9	88-5030-03	1	Gate-HOC				
10	322-3	4	Screw-HH				
11	88-4820-03	2	Bracket-Seat Hinge				
12	3296-29	6	Nut-Lock				

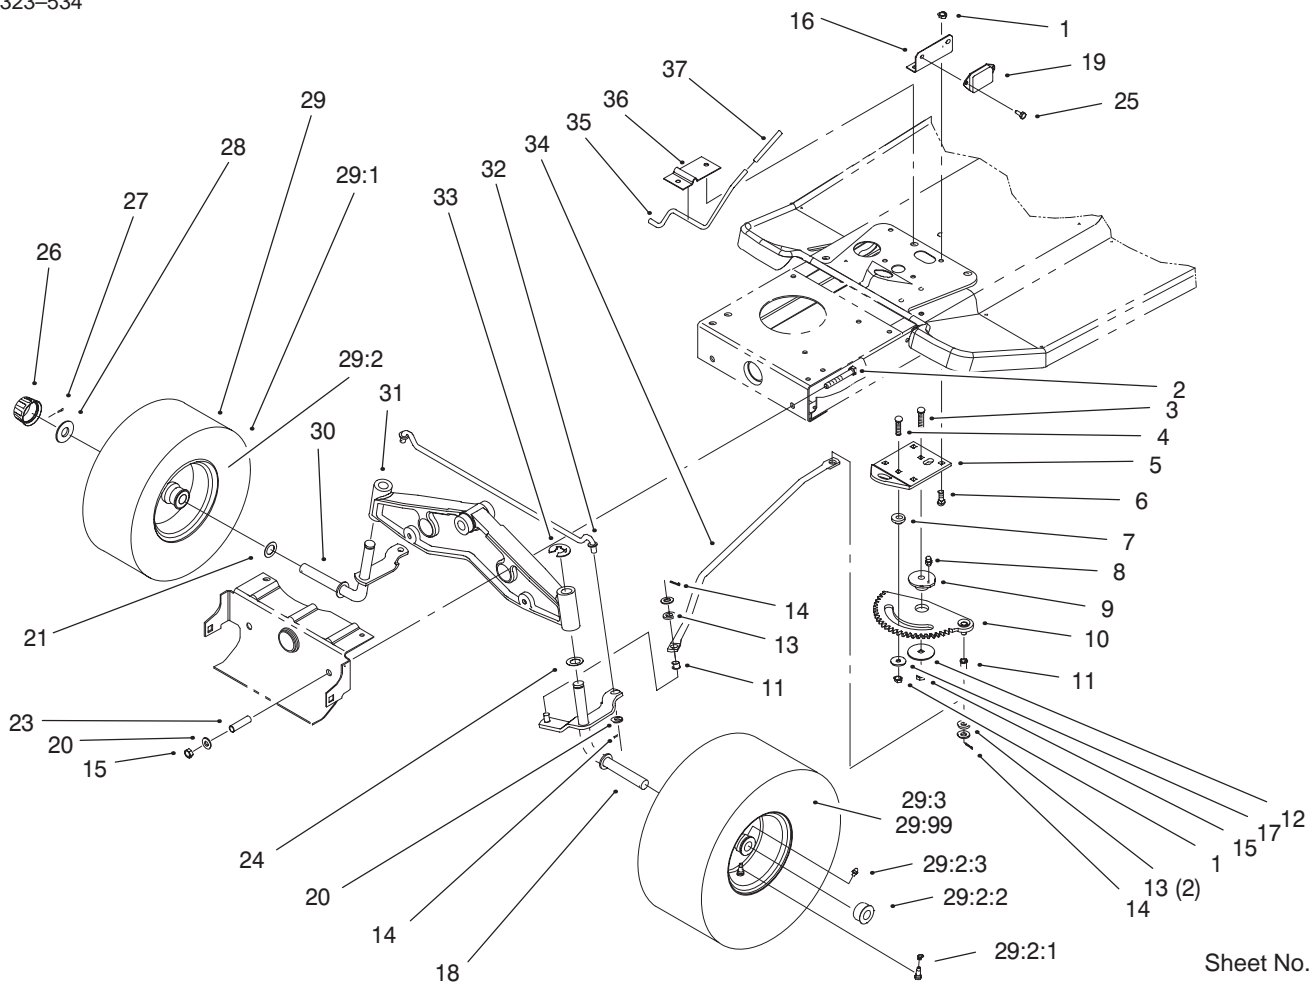 


Sheet No.:5

Steering Components Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	5	Nut-Lock
2	323-13	2	Screw-HH
3	3231-4	1	Screw-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket-Steering Rack
6	3230-2	4	Screw-CARR
7	88-5010	1	Spacer - Steering Rack
8	302-26	1	Zerk
9	88-4670	1	Bushing - Eccentric
10	88-5200	1	Steering Rack Wa *B
11	52-2891	2	Bushing-Steering Link
12	111419	1	Bearing-Washer
13	3256-25	4	Washer-Flat
14	3272-10	4	Pin-Cotter
15	3296-39	3	Nut-Lock Ni
16	99-2956-03	1	Bracket-Module
17	5-4460	1	Washer-Pivot
18	92-7890-03	1	LH Spindle Wa (only on: 71223)
19	99-3700	1	Module-Nmir
20	3256-24	4	Washer-Flat
21	3-6498	4	Washer-Thrust
23	88-5470	2	Spacer-Front Axle
24	3-6498	2	Washer-Thrust


Ref. No.	Part No.	Qty.	Description
25	9266714	2	Screw-HWH
26	61-9780	2	Cap-Hub
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer
29		2	Wheel & Tire ASM, 15" (only on: 71226)
29		2	Wheel&tire ASM,Front (only on: 71223)
29:1	99-2988	1	Tire
29:2	99-6829	1	Rim ASM-Welded (only on: 71226)
29:2	88-4370	1	15" Rim ASM (only on: 71223)
29:2:1	232-27	1	Stem-Valve
29:2:2	88-4400	2	Bearing - Wheel (only on: 71223)
29:2:2	110513	2	Bearing-Wheel (only on: 71226)
29:2:3	302-5	1	Fitting-Lube
29:3	232-39	1	Tube (only on: 71226)
29:99	232-39	1	Tube (only on: 71223)
30	92-7889-03	1	RH Spindle Wa
31	99-6844-03	1	Axle-Front
32	88-5380	1	Tie Rod - Steering
33	32151-48	2	E-Ring
34	88-4830	1	Link-Drag

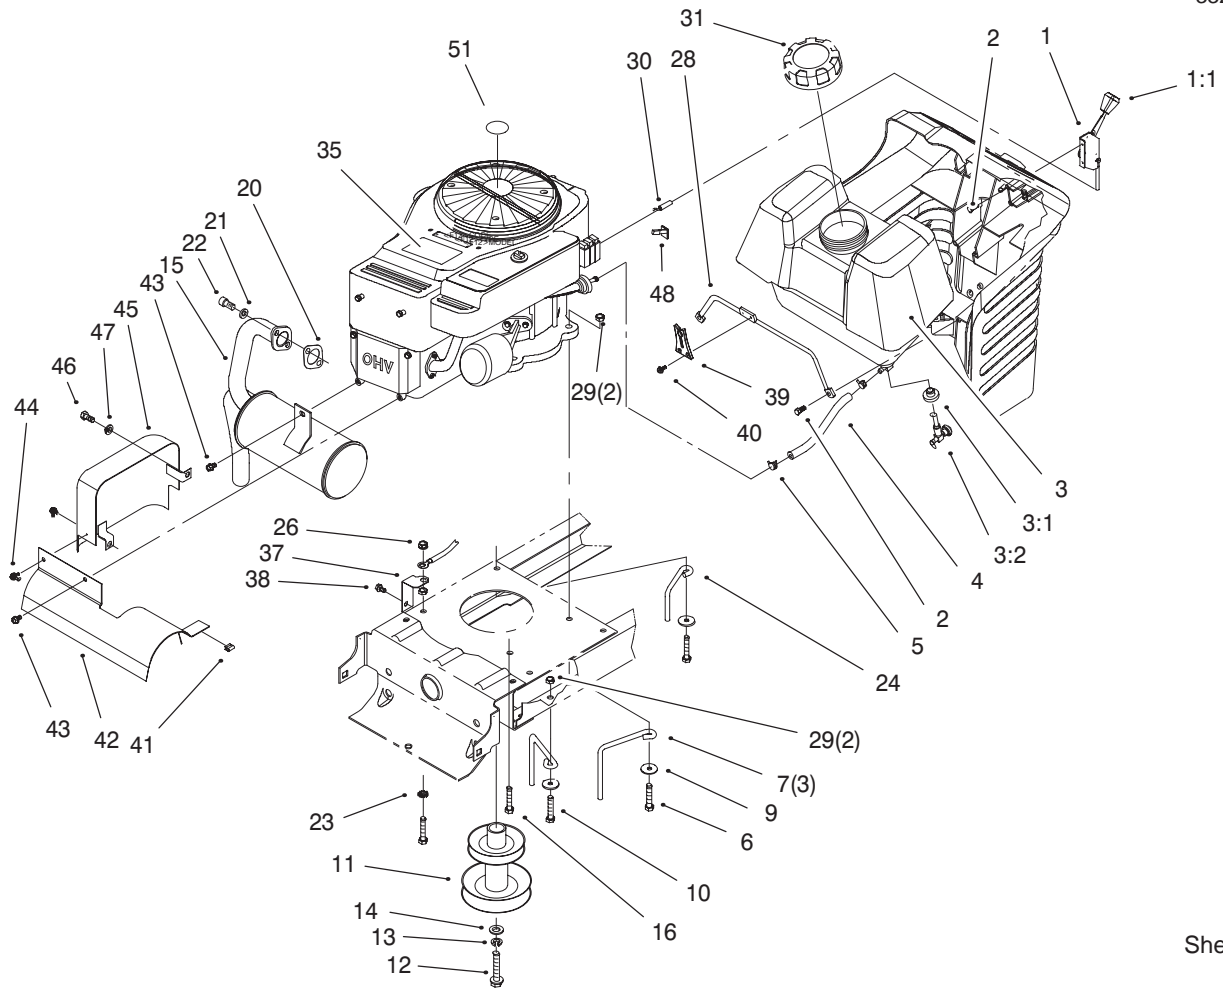 

Sheet No.:8

Engine Systems Components Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	88-4340	1	Control-Throttle	30	88-4350	1	Cable-Throttle
1:1	66-0120	1	Knob	31	88-3980	1	Gas Cap Assembly
2	27-0220	4	Screw-Special	35	100-6249	1	Decal - Engine
3	88-3880	1	Gas Tank ASM	37	93-3809	1	Bracket- Ground
3:1	104047	1	Bushing	38	9266714	1	Screw-HWH
3:2	104048	1	Valve-Fuel	39	94-1951	1	Latch - Hood
4	47-2963	1	Hose-Gas	40	32144-112	2	Screw-Forming, Thread
5	2412-98	2	Clamp	41	93-3882	1	Clip - Tinnerman, U
6	322-9	3	Screw-HH	42	93-3880-03	1	Shield-Muffler
7	93-3854	3	Guide - Belt Engine	43	9266714	2	Screw-HWH
9	5-4460	4	Washer-Pivot	44	32104-76	2	Screw-Acorn Slot
10	322-5	2	Screw-HH	45	93-8450-03	1	Wa - Exhaust Shield
11	94-1963	1	ASM - Engine Pulley	46	322-3	1	Screw-HH
12	62-3760	1	Screw-HH	47	3253-4	1	Washer-Lock/Sp
13	3253-22	1	Washer-Lock/Sp	48	88-4490	1	Reducer-Throttle Rpm (only on: 71226)
14	3256-25	1	Washer-Flat	51	99-6842	1	Decal-Logo
15	94-1953	1	Muffler - Exhaust				
16	9267154	1	Screw				
20	88-4410	1	Gasket-Muffler				
21	3253-4	2	Washer-Lock/Sp				
22	3274-10	2	Screw-HSH				
23	3255-8	1	Washer-Lock/Ext				
24	93-3855	1	Guide - Belt RH				
26	32149-1	2	Nut-Keps				
28	94-1952	1	Rod - Gas Tank				
29	3296-29	4	Nut-Lock				

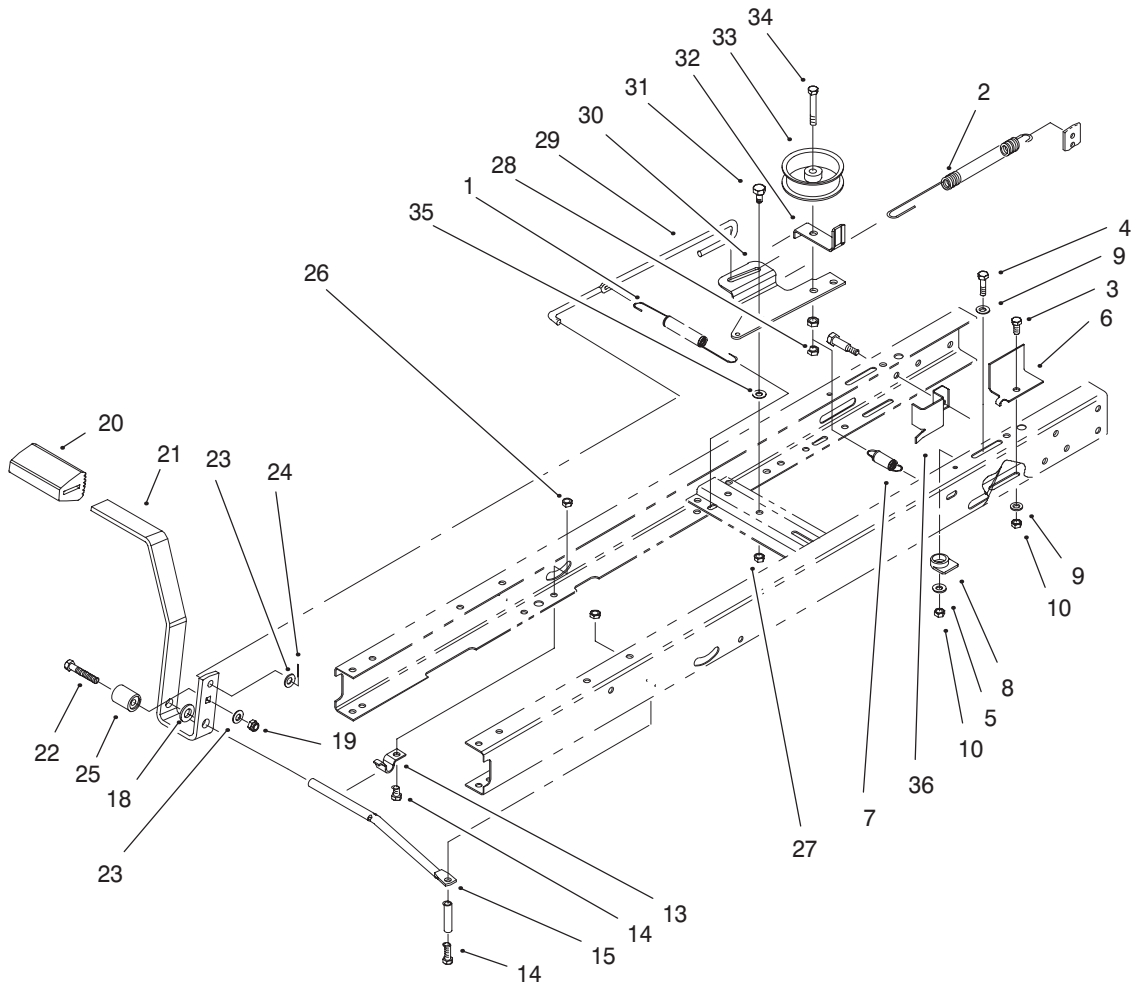 


Sheet No.:9

Traction Clutching Components Assembly

Ref. No.	Part No.	Qty.	Description
1	27-8890	1	Spring-Return
2	94-4294	1	Spring - Brake
3	322-3	1	Screw-HH
4	322-6	1	Screw-HH
5	5-4460	1	Washer-Pivot
6	94-5433	1	Bracket - Belt Guide
7	88-6330	1	Spring - Extension
8	84-5610	1	Guide-Cable
9	3256-23	2	Washer-Flat
10	3296-29	2	Nut-Lock
13	88-4810	1	Clamp-Shift Pivot
14	322-3	2	Screw-HH
15	88-5500	1	Rod-Pedal Pivot
18	3256-26	1	Washer-Flat
19	3296-29	1	Nut-Lock
20	65-2920	1	Pad-Pedal
21	88-5000-03	1	Pedal-Clutch/Brake
22	322-10	1	Screw-HH
23	3256-23	2	Washer-Flat
24	3272-10	1	Pin-Cotter
25	99-6836	1	Spacer-Switch
26	3296-29	2	Nut-Lock
27	3296-29	1	Nut-Lock
28	3296-59	2	Nut-Lock Ni
29	88-5270	1	Rod-Clutch/Brake
30	88-6070	1	Arm-Idler

Ref. No.	Part No.	Qty.	Description
31	37-8770	1	Bolt-Shoulder
32	88-5560	1	Guide-Idler Belt
33	88-5680	1	Pulley-Idler
34	323-11	1	Screw-HH
35	5-4460	1	Washer-Pivot
36	94-4926	1	Bracket - Belt Guide

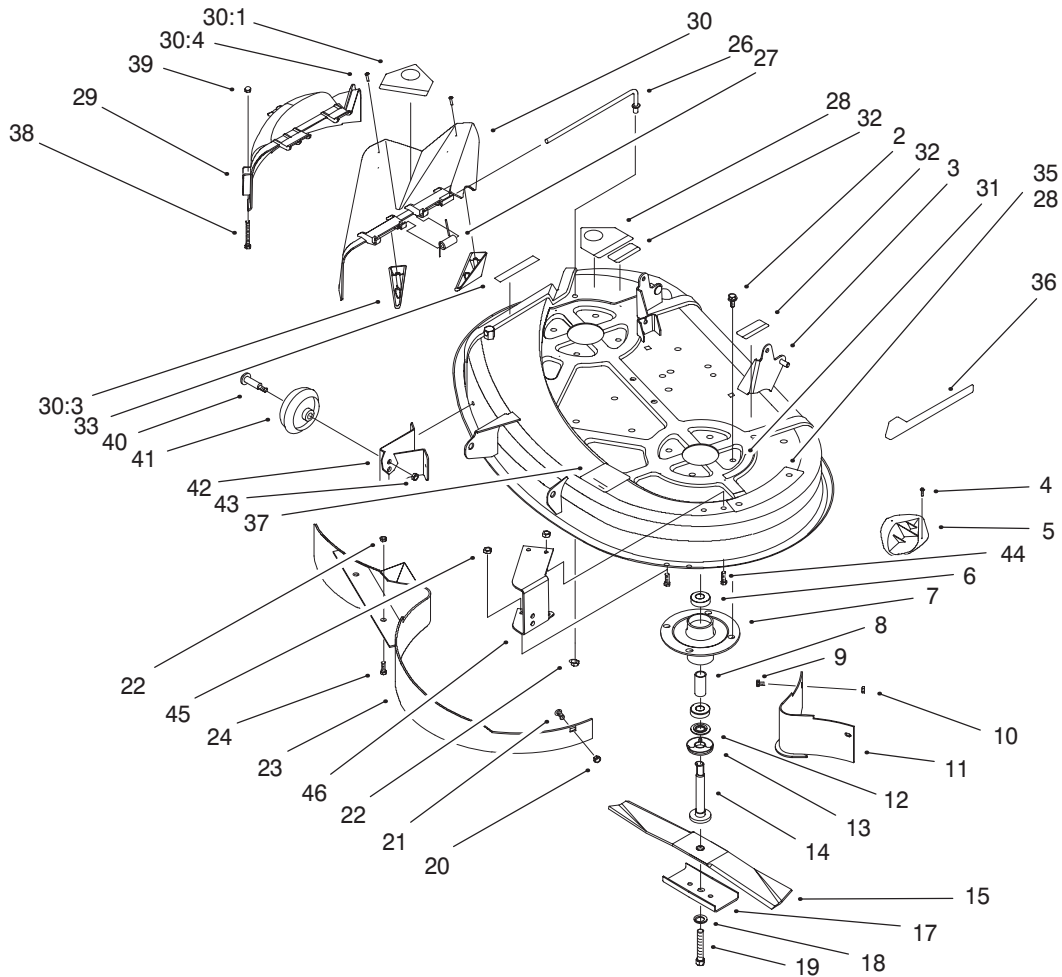 


Sheet No.:16

Height of Cut Components Assembly

Ref. No.	Part No.	Qty.	Description
2	32144-41	8	Screw-Taptite
3	99-5847	1	Deck
3	99-5846	1	Deck ASM-Service, Intl (only on: 71226)
4	32144-111	8	Screw-PPH
5	76-2160	4	Kicker Plate
6	38-7820	4	Bearing-Ball
7	88-4510	2	Spindle-Diecast Aluminum
8	62-3661	2	Bearing Spacer
9	321-4	2	Screw-HH
10	3296-42	2	Nut-Lock
11	79-1640-03	1	Baffle Wa
12	80-4380	2	Spacer
13	80-4360	2	Shield-Bearing
14	80-4341	2	Spindle Shaft
15	79-3061	2	Blade-19.32 Rec
17	80-0510-03	2	Blade Stiffener
18	3290-465	2	Washer-Belleville
19	26-0671	2	Screw-Blade
20	3296-29	1	Nut-Lock
21	3230-1	1	Screw-CARR
22	3296-39	3	Nut-Lock Ni
23	79-1600-03	1	Baffle Wa

Ref. No.	Part No.	Qty.	Description
24	323-5	2	Screw-HH
26	95-1661	1	Rod - Pivot
27	57-6950	1	Spring
28	93-7010	2	Decal - Danger (only on: 71226)
28	93-1122	1	Decal - Danger (only on: 71223)
29	88-4430	1	Recycler Cover
30	93-7695	1	ASM - 38" Deflector, Intl (only on: 71226)
30	100-6201	1	ASM - Deflector, 38" (only on: 71223)
30:1	93-1122	1	Decal - Danger (only on: 71223)
30:1	93-7010	1	Decal - Danger (only on: 71226)
30:3	93-7696	2	Kicker - Ce
30:4	93-0231	4	Screw - PPH
31	93-6677	1	Decal - Shield Danger (only on: 71226)
31	68-3660	1	Decal - Shield Danger (only on: 71223)
32	55-4300	2	Decal (only on: 71223)
32	93-6674	2	Decal - Warning (only on: 71226)

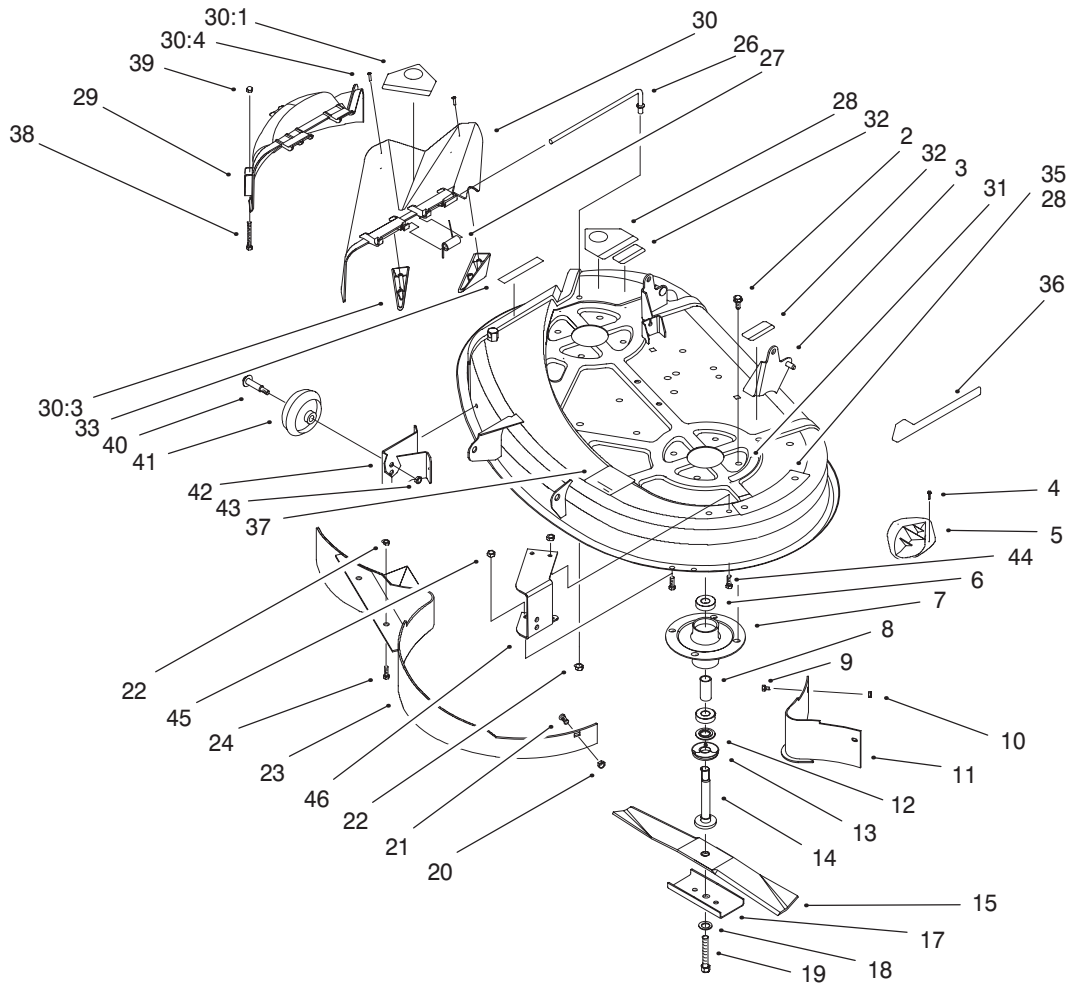 


Sheet No.:16

Height of Cut Components Assembly

Ref. No.	Part No.	Qty.	Description
33	93-7009	1	Decal-Deflector Danger (only on: 71226)
33	68-3650	1	Decal-Deflector Danger (only on: 71223)
35	79-3140	1	Decal-Danger (only on: 71223)
36	100-6203	1	Decal-Recycler 38"
37	93-6679	1	Decal - Belt Routing, 38"
38	321-15	2	Screw-HH
39	32111-7	2	Nut-Cap
40	56-6591	2	Wheel Bolt (only on: 71226)
41	701756	2	Wheel-Gage (only on: 71226)
42	88-5740-03	1	RH Whl Deck Brkt (only on: 71226)
43	3296-39	2	Nut-Lock Ni (only on: 71226)
44	322-3	6	Screw-HH (only on: 71226)
45	3296-29	6	Nut-Lock (only on: 71226)

Ref. No.	Part No.	Qty.	Description
46	93-3896-03	1	Brkt,LH Deckwheel (only on: 71226)

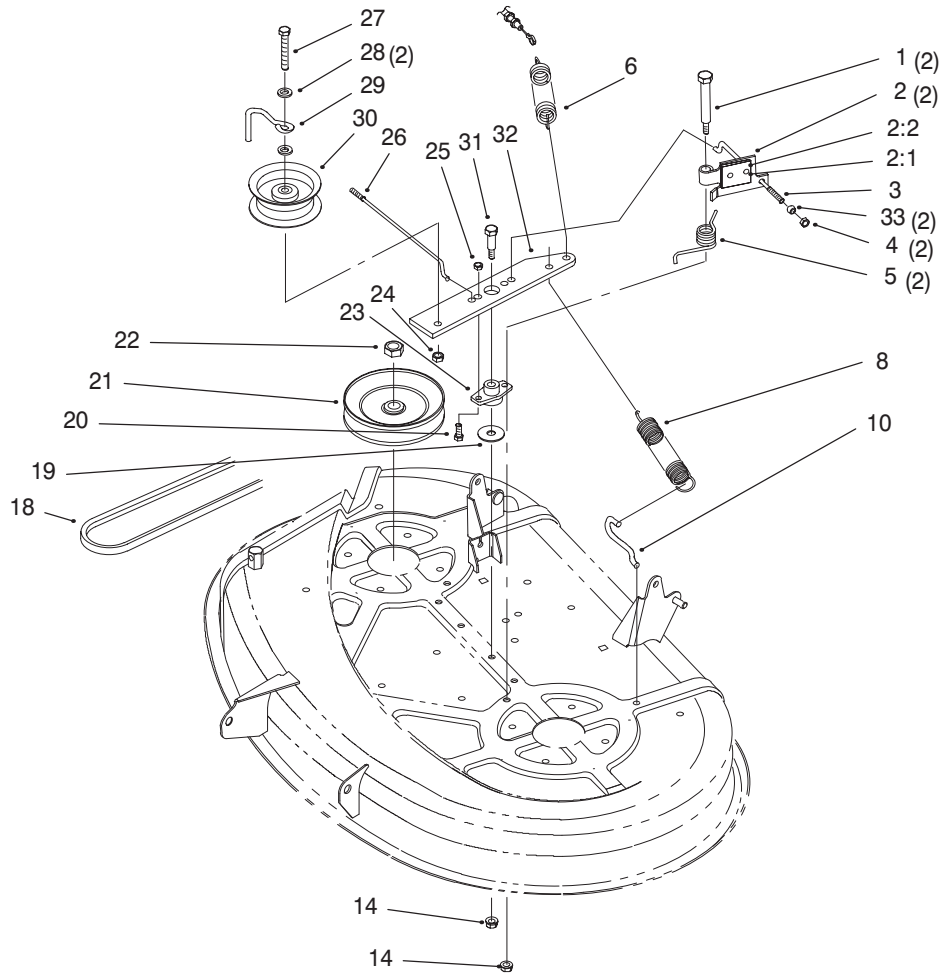 


Sheet No.:17

Height of Cut Components Assembly

Ref. No.	Part No.	Qty.	Description
1	88-4590	2	Bolt-Shoulder
2	88-6100	2	Brake ASM
2:1	3290-282	2	Rivet-Stl Pop
2:2	56-9830	1	Pad-Brake
3	88-5550	1	LH Deck Brake Rod
4	3296-42	2	Nut-Lock
5	88-5910	2	Torsion Spring
6	88-6130	1	Deck Engage Spring
8	92-8934	1	Spring - Extension
10	88-5970	1	Hook Return Spring
14	3296-58	3	Nut-Lock Ni
18	88-6250	1	V - Belt
19	3256-68	1	Washer-Flat
20	322-5	2	Screw-HH
21	88-5330	2	Pulley Deck 38"
22	3219-6	2	Nut-Hex
23	88-4980	1	Bushing Idler Arm
24	3296-39	1	Nut-Lock Ni
25	3296-29	2	Nut-Lock
26	88-5540	1	RH Deck Brake Rod
27	323-12	1	Screw-HH
28	3256-24	2	Washer-Flat
29	88-5070	1	Idler Belt Guide
30	88-5630	1	Flat Idler Pulley
31	7-0030	1	Bolt-Shoulder

Ref. No.	Part No.	Qty.	Description
32	88-4870-03	1	Arm Idler Deck
33	67-0710	2	Ball-Swivel Stop

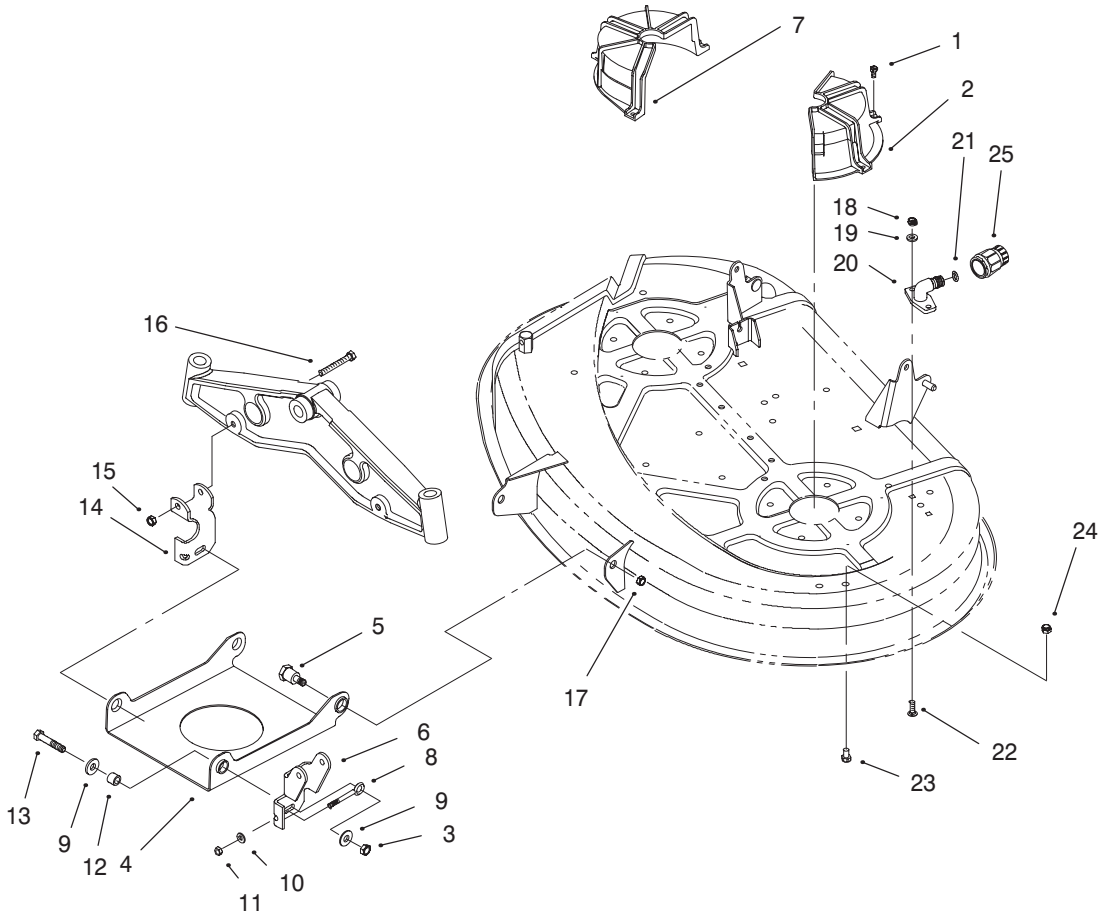 


Sheet No.:18

Height of Cut Components Assembly

Ref. No.	Part No.	Qty.	Description
1	32104-76	5	Screw-Acorn Slot
2	88-4030	1	LH Deck Belt Guide
3	3296-39	2	Nut-Lock Ni
4	93-3881-03	1	Frt Deck Susp Pan
5	94-5823	2	Bolt - Shoulder
6	94-1971-03	1	Brkt - LH Deck Susp
7	88-4020	1	RH Deck Belt Guide
8	61-9980	2	Screw-Adjusting
9	80-6990	4	Washer-Hardened
10	3256-22	2	Washer-Flat
11	3296-42	2	Nut-Lock
12	93-9847	2	Spacer
13	323-9	2	Screw-HH
14	94-1970-03	1	Brkt-RH Deck Susp
15	3296-29	2	Nut-Lock
16	322-12	2	Screw-HH
17	3296-23	2	Nut-Lock Ni
18	3296-16	2	Nut-Lock
19	3256-1	2	Washer-Flat
20	95-2747	1	Fitting-Washout
21	46-6290	1	O-Ring
22	3229-1	2	Screw-CARR
23	322-1	2	Screw-HH (only on: 71223)
24	3296-29	2	Nut-Lock (only on: 71223)

Ref. No.	Part No.	Qty.	Description
25	95-3270	1	Connector-Hose (only on: 71223)

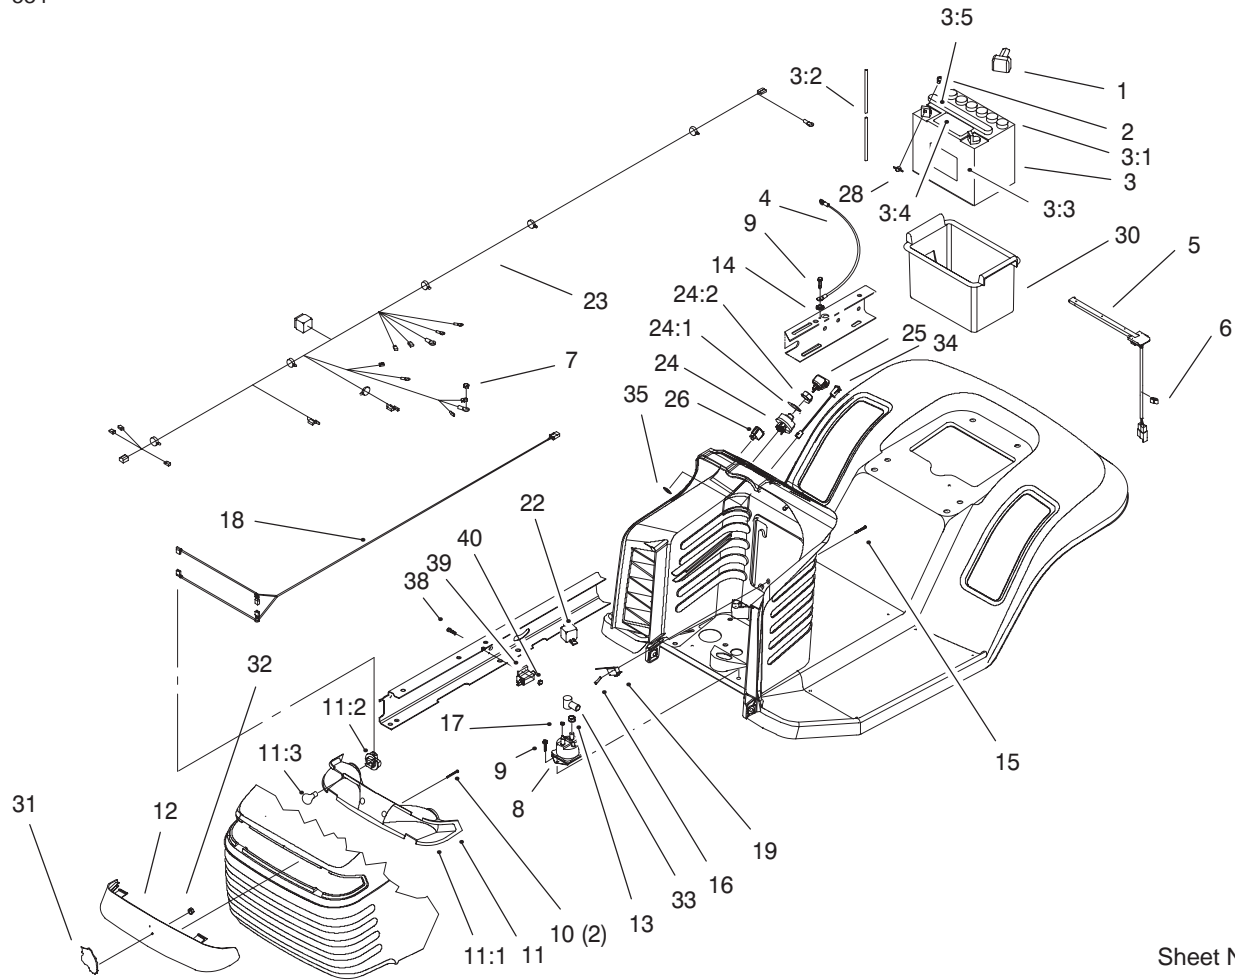 


Sheet No.:20

Electrical Components Assembly

Ref. No.	Part No.	Qty.	Description
1	28-8080	1	Boot-Terminal
2	321-4	2	Screw-HH
3	80-2600	1	Battery
3:1	218-560	6	Cap-Battery
3:2	56-2540	1	Tube-Batt
			Drain/80-2600
3:3	93-6668	1	Decal - Battery
3:4	93-7276	1	Decal - Danger
3:5	93-9354	1	Decal - Danger
4	44-8110	1	Wire ASM
5	38-1420	1	Switch-Seat
6	702366	1	Clip-Wire Retainer
7	32149-2	1	Nut-Keps
8	28-4210	1	Solenoid
9	9266714	3	Screw-HWH
10	32144-32	2	Screw
11	88-3970	1	Reflector & Lamp ASM
11:1	111686	2	Socket-Light
11:2	7228	2	Bulb -No. 1156
11:3	93-8741	1	Reflector
12	88-3960	1	Lens-Headlight
13	32149-1	2	Nut-Keps
14	3255-7	2	Washer-Lock/Ext
15	93-0539	2	Screw-HH
16	3290-354	1	Nut-Speed
17	32149-8	2	Keps Nut

Ref. No.	Part No.	Qty.	Description
18	99-1935	1	Harness-Headlight
19	88-9932	1	Switch-Micro
22	98-7249	1	Relay-Spdt
23	99-6841	1	Harness-Wire, Gear
24	88-9830	1	Switch-Ignition
24:1	3254-5	1	Washer-Lock/Int
24:2	218-461	1	Nut-HH
25	63-8360	1	Key-Ignition w/Shield
26	92-8875	1	Switch - Rocker
28	32103-22	2	Nut-Wing
30	88-4040	1	Box-Battery
31	80-2240	1	Emblem-Grille
			Whlhorse
32	3290-299	1	Clip
33	94-5362	1	Boot - Terminal
			Insulator
34	95-7652	1	Light - Indicator
35	99-6059	1	Clip-Retainer
38	3274-14	2	Screw-HSH
39	65-7410	1	Switch - Single Pole
40	3296-2	2	Nut-Lock


 
PEERLESS TRANSAXLE MODEL MST 205-509

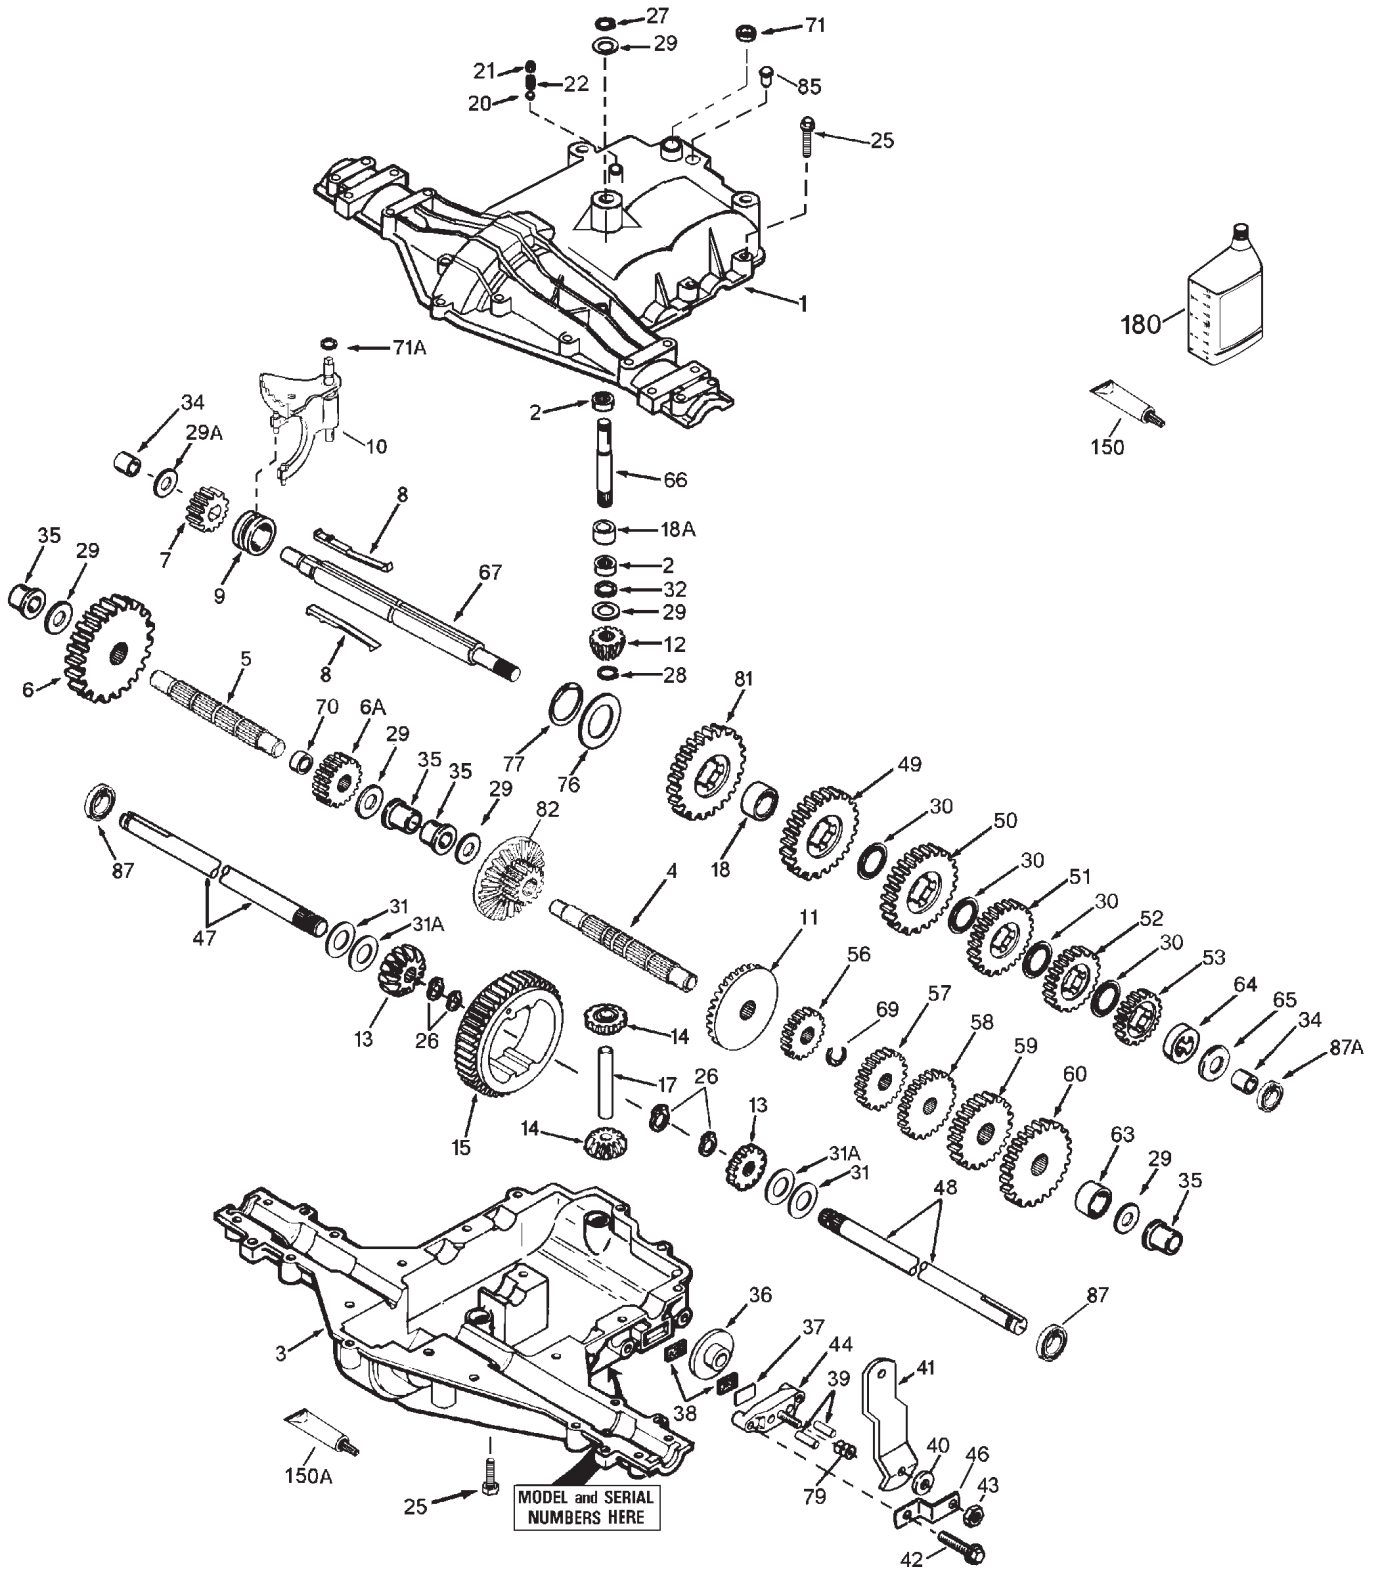

PEERLESS TRANSAXLE MODEL MST 205-509

Ref. No.	Part No.	Description	No. Used
1	772137	Transaxle Cover	1
2	780086A	Needle Bearing	2
3	770123	Transaxle Case	1
4	776395	Countershaft	1
5	776397	Output Shaft	1
6	778331	Spur Gear (38 teeth)	1
6A	778332	Spur Gear (15 teeth-steel)	1
7	778330	Spur Gear (11 teeth-steel)	1
8	792136A	Shift Key	2
9	784352	Shift Collar	1
10	784378	Shift Rod & Fork	1
11	778334	Bevel Gear (30 teeth)	1
12	778309	Input Bevel Pinion (13 teeth)	1
13	778327	Bevel Gear (16 teeth-steel)	2
14	778327	Bevel Gear (16 teeth-steel) (Incl. 14)	2
15	778312A	Ring Gear (43 teeth)	1
17	786139	Drive Pin	1
18	786102	Spacer	1
18A	786175	Spacer	1
20	792077	Ball 5/16" dia	1
21	792078	Set Screw	1
22	792079	Spring	1
25	792073	Screw	18
26	792125	Retaining Ring (pkg of 2)	4
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	6
29A	780160	Washer	1
30	780108	Washer	4
31	780001	Washer (.056 wide) (USE AS NEEDED)	2
31A	780195	Flat Washer (.062 wide)	2
32	788083	Oil Seal	1
34	780194	Bushing	2
35	780193	Flanged Bushing	4
36	790075	Brake Disk	1
37	790007	Brake Pad Plate	1
38	799021	Brake Pad (pkg of 2)	2

Ref. No.	Part No.	Description	No. Used
39	786026	Dowel Pin	2
40	792076A	Flat Washer	1
41	790080	Brake Lever	1
42	792073	Screw	2
43	792075	Locknut	1
44	790025	Brake Pad Holder	1
46	786086	Brake Lever Bracket	1
47	774690	Axle (11-15/16" long)	1
48	774691	Axle (16-1/2" long)	1
49	778356	Spur Gear (29 teeth-steel)	1
50	778354	Spur Gear (23 teeth-steel)	1
51	778344	Spur Gear (20 teeth)	1
52	778350	Spur Gear (16 teeth-steel)	1
53	778346	Spur Gear (15 teeth-steel)	1
56	778355	Spur Gear (11 teeth-steel)	1
57	778353	Spur Gear (17 teeth-steel)	1
58	778343	Spur Gear (20 teeth)	1
59	778349	Spur Gear (24 teeth-steel)	1
60	778345	Spur Gear (25 teeth)	1
63	786071	Countershaft Spacer	1
64	786072	Brake Shaft Spacer	1
65	780189	Washer	1
66	776394	Input Shaft	1
67	776396	Shifter & Brake Shaft	1
69	792170	Retaining Ring	1
70	786172	Spacer	1
71	788069	Square Cut Ring	1
71A	788092	"O" Ring	1
76	780090	Washer	1
77	788078A	Inverted Retaining Ring	1
79	792144	Spring	1
81	778338	Spur Gear (27 teeth)	1
82	778333	Bevel & Spur Gear (30 & 13 teeth)	1
85	792154	Pipe Plug	1
87	788088	Oil Seal	2
87A	788089	Oil Seal	1
150	788093	Liquid Gasket RTV Silicone	1
150A	788094	Liquid Gasket Loctite #242	1
180	730229A	Gear Oil 80W90	1

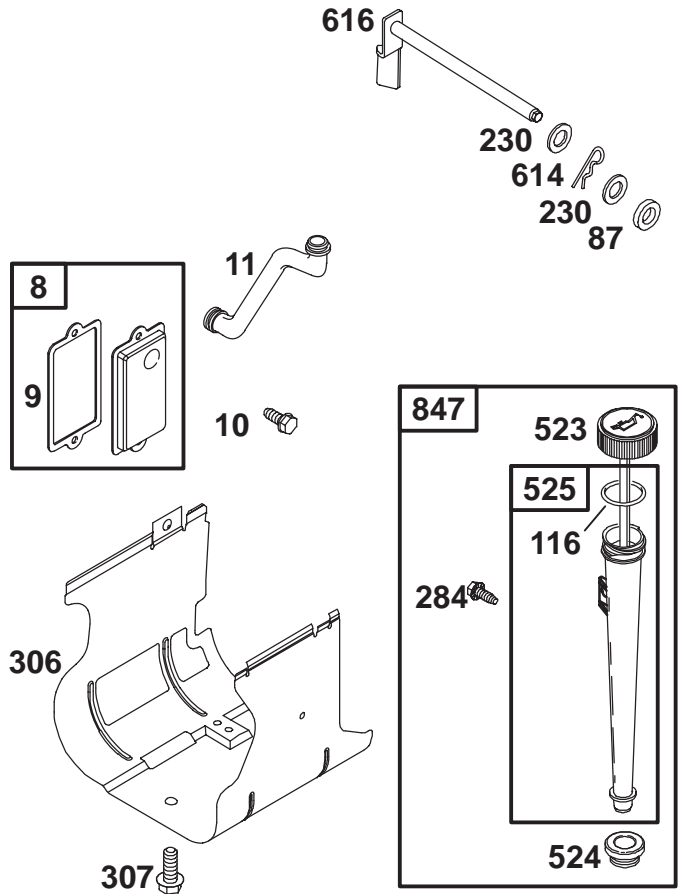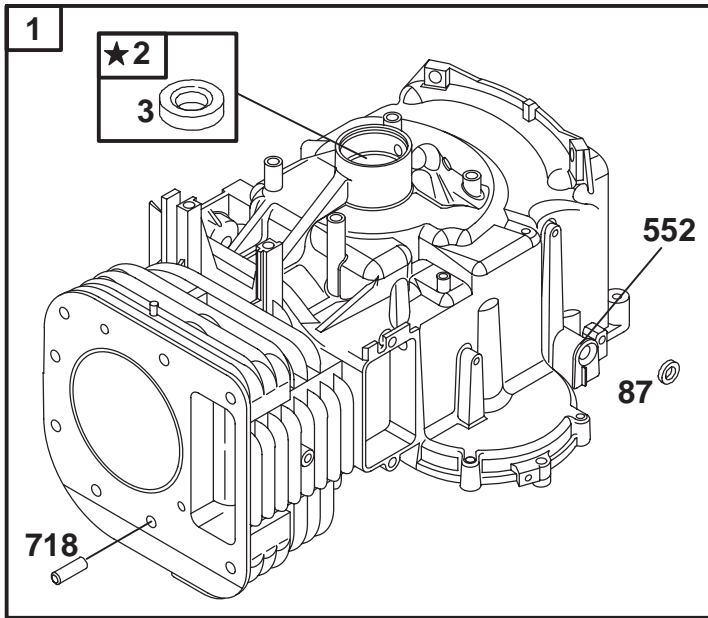  

1058 OWNER'S MANUAL

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28Q777-0690-E1

Ref. No.	Part No.	Description	No. Used
1	496412	Cylinder Assembly	1
2	399265	Bearing-Cylinder	1
★3	391086	Seal-Oil	1
8	495735	Breather Assembly	1
★9	27803	Gasket-Valve Cover	1
10	94621	Screw-Sem	1
11	281246	Tube-Breather	1
★87	491323	Seal-Governor	1
★116	270920	Seal-Oil Fill Cap	1
230	94927	Washer-Governor Lever	1
284	94903	Screw-Hex. Head	1
306	225020	Shield-Cylinder	1

Ref. No.	Part No.	Description	No. Used
307	94930	Screw-Self Tap	1
523	495230	Cap-Oil Fill	1
★524	281370	Seal-Fill Tube	1
525	496113	Tube-Oil Fill	1
552	491986	Bushing-Gov. Crank	1
		Note: Includes Seal, Ref. No. 87	1
614	93306	Pin-Cotter	1
616	495157	Crank-Governor	1
718	230192	Pin-Dowel	1
847	496415	Fill Group-Oil	1
1058	273683	Owner's Manual	1

★ Included in Gasket Set-Part No. 495993.
 Δ Included in Valve Overhaul Kit-Part No. 495992.

 ● Included in Carburetor Kit-Part No. 499233.
 ◆ Included in Carburetor Gasket Set-Part No. 690192.

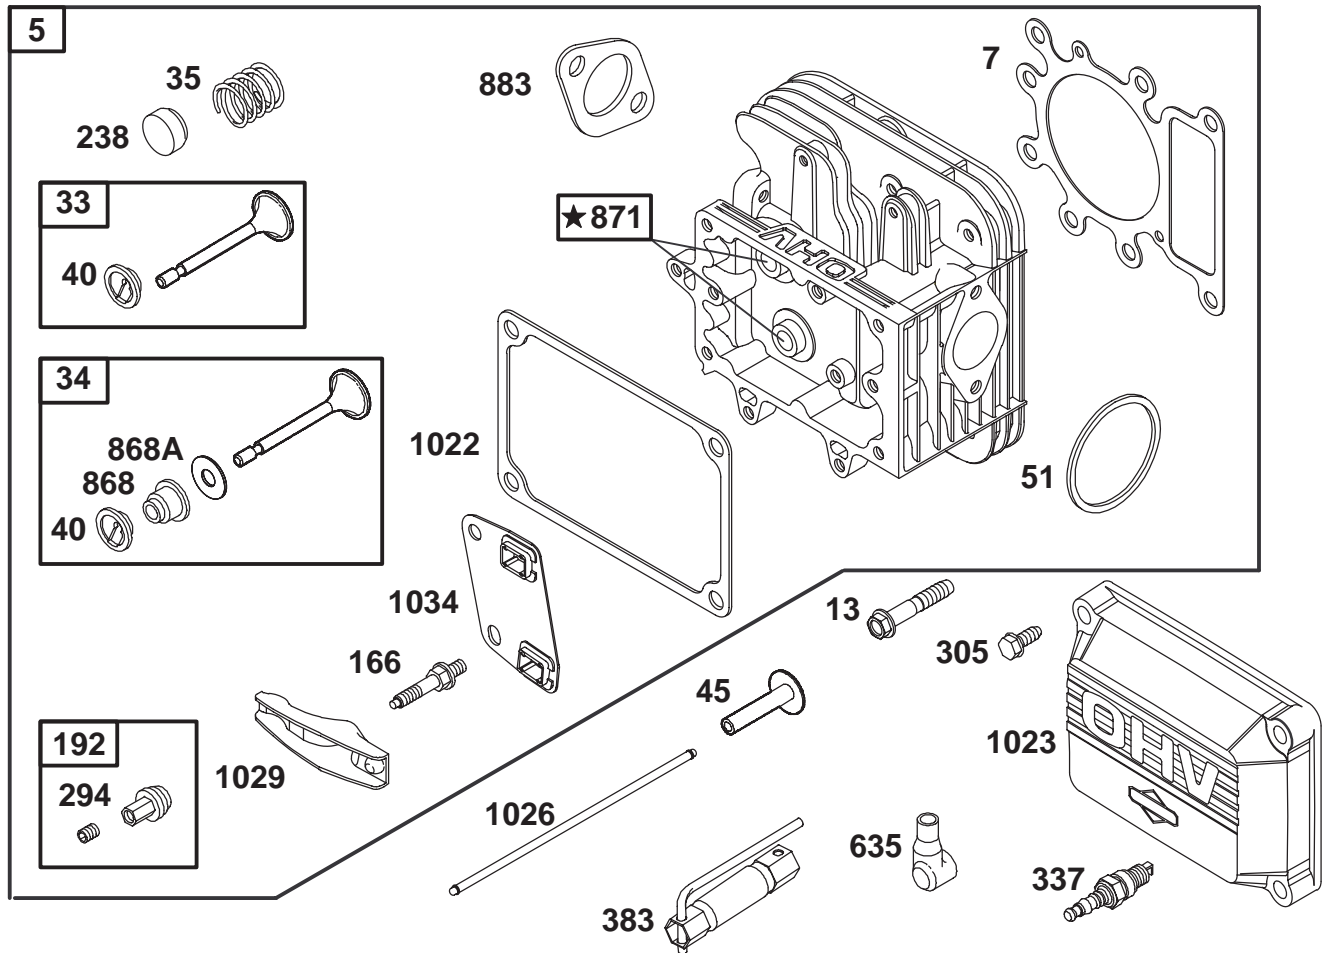


ENGINE BRIGGS & STRATTON MODEL 28Q777-0690-E1

Ref. No.	Part No.	Description	No. Used
5	691165	Head-Cylinder	1
Δ★7	273280	Gasket-Cylinder Head	1
13	94728	Screw-Cylinder Head	1
33	495856	Valve-Exhaust	1
34	495857	Valve-Intake	1
35	262811	Spring-Valve	1
40	224641	Retainer-Valve	1
45	690564	Tappet-Valve	1
51	692138	Gasket-Intake	1
166	94555	Stud-Rocker Arm	1
192	492160	Adjuster-Valve	1
238	262836	Cap-Valve	1
294	810104	Screw-Set	1
305	94682	Screw-Hex. Head	1
337	491055	Plug-Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench-Spark Plug	1
635	280872	Elbow-Spark Plug	1
Δ★868	499236	Seal-Valve	1
868A	272610	Seal-Valve	1
871	262835	Bushing-Guide (Intake and Exhaust)	1
Δ★883	272293	Gasket-Exhaust	1
Δ★1022	272475	Gasket-Rocker Cover	1
1023	214314	Cover-Rocker	1
1026	494432	Rod-Push (Intake) Note: 495136 Rod-Push (Exhaust)	1
1029	224554	Arm-Rocker	1
1034	495248	Guide-Push Rod	1

★ Included in Gasket Set-Part No. 495993.
 Δ Included in Valve Overhaul Kit-Part No. 495992.

 ● Included in Carburetor Kit-Part No. 499233.
 ◆ Included in Carburetor Gasket Set-Part No. 690192.

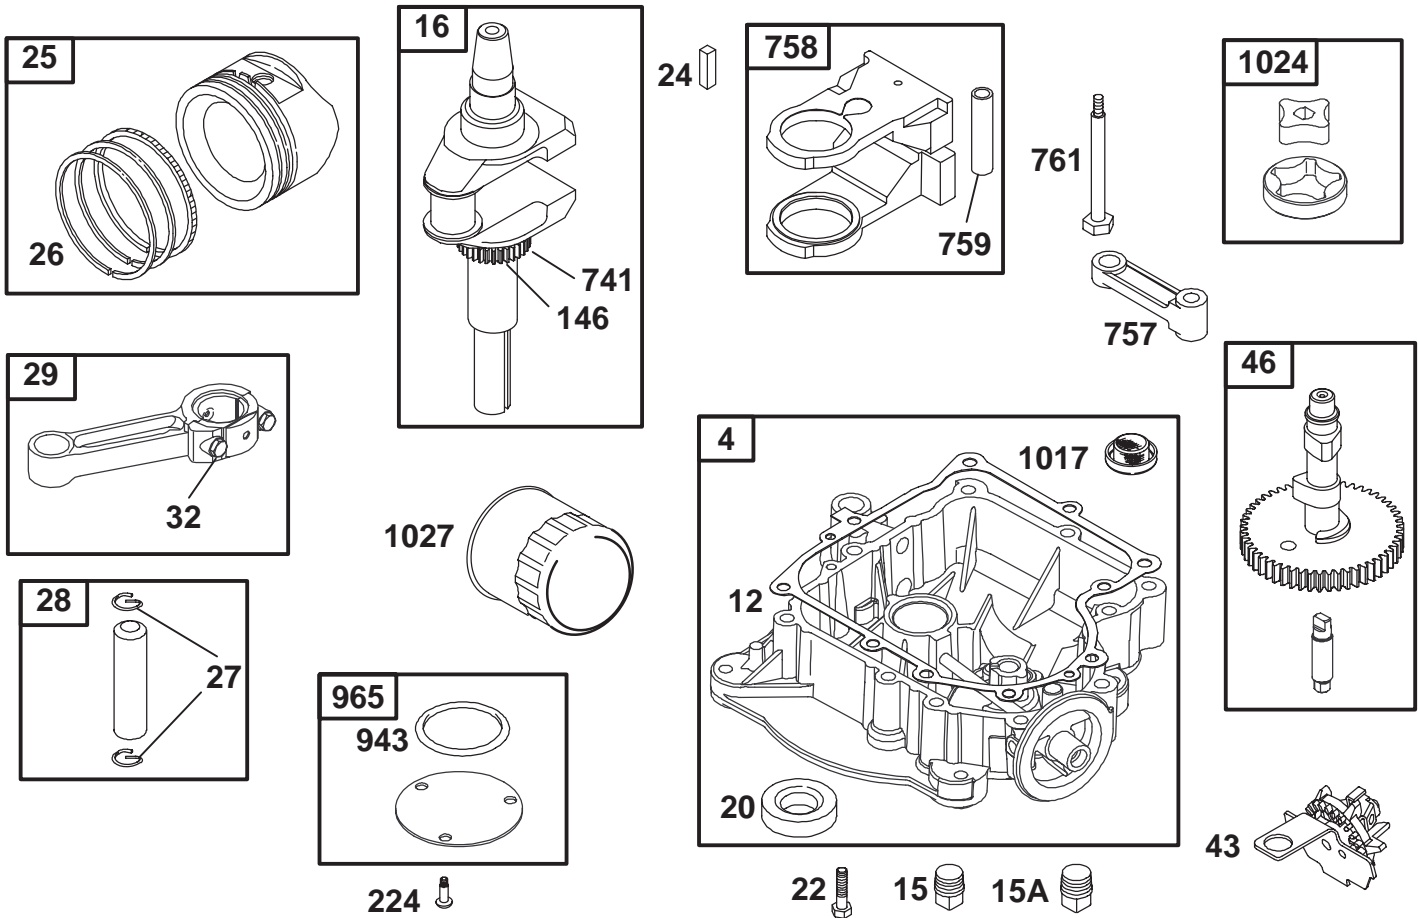


ENGINE BRIGGS & STRATTON MODEL 28Q777-0690-E1

Ref. No.	Part No.	Description	No. Used
4	693582	Base-Engine	1
★12	271916	Gasket-Crankcase (.015" Thick, Std.)	1
★	271997	Gasket-Crankcase (.005" Thick)	1
★	271996	Gasket-Crankcase (.009" Thick)	1
15	94239	Plug-Oil Drain	1
15A	91488	Plug-Oil Pressure Switch	1
16	690136	Crankshaft	1
★20	291675	Seal-Oil	1
22	692125	Screw-Sem	1
24	222698	Key-Flywheel	1
25	499284	Piston Assembly (Standard)	1
	499288	Piston Assy. (.010" O.S.)	1
	499292	Piston Assy. (.020" O.S.)	1
	499296	Piston Assy. (.030" O.S.)	1
26	495854	Ring Set (Standard)	1
	495852	Ring Set (.010" O.S.)	1
	495851	Ring Set (.020" O.S.)	1

Ref. No.	Part No.	Description	No. Used
	495855	Ring Set (.030" O.S.)	1
27	263129	Lock-Piston Pin	1
28	498319	Pin-Piston (Standard)	1
	498320	Pin-Piston (.005" O.S.)	1
29	692419	Rod-Connecting (Standard)	1
32	692852	Screw-Conn. Rod	1
43	490815	Governor/Oil Slinger	1
46	693450	Camshaft	1
146	94196	Key-Timing Gear	1
224	691033	Screw-Torx® Hex.	1
741	262932	Gear-Timing	1
757	213998	Link-Counterweight	1
758	499994	Counterweight Assy.	1
759	230787	Pin-Counterweight	1
761	94593	Screw-Counterweight	1
943	280801	Seal-O-Ring	1
965	499613	Cover-Pump	1
1017	491722	Screen-Oil Pump	1
1024	499054	Pump-Oil	1
1027	492932	Filter-Oil	1

★ Included in Gasket Set-Part No. 495993.
 Δ Included in Valve Overhaul Kit-Part No. 495992.

 ● Included in Carburetor Kit-Part No. 499233.
 ◆ Included in Carburetor Gasket Set-Part No. 690192.

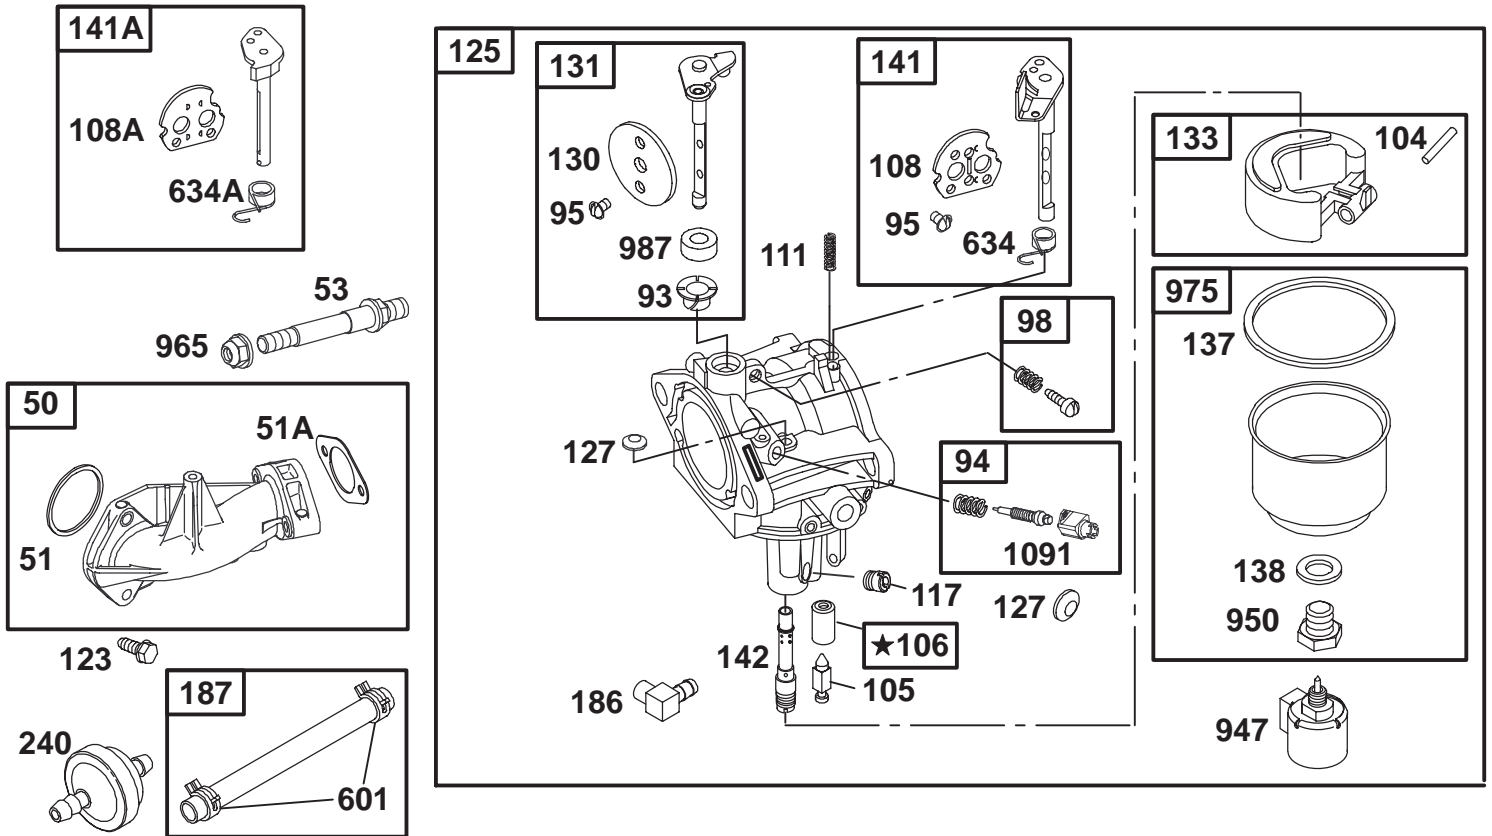

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL. Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28Q777-0690-E1

Ref. No.	Part No.	Description	No. Used
50	690193	Manifold-Intake	1
51	692138	Gasket-Carburetor Manifold	1
●51A	273650	Gasket-Carburetor	1
53	690227	Stud-Carb. Mtg.	1
●93	281346	Bushing-Throttle Shaft	1
94	498030	Valve-Idle Adjust	1
●95	94098	Screw-Round Head	1
98	495800	Screw-Idle Adjust	1
●104	231789	Pin-Float Hinge	1
●105	231855	Valve-Inlet Needle	1
●106	231854	Seat-Inlet	1
108	224558	Valve-Choke (Manual)	1
108A	224540	Valve-Choke (Remote)	1
111	262715	Spring-Friction	1
●117	232118	Jet-Main (Standard)	1
	232119	Jet-Main (High Altitude)	1
123	95160	Screw-Elbow Mtg.	1
125	499153	Carburetor	1
●127		Plug-Welch (Sold in Kit Only)	1
130	224539	Valve-Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft-Throttle	1
133	494381	Float-Carburetor	1
●◆137	281165	Gasket-Float Bowl	1
●◆138	281164	Washer-Float Bowl	1
141	495097	Shaft-Choke (Manual)	1
141A	495931	Shaft-Choke (Remote)	1
●142	232117	Nozzle-Carburetor	1
186	493496	Elbow-Fuel Pipe	1
187	298049	Line-Fuel (Cut to Length)	1
240	394358	Filter-Fuel	1
601	93053	Clamp-Hose	1
●634	494453	Seal-Spring Assembly	1
●634A	494455	Seal-Spring Assembly	1
947	497672	Solenoid	1
950	94642	Screw-Fuel Bowl	1
965	94010	Nut-Hex.	1
975	495933	Bowl-Float	1
●987	281166	Seal-Throttle Shaft	1
1091	281364	Cap-Limiter	1

★ Included in Gasket Set-Part No. 495993.
 Δ Included in Valve Overhaul Kit-Part No. 495992.

 ● Included in Carburetor Kit-Part No. 499116.
 ◆ Included in Carburetor Gasket Set-Part No. 690192.

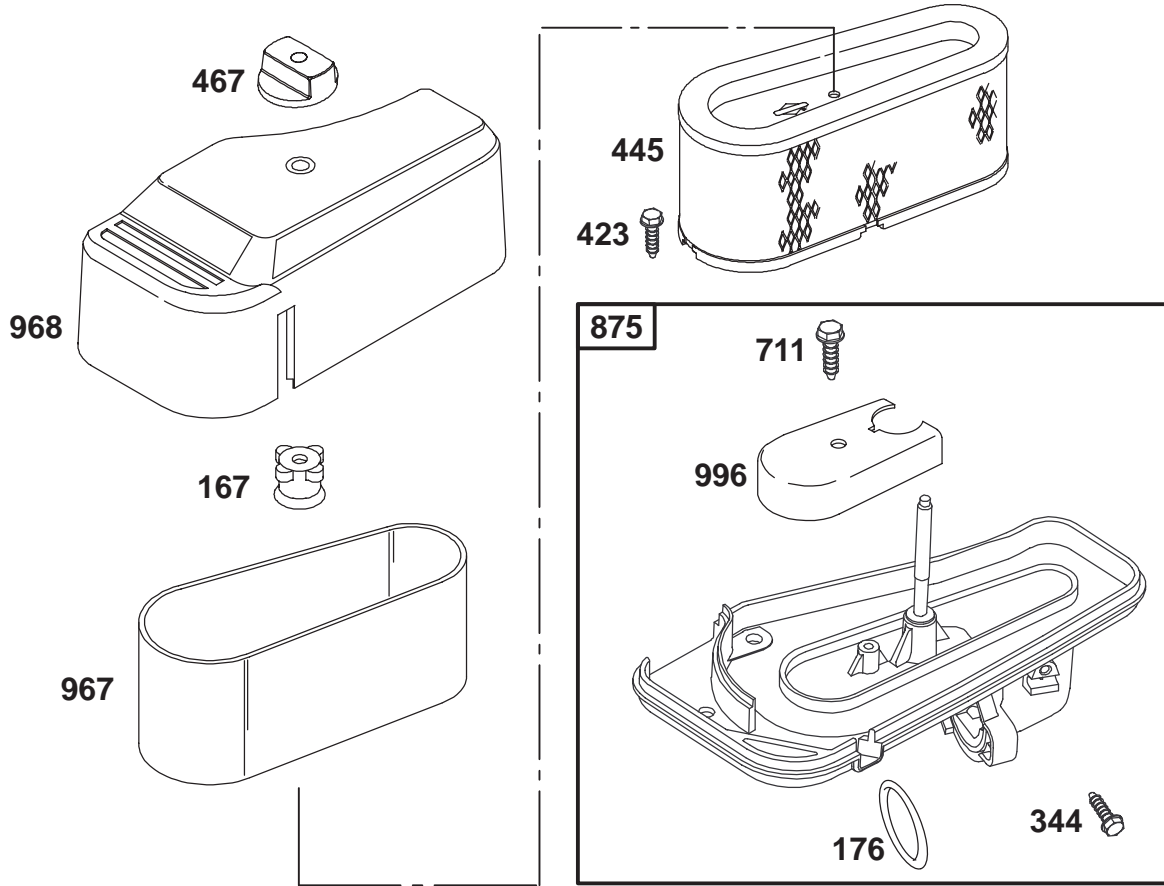

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28Q777-0690-E1

Ref. No.	Part No.	Description	No. Used
167	281051	Seal—Air Cleaner Stud	1
★176	281106	Gasket—Air Cleaner	1
344	693675	Screw—Torx® Hex.	1
423	692129	Screw—Torx® Hex.	1
445	496894	Filter—Air	1
467	493903	Knob—Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
711	94704	Screw—Hex. Hd.	1
875	693686	Body—Air Cleaner	1
967	272403	Filter—Air	1
968	281365	Cover—Air Cleaner	1
996	690678	Shield—Carburetor	1

★ Included in Gasket Set—Part No. 495993.
 Δ Included in Valve Overhaul Kit—Part No. 495992.

 ● Included in Carburetor Kit—Part No. 499233.
 ◆ Included in Carburetor Gasket Set—Part No. 690192.

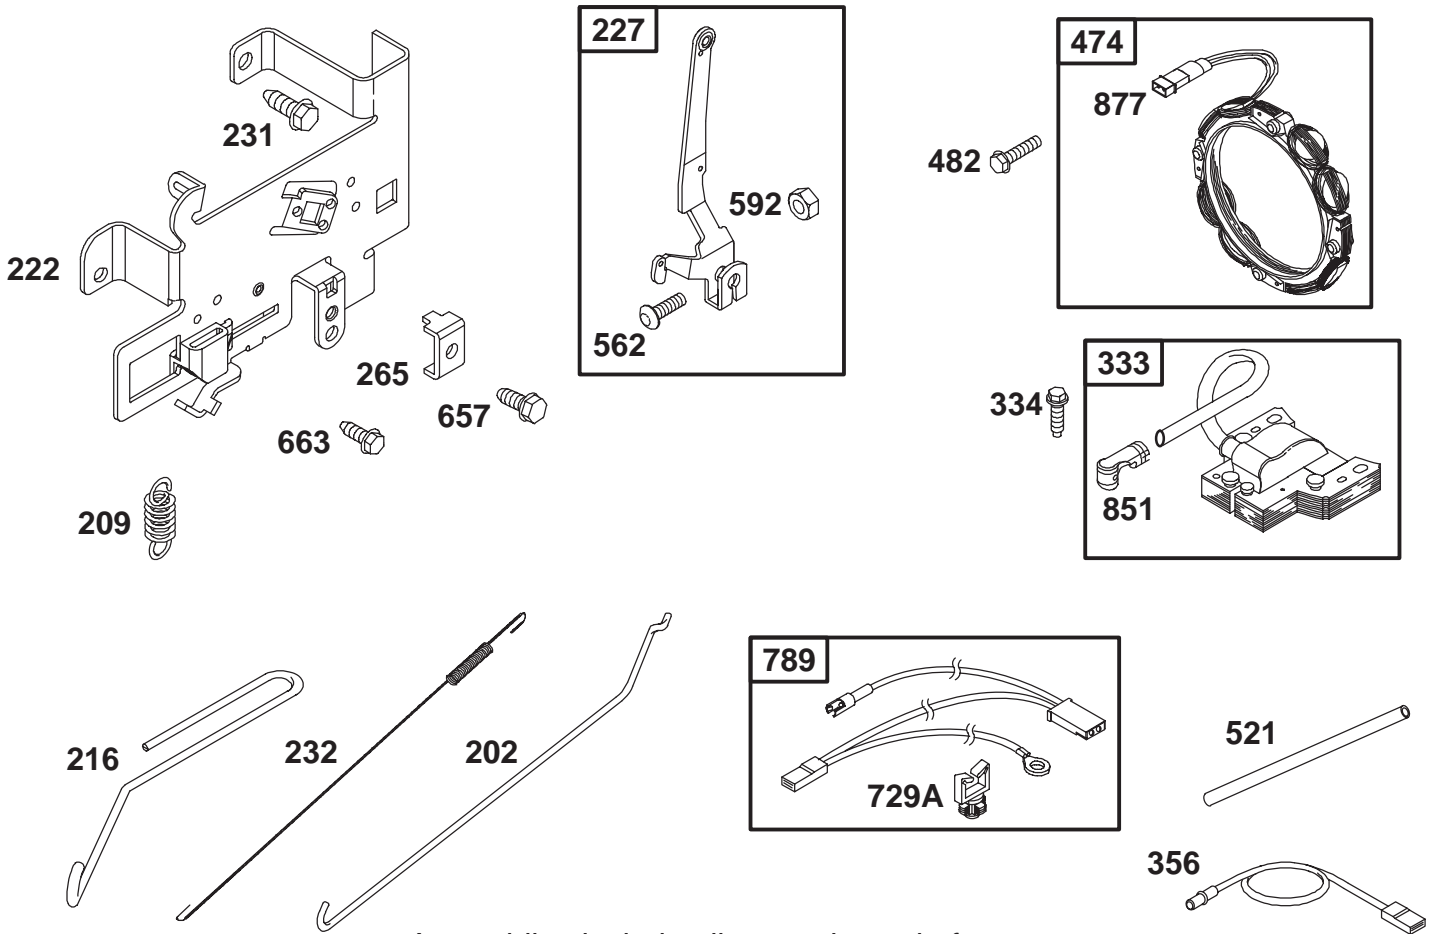

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28Q777-0690-E1

Ref. No.	Part No.	Description	No. Used
202	262767	Link-Governor	1
209	692208	Spring-Governor	1
216	262766	Link-Choke	1
222	495611	Plate-Gov. Control	1
227	493935	Lever Assy.-Governor	1
231	94929	Screw	1
232	262785	Spring-Governor Link	1
265	221535	Clamp-Casing	1
333	495859	Armature-Magneto	1
334	94731	Screw-Sem	1
356	494705	Wire-Ground	1
474	393474	Alternator	1

Ref. No.	Part No.	Description	No. Used
482	93621	Screw-Sem	1
521	272699	Shield-Cable	1
562	94907	Bolt-Governor Lever	1
592	231978	Nut-Hex.	1
657	94906	Screw-Sem	1
663	94929	Screw-Hex. Hd.	1
729A	281390	Clip-Lead Wire	1
789	692037	Harness-Wiring	1
851	224110	Terminal-Ignition Cable	1
877	393456	Wire-Alternator	1

★ Included in Gasket Set-Part No. 495993.
 Δ Included in Valve Overhaul Kit-Part No. 495992.

 ● Included in Carburetor Kit-Part No. 499233.
 ◆ Included in Carburetor Gasket Set-Part No. 690192.

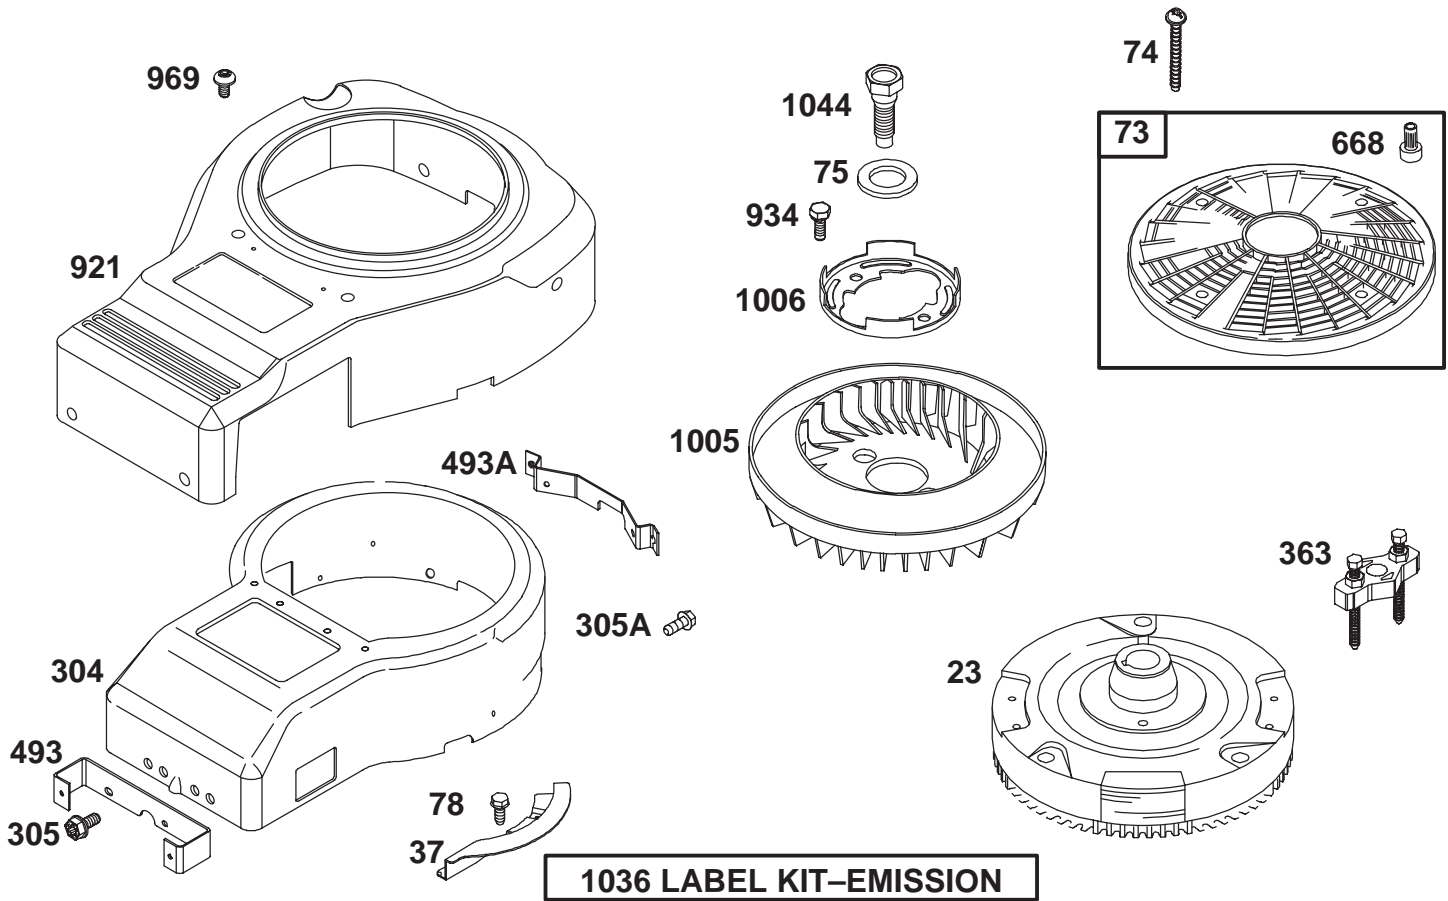

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28Q777-0690-E1

Ref. No.	Part No.	Description	No. Used
23	693557	Flywheel	1
37	224502	Guard-Flywheel	1
73	494439	Screen-Rotating	1
74	94821	Screw-Sem	1
75	224061	Washer	1
78	94896	Screw-Hex. Head	1
304	225017	Housing-Blower	1
305	690960	Screw-Hex. Head	1
305A	692127	Screw-Torx® Hex.	1
363	19203	Puller-Flywheel	1
493	224968	Bracket-Mounting	1

Ref. No.	Part No.	Description	No. Used
493A	224969	Bracket-Mounting	1
668	280848	Spacer	1
921	225016	Cover-Blower Housing	1
934	94627	Screw-Sem	1
969	94822	Screw-Torx®	1
1005	281400	Fan-Flywheel	1
1006	224413	Retainer-Fan	1
1036	499364	Label Kit-Emission	1
1044	94673	Screw (Flywheel)	1

★ Included in Gasket Set-Part No. 495993.
 △ Included in Valve Overhaul Kit-Part No. 495992.

 ● Included in Carburetor Kit-Part No. 499233.
 ◆ Included in Carburetor Gasket Set-Part No. 690192.

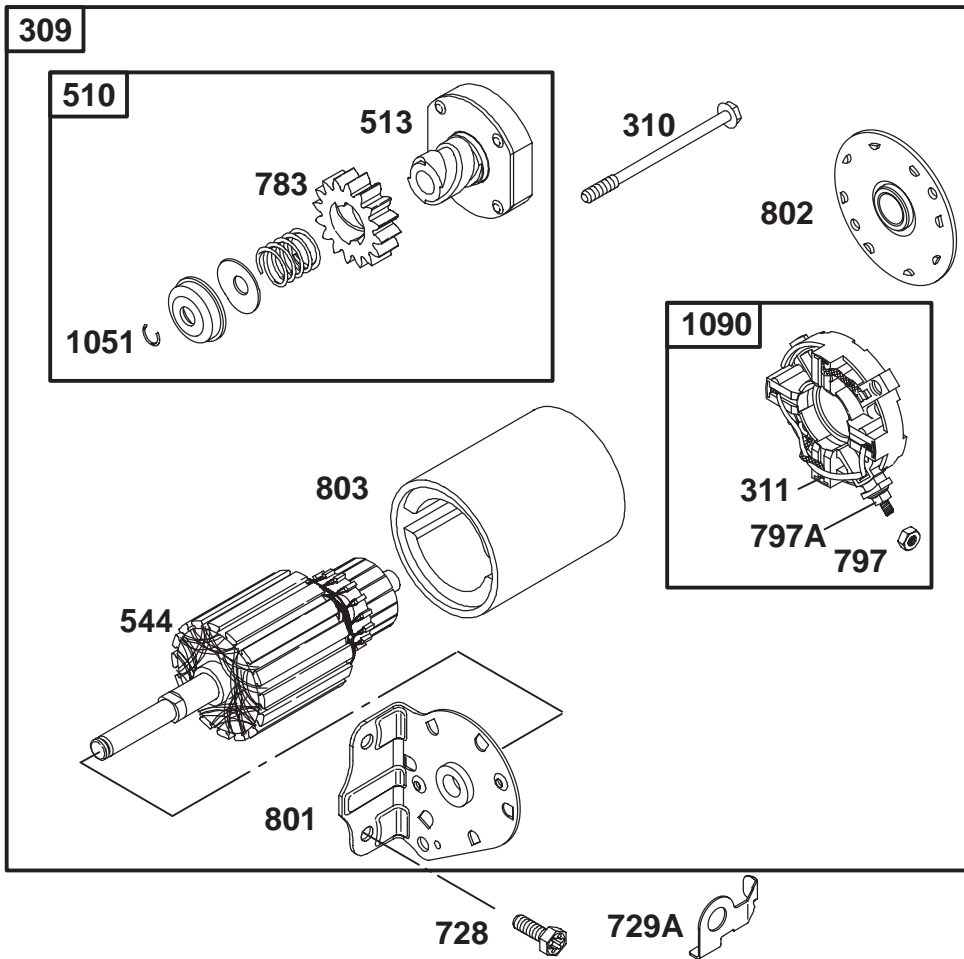





ENGINE BRIGGS & STRATTON MODEL 28Q777-0690-E1

Ref. No.	Part No.	Description	No. Used
309	693551	Motor-Starter	1
310	94003	Screw (Starter Motor)	1
311	497608	Brush Set	1
510	693699	Drive-Starter	1
513	398003	Clutch-Drive	1
544	497603	Armature-Starter	1
728	94951	Screw (Starter Motor Mounting)	1
729A	225170	Clip-Wire	1

Ref. No.	Part No.	Description	No. Used
783	693713	Starter-Pinion (Steel)	1
797	92278	Nut (Starter Terminal)	1
797A	693167	Nut (Starter Terminal)	1
801	497626	Cap-Drive	1
802	497607	Cap-End	1
803	693757	Housing-Starter	1
1051	263080	Ring-Retainer	1
1090	497605	Retainer-Brush	1

★ Included in Gasket Set-Part No. 495993.
 △ Included in Valve Overhaul Kit-Part No. 495992.

    ● Included in Carburetor Kit-Part No. 499233.
 ◆ Included in Carburetor Gasket Set-Part No. 690192.

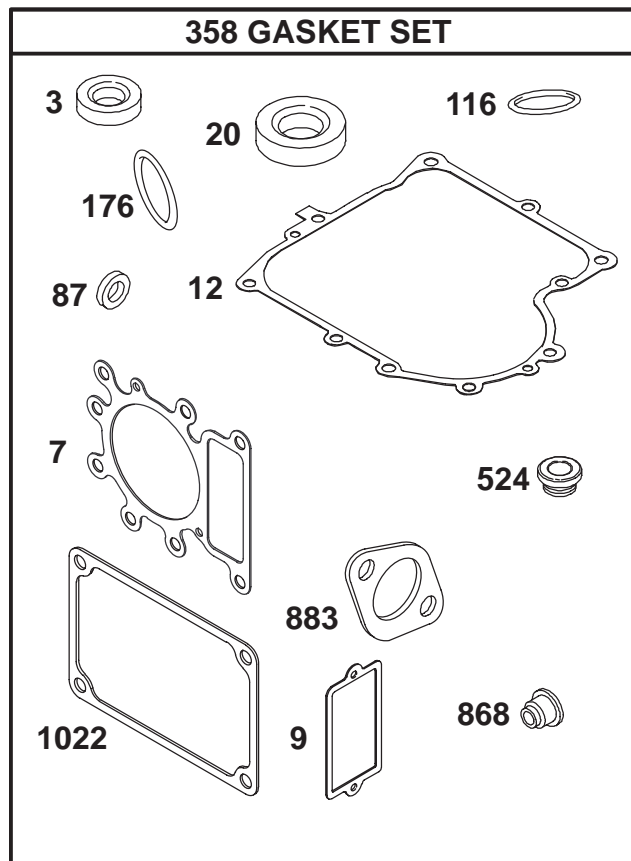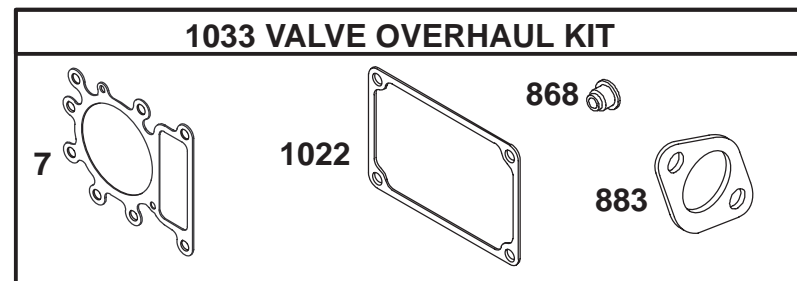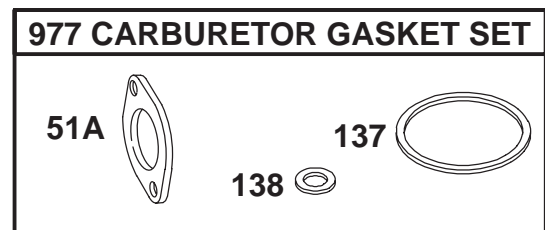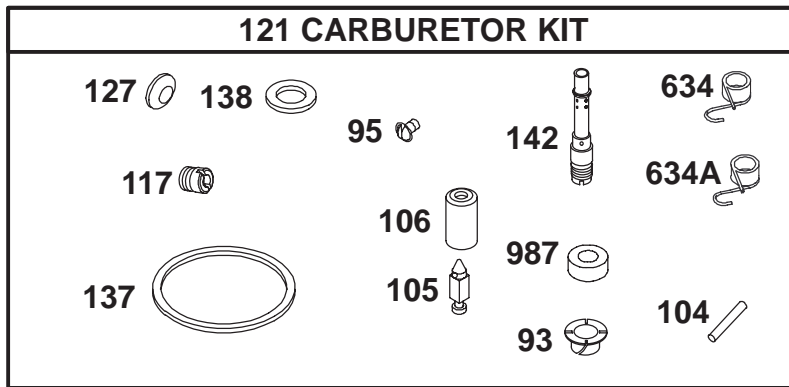

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28Q777-0690-E1

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal-Oil	1
△★7	273280	Gasket-Cylinder Head	1
★9	27803	Gasket-Valve Cover	1
★12	271916	Gasket-Crankcase (.015" Thick)	1
★	271997	Gasket-Crankcase (.005" Thick)	1
★	271996	Gasket-Crankcase (.009" Thick)	1
★20	291675	Seal-Oil	1
●51A	273650	Gasket-Carburetor	1
★87	491323	Seal-Governor	1
●93	281346	Bushing-Throttle Shaft	1
●95	94098	Screw-Throttle	1
●104	231789	Pin-Float Hinge	1
●105	231855	Valve-Inlet Needle	1
●106	231854	Seat-Inlet	1
★116	270920	Seal-O-Ring	1
●117	232118	Jet-Main	1

Ref. No.	Part No.	Description	No. Used
121	499233	Carburetor Kit	1
●127		Plug-Welch (Sold in Kit Only).	1
●◆137	281165	Gasket-Float Bowl	1
●◆138	281164	Washer-Float Bowl	1
●142	232117	Nozzle-Carburetor	1
★176	281106	Gasket-Air Cleaner	1
358	495993	Gasket Set	1
★524	281370	Seal-Fill Tube	1
●634	494453	Seal-Spring Assembly	1
●634A	494455	Seal-Spring Assembly	1
△★868	494435	Seal-Valve	1
△★883	272293	Gasket-Exhaust	1
977	690192	Carburetor Gasket Set	1
●987	281166	Seal-Throttle Shaft	1
△★1022	272475	Gasket-Rocker Cover	1
1033	495992	Kit-Valve Overhaul	1

★ Included in Gasket Set-Part No. 495993.
 △ Included in Valve Overhaul Kit-Part No. 495992.

● Included in Carburetor Kit-Part No. 499233.
 ◆ Included in Carburetor Gasket Set-Part No. 690192.

