



Count on it.

Parts Catalog

Heavy Duty Backhoe 125 RT600 Traction Unit

Model No. 25432—Serial No. 314000001 and Up

Model No. 25432E—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Backhoe Assembly	4
Backhoe Frame and Cylinder Mounting Assembly	6
Hydraulic Cylinder Assembly No. AU103336	8
Pivot Frame Assembly	10
Top Pivot Plate, Guard and Valve Assembly	12
Backhoe Control Valve No. AU87400034 Controls Section.	14
Backhoe Control Valve No. AU87400034 Inlet Section	16
Backhoe Control Valve No. AU87400034 Outlet Section.	18
Boom Assembly	20
Hydraulic Cylinder Assembly No. AU123706	22
Hydraulic Cylinder Assembly AU305352A1	24
Hydraulic Cylinder Assembly AU402216A1	26
Hydraulic Hose Assembly	28
Seat and Post Assembly	30
Seat Post Kit Assembly No. AU128531	32
Right and Left Mounting Assembly	34
Handrail and Walkway Assembly	36
Stabilizer Assembly	38
Hydraulic Cylinder Assembly No. AU123115.	40
Attachments and Accessories	42

Backhoe Assembly

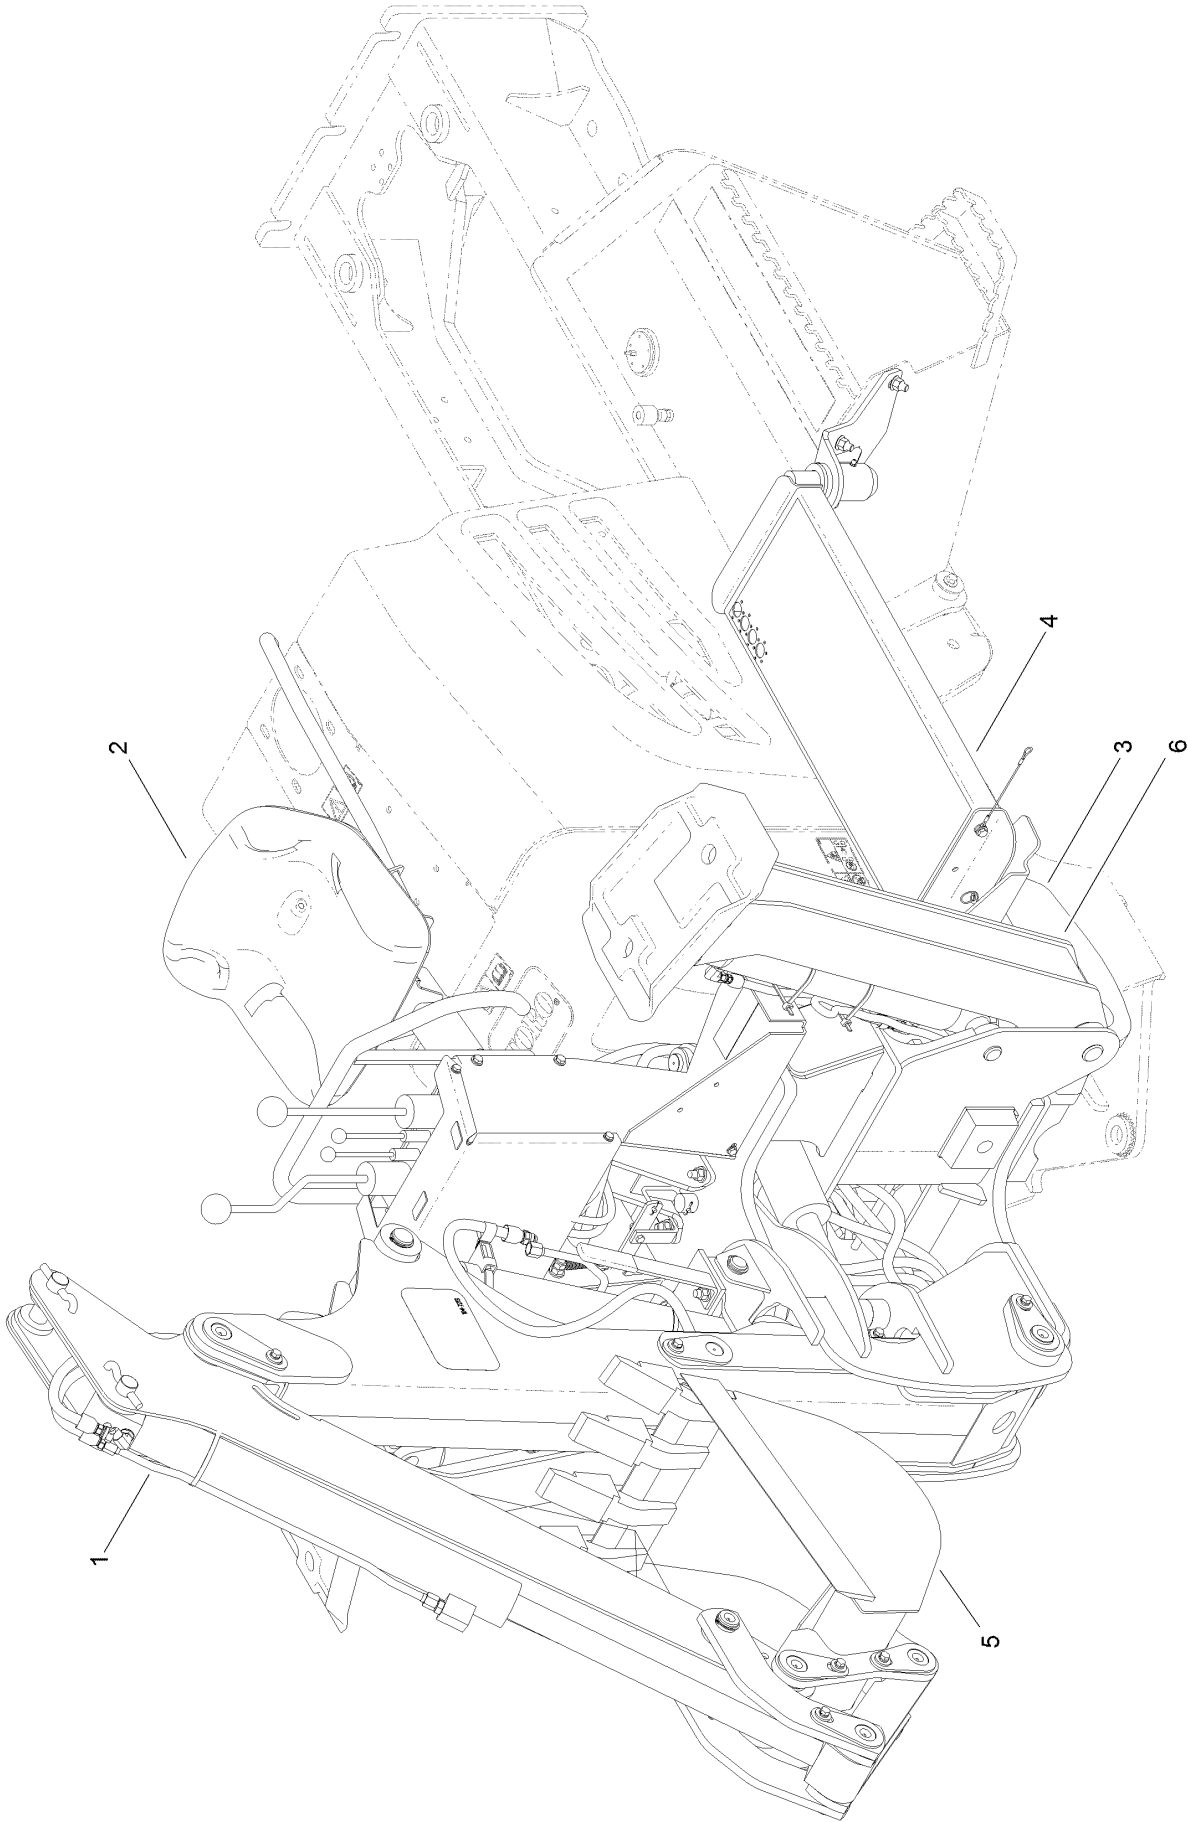


Backhoe Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Backhoe ASM ●	4		1	Walkway Kit ●
2		1	Attach-Seat/Bucket Kit ●	5	AUH674116-03	1	Bucket-Trenching, 18In
3		1	Attach Kit ●	6		1	Stabilizer-Wing Type Kit ●

● Not serviced separately


Backhoe Frame and Cylinder Mounting Assembly

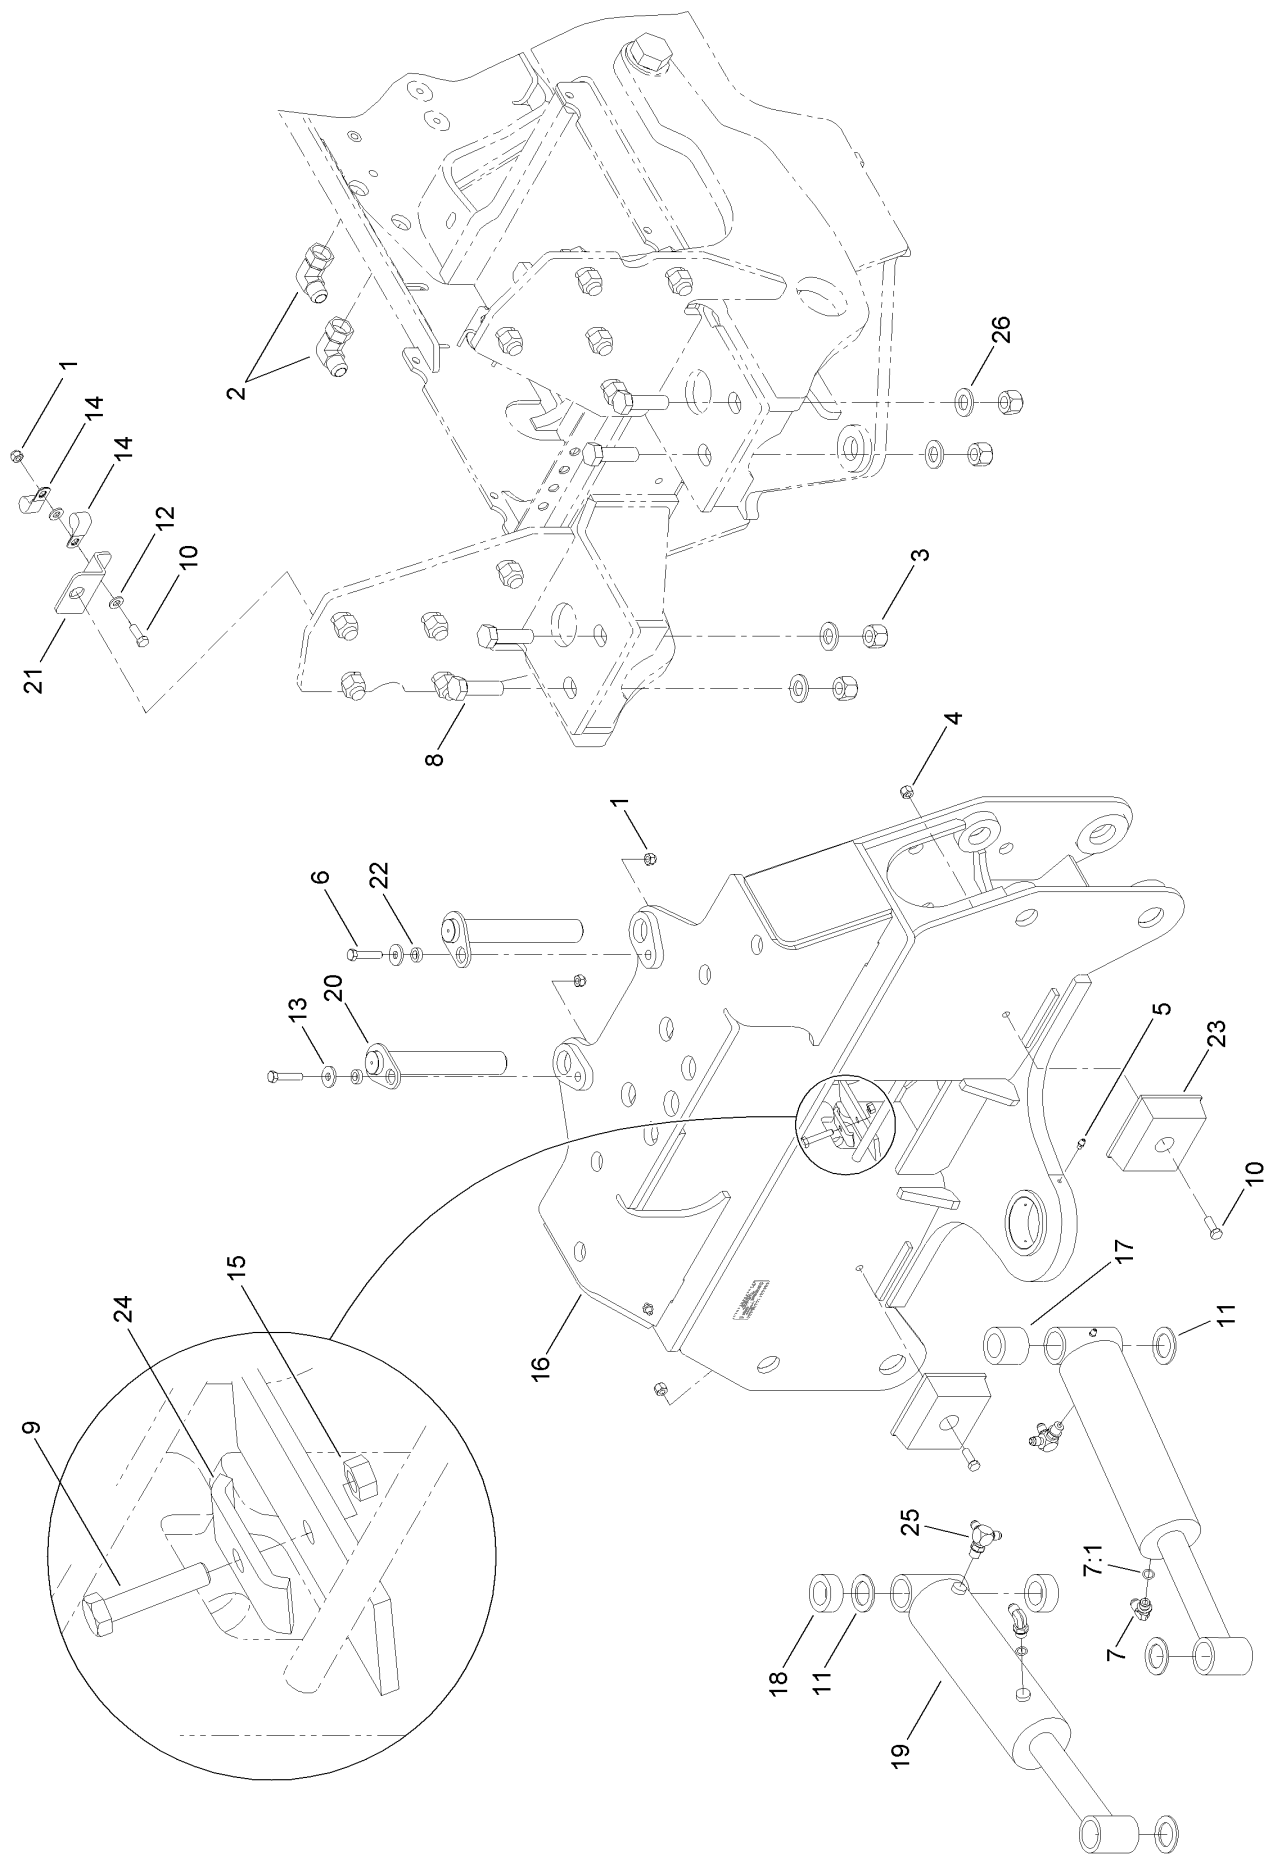

Backhoe Frame and Cylinder Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	97-1204	3	Nut-Hex	14	2412-4	2	Clamp-R
2	AU218-5231	2	Fitting-Elbow, 90	15	32152-1	2	Nut-Lock, Cone
3	AU230-42112	4	Nut-Hex	16	AU101281-03	1	Frame-Backhoe
4	AU230-4216	2	Nut	17	AU102603	1	Boss-Pin (40Mm)
5	302-2	5	Fitting-Grease	18	AU102604	2	Boss-Pin (20.5Mm)
6	323-52	2	Screw-HH	19	AU103336	2	HYD Cylinder ASM
7	353-374	2	Fitting-Elbow, 90 DEG	20	AU111339	2	Pin-Pivot W/ Flag
7:1	237-42	1	O-Ring	21	AU116460-03	1	Bracket-Mounting, Tube
8	AU426-1240	4	Bolt	22	AU349192A1	2	Spacer
9	5-1470	2	Screw-HH	23	AUD90990	2	Bumper
10	AU426-616	3	Screw-HH	24	AUH434900	2	Clamp-Tube
11	AU495-81203	4	Washer	25	AUL104616	2	Fitting
12	AU496-21041	2	Washer-Flat	26	AUH426817	4	Washer-Flat
13	93-8806	2	Washer-Hardened				


Hydraulic Cylinder Assembly No. AU103336

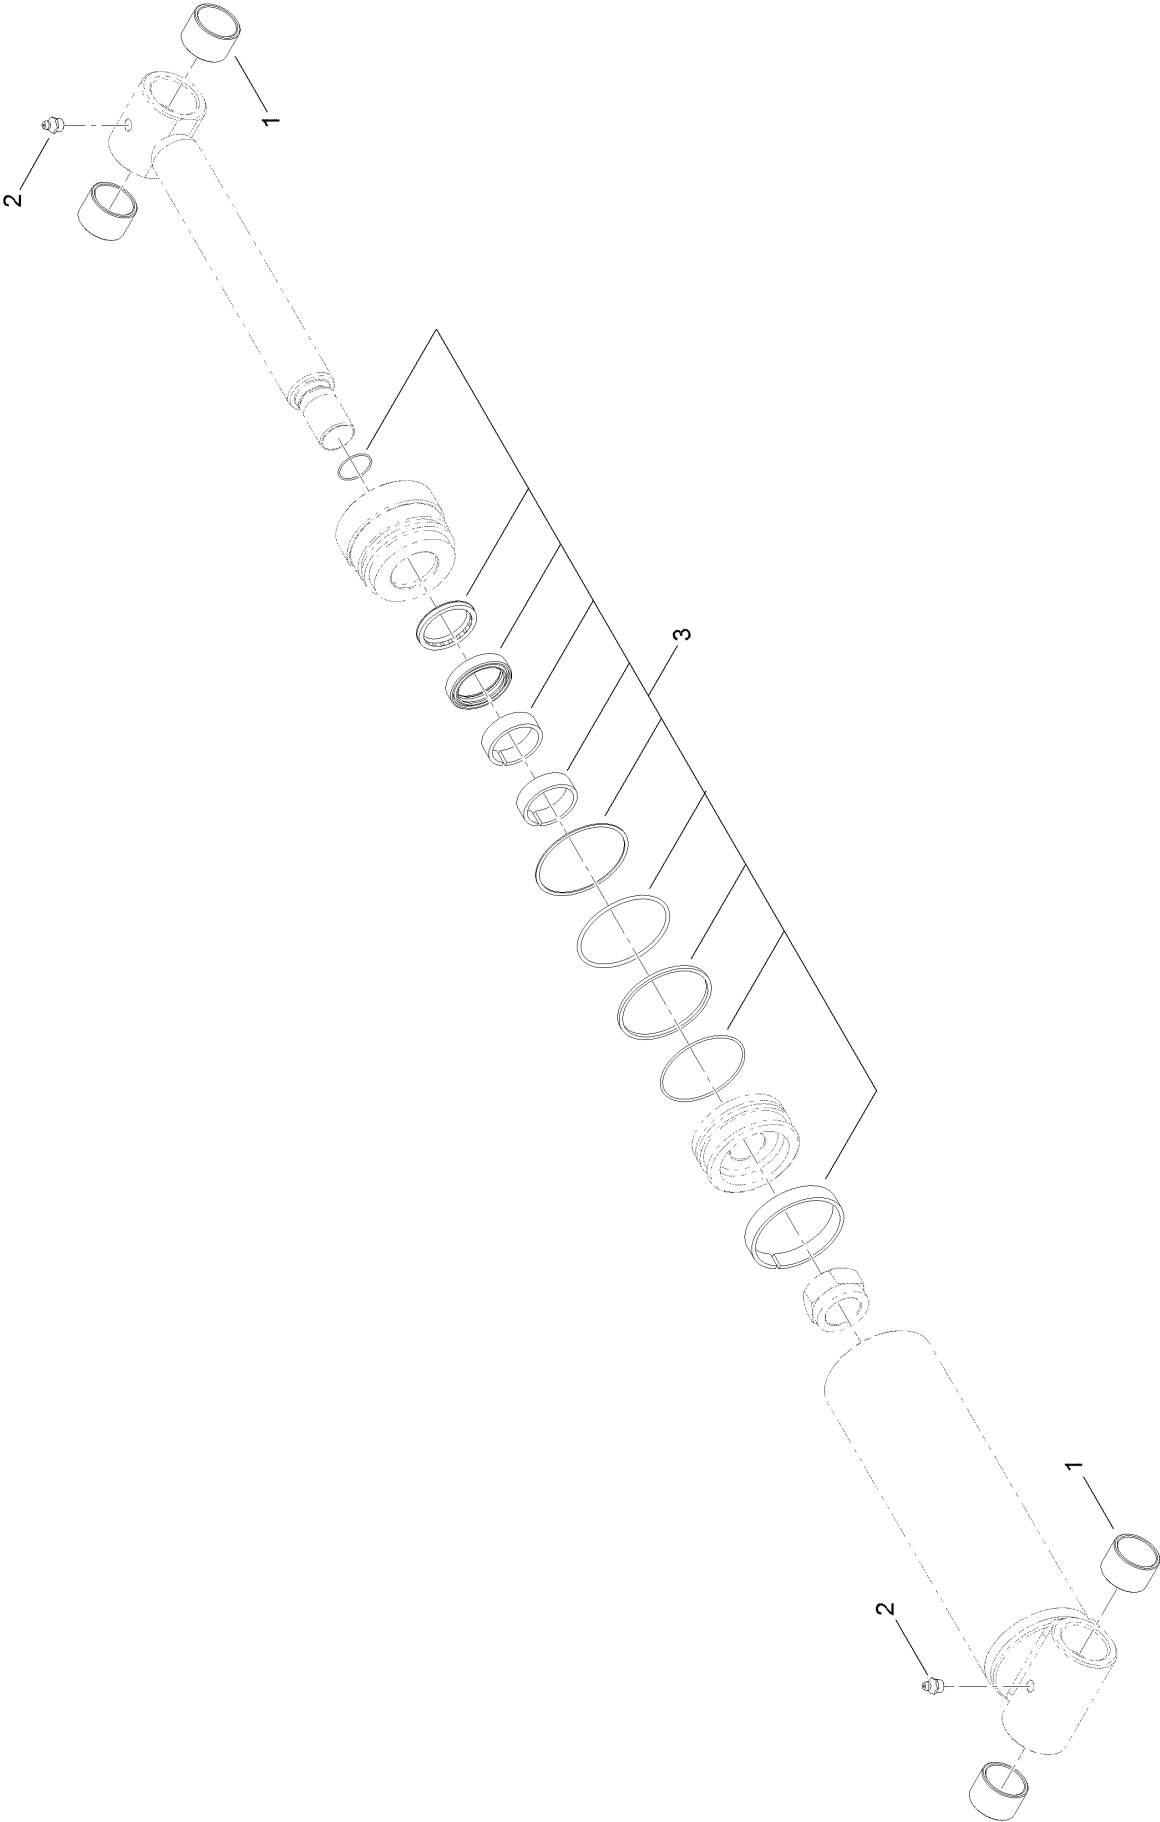

Hydraulic Cylinder Assembly No. AU103336 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU103337	4	Bushing-Rod End, Cylinder
2	302-2	2	Fitting-Grease
3	AU103444	1	Seal Kit


Pivot Frame Assembly

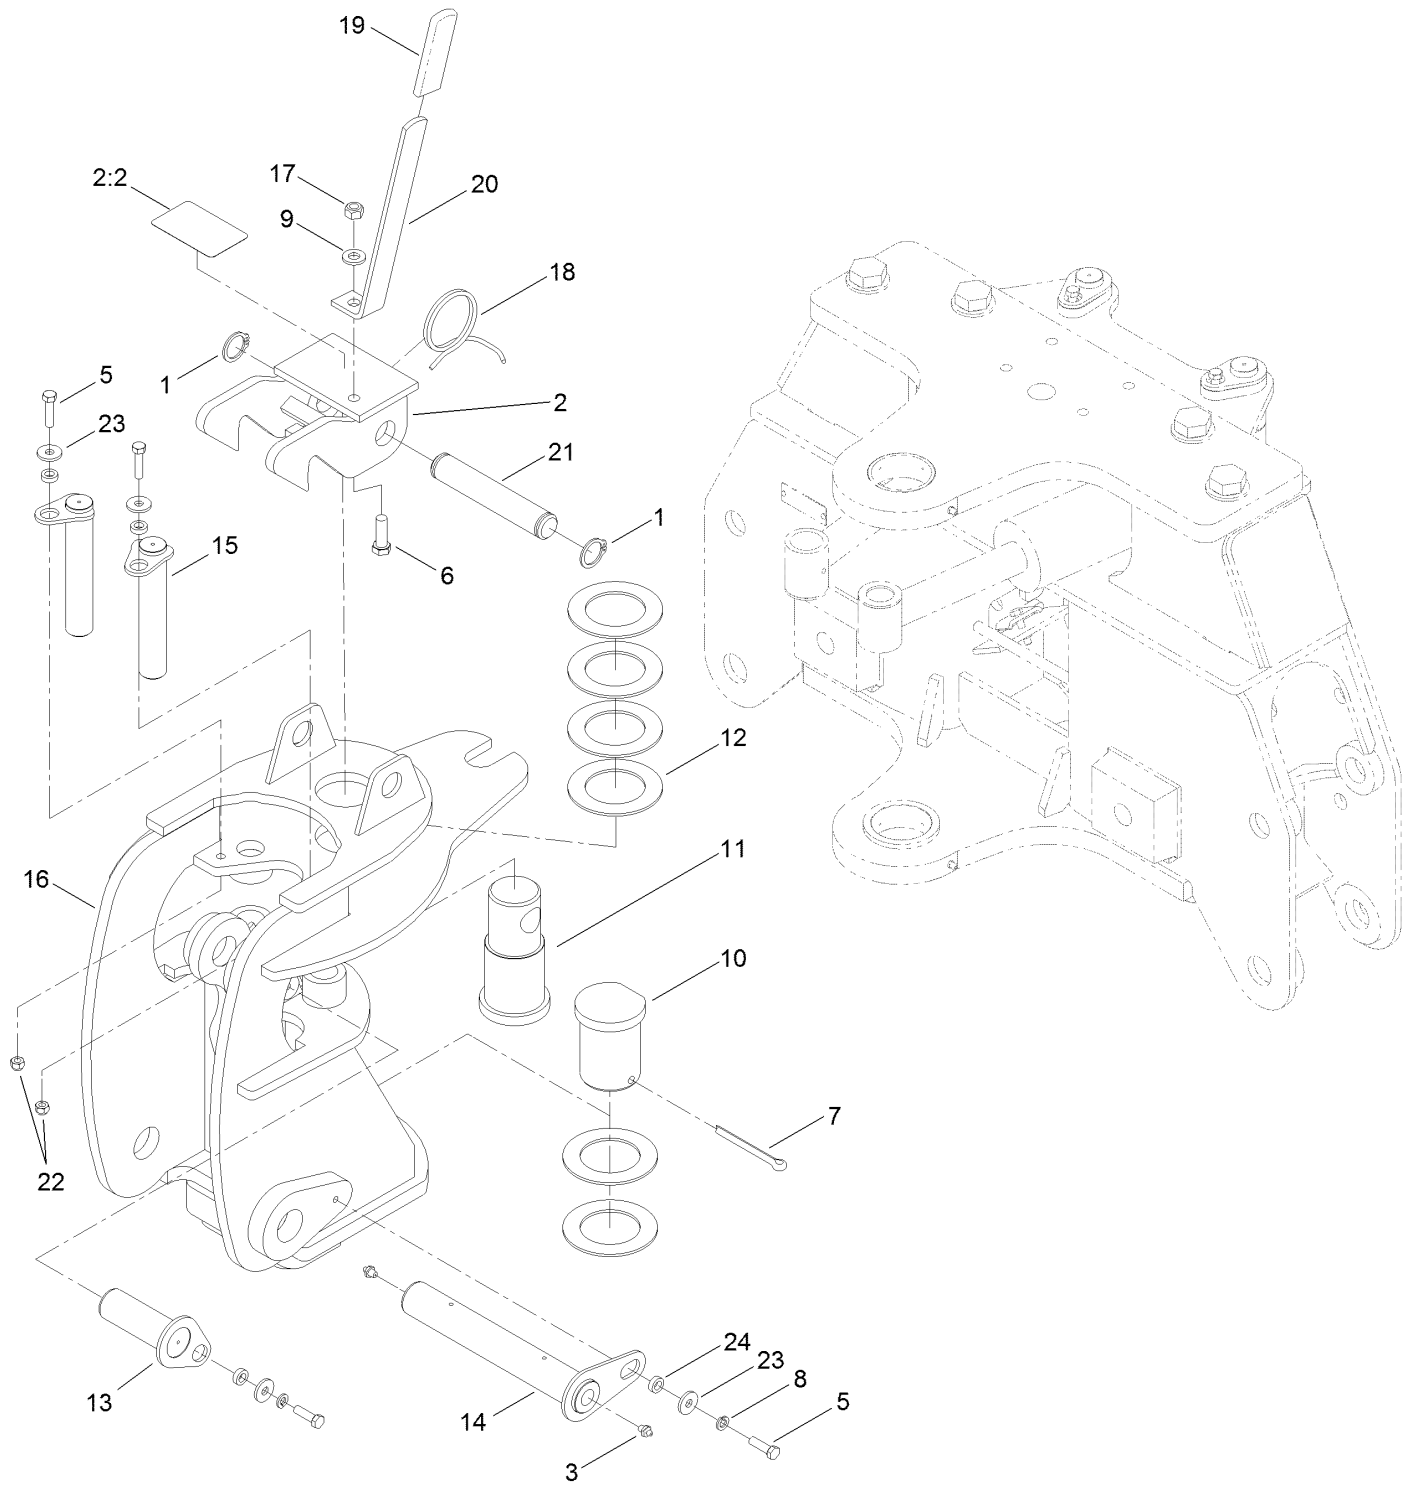

Pivot Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	32151-77	2	Ring-Retaining, External	13	AU111293	1	Pin-Boom Cylinder
2	127-1269	1	Boom Lock Latch ASM	14	AU111363	1	Pin-Boom Pivot
2:2	125-8476	1	Decal-Operator Presence	15	AU111425	2	Pin-Pivot W/Flag
3	302-2	2	Fitting-Grease	16	AU112321-03	1	Frame-Pivot
5	323-43	4	Screw-HH	17	97-1206	1	Locknut
6	AU426-824	1	Screw-HH	18	AU353055A1	1	Spring-Torsion
7	AU432-2456	1	Pin-Cotter	19	AUH33332	1	Grip-Handle
8	3253-21	2	Washer-Lock	20	AUH436021-03	1	Handle
9	AU496-21053	1	Washer-Flat	21	AUH436746	1	Pin-Pivot
10	AU101367	1	Pin-Pivot, Lower	22	97-1204	2	Nut-Hex
11	AU101377	1	Pin-Pivot, Upper	23	93-8806	4	Washer-Hardened
12	AU101543	6	Washer-Thrust Pivot	24	AU349192A1	4	Spacer

Top Pivot Plate, Guard and Valve Assembly

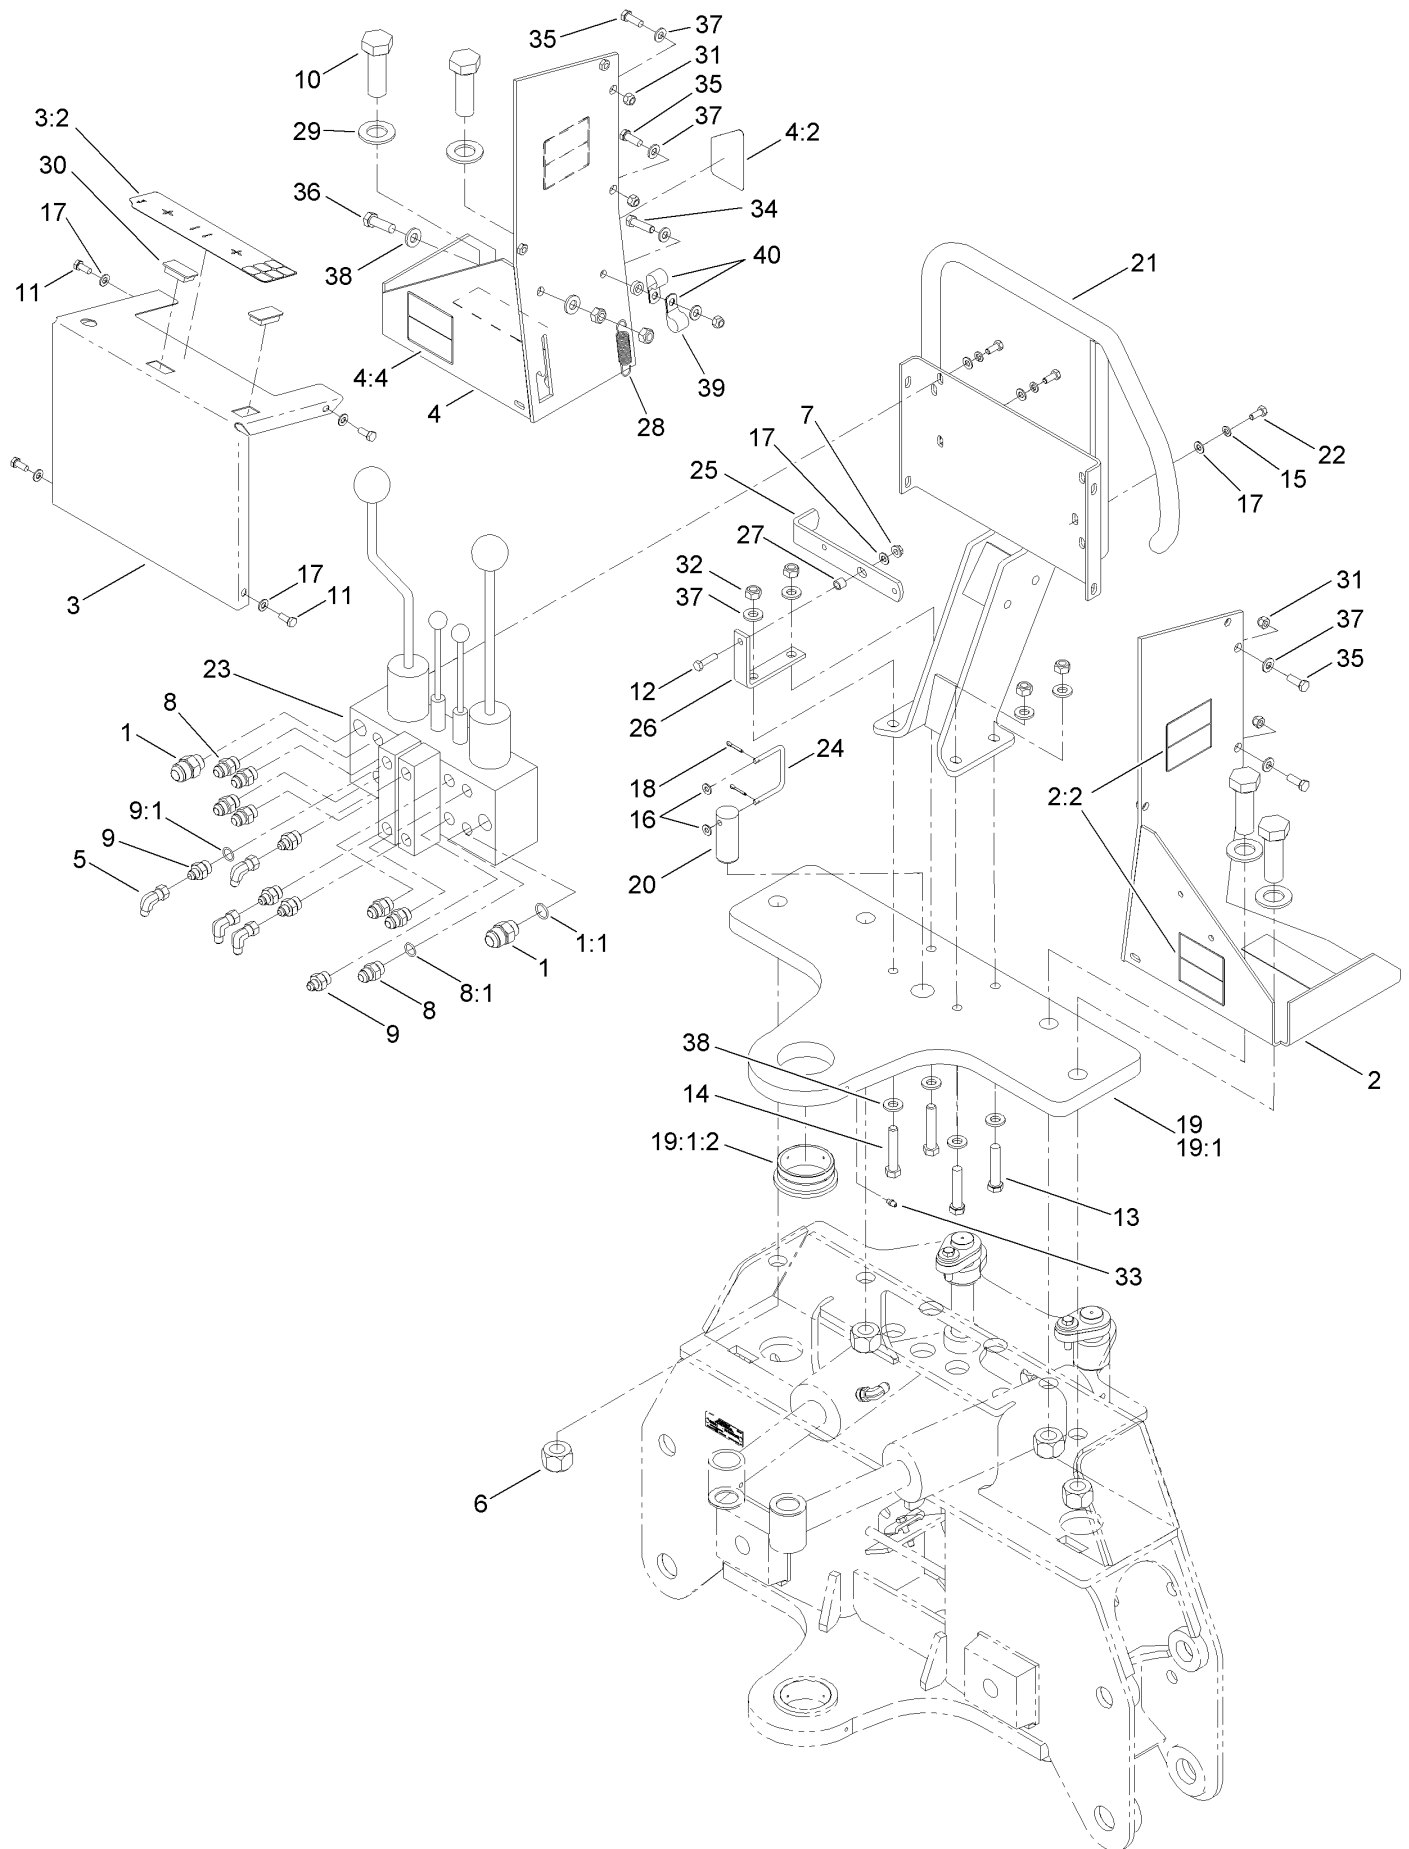

Top Pivot Plate, Guard and Valve Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	01-201-3290	2	Fitting-Straight
1:1	237-80	1	O-Ring
2	127-1266	1	LH Foot Guard And Decal ASM
2:2	125-6690	2	Decal-Danger, Crushing
3	127-1267	1	Valve Cover And Decal ASM
3:2	125-8474	1	Decal-Operation, Bucket
4	127-1268	1	RH Foot Guard And Decal ASM
4:2	125-8477	1	Decal-Swing Lock
4:4	125-6690	2	Decal-Danger, Crushing
5	AU218-980	4	Fitting-Swivel, 90 DEG
6	AU230-42116	4	Nut-Hex
7	32128-20	1	Nut-HF
8	353-388	7	Fitting-Straight
8:1	237-79	1	O-Ring
9	AU218-5058	5	Connector
9:1	237-79	1	O-Ring
10	AU426-1648	4	Bolt
11	AU426-512	4	Bolt
12	322-47	1	Screw-HH
13	AU426-840	2	Screw-HH
14	325-34	2	Screw-HH
15	3253-4	3	Washer-Lock
16	AU495-11028	2	Washer-Flat
17	AU496-11034	8	Washer-Flat

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
18	3272-10	2	Pin-Cotter
19	AU101287-03	1	Top Pivot Plate ASM
19:1		1	Plate-Top Pivot ●
19:1:2	AUH434397	1	Bushing-King Post
20	AU101473	1	Pin-Control Lever
21	AU102257-03	1	Console-Seat Mount
22	AU428-512	3	Screw-HH
23	AU87400034	1	HYD Control Valve ASM
24	AUH438351	1	Link-C
25	AUH438352-03	1	Handle
26	AUH438354-03	1	Angle
27	AUH93971	1	Bushing
28	AUD124939	1	Spring
29	AUH426833	4	Washer
30	99-7420	2	Plug-Hole
31	97-1204	5	Nut-Hex
32	97-1206	6	Locknut
33	302-2	1	Fitting-Grease
34	323-43	1	Screw-HH
35	AU426-616	4	Screw-HH
36	AU426-824	1	Screw-HH
37	AU496-21041	6	Washer-Flat
38	AU496-21053	10	Washer-Flat
39	2412-4	2	Clamp-R
40	AU349192A1	1	Spacer

● Not serviced separately

Backhoe Control Valve No. AU87400034

Controls Section

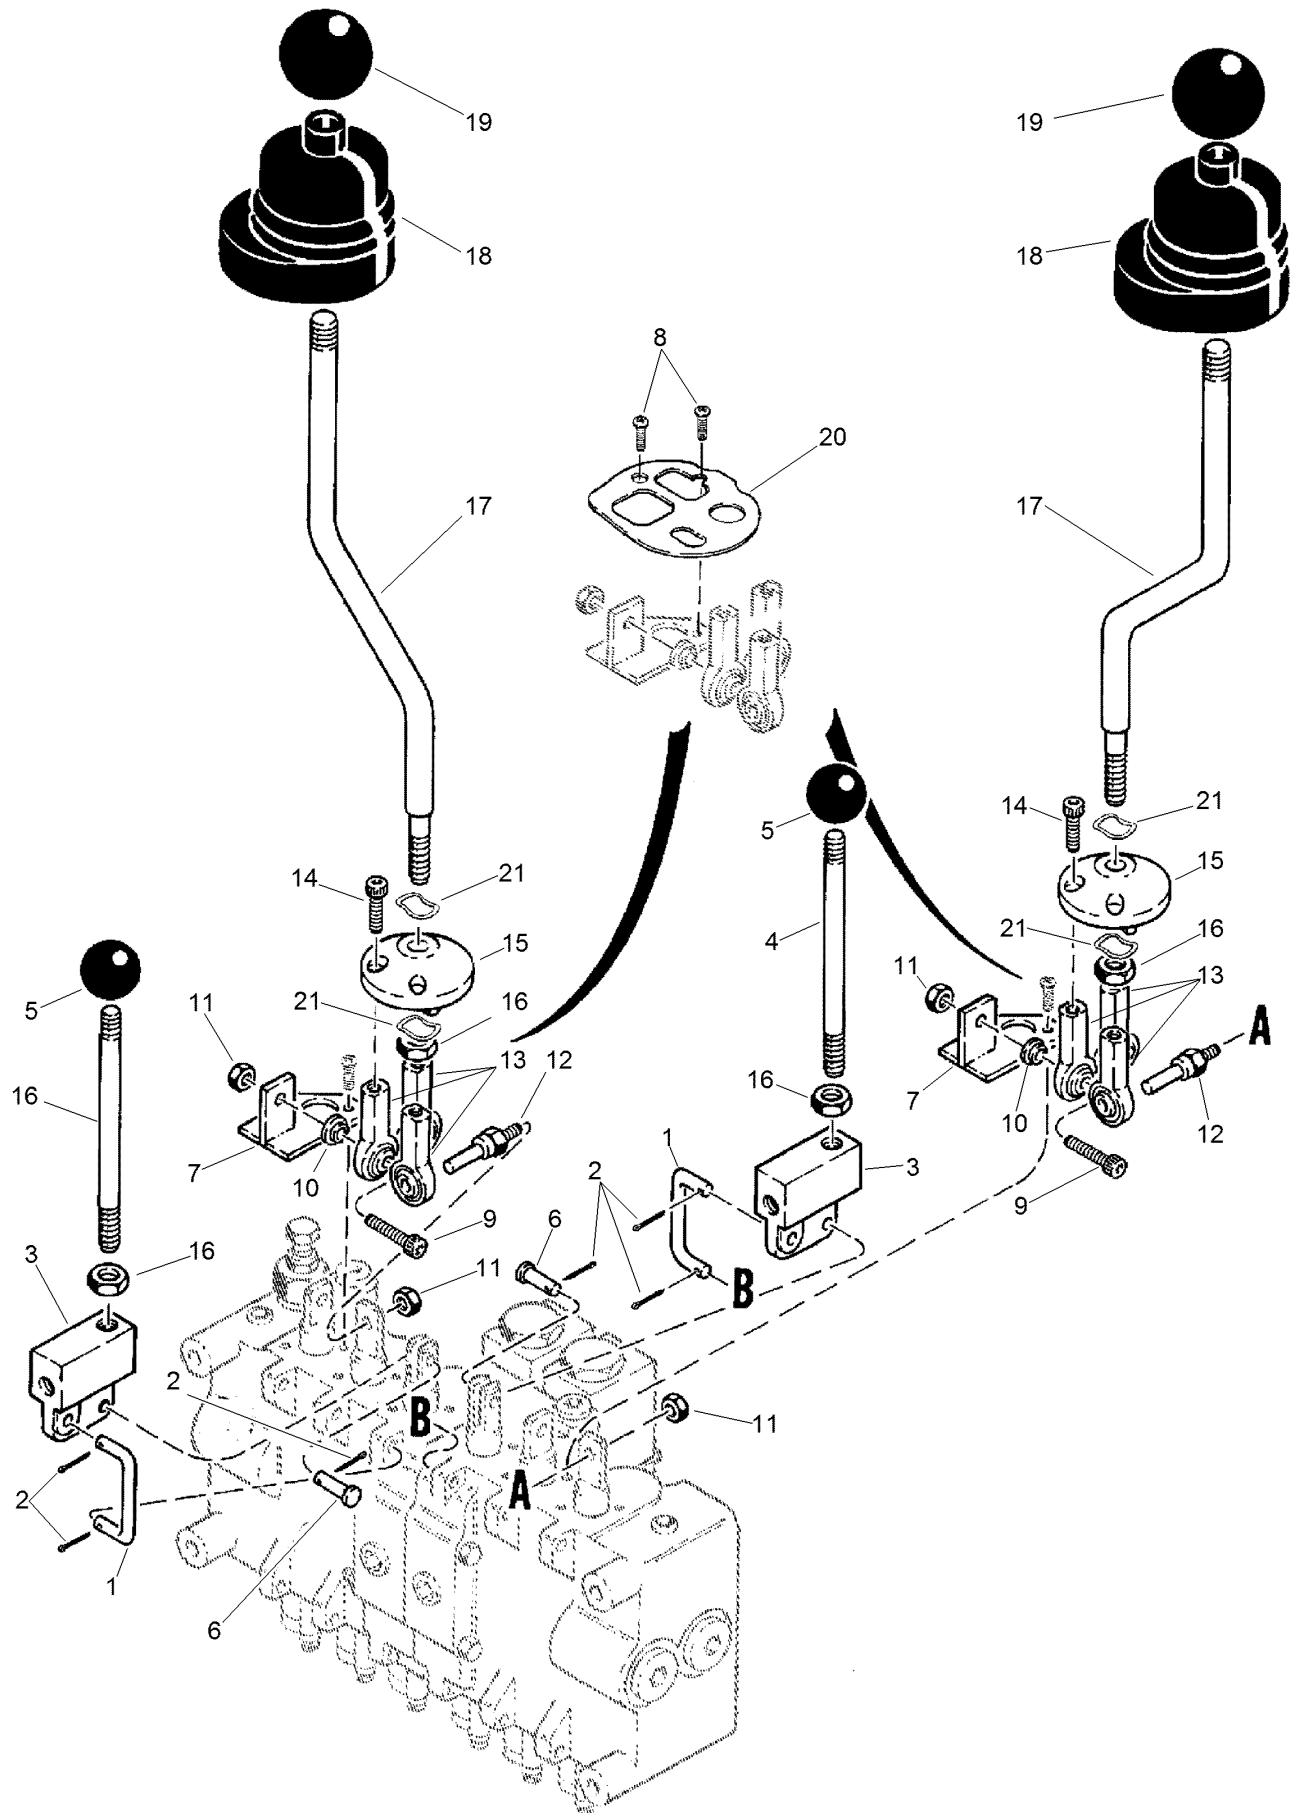


Backhoe Control Valve No. AU87400034

Controls Section (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AUH438042	2	Hook-C	12	AUH438038	2	Stud
2	3272-2	6	Pin-Cotter	13	AUH438025	6	End-Rod
3	AUH438043	2	Block	14	AU62-32512	6	Screw
4	AU100406A1	2	Rod	15	AUH438944	2	Adapter
5	AUH152207	2	Knob	16	106-8248	4	Nut-Jam
6	AU427-4077	2	Pin-Clevis	17	AUH438022	2	Handle
7	AUH438950	2	Bracket	18	AUH438946	2	Boot
8	AU62-31010	4	Screw	19	AUA23885	2	Ball
9	AU62-32516	4	Screw	20	AUH438951	2	Plate
10	AUH438035	4	Spacer	21	AUH438956	4	Washer
11	AUH438943	6	Nut-Jam				

Backhoe Control Valve No. AU87400034

Inlet Section

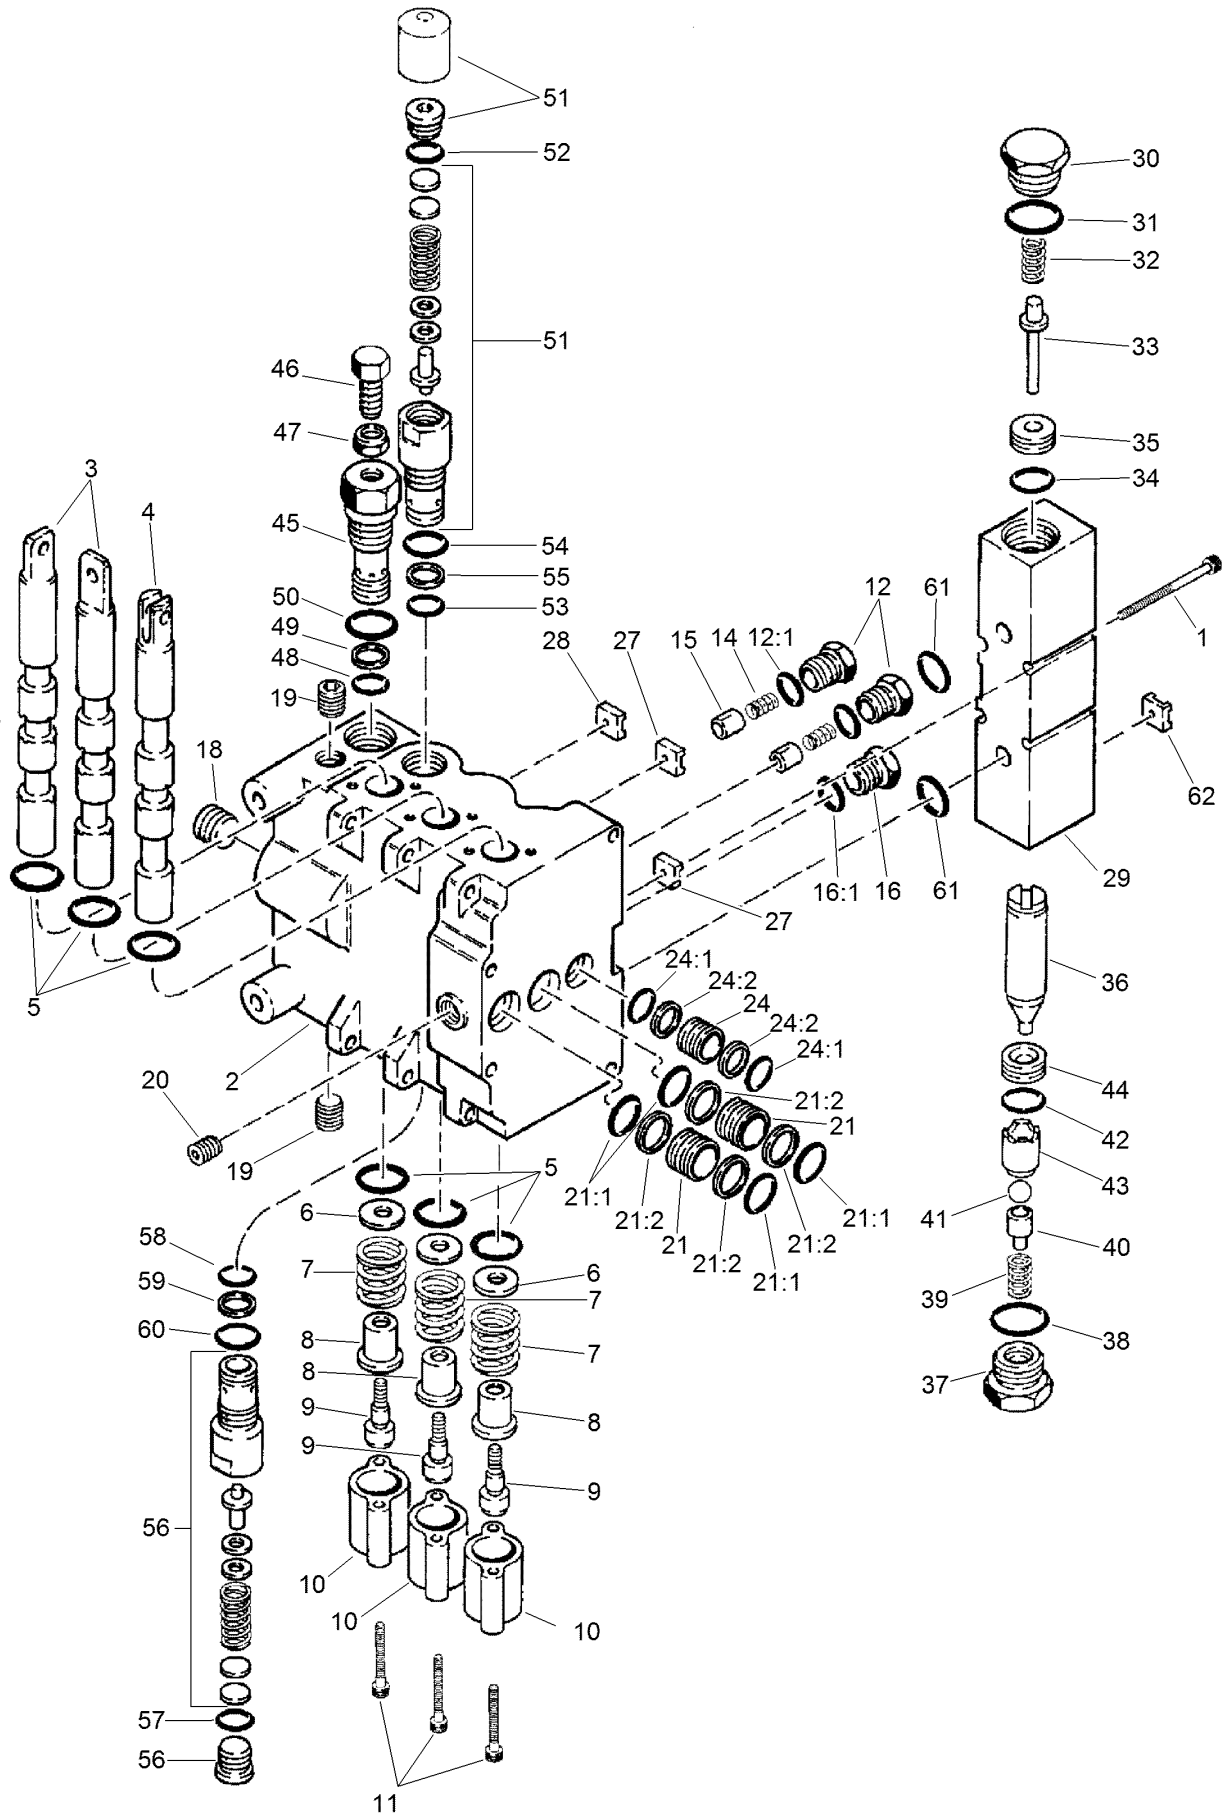

Backhoe Control Valve No. AU87400034


Inlet Section (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU62-31040	4	Screw	32	AU113747A1	1	Spring
2		1	Body-Valve ●	33	AUH438334	1	Poppet
3		2	Spool-Control, Dual ●	34	AU238-6016	1	O-Ring
4		1	Spool-Stabilizer ●	35	AU113750A1	1	Seat-Pilot
5		6	O-Ring ●	36	AU113749A1	1	Plunger
6	AU495-11034	1	Washer-Flat	37	AUH438031	1	Plug
7	AUN9539	1	Spring-Return	38	AU237-6010	1	O-Ring
8		1	Spacer-Spring ●	39	AU102712A1	1	Spring
9		1	Bolt-Shoulder ●	40	AUH438032	1	Sleeve
10		1	Cap-End ●	41	AU113748A1	1	Ball-Steel
11	AU62-31024	2	Screw	42	AU238-6016	1	O-Ring
12	AUH438231	1	Plug ASM	43	AUH438033	1	Retainer
12:1	AU237-6006	1	O-Ring	44	AU113746A1	1	Seat-Pilot
14		1	Spring-Poppet ●	45		1	Valve-Relief ●
15		1	Poppet-Check, Load ●	46	AUH438229	1	Bolt
16	AUH438231	1	Plug ASM	47	AUH438228	1	Nut
16:1	AU237-6006	1	O-Ring	48	AU238-6015	1	O-Ring
18	AU217-436	1	Plug-Hex Socket, Pipe	49	AUH438044	1	Ring-Backup
19	AU217-433	2	Plug	50	AU238-6017	1	O-Ring
20		1	Plug-Seal ●	51		1	Valve-Relief ●
21	AUH438028	2	Tube	52	AU237-6006	1	O-Ring
21:1	AUS6380	2	O-Ring	53	AU238-6014	1	O-Ring
21:2	AUA34493	2	Ring-Backup	54	AU237-6008	1	O-Ring
24	AUH438029	1	Tube	55		1	Ring-Backup ●
24:1	AU238-6015	2	O-Ring	56		1	Valve-Relief ●
24:2	AUH438044	2	Ring-Backup	57	AU237-6006	1	O-Ring
27	AU100403A1	2	Plate	58	AU238-6014	1	O-Ring
28	AUH438041	1	Plate	59		1	Ring-Backup ●
29		1	Body-Check, Pilot ●	60	AU237-6008	1	O-Ring
30	AU113751A1	1	Plug	61	AU238-6113	2	O-Ring
31	AU237-6010	1	O-Ring	62	AUH438941	1	Orifice

● Not serviced separately

Backhoe Control Valve No. AU87400034

Outlet Section

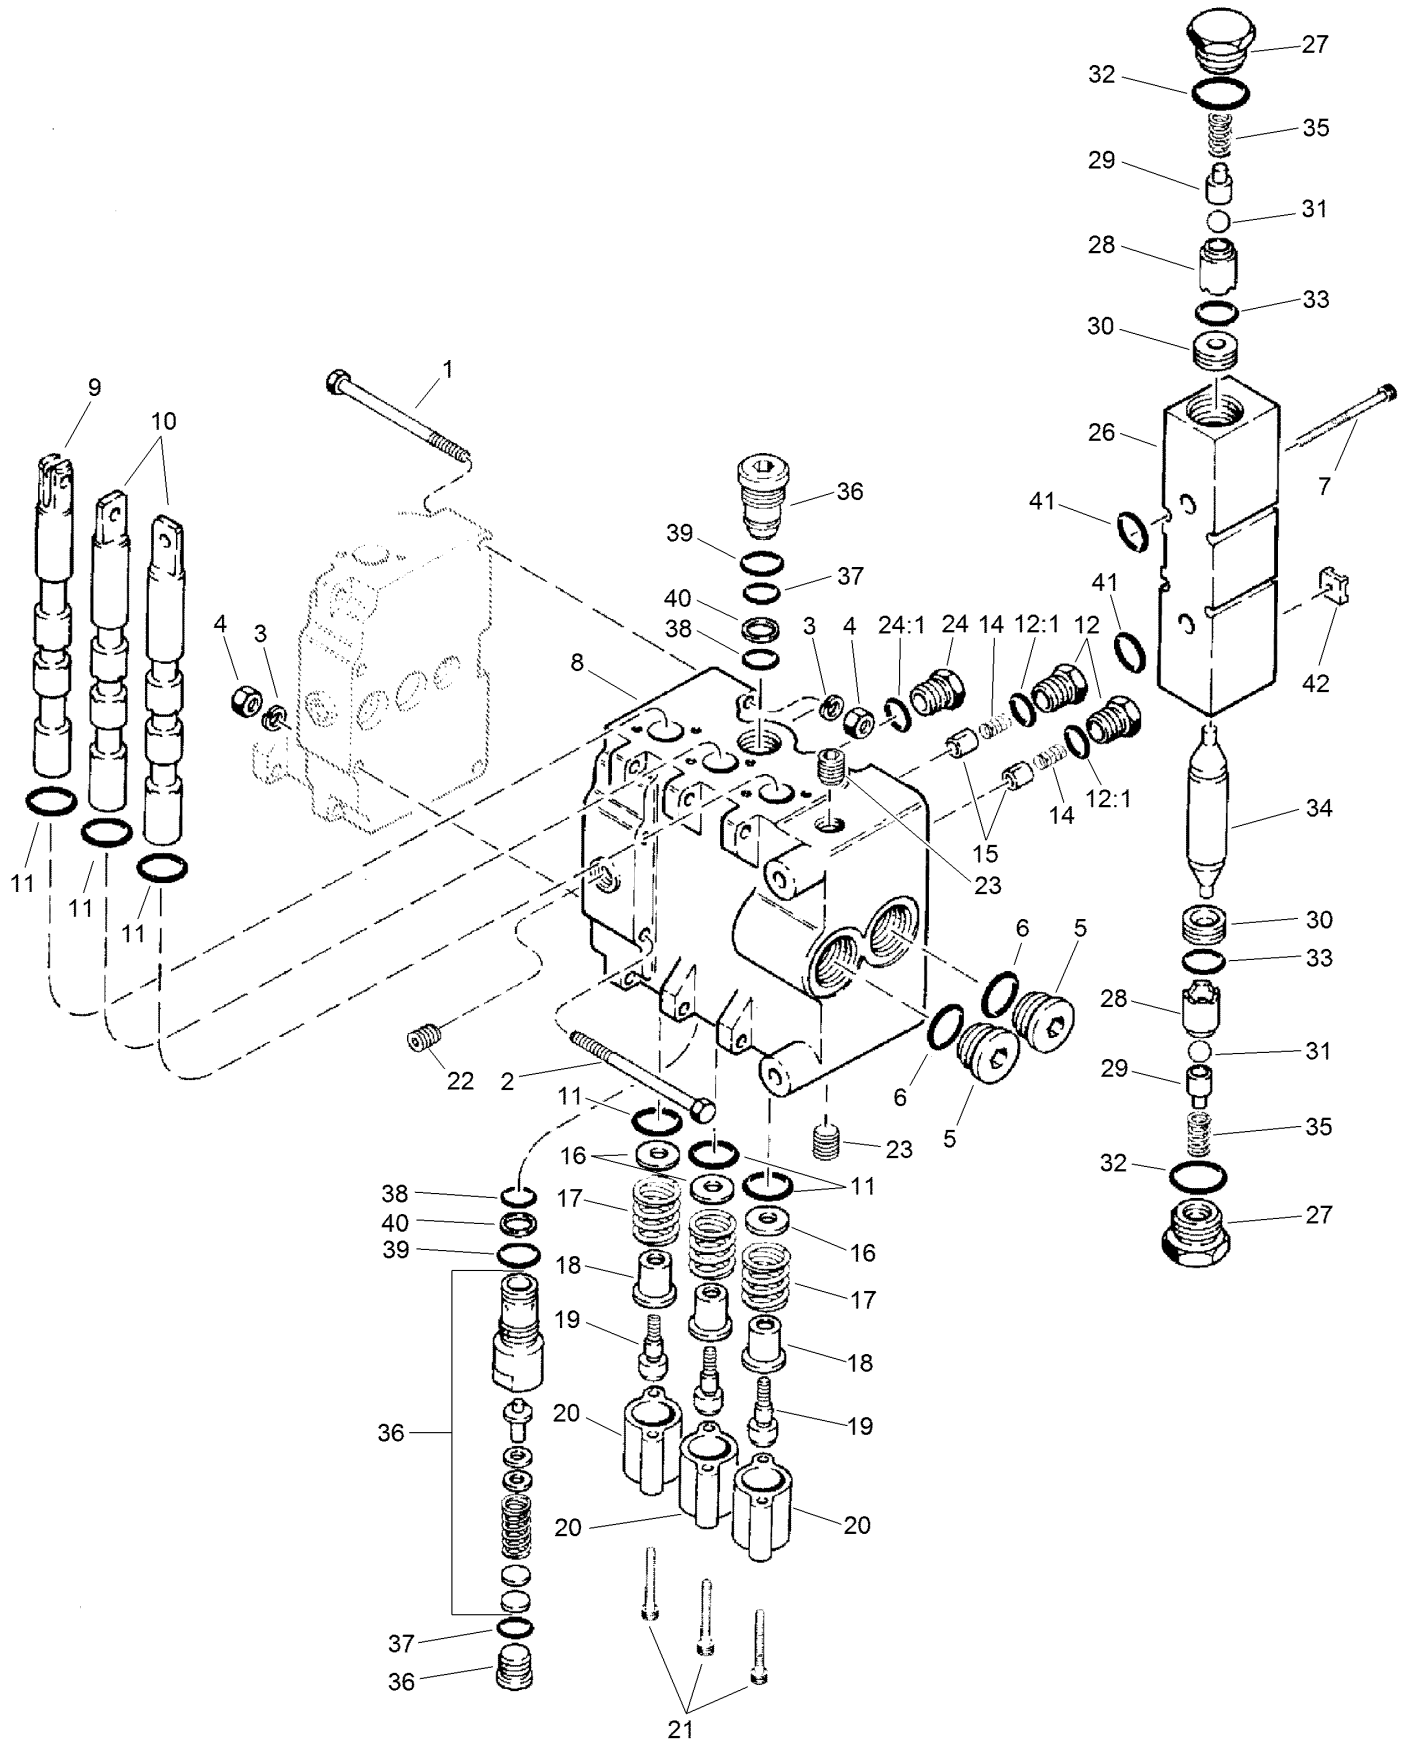


Backhoe Control Valve No. AU87400034

Outlet Section (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU414-448	2	Screw-Cap	22	AUH438960	1	Plug-Seal
2	AU414-436	2	Screw-HH	23	AU221-841	2	Plug
3	AU495-11028	4	Washer-Flat	24	AUH438231	1	Plug ASM
4	AU425-114	4	Nut	24:1	AU237-6006	1	O-Ring
5	AU218-5211	2	Plug-Socket Head	26		1	Body-Check, Pilot ●
6	AU237-6010	1	O-Ring	27		2	Plug-Check, Pilot ●
7	AU62-31040	4	Screw	28		2	Sleeve-Check, Pilot ●
8		1	Body-Section, Outlet ●	29		2	Retainer-Ball ●
9		1	Spool-Stabilizer ●	30		2	Seat-Check, Pilot ●
10		2	Spool-Control, Dual ●	31		2	Ball-Check, Pilot ●
11	AUH438030	6	O-Ring	32	AU237-6010	2	O-Ring
12	AUH438231	1	Plug ASM	33		2	O-Ring ●
12:1	AU237-6006	1	O-Ring	34		1	Plunger-Check, Pilot ●
14		1	Spring-Poppet ●	35		2	Spring-Check, Pilot ●
15		1	Poppet-Check, Load ●	36		1	Valve-Relief ●
16	AU495-11034	1	Washer-Flat	37	AU237-6006	1	O-Ring
17	AUN9539	1	Spring-Return	38	AU238-6014	1	O-Ring
18		1	Spacer-Spring ●	39	AU237-6008	1	O-Ring
19		1	Bolt-Shoulder ●	40		1	Ring-Backup ●
20		1	Cap-End ●	41	AU238-6113	2	O-Ring
21	AU62-31024	2	Screw	42	AUH438941	1	Orifice

● Not serviced separately

Boom Assembly

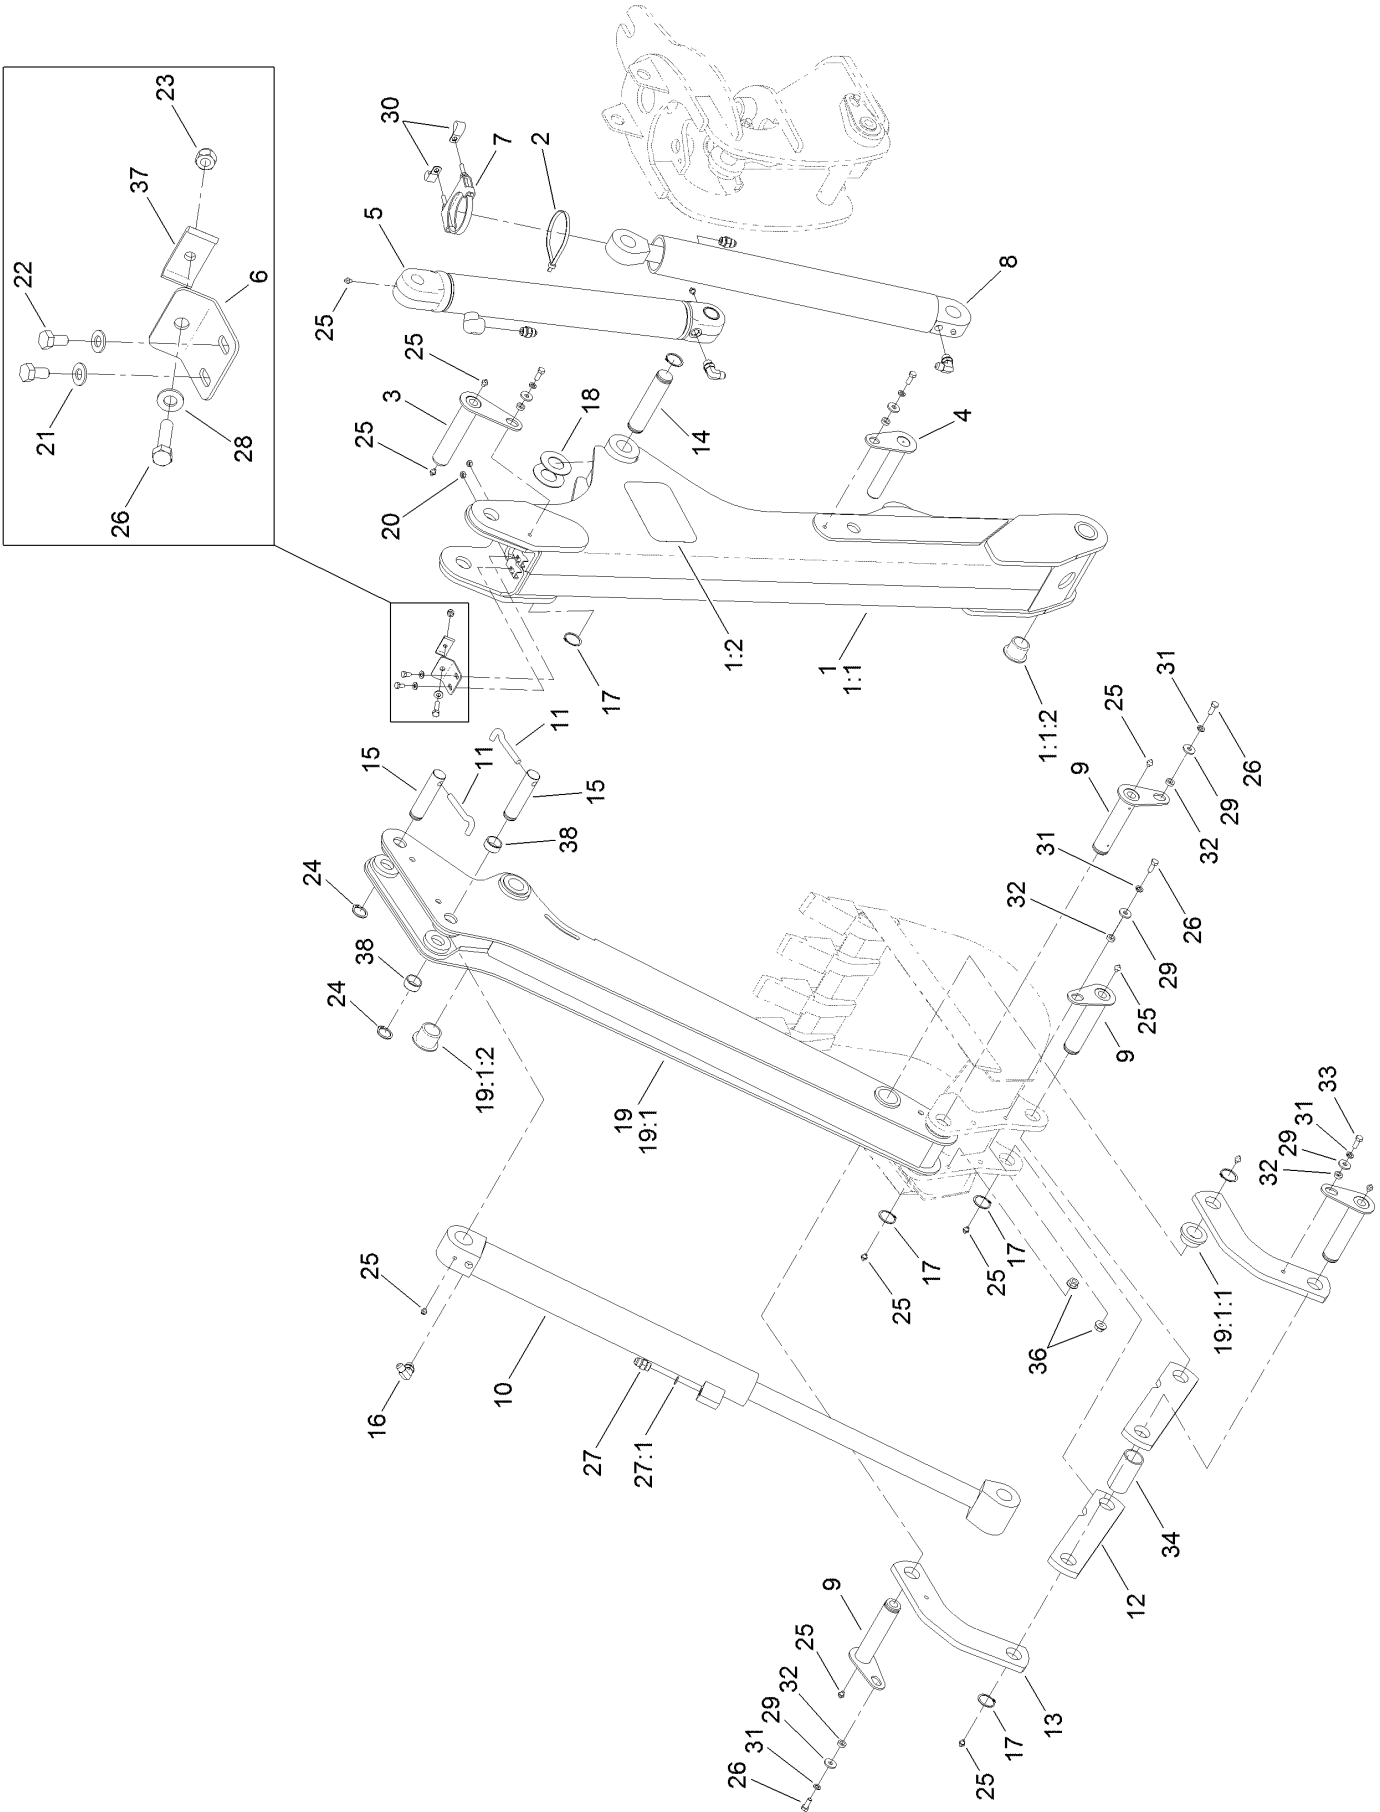


Boom Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1265	1	Boom ASM	19:1		1	Dipper ●
1:1		1	Boom ●	19:1:1	AUH433624	4	Bushing-Pivot, Bucket
1:1:2	AUH437317	2	Bushing-Pivot, Boom	19:1:2	AUH437301	2	Bushing
1:2	104-7213	2	Decal	20	119-4054	2	Nut-Square
2	3334-945	1	Tie-Cable	21	3256-23	2	Washer-Plain
3	AU111270	1	Pin-Retaining	22	322-2	2	Screw-HH
4	AU111271	1	Pin-Dipper Cylinder To Boom	23	97-1204	1	Nut-Hex
5	AU123706	1	HYD Cylinder ASM (Dipper)	24	32151-77	2	Ring-Retaining, External
6	AU253977A1-03	1	Bracket	25	302-2	13	Fitting-Grease
7	AU304650A1	1	Clamp	26	323-43	3	Screw-HH
8	AU305352A1	1	HYD Cylinder ASM	27	353-388	3	Fitting-Straight
9	AU349180A1	4	Pin	27:1	237-79	1	O-Ring
10	AU402216A1	1	HYD Cylinder ASM (Bucket)	28	AU496-21041	1	Washer-Flat
11	AUH433937	2	Pin-Retainer	29	93-8806	6	Washer-Hardened
12	AUH437313-03	2	Link-Straight	30	2412-4	2	Clamp-R
13	AUH437315-03	2	Link-Curved	31	3253-21	6	Washer-Lock
14	AUH437348	1	Pin	32	AU349192A1	6	Spacer
15	AUH437349	2	Pin	33	AU426-616	4	Screw-HH
16	AUH439269	3	Elbow-90 DEG	34	AUH437316	1	Spacer-Bucket Links
17	AUD25279	6	Ring	36	104-8301	2	Nut-HF, NI
18	AUH426437	2	Washer	37	AUH434900	1	Clamp-Tube
19	AUH674676-03	1	Dipper ASM	38	AU30634	2	Bushing

● Not serviced separately

Hydraulic Cylinder Assembly No. AU123706

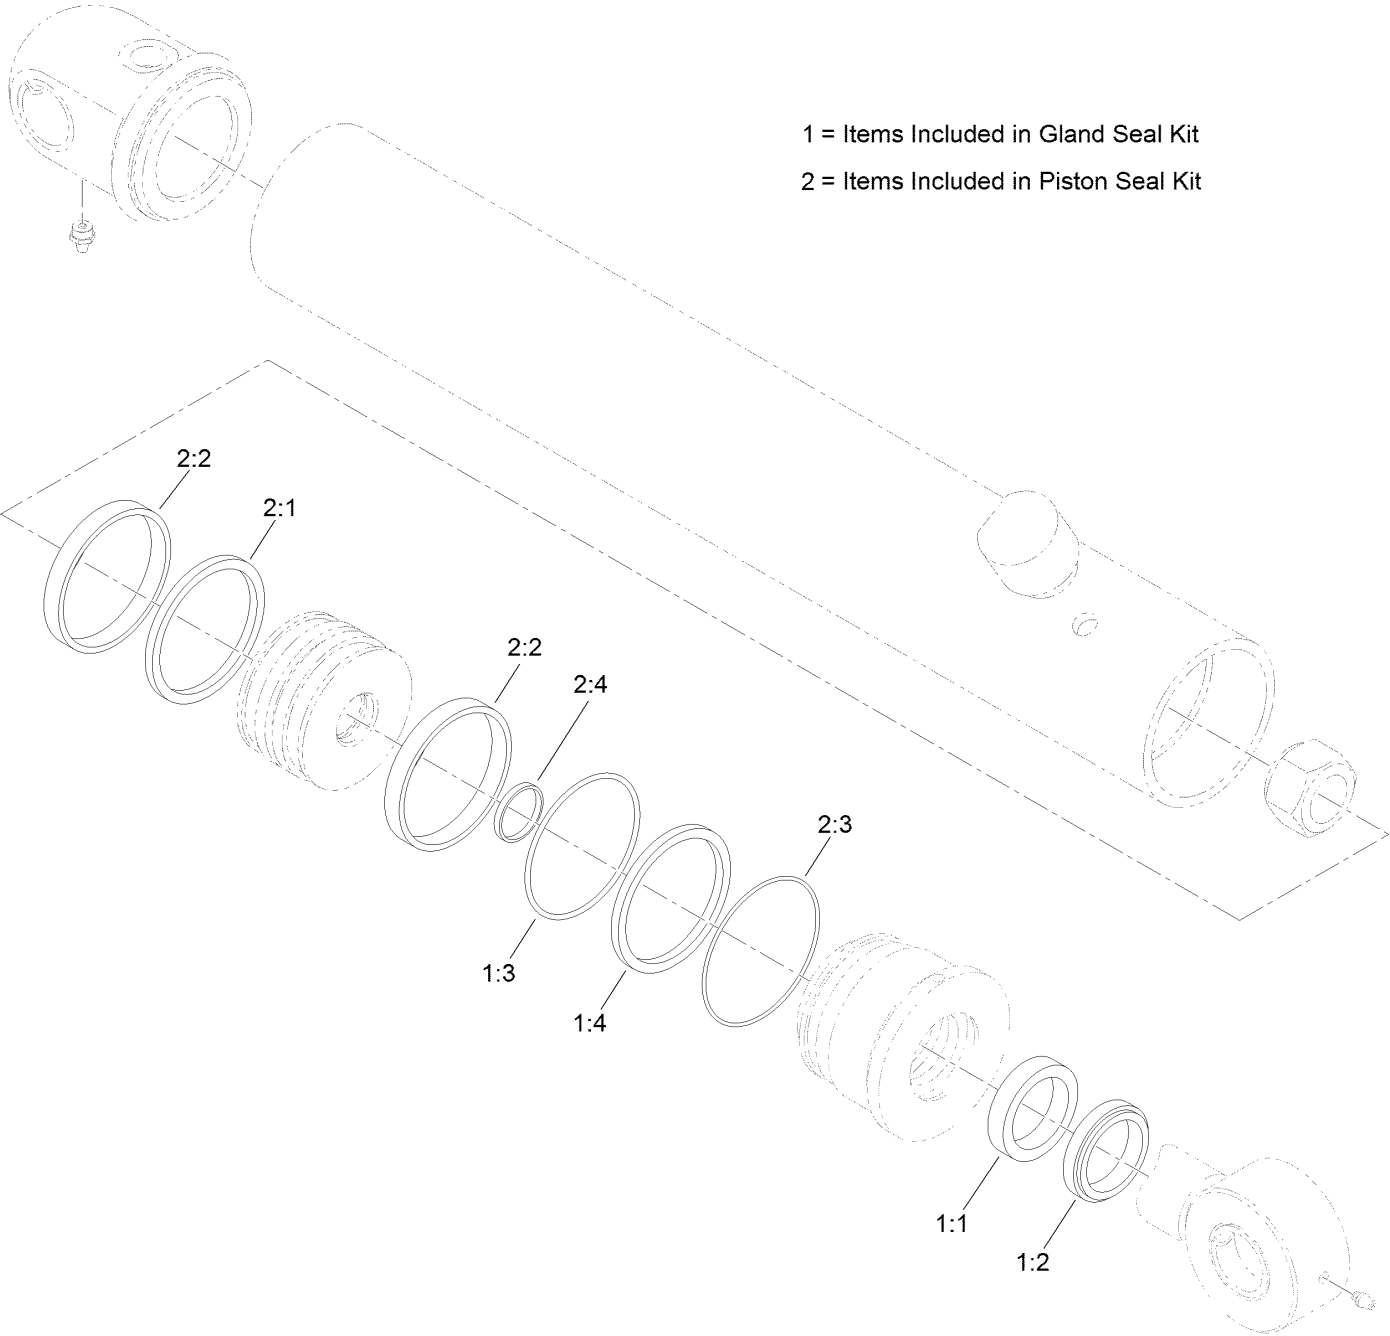


Hydraulic Cylinder Assembly No. AU123706 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-0165	1	Gland Seal Kit
1:1	AU123149	1	Seal-Rod
1:2	AU123148	1	Seal-Wiper
1:3		1	O-Ring ●
1:4		1	Ring-Backup ●

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	131-0166	1	Piston Seal Kit
2:1		1	Seal-Piston ●
2:2		2	Ring-Wear ●
2:3		1	O-Ring ●
2:4		1	O-Ring ●

● Not serviced separately

Hydraulic Cylinder Assembly AU305352A1

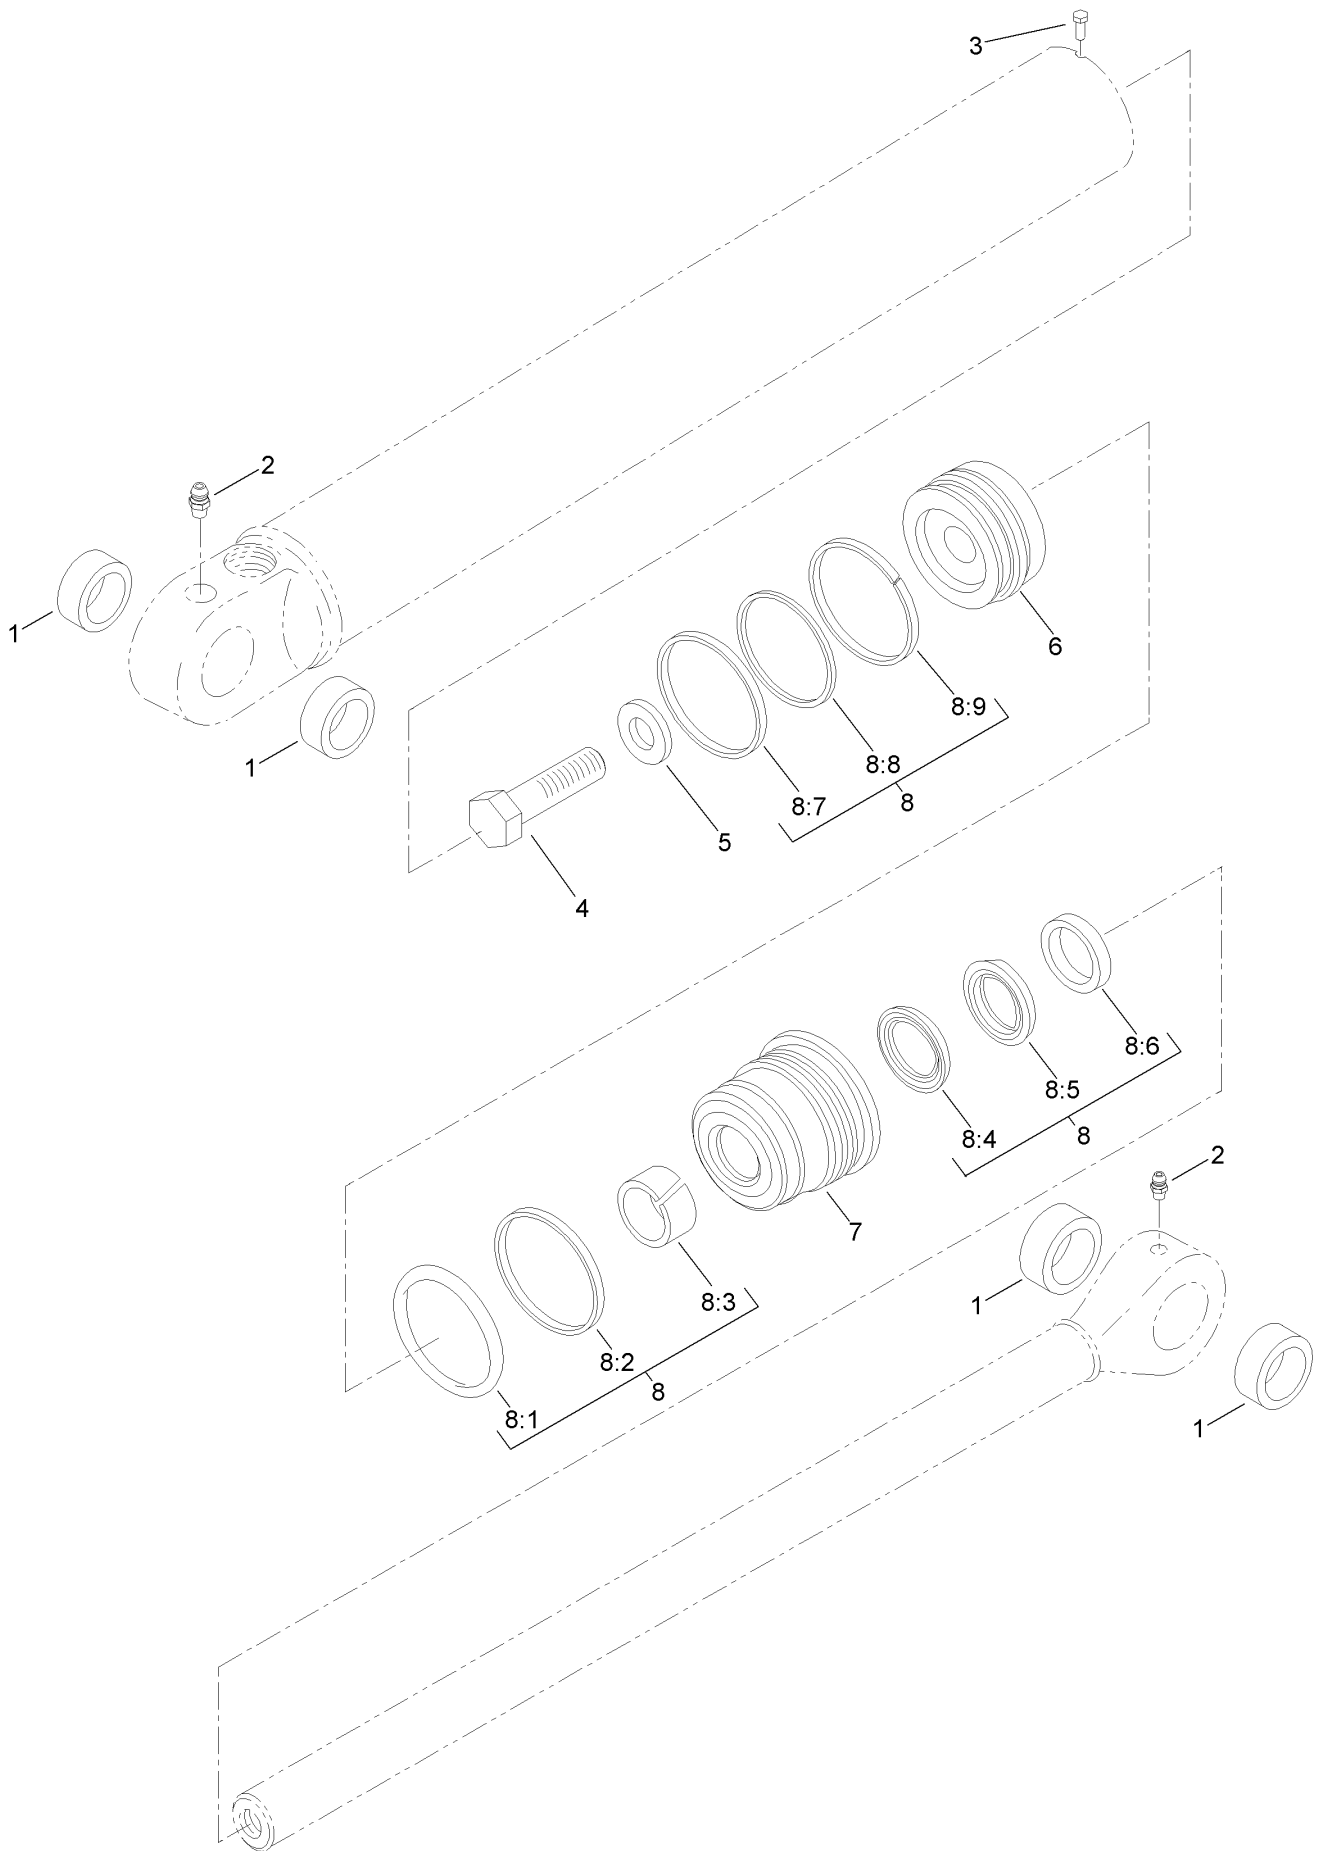


Hydraulic Cylinder Assembly AU305352A1 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AUD30930	4	Bushing
2	302-2	2	Fitting-Grease
3	AU276-2446	1	Screw
4	AU28-1440	1	Bolt
5	AUG32317	1	Washer
6	AU305356A1	1	Piston
7	AU1346417C1	1	Gland
8	AU1543256C1	1	Seal Kit
8:1	AU238-5231	1	O-Ring

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
8:2	AUG109298	1	Ring-Backup
8:3	AUG102424	1	Bearing-Rod
8:4		1	Seal-Buffer ●
8:5		1	Seal-Rod ●
8:6	AUD95142	1	Wiper-Rod
8:7	AUG102288	1	Seal-Piston
8:8	AUG100444	1	Ring-Loader
8:9	AUG100449	1	Ring-Wear

● Not serviced separately

Hydraulic Cylinder Assembly AU402216A1

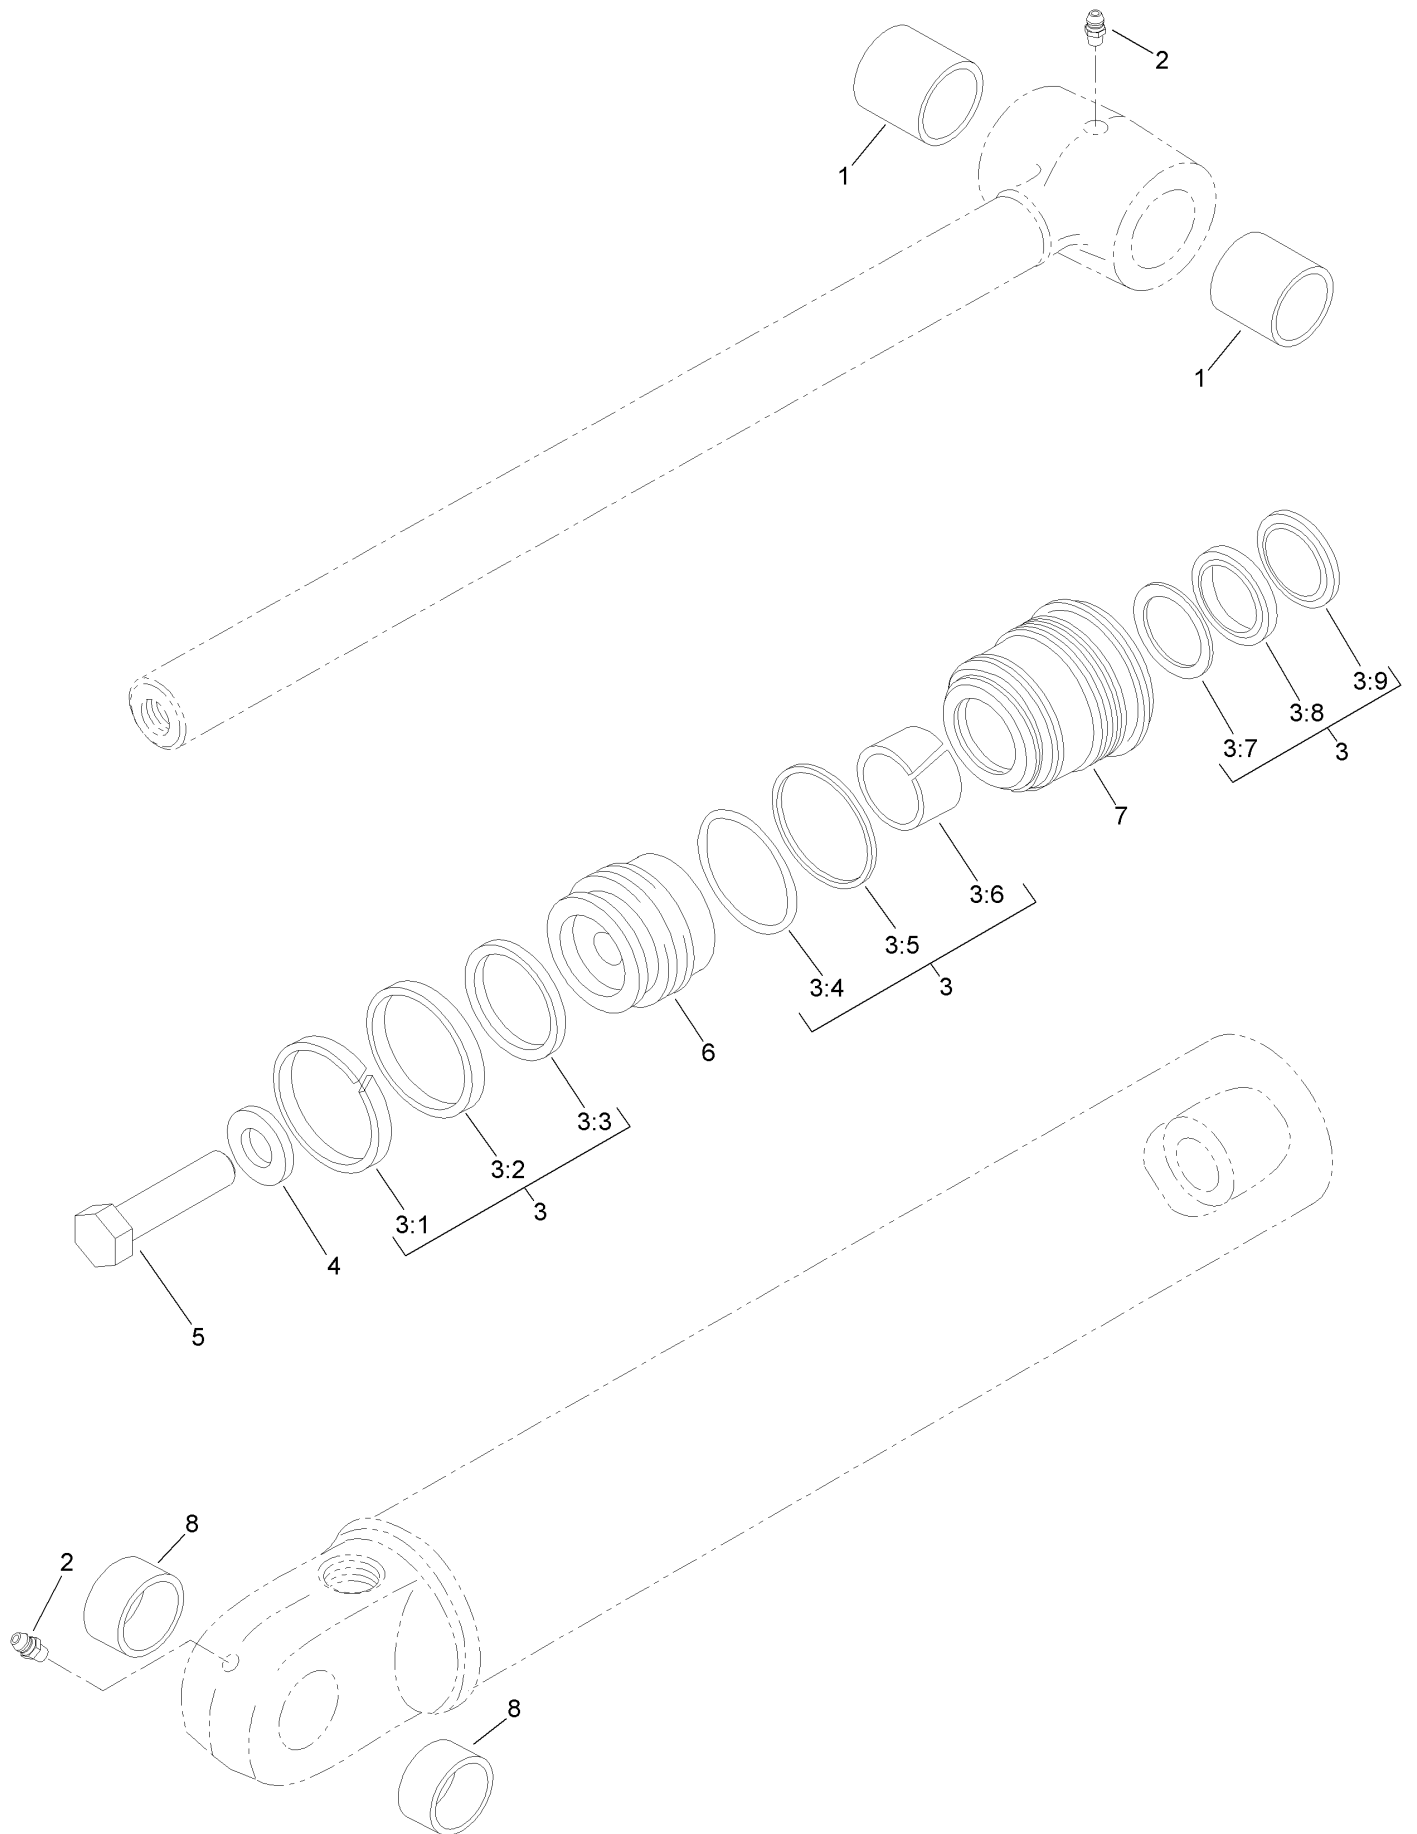


Hydraulic Cylinder Assembly AU402216A1 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AUD31141	2	Bushing
2	302-2	2	Fitting-Grease
3	AU433774A1	1	Seal Kit
3:1		1	Ring-Wear ●
3:2		1	Seal-Piston ●
3:3		1	Ring-Seal ●
3:4		1	O-Ring ●
3:5		1	Ring-Back-Up ●
3:6		1	Bushing-Center ●

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3:7		1	Seal-Buffer ●
3:8		1	Cup-U ●
3:9		1	Wiper ●
4		1	Washer ●
5		1	Screw-HH ●
6	AU431591A1	1	Piston
7	AU431592A1	1	Head
8	AU30634	2	Bushing

● Not serviced separately


Hydraulic Hose Assembly

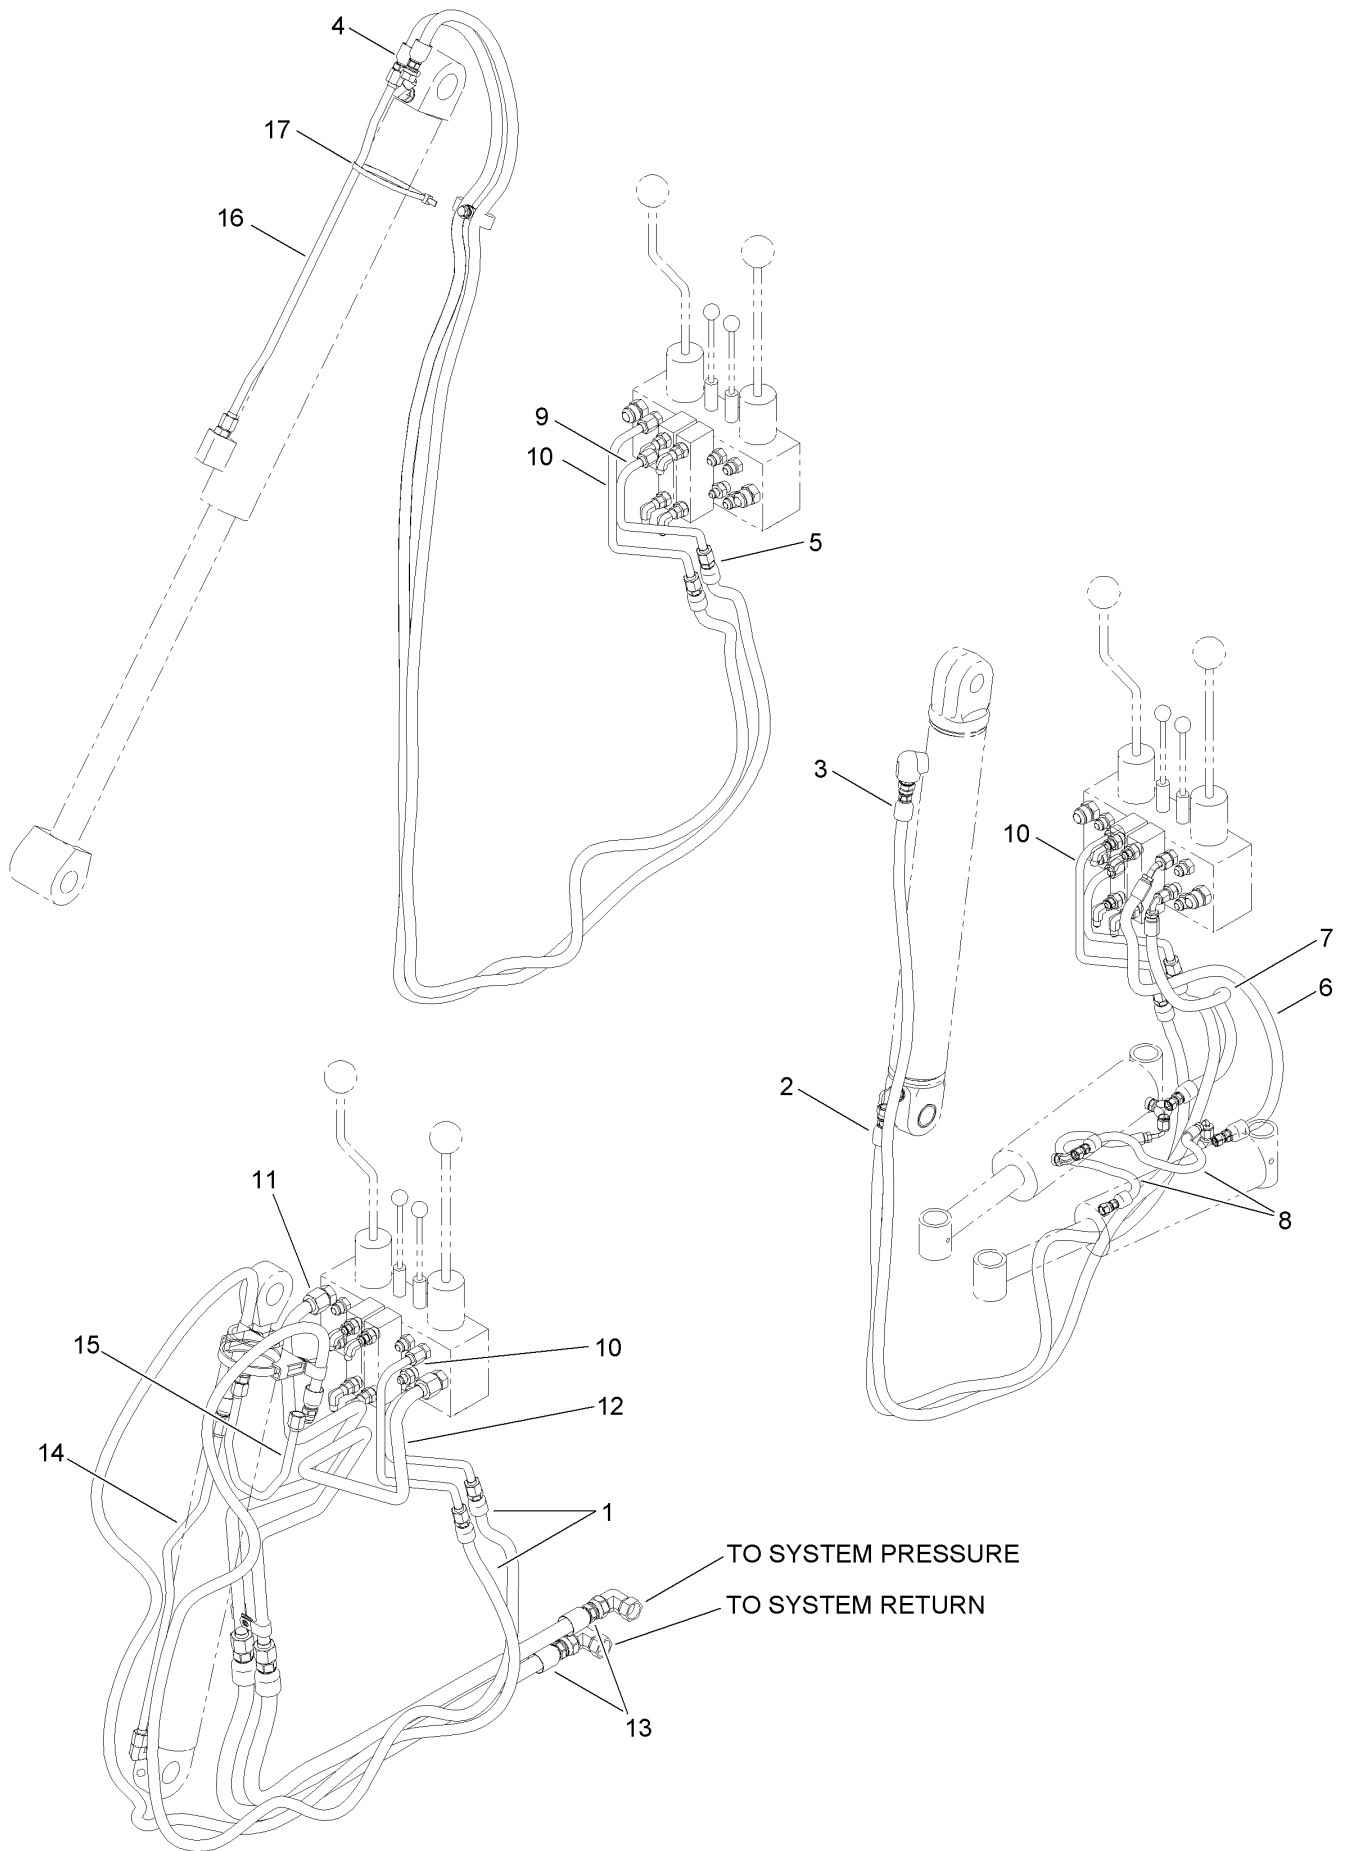

Hydraulic Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1051	2	Hose ASM	10	127-1252	3	Tube ASM, Valve Top
2	127-1052	1	Hose ASM	11	127-1253	1	Tube ASM, Backhoe Return
3	127-1053	1	Hose ASM	12	127-1254	1	Tube ASM, Backhoe Supply
4	127-1889	1	Hose ASM	13	127-1255	2	Hose ASM
5	127-1888	1	Hose ASM	14	127-1257	1	Tube ASM, Cylinder
6	127-1247	1	Hose ASM	15	127-1258	1	Tube ASM, Cylinder
7	127-1248	1	Hose ASM	16	127-1259	1	Tube ASM, Bucket
8	127-1249	2	Hose ASM-HYD	17	3334-945	1	Tie-Cable
9	127-1251	3	Tube ASM, Valve Bottom				


Seat and Post Assembly

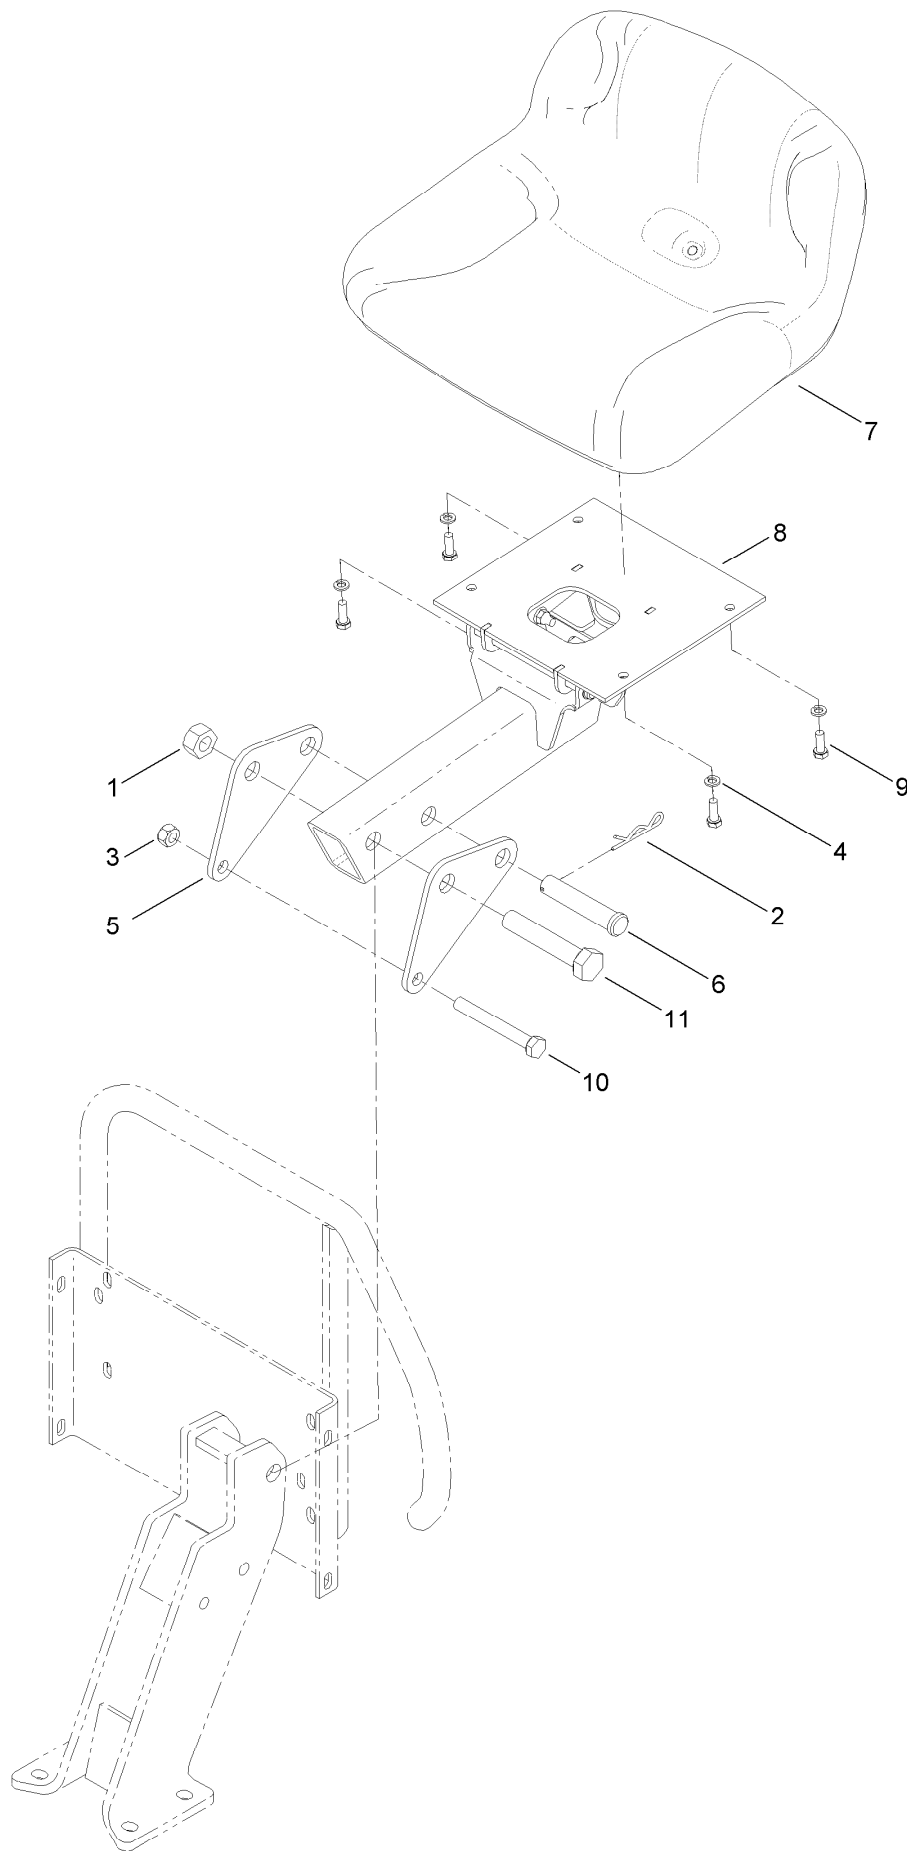

Seat and Post Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-7252	1	Nut-Lock	7	AU116536	1	Seat-Black, Low-Back
2	AU136-164	1	Pin-Hair Cotter, Int	8	AU128531	1	Seat Post Kit
3	AU230-4218	1	Nut-Hex	9	AU426-514	4	Bolt
4	3253-4	4	Washer-Lock	10	AU426-864	1	Screw-HH
5	AU102292-03	2	Plate-Seat Mounting	11	AU426-1264	1	Bolt
6	AU102336	1	Pin-Mount, Seat				


Seat Post Kit Assembly No. AU128531

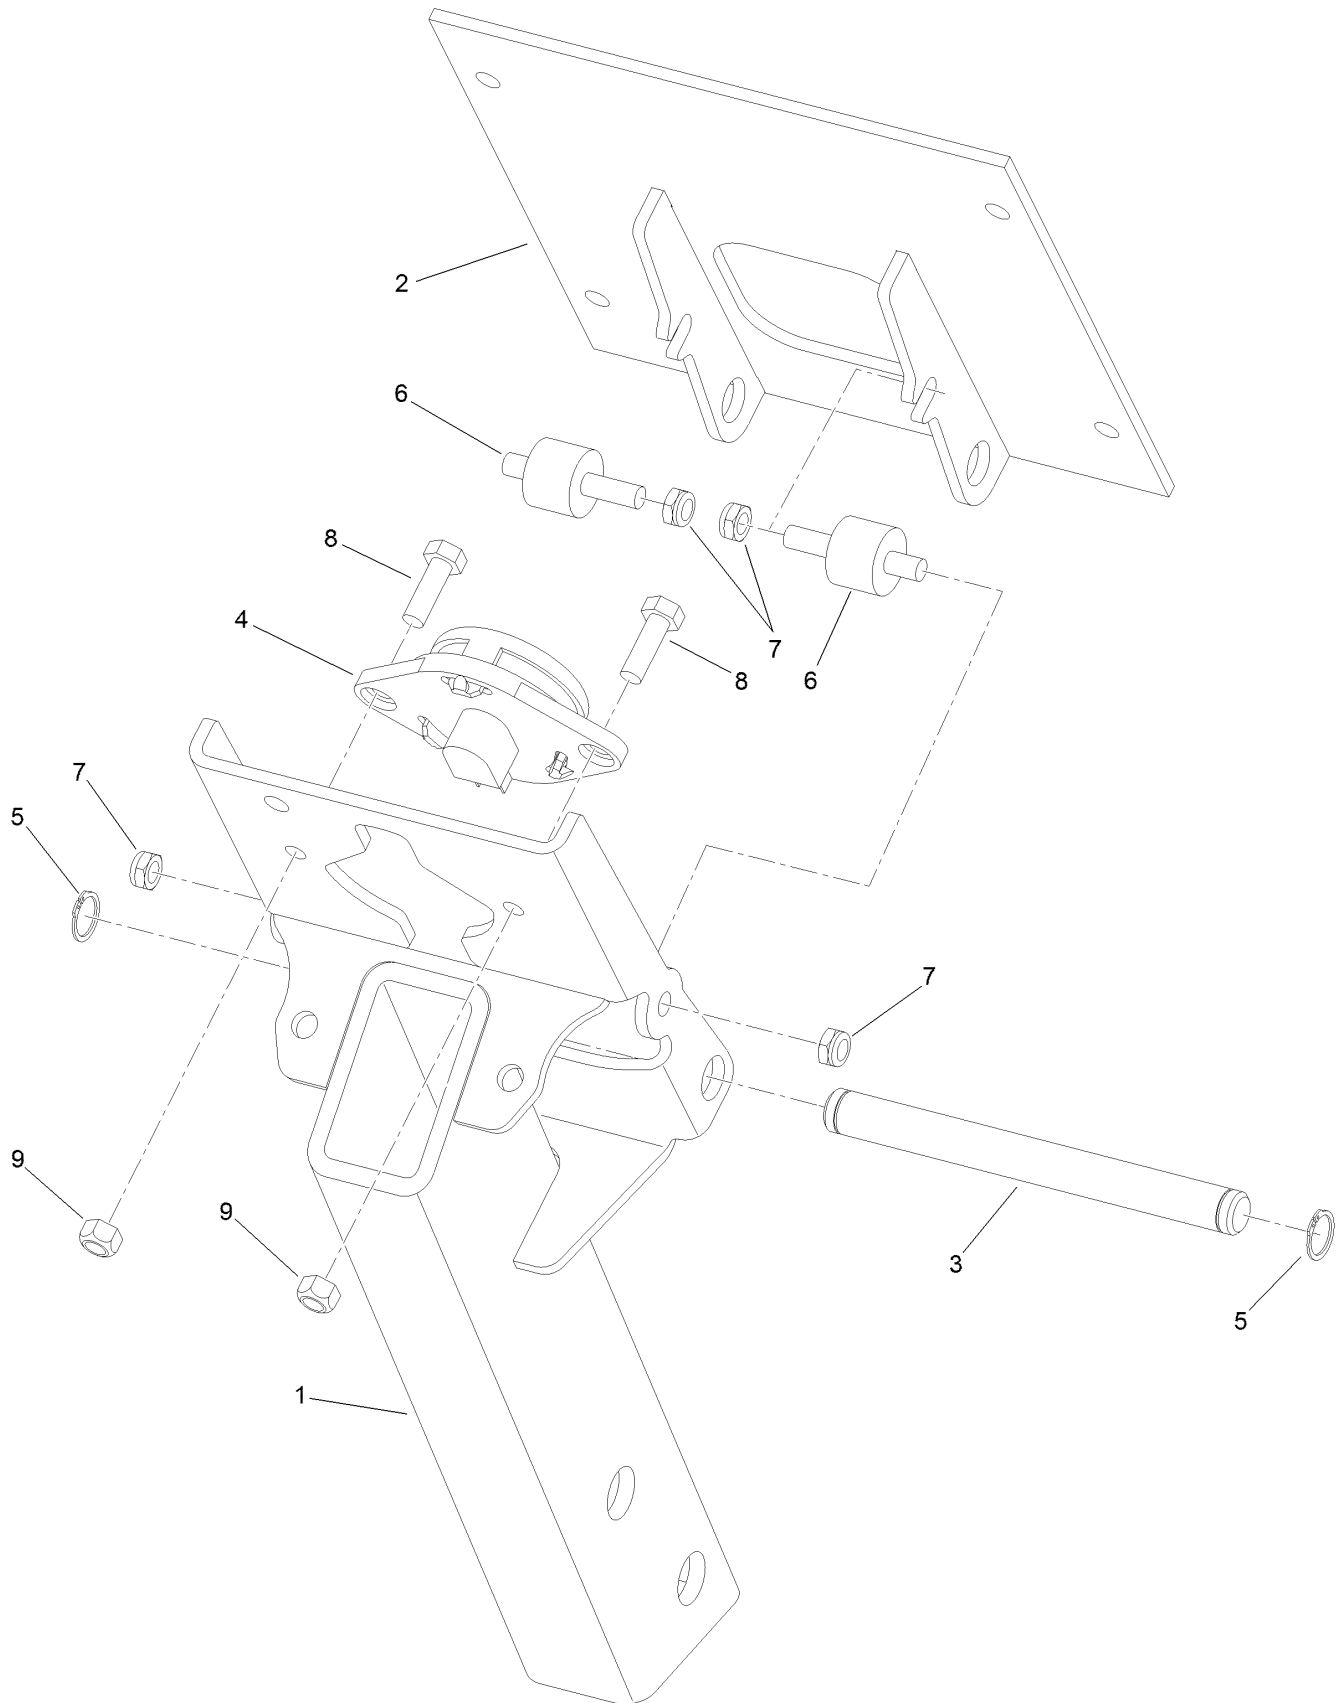

Seat Post Kit Assembly No. AU128531 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU128532-03	1	Post-Seat	6	AUH359216	2	Mount-Radiator
2	AU128546-03	1	Pan-Seat	7	3296-47	4	Nut-Lock, NI
3	AUH434680	1	Pin-Pivot	8	33114-025	2	Screw-HH
4	112-6566	1	Switch-Seat	9	33024-00	2	Nut-Lock, NI
5	32120-64	2	Ring-Snap, External				


Right and Left Mounting Assembly

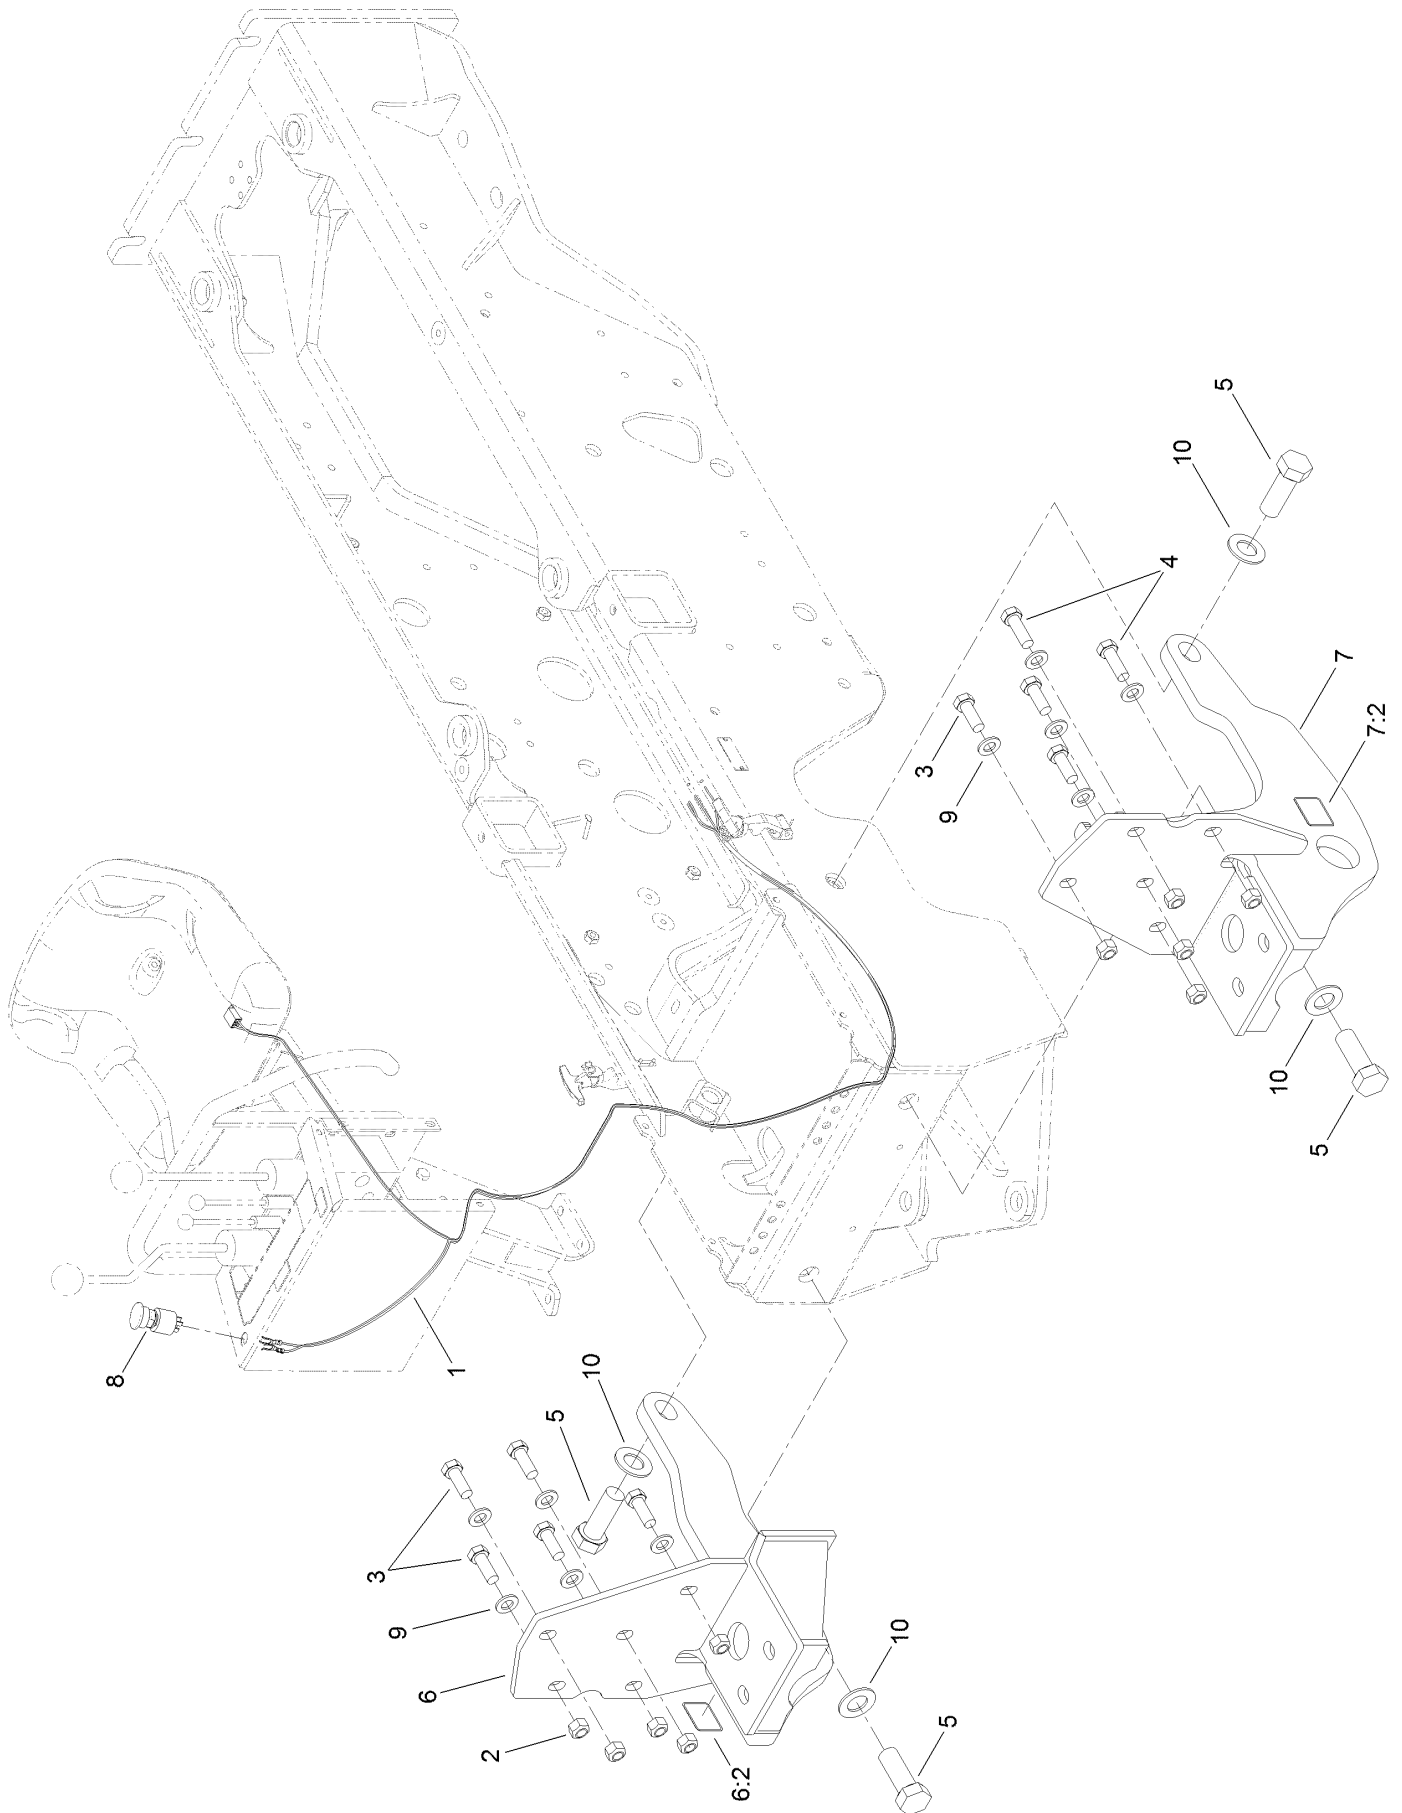

Right and Left Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-0155	1	Harness-Wire	6:2	125-6694	1	Decal-Tie Down
2	120-7252	10	Nut-Lock	7	127-1271	1	LH Mounting Bracket ASM
3	AU426-1232	8	Bolt	7:2	125-6694	1	Decal-Tie Down
4	AU426-1236	2	Screw-HH	8	AU445945A1	1	Button-E-Stop
5	AU426-2056	4	Bolt	9	AUH426817	10	Washer-Flat
6	127-1270	1	RH Mounting Bracket ASM	10	AUH426858	4	Washer


Handrail and Walkway Assembly

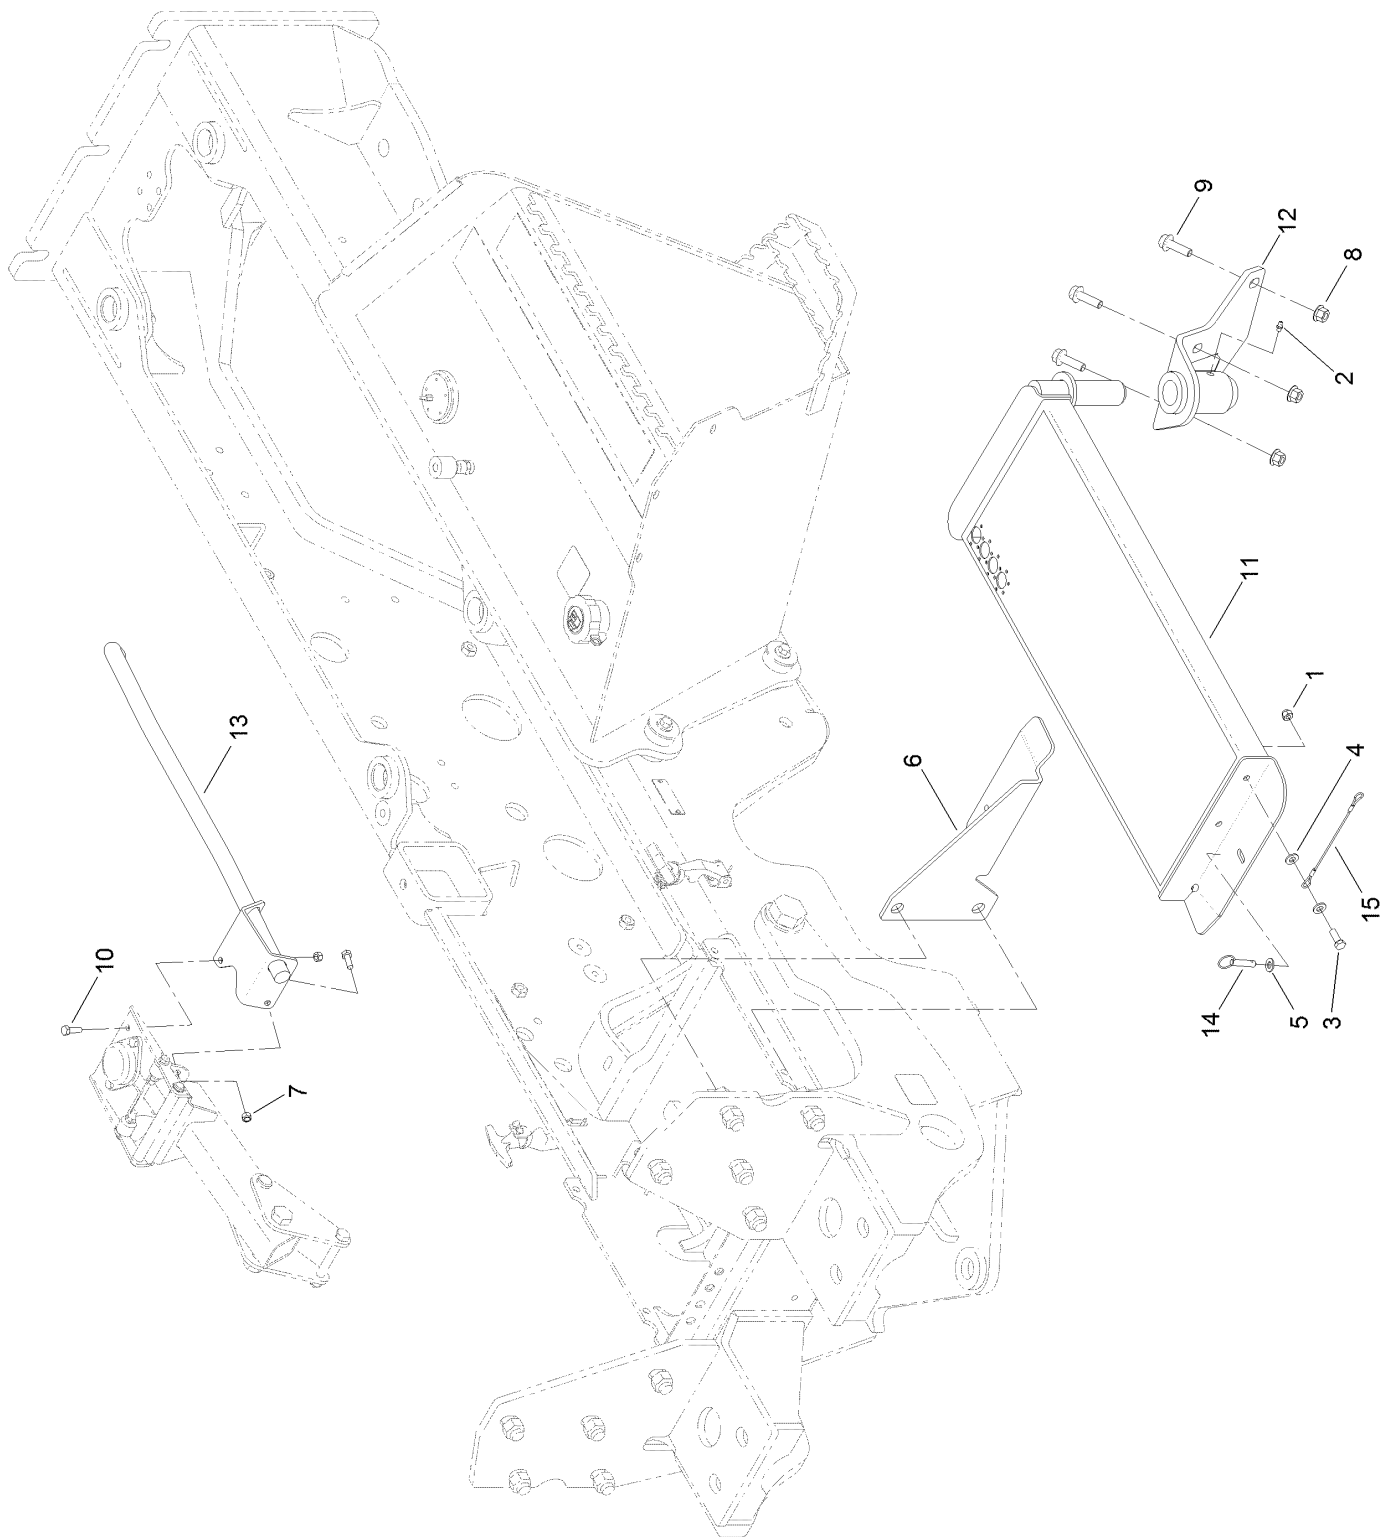

Handrail and Walkway Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	97-1204	1	Nut-Hex	9	AU100830	3	Screw
2	302-57	1	Fitting-Grease	10	33114-025	2	Screw-HH
3	AU426-616	1	Screw-HH	11	AU125300-03	1	Walkway-Backhoe
4	AU496-21041	2	Washer-Flat	12	127-1274-03	1	Mounting-Bracket, Walkway
5	3256-24	1	Washer-Flat	13	AU128738-03	1	Handrail-Backhoe
6	AU116558A1-03	1	Bracket-Support, Walkway	14	AUD94535	1	Pin-Cotterless
7	33024-00	2	Nut-Lock, NI	15	AUL78786	1	Retainer-Rope, Wire
8	115-1115	3	Nut-Lock, HHF				

Stabilizer Assembly

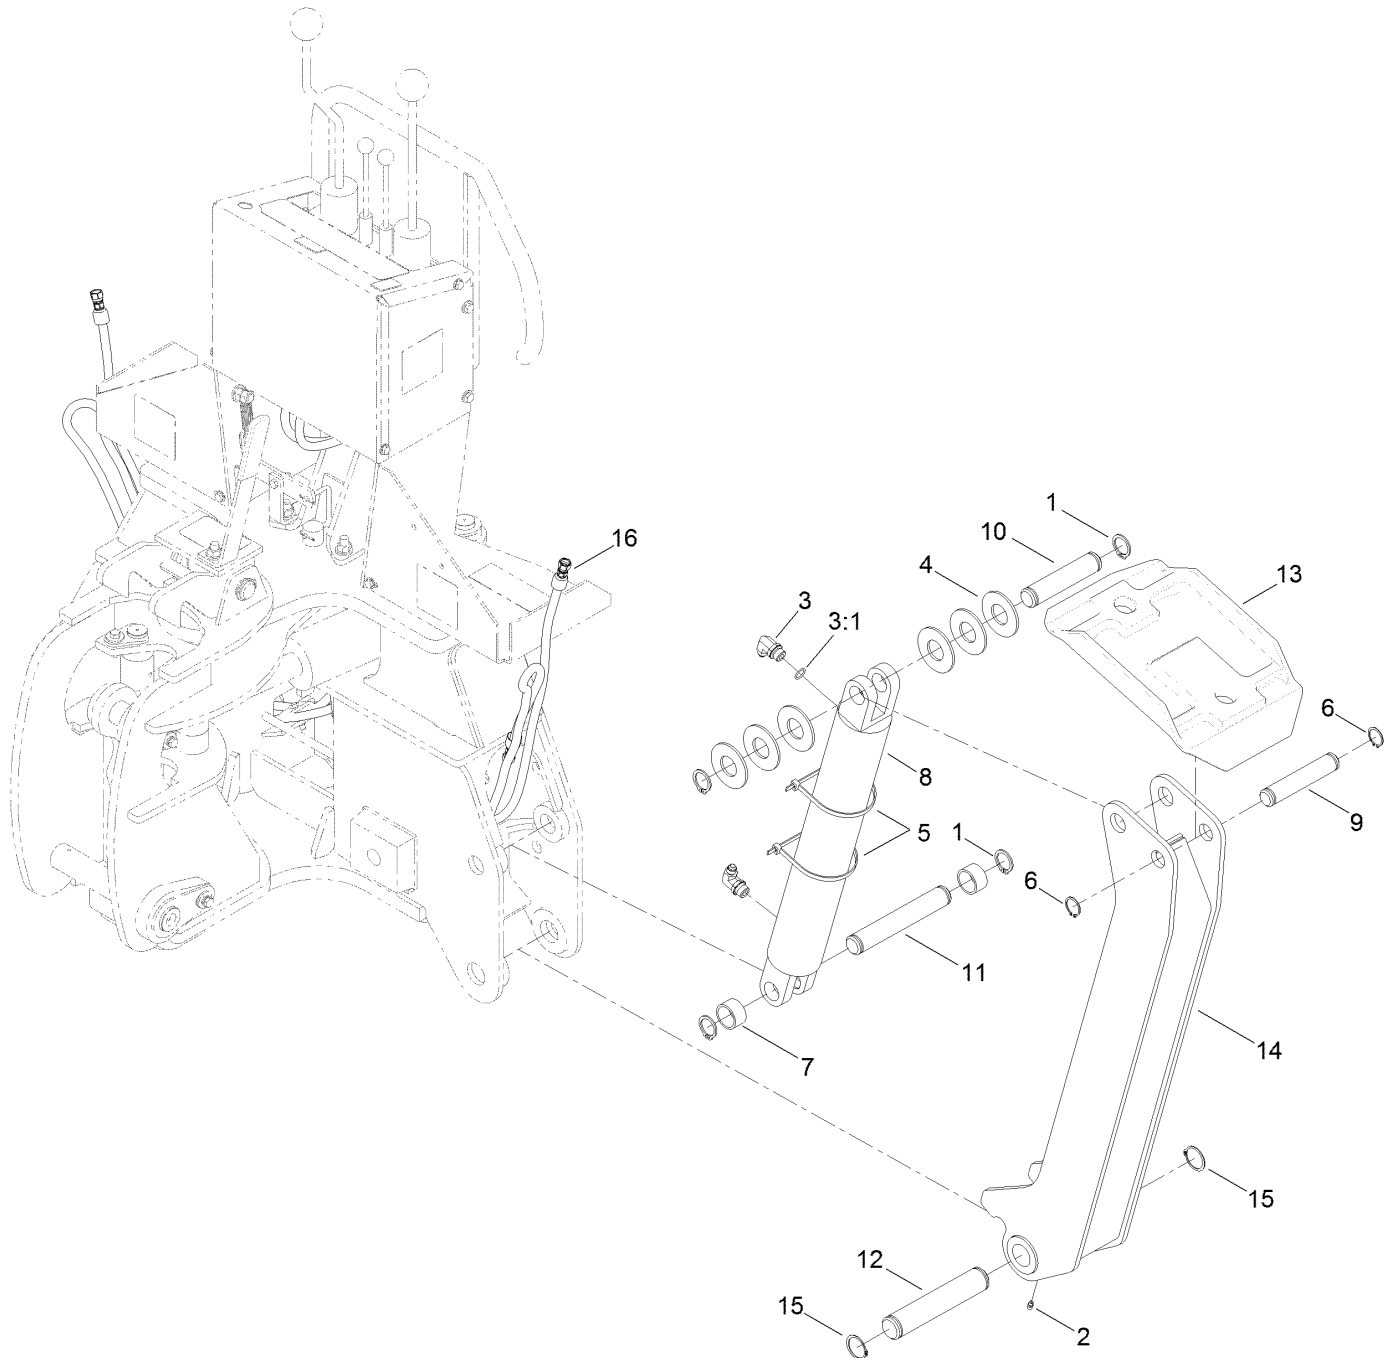


Stabilizer Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	32151-77	8	Ring-Retaining, External	10	AUH434380	2	Pin-Stabilizer (Cylinder Rod End)
2	302-57	2	Fitting-Grease	11	AUH434381	2	Pin-Stabilizer Cylinder To Arm
3	353-537	4	Fitting-Elbow, 90 DEG	12	AUH434382	2	Pin-Stabilizer Arm
3:1	237-79	1	O-Ring ●	13	AUH434430-03	2	Pad-Stabilizer
4	AU495-21138	12	Washer-Flat (Hardened)	14	AUH674650-03	2	Stabilizer
5	3334-945	4	Tie-Cable	15	AUD25279	4	Ring
6	100-6785	4	Ring-Retaining	16	127-1250	4	Hose ASM
7	AU103502A1	4	Bushing				
8	AU123115	2	HYD Cylinder ASM				
9	AUH434379	2	Pin (Stabilizer Pad End)				

● Not illustrated

Hydraulic Cylinder Assembly No. AU123115

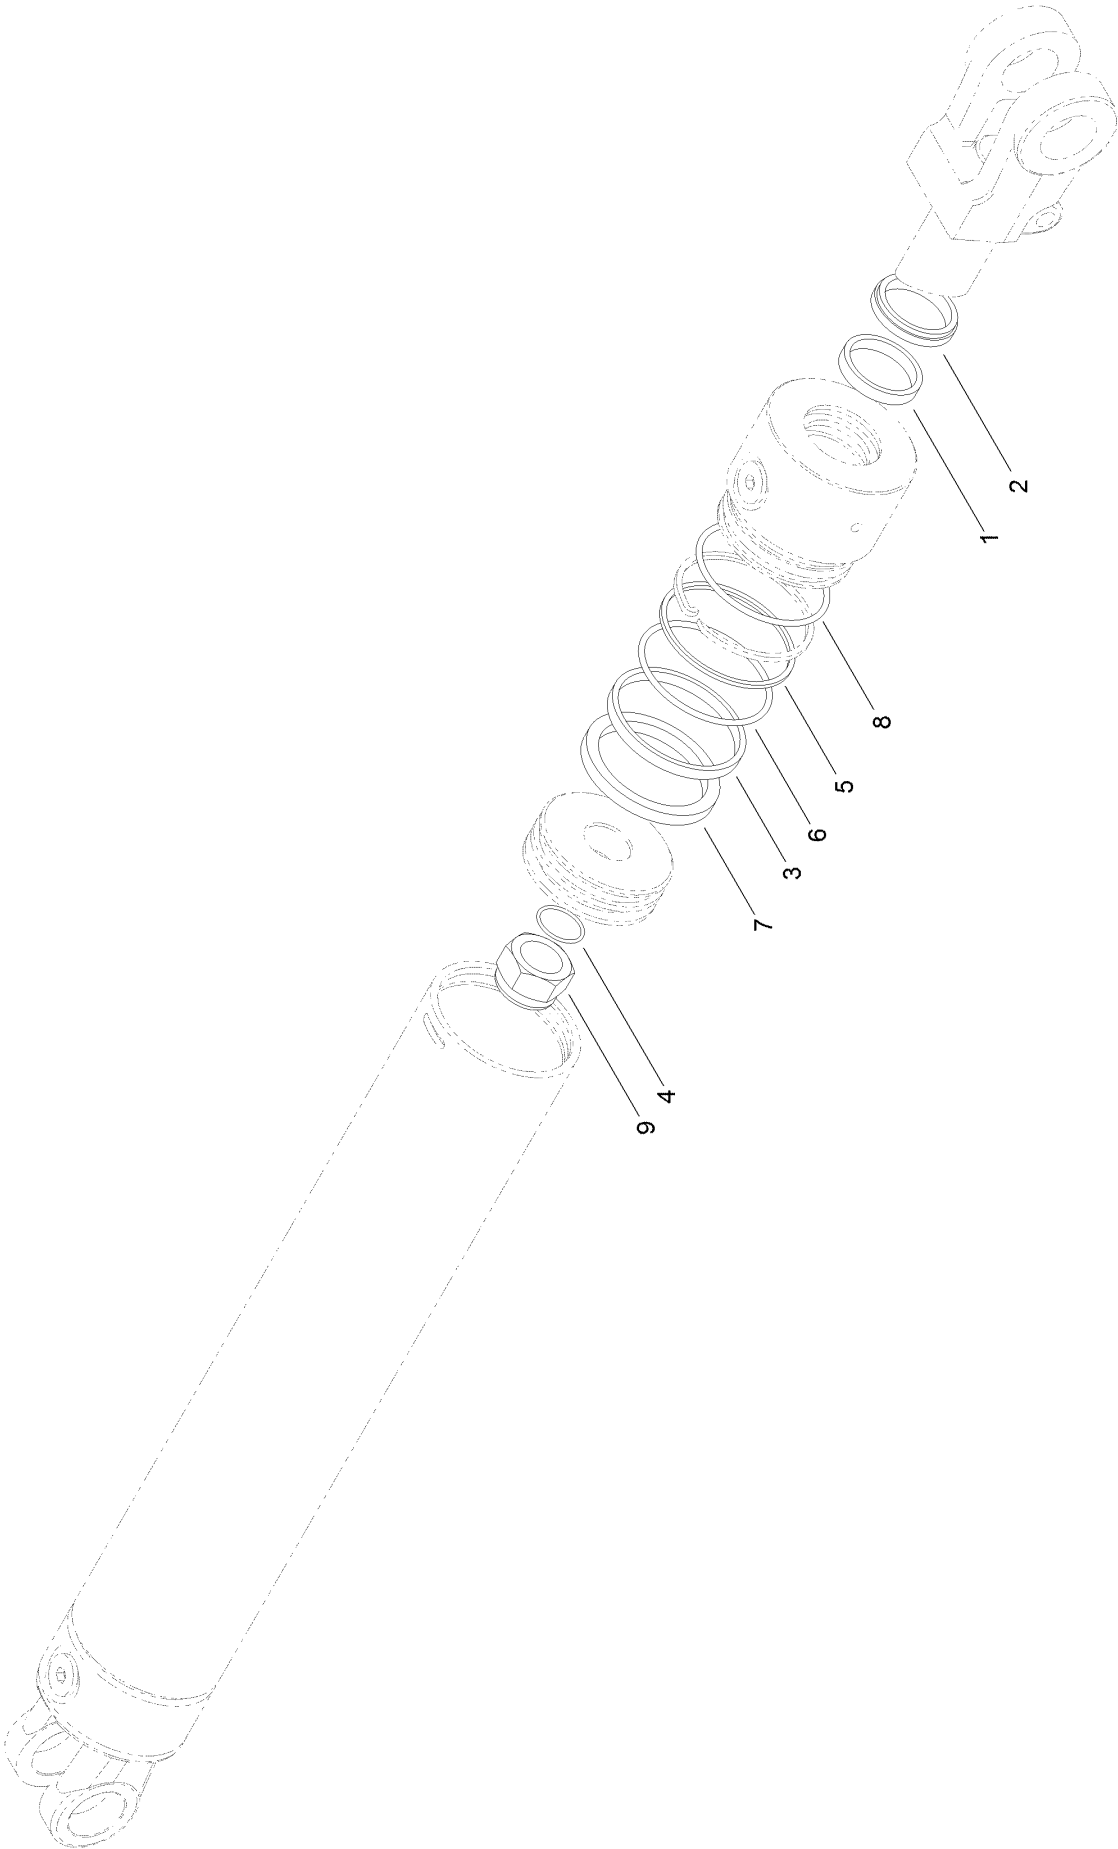

Hydraulic Cylinder Assembly No. AU123115 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU123149	1	Seal-Rod
2	AU123148	1	Seal-Wiper
3	AU123147	1	Seal-Piston
4	AU123146	1	O-Ring
5	AU123145	1	Ring-Backup

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	AU123144	1	O-Ring
7	AU123143	1	Ring-Wear, Piston
8	AU123142	1	O-Ring
9	AU122531	1	Nut-Cylinder Piston

Attachments and Accessories

For 25432 Heavy Duty Backhoe 125 RT600 Traction Unit

Product Name	Model/Part
Backhoe Drive Release Kit (Tow Valve Kit)	25433
Backhoe Drive Release Kit (Tow Valve Kit)	25433E
Bucket-Trenching, 18in.....	AUH674116-03

Notes:



Count on it.