



**Count on it.**

Form No. 3432-386 Rev B

# Parts Catalog

## Power Max® 826 OXE Snowthrower

Model No. 37799—Serial No. 405866400 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

 
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                                    |    |
|----------------------------------------------------|----|
| Main Frame and Auger Housing Assembly .....        | 4  |
| Pulley and Bellcrank Assembly .....                | 6  |
| Impeller Drive Assembly .....                      | 8  |
| Drive Assembly .....                               | 10 |
| Tire and Drive Assembly .....                      | 12 |
| Gearbox, Auger and Impeller Assembly .....         | 14 |
| 26 Inch Auger Gearcase Assembly No. 119-7641 ..... | 16 |
| Impeller Assembly .....                            | 18 |
| Engine Assembly .....                              | 20 |
| Fuel System and Carburetor Assembly .....          | 22 |
| Intake and Exhaust Assembly .....                  | 24 |
| Ignition and Electrical Assembly .....             | 26 |
| Crankcase Assembly .....                           | 28 |
| Governor Assembly .....                            | 30 |
| Piston and Head Assembly .....                     | 32 |
| Blower Housing and Shrouds Assembly .....          | 34 |
| Engine Decal Assembly .....                        | 36 |
| Chute Assembly .....                               | 38 |
| Chute Control Assembly .....                       | 40 |
| Handle Assembly .....                              | 42 |
| Control Assembly .....                             | 44 |
| Attachments and Accessories .....                  | 46 |


# Main Frame and Auger Housing Assembly

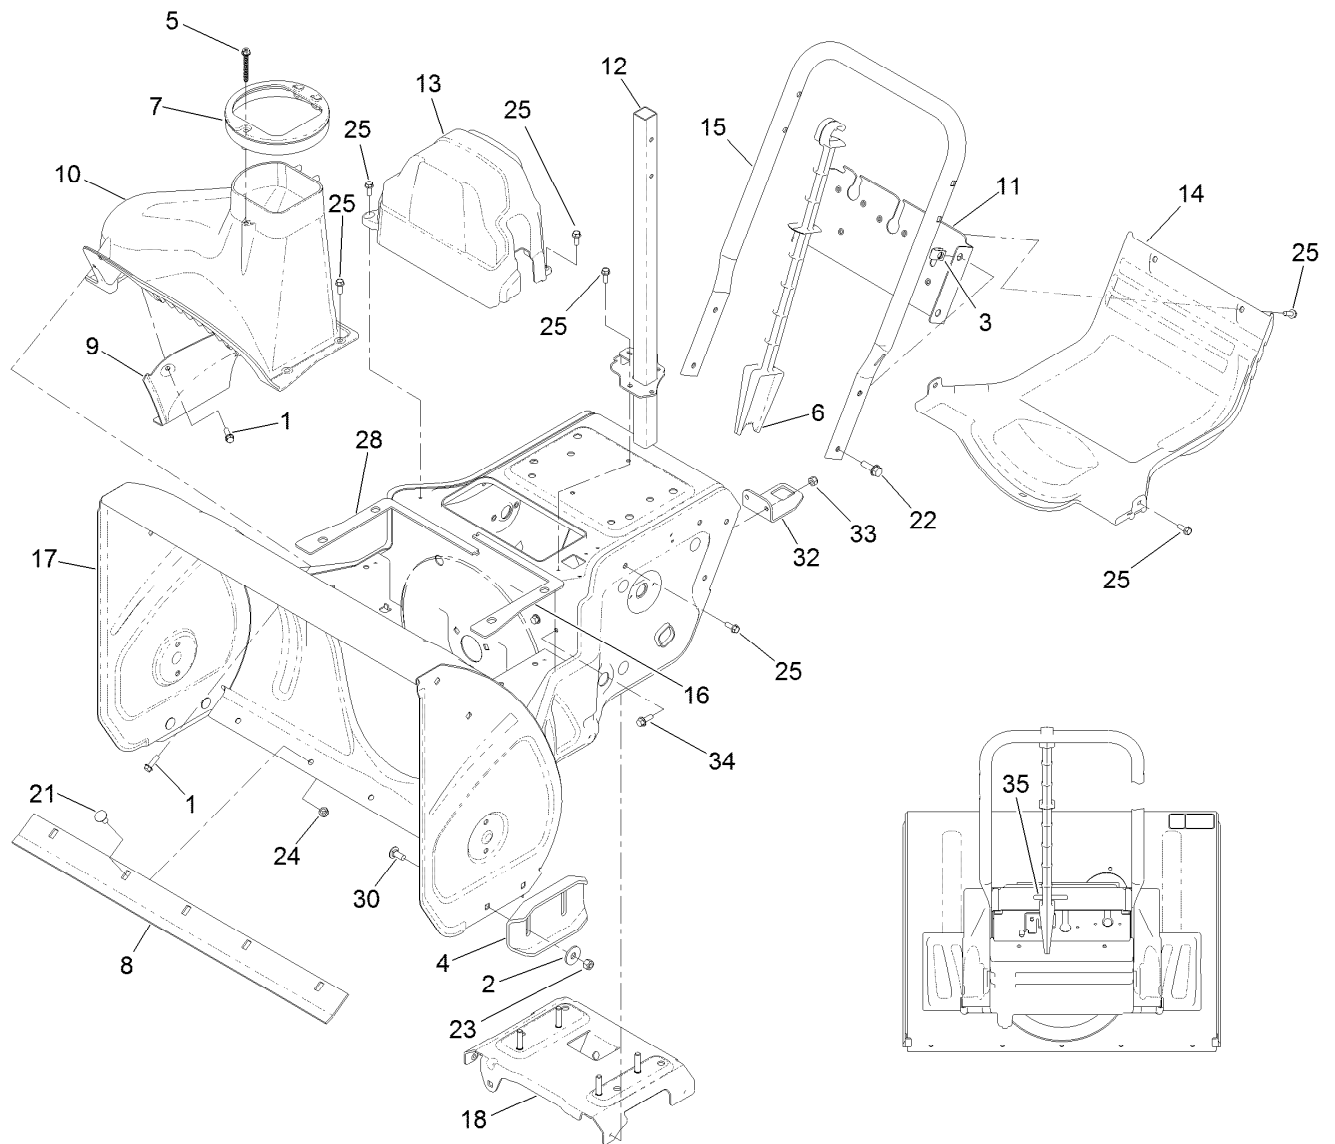

## Main Frame and Auger Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|---------------------|
| 1           | 46-8091            | 6           | Screw-HWH           | 16          | 120-7181           | 1           | Seal-Housing, LH    |
| 2           | 52-2861            | 4           | Washer              | 17          | 139-3691           | 1           | Frame ASM           |
| 3           | 94-2413            | 4           | Nut-U               | 18          | 136-7187           | 1           | Brace-Frame         |
| 4           | 106-4588-01        | 2           | Skid                | 21          | 3230-18            | 5           | Screw-CARR          |
| 5           | 114-3751           | 1           | Screw-HWH, Plastite | 22          | 3234-29            | 4           | Screw-HHF           |
| 6           | 121-6833           | 1           | Stick-Cleanout      | 23          | 3296-29            | 4           | Nut-Lock, NI        |
| 7           | 138-3608           | 1           | Guide-Chute         | 24          | 3296-47            | 5           | Nut-Lock, NI        |
| 8           | 120-3872-01        | 1           | Scraper-26 Inch     | 25          | 32144-85           | 17          | Screw-HWH           |
| 9           | 120-7158-01        | 1           | Cover-Liner         | 28          | 121-6841           | 1           | Seal-Housing, RH    |
| 10          | 120-7159           | 1           | Cover               | 30          | 3230-23            | 4           | Screw-CARR          |
| 11          | 120-7161-01        | 1           | Brace-Frame         | 32          | 137-3410-03        | 1           | Bracket-Post, Chute |
| 12          | 137-3412-03        | 1           | Support-Chute       | 33          | 120-9678           | 2           | Screw-HHF           |
| 13          | 120-7177           | 1           | Cover-Belt          | 34          | 137-3094           | 2           | Nut-Hex             |
| 14          | 120-7178           | 1           | Cover-Lower         | 35          | 133-8061           | 1           | Decal-Warning       |
| 15          | 120-7179-03        | 1           | Handle-Lower        |             |                    |             |                     |

 
# Pulley and Bellcrank Assembly

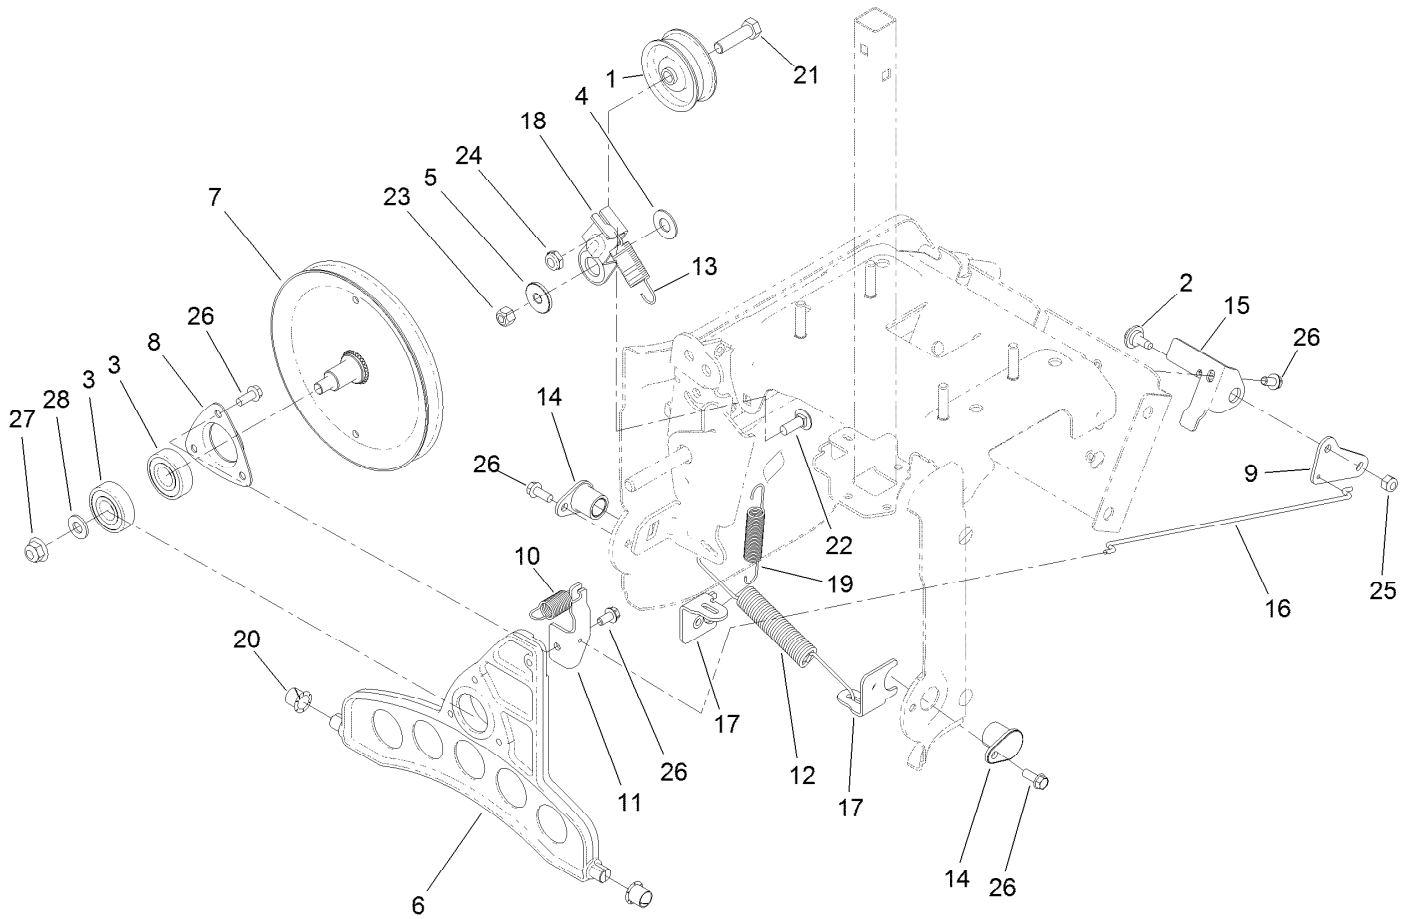

## Pulley and Bellcrank Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 3-4244             | 1           | Pulley-Idler            | 15          | 120-7165-03        | 1           | Bracket-Bellcrank      |
| 2           | 92-9698            | 1           | Screw-Shoulder          | 16          | 136-7155           | 1           | Link-Drive             |
| 3           | 38-7820            | 2           | Bearing-Ball            | 17          | 120-9271           | 2           | Bracket-Anchor, Spring |
| 4           | 25-5640            | 1           | Washer                  | 18          | 136-7159           | 1           | Arm-Idler, Traction    |
| 5           | 117-7711           | 1           | Bushing-Idler           | 19          | 120-9275           | 1           | Spring-Extension       |
| 6           | 119-7645           | 1           | Plate-Wheel, Friction   | 20          | 256-257            | 2           | Bushing-Nyliner        |
| 7           | 136-7152           | 1           | Traction Pulley ASM     | 21          | 323-29             | 1           | Screw-HH               |
| 8           | 136-7124           | 1           | Retainer-Bearing        | 22          | 3230-10            | 1           | Bolt-CARR              |
| 9           | 119-7670-03        | 1           | Bellcrank-Drive         | 23          | 3296-29            | 1           | Nut-Lock, NI           |
| 10          | 136-7153           | 1           | Spring-Extension        | 24          | 3296-59            | 1           | Nut-Lock, NI           |
| 11          | 119-7679           | 1           | Bracket-Plate, Traction | 25          | 3296-73            | 1           | Nut-Lock, NI           |
| 12          | 120-3883           | 1           | Spring-Extension        | 26          | 32144-85           | 7           | Screw-HWH              |
| 13          | 137-3435           | 1           | Spring-Extension        | 27          | 104-8301           | 1           | Nut-HF, NI             |
| 14          | 120-7156           | 2           | Bushing-Plate, Traction | 28          | 3256-24            | 1           | Washer-Flat            |

 
# Impeller Drive Assembly

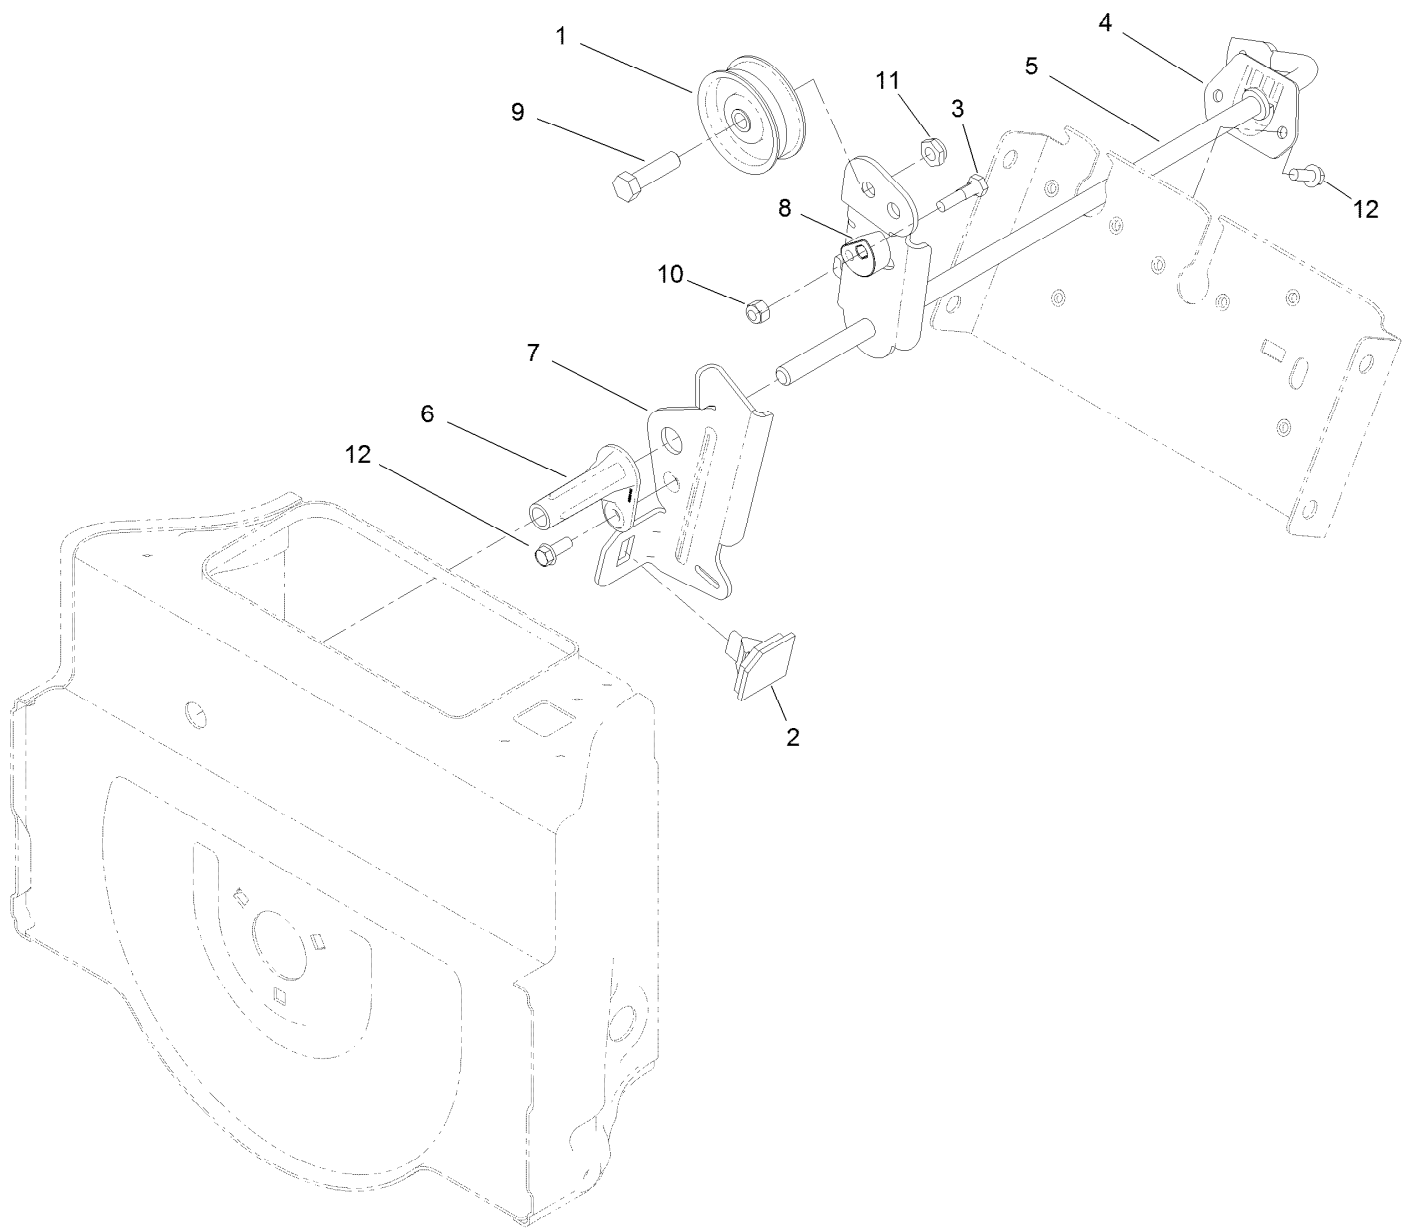

## Impeller Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 3-4244             | 1           | Pulley-Idler          | 7           | 120-9257-03        | 1           | Arm-Brake, Impeller       |
| 2           | 66-8060            | 1           | Pad-Brake             | 8           | 120-9276           | 1           | Eccentric-Brake, Impeller |
| 3           | 136-8674           | 1           | Bolt-Pivot, Eccentric | 9           | 323-29             | 1           | Screw-HH                  |
| 4           | 120-7167           | 1           | Bushing-Rod, Clutch   | 10          | 3296-42            | 1           | Nut-Lock, NI              |
| 5           | 120-9254-03        | 1           | Impeller Clutch ASM   | 11          | 3296-59            | 1           | Nut-Lock, NI              |
| 6           | 120-9256           | 1           | Pivot-Brake, Impeller | 12          | 32144-85           | 3           | Screw-HWH                 |

 
# Drive Assembly

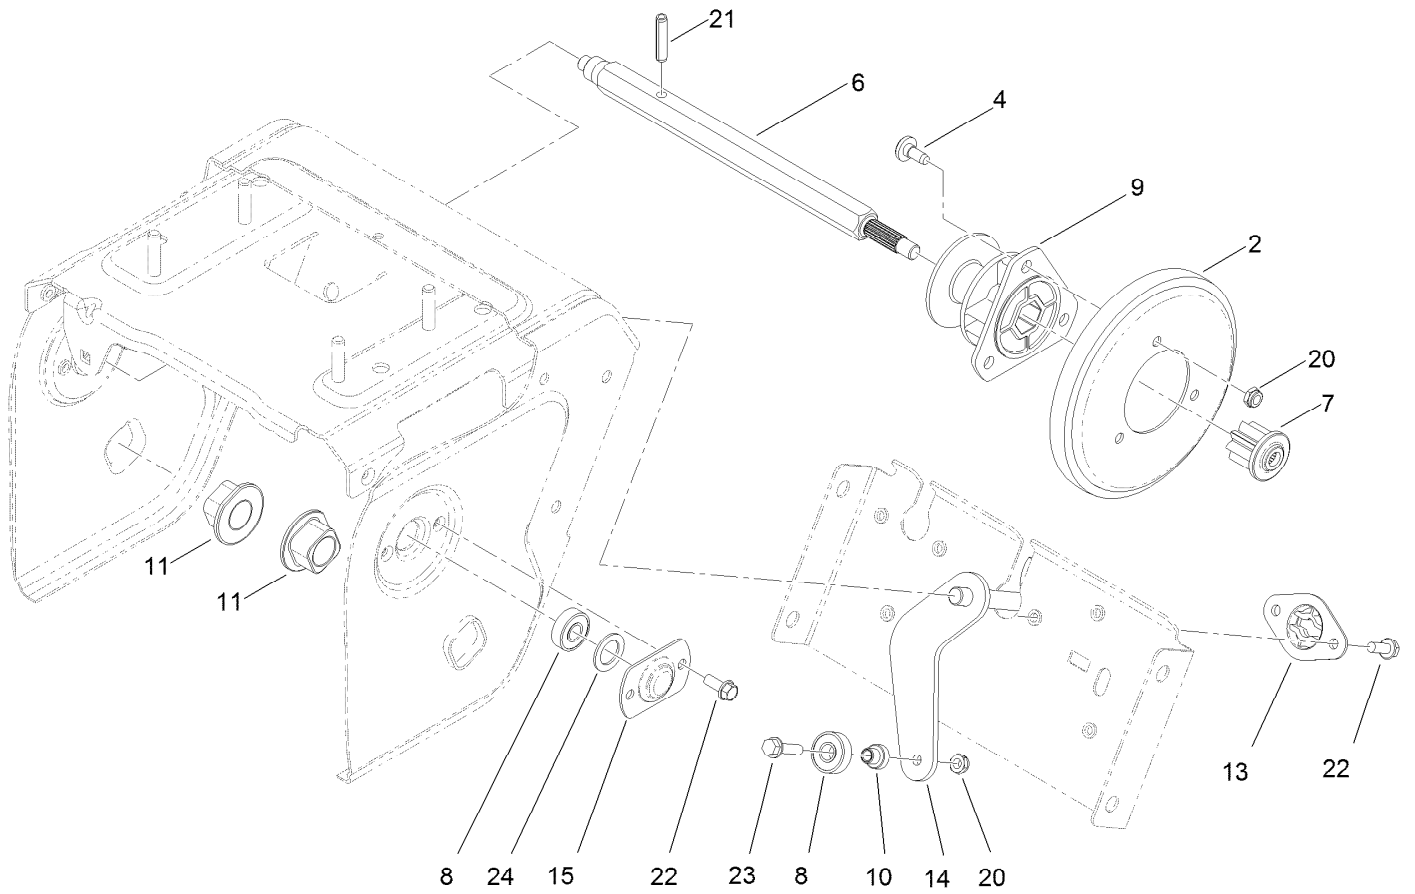

## Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|-----------------------|
| 2           | 119-1567           | 1           | Wheel-Friction       | 13          | 120-7191           | 1           | Retainer-Plate, Shift |
| 4           | 120-7950           | 3           | Screw                | 14          | 120-7193-03        | 1           | Shift Plate ASM       |
| 6           | 119-7615           | 1           | Shaft-Hex            | 15          | 136-7158           | 2           | Retainer-Bearing      |
| 7           | 119-7616           | 1           | Gear-Pinion, 8 Tooth | 20          | 3296-56            | 4           | Nut-Lock, NI          |
| 8           | 121-6835           | 3           | Bearing-Ball         | 21          | 32121-9            | 1           | Pin-Roll, Slotted     |
| 9           | 119-7630           | 1           | Trunnion             | 22          | 32144-85           | 6           | Screw-HWH             |
| 10          | 119-7684           | 1           | Spacer-Plate, Shift  | 23          | 32144-86           | 1           | Screw-HWHTF           |
| 11          | 120-7162           | 2           | Bushing-Axle         | 24          | 121-6840           | 2           | Washer-Rubber         |

 
# Tire and Drive Assembly

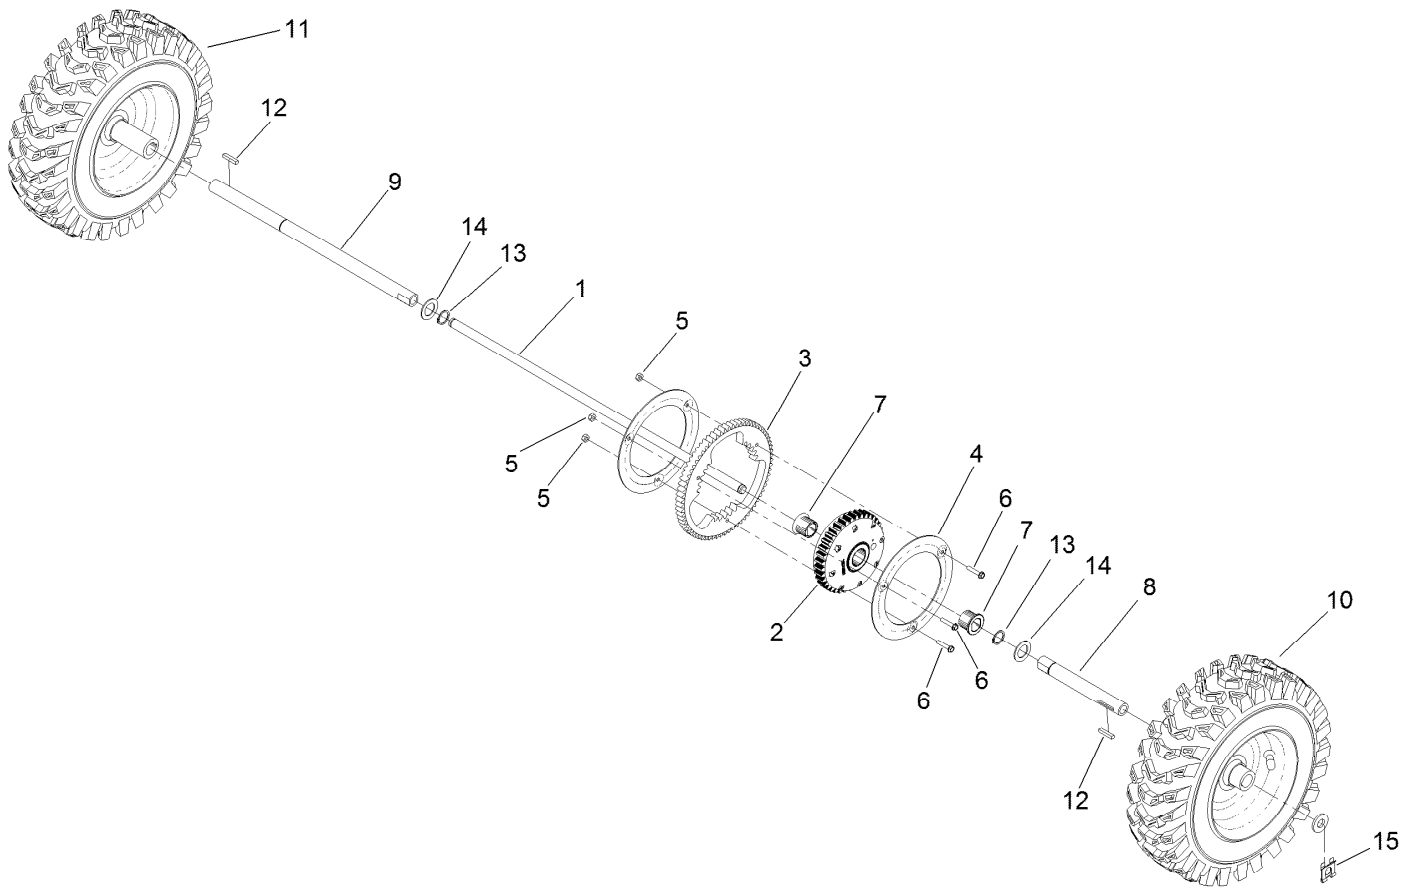

## Tire and Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 130-9789           | 1           | Axle               | 9           | 130-9793           | 1           | Tube-Axle             |
| 2           | 130-9776           | 1           | Transmission       | 10          | 137-3437           | 1           | LH Wheel And Tire ASM |
| 3           | 130-9786           | 1           | Gear-Axle          | 11          | 137-3438           | 1           | RH Wheel And Tire ASM |
| 4           | 130-9798-03        | 2           | Plate-Gear         | 12          | 5-1077             | 2           | Key-Square            |
| 5           | 3296-2             | 3           | Nut-Lock, NI       | 13          | 32120-72           | 2           | Ring-Snap             |
| 6           | 131-6456           | 3           | Screw-HWH          | 14          | 3-8664             | 2           | Washer-Thrust         |
| 7           | 130-9799           | 2           | Gear-Tube, Axle    | 15          | 138-8491           | 2           | Clip-Pin              |
| 8           | 130-9792           | 1           | Tube-Axle          |             |                    |             |                       |
 
# Gearbox, Auger and Impeller Assembly

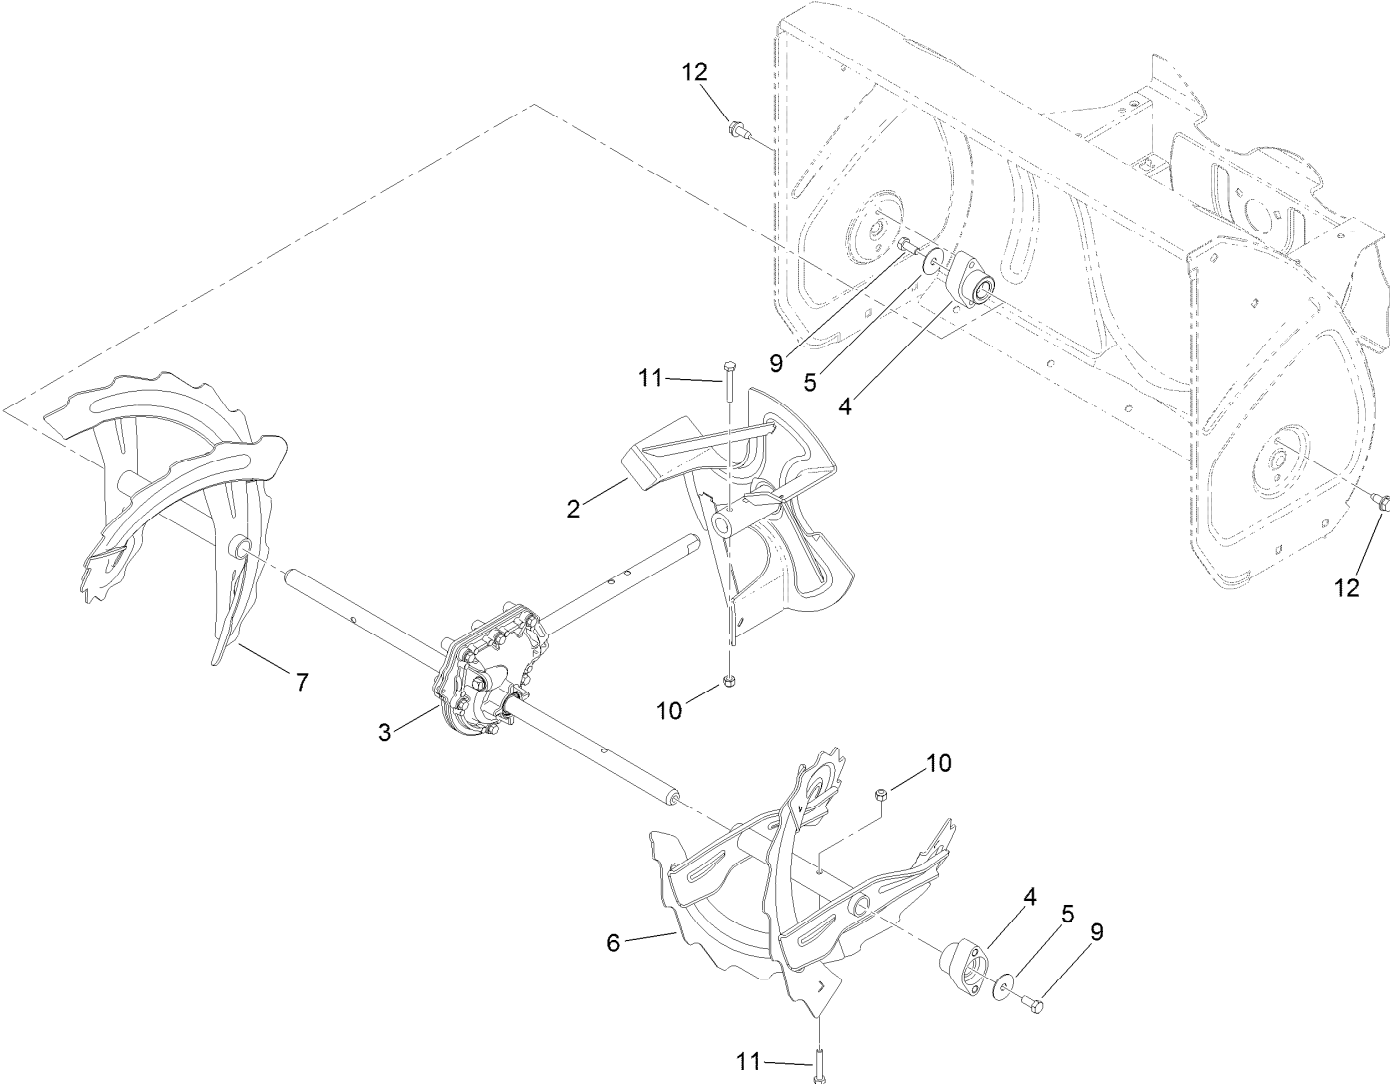


## Gearbox, Auger and Impeller Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 2           | 119-7612-03        | 1           | Impeller ASM       |
| 3           | 119-7641           | 1           | Gearcase ASM       |
| 4           | 120-3860           | 2           | Bearing-Augur      |
| 5           | 120-3862           | 2           | Washer-Thrust      |
| 6           | 120-9287-03        | 1           | LH Auger ASM       |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 7           | 120-9290-03        | 1           | RH Auger ASM       |
| 9           | 322-3              | 2           | Screw-HH           |
| 10          | 3296-42            | 4           | Nut-Lock, NI       |
| 11          | 321-10             | 4           | Screw-HH           |
| 12          | 32144-70           | 4           | Screw-HWHTF        |

 
26 Inch Auger Gearcase Assembly No. 119-7641

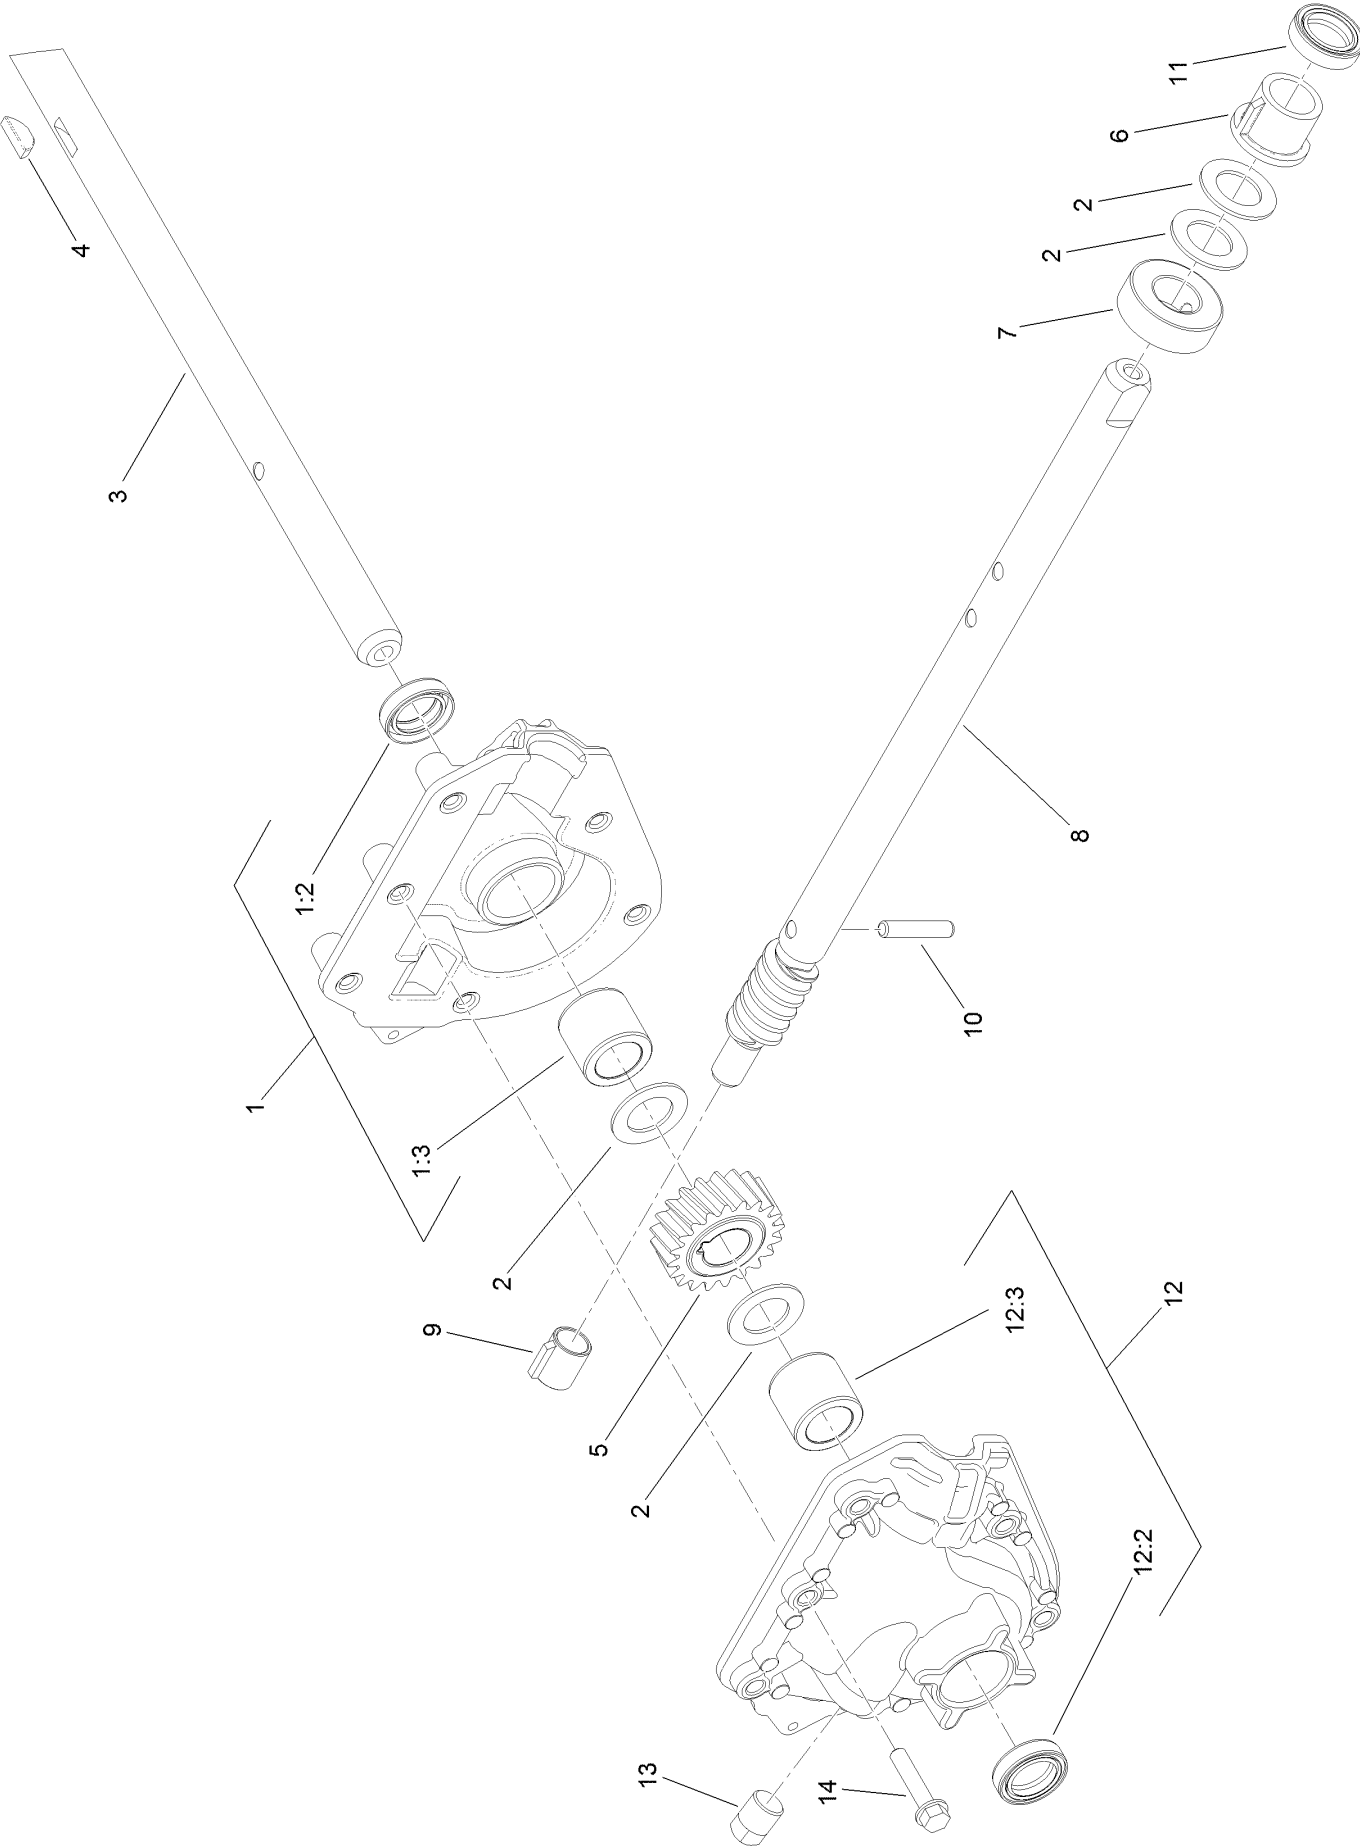

## 26 Inch Auger Gearcase Assembly No. 119-7641 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 121-1209           | 1           | RH Auger Gearcase ASM  | 8           | 121-1234           | 1           | Shaft-Impeller, Rolled |
| 1:2         | 121-6634           | 1           | Seal-Shaft             | 9           | 62-1150            | 1           | Bushing-Worm           |
| 1:3         | 120-9269           | 1           | Bushing-Sleeve         | 10          | 107-8899           | 1           | Pin-Dowel              |
| 2           | 119-7640           | 4           | Washer-Thrust          | 11          | 121-6634           | 1           | Seal-Shaft             |
| 3           | 119-7639           | 1           | Shaft-Output, Auger    | 12          | 121-1210           | 1           | LH Auger Gearcase ASM  |
| 4           | 3257-5             | 1           | Key-Woodruff           | 12:2        | 121-6634           | 1           | Seal-Shaft             |
| 5           | 119-1576           | 1           | Gear-Helical, 20 Tooth | 12:3        | 120-9269           | 1           | Bushing-Sleeve         |
| 6           | 119-7635           | 1           | Bushing-Input          | 13          | 121-6832           | 1           | Plug-Pipe, SQH         |
| 7           | 119-7636           | 1           | Collar-Thrust          | 14          | 108-4862           | 6           | Screw-HWH Thd Roll     |

 
# Impeller Assembly

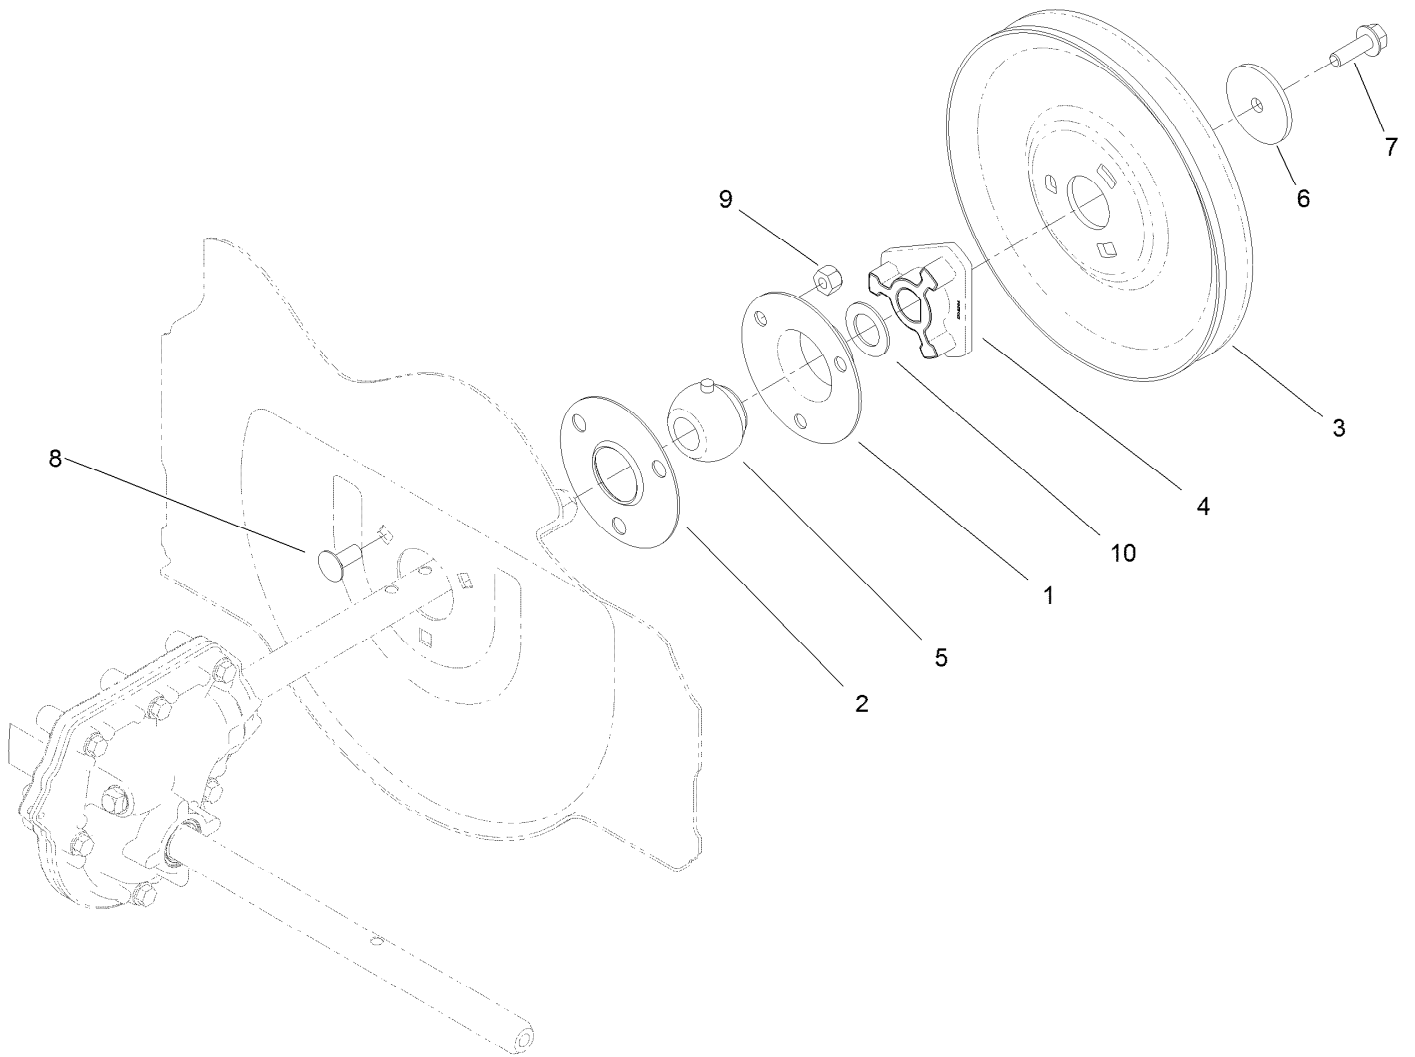

## Impeller Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 26-6110            | 1           | Flange-Cup, Bearing  | 6           | 121-1230           | 1           | Washer-Plain       |
| 2           | 26-6120            | 1           | Flange-Cup, Bearing  | 7           | 115-5142           | 1           | Screw-HHF          |
| 3           | 136-7157           | 1           | Pulley-Impeller      | 8           | 3230-23            | 3           | Screw-CARR         |
| 4           | 120-9264           | 1           | Hub-Impeller, Pulley | 9           | 3296-29            | 3           | Nut-Lock, NI       |
| 5           | 120-9272           | 1           | Bearing              | 10          | 119-7640           | 1           | Washer-Thrust      |

 
# Engine Assembly

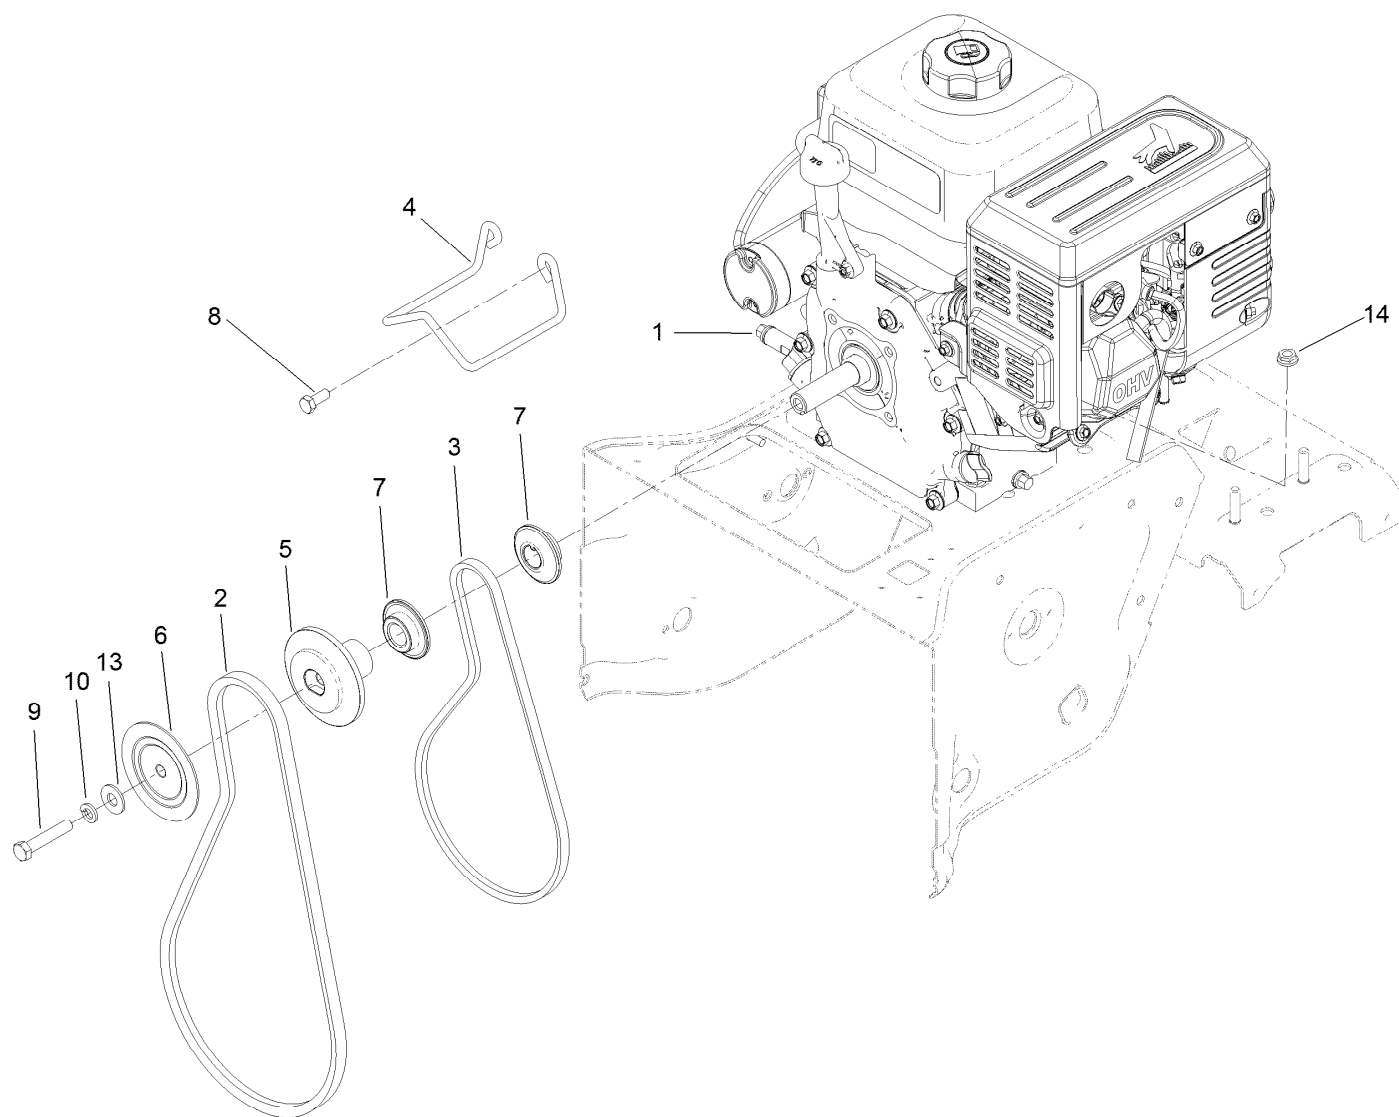

## Engine Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 136-7756           | 1           | Engine-G250Fds-1    | 7           | 137-3400           | 2           | Pulley-Engine, Traction |
| 2           | 120-3892           | 1           | Belt-V              | 8           | 138-0690           | 2           | Screw-HH                |
| 3           | 120-3893           | 1           | Belt-V              | 9           | 120-2302           | 1           | Screw-HH                |
| 4           | 136-7156           | 1           | Guide-Belt          | 10          | 3253-21            | 1           | Washer-Lock             |
| 5           | 120-9283           | 1           | Pulley-Auger, Rear  | 13          | 3256-4             | 1           | Washer-Flat             |
| 6           | 120-9284           | 1           | Pulley-Auger, Front | 14          | 32128-20           | 4           | Nut-HF                  |
 
# Fuel System and Carburetor Assembly

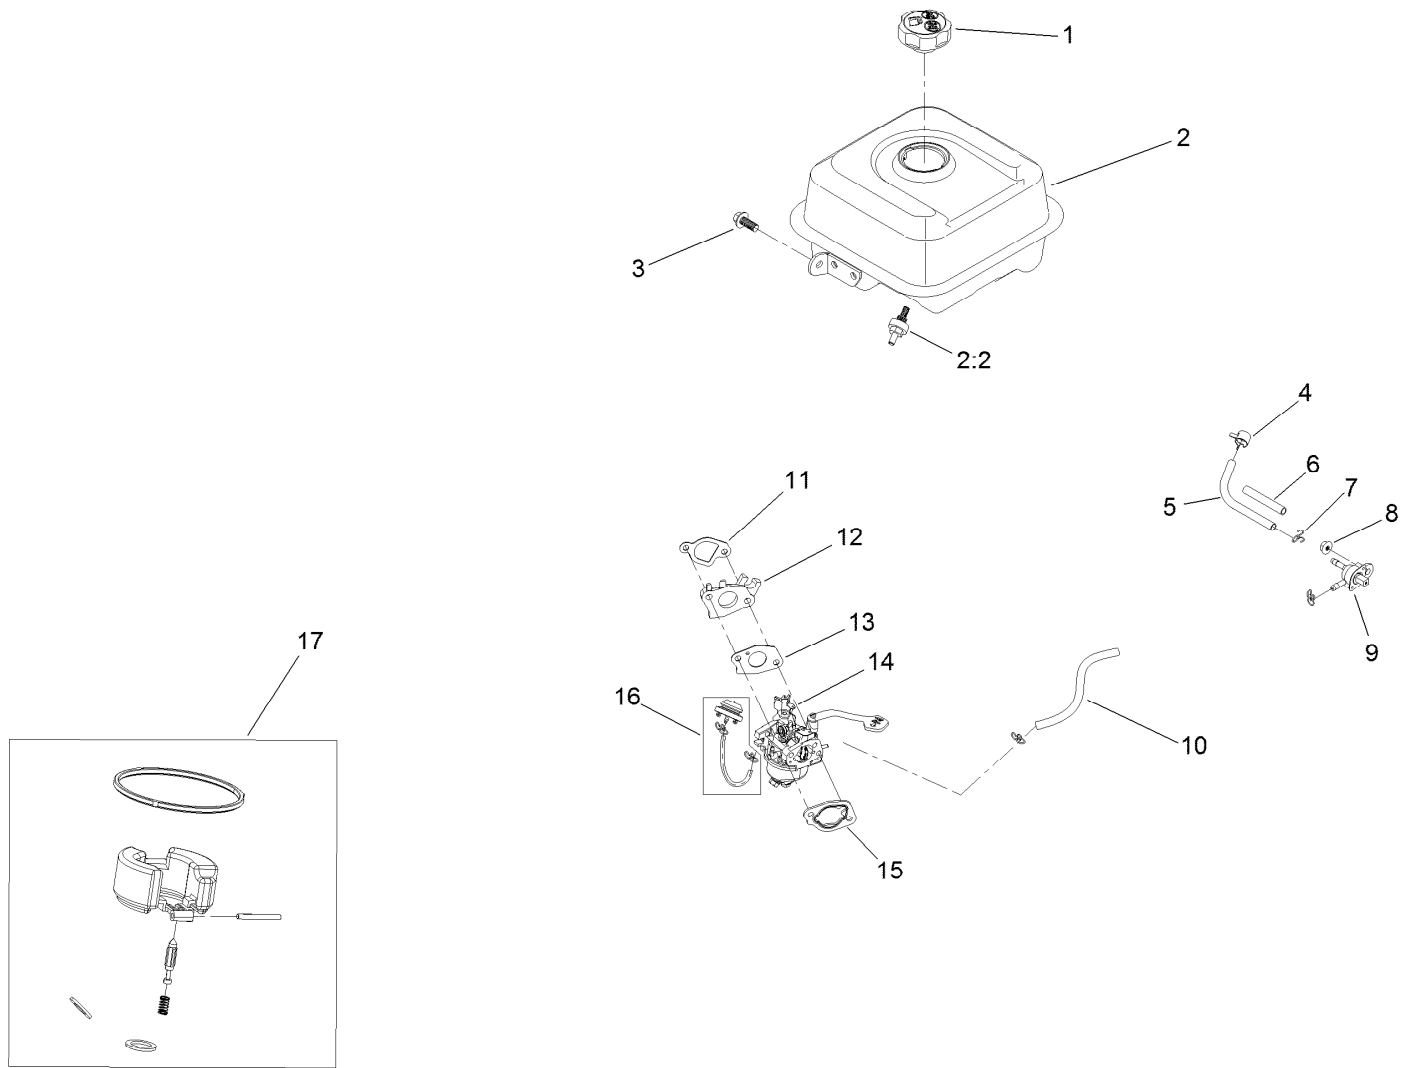


## Fuel System and Carburetor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 133-9823           | 1           | Cap-Fuel                 | 10          | 127-9489           | 1           | Hose-Fuel                 |
| 2           | 133-1553           | 1           | Fuel Tank And Filter ASM | 11          | 133-1531           | 1           | Gasket-Carburetor         |
| 2:2         | 127-9065           | 1           | Filter-Fuel              | 12          | 133-1532           | 1           | Insulator-Carburetor      |
| 3           | 121-0294           | 1           | Screw-HHF                | 13          | 133-1533           | 1           | Gasket-Carburetor         |
| 4           | 127-9120           | 1           | Clamp-Hose               | 14          | 133-1534           | 1           | Carburetor ASM            |
| 5           | 133-1556           | 1           | Hose-Fuel                | 15          | 121-0080           | 1           | Gasket-Carburetor         |
| 6           | 133-9997           | 1           | Sleeve-Abrasion          | 16          | 127-9079           | 1           | Primer Kit                |
| 7           | 121-0087           | 3           | Clamp-Hose               | 17          | 127-9395           | 1           | Internal Carb Service Kit |
| 8           | 120-4236           | 1           | Nut-Flange               | 99          | 133-9937           | 1           | High Altitude Kit ●       |
| 9           | 127-9117           | 1           | Valve-Fuel               |             |                    |             |                           |

● Not illustrated

 
# Intake and Exhaust Assembly

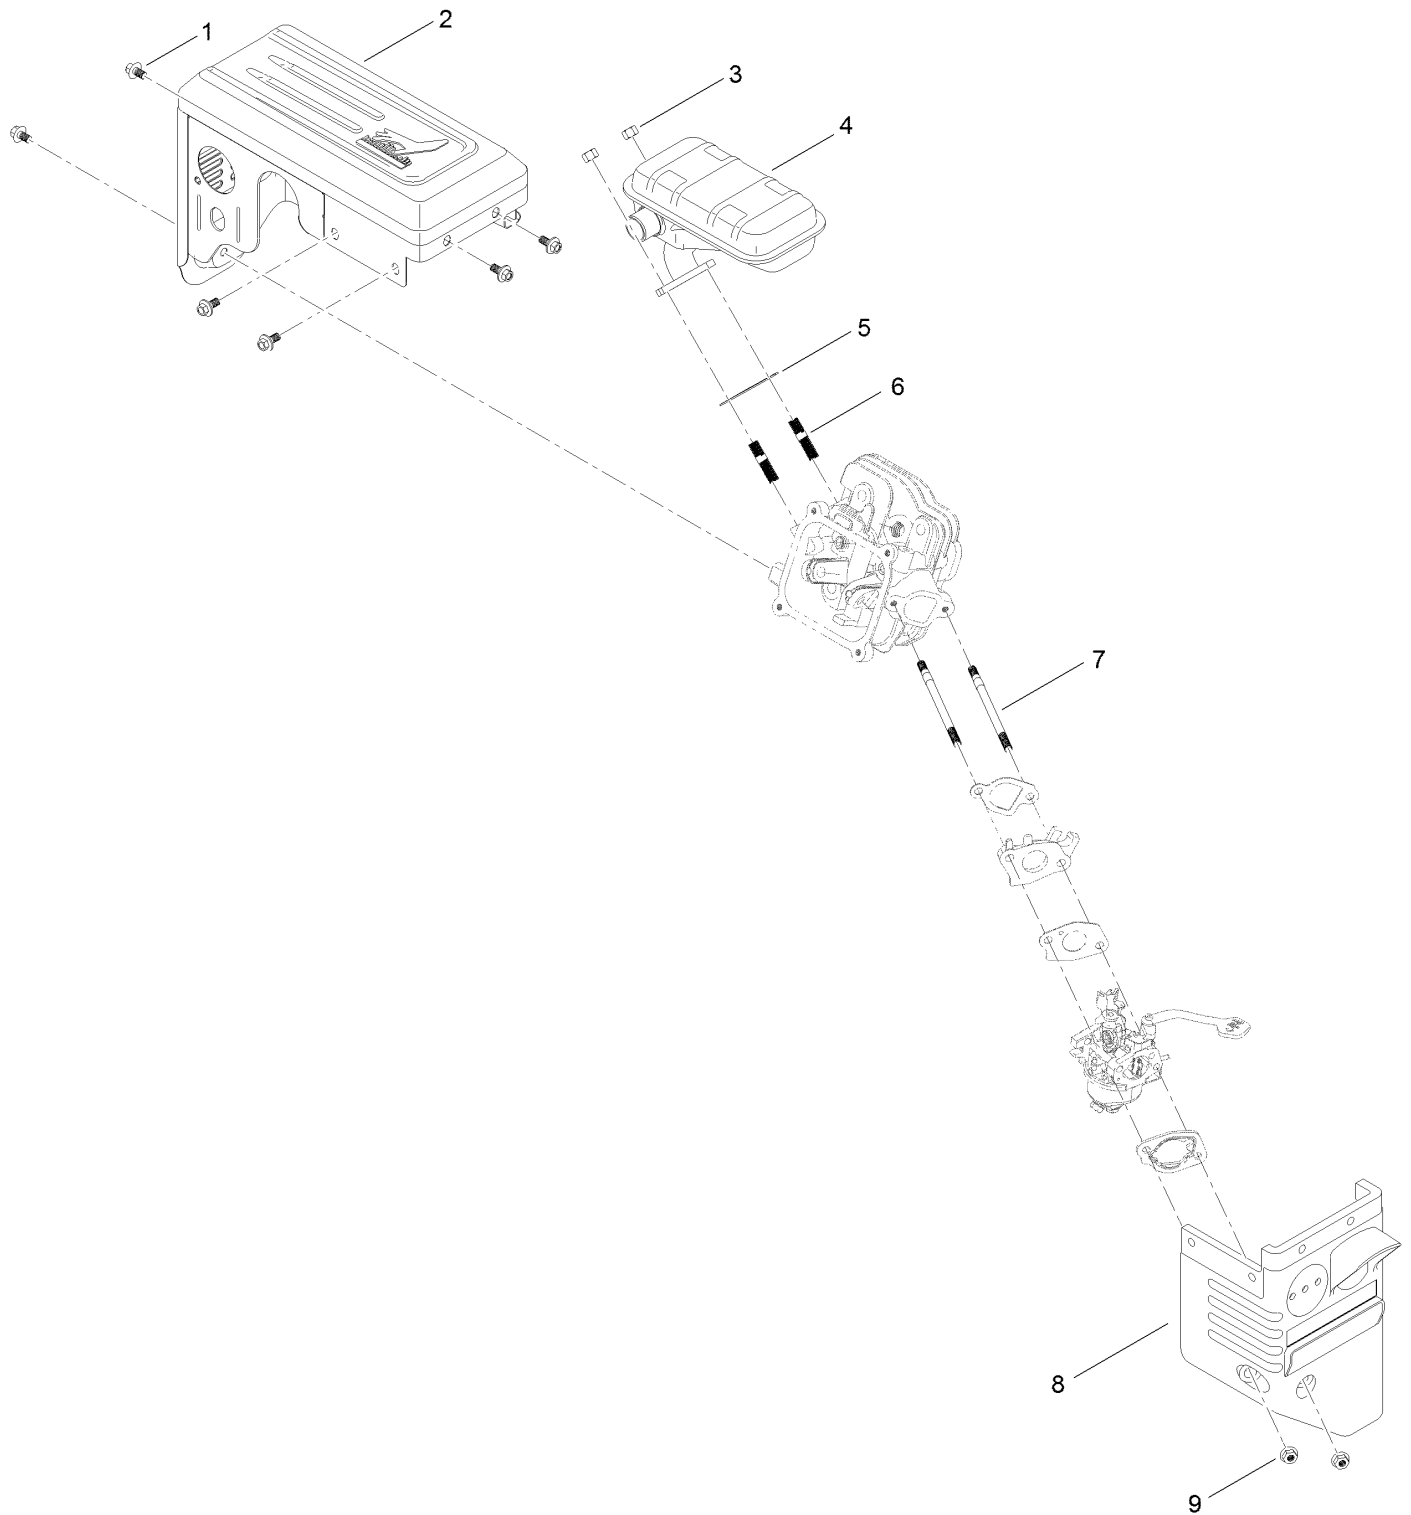

## Intake and Exhaust Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 121-0294           | 6           | Screw-HHF          | 6           | 121-0464           | 2           | Stud-Exhaust       |
| 2           | 127-9491           | 1           | Muffler Cover ASM  | 7           | 121-4112           | 2           | Stud-Intake        |
| 3           | 121-0199           | 2           | Nut-HH             | 8           | 127-9112           | 1           | Box-Heater         |
| 4           | 127-9490           | 1           | Muffler ASM        | 9           | 121-0308           | 2           | Nut-Flange         |
| 5           | 133-1539           | 1           | Gasket-Exhaust     |             |                    |             |                    |

 
# Ignition and Electrical Assembly

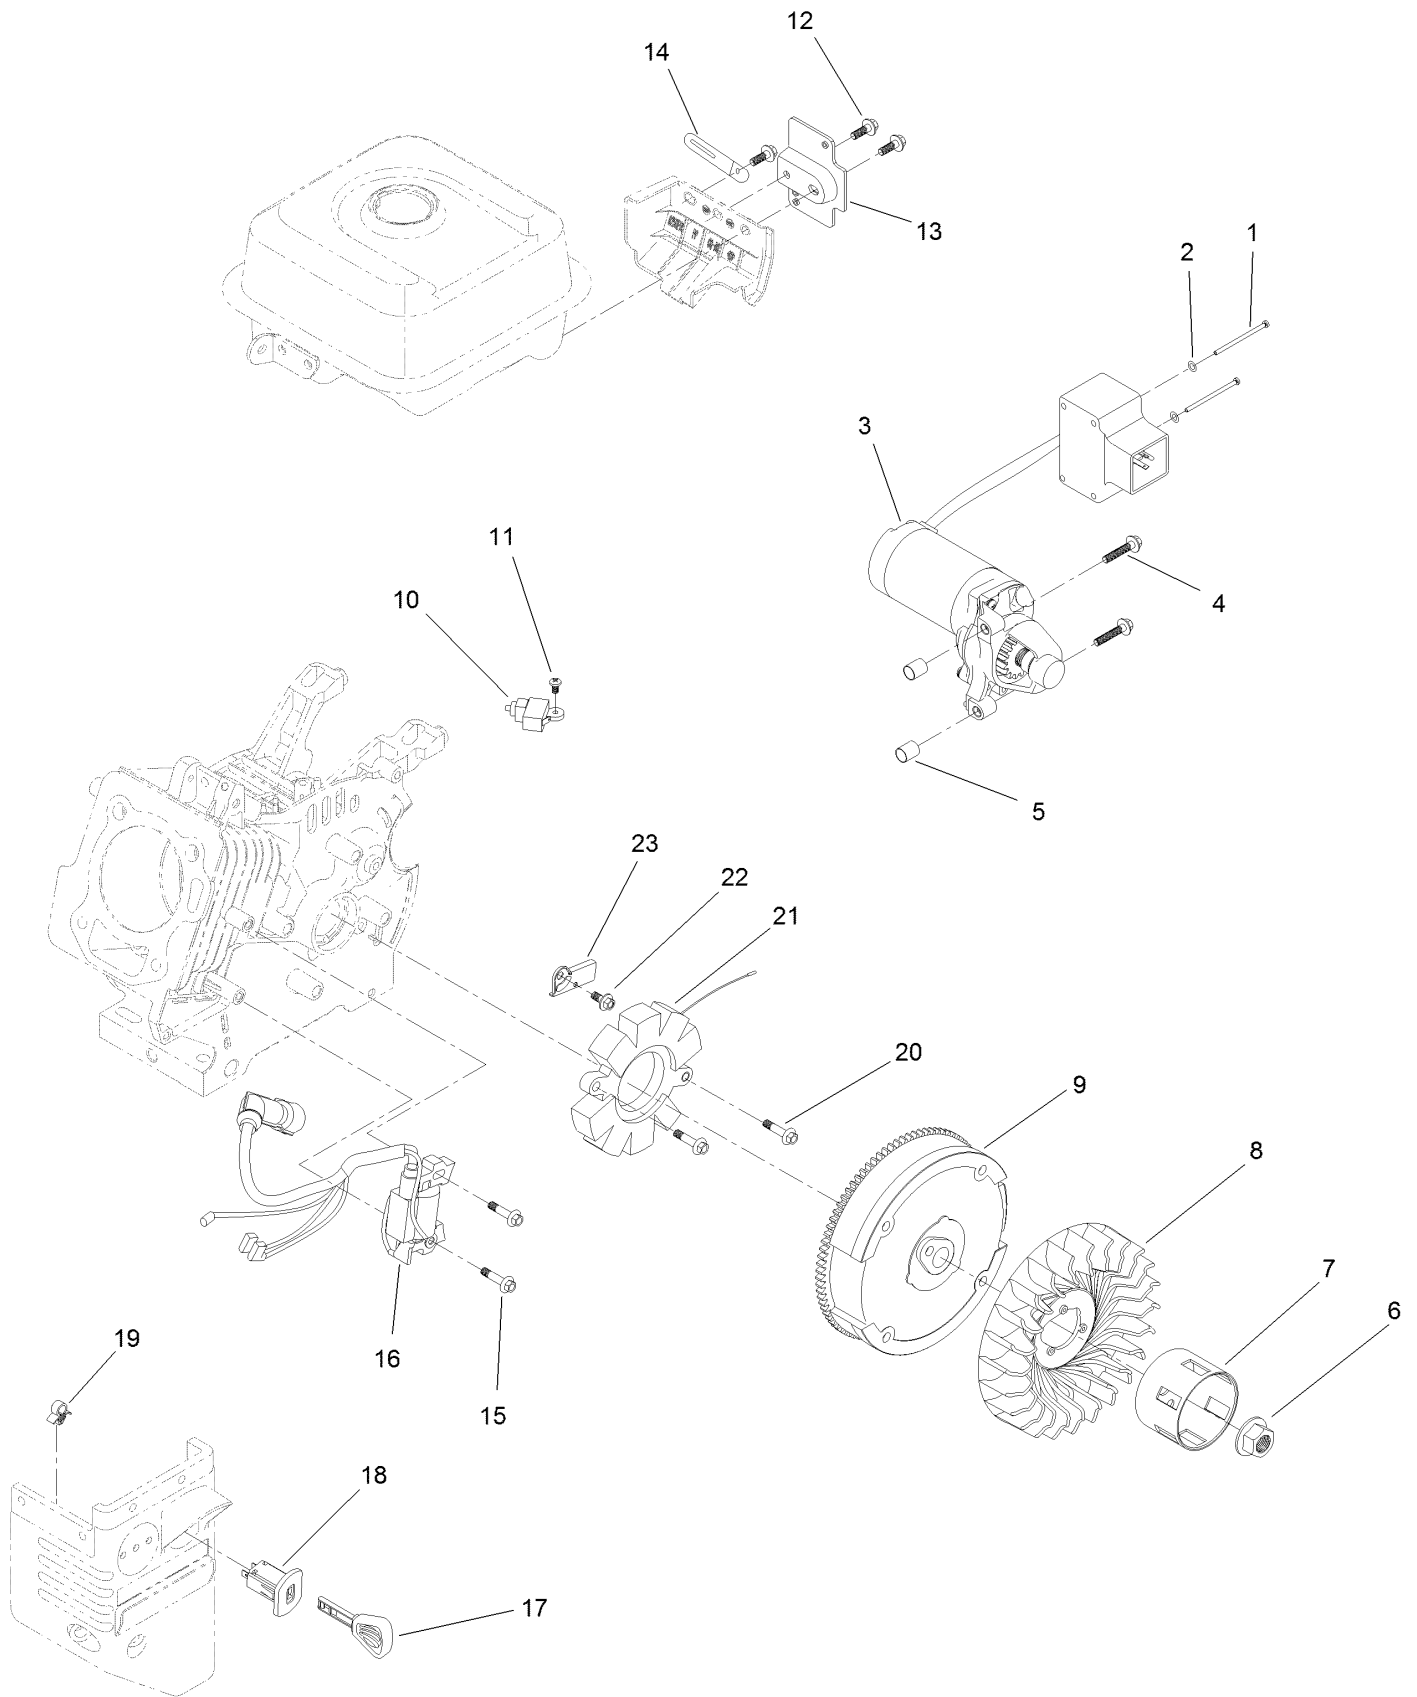

## Ignition and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 121-0306           | 2           | Screw-Bhp           | 13          | 133-1554           | 1           | Bracket-Switchbox, Starter |
| 2           | 121-0312           | 2           | Washer-Plain        | 14          | 121-0017           | 1           | Clip-Harness, Wire         |
| 3           | 133-9998           | 1           | Motor-Starter       | 15          | 121-0097           | 2           | Screw-HHF                  |
| 4           | 133-1546           | 2           | Screw-Flange        | 16          | 133-9996           | 1           | Ignition Coil ASM          |
| 5           | 121-0055           | 2           | Pin-Dowel           | 17          | 117-7728           | 1           | Key                        |
| 6           | 121-0047           | 1           | Nut-Flange          | 18          | 121-0283           | 1           | Switch-Key                 |
| 7           | 133-1527           | 1           | Cup-Starter         | 19          | 121-0326           | 1           | Clip                       |
| 8           | 133-1526           | 1           | Fan-Cooling         | 20          | 121-0196           | 2           | Screw-HHF                  |
| 9           | 127-9484           | 1           | Flywheel ASM        | 21          | 127-9485           | 1           | Alternator                 |
| 10          | 121-0284           | 1           | Switch-Kill, Engine | 22          | 121-0116           | 1           | Screw-HHF                  |
| 11          | 120-4461           | 1           | Screw-PPH           | 23          | 127-9486           | 1           | Clamp-Wire, Charge         |
| 12          | 127-9123           | 3           | Screw-HHF           |             |                    |             |                            |

 
# Crankcase Assembly

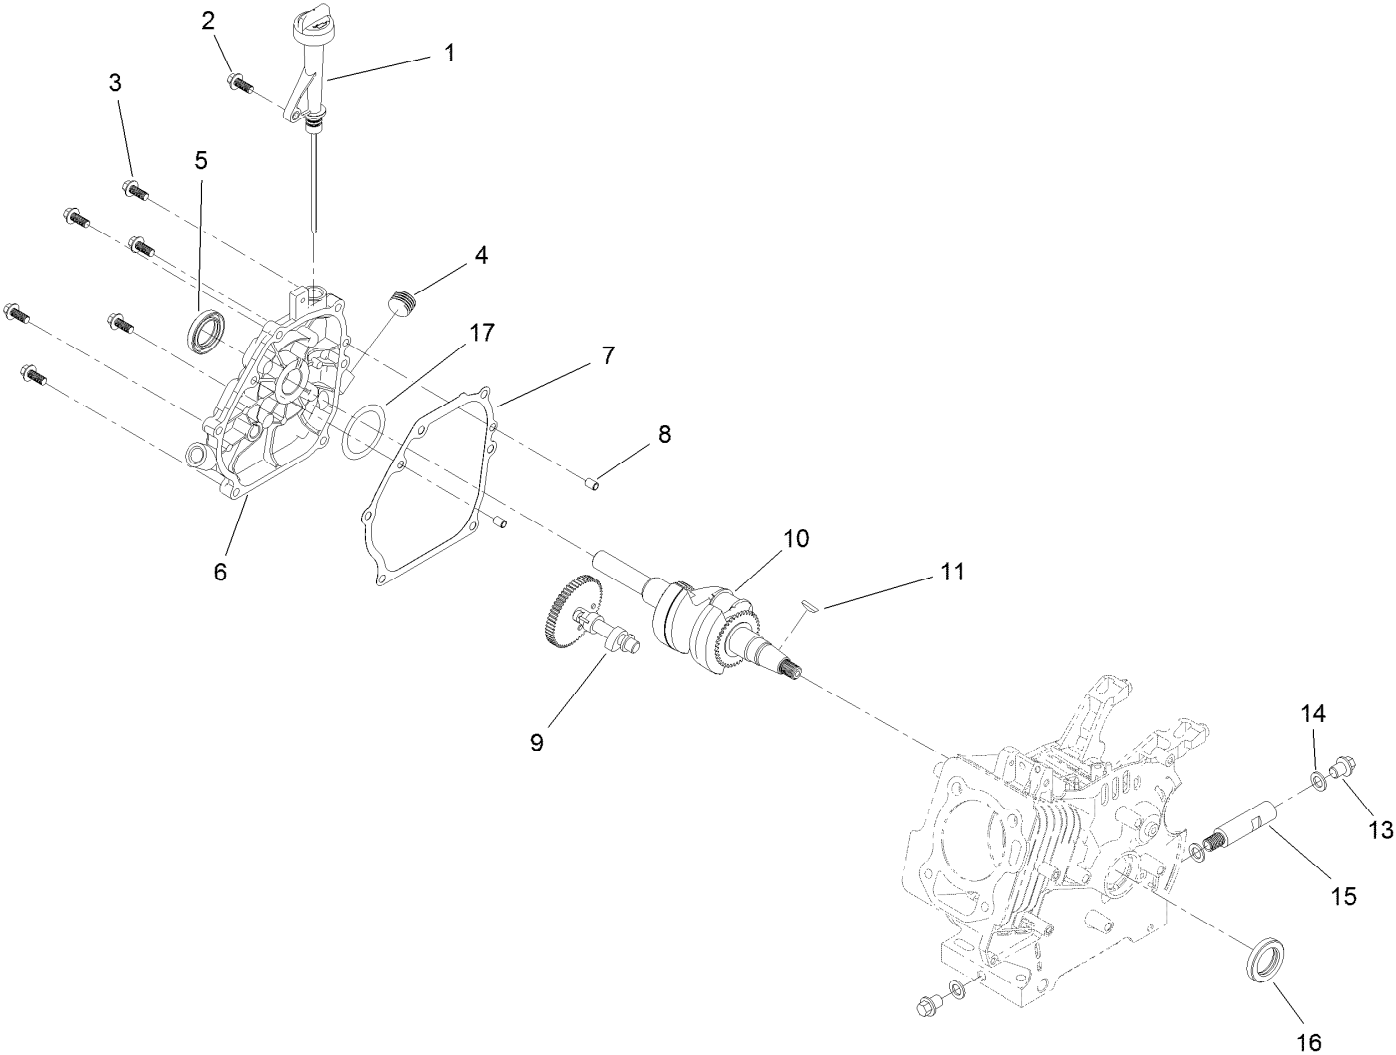

## Crankcase Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 133-9866           | 1           | Oil Fill Assembly       | 9           | 133-9991           | 1           | Camshaft ASM       |
| 2           | 127-9123           | 1           | Screw-HHF               | 10          | 127-9495           | 1           | Crankshaft         |
| 3           | 121-4114           | 6           | Screw-HHF               | 11          | 120-4320           | 1           | Key-Woodruff       |
| 4           | 133-9805           | 1           | Plug-Drain              | 13          | 121-0030           | 2           | Screw-HHF          |
| 5           | 133-1516           | 1           | Seal-Oil                | 14          | 121-0048           | 3           | Washer-Plain       |
| 6           | 133-9865           | 1           | Cover-Crankcase         | 15          | 127-9104           | 1           | Tube-Drain, Oil    |
| 7           | 127-9493           | 1           | Gasket-Cover, Crankcase | 16          | 133-9864           | 1           | Seal-Oil           |
| 8           | 121-0054           | 2           | Pin-Dowel               | 17          | 133-9863           | 1           | Washer-Thrust      |

 
# Governor Assembly

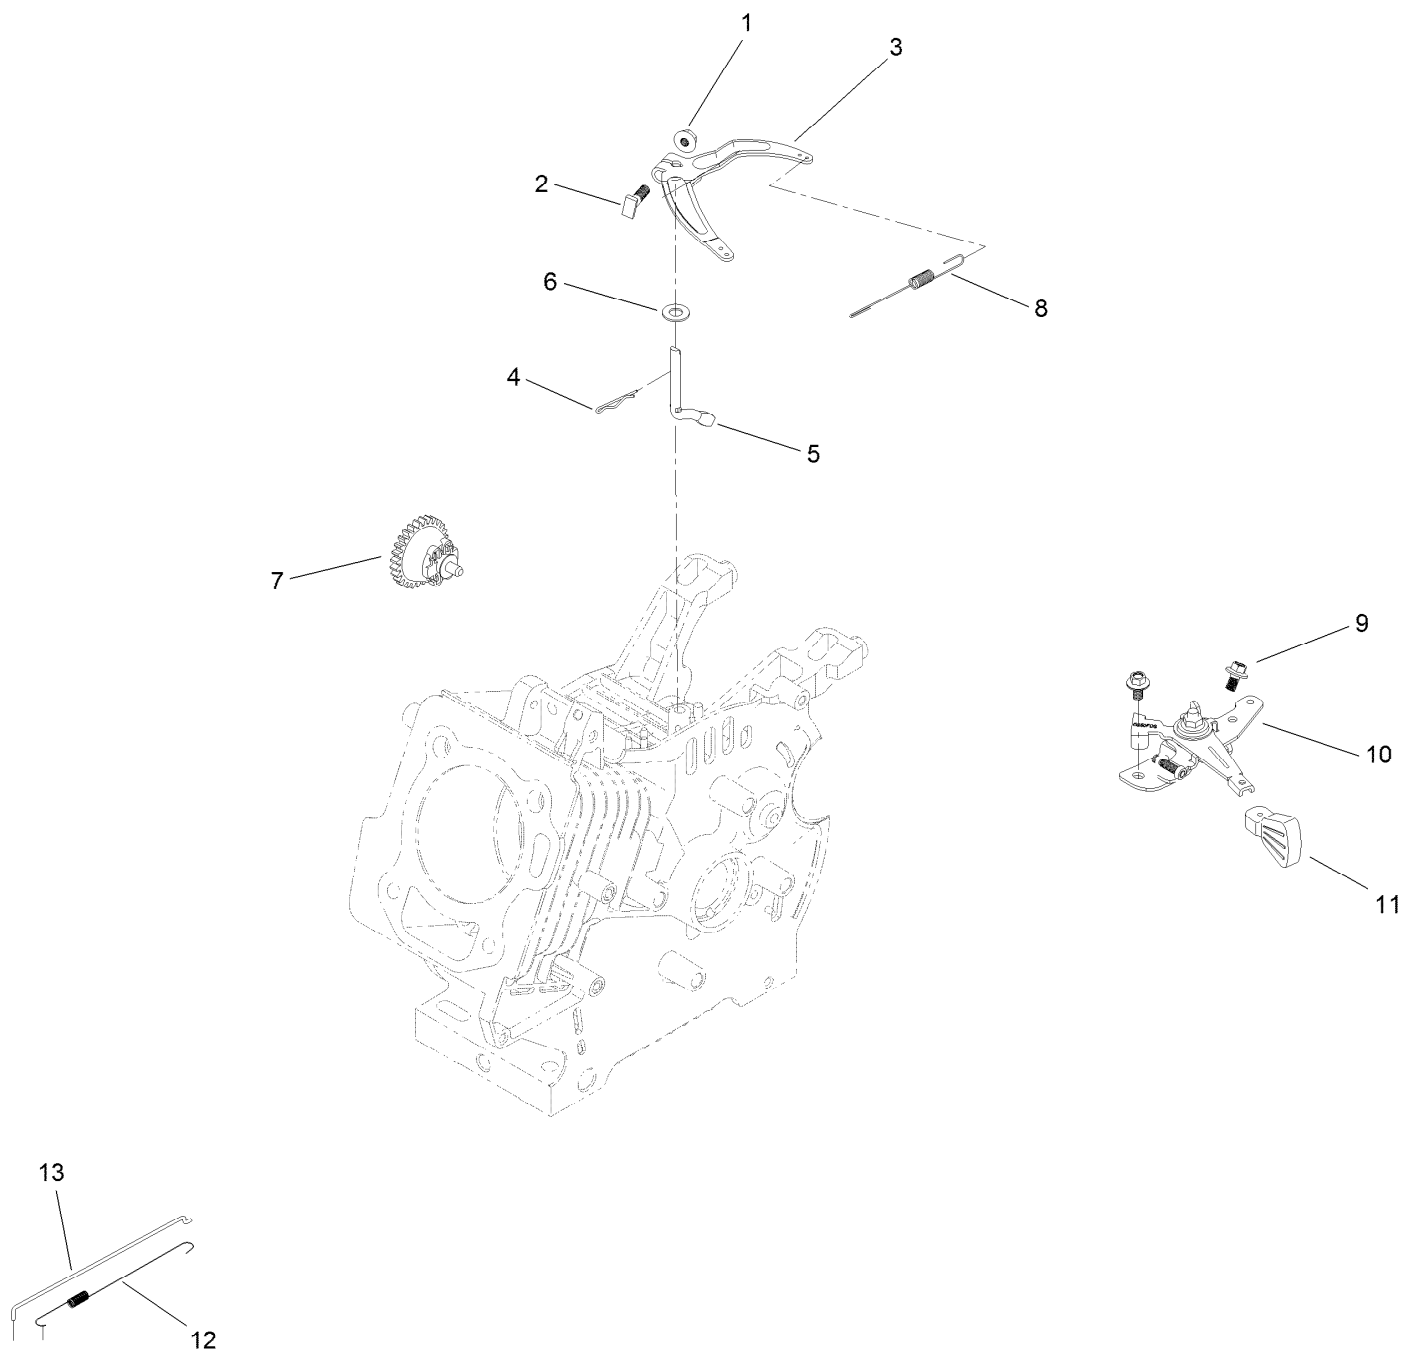

## Governor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 120-4236           | 1           | Nut-Flange         | 8           | 127-9483           | 1           | Spring-Governor         |
| 2           | 120-4238           | 1           | Bolt-Arm, Governor | 9           | 121-0116           | 2           | Screw-HHF               |
| 3           | 127-9482           | 1           | Arm-Governor       | 10          | 133-1555           | 1           | Throttle Control ASM    |
| 4           | 120-4256           | 1           | Pin-Hair           | 11          | 121-0269           | 1           | Knob-Control, Throttle  |
| 5           | 133-9995           | 1           | Shaft-Governor     | 12          | 133-1536           | 1           | Spring-Return, Throttle |
| 6           | 121-0498           | 1           | Washer-Plain       | 13          | 133-1535           | 1           | Rod-Governor            |
| 7           | 133-9994           | 1           | Governor Gear ASM  |             |                    |             |                         |

 
# Piston and Head Assembly

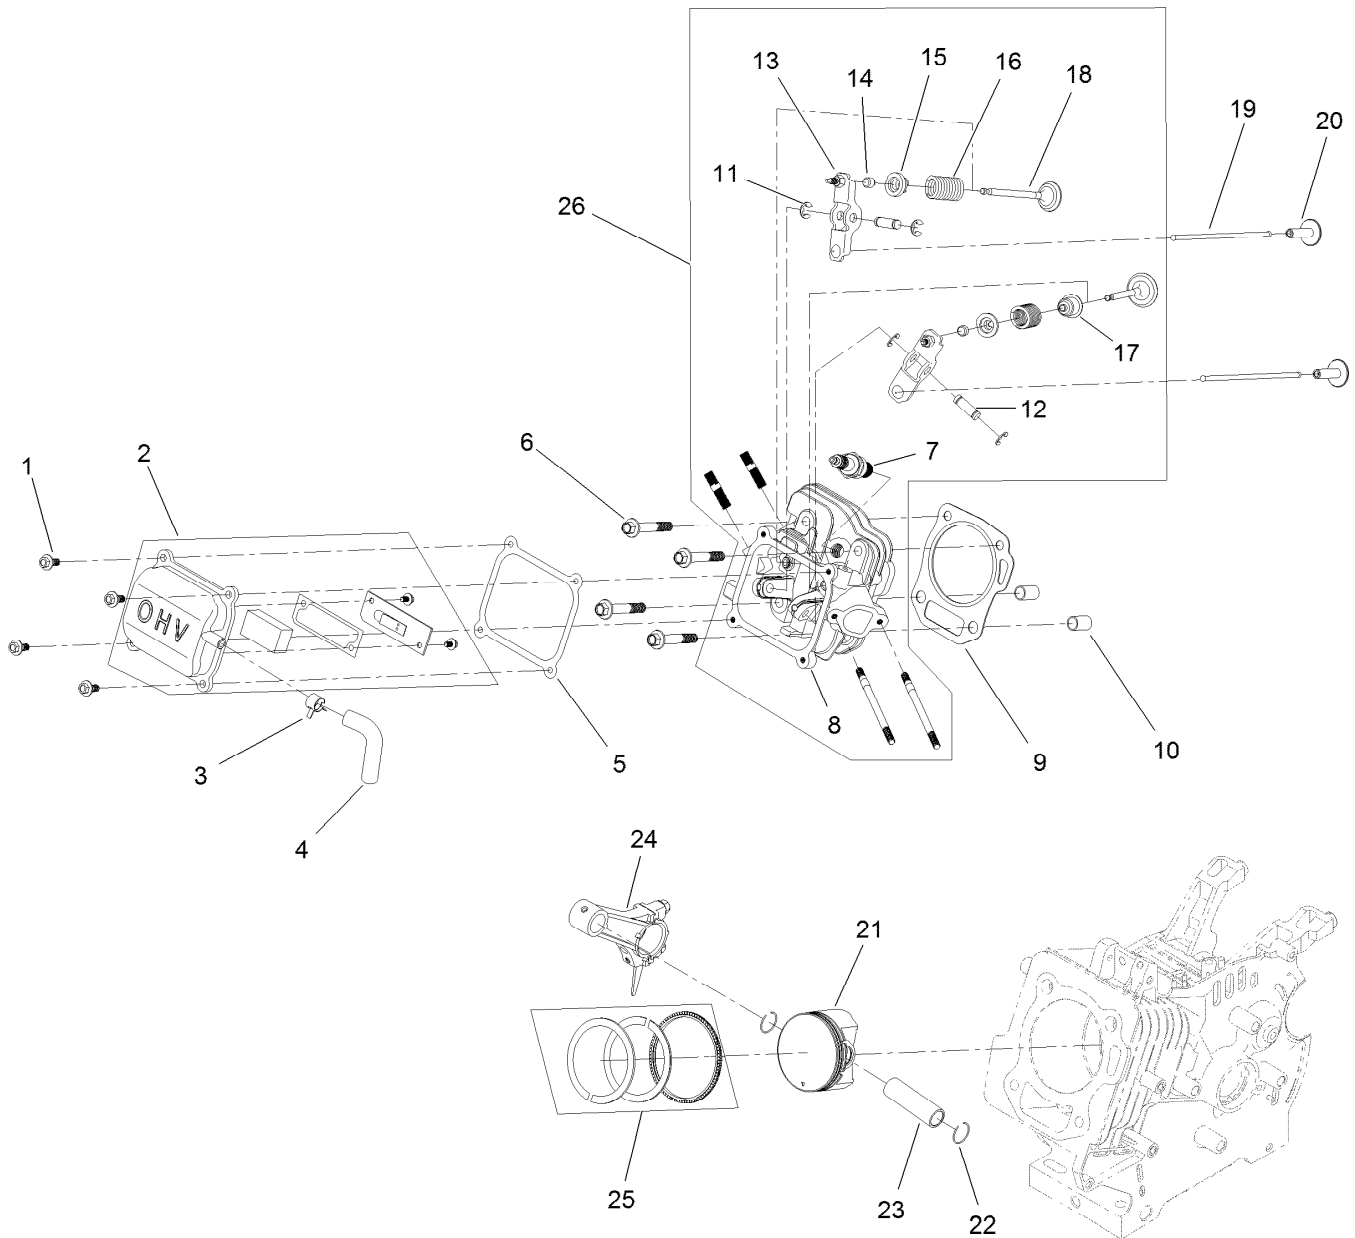

## Piston and Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|------------------------|
| 1           | 120-4454           | 4           | Screw-HHF           | 14          | 121-4116           | 2           | Rotator-Valve          |
| 2           | 133-1500           | 1           | Valve Cover ASM     | 15          | 121-4117           | 2           | Retainer-Spring, Valve |
| 3           | 133-1558           | 1           | Clamp-Hose          | 16          | 127-9014           | 2           | Spring-Valve           |
| 4           | 133-9990           | 1           | Tube-Breather       | 17          | 121-4202           | 1           | Seal-Stem, Valve       |
| 5           | 133-1507           | 1           | Gasket-Cover, Valve | 18          | 133-1515           | 1           | Set-Valve              |
| 6           | 133-1508           | 4           | Screw-Flange        | 19          | 133-1514           | 2           | Rod-Push               |
| 7           | 81-3250            | 1           | Spark Plug          | 20          | 127-9015           | 2           | Tappet-Valve           |
| 8           | 133-1509           | 1           | Head-Cylinder       | 21          | 133-1522           | 1           | Piston                 |
| 9           | 133-1510           | 1           | Gasket-Head         | 22          | 121-0313           | 2           | Clip-Pin, Piston       |
| 10          | 120-4200           | 2           | Pin-Dowel           | 23          | 121-4128           | 1           | Pin-Piston             |
| 11          | 133-1511           | 4           | E-Clip              | 24          | 121-4123           | 1           | Connecting Rod ASM     |
| 12          | 133-1512           | 2           | Pin-Arm, Rocker     | 25          | 133-1521           | 1           | Set-Ring, Piston       |
| 13          | 133-1513           | 2           | Rocker Arm ASM      | 26          | 133-9867           | 1           | Complete Head ASM      |

 
# Blower Housing and Shrouds Assembly

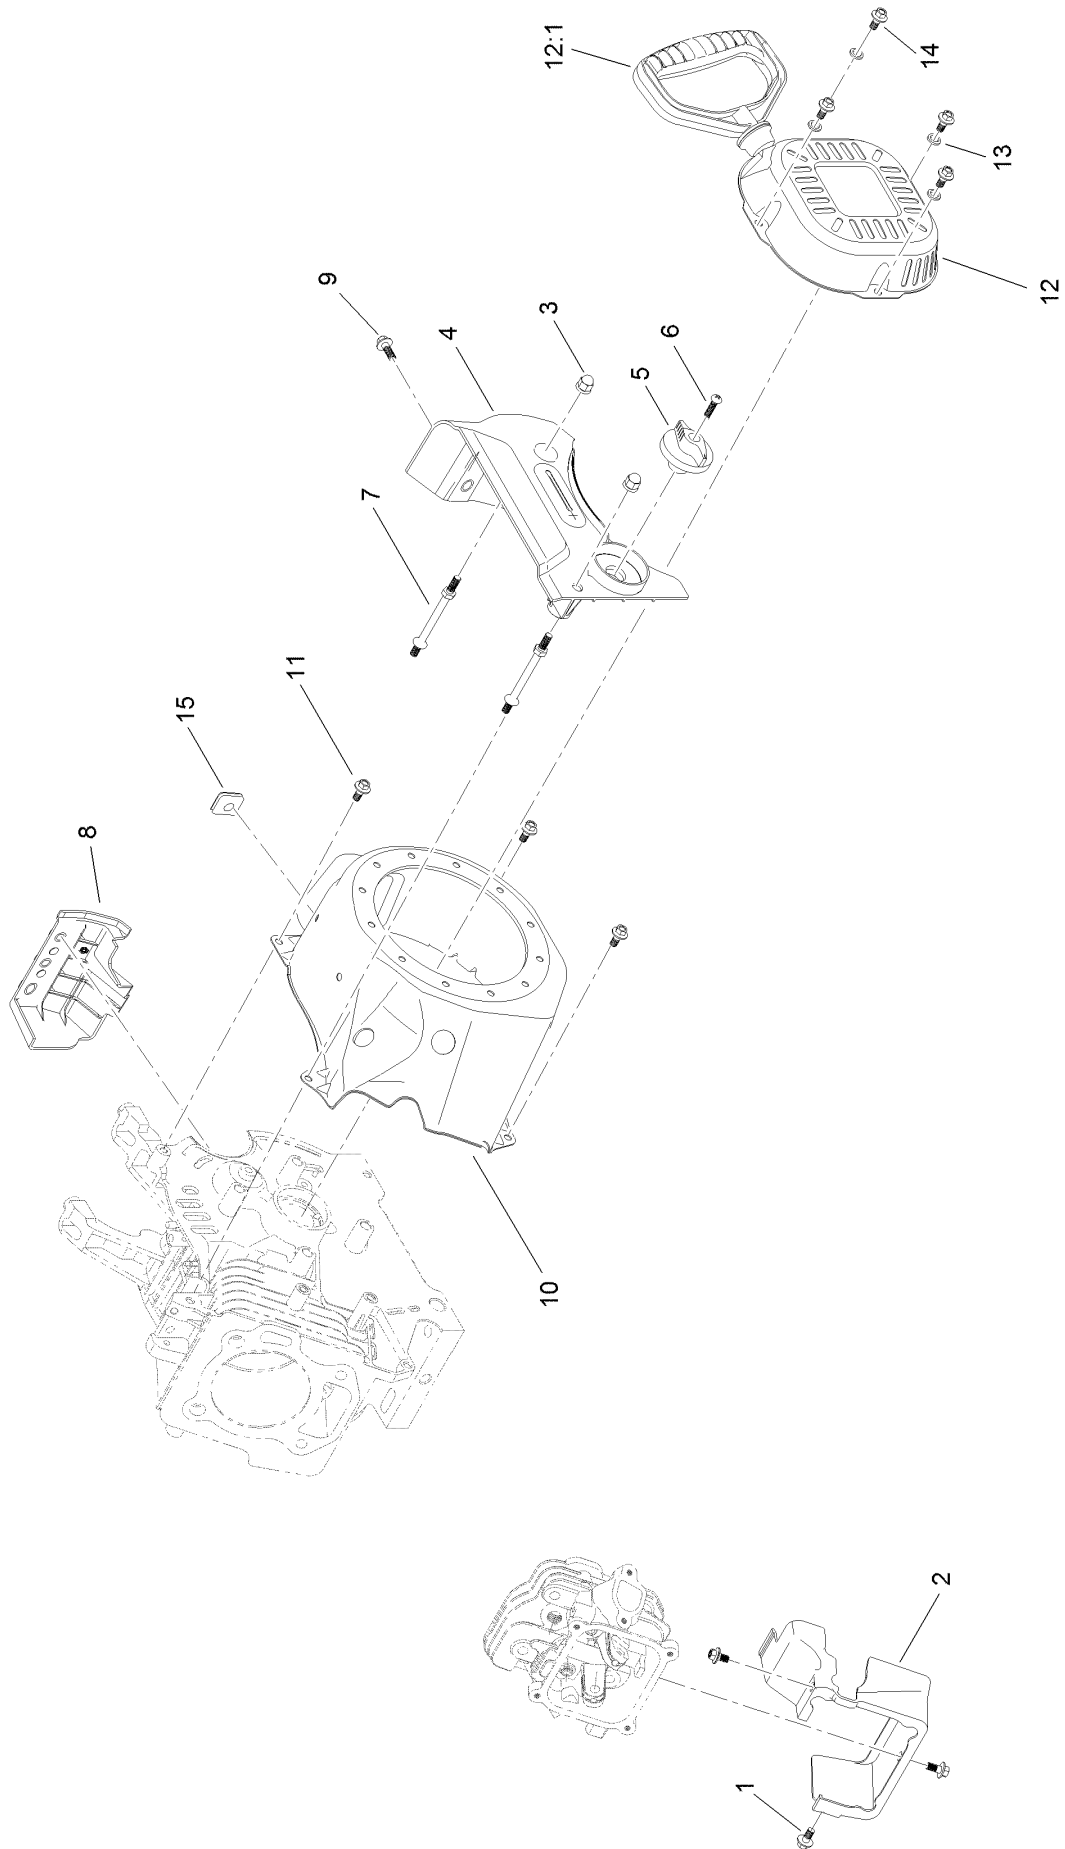

## Blower Housing and Shrouds Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 121-0116           | 3           | Screw-HHF            | 9           | 127-9123           | 1           | Screw-HHF          |
| 2           | 133-1530           | 1           | Shroud-Head          | 10          | 133-1528           | 1           | Shroud-Flywheel    |
| 3           | 127-9383           | 2           | Nut-Acorn            | 11          | 121-0294           | 3           | Screw-HHF          |
| 4           | 133-1557           | 1           | Panel-Control, Front | 12          | 127-9487           | 1           | Recoil ASM         |
| 5           | 121-0268           | 1           | Knob-Valve, Fuel     | 12:1        | 121-0287           | 1           | Handle-Recoil      |
| 6           | 121-0305           | 1           | Screw-Bhp            | 13          | 127-9380           | 4           | Washer-Plain       |
| 7           | 127-9110           | 2           | Stud-Mount           | 14          | 127-9031           | 4           | Screw-HHF          |
| 8           | 133-1543           | 1           | Panel-Side, Engine   | 15          | 133-1548           | 1           | Grommet-Rubber     |

 
# Engine Decal Assembly

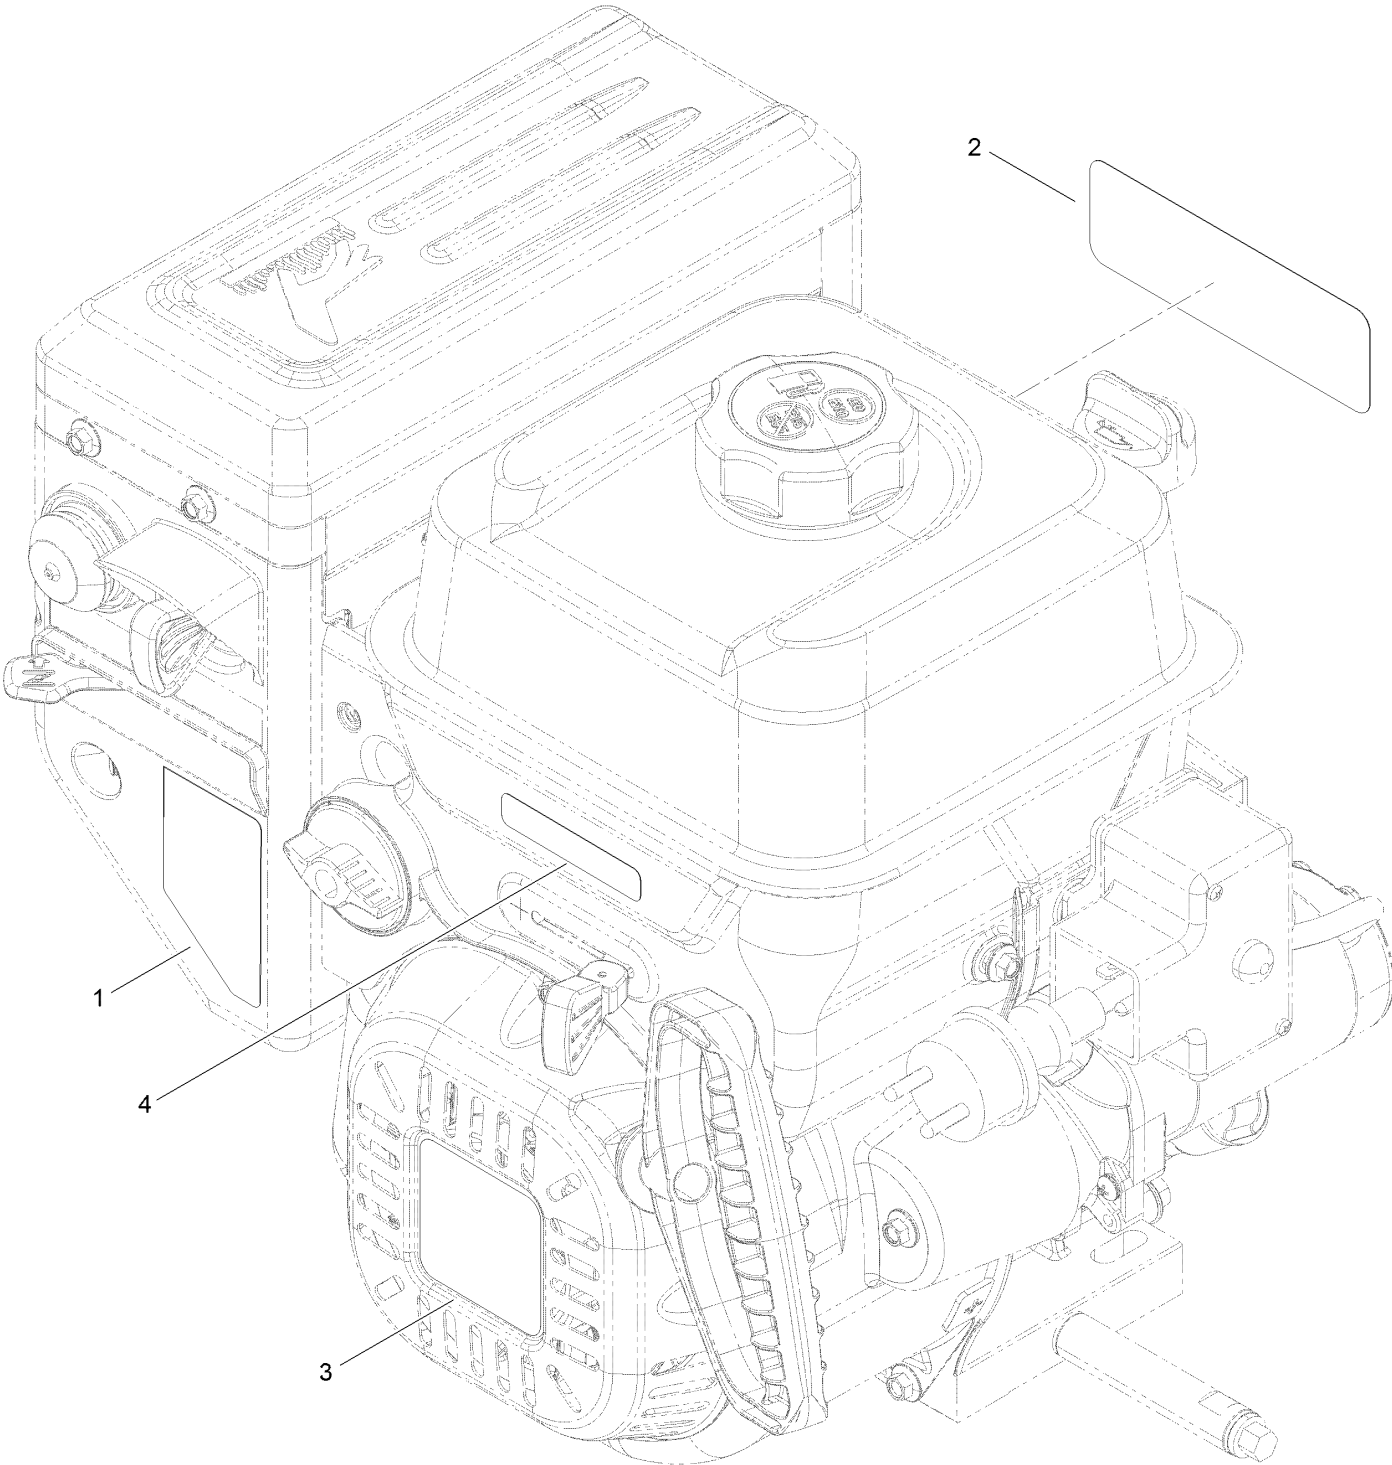

## Engine Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|---------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 120-9805           | 1           | Decal-Control, Engine     | 3           | 131-5912           | 1           | Decal-Recoil, G250 |
| 2           | 131-5911           | 1           | Decal-Engine Series, G250 | 4           | 131-6487           | 1           | Decal-Throttle     |

 
# Chute Assembly

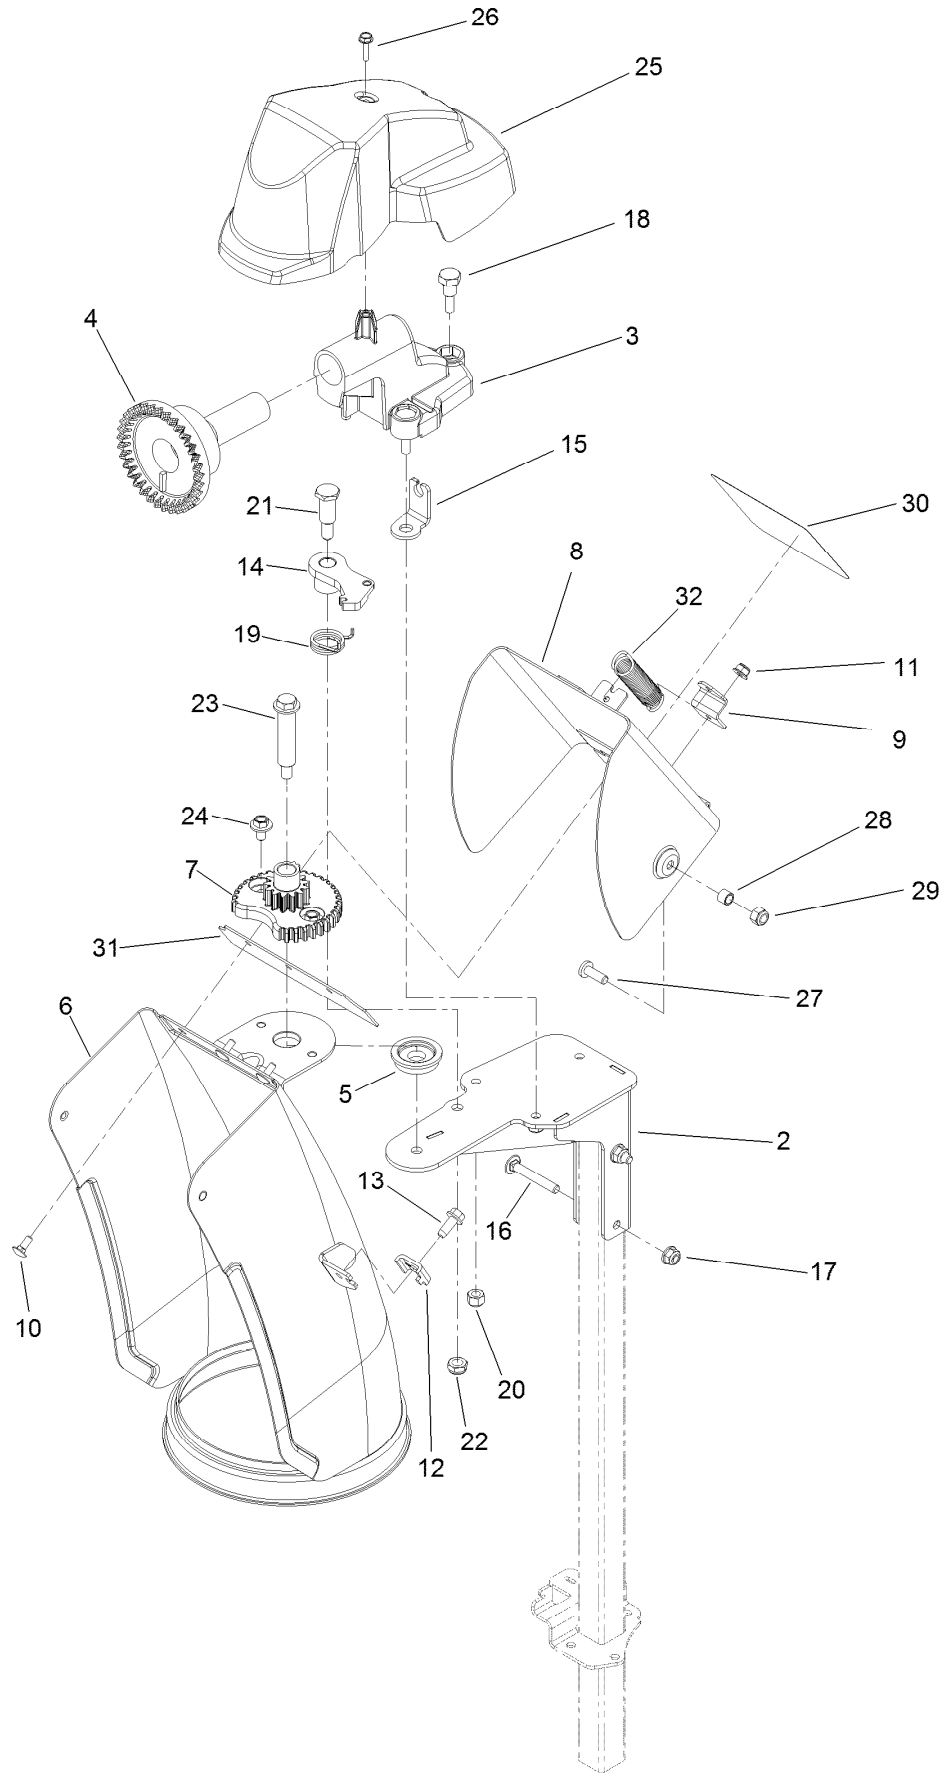

## Chute Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|----------------------|
| 2           | 138-3605-03        | 1           | Support-Chute      | 18          | 136-7197           | 3           | Screw-Shoulder       |
| 3           | 138-3606           | 1           | Mount-Gear, Face   | 19          | 108-7315           | 1           | Spring-Torsion       |
| 4           | 106-4471           | 1           | Gear-Face          | 20          | 137-3088           | 3           | Nut-Hex              |
| 5           | 106-4422           | 1           | Spacer-Chute       | 21          | 137-3103           | 1           | Screw-Shoulder, HH   |
| 6           | 138-3611-01        | 1           | Chute              | 22          | 137-3089           | 3           | Nut-Hex              |
| 7           | 106-4472           | 1           | Gear-Chute         | 23          | 136-7199           | 1           | Bolt-Shoulder        |
| 8           | 138-3615-01        | 1           | Deflector          | 24          | 46-6810            | 2           | Screw And Washer ASM |
| 9           | 138-3612-01        | 1           | Bracket-Spring     | 25          | 138-3627           | 1           | Cover-Chute, Gear    |
| 10          | 135-1929           | 3           | Bolt-CARR          | 26          | 98-1375            | 1           | Screw-HWH            |
| 11          | 138-0719           | 3           | Nut-HF             | 27          | 138-0689           | 1           | Screw-PH             |
| 12          | 136-7191           | 1           | Clamp-Cable        | 28          | 138-3678           | 1           | Spacer               |
| 13          | 137-3043           | 1           | Screw-HWH          | 29          | 137-3094           | 1           | Nut-Hex              |
| 14          | 106-4476           | 1           | Latch-Chute        | 30          | 137-6198           | 1           | Decal-Danger         |
| 15          | 138-3607           | 1           | Anchor-Cable       | 31          | 138-3671           | 1           | Gasket-Deflector     |
| 16          | 120-9698           | 2           | Bolt-CARR          | 32          | 138-8493           | 1           | Spring-Chute, Upper  |
| 17          | 119-4040           | 2           | Nut-Flange, NI     |             |                    |             |                      |

 
# Chute Control Assembly

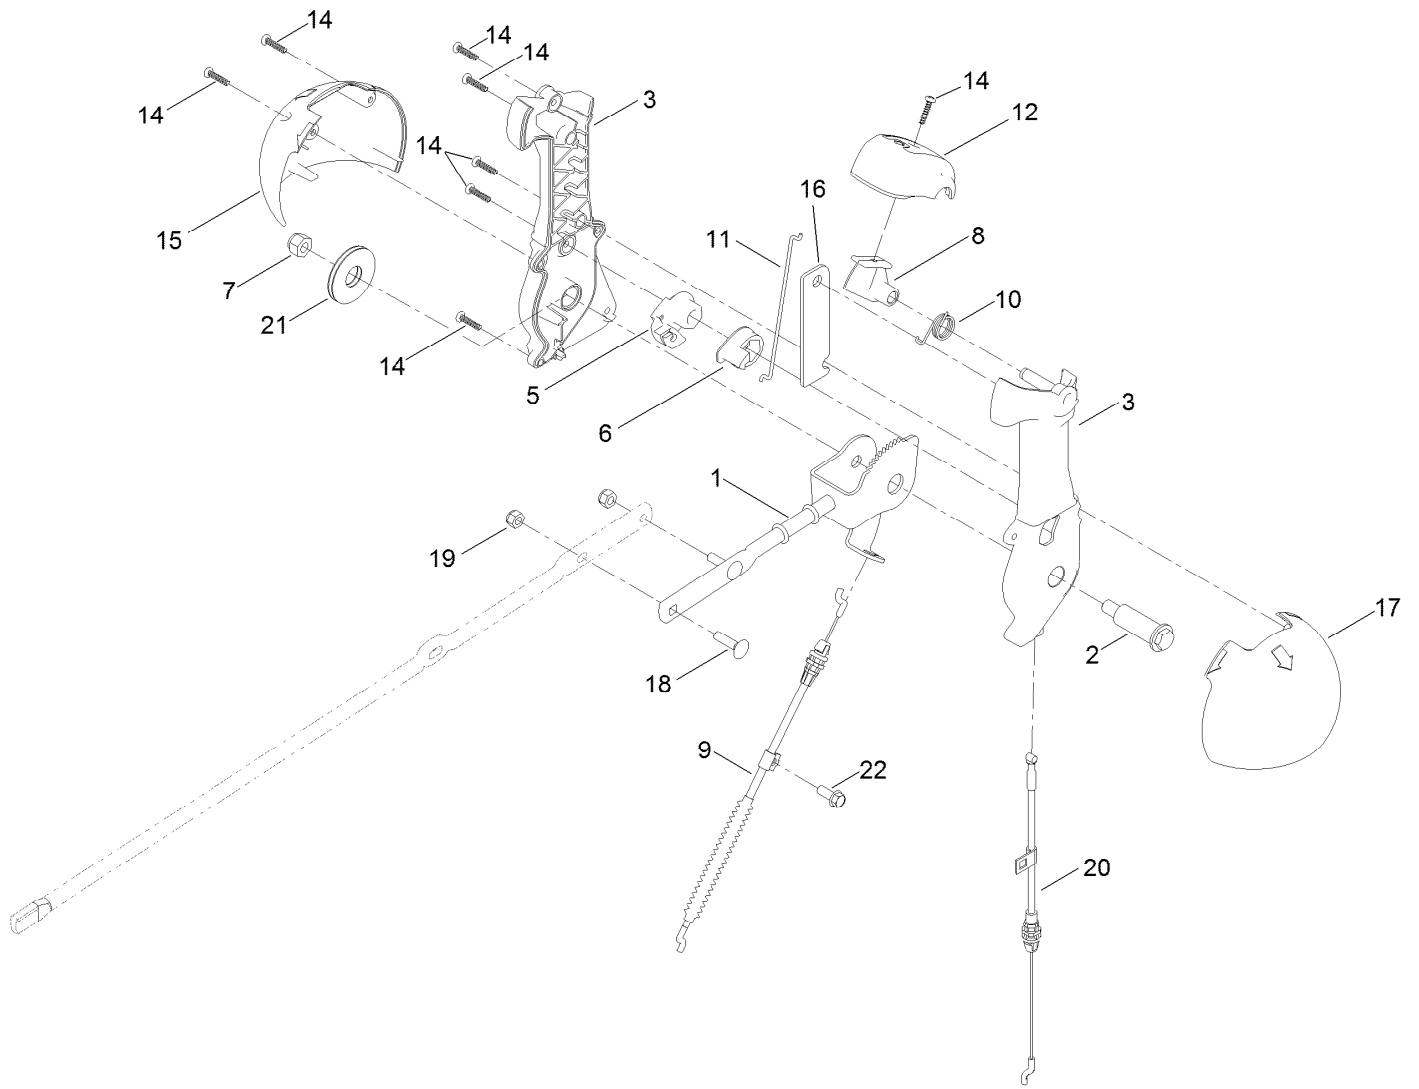

## Chute Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 138-0662           | 1           | Rod-Control, Chute       | 12          | 137-6239           | 1           | Cap-Lever                  |
| 2           | 138-0659           | 1           | Screw-Shoulder, HWH      | 14          | 94-4496            | 8           | Screw-PPH                  |
| 3           | 139-1552           | 1           | Chute Control Lever ASM  | 15          | 136-6677           | 1           | Globe-Quickstick, RH       |
| 5           | 105-9988           | 1           | Lever-Cable, Deflector   | 16          | 136-6632           | 1           | Plate-Stiffner             |
| 6           | 106-7310           | 1           | Pawl-Latch               | 17          | 136-6678           | 1           | Globe-Quickstick, LH       |
| 7           | 137-3087           | 1           | Nut-Hex                  | 18          | 137-3056           | 3           | Bolt-CARR                  |
| 8           | 137-6238           | 1           | Trigger-Latch            | 19          | 137-3094           | 3           | Nut-Hex                    |
| 9           | 138-3672           | 1           | Cable-Control, Deflector | 20          | 138-3673           | 1           | Cable-Release, Chute       |
| 10          | 105-9982           | 1           | Spring-Torsion           | 21          | 138-0744           | 1           | Washer-Friction, Composite |
| 11          | 138-0688           | 1           | Link-Latch               | 22          | 32144-85           | 1           | Screw-HWH                  |

 
# Handle Assembly

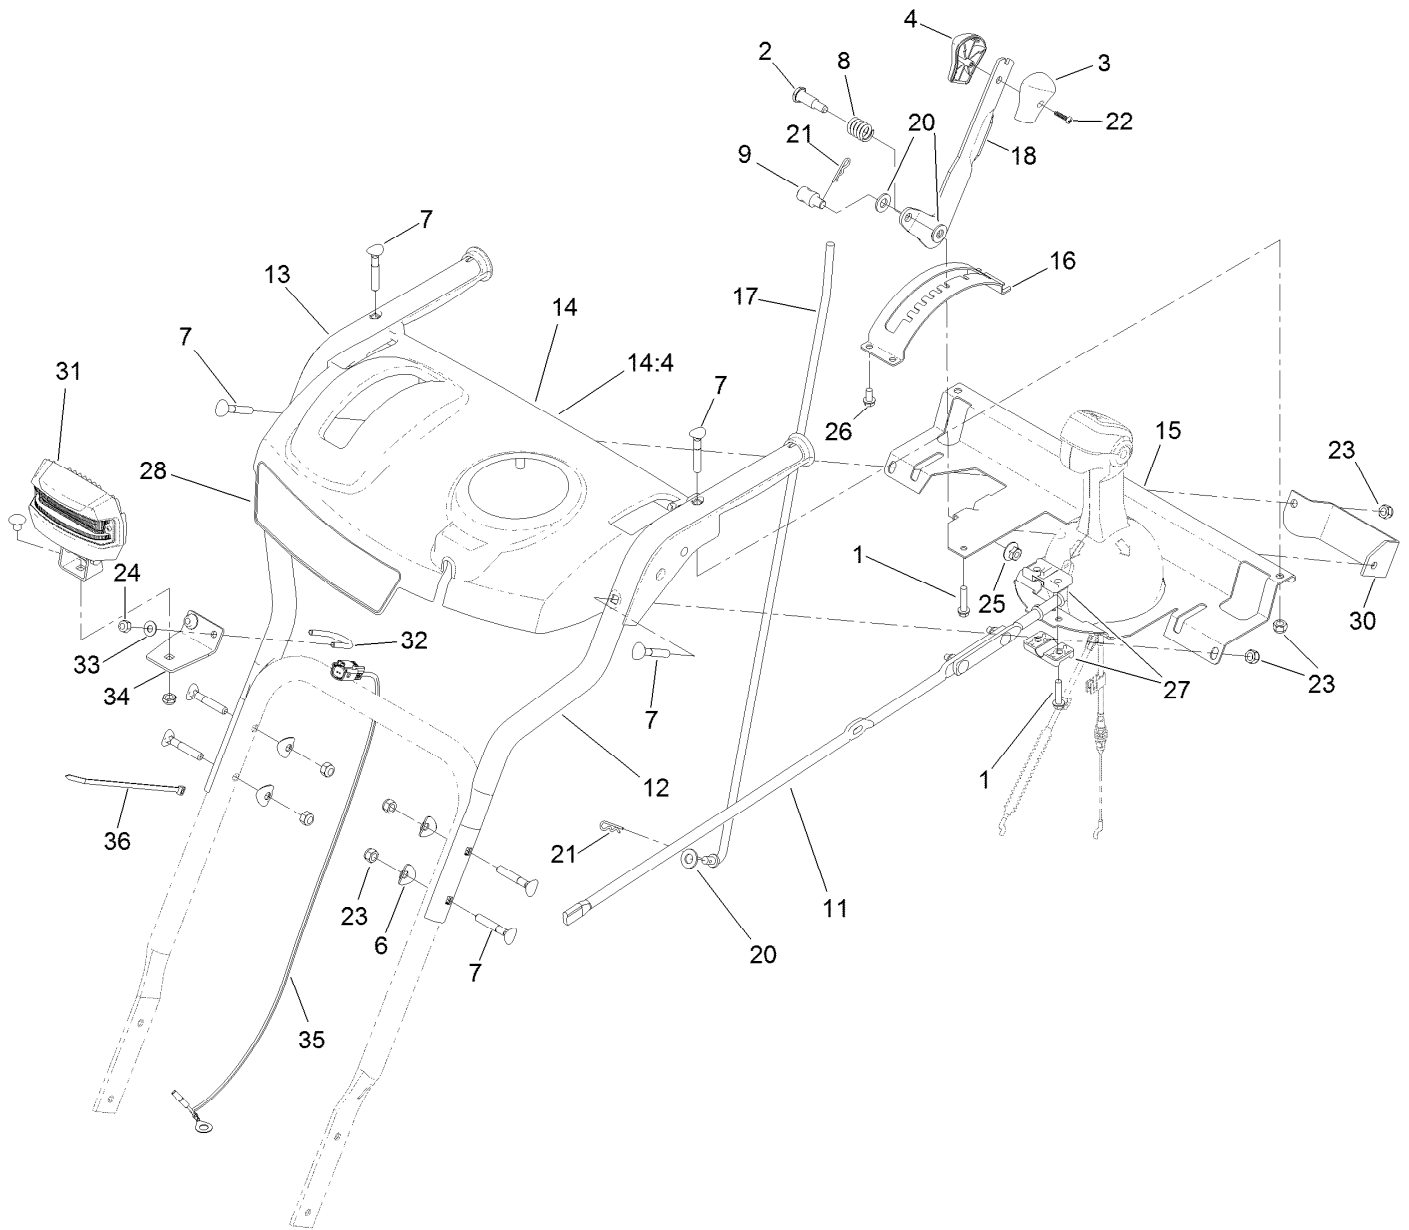

## Handle Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 137-3100           | 3           | Screw-Plastite, HWH    | 20          | 131-8667           | 3           | Washer-Thrust        |
| 2           | 137-3103           | 1           | Screw-Shoulder, HH     | 21          | 137-3083           | 2           | Pin-Hair             |
| 3           | 105-9999           | 1           | Knob-Shift, LH         | 22          | 94-4496            | 1           | Screw-PPH            |
| 4           | 106-4423           | 1           | Knob-Shift, RH         | 23          | 137-3093           | 8           | Nut-Hex              |
| 6           | 137-3009           | 4           | Washer-Cup             | 24          | 137-3094           | 2           | Nut-Hex              |
| 7           | 137-3107           | 8           | Screw-Handle           | 25          | 137-3038           | 1           | Nut-HF               |
| 8           | 136-7121           | 1           | Spring-Compression     | 26          | 46-8093            | 4           | Screw-Plastite       |
| 9           | 136-7193           | 1           | Trunnion-Rod           | 27          | 105-9987           | 2           | Support-Rod          |
| 11          | 138-3635           | 1           | Rod-Chute              | 28          | 139-3693           | 1           | Decal-Console        |
| 12          | 120-7173-03        | 1           | Handle-Upper, LH       | 30          | 120-2301-03        | 1           | Plate-Support, Shift |
| 13          | 120-7174-03        | 1           | Handle-Upper, RH       | 31          | 138-0670           | 1           | LED Light ASM        |
| 14          | 138-8487           | 1           | Control Panel ASM      | 32          | 136-7120           | 1           | Clamp-Light          |
| 14:4        | 121-1240           | 1           | Decal-Safety           | 33          | 137-3072           | 2           | Washer-Plain         |
| 15          | 138-3676-03        | 1           | Support-Panel, Control | 34          | 127-5961-03        | 1           | Bracket-Light        |
| 16          | 120-9258-03        | 1           | Mount-Selector, Speed  | 35          | 138-3658           | 1           | Harness-Wire         |
| 17          | 136-7163           | 1           | Rod-Selector, Gear     | 36          | 614249             | 1           | Tie-Cable            |
| 18          | 121-1242-03        | 1           | Selector-Speed         |             |                    |             |                      |
 
# Control Assembly

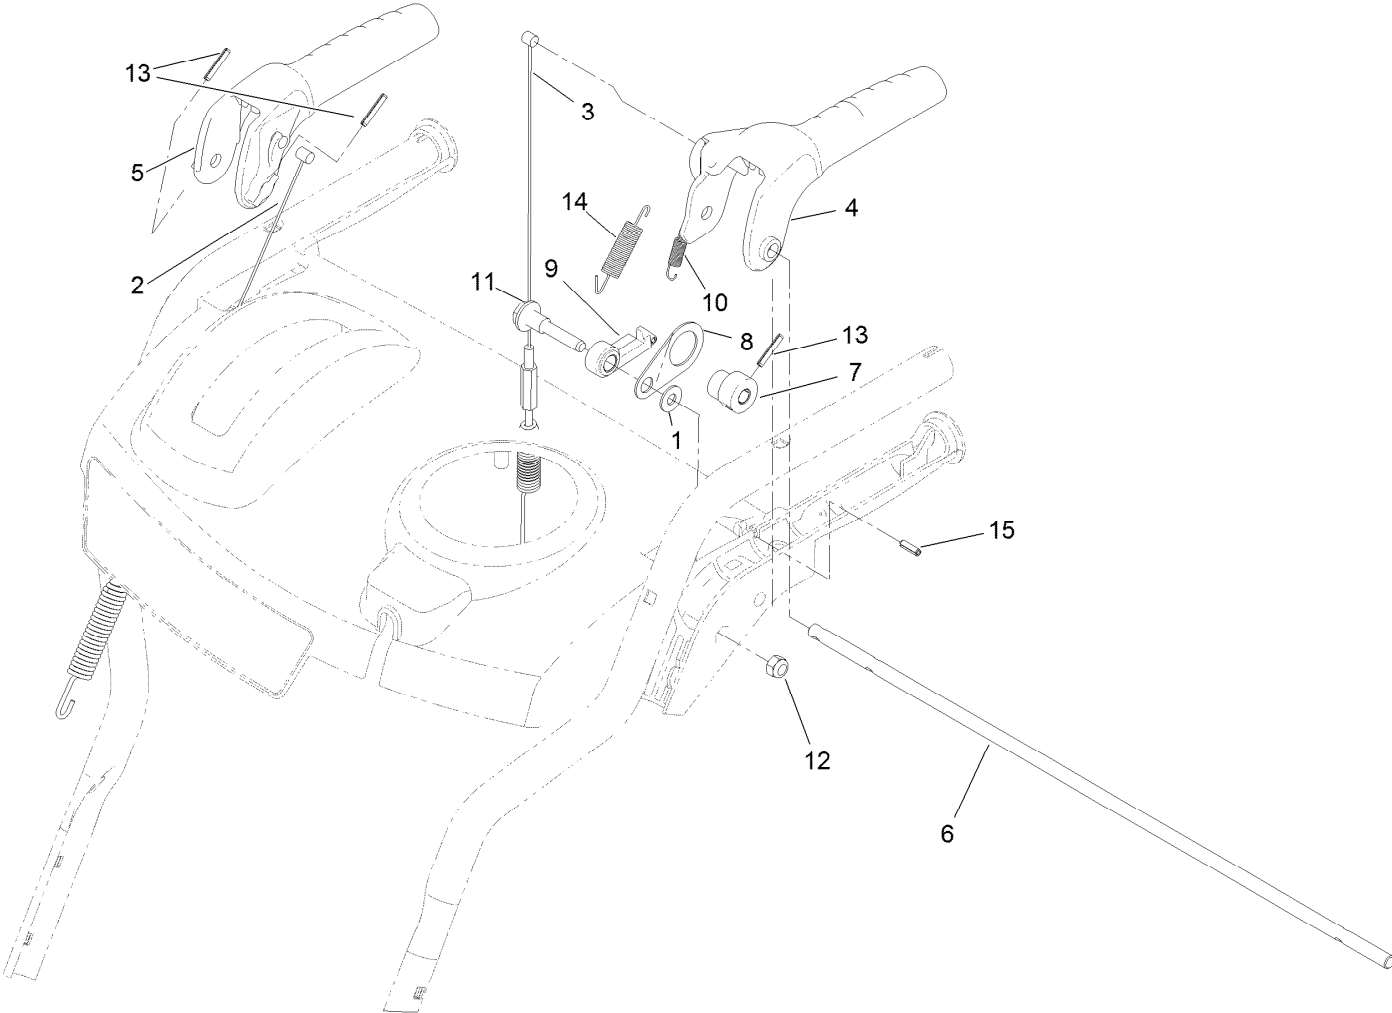

## Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 98-3499            | 1           | Washer-Flat              | 9           | 121-1205           | 1           | Latch-Lockout          |
| 2           | 121-6812           | 1           | Cable-Auger              | 10          | 136-7161           | 1           | Spring-Lockout, Handle |
| 3           | 121-6813           | 1           | Cable-Traction           | 11          | 136-7194           | 1           | Screw-Shoulder         |
| 4           | 121-1200           | 1           | Handle-Control, Traction | 12          | 137-3093           | 1           | Nut-Hex                |
| 5           | 121-1201           | 1           | Handle-Control, Auger    | 13          | 137-3035           | 3           | Pin-Spring             |
| 6           | 136-7125           | 1           | Rod-Lockout              | 14          | 136-7162           | 1           | Spring-Return, Lever   |
| 7           | 121-1203           | 1           | Cam-Lockout              | 15          | 32121-2            | 1           | Pin-Roll, Slotted      |
| 8           | 136-7160           | 1           | Link-Lockout             |             |                    |             |                        |

# Attachments and Accessories

## For 37799 Power Max 826 OXE Snowthrower

| Product Name                                       | Model/Part |
|----------------------------------------------------|------------|
| Weight Kit .....                                   | 107-3815   |
| Snow Cab Kit.....                                  | 127-5960   |
| Engine Maintenance Kit.....                        | 138-0702   |
| Non-Marking Skid Kit.....                          | 38211      |
| Heavy-Duty Skid Kit.....                           | 38212      |
| Drift Breaker Kit .....                            | 38213      |
| Toro Snow Oil 0W30 Synthetic 20-Ounce Bottle ..... | 38913      |
| Toro 2-Stage Cover.....                            | 490-7466   |
| Plain 2-Stage Cover.....                           | 490-7467   |

**Notes:**



**Count on it.**