



IGNITOR

FOR 40,000 & 55,000 BTU HEATERS

PART NO. 73-7100

INSTALLATION
INSTRUCTIONS

1. Remove (6) six screws in top cover and lift cover off heater (Fig. 1).

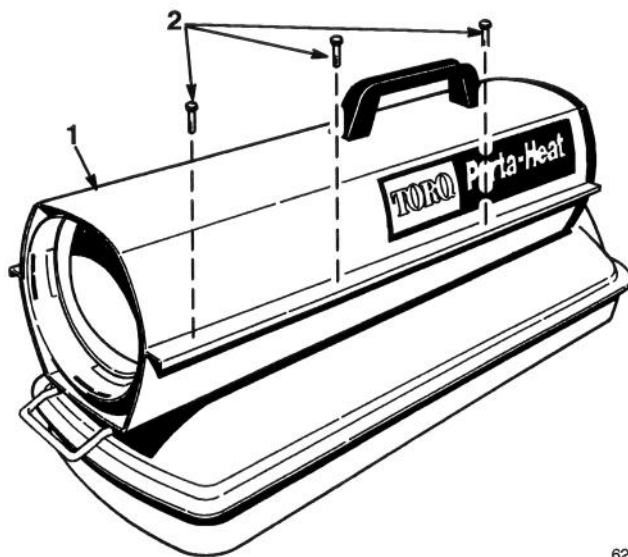


Figure 1

1. Top cover
2. Screws (6)

2. Remove (2) two nuts securing old ignitor to fuel tank (Fig. 2).
3. Position new ignitor on studs, making sure metal ground tap points toward front of heater (Fig. 2).
4. Slide ends of (2) two green ground wires onto stud (Fig. 2).

IMPORTANT: Ground wires must be ON TOP of metal ground tap, not under.

5. Secure ignitor and ground wires with (2) two nuts.

Note: If new ignitor mounting holes do not line up with mounting studs on fuel tank, mounting may be done with only (1) one nut and stud. Place the ignitor hole with the metal ground tap on the forward stud inside the heater (Fig. 2).

← FRONT OF HEATER

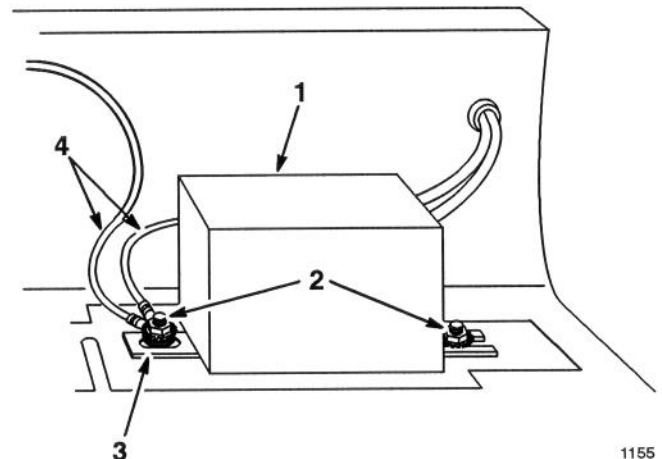


Figure 2

1. Ignitor
2. Nut & stud
3. Metal ground tap
4. Ground wires

6. Reinstall top cover.