


TORO

We Take Care™

MODEL NOS. 55302-100001 & UP (10 H.P.)
55402-100001 & UP (12 H.P.)

**PARTS
CATALOG**

10 H.P. and 12 H.P. SUBURBAN TRACTOR

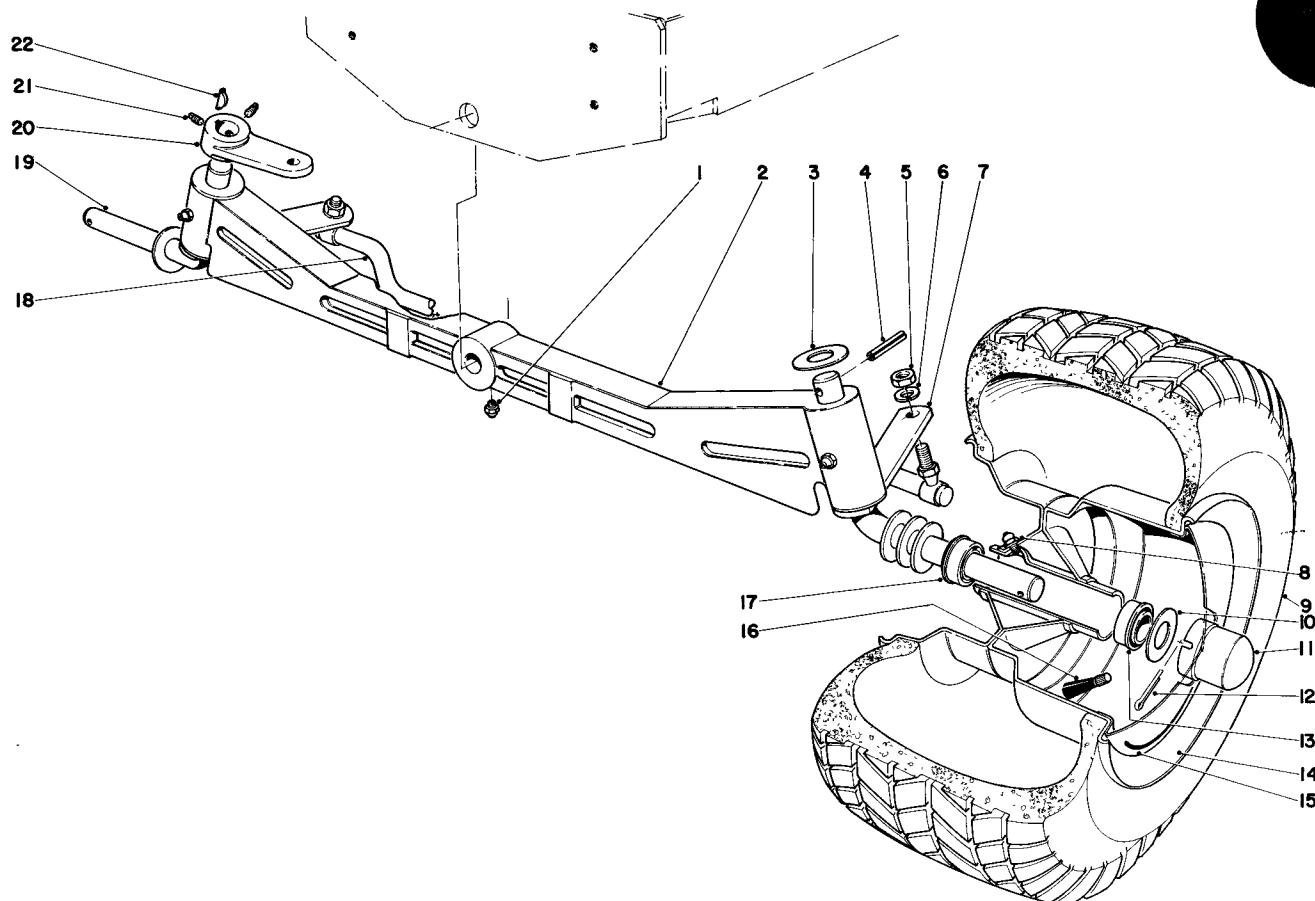


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302-43	Grease Fitting	3
2	7-3846	Front Axle Housing	1
3	3256-28	Washer	4
4	32121-15	Roll Pin	1
5	3219-3	Nut	2
6	3253-21	Lockwasher	2
7	7-0416	Axle Assy., L.H.	1
8	302-5	Grease Fitting	2
9	231-39	Tire	2
10	3256-28	Washer	6
11	217-64	Hub Cap 10 H.P.	2
12	3272-23	Cotter Pin	2

Ref. No.	Part No.	Description	No. Used
13	251-210	Bearing, Outer	2
14	217-79	Rim	2
15	217-77	Hub Cap 12 H.P.	2
16	232-21	Valve Core	2
17	251-209	Bearing, Inner	2
18	7-0417	Tie Rod	1
19	7-0415	Axle Assy., R.H.	1
20	7-0418	Steering Lever	1
21	3242-2	Set Screw	2
22	3257-23	Key	1
*	7-3340	Front Wheel Assy.	2


* Not Illustrated

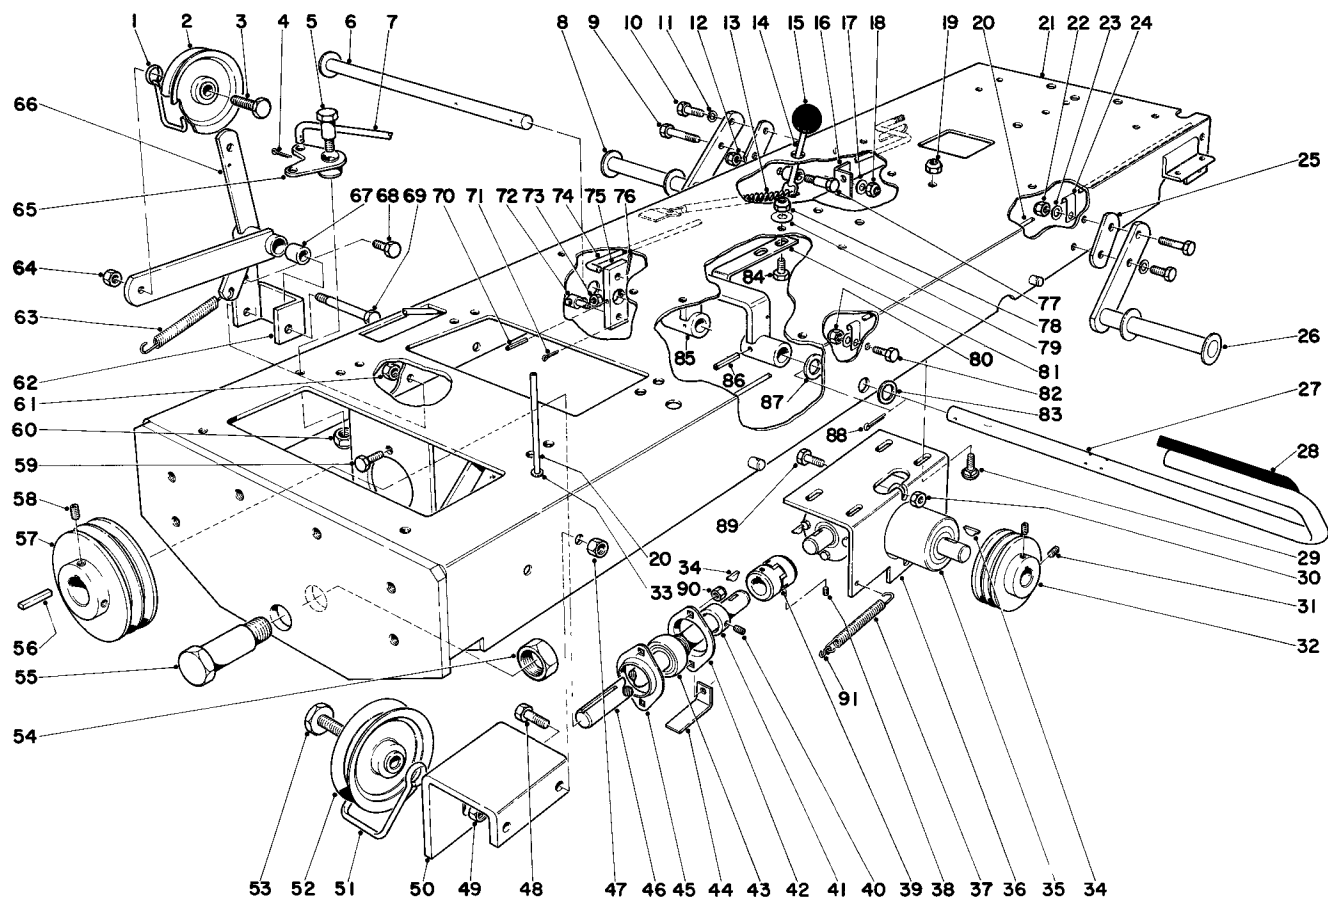

CHASSIS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	7-0432	Belt Retainer	1
2	7-0431	Pulley	1
3	32141-84	Lever Hd. Capscrew	1
4	3272-5	Cotter Key	1
5	7-0135	Shoulder Bolt	1
6	7-0381	Brake Shaft	1
7	7-3842	Idler Rod	1
8	7-3591	Bracket Foot Rest	1
9	323-8	Capscrew	2
10	323-6	Capscrew	2
11	3253-21	Lockwasher	2
12	32152-1	Nut	1
13	7-0582	Spring	1
14	7-3813	Brake Lock	1
15	233-22	Knob	1
16	7-3811	Brake Rod Retainer	1
17	3256-24	Washer	1
18	32152-2	Nut	1
19	32152-1	Nut	4
20	7-3843	Gas Line	1
21	7-3845	Chassis 10 H.P.	1
22	32152-2	Nut	1
23	3256-24	Flat Washer	2
24	7-0077	Clip Gas Line	2

Ref. No.	Part No.	Description	No. Used
25	7-3288	Spacer Foot Rest	2
26	7-3274	Bracket Foot Rest	1
27	7-3837	Brake Crank Arm	1
28	7-3900	Foot Pad Brake	1
29	3230-1	Carriage Bolt	4
30	32152-2	Nut	2
31	3246-4	Screw	2
32	7-0392	Pulley Drive	1
33	256-195	Nyliner	1
34	3257-23	Key	3
35	7-0424	Gear Box	1
36	7-0423	Bracket Right Angle Gear Box	1
37	7-0393	Spring	1
38	3245-7	Set Screw	1
39	7-6850	Coupling	1
40	3245-1	Set Screw	1
41	7-3096	Collar	1
42	7-3095	Bearing Flange	2
43	7-3094	Bearing	1
44	7-0372	Belt Guide	1
45	251-208	Bearing Incl. Ref. 41 - 43	1
46	7-6840	Drive Shaft	1
47	32152-1	Nut	2
48	322-3	Capscrew	2

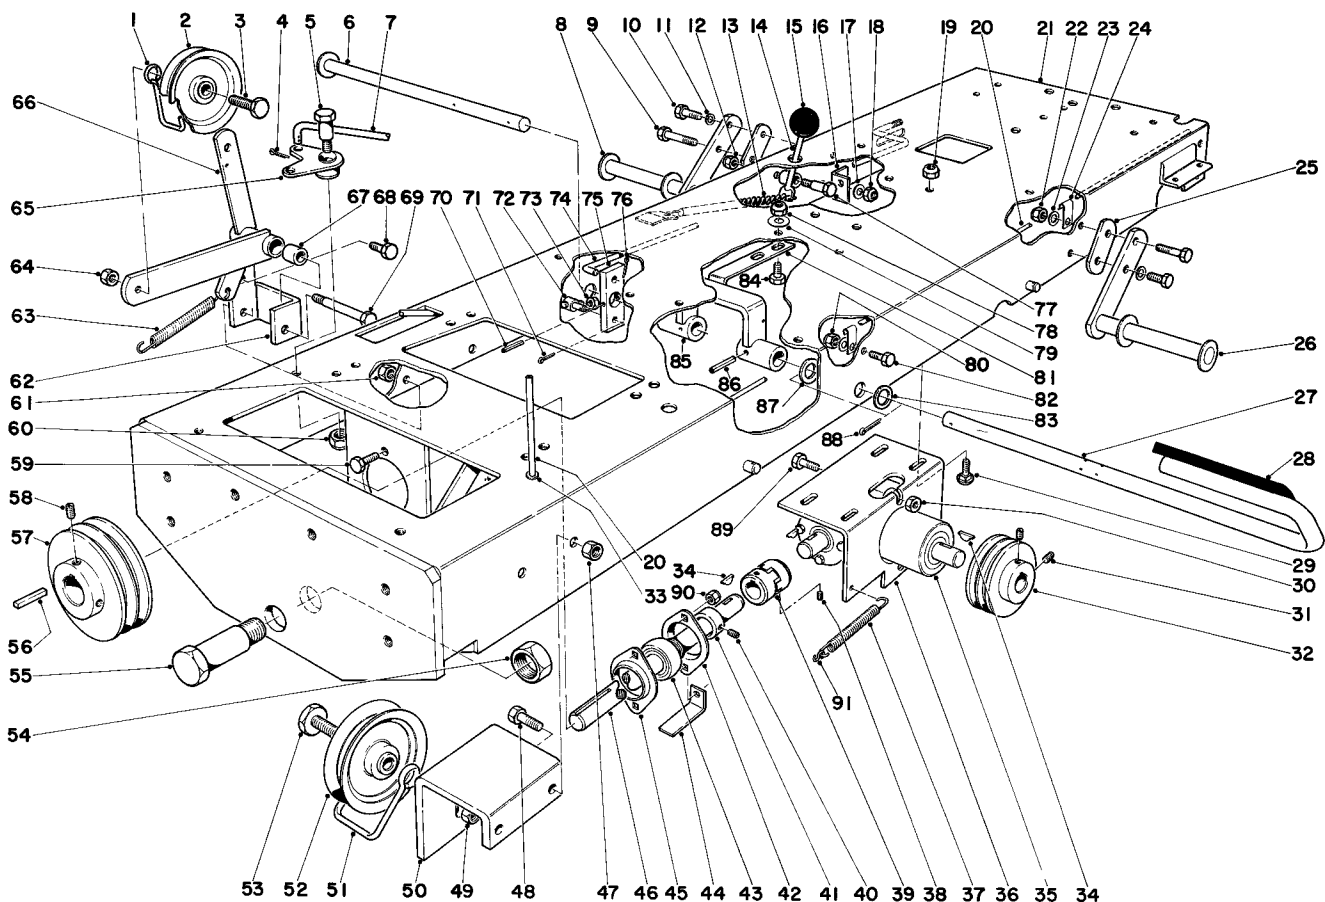


CHASSIS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
49	32153-2	Nut	1
50	7-0430	Idler Bracket	1
51	7-0432	Belt Retainer	1
52	7-0431	Pulley	1
53	32141-84	Leveler Hd. Capscrew	1
54	32152-6	Nut	1
55	7-0371	Pivot Bolt	1
56	5-1865	Square Key	1
57	7-0392	Pulley Drive	1
58	3246-2	Set Screw	2
59	322-4	Capscrew	2
60	3218-2	Jam Nut	1
61	32152-2	Nut	2
62	7-0375	Mounting Bracket Idler	1
63	7-0393	Spring	1
64	32153-2	Nut	1
65	7-0385	Bell Crank	1
66	7-0434	Idler Arm Incl. Ref. No. 67	1
67	256-171	Bushing	2
68	323-4	Capscrew	1
69	7-0377	Shoulder Bolt	1
70	32121-71	Roll Pin	1

Ref. No.	Part No.	Description	No. Used
71	3272-5	Cotter Key	2
72	7-0388	Pivot Clutch Rod	1
73	32152-4	Nut	1
74	7-3808	Brake Rod	1
75	7-0382	Bracket Idler	1
76	3272-7	Cotter Pin	1
77	7-0135	Shoulder Bolt	1
78	32152-1	Nut	1
79	3256-3	Washer	1
80	32152-1	Nut	1
81	7-0395	Stop Brake Pedal	1
82	322-3	Capscrew	1
83	7-0691	Washer	1
84	322-4	Capscrew	2
85	7-0383	Bracket Assembly	1
86	32121-71	Roll Pin	2
87	7-0126	Washer	1
88	3272-7	Cotter Pin	2
89	323-7	Capscrew	2
90	32152-1	Nut	2
*	7-3993	Chassis 12 H.P.	1
91	7-1050	S-Hook	1

*Not Illustrated

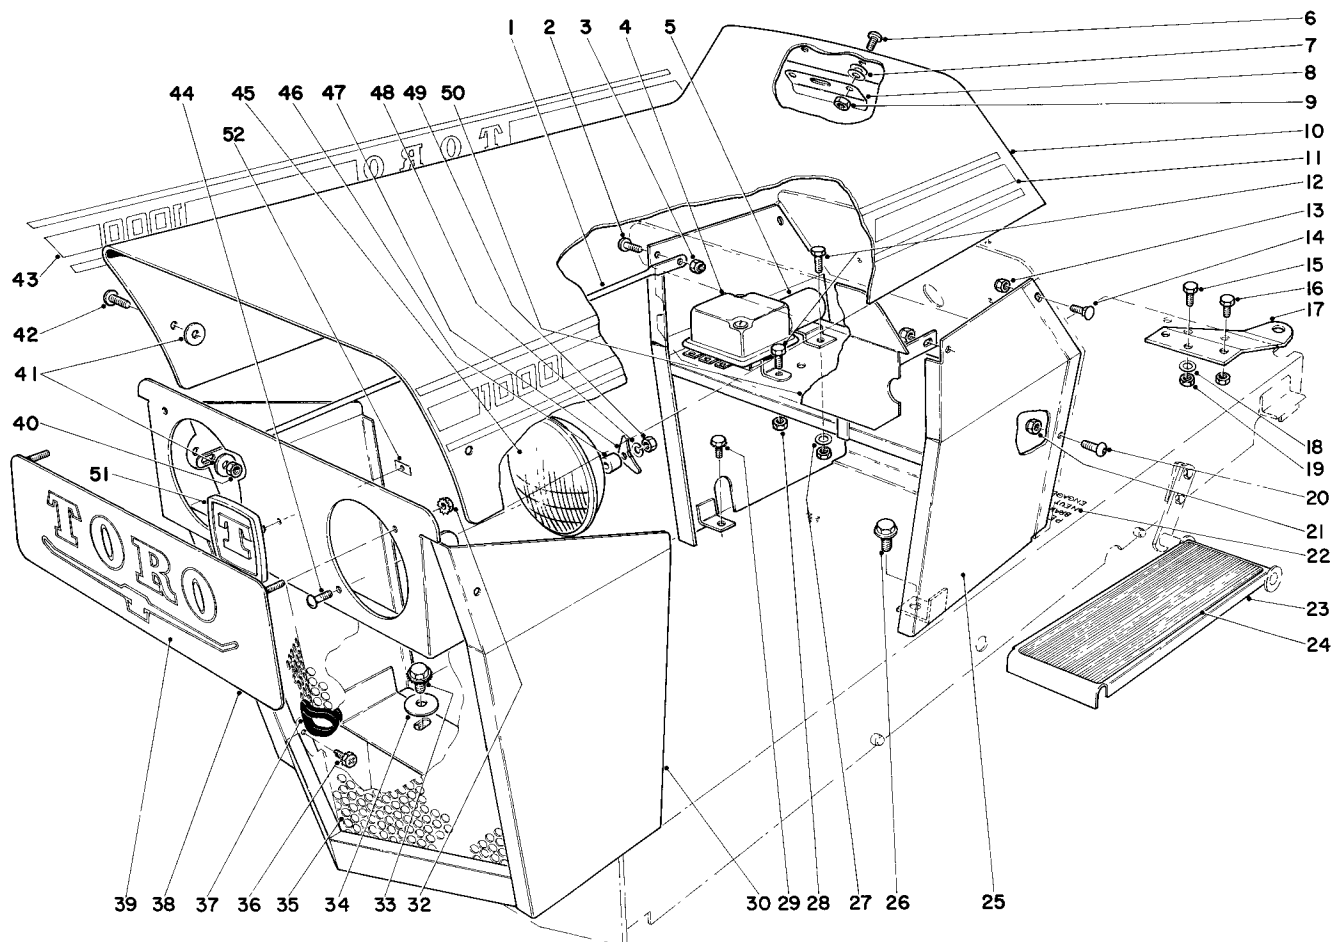


HOOD & GRILLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	7-3825	Rod Hood Support	2
2	3274-31	Capscrew Socket Head	2
3	32152-4	Nut	2
4	218-334	Voltage Regulator	1
5	218-335	Solenoid	1
6	3258-157	Screw, Phillips	2
7	3256-16	Washer	4
8	7-3326	Hood Latch	1
9	32152-4	Nut	2
10	7-3246	Hood	1
11	7-6680	Decal Side L.H. 10 H.P.	1
*	7-6700	Decal Side Hood L.H. 12 H.P.	1
12	321-2	Capscrew	4
13	32152-4	Nut	2
14	3229-11	Carriage Bolt	2
15	323-6	Capscrew	1
16	323-4	Capscrew	2
17	7-0463	Chassis Hitch	1
18	3256-3	Washer	1
19	32152-2	Nut	3
20	3274-32	Capscrew Socket Head	2
21	32152-1	Nut	2
22	7-3938	Decal Clutch Release	1
23	7-3262	Foot Rest	2
24	7-3273	Pad Foot Rest	2
25	7-3857	Battery Support	1
26	32140-61	Sems Screw	1

Ref. No.	Part No.	Description	No. Used
27	3256-2	Washer	2
28	32152-4	Nut	4
29	32140-45	Sems Screw	1
30	7-3850	Grille Frame W. A.	1
32	32149-8	Nut	4
33	32140-61	Sems Screw	2
34	7-0532	Washer	2
35	7-3854	Grille	1
36	32104-84	Self Tapping Screw	4
37	7-3834	Grommet	1
38	7-3847	Head Light Cover	1
39	7-3978	Decal Cover Plate	1
40	32152-1	Nut	2
41	7-0533	Washer	4
42	3274-32	Capscrew Socket Head	2
43	7-6670	Side Hood R. H. 10 H.P.	1
*	7-6690	Decal Side Hood R.H. 12 H.P.	1
44	3251-4	Screws 12 H.P.	4
45	7-1646	Head Light 12 H.P.	2
46	7-3501	Spacer 12 H.P.	4
47	7-3505	Clip 12 H.P.	4
48	3253-12	Lockwasher 12 H.P.	4
49	3217-26	Nut 12 H.P.	4
50	7-4306	Heat Deflector	1
51	7-5400	Logo Plate 12 H.P.	1
52	3290-275	Tinnerman 12 H.P.	2

* Not Illustrated

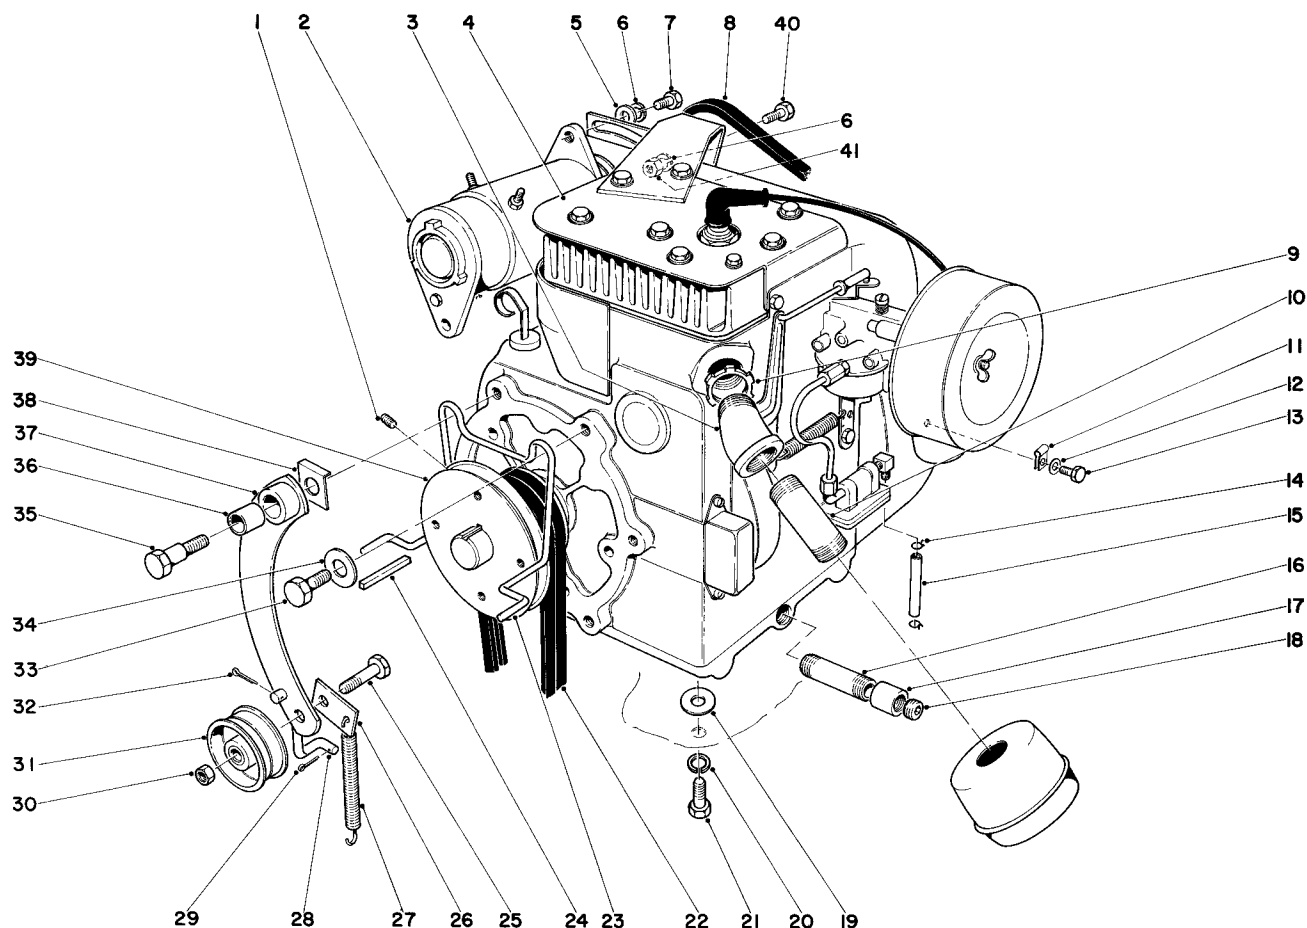


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3246-4	Set Screw	2
2	218-336	Generator	1
3	2811-11	Street Elbow	1
4	221-277	Engine 10 H.P.	1
5	3256-3	Washer	1
6	3253-4	Lockwasher	2
7	322-3	Capscrew	1
8	7-0530	Belt, Starter Generator	1
9	3290-163	Conduit Lock Nut	1
10	289-28	Pipe Nipple	1
11	7-2486	Cable Clamp	1
12	3256-1	Washer	1
13	321-4	Capscrew	1
14	2412-33	Hose Clamp	2
15	7-2700	Hose Gas	1
16	289-22	Nipple 10 H.P.	1
17	2810-3	Coupling 10 H.P.	1
18	285-3	Pipe Plug 10 H.P.	1
19	3256-4	Washer	4
20	3253-21	Lockwasher	4
21	323-6	Capscrew	4

Ref. No.	Part No.	Description	No. Used
22	7-0550	Belt Engine (Matched set of 2)	1
23	7-0454	Belt Guide	1
24	7-0238	Square Key	1
25	32141-84	Leveler Head Bolt	1
26	7-3815	Spring Tab	1
27	7-0141	Spring	1
28	7-3838	Idler Rod	1
29	3272-5	Cotter Pin	1
30	3217-7	Nut	1
31	7-0448	Idler Pulley	1
32	3272-5	Cotter Pin	1
33	324-2	Capscrew	1
34	3256-4	Washer	1
35	7-3833	Shoulder Bolt	1
36	256-173	Bushing	1
37	7-3831	Idler Arm Incl. Ref. No. 36	1
38	7-6270	Clip Belt Guide	1
39	7-0453	Pulley Engine	1
*	221-278	Engine, 12 H.P.	1
40	322-7	Capscrew	1
41	3217-6	Nut	1


* Not Illustrated

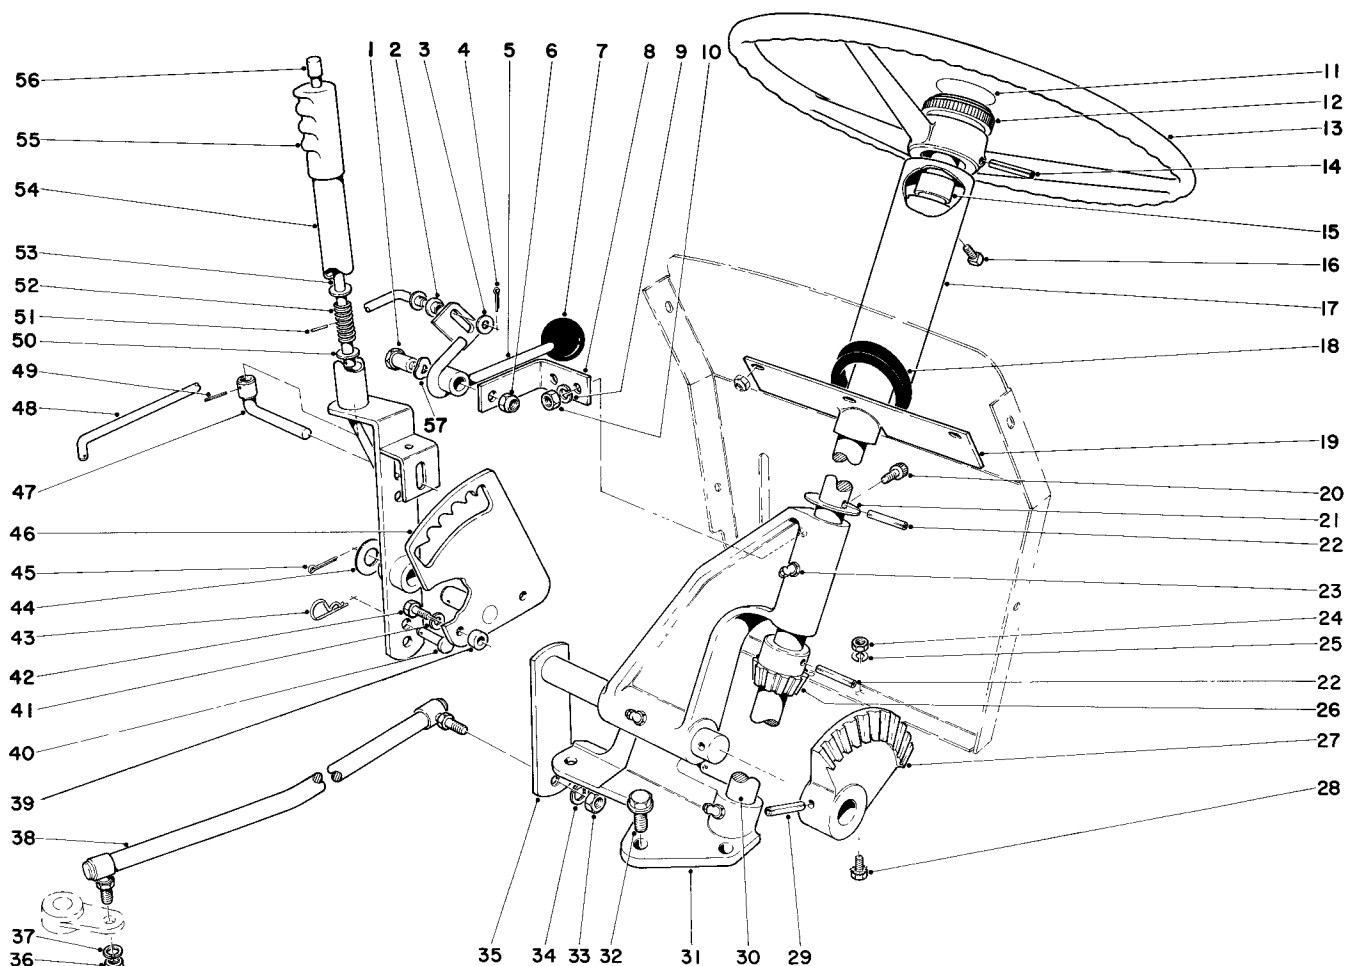

STEERING AND LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	7-0135	Shoulder Bolt	1
2	256-193	Bushing	1
3	3256-1	Washer	2
4	3272-5	Cotter Pin	1
5	7-3836	Clutch Lever	1
6	32152-1	Nut	1
7	233-22	Knob	1
8	7-3840	Idler Bracket	1
9	3253-4	Washer	2
10	3217-6	Nut	2
11	7-4322	Decal Steering Cap	1
12	7-4321	Steering Cap	1
13	238-5	Steering Wheel	1
14	32121-78	Roll Pin	1
15	256-32	Bushing	1
16	3242-2	Set Screw	1
17	7-3572	Cover Steering Support	1
18	7-3653	Grommet	1
19	7-3245	Steering Tube Incl. Ref. No. 15	1
20	3274-11	Screw	2
21	3256-28	Washer	1
22	32121-9	Roll Pin	2
23	302-44	Grease Fitting	3
24	3217-6	Nut	1
25	3253-4	Lockwasher	1
26	7-0468	Pinion Gear	1
27	7-3664	Steering Gear	1
28	32140-51	Sems Screw	1
29	32121-72	Drive Lok Pin	1


Ref. No.	Part No.	Description	No. Used
30	7-0467	Steering Shaft	1
31	7-0407	Steering Gear Support	1
32	32140-45	Sems Screw	2
33	3219-3	Nut	1
34	3253-21	Lockwasher	1
35	7-0408	Steering W. A.	1
36	3220-3	Nut	1
37	3253-21	Lockwasher	1
38	7-0411	Steering Rod	1
39	7-0698	Spacer	2
40	7-0511	Clevis Pin	1
41	3253-4	Lockwasher	2
42	322-5	Cap screw	2
43	3290-255	Hair Pin	1
44	7-0131	Washer	1
45	3272-11	Cotter Pin	1
46	7-0512	Quadrant, Assy.	1
47	7-0516	Lift Lock	1
48	7-3953	Clutch Rod	1
49	32121-50	Roll Pin	1
50	7-0052	Flat Washer	2
51	32121-73	Roll Pin	1
52	7-0514	Compression Spring	1
53	7-0515	Lift Rod	1
54	7-0513	Lower Handle	1
55	7-0510	Handle Grip	1
56	7-0508	Cap Lift Adjustment Rod	1
57	3290-300	Wavy Washer	1

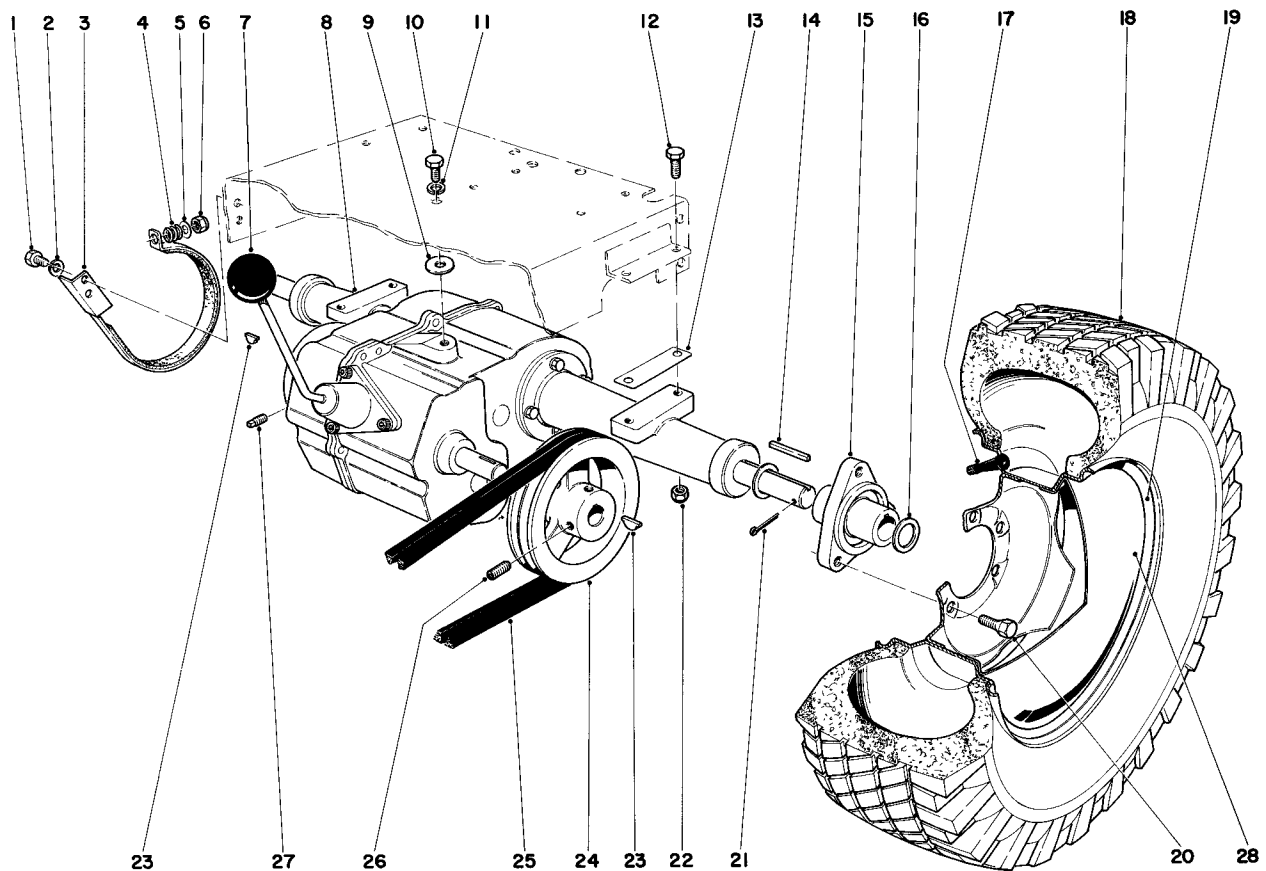

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321-2	Capscrew	2
2	3253-3	Lockwasher	2
3	7-3646	Brake Band Assy.	1
4	7-3816	Spring	1
5	3256-3	Washer	2
6	32152-1	Conelock Nut	1
7	233-21	Knob	1
8	7-0477	Transmission Complete	1
9	3256-4	Washer	1
10	323-6	Capscrew	1
11	3253-21	Lockwasher	1
12	323-8	Capscrew	4
13	7-0461	Axle Pad	2
14	7-0238	Square Key	2
15	7-0480	Wheel Hub	2


Ref. No.	Part No.	Description	No. Used
16	7-0481	Washer	4
17	232-24	Valve Core	2
18	231-41	Tire	2
19	217-62	Rear Wheel	2
20	7-1418	Tapered Capscrew	6
21	3272-30	Cotter Pin	2
22	32152-2	Conelock	4
23	3257-23	Key	2
24	7-0478	Pulley Transmission	1
25	7-0551	Belt Transmission (Matched Set of 2)	1
26	3246-4	Set Screw	2
27	3246-4	Set Screw	1
28	217-78	Hub Cap 12 H.P.	2
	7-0554	Wheel Assy.	2

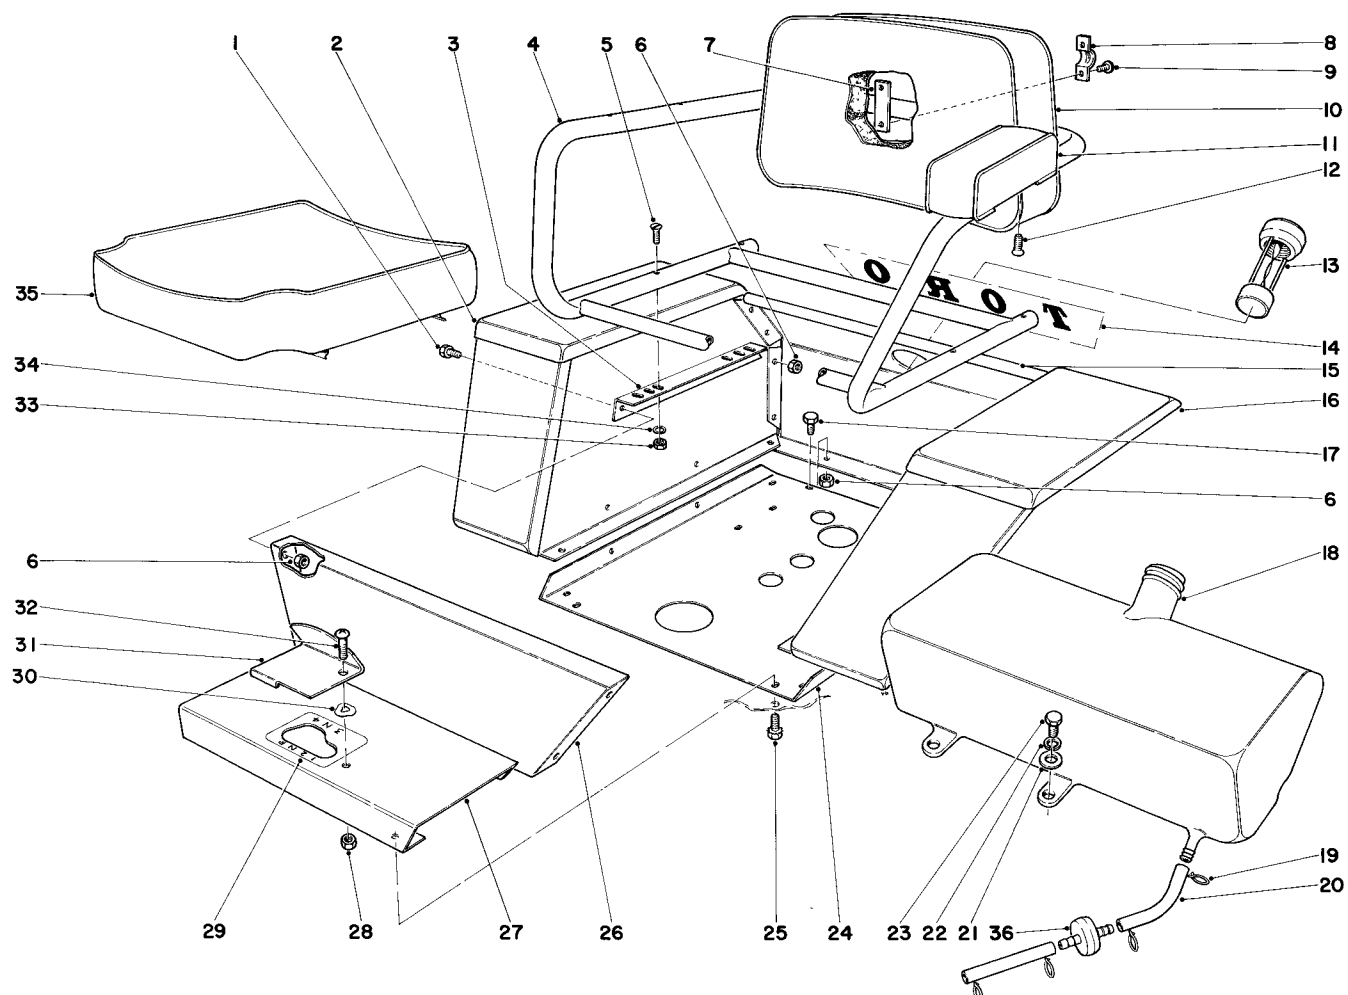

SEAT AND FENDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-2	Capscrew	16
2	7-3280	Fender R. H.	1
3	7-3267	Brace Fender	2
4	7-3341	Frame Seat	1
5	32108-8	Flat Head Screw	4
6	32152-1	Nut	18
7	351-28	Plate Clamp	2
8	351-27	U - Clamp	2
9	3290-133	Round Head Screw	4
10	7-3356	Backrest Seat	1
11	7-3355	Arm Rest Seat	2
12	32108-8	Flat Head Screw	4
13	7-3945	Gas Gauge	1
14	7-3934	Decal Seat	1
15	7-3980	Rear Fender	1
16	7-3278	Fender L. H.	1
17	322-1	Capscrew	2
18	7-3910	Gas Tank	1

Ref. No.	Part No.	Description	No. Used
19	2412-33	Hose Clamp	4
20	7-2700	Gas Hose	2
21	3256-4	Washer	2
22	3253-21	Lockwasher	2
23	323-6	Capscrew	2
24	7-3966	Base Fender Rear	1
25	32104-84	Self Tapping Screw	2
26	7-3258	Fender Front	1
27	7-3810	Shift Pattern	1
28	32152-4	Nut	1
29	7-3821	Decal Shift Pattern	1
30	3290-234	Wavy Washer	1
31	7-3812	Tab Lock out	1
32	32122-42	Phillips Screw	1
33	3217-5	Nut	4
34	3253-3	Lockwasher	4
35	7-3354	Cushion Seat	1
36	304-92	Filter Gas Tank	1

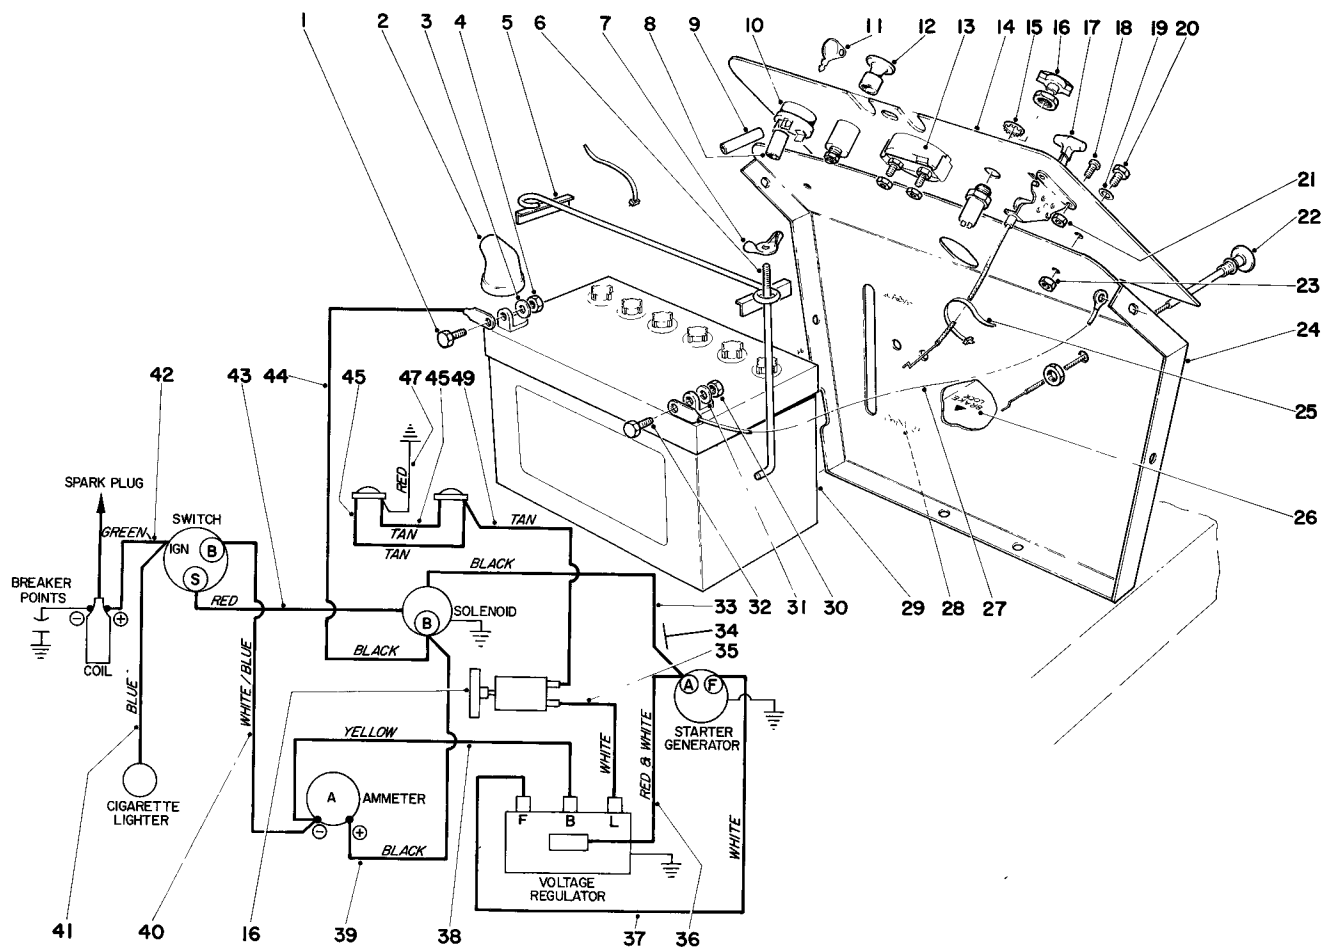

DASH PANEL AND WIRING DIAGRAM

Ref. No.	Part No.	Description	No. Used
1	321-4	Capscrew	1
2	218-331	Battery Boot	2
3	3256-16	Washer	1
4	3217-5	Nut	1
5	7-0534	Battery Clamp	1
6	7-3328	Battery Bolt	2
7	32103-12	Wing Nut	2
8	7-3597	Insulator	1
9	7-3635	Insulator	2
10	7-3951	Starter Switch	1
11	218-412	Key	2
12	7-3952	Cigarette Lighter Assy.	1
13	7-6130	Ammeter	1
14	7-3856	Dash Panel	1
15	2410-22	Plug Button 10 H.P.	1
16	7-1780	Light Switch 12 H.P.	1
17	7-3948	Throttle Control	1
18	32122-43	Cross Recess Screw	2
19	3256-16	Washer	2
20	321-3	Capscrew	2
21	32149-6	Nut	2
22	7-3947	Choke Control	1
23	32152-4	Nut	2
24	7-3911	Rear Hood Support	1

Ref. No.	Part No.	Description	No. Used
25	7-3123	Cable Ties 12 H.P.	2
26	7-3937	Decal Brake	1
27	7-3964	Wire	1
28	7-3991	Decal Engage & Disengage	1
29	239-14	Battery	1
30	3217-6	Nut	1
31	7-0024	Washer	1
32	322-3	Capscrew	1
33	7-3954	Wire	1
34	7-3944	Wiring Harness	1
35	7-0321	Wire 12 H.P.	1
36	7-3955	Wire	1
37	7-3956	Wire	1
38	7-3962	Wire	1
39	7-3963	Wire	1
40	7-3960	Wire	1
41	7-3958	Wire	1
42	7-3961	Wire	1
43	7-3957	Wire	1
44	7-3964	Wire	1
45	7-3538	Wire 12 H.P.	2
47	7-4327	Wire 12 H.P.	1
49	7-2072	Wire 12 H.P.	1
*	7-9100	Dash Decal	1

*Not Illustrated




TRANSAXLE ASSEMBLY PARTS LIST

Ref. No.	Part No.	Description	No. Used
1	784062A	Lever & Housing Assy., Shift (Incl. Nos. 2 thru 7)	1
2	792016	Ring, Snap	1
3	792001	Ring, Quad	1
4	792002	Pin, Roll	1
5	784093	Housing, Shift Lever	1
6	794094	Keeper, Shift Lever	1
7	784063	Lever, Shift	1
8	784054	Rod Assy., Shift (Incl. Nos. 9 thru 12 & 24)	1
9	792003	Spring	1
10	792004	Ball, Steel	1
11	784004	Fork, Shifter	1
12	784055	Rod, Shifter	1
13	784056	Rod Assy., Shift (Incl. Nos. 9, 10, 11, 14 & 24)	1
14	784057	Rod, Shifter	1
15	774046	Axle, R.H.	1
15A	774047	Axle, L.H.	1
16	780042	Washer, Thrust	1
17	792005	Screw, Hex Hd. Cap	1
18	792006	Lockwasher	1
19	778033A	Gear, Ring	1
20	786019	Pin, Drive	1
21	786027	Block, Drive	1
22	778094	Pinion, Bevel	1
23	776029A	Shaft & Gear, Brake	1
24	792017	Ring, Snap	1
25	776026	Shaft & Bearing Assy., Pinion (Incl. No. 26)	1
26	780018	Bearing	1
27	778034	Gear Cluster Assy. (Incl. No. 28)	1
28	780053	Bushing	1
29	784074	Stop, Shifter	1
30	788023	Gasket, Case & Cover	1
31	788022	Gasket, Shift Lever Housing	1
32	778019	Gear, Shifting (3rd & 4th)	1
33	778020	Gear, Shifting (1st, 2nd & Rev.)	1
34	778095	Gear, Bevel	1
35	778037	Gear, Idler	1
36	778035	Gear Cluster Assy., (Incl. No. 28)	1
37	786024	Spacer	1
38	792018	Ring, Snap	1
39	776027	Shaft, Input	1

Ref. No.	Part No.	Description	No. Used
40	778024	Spur Gear, Input Shaft	1
41	780052	Washer, Thrust	1
42	788021	Seal & Retainer Assy., Oil (Incl. No. 45)	1
43	778036	Gear, Output	1
44	776028	Pinion, Output	1
45	788008	Seal, Oil	1
46	782024	Housing, R.H. Axle	1
46A	782025	Housing, L.H. Axle	1
47	770015	Case Assy., Transaxle (Incl. Nos. 54, 55, 57 & 63)	1
48	772019	Cover Assy., Transaxle (Incl. Nos. 54, 55, 57, 59 & 63)	1
49	792007	Screw, Socket Hd. Cap	1
50	786026	Pin, Dowel	1
51	792028	Screw, Hex Hd. Cap	1
52	792019	Plug, Magnetic Drain	1
53	792029	Lockwasher, Split	1
54	780049	Bearing, Needle	1
55	780022	Bearing, Needle	1
56	780024	Bearing, Ball	1
57	780047	Bearing, Needle	1
58	780050	Bearing, Ball	1
59	780046	Bearing, Needle	1
60	788025	Seal, Oil	1
61	780001	Washer	1
62	776031	Shaft & Pinion	1
63	780048	Bearing, Needle	1
64	776030	Shaft, Reverse Idler	1
65	786025	Spacer, Reverse Idler	1
66	778016	Idler, Reverse	1
67	778038	Spur Gear, (22 teeth)	1
68	780039	Bearing, Thrust	1
69	774071A	Carrier Assy., Differential (Incl. No. 71)	1
70	774072A	Carrier Assy., Differential (Incl. No. 71)	1
71	780041	Bushing	1
72	788024	"O" Ring	1
73	780007	Washer, Thrust	1
74	780051	Washer, Thrust	1
75	792010	Plug, Pipe	1
76	780075	Race, Thrust	1
77	790002	Drum, Brake	1

Transaxle part numbers are listed for identification only. Obtain replacement parts from Lauson Power Products. See your Toro distributor for location of the nearest Lauson Power Products distributor.

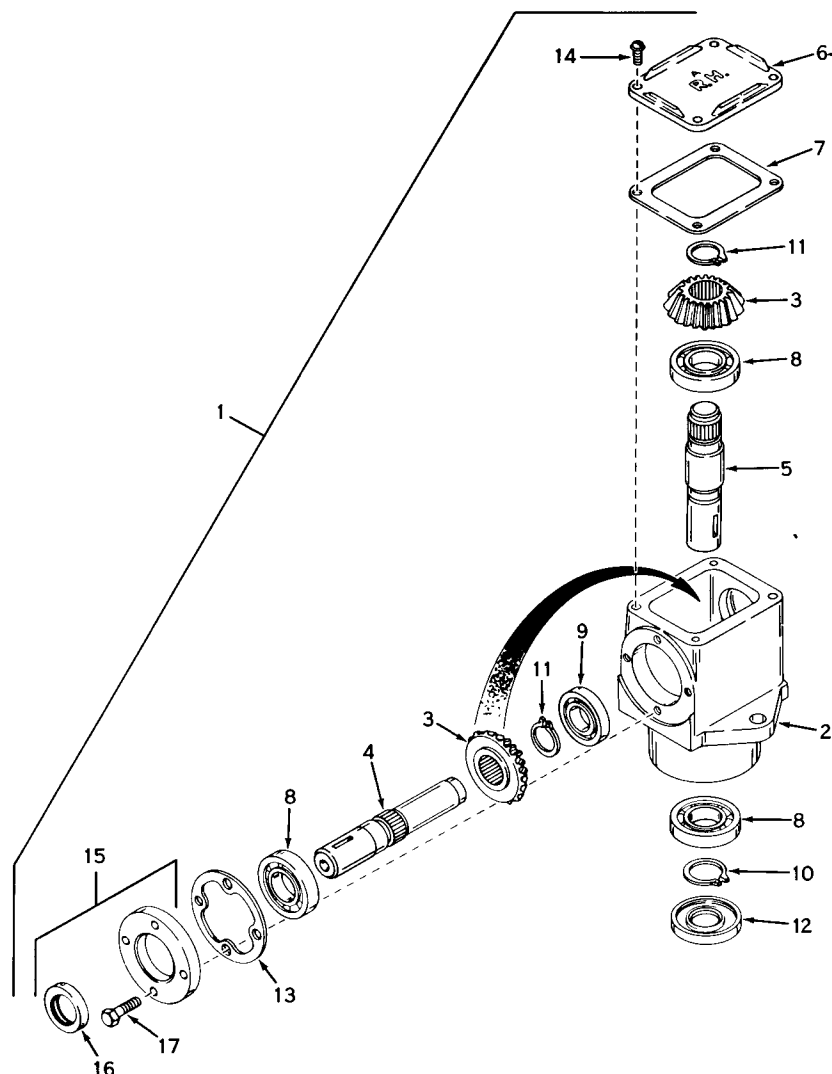


RIGHT ANGLE GEAR BOX ASSEMBLY MODEL P1487-P91

Ref. No.	Part No.	Description	No. Used
1	794010	Head Assy., Right Hand (Incl. Nos. 2 thru 15)	1
2	770026	Housing, Right Angle Drive	1
3	778046	Gear, Miter	1
4	776059	Shaft, Input Pinion	1
5	776060	Shaft, Output	1
6	772034	Cover, Right Hand	1
7	788028	Gasket, Cover	1
8	780034	Bearing, Ball	1
9	780024	Bearing, Ball	1

Ref. No.	Part No.	Description	No. Used
10	788019	Ring, Snap	1
11	788018	Ring, Snap	1
12	788029	Seal, Oil	1
13	788030	Gasket, Cap	1
*14	32104-26	Screw, Rd. Hd. Self Tap.	1
15	786029	Cap & Seal Assy., Retainer (Incl. Nos. 16 & 17)	1
16	788031	Seal, Oil	1
*17	321-5	Screw, Hex Hd.	1

* Toro Part No.


Gear Box part numbers are listed for identification only. Obtain replacement parts from Lauson Power Products. See your Toro distributor for location of the nearest Lauson Power Products distributor.

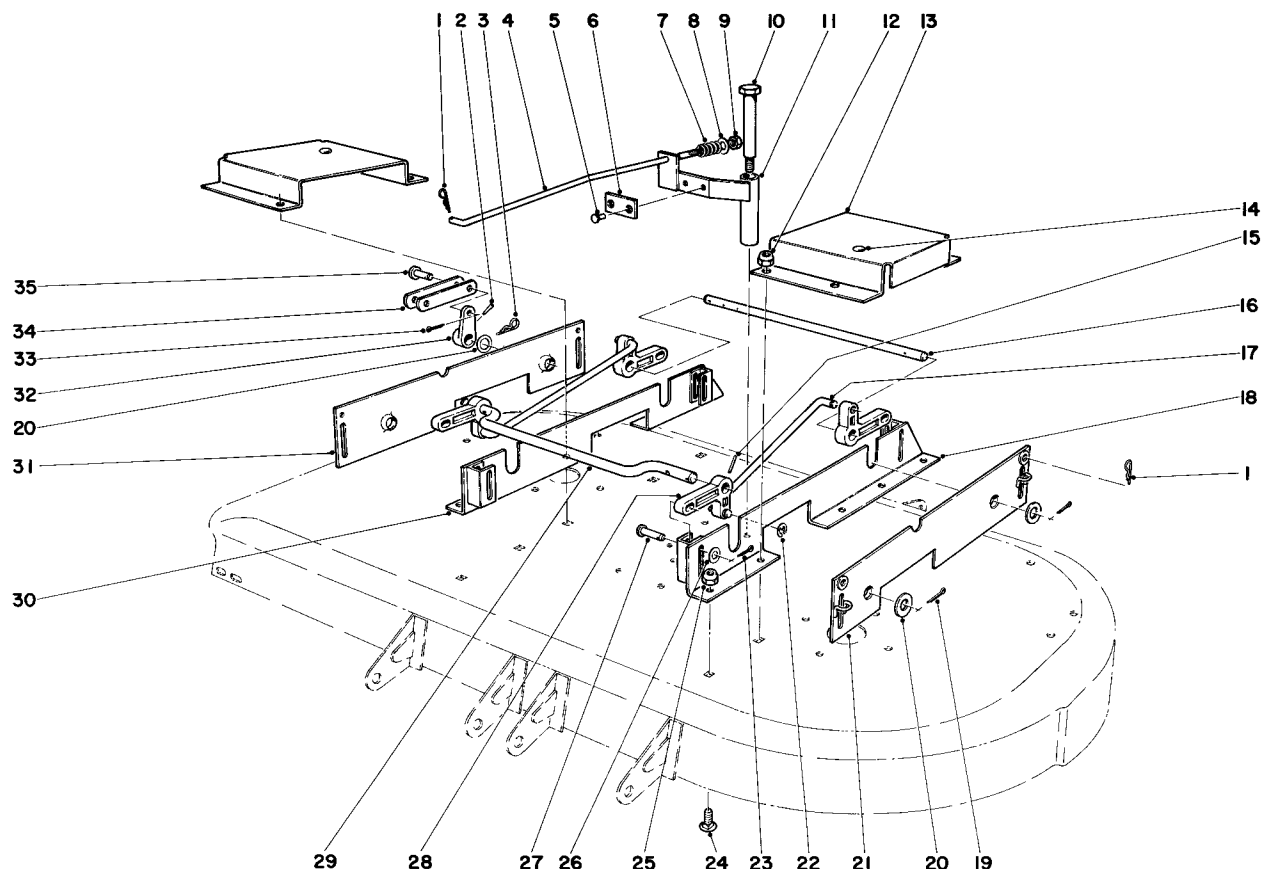

42" MOWER DECK LINKAGE ASSEMBLY (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	3290-255	Hair Pin Cotter	5
2	32121-75	Pin Drive	1
3	3290-290	Hair Pin Cotter	1
4	7-0631	Blade Brake Rod	1
5	3290-287	Rivet	2
6	7-0643	Lining	1
7	7-0514	Compression Spring	1
8	7-0533	Washer	1
9	32152-4	Nut	1
10	7-0647	Shoulder Bolt	1
11	7-0642	Brake Band	1
12	32152-1	Nut	8
13	7-0622	Pulley Cover	2
14	2410-23	Plug Button	2
15	32121-71	Roll Pin	4
16	7-0611	Shaft Rear Pivot	1
17	7-0608	Lift Link	2
18	7-0584	Bracket Assy. Lower	1


Ref. No.	Part No.	Description	No. Used
19	3272-11	Cotter Pin	3
20	7-0131	Washer	4
21	7-0607	Mower Plate Housing	1
22	32120-35	Snap Ring	4
23	3272-11	Cotter Pin	4
24	7-0250	Carriage Bolt	10
25	32152-1	Nut	6
26	7-0052	Washer	4
27	7-0586	Lift Pin	4
28	7-0265	Bell Crank Lift	4
29	7-0610	Shaft Front Pivot	1
30	7-0583	Bracket Assy. Lower	1
31	7-0606	Mower Plate Housing	1
32	7-0612	Lift Lever	1
33	3272-7	Cotter Pin	1
34	7-0591	Lift Link Adjustment	2
35	7-0511	Pin Lift Adjustment	1

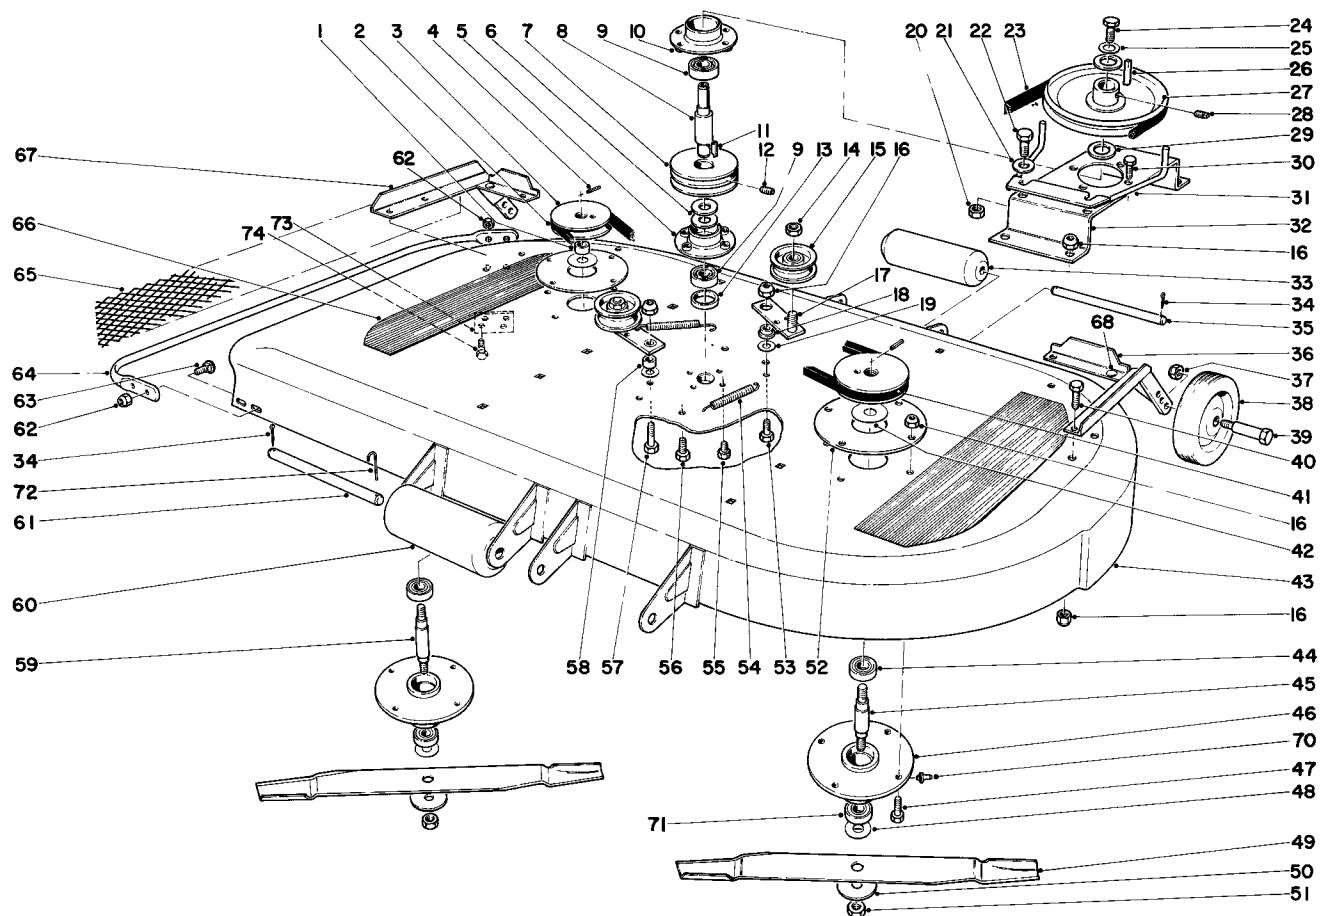

42" MOWER DECK ASSEMBLY (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	7-0577	Spacer	1
2	7-0073	Belt	1
3	7-0578	Pulley Blade	2
4	32121-74	Roll Pin	2
5	7-0638	Bearing Housing	1
6	7-0126	Washer	2
7	7-0634	Pulley Blade Drive	1
8	7-0633	Blade Drive Shaft	1
9	251-5	Bearing	2
10	7-0641	Bearing Housing	1
11	3257-23	Key	1
12	3246-5	Set Screw	1
13	7-0626	Spacer	1
14	3218-3	Nut	2
15	3-4244	Idler Pulley	2
16	32152-1	Nut	14
17	7-3377	Idler Bracket	2
18	7-0083	Bushing	2
19	3256-3	Washer	2
20	32152-1	Nut	2
21	3256-3	Washer	2
22	322-3	Capscrew	2
23	7-0630	Belt	1
24	321-2	Capscrew	1

Ref. No.	Part No.	Description	No. Used
25	7-0553	Washer	1
26	5-1077	Key	1
27	7-0627	Pulley Blade	1
28	3242-13	Set Screw	1
29	7-0131	Washer	2
30	32140-55	Sems Screw	4
31	7-3370	Belt Guide	1
32	7-0636	Bracket Blade Pulley	1
33	7-0276	Roller	1
34	3272-11	Cotter Pin	3
35	7-0277	Shaft Roller	1
36	7-0593	Bracket	1
37	32152-2	Nut	2
38	241-87	Wheel	2
39	7-0262	Wheel Axle	2
40	322-2	Capscrew	6
41	7-0354	Belt	1
42	7-0131	Washer	2
43	7-0574	Mower Housing	1
44	251-5	Bearing	2
45	7-0597	Blade Shaft	1
46	7-0287	Spindle Housing	2
47	322-4	Capscrew	8
48	7-3590	Washer	2

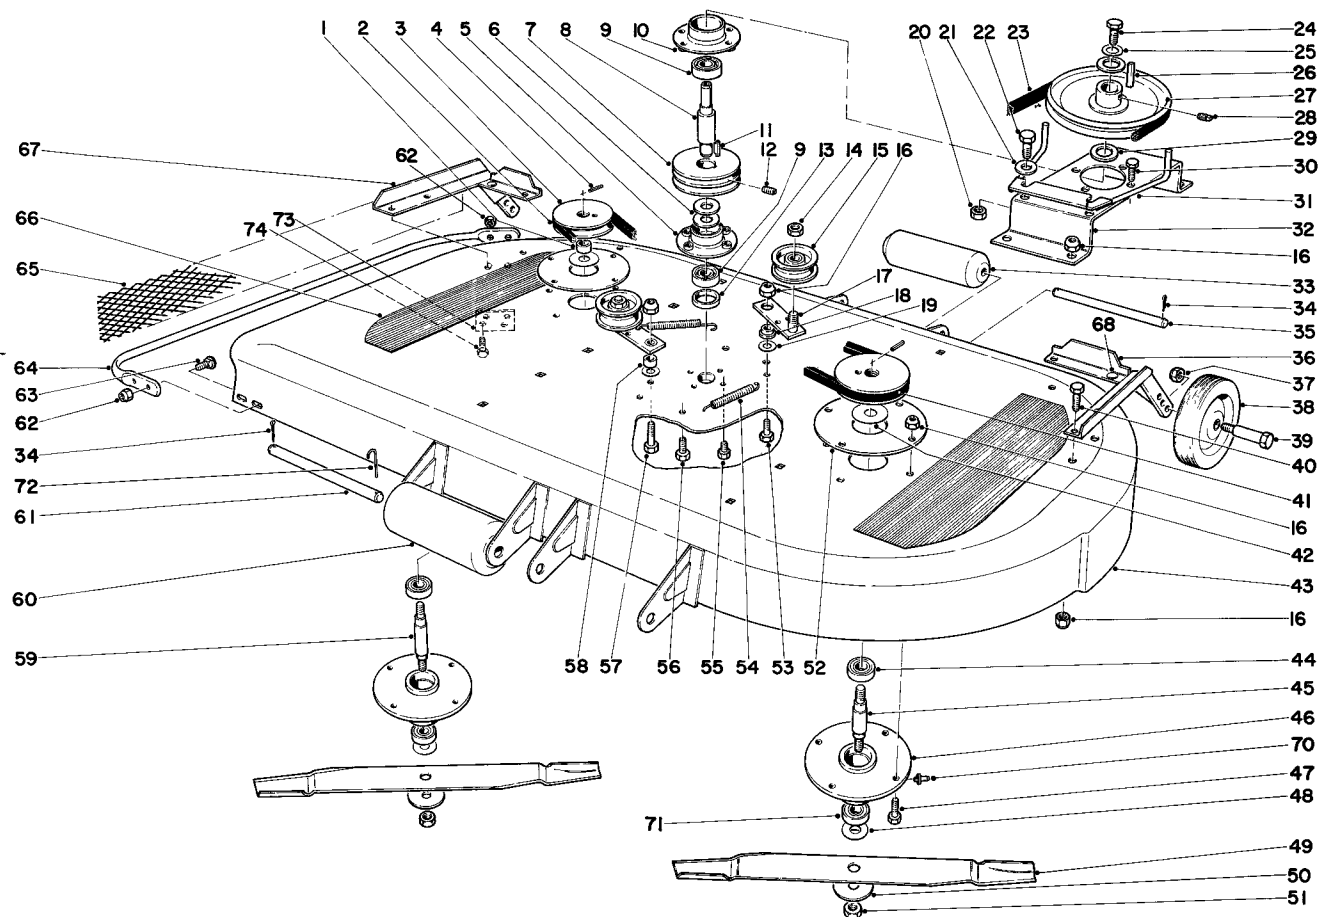

42" MOWER DECK ASSEMBLY (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
49	7-0587	Blade	2
50	7-0253	Washer Blade	2
51	32152-6	Nut	2
52	7-0252	Washer	2
53	322-3	Capscrew	1
54	7-0582	Spring	2
55	32140-55	Sems Screw	4
56	322-2	Capscrew	3
57	322-6	Capscrew	1
58	7-0581	Spacer	1
59	7-0598	Blade Shaft	1
60	7-0624	Roller	2
61	7-0590	Shaft Roller	2

Ref. No.	Part No.	Description	No. Used
62	32152-4	Nut	6
63	3229-11	Carriage Bolt	2
64	7-0588	Blade Guard	1
65	7-0573	Leaf Mulcher	1
66	7-0623	Foot Pad	2
67	7-0592	Bracket	1
68	2410-7	Plug Button	2
70	302-5	Grease Fitting	2
71	251-123	Bearing	2
72	7-6280	Retainer Roller	3
73	7-9060	Bracket Blade Guard	1
74	321-3	Capscrew	4



SPECIFICATIONS

ENGINE: 10 H.P. and 12 H.P. 4 cycle, air cooled, dry-paper element air cleaner.

FUEL TANK: Capacity: 2 gallons
Fuel gauge integral with cap

TRACTION DRIVE: Two machine V-belts from 2.77 P.D. double groove engine pulley to 3.69 P.D. double groove input pulley on drive shaft (1.33:1 reduction) to input shaft of right angle gear box. Two matching V-belts from 3.69 P.D. double groove pulley, on outside shaft of right angle gear box, to 5.54 P.D. transaxle input pulley (1.5:1 reduction).

RIGHT ANGLE GEAR BOX: Cast iron housing with steel miter gears (1.0:1 reduction).

TRANSAXLE ASSEMBLY: Cast iron housings, 1" steel axles, steel cut gears, running in oil.

Lubrication: 4 pints Shell Macoma No. 72

Gear Ratios:

First	174.0:1
Second	58.4:1
Third	32.7:1
Fourth	22.1:1
Reverse	42.4:1

TOTAL REDUCTION: 44.2:1 to 348.0:1

CONSTRUCTION: Formed 10 gauge steel channel main frame. Sheet steel fender and seat support. Seat cushion, seat back, and arm rests attached to tubular seat frame. Pivotal, malleable iron front axle with 3/4" diameter steel spindles.

STEERING: Steering wheel supported in bronze bushed column. 18 tooth steel pinion and 72 tooth steering gear.

WHEELS: Front: Stamped steel discs with drop center rim.
Rear: Stamped steel discs with drop center rim.

TIRES: Front: 6.50 x 8 tubeless pneumatic
Rear: 8.50 x 12 tubeless pneumatic

CONTROLS:

ENGINE: Control wire and casing mounted on instrument panel for speed control. Positions are from "slow" to "fast". Control wire and casing for choke. Key switch for starting and stopping.

TRANSMISSION: Single lever control for first, second, third, fourth and reverse.

CLUTCH AND BRAKE: Single, foot operated pedal. Depressing pedal disengages clutch idler pulley. Further pedal movement tightens brake band on transaxle brake drum. Parking brake provided

CUTTER CONTROL: Single lever with over-center spring disengagement of idler pulley. In disengage position, blade brake is applied to cutter pulley.

CUTTER HEIGHT ADJUSTMENT: Selector from 2" to 4" adjustment in 1/2" increments.

ELECTRICAL SYSTEM: Consists of: 12 volt battery, starter-generator, voltage regulator, key switch, ammeter, ignition coil and starter solenoid.

DIMENSIONS:

Wheel Base:	46"	Length:	67½"
Wheel Tread:	29"	Width:	36"
Turning Radius:	27" min.	Height:	38"

SPEEDS IN MPH:

First	.70
Second	2.06
Third	3.69 at 3600 engine RPM
Fourth	5.46
Reverse	2.84

SAFETY FEATURES: Automatic blade brake; enclosed and guarded drive.

OPTIONAL EQUIPMENT:

42" Snowthrower, Model No. 59030 (No PTO Required)
42" Mower Deck, Model No. 59004
42" Snow Blade, Model No. 59001
10" Plow, Model No. PP510
8" Plow, Model No. PP508
Seeder Spreader, Model No. 36H-26
Cultivator, Model No. 59007
Wheel Weights, Model No. 11-0440
Hub Caps (10 H.P. only), Model No. 59028
Roller, Model No. 10T
Disc Harrow, Model No. DD100
3 Gang Reel Mower, Model No. 1020
Steel Dump Cart, Model No. 59003
Lawn Aerator, Model No. 36H
Snow Cab, Model No. 3457
Headlight Kit (10 H.P. only), Model No. 59041
Tire Chains, Model No. H-0390

TOTAL WEIGHT: 541 lbs. net	}	10 H.P.
636 lbs. with 42" cutter		
562 lbs. net	}	12 H.P.
657 lbs. net with 42" cutter		

TIRE PRESSURE: For shipping purposes, the tires have been over-inflated.