




Form No. 3438-940 Rev B

**Count on it.**

# Operator's Manual

## 36in Spreader/Sprayer Spray Master

Model No. 34231—Serial No. 400000000 and Up

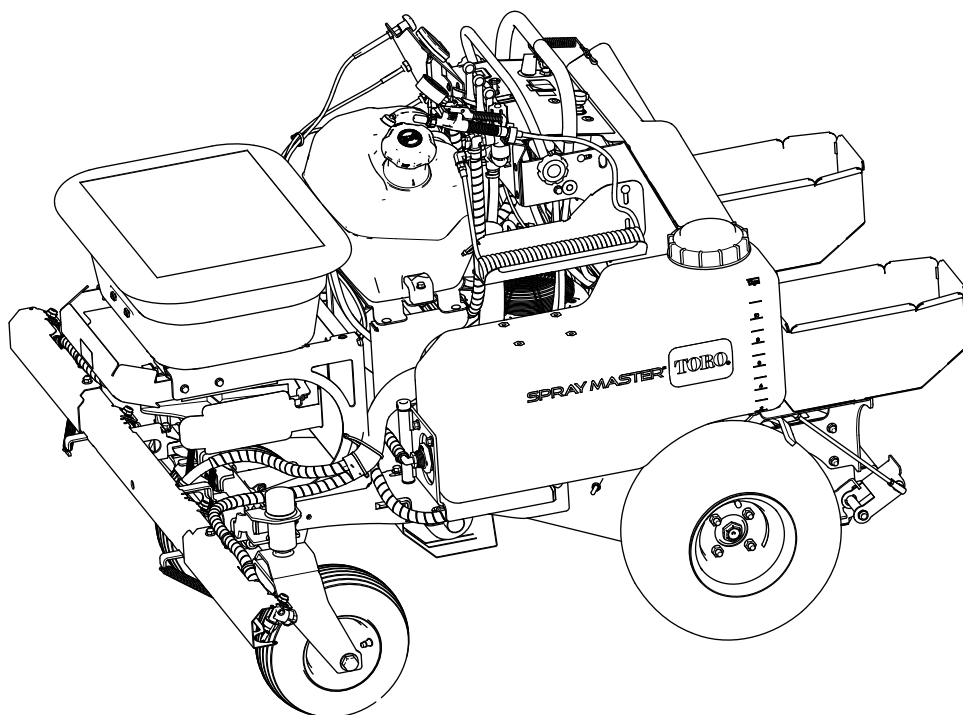

It is a violation of California Public Resource Code Section 4442 or 4443 to use or operate the engine on any forest-covered, brush-covered, or grass-covered land unless the engine is equipped with a spark arrester, as defined in Section 4442, maintained in effective working order or the engine is constructed, equipped, and maintained for the prevention of fire.

The enclosed engine owner's manual is supplied for information regarding the US Environmental Protection Agency (EPA) and the California Emission Control Regulation of emission systems, maintenance, and warranty. Replacements may be ordered through the engine manufacturer.

## ⚠ WARNING

### CALIFORNIA Proposition 65 Warning


**The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.**

**Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.**

**Use of this product may cause exposure to chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.**

Whenever you need service, genuine Toro parts, or additional information, contact an Authorized Service Dealer or Toro Customer Service and have the model and serial numbers of your product ready. **Figure 1** identifies the location of the model and serial numbers on the product. Write the numbers in the space provided.

**Important:** With your mobile device, you can scan the QR code (if equipped) on the serial number plate to access warranty, parts, and other product information.

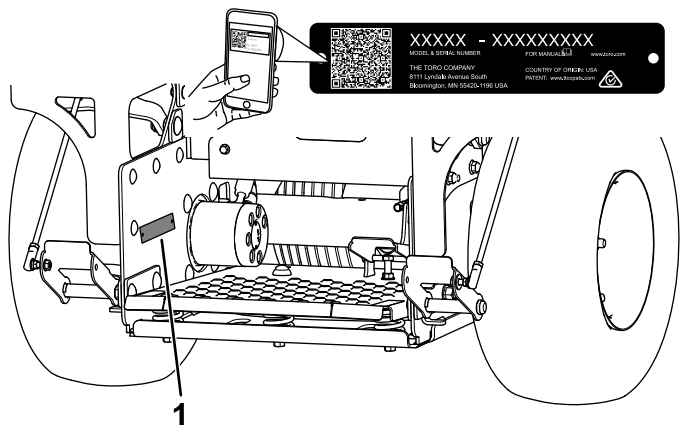

**Figure 1**

1. Model and serial number location

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

# Introduction

This stand-on spreader sprayer is intended for use by trained operators in residential and commercial applications. The machine is primarily designed for chemical distribution used for turf care or snow/ice removal at residential grounds, parks, sports fields, and on commercial grounds. Using this product for purposes other than its intended use could prove dangerous to you and bystanders.

Read this information carefully to learn how to operate and maintain your product properly and to avoid injury and product damage. You are responsible for operating the product properly and safely.

Visit [www.Toro.com](http://www.Toro.com) for product safety and operation training materials, accessory information, help finding a dealer, or to register your product.

# Contents

Safety .....	4	Jump-Starting the Machine .....	62
Safety-Alert Symbol .....	4	Servicing the Fuses .....	63
General Safety .....	4	Drive System Maintenance .....	64
Safety and Instructional Decals .....	5	Checking the Tire Pressure .....	64
Setup .....	12	Checking the Wheel-Lug Nuts .....	64
1 Checking the Tire Air Pressure .....	12	Checking the Wheel-Hub Nut .....	64
2 Checking the Engine-Oil Level .....	12	Brake Maintenance .....	65
3 Checking the Hydraulic-Fluid Level .....	12	Adjusting the Parking Brake .....	65
4 Connecting the Battery .....	13	Belt Maintenance .....	65
Product Overview .....	14	Checking the Belt for Wear .....	65
Controls .....	14	Replacing the Belt .....	65
Machine Controls .....	14	Adjusting the Belt Tension .....	66
Engine Controls .....	15	Controls System Maintenance .....	67
Spreader Controls .....	15	Adjusting the Maximum Forward Speed .....	67
Sprayer Controls .....	16	Adjusting the Motion-Control Linkage .....	67
Specifications .....	17	Adjusting the Motion Control Tracking .....	69
Before Operation .....	18	Hydraulic System Maintenance .....	69
Before Operation Safety .....	18	Hydraulic Fluid Specification .....	69
Performing Daily Maintenance .....	19	Checking the Hydraulic Fluid Level .....	69
Fuel Specification .....	19	Changing the Hydraulic Fluid and	
Using Stabilizer/Conditioner .....	20	Filter .....	70
Filling the Fuel Tank .....	20	Purging Air from the Hydraulic System .....	71
During Operation .....	20	Checking the Hydraulic System Fittings .....	71
During Operation Safety .....	20	Maintaining the Chassis .....	72
Operating the Machine .....	23	Checking the Machine for Loose	
Operating the Spreader .....	25	Hardware .....	72
Operating the Sprayer .....	33	Maintaining the Sprayer and Spreader	
After Operation .....	40	Systems .....	72
After Operation Safety .....	40	Checking the Sprayer System .....	72
Cleaning and Lubricating the Spreader .....	41	Checking the Spreader System .....	72
Cleaning the Sprayer .....	42	Cleaning .....	73
Transporting the Machine .....	45	Cleaning the Engine and the Exhaust	
Maintenance .....	47	System Area .....	73
Maintenance Safety .....	47	Cleaning the Debris from the Machine .....	73
Recommended Maintenance Schedule(s) .....	48	Cleaning the Engine Debris Guard .....	73
Notation for Areas of Concern .....	49	Waste Disposal .....	74
Pre-Maintenance Procedures .....	49	Storage .....	75
Preparing the Machine .....	49	Short-Term Storage .....	75
Accessing the Machine .....	49	Preparing the Machine for Extended or	
Lubrication .....	51	Winter Storage .....	75
Grease Specification .....	51	Troubleshooting .....	76
Greasing the Caster Pivots .....	51	The Charging System .....	76
Lubricating the Caster-Axle Bearings .....	52	Schematics .....	82
Greasing the Belt Tensioner .....	52		
Engine Maintenance .....	53		
Servicing the Air Cleaner .....	53		
Engine Oil Specification .....	53		
Checking the Engine-Oil Level .....	54		
Changing the Oil Filter and Engine			
Oil .....	55		
Servicing the Spark Plug .....	57		
Fuel System Maintenance .....	58		
Replacing the Fuel Filter .....	58		
Electrical System Maintenance .....	59		
Servicing the Battery .....	59		
Removing and Installing the Battery .....	61		

# Safety

The following instructions are from ANSI standard B71.4-2017.

## Safety-Alert Symbol

The safety-alert symbol (Figure 2) is used both in this manual and on the machine to identify important safety messages that you must follow to avoid an accident.

This symbol means **Attention! Become Alert! Your Safety Is Involved!**



g000502

**Figure 2**  
Safety-alert symbol

---

The safety-alert symbol appears above information which alerts you to unsafe actions or situations and is followed by the word **Danger**, **Warning**, or **Caution**.

**Danger** indicates an imminently hazardous situation which, if not avoided, **will** result in death or serious injury.

**Warning** indicates a potentially hazardous situation which, if not avoided, **could** result in death or serious injury.

**Caution** indicates a potentially hazardous situation which, if not avoided, **may** result in minor or moderate injury.

This manual uses 2 other words to highlight information. **Important** calls attention to special mechanical information and **Note** emphasizes general information worthy of special attention.

## General Safety

This machine is capable of amputating hands and feet and of throwing objects. Toro designed and tested this machine to offer reasonably safe service; however, failure to comply with safety instructions may result in injury or death.

- Read, understand, and follow all instructions and warnings in the *Operator's Manual* and other training materials, on the machine, the engine, and attachments. All operators and mechanics should be trained. If the operator(s) or mechanic(s) cannot read this manual, it is the owner's responsibility to explain this material to them; other languages may be available on our website.
- Only allow trained, responsible, and physically capable operators who are familiar with the safe operation, operator controls, and safety signs and instructions to operate the machine. Never allow children or untrained people operate or service the equipment. Local regulations may restrict the age of the operator.
- Always use appropriate personal protective equipment (PPE) to guard against contact with chemicals.
- Do not operate the machine near drop-offs, ditches, embankments, water, or other hazards.
- Do not put your hands or feet near moving components of the machine.
- Never operate the machine with damaged guards, shields, or covers. Always have safety shields, guards, switches and other devices in place and in proper working condition.
- Stop the machine, shut off the engine, and remove the key before servicing, fueling, or unclogging the machine.

# Safety and Instructional Decals


- Keep all safety signs legible. Remove all grease, dirt, and debris from safety signs and instructional labels.
- Replace all worn, damaged, or missing safety signs.
- When you install replacement components, ensure that current safety signs are affixed to those components.
- If you have installed an attachment or accessory, ensure that current safety signs are visible.
- Familiarize yourself with the following safety signs and instruction labels. They are critical to the safe operation of your machine.



decal126-2055

**126-2055**


1. Wheel lug nut—torque to 129 N·m (95 ft-lb).
2. Wheel hub nut—torque to 319 N·m (235 ft-lb).
3. Read the *Operator's Manual* before performing maintenance; check the torque after the first 100 hours and every 500 hours after.

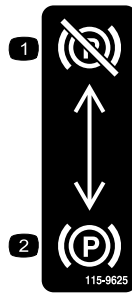

decal115-9625

**115-9625**


1. Parking brake—disengaged
2. Parking brake—engaged

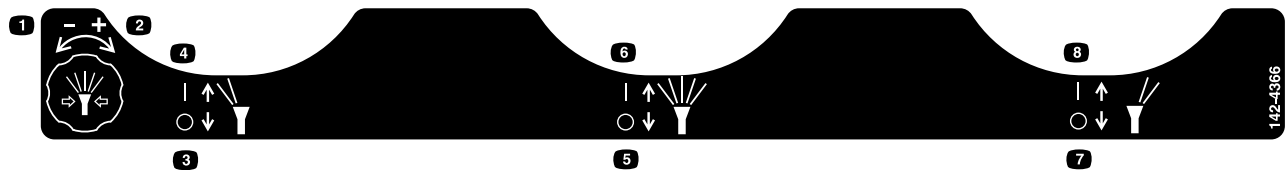

decal142-4366

**142-4366**


1. Spray pressure—Decrease
2. Spray pressure—Increase
3. Left nozzle spray—Off
4. Left nozzle spray—On
5. Center nozzle spray—Off
6. Center nozzle spray—On
7. Right nozzle spray—Off
8. Right nozzle spray—On

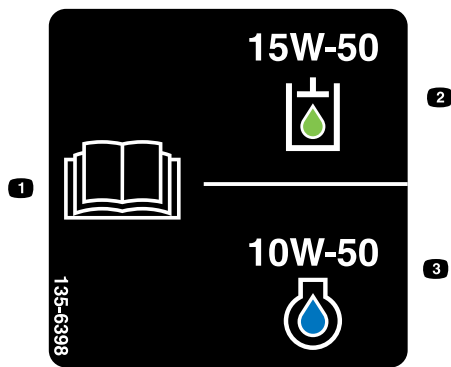

decal135-6398

**135-6398**

1. Read the *Operator's Manual*.
2. Only use green-colored 15W-50 hydraulic fluid.
3. Only use blue-colored 10W-50 engine oil.

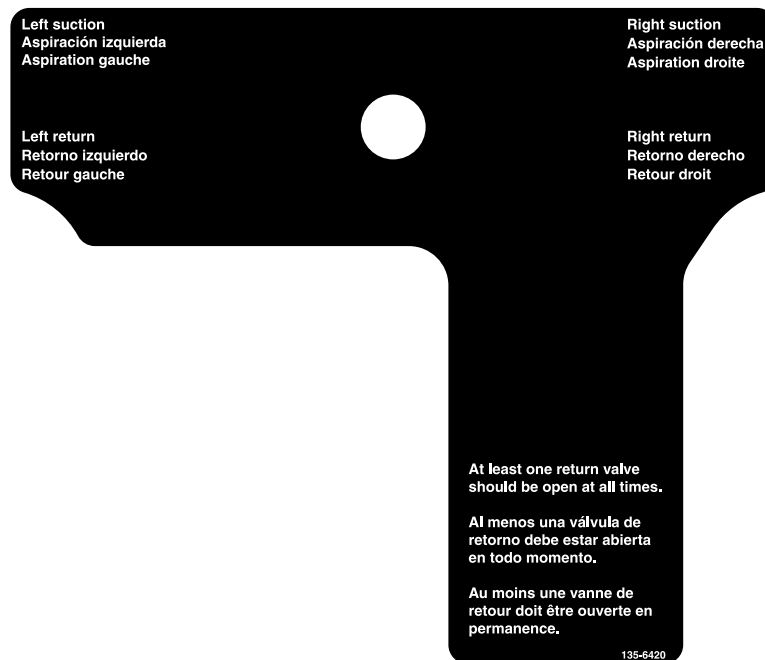

135-6420

**135-6420**


decal135-6420



135-6424

decal135-6424


**135-6424**

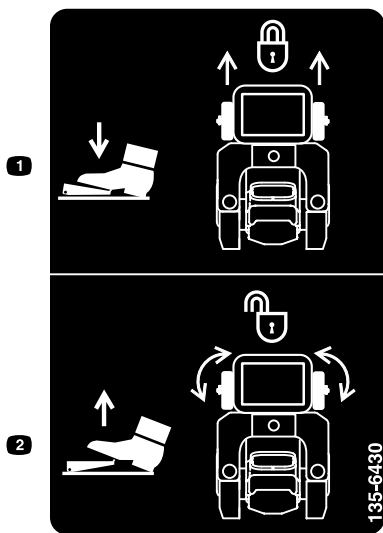

**135-6430**

decal135-6430


1. Press and hold the foot pedal to lock the caster wheels in the straight position.
2. Release the foot pedal to unlock the caster wheels to allow turning.

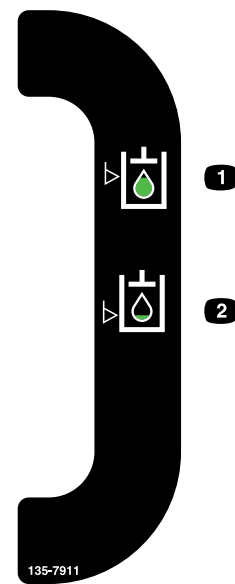

**135-7911**

decal135-7911


1. Hydro oil level—Full
2. Hydro oil level—Add

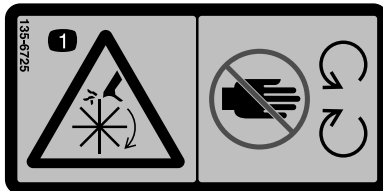

**135-6725**

decal135-6725

1. Cutting/dismemberment hazard of hand, spinner—stay away from moving parts.

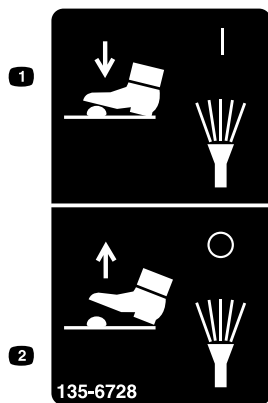

**135-6728**

decal135-6728

1. Press and hold foot button to turn on spray.
2. Release foot button to shut off spray.

	PSI	Drop Size	CAPACITY ONE NOZZLE IN GPM	CAPACITY ONE NOZZLE IN OZ./MIN	SPACING				
					20"				
					GPA		GALLONS PER 1,000 SQ. FT		
					4 MPH	5 MPH	3 MPH	4 MPH	5 MPH
142-3306	30	VC	0.13	17	9.7	7.7	0.29	0.22	0.18
	40	VC	0.15	19	11.1	8.9	0.34	0.26	0.20
	50	VC	0.17	22	12.6	10.1	0.39	0.29	0.23
	60	C	0.18	23	13.4	10.7	0.41	0.31	0.24
142-3307	30	VC	0.17	22	12.6	10.1	0.39	0.29	0.23
	40	VC	0.20	26	14.9	11.9	0.45	0.34	0.27
	50	VC	0.22	28	16.3	13.1	0.50	0.37	0.30
	60	VC	0.24	31	17.8	14.3	0.54	0.41	0.33
142-3308	30	VC	0.22	28	16.3	13.1	0.50	0.37	0.30
	40	VC	0.25	32	18.6	14.9	0.57	0.43	0.34
	50	VC	0.28	36	21	16.6	0.63	0.48	0.38
	60	VC	0.31	40	23	18.4	0.70	0.53	0.42
142-3309	30	XC	0.26	33	19.3	15.4	0.59	0.44	0.35
	40	VC	0.30	38	22	17.8	0.68	0.51	0.41
	50	VC	0.34	44	25	20	0.77	0.58	0.46
142-3310	30	XC	0.35	45	26	21	0.79	0.60	0.48
	40	XC	0.40	51	30	24	0.91	0.68	0.54
	50	VC	0.45	58	33	27	1.00	0.77	0.61
142-3311	30	XC	0.43	55	32	26	0.97	0.73	0.58
	40	XC	0.50	64	37	30	1.10	0.85	0.68
	50	VC	0.56	72	42	33	1.30	0.95	0.76
142-3312	30	XC	0.52	67	39	31	1.20	0.88	0.71
	40	XC	0.60	77	45	36	1.40	1.00	0.82
	50	VC	0.67	86	50	40	1.50	1.10	0.91

\*Grey tips are to be used ONLY the 4 tip booms\*

#### HIGH VOLUME SPRAY CHART (XRC TIPS)

	PSI	Drop Size	CAPACITY ONE NOZZLE IN GPM	CAPACITY ONE NOZZLE IN OZ./MIN	SPACING				
					20"				
					GPA		GALLONS PER 1,000 SQ. FT		
					4 MPH	5 MPH	3 MPH	4 MPH	5 MPH
135-8413	15	VC	0.61	78	45	36	1.40	1.00	0.83
	20	VC	0.71	91	53	42	1.60	1.20	0.97
	30	C	0.87	111	65	52	2.00	1.50	1.20
	40	C	1.00	128	74	59	2.30	1.70	1.40
117-5839	15	XC	0.92	118	68	55	2.10	1.60	1.30
	20	XC	1.06	136	79	63	2.40	1.80	1.40
	30	VC	1.30	166	97	77	2.90	2.20	1.80
	40	C	1.50	192	111	89	3.40	2.60	2.00

\*NOTE: Always double check your application rates.

Tabulations are based on spraying water at 70 °F (21 °C)

Coarse Very Coarse Extremely Coarse

#### Spreader / Sprayer Calibration:

Mixing of liquid or dry product should be in accordance to manufacturers labels. Remember this is designed for low volume spraying so the mix will be more concentrated.


Remember that your machine is factory set to put down 1/3 gallon of liquid per 1,000 sq. ft (at 5MPH and 40PSI). For instance, some products call for 1.1 to 1.5 oz per 1,000 sq. ft. We would recommend using 1.3 (median value of 1.1 to 1.5). Since you are using a 1/3 gallon tip, you need to multiply by 3, then multiply that amount by the number of gallons put in the tank.

1.3 (median value of 1.1 to 1.5) X 3 (1.3 gallon tip) X gallons of water needed. If you were filling a 30 gallon tank your equation would look like this: 1.3 X 3 X 30 = 117 ounces in 30 gallons of water.

#### Approximate Granular Calibration

Product	Lbs. per 1,000 sq ft	Full Rate
Fine Pellets	1	4.75
	2	5.25
	3	5.5
Mixed Fine Pellets	2	5.0
	4	6.0
	6	6.5
Small Pellets	2	4.25
	4	5.5
	6	5.75
Nitrogen Pellets Med.	1	4.75
	2	5.5
	3	6.0
Med. Pellets & Granules	2	4.75
	4	5.5
	6	6.5
Large Heavy Pellets	2	5
	4	6.25
	6	7.25

Throw fertilizer back to the center of tire tracks

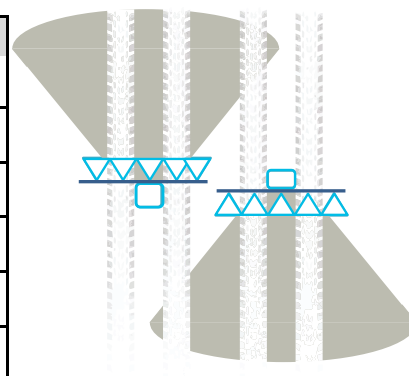

#### Accuway

\*Calibrated at 5 MPH


Accuway balances the spread pattern, by shifting the product placement on the spinner. Placing the product on the impeller close to the shaft or the center will cause the spread pattern to be heavier to the right as it rides the impeller for a longer period. If the product is placed on the outer edge of the impeller, the spread pattern will be heavier to the left (because the spinner is turning clockwise).

- 1) Start with the Accuway control cable all the way forward or in (this is home base).
- 2) Begin to spread the product. As you are spreading you should be able to see the spread pattern in front of you. Generally, all spreaders will tend to throw fertilizer heavy to the right. As you continue to spread, pull the Accuway control towards you very slowly (small increments) until you begin to bring the spread pattern directly centered in front of you.
- 3) Once you have the spread pattern centered, lock the Accuway cable in place. There should be no reason to reset the Accuway for that product unless you see that the spread pattern has changed due to bumping the lever. If it has changed slightly, simply re-adjust the pattern while you're spreading.

Fine Mixed Fine Small Small/Med Medium Heavy

142-4373




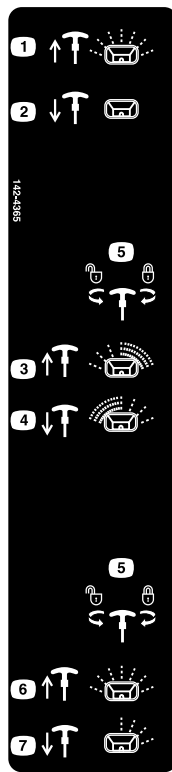

decal142-4365

### 142-4365


1. Spread On-Pull handle up.
2. Spread Off-Push handle down
3. Spread pattern control-Pull handle up if heavy on left side
4. Spread pattern control-Push handle down if heavy on right side
5. Spread Lock-Rotate counterclockwise to unlock; rotate clockwise to lock.
6. Deflector-Pull knob up to open
7. Deflector-Push knob down to close

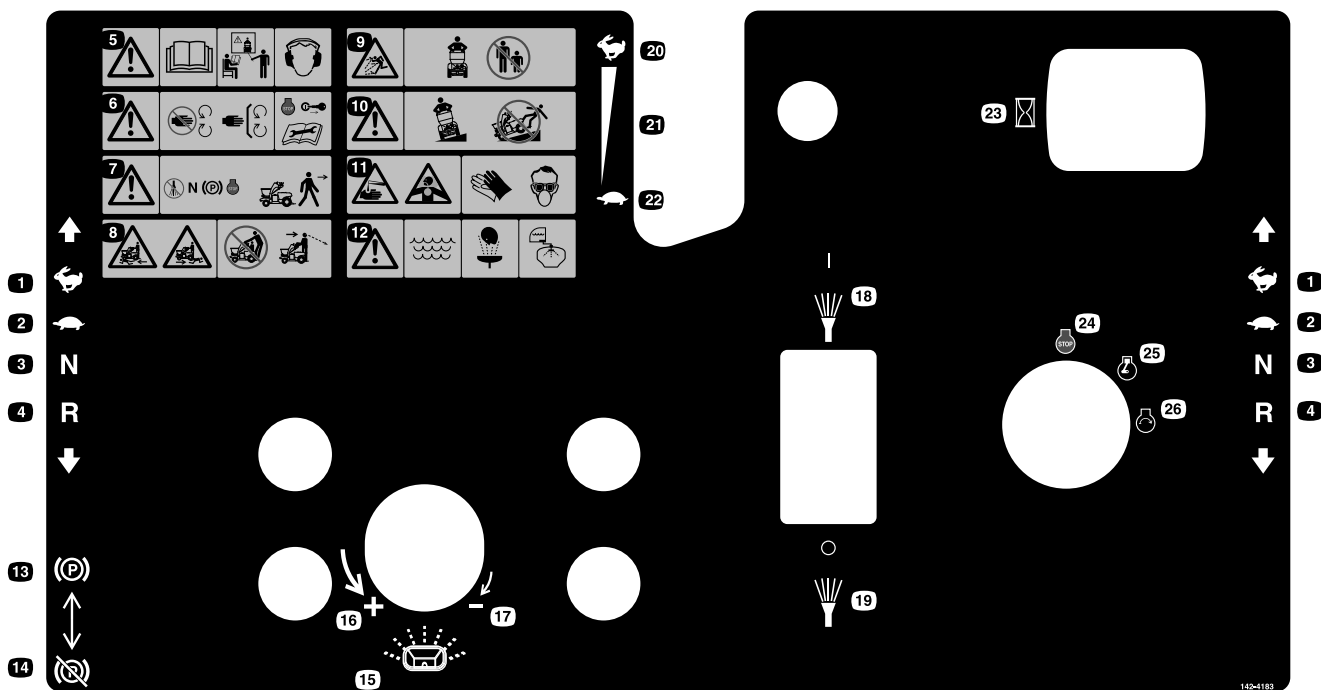

### 142-4183

decal142-4183

- |  |                                 |
|--|---------------------------------|
| 1. Fast  | 14. Park brake—Off              |
| 2. Slow  | 15. Spreader speed              |
| 3. Neutral   | 16. Spreader speed—Increase     |
| 4. Reverse   | 17. Spreader speed—Decrease     |
| 5. Warning—Read the <i>Operator's Manual</i> ; Do Not operate this machine unless you are trained. Wear hearing protection.  | 18. Spray pump switch—On        |
| 6. Warning—Stay away from moving parts; keep all guards in place. Stop engine and remove key before adjusting, servicing, or cleaning.                                   | 19. Spray pump switch—Off       |
| 7. Warning—Disengage sprayer controls, move drive lever to neutral position, engage parking brake, and stop engine before leaving the operator's position.               | 20. Throttle—Fast               |
| 8. Crushing/dismemberment hazard of bystanders—Do Not carry passengers, look forward and down when operating the machine, look behind and down when reversing.           | 21. Continuous variable setting |
| 9. Thrown object hazard—keep bystanders away.  | 22. Throttle—Slow               |
| 10. Warning—operate across slopes not up and down. Loads may shift on slopes or when turning. Do Not operate on wet slopes—use extreme caution when operating on slopes. | 23. Hour meter                  |
| 11. Caustic liquid/chemical burn and toxic gas inhalation hazard—wear hand, skin, eye, and respiratory protection.   | 24. Engine—Off                  |
| 12. Warning—Use fresh, clean water:<br>- for first-aid washing<br>- for rinsing the tank.  | 25. Engine—On                   |
| 13. Park brake—On  | 26. Engine—Start                |

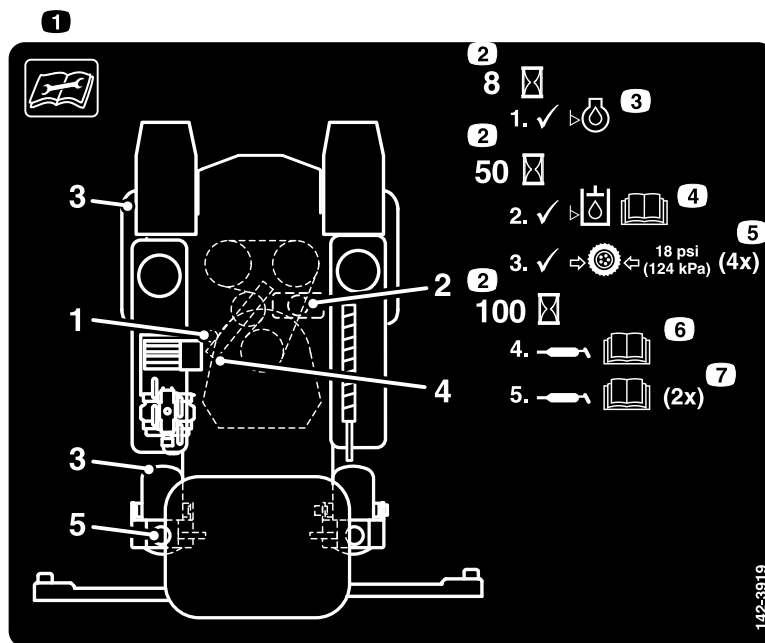

decal142-3919

### 142-3919

1. Read the instructions before servicing or performing maintenance
2. Time interval
3. Check engine oil level
4. Check hydraulic oil level; refer to the Operator's manual for further instructions
5. Check tire and caster wheel pressure (4 locations)
6. Grease idler pivot; refer to the Operator's manual for further instructions
7. Grease caster pivots; refer to the Operator's manual for further instructions (2 locations)

# Setup

## Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
<b>4</b>	No parts required	–	Connect the battery.

## Media and Additional Parts

Description	Qty.	Use
Operator's Manual	1	Read before operating the machine.
Key	2	Start the machine.

# 1

## Checking the Tire Air Pressure

No Parts Required

### Procedure

Check the air pressure in the front and rear tires, and if necessary, add air to the appropriate pressure; refer to [Checking the Tire Pressure \(page 64\)](#).

# 2

## Checking the Engine-Oil Level

No Parts Required

### Procedure

The engine comes with oil; check the engine-oil level and, if necessary, add to the appropriate level; refer to [Engine Oil Specification \(page 53\)](#) and [Checking the Engine-Oil Level \(page 54\)](#).

# 3

## Checking the Hydraulic-Fluid Level

No Parts Required

### Procedure

The hydraulic tank comes with fluid; check hydraulic-fluid level in the hydraulic tank, and if necessary, add to the appropriate level; refer to [Checking the Hydraulic Fluid Level \(page 69\)](#).


# 4

## Connecting the Battery

No Parts Required

### Procedure

Install the negative battery cable to the negative (–) battery terminal with a carriage bolt and flanged locknut (Figure 3).

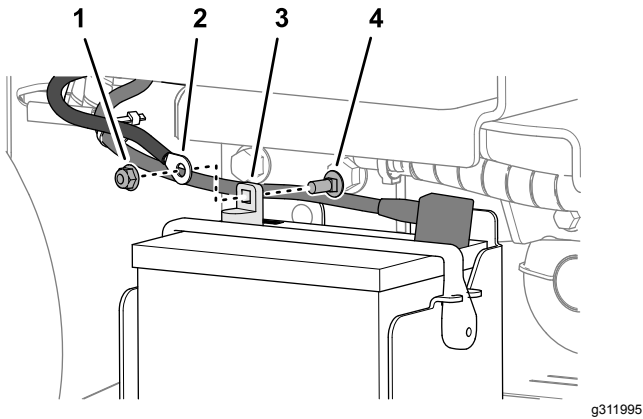

**Figure 3**

- |                           |                              |
|---------------------------|------------------------------|
| 1. Flange locknut         | 3. Negative battery terminal |
| 2. Negative battery cable | 4. Carriage bolt             |

# Product Overview

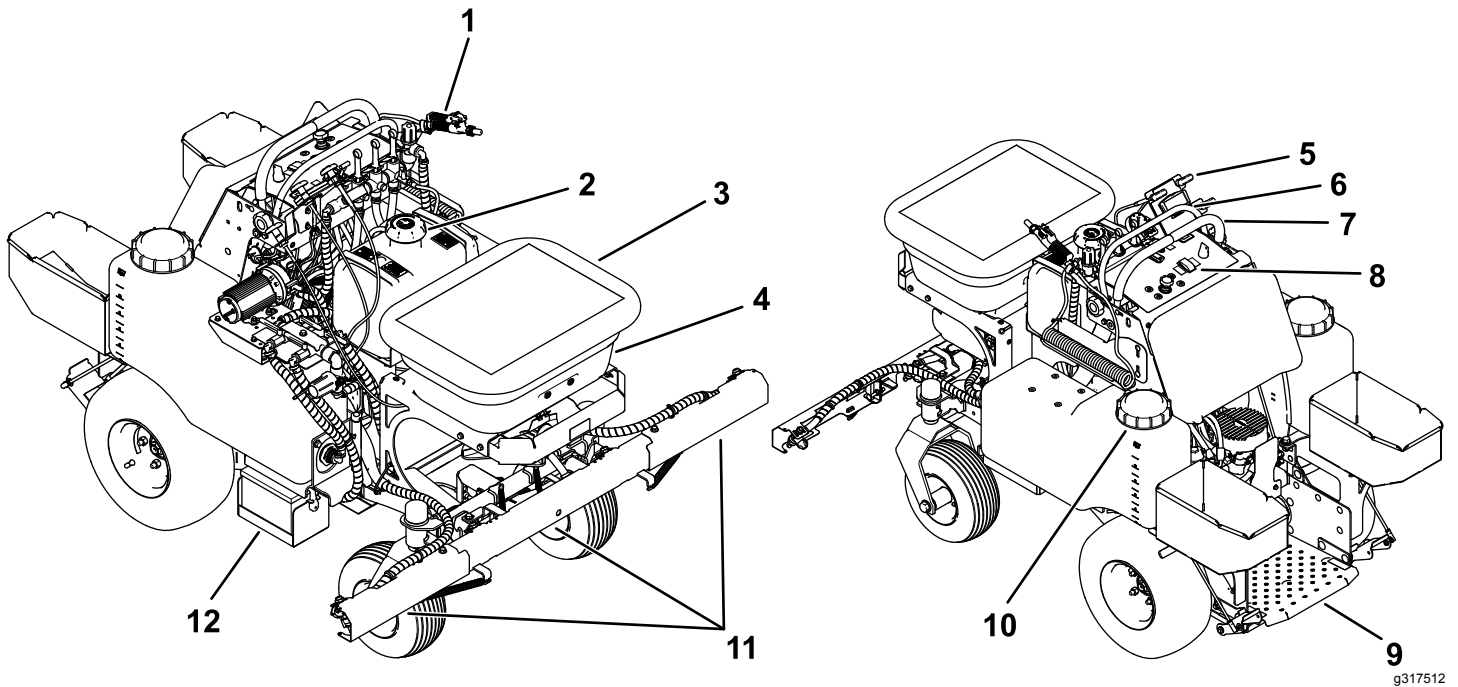


Figure 4

1. Spray wand
2. Fuel-tank cap
3. Hopper cover
4. Hopper
5. Spreader controls
6. Reference bar

7. Motion-control levers
8. Control panel
9. Platform
10. Sprayer-tank cap
11. Sprayer nozzles
12. Battery

## Controls

### Machine Controls

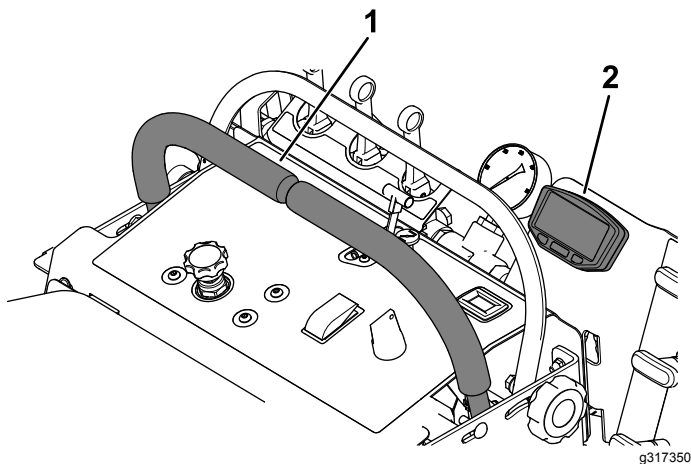


Figure 5

1. Motion-control levers
2. Sprayer and information display

#### Motion-Control Levers

Use the motion-control levers to drive the machine forward, reverse, and turn either direction (Figure 5).

#### Sprayer and Information Display


The sprayer and information display is located to the right of the throttle, at the bottom of the control console (Figure 5).

The sprayer and information display shows the following information:

- Sprayer controller firmware version
- Hour meter for the engine
- Hour meter for the sprayer-pump motor
- Battery voltage
- Spray-system pressure
- Fault codes

### Caster Wheel-Lock Pedal

- Press and hold the caster wheel-lock pedal ([Figure 6](#)) to lock the caster wheels in the straight position.
- Release the caster wheel-lock pedal to unlock the caster wheels, and allow the machine to freely turn.

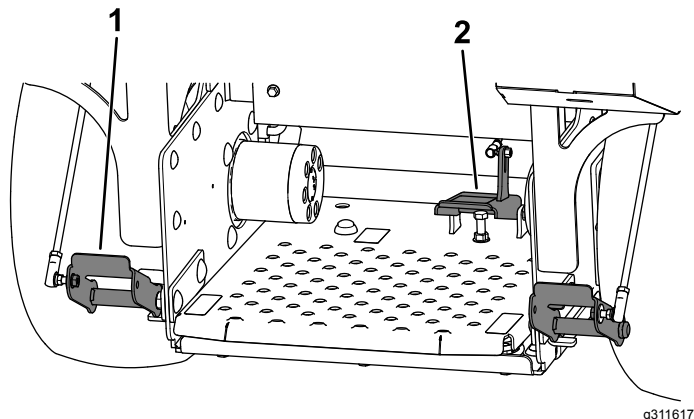


**Figure 6**

1. Brake foot pedal (parking brake)
2. Caster-lock pedal

### Parking Brakes

- Push the left and right brake foot-pedals ([Figure 6](#)) down to engage the brakes.
- Push the left and right brake foot-pedals up to disengage the parking brakes.

## Engine Controls

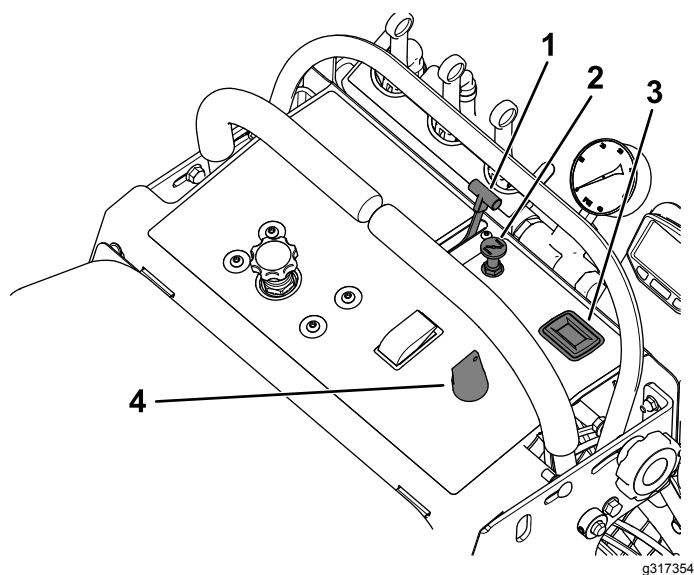

**Figure 7**

1. Throttle control
2. Choke control
3. Hour meter
4. Ignition switch

### Ignition Switch

The ignition switch is located at the left side of the control console ([Figure 7](#)).

Use the ignition switch to start and run, or shut off the engine. The ignition switch has 3 positions: STOP, RUN and START.

**Note:** You must engage the parking brake to start the engine.

### Throttle Control

The throttle controls the engine speed, and it has a continuous-variable setting from the SLOW to FAST position ([Figure 7](#)).


### Choke Control

Use the choke control to start a cold engine.

### Hour Meter

The hour meter displays the total hours of engine operation. The hour meter ([Figure 7](#)) starts to function whenever you rotate the key switch to the ON position or if the engine is running.

## Spreader Controls

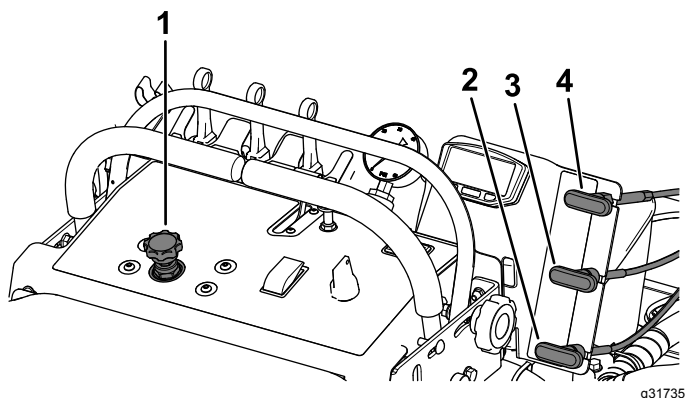

**Figure 8**

1. Impeller-speed control
2. Deflector control
3. Diffuser control
4. Hopper-door control

### Impeller-Speed Control

Use the impeller-speed control ([Figure 8](#)) to set the speed of the hydraulic motor for the spreader.

### Hopper-Door Control

The hopper-door control ([Figure 8](#)) opens and closes the door inside the base of the hopper

### Deflector Control


The deflector control ([Figure 8](#)) pivots the deflector into the spreader pattern.

## Diffuser Control

The diffuser control ([Figure 8](#)) shifts the product placement of the impeller either to the edge of the impeller or to the middle of the impeller.

## Drop-rate Cam and Linkage

The drop-rate cam and linkage are located at the front of the machine and below the hopper on the spreader ([Figure 9](#)).

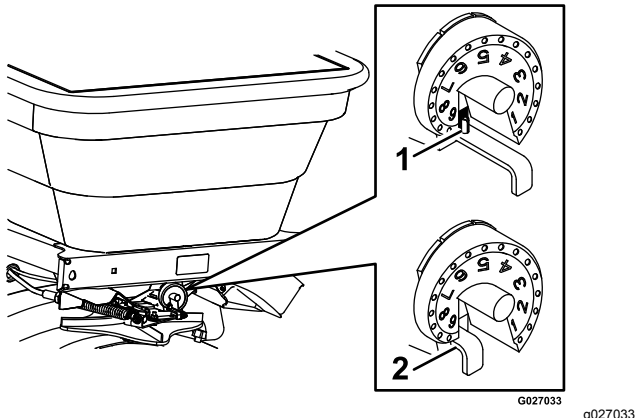

**Figure 9**


1. Slot—maximum position      2. Linkage

Use the drop-rate cam to set the maximum amount of granular material dispensed through the impeller gate and onto the impeller.

The slot in the cam, after setting 9 on the cam, allows you to open the impeller gate to the maximum position. You can use this setting for dry sand, ice melt, or other materials that are difficult to spread.

**Note:** Use cam setting 9 may when you are cleaning out the hopper.

## Sprayer Controls

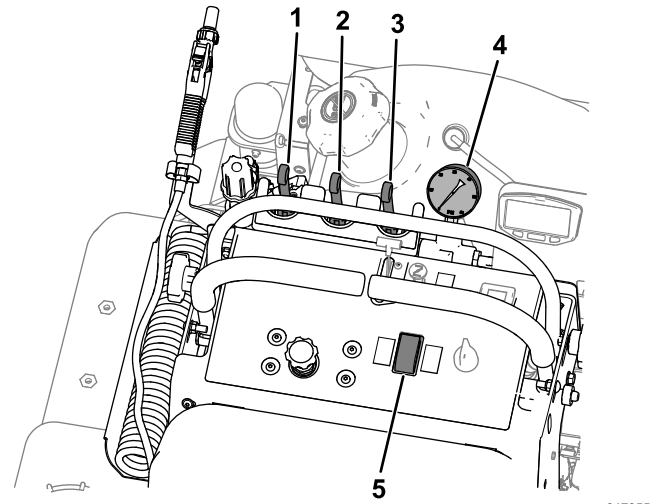

**Figure 10**

1. Left boom spray-control valve      4. Sprayer pressure gauge valve  
2. Center boom spray-control valve      5. Spray-pump switch valve  
3. Right boom spray-control valve

### Spray-Pump Switch

Push the spray-pump switch ([Figure 10](#)) forward to turn on spray.

Push the spray-pump switch rearward to turn off spray.

### Left Boom Spray-Control Valve

Push the left boom sprayer-control valve ([Figure 10](#)) to activate spray for the left boom.

### Center Boom Spray-Control Valve

Push the center boom sprayer-control valve ([Figure 10](#)) to activate spray for the center boom.

### Right Boom Spray-Control Valve

Push the right boom sprayer-control valve ([Figure 10](#)) to activate spray for the right boom.

### Sprayer Pressure Gauge


The sprayer pressure gauge ([Figure 10](#)) displays the pressure (in psi) while you are spraying.

### Spray-Pump Foot Switch

Press and hold the spray-pump switch ([Figure 11](#)) to turn on the spray.

Release the spray-pump switch to shut off the spray.




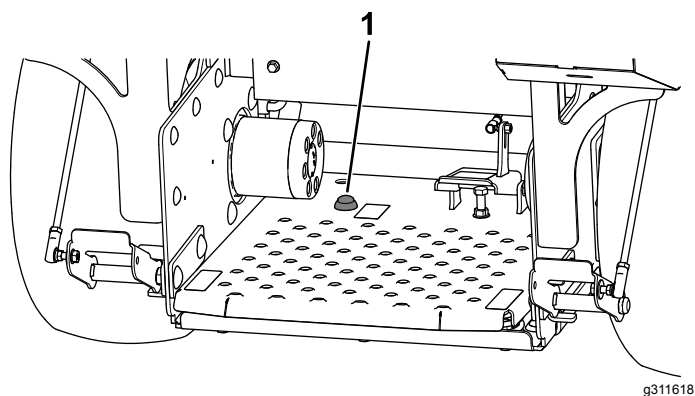

**Figure 11**

1. Spray-pump switch

## Spray Wand

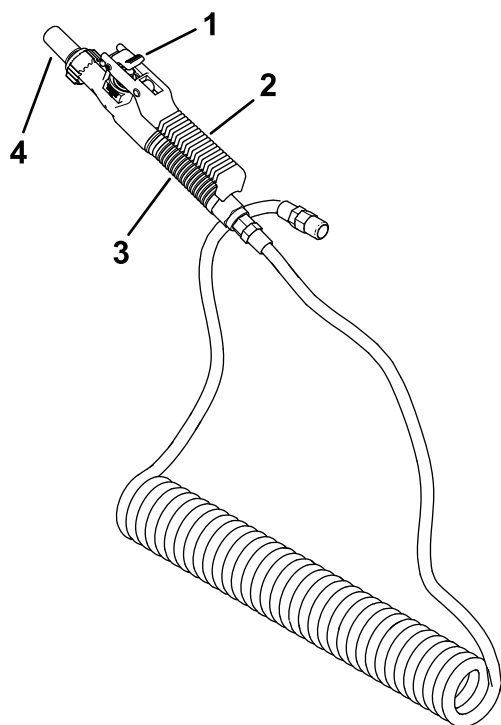

**Figure 12**

1. Trigger lock
2. Spray wand trigger
3. Spray wand handle
4. Spray tip

## Spray Wand Trigger

Squeeze the trigger ([Figure 12](#)) to the handle to spray; release the trigger to stop.

## Spray Wand Trigger Lock

Squeeze the trigger against the handle and push trigger lock ([Figure 12](#)) forward to keep the wand in the OPEN position. Pull the lock back to release the trigger.

# Specifications

<b>Overall width</b>	left and right booms extended	161 cm (63-1/2 inches)
	left and right booms folded	90 cm (35-1/2 inches)
<b>Overall length</b>		185 cm (73 inches)
<b>Overall height</b>		127 cm (50 inches)
<b>Weight</b>	sprayer tank and hopper empty	331 kg (730 lb)
	only hopper full	386 kg (850 lb)
	only sprayer tank full	376 kg (830 lb)
	sprayer tank and hopper full with 2 bags granular	476 kg (1050 lb)
<b>Maximum machine weight</b>	loaded machine + operator	581 kg (1280 lb)
<b>Hopper capacity</b>		54 kg (120 lb)
<b>Spreader cast</b>		0.9 m (3 ft) through 7.6 m (25 ft)
<b>Sprayer tank capacity</b>	left and right	91 L (24 US gallon)
<b>Spray Width</b>	left or right boom	61 cm (2 ft)
	center boom	122 cm (4 ft)
<b>Maximum Spray Width</b>		244 cm (8 ft)
<b>Maximum ground speed</b>	forward	11.3 kph (7 mph)
	reverse	6 kph (4 mph)

# Operation

**Note:** Determine the left and right sides of the machine from the normal operating position.

## *Before Operation*

## Before Operation Safety

### General Safety

- Evaluate the terrain to determine what accessories and attachments are needed to properly and safely perform the job. Use only accessories and attachments approved by Toro.
- Inspect the area where you will use the equipment, and remove all rocks, toys, sticks, wires, bones, and other foreign objects that may be contaminated by chemicals and/or affect the stability of the machine.
- Wear appropriate clothing, including safety glasses, substantial slip-resistant footwear, and hearing protection. Tie back long hair and avoid loose clothing or jewelry that may get tangled in moving parts.
- Do not operate the machine while people, especially children, or pets are in the area. Stop the machine and the attachment(s) if anyone enters the area.
- Do not fill, calibrate, or clean the machine while people, especially children, or pets are in the area.
- Check all sprayer components for wear and leaks before applying pressure to the system. Do not use the machine if it is leaking or damaged.
- Ensure that the operator platform is clean and free from chemical residue and debris buildup.
- Check that the operator-presence controls (if applicable), safety switches, and shields are attached and functioning properly. Do not operate the machine unless they are functioning properly. Frequently check for worn or deteriorating components and replace them with the manufacturer's recommended parts when necessary.

### Chemical Safety

Chemical substances used in the spreader-sprayer system may be hazardous and toxic to you, bystanders, animals, plants, soils or other property.

- Carefully read and follow the chemical warning labels and Safety Data Sheets (SDS) for all chemicals used and protect yourself according to the chemical manufacturer's recommendations.

Ensure that as little skin as possible is exposed while using chemicals. Use appropriate personal protective equipment (PPE) to guard against personal contact with chemicals, such as the following:

- safety glasses, goggles, and/or face shield
- chemical-resistant gloves
- rubber boots or other substantial footwear
- hearing protection
- respirator or filter mask
- clean change of clothes, soap, and disposable towels, to be kept on-hand in the event of a chemical spill
- If you are using more than 1 chemical, read the information about each chemical. Refuse to operate or work on the spreader-sprayer if this information is not available.
- Before working on a spreader-sprayer system, ensure that the system has been triple rinsed and neutralized according to the recommendations of the chemical manufacturer(s) and that all the valves have been cycled three times.
- Verify there is an adequate supply of clean water and soap nearby, and immediately wash off any chemicals that contact you.
- Obtain proper training before using or handling chemicals.
- Use the correct chemical for the job.
- Follow the chemical manufacturer's instructions for the safe application of the chemical and do not exceed the recommended system application pressure.
- Handle chemicals in a well-ventilated area.
- Have clean water available, especially when filling the spray tank.
- Do not eat, drink, or smoke while working with chemicals.
- Do not clean spray nozzles by blowing through them or placing them in your mouth.
- Always wash your hands and other exposed areas as soon as possible after finishing the work.
- Keep chemicals in their original packages and in a safe location.
- Properly dispose of unused chemicals and chemical containers as instructed by the chemical manufacturer and your local codes.
- Chemicals and fumes are dangerous; never enter the tank or hopper, and do not place your head over or in the opening.
- Follow all local, state, and federal requirements for spreading and spraying chemicals.

## Fuel Safety

Use extreme care when handling fuel.

In certain conditions gasoline is extremely flammable and its vapors are explosive. A fire or explosion from gasoline can burn you, others, and cause property damage.

- Fill the fuel tank outdoors on level ground, in an open area, when the engine is cold. Wipe up any gasoline that spills.
- Never refill the fuel tank or drain the machine indoors or inside an enclosed trailer.
- Do not fill the fuel tank completely full. Fill the fuel tank to the bottom of the filler neck. The empty space in the tank allows the gasoline to expand.
- Never smoke when handling gasoline, and stay away from an open flame or where gasoline fumes may be ignited by a spark.
- Store gasoline in an approved container and keep it out of the reach of children.
- Add fuel before starting the engine. Never remove the cap of the fuel tank or add fuel when engine is running or when the engine is hot.
- If you spill fuel, do not attempt to start the engine. Move away from the area of the spill and avoid creating any source of ignition until the fuel vapors have dissipated.
- Do not operate the machine without the entire exhaust system in place and in proper working condition.
- In certain conditions during fueling, static electricity can be released, causing a spark, which can ignite gasoline vapors. A fire or explosion from gasoline can burn you and others and cause property damage.
  - Always place gasoline containers on the ground away from your vehicle before filling.
  - Do not fill gasoline containers inside a vehicle or on a truck or trailer bed, because interior carpets or plastic truck bed liners may insulate the container and slow the loss of any static charge.
  - When practical, remove gasoline-powered equipment from the truck or trailer and refuel the equipment with its wheels on the ground.
  - If this is not possible, then refuel such equipment on a truck or trailer from a portable container rather than from a gasoline-dispenser nozzle.
  - If you must use a gasoline-dispenser nozzle, keep the nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete. Do not use a nozzle lock-open device.

- Gasoline is harmful or fatal if swallowed. Long-term exposure to vapors has caused cancer in laboratory animals. Failure to use caution may cause serious injury or illness.
  - Avoid prolonged breathing of vapors.
  - Keep your face away from the nozzle and gasoline tank or container opening.
  - Keep gasoline away from your eyes and skin.
  - Never siphon gasoline by mouth.
- To help prevent fires, do the following:
  - Keep the engine and the engine area free from accumulation of grass, leaves, excessive grease or oil, and other debris that can accumulate in these areas.
  - Clean up oil and fuel spills and remove fuel-soaked debris.
  - Allow the machine to cool before storing the machine in any enclosure. Do not store the machine near a flame or any enclosed area where open pilot lights or heat appliances are present.

## Performing Daily Maintenance

Before starting the machine each day, perform the following daily-check procedures:

- [Checking the Engine-Oil Level \(page 54\)](#)
- [Checking the Hydraulic Fluid Level \(page 69\)](#)
- [Checking the Machine for Loose Hardware \(page 72\)](#)

## Fuel Specification

<b>Petroleum fuel</b>	Use unleaded gasoline with an octane rating of 87 or higher ((R+M)/2 rating method).
<b>Ethanol blended fuel</b>	<p>Use an unleaded-gasoline blend with up to 10% ethanol (gasohol) or 15% MTBE (methyl tertiary butyl ether) by volume is acceptable. Ethanol and MTBE are not the same.</p> <p>Gasoline with 15% ethanol (E15) by volume is not approved for use. Never use gasoline that contains more than 10% ethanol by volume, such as E15 (contains 15% ethanol), E20 (contains 20% ethanol), or E85 (contains up to 85% ethanol). Using unapproved gasoline may cause performance problems and/or engine damage which may not be covered under warranty.</p>

**Important:** For best results, use only clean, fresh fuel (less than 30 days old).

- Do not use gasoline containing methanol.

- Do not store fuel either in the fuel tank or fuel containers over the winter unless you use a fuel stabilizer.
- Do not add oil to gasoline.

## Using Stabilizer/Conditioner

Use a fuel stabilizer/conditioner in the machine to provide the following benefits:

**Important:** Do not use fuel additives containing methanol or ethanol.

Add the correct amount of fuel stabilizer/conditioner to the gasoline.

**Note:** A fuel stabilizer/conditioner is most effective when mixed with fresh gasoline. To minimize the chance of varnish deposits in the fuel system, always use fuel stabilizer.

## Filling the Fuel Tank

**Fuel tank capacity:** 22.7 L (5 US gallons)

1. Park the machine on a level surface and shut off the engine.
2. Allow the engine to cool.
3. Clean around the fuel-tank cap and remove it (Figure 13).

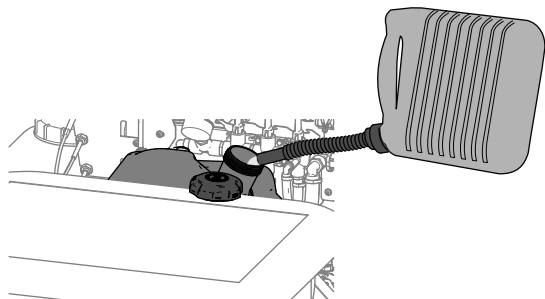


Figure 13

4. Fill the tank with fuel (Figure 13) to the bottom of the filler neck. **Do not fill into the filler neck of the tank.**

**Important:** Do not fill the tank more than the bottom of the filler neck because the fuel needs room to expand.

5. Install the fuel-tank cap securely.
6. Wipe up any spilled fuel.

## During Operation

### During Operation Safety

#### General Safety

Use your full attention when operating the machine. Do not engage in any activity that causes distractions; otherwise, injury or property damage may occur.

- Running the engine will cause engine parts, especially the muffler, to become extremely hot. Severe burns can occur on contact, and debris, such as leaves, grass, and brush, can catch fire.
  - Allow engine parts, especially the muffler, to cool before touching them.
  - Remove accumulated debris from the muffler and engine area.
- Engine exhaust contains carbon monoxide, which is an odorless, deadly poison that can kill you. Do not run the engine indoors or in a small, confined area where carbon monoxide fumes can collect.
- Chemicals are hazardous and can cause personal injury.
  - Read the directions on the chemical labels before handling the chemicals and follow all manufacturer recommendations and precautions.
  - Keep chemicals away from your skin. Should contact occur, wash the affected area thoroughly with soap and clean water.
  - Wear goggles, gloves, and any other protective equipment recommended by the chemical manufacturer.
  - The owner/user can prevent and is responsible for accidents that may cause personal injury or property damage.
  - This machine was designed for 1 operator only. Do not carry passengers and keep all others away from machine during operation.
  - Do not operate the machine under the influence of alcohol or drugs.
  - Operate only in daylight or good artificial light.
  - Do not operate the machine when there is the risk of lightning.
  - Be aware of weather conditions and check that spray nozzles, patterns, and volume are suitable.
  - Keep away from holes, ruts, bumps, rocks, and other hidden hazards. Use care when approaching blind corners, shrubs, trees, tall grass or other objects that may hide obstacles or obscure vision. Uneven terrain could

- overturn the machine or cause you to lose your balance or footing.
- Do not operate the machine with damaged guards, shields, or covers. Always have safety shields, guards, switches and other devices in place and working properly.
- Keep clear of the discharge area at all times.
- Keep your hands and feet away from moving parts. If possible, Do not make any adjustments while engine is running.
- Your hands, feet, hair, clothing, or accessories can become entangled in rotating parts and cause serious injury.
  - Do not operate the machine without guards, shields, and safety devices in place and working properly.
  - Keep your hands, feet, hair, jewelry, or clothing away from rotating parts.
- Be aware of the spreading/spraying path and direct the discharge away from others. Avoid discharging material against a wall or obstruction as the material may ricochet back toward you.
- Be alert, slow down, and use caution when making turns. Look behind you and to the side before changing directions. Do not spread or spray in reverse unless it is absolutely necessary.
- Stop spreading or spraying while making tight turns to minimize uneven distribution pattern, application rate, and chemical drift.
- Chemicals may drift and cause injury to people and animals; it may also damage plants, soil, or other property.
- Do not change the engine governor setting or overspeed the engine.
- Ensure that all drives are in neutral and engage the parking brake before starting the engine.
- Park the machine on level ground. Shut off the engine, wait for all moving parts to stop, remove key, and engage the parking brake before doing the following:
  - Checking, cleaning, or working on the machine
  - Clearing blockages
  - Leaving the machine; do not leave a running machine unattended.
- Shut off the engine, wait for all moving parts to stop, and engage parking brake before refueling.
- Tragic accidents can occur if you are not alert to the presence of children. Children are often attracted to the machine and the spreader-spraying activity. Never assume that children will remain where you last saw them.
  - Keep children out of the working area and under the watchful care of another responsible adult.
- Be alert and shut off the machine if children enter the area.
- Before and while backing or changing direction, look behind you, down, and side-to-side for small children.
- Never allow children to operate the machine.
- Do not carry children, even if the machine is not in use. Children could fall off and be seriously injured or interfere with the safe operation of the machine. Children wanting a ride could appear in the working area without warning and be run over or backed over by the machine.
- Reduce the weight of the load when operating the machine on hills and rough terrain to avoid tipping or overturning of the machine.
- Liquid loads and granular materials can shift. This shifting happens most often while turning; going up or down hills; suddenly changing speeds; or while driving over rough surfaces. Shifting loads can cause the machine to tip over.
- When operating with a heavy load, reduce your speed and allow for sufficient stopping distance.
- Reduce the speed and load while operating the machine on rough terrain, uneven ground, and near curbs, holes, and other sudden changes in terrain. Loads may shift, causing the sprayer to become unstable.
- Sudden changes in terrain may cause abrupt steering wheel movement, possibly resulting in hand and arm injuries. Reduce the speed when operating on rough terrain or near curbs.
- Safely relieve liquid from the spray wand every time you shut off the engine.
- The spray wand traps liquids under high pressure, even when engine is not running. High-pressure spray discharge could cause serious injury or death.
  - Keep clear of the nozzle and do not direct spray or stream at people, pets, or non-work area property.
  - Do not direct the spray on or near electrical power components or source.
  - Do not repair the spray wand, hoses, seals, nozzle, or other wand components; replace them.
  - Do not attach hoses or other components to the end of the spray wand nozzle.
  - Do not attempt to disconnect the spray wand from the machine while the system is pressurized.
  - Do not use the spray wand if the trigger lock is damaged or missing.
  - Do not keep the spray wand in the locked-open position after you complete the job.

- When draining or relieving the system, Do not allow anyone to stand in front of the nozzles and do not drain on a person's feet.

## Slope Safety

Slopes are a major factor related to loss of control and rollover accidents, which can result in severe injury or death. You are responsible for safe slope operation. Operating the machine on any slope requires extra caution.

- Review the slope instructions listed below for operating the machine on slopes and to determine whether you can operate the machine in the conditions on that day and at that job site. Changes in the terrain can result in a change in slope operation for the machine.
- Operate across slopes, never up and down. Avoid operation on excessively steep or wet slopes.
- Identify hazards at the base of the slope. Determine if the slope is safe for machine operation, including surveying the site. Always use common sense and good judgment when performing this survey.
- Avoid starting, stopping, or turning the machine on slopes. Travel up and down on slopes. Avoid making sudden changes in speed or direction. If you must turn the machine, turn it slowly and gradually downhill, if possible. Use care when reversing the machine.
- Do not operate a machine when you are uncertain about the traction, steering, or stability.
- Remove or mark obstructions such as ditches, holes, ruts, bumps, rocks, or other hidden hazards. Tall grass can hide obstructions. Uneven terrain could overturn the machine.
- Be aware that operating the machine on wet surfaces, across slopes, or downhill may cause the machine to lose traction. Loss of traction to the wheels may result in sliding and a loss of braking and steering.
- Use extreme caution when operating the machine near drop-offs, ditches, embankments, water hazards, or other hazards. The machine could suddenly roll over if a wheel goes over the edge or the edge caves in. Establish a safety area between the machine and any hazard.

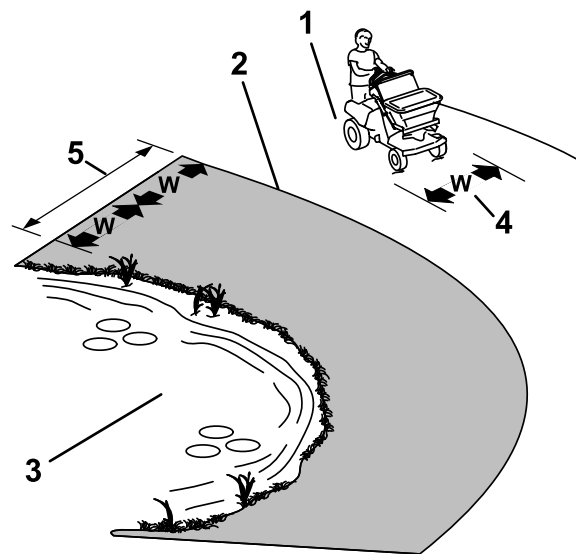


Figure 14

g222400

1. Safe Zone — Use the machine here
2. Danger Zone - Use a walk behind machine or a hand held tool near drop offs, ditches, embankments, water or other hazards.
3. Water
4. W=width of the machine
5. Keep a safe distance (twice the width of the machine) between the machine and any hazard.

- Use extra care while operating the machine with attachments; they can affect the stability of the machine.
- If the engine stalls or you begin to lose momentum while climbing a hill, gradually apply the brakes and slowly back straight down the hill.
- Always keep the transmission in gear (if applicable) when you drive the machine down a slope.
- Do not park the machine on an incline.
- The weight of the material in the tank can change the handling of the machine. To avoid loss of control and personal injury, follow these guidelines:
  - When operating with a heavy load, reduce your speed and allow for sufficient braking distance. Do not suddenly apply the brakes. Use extra caution on slopes.
  - Liquid loads shift, especially while turning, going up or down slopes, suddenly changing speeds, or while driving over rough surfaces. Shifting loads can cause the machine to tip over.

# Operating the Machine

## Starting the Engine

### ⚠ CAUTION

The machine produces sound levels in excess of 85 dBA at the operator's ear, and may cause hearing loss through extended periods of exposure.

**Wear hearing protection while operating the machine.**

1. Move the motion-control levers to the NEUTRAL position and engage the parking brake; refer to [Motion-Control Levers \(page 14\)](#) and [Parking Brakes \(page 15\)](#).
2. Move the throttle lever midway between the SLOW and FAST positions; refer to [Throttle Control \(page 15\)](#).
3. If the engine is cold, pull up the choke control to the ON position; refer to [Choke Control \(page 15\)](#).

**Note:** If the engine is warm, push down the choke lever to the OFF position.

4. Rotate the ignition switch to the START position; refer to [Ignition Switch \(page 15\)](#).

**Note:** When the engine starts, release the switch.

**Important:** Do not crank the engine continuously for more than 10 seconds at a time. If the engine does not start, allow a 60 second cool-down period between starting attempts. Failure to follow these guidelines can overheat the starter motor

5. If the choke control is in the ON position, gradually move the lever down, toward the OFF position as the engine warms up.

## Shutting Off the Engine

1. Move motion-control lever to the NEUTRAL position, bring the machine to a full stop, and engage the parking brake; refer to [Motion-Control Levers \(page 14\)](#) and [Parking Brakes \(page 15\)](#).
2. Move the throttle in the midway between the SLOW and FAST positions; refer to [Throttle Control \(page 15\)](#).
3. Run the engine for a minimum of 15 seconds, then turn the ignition switch to the OFF position; refer to [Ignition Switch \(page 15\)](#).
4. Remove the key; refer to [Ignition Switch \(page 15\)](#).

# Driving the Machine

### ⚠ CAUTION

The machine can turn rapidly by moving the steering control to the far right or left. You may lose control of the machine, which may injure you and others, and damage the machine.

- Use caution when making turns.
- Slow down the machine before making sharp turns.

**Important:** If the motion-control levers do not return to the NEUTRAL position when you release them, contact an authorized service dealer.

**Important:** To begin moving the machine (forward or backward), the parking-brake lever must be released before you move the motion-control lever.

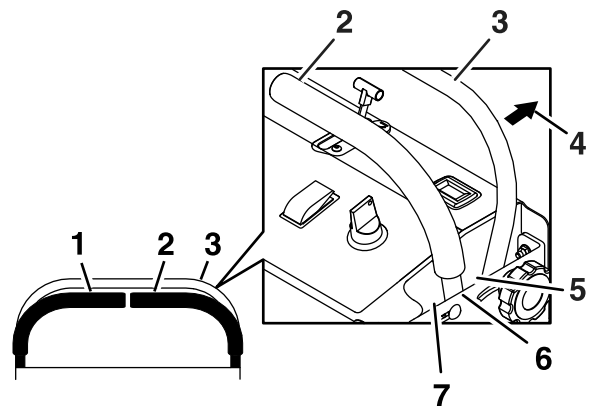


Figure 15

- |                                      |            |
|--------------------------------------|------------|
| 1. Left motion-control lever         | 5. Forward |
| 2. Right motion-control lever        | 6. Neutral |
| 3. Front reference/speed-control bar | 7. Reverse |
| 4. Front of the machine              |            |

## Driving Forward

1. Disengage the parking brake; refer to [Parking Brakes \(page 15\)](#).
2. Slowly push the motion-control levers forward ([Figure 16](#)).

**Note:** The farther you move the motion-control levers in either direction, the faster the machine moves in that direction.

**Note:** To stop, pull the motion-control levers back to the NEUTRAL position.



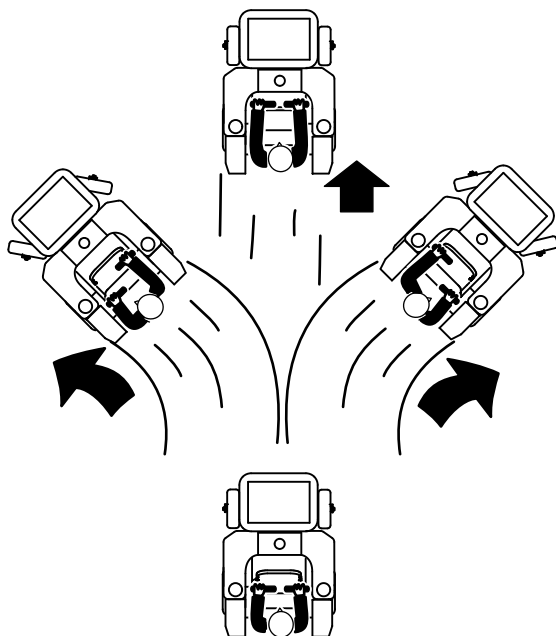


Figure 16

g311580

## Driving Backward

Slowly pull the motion-control levers rearward (Figure 17).

**Note:** To stop, pull the motion-control levers back to the NEUTRAL position.

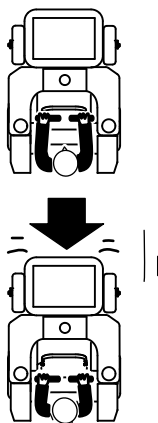


Figure 17

g311579

## Stopping the Machine

### ⚠ CAUTION

Children or bystanders may be injured if they move or attempt to operate the machine while it is unattended.

Always remove the key and engage the parking brake when leaving the machine unattended.

1. Move the motion-control levers to neutral and engage the parking brake.
2. If running, shut off the spray pump.
3. If running, shut off the impeller motor.
4. Shut off the engine and remove the key.
5. If you are parking the machine on an incline, chock the tires in addition to engaging the parking brake.

## Driving Across Hills

The caster-wheel lock allows the operator to lock the front caster wheels in the forward position to increase side hill stability.

- Press and hold the caster wheel-lock pedal to lock the caster wheels in the straight position.
- Release the caster wheel-lock pedal to unlock the caster wheels, and allow the machine to freely turn.



# The Display

Refer to the *User's Manual* for the display of the following information:

## Display Information Types

- Time of day
- Stopwatch
- Ground speed
- Odometer
- Battery voltage
- Hour meter (internal)
- Air temperature
- Display battery voltage

## Display Operation Controls

- User interface and buttons
- Backlighting
- Data Reset

## Setup Mode

- Units of measure
  - Distance—KM/H (kilometers per hour) or M/H (miles per hour)
  - Temperature—°C or °F
- Clock format and time of day
- Low voltage caution and warning

## Maintenance

Changing the display battery

# Operating the Spreader

## ⚠ CAUTION

Chemicals are hazardous and can cause personal injury.

- Read the chemical manufacturer's directions on the label before handling the chemicals; follow all manufacturer recommendations and precautions.
- Keep chemicals away from your skin. Should contact occur, wash the affected area thoroughly with soap and clean water.
- Wear eye protection, gloves, and any other protective equipment recommended by the chemical manufacturer.

Use the spreader to disperse free-flowing granular materials such as grass seed, fertilizer, ice melt, etc. When you use the spreader, first fill the hopper, then apply the granular materials to the work site, and finish by cleaning the spreader.

**Important:** When you use your spreader, thoroughly clean it at the end of the day.

## Adjusting the Impeller-Speed Control

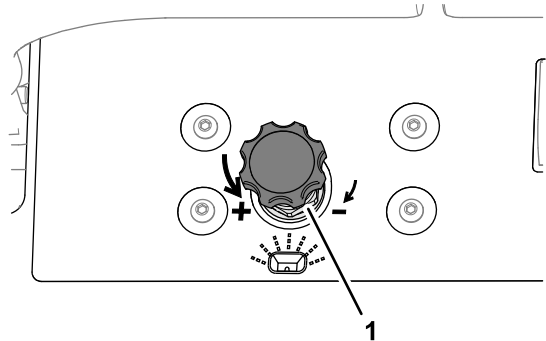


Figure 18

g311592

1. Knob (impeller-speed control)

Use the impeller-speed control (Figure 18) to start the hydraulic motor that drives the impeller, adjust the impeller-motor speed and adjust the broadcast pattern width, and shut off the impeller motor.

- Rotate the impeller control knob counterclockwise to run the impeller motor, increase motor speed and increase the broadcast pattern.
- Rotate the impeller control knob clockwise to decrease motor speed and decrease the broadcast pattern, or shut off the impeller motor.

# Hopper Controls

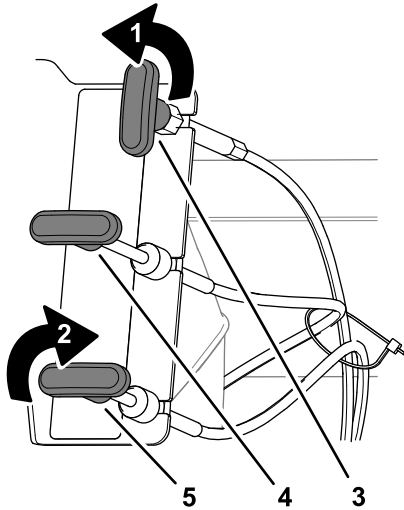


Figure 19

g312313

- |                        |                      |
|------------------------|----------------------|
| 1. Unlock              | 4. Deflector control |
| 2. Lock                | 5. Diffuser control  |
| 3. Hopper-door control |                      |

## Adjusting the Hopper-Door Control

**Important:** Close and lock the hopper-door control when you are not spreading.

Use the hopper-door control to open and close granular-substance flow from the hopper.

1. Rotate the handle of the hopper-door control counterclockwise to unlock the control (Figure 19).
2. Open or close the hopper door as follows:
  - Pull the handle to allow granular product to flow from the hopper to the impeller.
  - Push the handle to shut off the flow of granular product.
3. Rotate the handle of the hopper-door control clockwise to lock the control (Figure 19).

## Adjusting the Deflector Control

Use the deflector control to adjust the broadcast of granular product from left side of the impeller. The deflector control is pulled during normal spreader operation.

1. Rotate the handle of the deflector control counterclockwise to unlock the control (Figure 19).
2. Adjust the broadcast deflector as follows:

- Pull the handle to broadcast granular product from the left side of the impeller.
  - Push the handle to block granular product from broadcasting at the left side of the impeller.
3. Rotate the handle of the deflector control clockwise to lock the control (Figure 19).

## Adjusting the Diffuser Control

Use the diffuser control to adjust the spread granular product heavier to the left, consistent in the middle, or heavier to the right.

1. Rotate the handle of the diffuser control counterclockwise to unlock the control (Figure 19).
2. Adjust the diffuser control as follows:
  - Pull the handle to broadcast more granular product from the right side of the impeller.
  - Center the handle to balance the broadcast granular product evenly.
  - Push the handle to broadcast more granular product from the left side of the impeller.
3. Rotate the handle of the diffuser control clockwise to lock the control (Figure 19).

## Before Operating the Spreader

Before you start using the spreader, calibrate the spreader for the material that you will disperse; refer to [Calibrating the Spreader \(page 26\)](#).

**Important:** Prior to filling the hopper, verify that you have set the proper spreader-application rate.

## Calibrating the Spreader

Calibrate the spreader each time you change granular materials. The spreader broadcasts material in a pattern 1 to 7.6 m (3 to 25 ft) wide depending on the material particle size, volume/density, impeller-motor speed, rate of travel, and wind conditions.

Use the [Spreading Charts \(page 30\)](#) along with information from [Determining the Distribution Pattern \(page 28\)](#), [Determining the Effective Spreading Width \(page 28\)](#), and [Calculating the Application Rate \(page 28\)](#) when calibrating the spreader.


## Preparing the Test Site and Machine

**Operator supplied equipment:** 15 shallow collection pans and 15 graduated measuring cylinders

**Note:** The most accurate method to measure the distribution uses shallow collection pans and graduated measuring cylinders. In the example below, the 15 shallow collection pans approximately 30 cm

(12 inches) wide, 91 cm (36 inches) long, and 5 cm (2 inches) tall.

1. Place one pan in the center of the drive path. Arrange the next two pans, one on each side, far enough apart to allow adequate room for the drive tires of the machine to pass around the center pan.
2. Place the remaining pans in a straight line as shown in [Figure 20](#) or [Figure 21](#).
  - For larger granule materials:  
Space 6 additional pans, on each side, 12 inches (30 cm) apart ([Figure 20](#)).

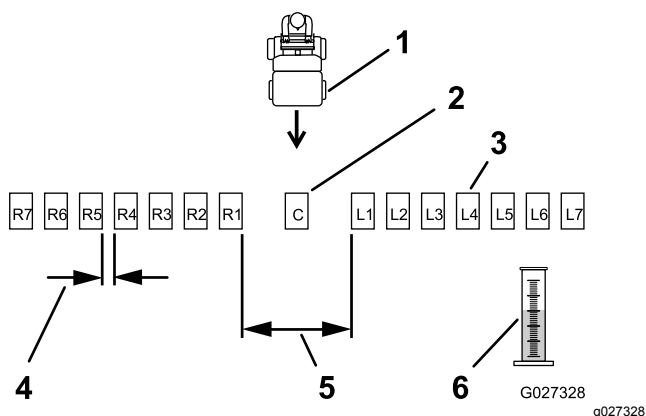


**Figure 20**

Pan spacing for larger granule materials

- |                                       |   |
|---------------------------------------|---|
| 1. Spreader moving toward pans        | 4. L1 and R1 collection pan gap (spread apart to allow machine to pass through) |
| 2. Center pan                         | 5. 30 cm (12 inch) gap  |
| 3. Collection pans (gap between each) | 6. Graduated measuring cylinder   |

- For small granule materials:

Place 6 additional pans, on each side, with no gap in between each pan ([Figure 21](#)).

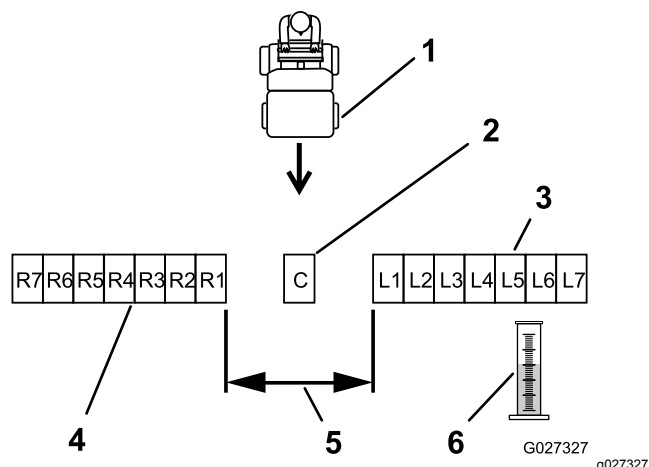


**Figure 21**

Pan spacing for small granule materials

- |   |   |
|---|---|
| 1. Spreader moving toward pans                | 4. Right collection pans (no gap between each)                                  |
| 2. Center collection pan                      | 5. L1 and R1 collection pan gap (spread apart to allow machine to pass through) |
| 3. Left collection pans (no gap between each) | 6. Graduated measuring cylinder   |

3. Move the machine far enough away from the test area (where the collection pans are located) to ensure that the machine travels at the desired spreading speed before reaching the site.
4. Determine the application rate and the related drop-rate cam setting; refer to [Spreading Charts](#) (page 30).
5. Rotate the drop rate cam ([Figure 22](#)) to the cam setting you determined in step 4.

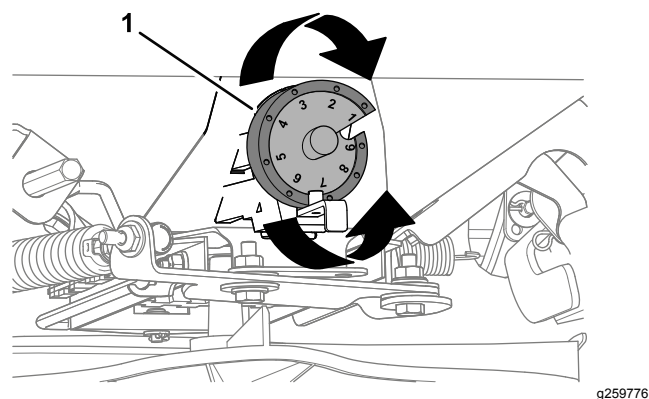

**Figure 22**

1. Drop rate cam

6. Ensure that the hopper-door control is in the close position, and fill the hopper approximately half-full with the desired material; refer to [Filling the Spreader Hopper](#) (page 29).
7. Pull the deflector control handle and lock it; refer to [Adjusting the Deflector Control](#) (page 26).

## Determining the Distribution Pattern

1. Set the diffuser control to the middle of its travel and lock it; refer to [Adjusting the Diffuser Control \(page 26\)](#).
2. Adjust the impeller speed control to set the broadcast pattern width; refer to [Adjusting the Impeller-Speed Control \(page 25\)](#).
3. Drive the machine toward the test site at the appropriate speed.
4. As you approach the center pan, pull the wide distribution granular gate control to the open position, and drive over the center pan.
5. Close the gate control, move motion-control lever to the NEUTRAL position, shut off the engine, wait for all moving parts to stop, remove key, and engage parking brake.
6. Label each graduated measuring cylinder to correspond with the distribution pans (such as L2, L1, Center, R1, R2); refer to [Figure 20](#) and [Figure 21](#).
7. One at a time, take a collection pan and dump the contents into the corresponding graduated cylinder. Record the amount of granular material collected and return the pan to its location. Repeat this until all pan contents have been emptied.  
**Note:** Repeat broadcasting over the test site several times, moving in the same direction each time, until enough material is dispensed to the collection pan to half fill a graduated cylinder.
8. With the graduated measuring cylinder in the same straight line as the pans, evaluate the volume of material in each cylinder to determine the quality of the distribution from the spreader.
9. To adjust the spreader pattern, refer to the [Adjusting the Spreader Pattern \(page 31\)](#).
10. Fill the hopper half-full of the desired material and repeat steps 1 through 9 until you achieve a uniform pattern.

## Determining the Effective Spreading Width

Use the effective width to determine the uniform distribution of the granular material.

**Note:** The spreading width range is 1 to 8 m (3 to 25 ft).

1. After the spreader pattern is correctly adjusted, evaluate the amount of material in the center graduated measuring cylinder.
2. Locate the 2 graduated cylinder, one each side of center, that contains 1/2 the measured amount of the material that you observed in the center graduated cylinder.

3. Go to the two corresponding pans. Starting from the outer edge, measure the distance between left pan, across the center pan, to the outer edge of the right pan, and record the measurement.

**Record the effective spreading width here:**

\_\_\_\_\_

## Preparing the Calibration Course for Calculating the Application Rate

1. Determine a course length by dividing 93 m<sup>2</sup> (1,000 ft<sup>2</sup>) by the effective spread width that you determined in [Determining the Effective Spreading Width \(page 28\)](#); use the course length formula. **Record the course length here:** \_\_\_\_\_

## Calibration Course Length Formula

Formula	$\frac{93 \text{ m}^2 (1,000 \text{ ft}^2)}{\text{Effective width measurement}} = \text{Calibration course length}$
---------	---

Example	$\frac{93 \text{ m}^2 (1,000 \text{ ft}^2)}{1.8 \text{ m} (6 \text{ ft})} = 51 \text{ m} (167 \text{ ft})$
---------	--

**Note:** In this example the effective width measures 1.8 m (6 ft).

2. Measure and visibly mark the course length. Ensure that you allow enough distance before the starting marker so that the spreader moving forward at full speed when crossing the first mark of the course.

## Calculating the Application Rate

1. Determine the area and amount of material that you are applying to the job site and record those amounts in the area and materials worksheet.

**Record the job site area here:**

\_\_\_\_\_

**Record the amount of job site material here:**

\_\_\_\_\_

2. Initially, use the recommended application rate indicated in the [Spreading Charts \(page 30\)](#) section or use the rate recommended listed on the product manufacturer's label as a guide to help determine the amount of material that you would spread over a 93 m<sup>2</sup> (1,000 ft<sup>2</sup>) area.

**Note:** In this example the calibration course is 1.8 m (6 ft) by 51m (167 ft).

3. Set the appropriate drop-rate cam setting; refer to the [Spreading Charts \(page 30\)](#) as a starting point.
4. Add material to the hopper.

**Note:** In this example we added 11.3 kg (25 lb) of material.

- Drive the spreader over the calibration course while applying the material.
- Empty the remaining material of the hopper into a clean bucket.
- Weigh the bucket containing the material and record the weight. Pour the contents back into the hopper and then weigh the empty bucket. Calculate the remaining material weight using the remaining material weight formula.

**Record the remaining material weight here:**

---

### Remaining Material Weight Formula

$$\text{Formula} \quad \frac{\text{(Remaining material and bucket weight)} - \text{(Bucket weight)}}{\text{}} = \text{Remaining material weight}$$

$$\text{Example} \quad \frac{10 \text{ kg (22 lb)} - 1 \text{ kg (2 lb)}}{\text{}} = 9 \text{ kg (20 lb)}$$

**Note:** In this example, 9 kg (20 lb) of material remain in the hopper after applying the material to the test course.

- Calculate applied material weight using the applied material formula that follows.

**Record the applied material weight here:**

---

### Applied Material Weight Formula

$$\text{Formula} \quad \frac{\text{(Original material weight)} - \text{(Remaining material weight)}}{\text{}} = \text{Applied material weight}$$

$$\text{Example} \quad \frac{11.3 \text{ kg (25 lb)} - 9 \text{ kg (20 lb)}}{3} = 2.3 \text{ kg (5 lb)}$$

**Note:** This calculation means that at the selected motor-rotation speed, 2.3 kg (5 lb) of material was applied to the 93 m<sup>2</sup> (1,000 ft<sup>2</sup>) test course.

- If necessary, adjust the drop-rate cam to achieve the recommended application rate. Once you achieve the correct application rate, repeat this procedure an additional time to verify your results.


**Important:** Designate a new calibration course each time, so that the turf is not damaged by excessive application of material.

## Filling the Spreader Hopper

**Maximum hopper weight capacity:** 54 kg (120 lb)

- Drive the machine to the work site.
- Move the machine to a level surface, move motion-control lever to the NEUTRAL position, shut off the engine, wait for all moving parts to stop, remove key, and engage parking brake.
- Ensure that the hopper-door control is in the fully forward (closed) position; refer to [Adjusting the Hopper-Door Control](#) (page 26).
- Use the [Spreading Charts](#) (page 30) to determine the setting for the drop-rate cam ([Figure 23](#)).

**Note:** If the setting is not listed for the type of material that you are using, set the cam to the setting with a lower value then adjust as needed.

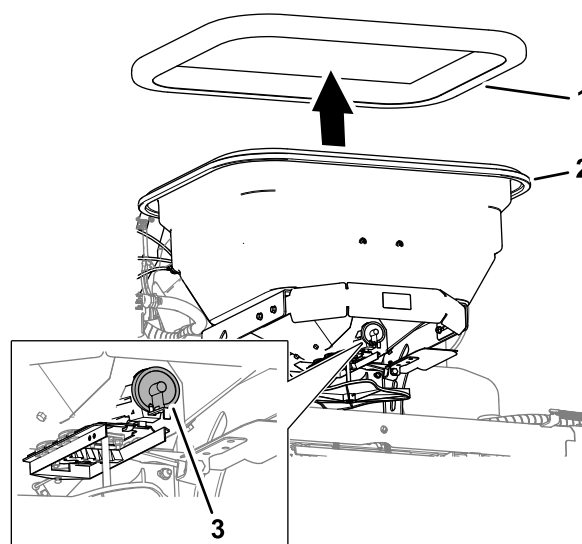

**Figure 23**

- Cover
- Hopper
- Drop-rate cam

- Remove the cover from the hopper, add the material that you are spreading, and install the cover onto the hopper ([Figure 23](#)).

**Note:** Do not overload the hopper; the maximum weight capacity of the hopper is 54 kg (120 lb).

**Note:** You may place extra bags of granular material in the cargo boxes behind the spray tanks.

# Using the Spreader

## Spreading Charts

**Note:** The cam setting tables for granular material and the grass seed are provided with permission from the Brinly-Hardy Company; reference the Brinly-Hardy Company website for more information.

Use these charts as an approximate guideline only. Other factors, such as weather conditions, spreader operation, and the condition of material affects spreader performance.

### Cam Settings for Pellet and Granular Material Application

Type	kg per 93 m <sup>2</sup> (lb per 1,000 ft <sup>2</sup> )	Cam Setting — One Pass	Cam Setting — Two Passes
Fine Pellets	0.5 (1)	3.6	3.1
	0.9 (2)	4.0	3.5
	1.4 (3)	4.2	3.7
Mixed Fine Pellets	0.9 (2)	3.7	3.2
	1.8 (4)	4.7	4.1
	2.7 (6)	5.2	4.5
Small Pellets	0.9 (2)	3	2.2
	1.8 (4)	4.2	3.7
	2.7 (6)	4.5	4
Nitrogen Pellets Medium Size	0.5 (1)	3.5	3
	0.9 (2)	4.2	3.7
	1.4 (3)	4.7	4
Medium Pellets and Granules	0.9 (2)	3.5	3
	1.8 (4)	4.2	3.8
	2.7 (6)	5.2	4.5
Large Heavy Pellets	0.9 (2)	3.8	3.3
	1.8 (4)	4.9	4.1
	2.7 (6)	5.9	4.9

Use the chart below for reference only. When spraying and spreading at the same time, set the spread pattern to twice the width of the spray; this will help avoid striping and streaking. For example, standard spray width = 2.7 m (9 ft) and spread width = 5.4 m (18 ft).

### Cam Settings for Grass Seed Application

Type	Bag Weight	Coverage - m <sup>2</sup> (ft <sup>2</sup> )	Cam Setting – Full Rate	Cam Setting – Half Rate	Spreader Width
Blue Grass or Red Top	0.23 kg (0.5 lb)	93 (1,000)	1.25		4
	0.45 kg (1 lb)	93 (1,000)	2.0		4
	0.9 kg (2 lb)	93 (1,000)	2.5		4
Park, Merion, Delta, or Kentucky Bluegrass	2.27 kg (.5 lb)	93 (1,000)	2.5		4
	0.45 kg (1 lb)	93 (1,000)	3.0		4
	0.9 kg (2 lb)	93 (1,000)	3.5		4
Hulled Bermuda	0.9 kg (2 lb)	93 (1,000)	2.75	2.25	6
	1.36 kg (3 lb)	93 (1,000)	3.0	2.5	6
	1.81 kg (4 lb)	93 (1,000)	3.25	2.75	6



## Cam Settings for Grass Seed Application (cont'd.)

Type	Bag Weight	Coverage - m <sup>2</sup> (ft <sup>2</sup> )	Cam Setting – Full Rate	Cam Setting – Half Rate	Spreader Width
Mixtures Including Coarse Seeds	0.9 kg (2 lb)	93 (1,000)	6.0		6
	1.81 kg (4 lb)	93 (1,000)	7.0		6
	2.72 kg (6 lb)	93 (1,000)	7.0		6
Rye Grasses or Tall Fescue	0.9 kg (2 lb)	93 (1,000)	6.0		6
	1.81 kg (4 lb)	93 (1,000)	7.0		6
	2.72 kg (6 lb)	93 (1,000)	7.75		6
Dichondra	113 g (4 oz)	93 (1,000)	1.9		8
	227 g (8 oz)	93 (1,000)	2.1		8
	340 g (12 oz)	93 (1,000)	2.5		8
Pensacola Bahia	1.81 kg (4 lb)	93 (1,000)	4.5	3.75	7
	2.27 kg (.5 lb)	93 (1,000)	4.75	4.0	7
	2.72 kg (6 lb)	93 (1,000)	5.0	4.25	7

### Adjusting the Spreader Pattern

If the spreader casts material unequally side-to-side—too light/heavy to one side—(see [Figure 24](#), adjust the spreader-pattern.

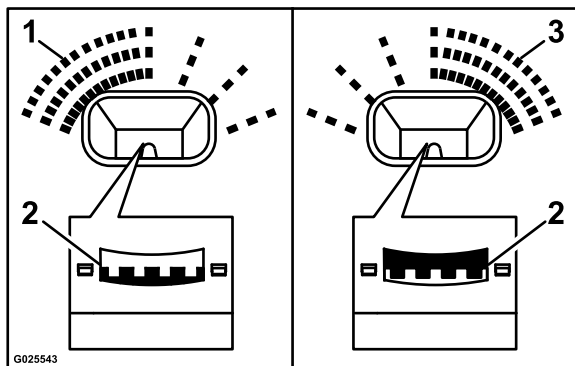


Figure 24

1. Heavy to left side
2. Move ramp pattern to shaded position
3. Heavy to right side

**Note:** Do not adjust the ramps that split the product flow. Adjust only the front or rear ramp positions.

1. Unlock the diffuser control by turning the handle counterclockwise 90° as shown in 2 of [Figure 25](#).

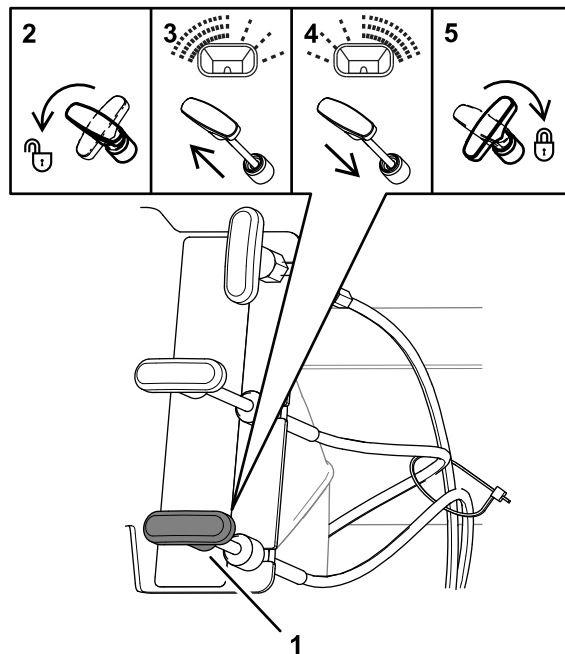


Figure 25

1. Diffuser control
2. Rotate counterclockwise to unlock
3. Start notch if pattern is heavy to left side
4. Start notch if pattern is heavy to right side
5. Rotate clockwise to lock


2. Adjust the spreader pattern as follows:

- If the material is broadcast too heavy at the left side of the machine, push the diffuser control down slightly; refer to 3 of [Figure 25](#).
  - If the material is broadcast too heavy at the right side of the machine, pull the diffuser control up slightly; refer to 4 of [Figure 25](#).
3. Lock the spreader-pattern control by turning the handle clockwise 90°; refer to 5 of [Figure 25](#).

## Using the Deflector Gate

Use the deflector control to temporarily stop or deflect granular material away from sidewalks, parking lots, patios, or anywhere the granular chemicals are not desired.

**Note:** The deflector gate changes the discharged of materials from the left side of the spreader only.

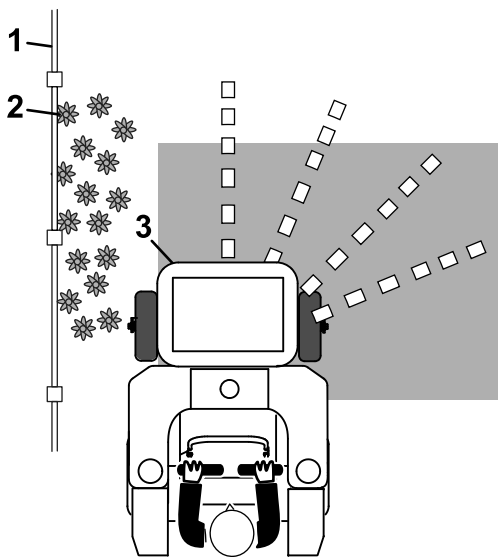


**Figure 26**

g312556

1. Fence
2. Flowers
3. Deflector gate lowered

- Pull the deflector-control handle to broadcast granular product from the left side of the impeller.

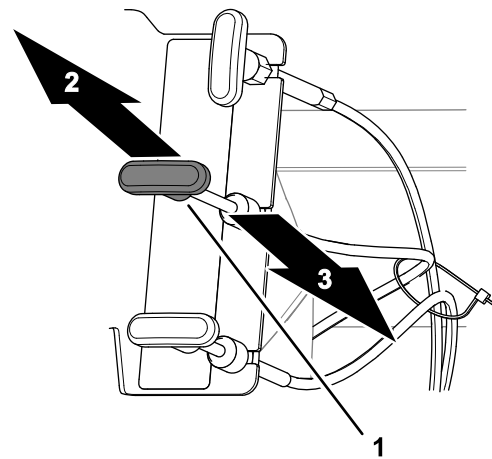

**Figure 27**


g312555

1. Deflector-control handle
2. Pull (broadcast at the left and right sides)
3. Push (block left side product broadcast)

- Push the handle to temporarily block granular product from broadcasting at the left side of the impeller.

## Spreading Granular Material

1. Start the engine, and adjust the throttle midway between the SLOW and the FAST positions.
2. Rotate the knob of the impeller-speed control to run the impeller motor ([Figure 28](#)).

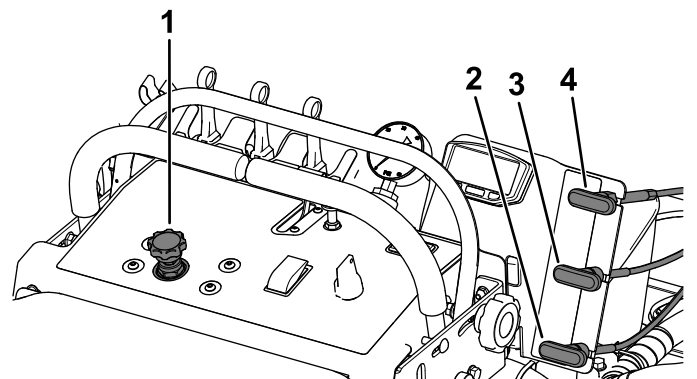

**Figure 28**

g317353

1. Impeller-speed control
2. Deflector control
3. Diffuser control
4. Hopper-door control

3. Move the throttle to the FAST position, and drive the machine forward.
4. Open the hopper-door control to begin spreading the granular material ([Figure 29](#)).



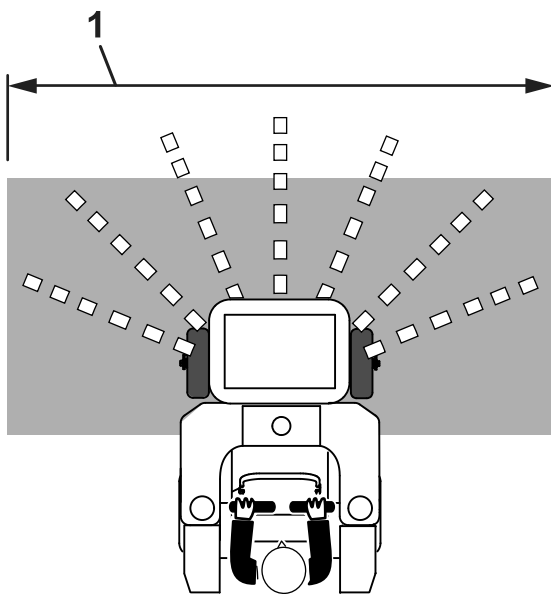


Figure 29

g312557

1. Effective broadcast width—variable 0.9 to 7.6 m (3 to 25 ft)

5. Evaluate the spread pattern.

**Note:** If you need to adjustment the spreading pattern, refer to [Adjusting the Impeller-Speed Control \(page 25\)](#), [Calibrating the Spreader \(page 26\)](#), and [Adjusting the Spreader Pattern \(page 31\)](#).

6. When you are finished spreading, close the hopper-door control.
7. Clean the hopper after each spreading session; refer to [Cleaning and Lubricating the Spreader \(page 41\)](#).

**Important:** Always empty and clean the spreader immediately after each use. Failure to do so may cause the chemicals to corrode the spreader and other components.

## Spreading Tips

**Important:** Ensure that you calibrate the spreader before you start using it.

- To ensure uniform application, broadcast pellet or granular material in an overlapping pattern.

**Note:** The highest amount of material will dispense from the front of the hopper and less material from each side. You can adjust the distribution pattern to achieve the desired results.

- Watch for changes in the distribution pattern; unequal distribution may lead to striping.

## Operating the Sprayer

### ⚠ CAUTION


Chemicals are hazardous and can cause personal injury.

- Read the chemical manufacturer's directions on the label before handling the chemicals; follow all manufacturer recommendations and precautions.
- Keep chemicals away from your skin. Should contact occur, wash the affected area thoroughly with soap and clean water.
- Wear eye protection, gloves, and any other protective equipment recommended by the chemical manufacturer.

Use the sprayer to disperse liquid herbicides, pesticides, fertilizers, and other substances. Before using the sprayer ensure that you have cleaned the tank, plumbing, and nozzles before adding any chemicals. When you use the sprayer, you first fill the spray tank, then apply the chemical solution to the work site, and then when you are finished spraying, clean the tank. It is important to complete all 3 of these steps to avoid damaging the sprayer. For example, Do not mix and add chemicals in the spray tank the night before and then spray in the morning. This could lead to separation of the chemicals and possible cause damage to components of the sprayer.

**Important:** When you use your sprayer, thoroughly clean it at the end of the day.

## Extending and Folding the Outer Spray Booms

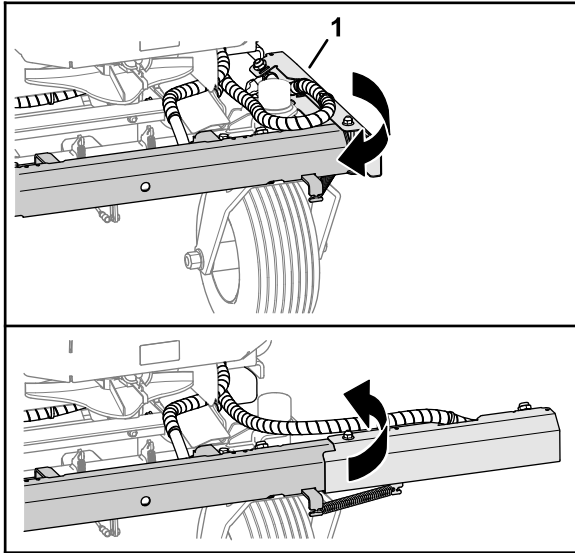

**Figure 30**

g312788


1. Outer spray boom

- Rotate the outer spray boom forward to extend the boom (Figure 30).
- Rotate the outer spray boom rearward to fold the boom (Figure 30).

## Using the Sprayer Tank Shutoff Valves

### Selecting the Left Spray Tank

Rotate the valve handles as shown in Figure 31.

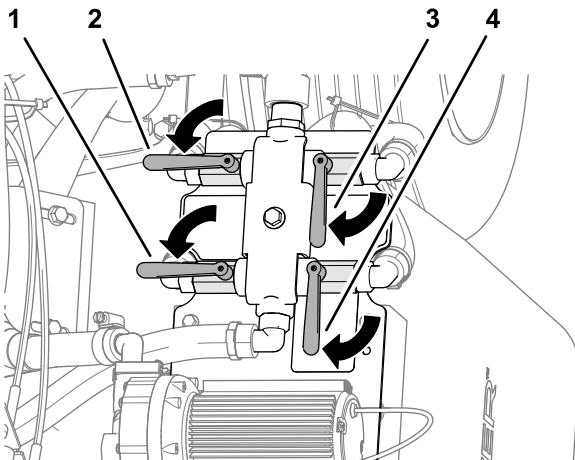


**Figure 31**

g311515

- |  |  |
|--|--|
| 1. Left tank return valve (OPEN position)  | 3. Right tank suction valve (CLOSE position) |
| 2. Left tank suction valve (OPEN position) | 4. Right tank return valve (CLOSE position)  |

### Selecting the Right Spray Tank

Rotate the valve handles as shown in Figure 31.

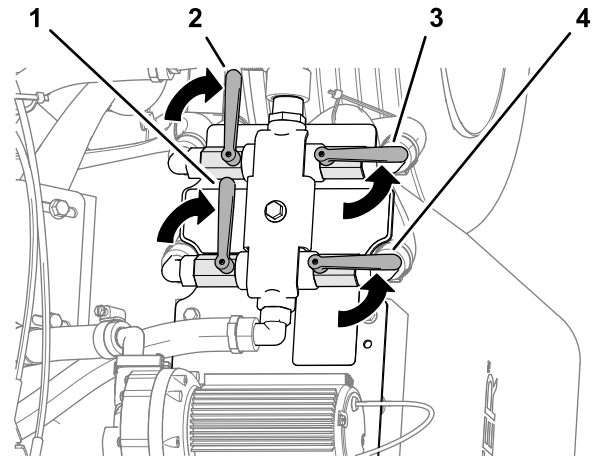


g311514

**Figure 32**

- |   |   |
|---|---|
| 1. Left tank return valve (CLOSE position)  | 3. Right tank suction valve (OPEN position) |
| 2. Left tank suction valve (CLOSE position) | 4. Right tank return valve (OPEN position)  |

### Selecting Both Spray Tanks

Rotate the valve handles as shown in Figure 33.

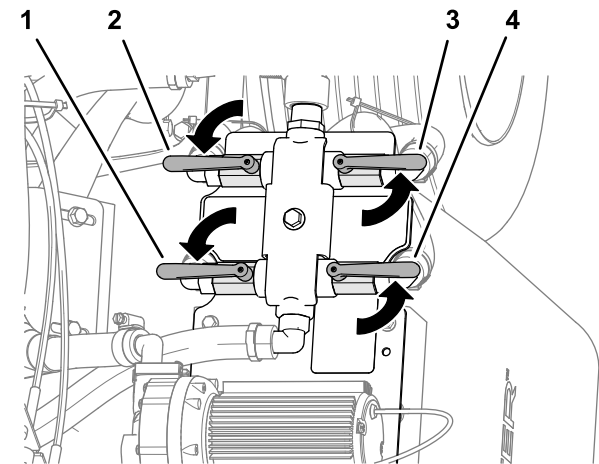

g311407


**Figure 33**

- |  |   |
|--|---|
| 1. Left tank return valve (OPEN position)  | 3. Right tank suction valve (OPEN position) |
| 2. Left tank suction valve (OPEN position) | 4. Right tank return valve (OPEN position)  |

# Transferring Fluid Between Tanks

## Transferring Fluid from the Left Tank to the Right Tank

1. Ensure that the right tank has capacity to hold fluid from the left tank.
2. Ensure that the handles for the spray-control valves are in the OFF position ([Figure 34](#)).

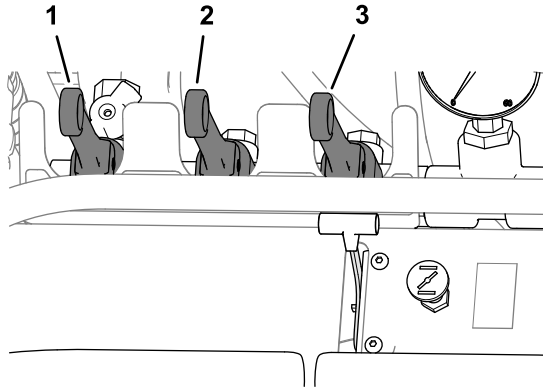


**Figure 34**

g311519

1. Spray-control valve (left boom)
2. Spray-control valve (center boom)
3. Spray-control valve (right boom)

3. Loosen the locknut, and open the throttle valve ([Figure 35](#)).

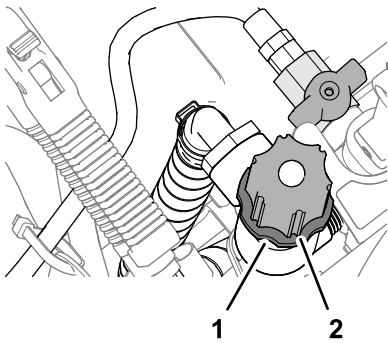


**Figure 35**

g311520

1. Locknut
2. Throttle valve knob

4. Rotate the valve handles as shown in [Figure 36](#).

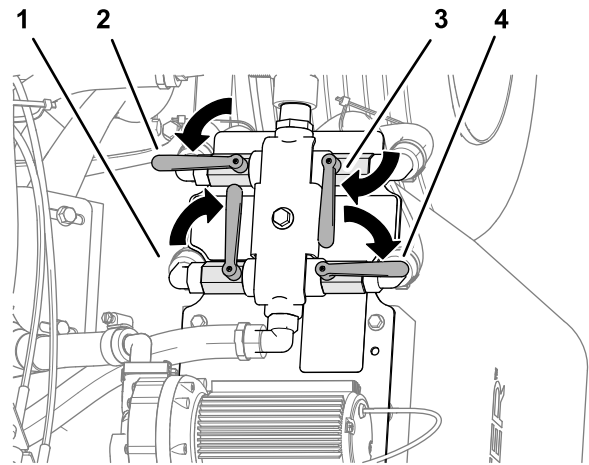


**Figure 36**

g311516

1. Left tank return valve (CLOSE position)
2. Left tank suction valve (OPEN position)
3. Right tank suction valve (CLOSE position)
4. Right tank return valve (OPEN position)

5. Press the sprayer-pump switch to the ON position ([Figure 37](#)).

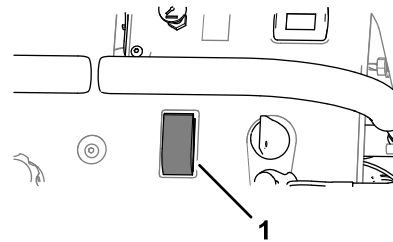

**Figure 37**


g311518

1. Sprayer-pump switch

6. When the quantity of fluid is transferred to the right tank, press the sprayer-pump switch to the OFF position.

## Transferring Fluid from the Right Tank to the Left Tank


1. Ensure that the left tank has capacity to hold fluid from the right tank.
2. Rotate the valve handles as shown in [Figure 38](#).

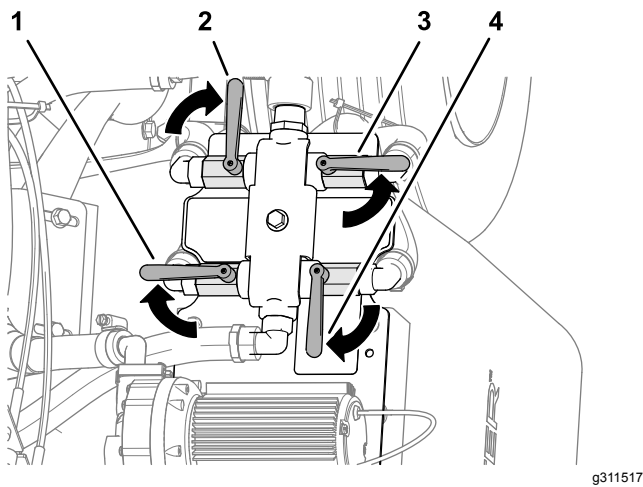

**Figure 38**

1. Left tank return valve (OPEN position)
2. Left tank suction valve (CLOSE position)
3. Right tank suction valve (OPEN position)
4. Right tank return valve (CLOSE position)

3. Press the sprayer-pump switch to the ON position (Figure 39).

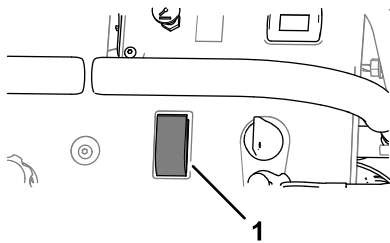

**Figure 39**

1. Sprayer-pump switch

4. When the quantity of fluid is transferred to the right tank, press the sprayer-pump switch to the OFF position.

## Sprayer Nozzle Application Rate

The machine is factory equipped with lavender colored nozzle tips that have an application rate of 1.3 L (0.34 US gallon) per 93 m<sup>2</sup> (1,000 ft<sup>2</sup>) when the sprayer pressure is 2.8 bar (40 psi), and the machine is driven 8 kph (5 mph).

- Use to the nozzle application rate chart that follows when selecting nozzles and spraying with the machine.
- Refer to the spreader/sprayer chart affixed to the back of the knee pad for quick reference calibration information in the field.
- Your machine supports application rates between 0.95 L per 93 m<sup>2</sup> (0.25 US gallon per 1,000 ft<sup>2</sup>) through 3.8 L per 93 m<sup>2</sup> (1.0 US gallon per 1,000 ft<sup>2</sup>).

**Note:** Each sprayer tip shuts off when sprayer pressure is <0.3 bar (5 psi) to prevent dripping.

## Nozzle Application Rate Table


Nozzle tip color	Ground speed		Sprayer pressure		Application rate	
Yellow	8 kph	5 mph	2.8 bar	40 psi	1.0 L/ 93 m <sup>2</sup>	0.27 (1/4) US gallon/ 1,000 ft <sup>2</sup>
Lavender	8 kph	5 mph	2.8 bar	40 psi	1.3 L/ 93 m <sup>2</sup>	0.34 (1/3) US gallon/ 1,000 ft <sup>2</sup>
Red	8 kph	5 mph	2.8 bar	40 psi	2.0 L/ 93 m <sup>2</sup>	0.54 (1/2) US gallon/ 1,000 ft <sup>2</sup>
Brown	8 kph	5 mph	3.4 bar	50 psi	2.9 L/ 93 m <sup>2</sup>	76 (3/4) US gallon/ 1,000 ft <sup>2</sup>
Gray	6.5 kph	4 mph	2.8 bar	40 psi	3.8 L/ 93 m <sup>2</sup>	1 US gallon/ 1,000 ft <sup>2</sup>

**Important:** Note: this chart only applies if you use air injected nozzle tips. Using other tips require different calculations

## Adjusting the Sprayer Pressure

The throttle valve adjusts sprayer pressure. The throttle valve is located at the left side of the control console.

- Turn the knob of the throttle valve clockwise to increase spray-system pressure (Figure 40).

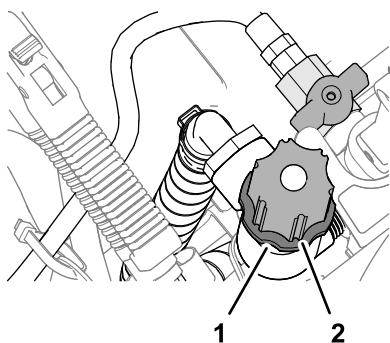


**Figure 40**

g311520

1. Locknut
2. Throttle valve knob

- Turn the knob of the throttle valve counterclockwise to decrease spray-system pressure (Figure 40).

Sprayer-system pressure displays on the pressure gauge (Figure 41). When the spray nozzles are open, sprayer-system pressure decreases slightly; adjust throttle valve to compensate for the drop in pressure.

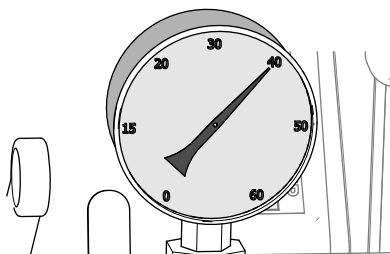

**Figure 41**

g312649

## Mixing Product

### Calculating the Average Application Rate

To determine amount of product to mix for solution of chemical in the tank, you need to understand what nozzle application rate of your machine (the factory installed lavender nozzle tip application rate is 1.3 L/93 m<sup>2</sup> (1 / 3 gallon per 1,000 ft<sup>2</sup>).

For example, a product may specify an application rate range of 33 to 44 ml/93 m<sup>2</sup> (1.1 to 1.5 oz per 1,000 ft<sup>2</sup>). When calibrating the sprayer, use the formula that follows to calculate the average application rate:

### Average Application Rate Formula

[lowest application rate] + [highest application rate]	= [sum rate]
[sum rate] / 2	= average application rate

**Example:** 33 + 44 ml (1.1 + 1.5 oz) = [77 ml (2.6 oz) sum rate]; 77 ml / 2 (2.6 oz / 2) = 38.5 ml/93 m<sup>2</sup> (1.3 oz per 1,000 ft<sup>2</sup>)—the average application rate value

### Calculating the Amount of Product for a Solution of Chemical

1. Multiply the average product application rate by the 1-gallon nozzle tip factor to determine the 1-gallon application rate.

**Example:** median application rate value—38 ml/93 m<sup>2</sup> (1.3 fl oz per 1,000 ft<sup>2</sup>) of 1.1 to 1.5) x 3 (lavender nozzle tip—nozzle tip factor) = 3.9 (adjusted application rate)

2. Multiply the 1-gallon application rate by the amount of chemical solution that you need to add to the spray tank.

**Example:** 3.9 (adjusted application rate) x gallons needed. If you are preparing a 114 L (30 US gallon) solution of chemical, use 3.5 L (117 fl oz) of product (3.9 x 30) for 114 L (30 US gallon) of water.

### Nozzle Tip/Application Rate and Tip Factor Chart

Average product application rate (example)	Nozzle tip/application rate	Nozzle tip factor	Water in the sprayer tank (example)	Product per 114 L (30 US gallon) (example)
38 ml/93 m <sup>2</sup> (1.3 fl oz per 1,000 ft <sup>2</sup> )	Yellow 1.0 L/93 m <sup>2</sup> (0.27 or 1/4 US gallon/ 1,000 ft <sup>2</sup> )	(x) 4	(x) 114 L (30 US gallons)	4.6 L (156 fl oz)
38 ml/93 m <sup>2</sup> (1.3 fl oz per 1,000 ft <sup>2</sup> )	Lavender 1.3 L/93 m <sup>2</sup> (0.34 or 1/3 US gallon/ 1,000 ft <sup>2</sup> )	(x) 3	(x) 114 L (30 US gallons)	3.5 L (117 fl oz)
38 ml/93 m <sup>2</sup> (1.3 fl oz per 1,000 ft <sup>2</sup> )	Red 2.0 L/93 m <sup>2</sup> (0.54 or 1/2 US gallon/ 1,000 ft <sup>2</sup> )	(x) 2	(x) 114 L (30 US gallons)	2.3 L (78 fl oz)
38 ml/93 m <sup>2</sup> (1.3 fl oz per 1,000 ft <sup>2</sup> )	Brown 2.9 L/93 m <sup>2</sup> (.76 (3/4) US gallon/ 1,000 ft <sup>2</sup> )	(x) 1.3	x 114 L (30 US gallons)	1.5 L (51 fl oz)
38 ml/93 m <sup>2</sup> (1.3 fl oz per 1,000 ft <sup>2</sup> )	Gray 3.8 L/93 m <sup>2</sup> (1 US gallon/ 1,000 ft <sup>2</sup> )	(x) 1	(x) 114 L (30 US gallons)	1.2 L (39 fl oz)



# Using the Sprayer

## Before Operating the Sprayer

Some chemicals are more aggressive than others and each chemical interacts differently with various materials. Some consistencies of sprayer chemicals (e.g. wettable powders, charcoal) are more abrasive and lead to higher-wear rates. If a chemical is available in a formulation that would provide increased life to the sprayer, use this alternative formulation.

Calibrate the sprayer before you start the spray application; refer to [Sprayer Nozzle Application Rate](#) (page 36).

## Filling the Tank

**Important:** Ensure that the chemicals that you are using in the sprayer are compatible for use with O-rings and seals made from fluoroelastomer material (refer to the chemical manufacturer's label; it should indicate if it is not compatible). If you use a chemical that is not compatible with fluoroelastomer material, the O-rings and seals in the sprayer can degrade and leak.

**Important:** Do not use brackish or reclaimed water in the spray system.

1. Move the machine to a level surface, move motion-control lever to the NEUTRAL position, shut off the engine, wait for all moving parts to stop, remove key, and engage parking brake.
2. Ensure that the 3 boom sprayer-control valves are in the OFF position.
3. Adjust the tank shutoff valves for the spray tank that you are using; refer to [Using the Sprayer Tank Shutoff Valves](#) (page 34).
4. Determine the amount of product and water needed to mix the amount of chemical solution as specified by the chemical manufacturer; refer to [Calculating the Amount of Product for a Solution of Chemical](#) (page 37).
5. Open the tank cap on the spray tank (Figure 42).

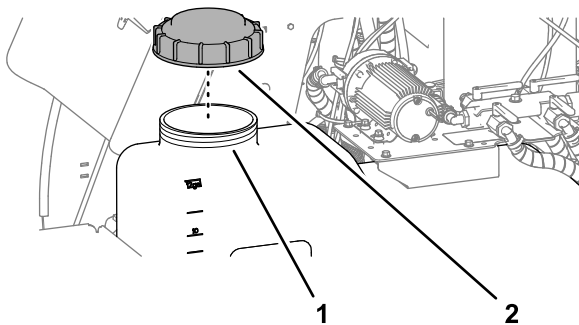


Figure 42

1. Sprayer-tank cap
2. Filler neck

6. Add 3/4 of the required water to the sprayer tank through the filler neck.

**Important:** Always use fresh, clean water in the spray tank. Do not pour chemical concentrate into an empty tank.

7. Loosen the locknut and turn the knob of the throttle valve counterclockwise (Figure 40).
8. Start the engine and set the throttle midway between the SLOW and FAST positions.
9. Set the sprayer-pump switch to the ON position (Figure 43).

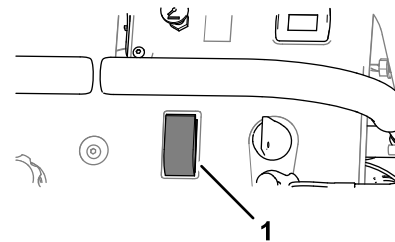


Figure 43

1. Sprayer-pump switch

10. Move the throttle to the FAST position.

**Note:** The water in the tank will circulate.

11. Add the specified amount of chemical concentrate to the tank as directed by the chemical manufacturer.

**Important:** If you are using a wettable-powder chemical, mix the powder with a small amount of water to form a liquid slurry before adding the chemical mixture to the tank.

12. Add remaining water to the tank and install cap onto the filler neck of the tank.

**Note:** Allow the content of the sprayer tank to mix thoroughly.

**Important:** Before applying chemicals to the job site, adjust the sprayer-pressure with the throttle valve according to the sprayer nozzle application rate.

## Spraying with the Sprayer Boom

**Important:** To ensure that your chemical solution remains well mixed. For the agitation feature to work, set the sprayer-pump switch to the On position, pull back the tank-agitation lever, and run the engine at high idle. If you shut off the machine and agitation is needed, leave the motion-control lever in the NEUTRAL position, engage the parking brake, increase the throttle to the FAST position, start the sprayer pump and run tank agitation.

**Note:** Calibrate the sprayer before you start the spray application; refer to [Sprayer Nozzle Application Rate \(page 36\)](#).

1. Press the spray-pump switch on the control console to the OFF position.
2. Adjust the sprayer-pressure with the throttle valve according to the sprayer nozzle application rate; refer to [Adjusting the Sprayer Pressure \(page 36\)](#).
3. Drive the machine to the job site.
4. As needed, set the left, center, and right boom sprayer-control valves to the ON position.
5. Drive the machine and step on the spray-pump foot switch to turn on the spray pump; refer to [Spray-Pump Foot Switch \(page 16\)](#).

**Important:** Keep your hands on the traction control levers; use the spray-pump foot switch. Use the spray-pump switch on the control console for mixing the tank(s), transferring fluid between tanks, and spraying with the hand wand.

**Note:** Step off the spray-pump foot switch to shut off spray pump.

6. When you finish spraying, move the boom sprayer-control valves are in the OFF position.

**Note:** If you need to continue to mix the sprayer tank contents, open the throttle valve, and use the spray-pump switch on the control console.

## Spraying Tips

- Do not overlap the effective spray area that you have previously sprayed ([Figure 44](#)).

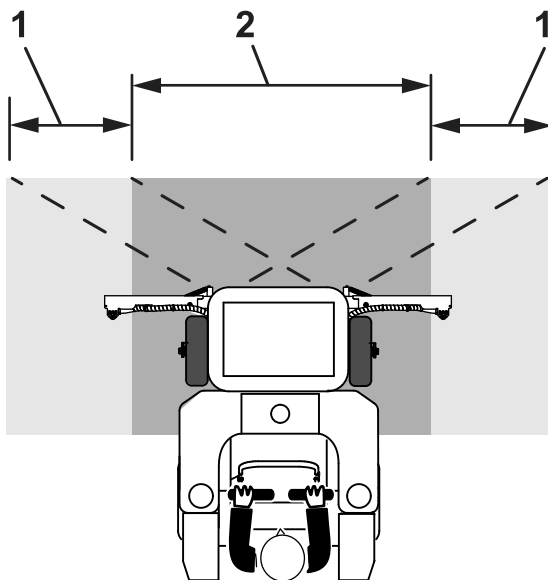


Figure 44

g312650

1. Overlap area
2. Effective spray area

- Watch for plugged sprayer nozzles.
- Move the boom sprayer-control valves to the OFF position to stop the spray flow before stopping the motion of the machine. Once stopped, leave the motion-control lever in NEUTRAL and leave the sprayer-pump switch in the ON position.
- You obtain better results if the machine is moving when spray controls are turned ON.
- Ensure adequate pump pressure for proper spray distribution by push the tank-agitation lever to the OFF position.
- Watch for changes in the application rate. Changes in the application rate indicate that your ground speed has changed beyond the operating range of the nozzles or there is a problem with the sprayer system.

**Note:** When the tank is nearly empty, the tank agitation may cause foaming of the chemical solution in the tank. In this case, throttle valve to the OFF position. Alternatively, if an anti-foaming agent compatible with the existing chemical—add the anti-foaming agent according to the manufacturer's instructions.

## Spraying with the Spray Wand


### ⚠ WARNING

The spray wand traps liquids under high pressure, even when engine is off. High-pressure spray discharge could cause serious injury or death.

- Keep clear of the nozzle and do not direct the spray or stream from the wand at people, pets, or non-work area property.
- Do not direct the spray at or near electrical-power components or source.
- Do not repair the spray wand, hoses, seals, nozzle, or other wand components; always replace them.
- Do not attach the hoses or other components to the nozzle at the end of the spray wand.
- Do not attempt to disconnect the spray wand from the machine while the sprayer system is pressurized.
- Do not use the spray wand if trigger lock is damaged or missing.
- Rotate the spray-wand lock to the OFF position when job is complete.

1. Move the machine to a level surface, move motion-control lever to the NEUTRAL position, and engage parking brake.

2. Ensure that the 3 boom sprayer-control valves are in the OFF position.
3. Remove the spray wand from the tool clip at the left side of the machine ([Figure 45](#)).

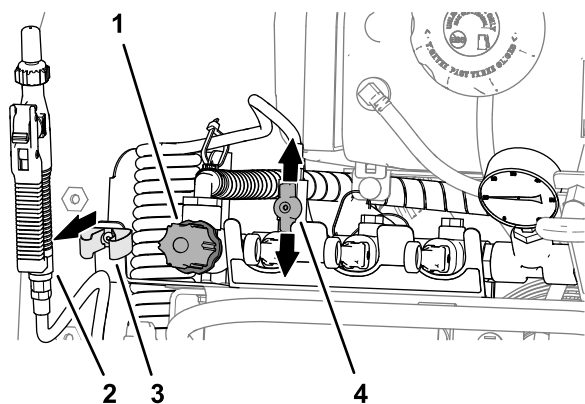

**Figure 45**


g312651

- |                        |                             |
|------------------------|-----------------------------|
| 1. Throttle-valve knob | 3. Tool clip                |
| 2. Spray wand          | 4. Spray wand-shutoff valve |

4. Firmly grip the spray wand and point it in the direction that you will spray.

**Note:** The wand may recoil; ensure that you hold it securely.

5. Open spray wand-shutoff valve ([Figure 45](#)).
6. Use the throttle valve ([Figure 45](#)) to adjust the spray-system pressure as follows:
  - To increase the spray-system pressure to the wand, rotate the throttle valve clockwise.
  - To decrease the spray-system pressure to the wand, rotate the throttle valve counterclockwise.
7. Squeeze the trigger to the spray-wand handle to begin spraying; lock the trigger in place if desired ([Figure 46](#)).

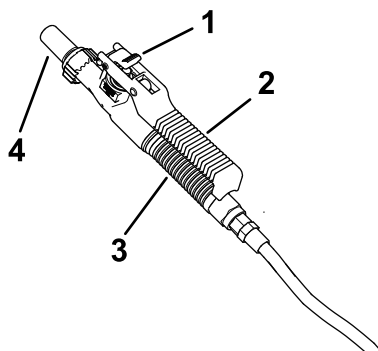

**Figure 46**

g312653

- |                       |                      |
|-----------------------|----------------------|
| 1. Trigger lock       | 3. Spray wand handle |
| 2. Spray wand trigger | 4. Spray tip         |

8. When finished spraying, if you locked the trigger of the spray-wand—unlock it, and release the trigger ([Figure 46](#)).
9. Close the spray wand-shutoff valve, shut off the spray pump, and insert the spray wand into the tool clip ([Figure 45](#)).

## After Operation

## After Operation Safety

### General Safety

- Park the machine on level ground and allow it to cool. Never allow untrained personnel to service the machine.
- Disengage the spray or close the spreader gate, set the parking brake, shut off the engine, and remove the key or disconnect the spark-plug wire. Wait for all movement to stop before adjusting, cleaning or repairing the machine.
- Clean the machine as stated in [Cleaning and Lubricating the Spreader \(page 41\)](#) and [Cleaning the Sprayer \(page 42\)](#)
- Frequently check for worn or deteriorating components that could create a hazard. Tighten loose hardware.
- Shut off the fuel when storing or transporting the machine. Do not store fuel near flames or drain fuel indoors.




# Cleaning and Lubricating the Spreader

## Cleaning the Spreader

**Service Interval:** After each use


**Important:** Do not use brackish or reclaimed water to clean the machine.

1. Drive the machine to a designated cleaning area with a level surface.
2. Move the motion-control levers to the NEUTRAL position, shut off the engine, wait for all moving parts to stop, remove key, and engage parking brake.
3. If installed, remove the cover, and empty the hopper.
4. Open the hopper gate to the maximum open position:
  - A. Pull rate gate linkage outward (Figure 47).
  - B. Rotate the drop rate cam until the slot aligns with the linkage (Figure 47).
  - C. Push in the linkage (Figure 47).

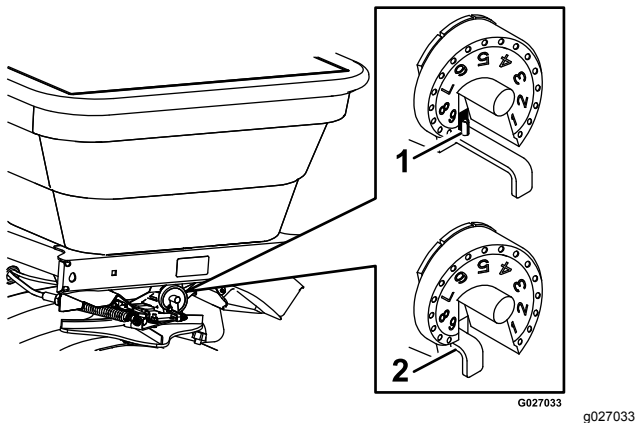

**Figure 47**

1. Slot-maximum position
2. Linkage

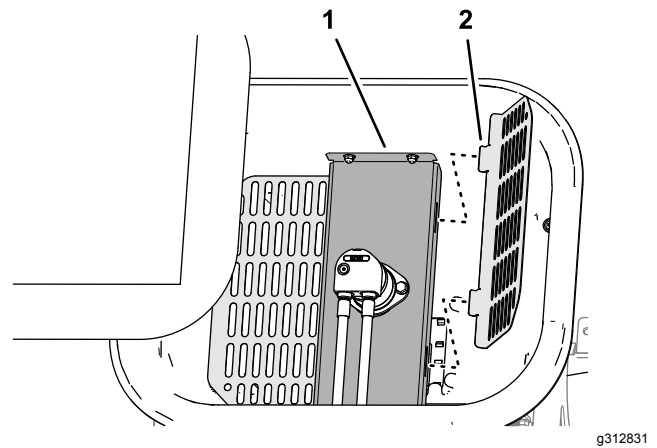

**Figure 48**

1. Hopper pan
  2. Screen
- 
6. Remove any pellet or granular material at the bottom of the hopper.
  7. Using a hose to spray the inside and outside of the entire spreader with clean water.
- Note:** Do not use a power washer to clean the machine. The high-pressure water can force residual-corrosive materials into sprayer-spreader components.
8. Install the hopper screens.
  9. Allow the hopper to drained, pull the linkage, and adjust the drop-rate cam to position 9.

5. Rotate the 2 hopper screens and remove them from the hopper pan (Figure 48).

## Lubricating the Spreader

1. Apply water-displacing lubricant to the control cables and pivot points as shown in [Figure 49](#).

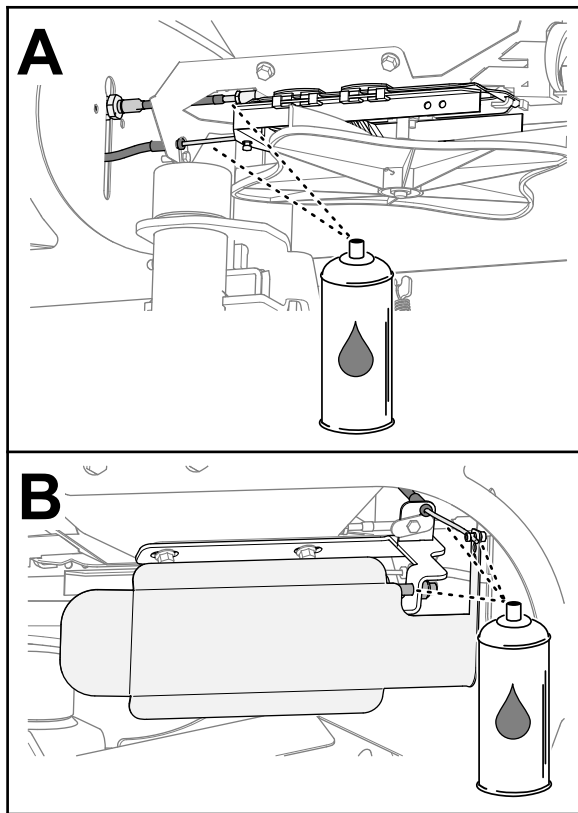


Figure 49

g312832

2. Allow the spreader-sprayer to completely dry before the next use.

## Cleaning the Sprayer

Service Interval: After each use

### ⚠ WARNING

Swallowing or inhaling chemicals could cause serious injury or death.

- Do not clean sprayer nozzles using your mouth or blowing through the nozzles.
- Replace all worn and damaged sprayer nozzles.
- Ensure that the nozzles are installed correctly.

**Important:** Do not use brackish or reclaimed water to clean the machine.

## Preparing the Machine

1. Empty the sprayer tank.

2. Fill the sprayer tank with 19 L (5 US gallons) or more of clean water and install the cap; refer to [Filling the Tank \(page 38\)](#).
3. Engage the parking brake, move the motion-control levers to the NEUTRAL position, and start the engine.
4. Set the engine throttle to FAST position.

## Cleaning the Sprayer System and Wand

**Important:** Always empty and clean the sprayer immediately after each use. Failure to do so may cause the chemicals to dry or thicken in the hoses, clogging the pump and other components.

1. Adjust the sprayer-pressure with the throttle valve; refer to [Adjusting the Sprayer Pressure \(page 36\)](#).
2. Set the left, center, and right boom sprayer-control valves to the ON position.
3. On the control console, press the spray-pump switch to turn on the spray pump; refer to [Spray-Pump Switch \(page 16\)](#).
4. Allow the rinse water in the tank to spray through the nozzles.
5. Check that all nozzles spray correctly.
6. Remove the sprayer wand from the holder, point the wand in a safe direction, and squeeze the trigger; refer to [Spraying with the Spray Wand \(page 39\)](#).
7. Release the trigger for the wand and return it to the tool clip on the machine; refer to [Spraying with the Spray Wand \(page 39\)](#).
8. Move the boom sprayer-control valves to the OFF position, set the sprayer-pump switch to the OFF position, and shut off the engine.
9. Clean the strainer; refer to [Cleaning the Strainer \(page 43\)](#).
10. Repeat steps 2 through 9 using cleaners and neutralizers recommended by the chemical manufacturers; refer to [Filling the Tank \(page 38\)](#).
11. Repeat steps 2 through 9 using clean water only.

**Note:** Allow the rinse water to discharge from the wand for 1 to 2 minutes.

## Cleaning the External Components


1. Using a hose to wash off the outside of the sprayer tank with clean water.  
**Note:** Do not use a power washer to clean the machine. The high-pressure water may force residual corrosive materials into spreader-sprayer components.
2. Remove and clean the sprayer nozzles; refer to [Cleaning the Sprayer Nozzles \(page 44\)](#).  
**Note:** Replace damaged or worn nozzles.
3. Allow the spreader-sprayer to completely dry before the next use.

## Cleaning the Strainer

**Service Interval:** After each use

**Important:** If you used wettable-powder chemicals, clean the strainer after each time that you rinse the sprayer tank.


1. Rotate the left tank and right tank return and suction valves to the closed position ([Figure 50](#)).

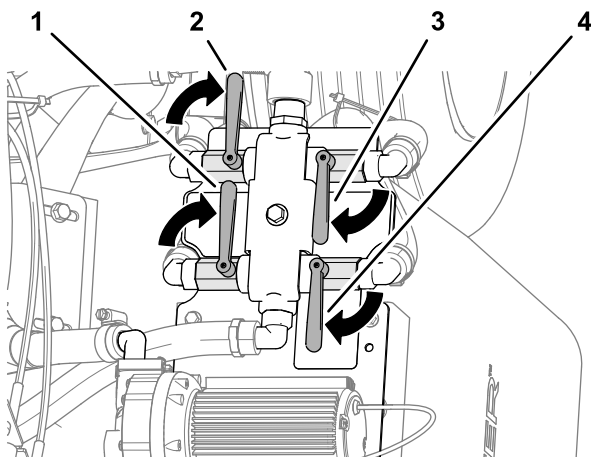

**Figure 50**

- |  |   |
|--|---|
| 1. Left tank return valve (open position)  | 3. Right tank suction valve (open position) |
| 2. Left tank suction valve (open position) | 4. Right tank return valve (open position)  |

2. Align a drain pan under the strainer ([Figure 51](#)).

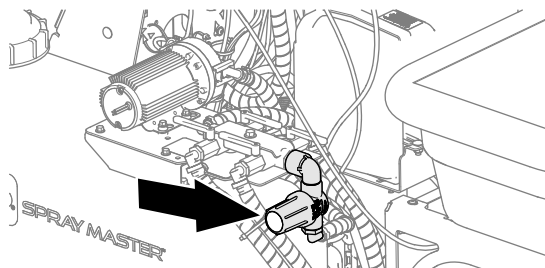


**Figure 51**

3. Rotate the strainer bowl counterclockwise and remove the bowl and screen from the body of the strainer ([Figure 52](#)).

**Note:** Remove the strainer bowl by hand.

**Note:** Replace the gasket or screen or both if these parts are worn or damaged.

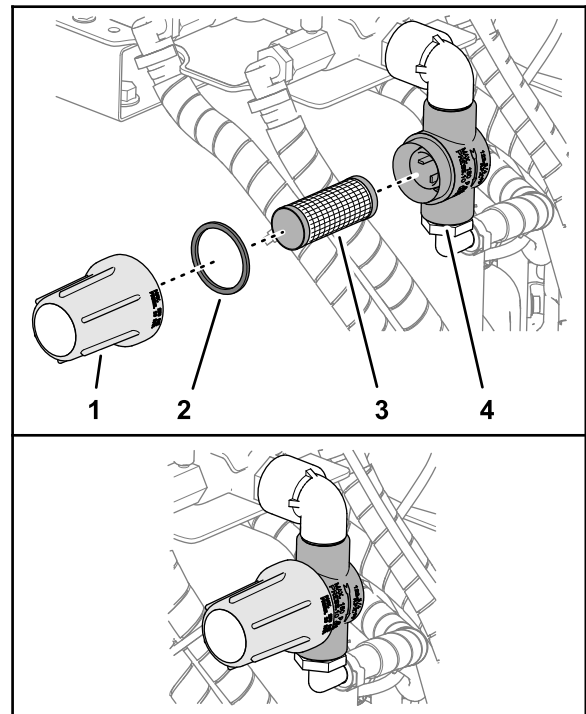

**Figure 52**

- |                  |                  |
|------------------|------------------|
| 1. Strainer bowl | 3. Screen        |
| 2. Gasket        | 4. Strainer body |

4. Allow any residual chemical solution to drain from the strainer body.


**Note:** Dispose of the waste solution according to local codes and the chemical manufacturer's instructions.

5. Use a soft-bristle brush and clean water to clean the screen and bowl.
6. Install the screen into the strainer body ([Figure 52](#)).
7. Install the gasket and strainer bowl onto the strainer body, and hand tighten the bowl ([Figure 52](#)).

# Cleaning the Sprayer Nozzles

**Service Interval:** After each use

1. Rotate the nozzle cap 90° counterclockwise and remove the cap from the nozzle body (Figure 53).

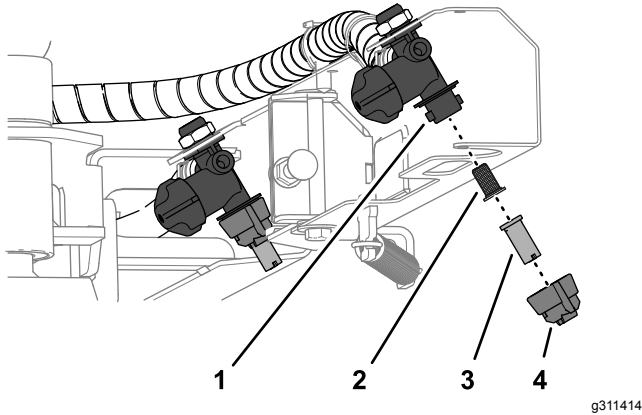


**Figure 53**

- |                |                |
|----------------|----------------|
| 1. Nozzle body | 3. Sprayer tip |
| 2. Strainer    | 4. Nozzle cap  |

2. Remove the sprayer tip and strainer from the nozzle body (Figure 53).
- Note:** Replace any worn or damaged nozzle parts.
3. Use a soft-bristle brush and clean water to clean the nozzle tip and strainer.
4. Assemble the strainer into the nozzle body (Figure 53).
5. Assemble the sprayer tip into the nozzle cap (Figure 53).
6. Install the tip and cap onto the nozzle body (Figure 53).

**Note:** Use the slot to rotate the atomizer (Figure 54) of the sprayer tip forward (in-line with the flow-regulator case of the nozzle body).

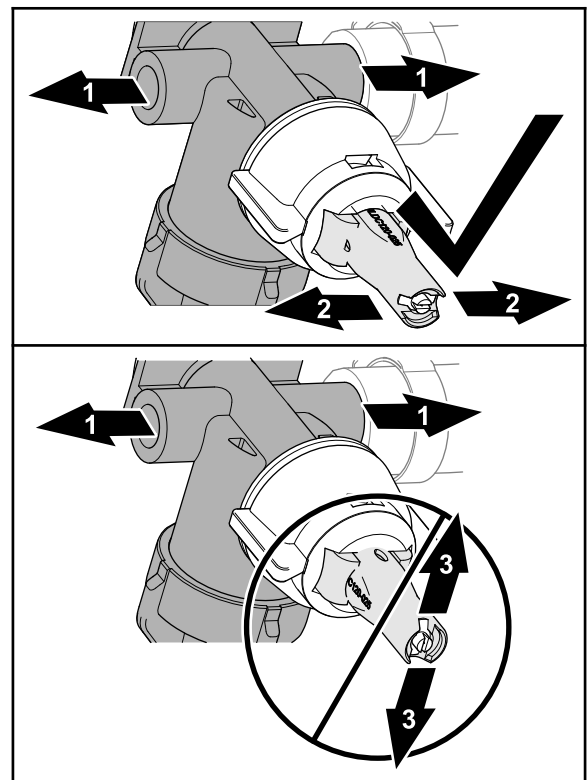

**Figure 54**

- |                                    |                              |
|------------------------------------|------------------------------|
| 1. Flow-regulator case             | 3. Atomizer slot (incorrect) |
| 2. Atomizer slot (aligned—correct) |                              |

7. Rotate the nozzle cap 90° clockwise (Figure 53).
8. Repeat steps 1 through 7 for the other spray nozzles.

# Transporting the Machine

**Machine weight:** 376 kg (829 lb)—both sprayer tank and hopper empty; 521 kg (1150 lb)—both sprayer tank and hopper full

## ⚠ CAUTION

This machine does not have turn signals, lights, reflective markings, or a slow moving vehicle emblem. Driving on a street or roadway without such equipment is dangerous and can lead to accidents causing personal injury.

Do not drive the machine on a public street or roadway.

**Note:** Refer to the chemical warning product label(s) before transporting the machine and follow all local/state/federal requirements for transporting chemicals.

**Note:** Make sure that the spreader hopper cover and the spray wand are secure before transporting.

## Loading the Machine

### ⚠ WARNING

Loading a machine onto a trailer or truck increases the possibility of tip-over and could cause serious injury or death.

- Use extreme caution when operating a machine on a ramp.
- Back the machine up the ramp and walk it forward down the ramp.
- Avoid sudden acceleration or deceleration while driving the machine on a ramp as this could cause a loss of control or a tip-over situation.
- Do not attempt to turn the machine while on the ramp; you may lose control and drive off the side.
- Use only a single, full-width ramp; do not use individual ramps for each side of the machine.
- If you must use individual ramps, use enough ramps to create an unbroken ramp surface wider than the machine.

Use a heavy-duty trailer or truck to transport the machine. Ensure that the trailer or truck has all the necessary brakes, lighting, and marking as required by law. Please carefully read all the safety instructions.

1. If using a trailer, connect it to the towing vehicle and connect the safety chains.
2. If applicable, connect the trailer brakes.
3. Lower the ramp.
4. Align the machine to the ramp and lock the caster wheels; refer to [Caster Wheel-Lock Pedal \(page 15\)](#)
5. Back the machine up the ramp ([Figure 55](#)).

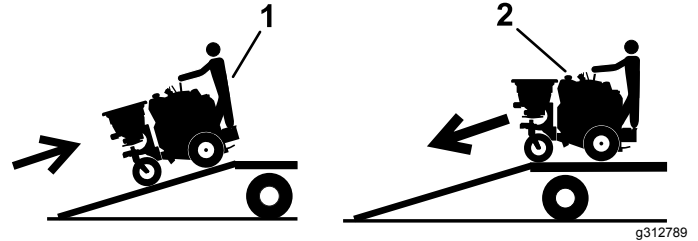


Figure 55

1. Back the machine up the ramp.
  2. Walk the machine forward down the ramp.
- 
6. Secure the machine; refer to [Securing the Machine for Transport \(page 45\)](#).
  7. If your machine has material in the spreader hopper, install the hopper cover

## Securing the Machine for Transport

### ⚠ WARNING

Securing the machine at any upper frame location could cause the parking brake to not function properly, which could cause serious injury or death.

Only use the front tie-down locations at the lower frame to secure the front of the machine.


Only use the rear tie-down locations at the back of the frame to secure the back of the machine.

**Note:** Refer to the chemical-warning-product label(s) before transporting the machine and follow all local/state/federal requirements for transporting chemicals.

**Note:** Ensure that the spreader-hopper cover and the spray wand are secure before transporting.

1. At the left side of the machine, ensure that the shutoff valve for the sprayer tank is closed and the drain plug is secure. At the right side of the machine, ensure that the pump-shutoff valve is closed.
2. Shut off the engine, remove the key, and engage the parking brake(s).


3. Block the tires.
4. Use the tie-down points on the machine to securely bind the machine to the trailer or truck with straps, chains, cable, or ropes ([Figure 56](#) and [Figure 57](#)). Refer to local regulations for trailer and tie-down requirements.

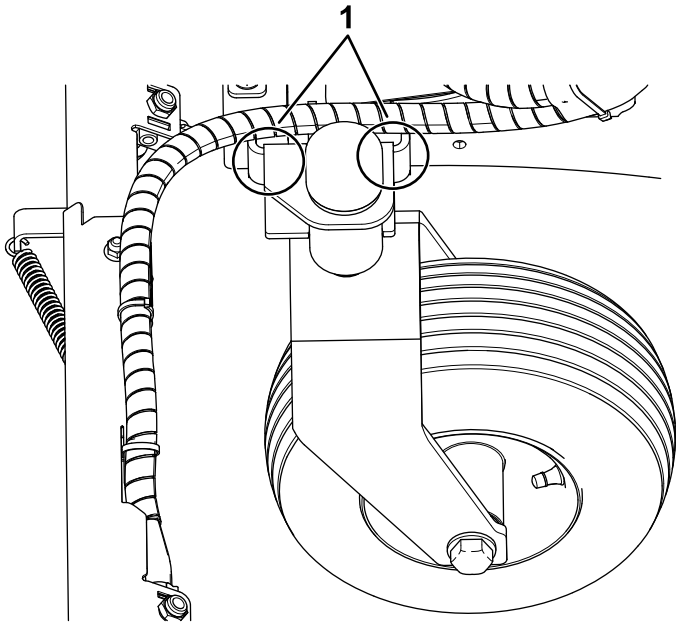

g313453

**Figure 56**

1. Front tie-down points

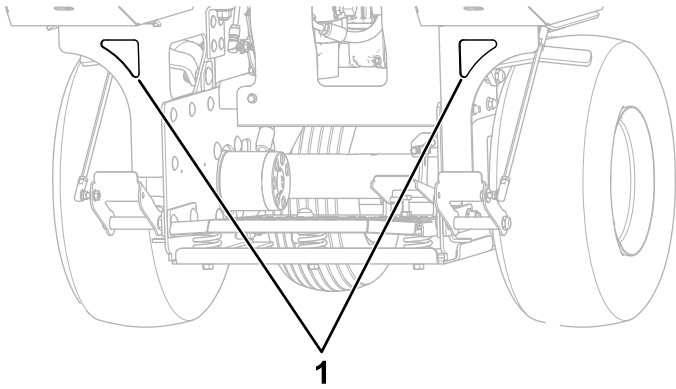

g313454

**Figure 57**

1. Rear tie-down points

# Maintenance

## Maintenance Safety

- While performing maintenance on the machine, someone could start the engine. Accidental starting of the engine could seriously injure you or others. Remove the key from the ignition switch, engage parking brake, and pull the wire(s) off the spark plug(s) before you do any maintenance. Also, push the wire(s) aside so that it does not accidentally contact the spark plug(s).
- The engine can become very hot. Touching a hot engine can cause severe burns. Allow the engine to cool completely before servicing or repairing around the engine area.
- Park the machine on level ground and allow it to cool. Never allow untrained personnel to service the machine.
- Disengage the spray or close the spreader gate, set the parking brake, shut off the engine, and remove the key or disconnect the spark-plug wire. Wait for all movement to stop before adjusting, cleaning, or repairing the machine.
- Disconnect the battery or remove the spark-plug wire before making any repairs. Disconnect the negative terminal first and the positive terminal last. Connect positive terminal first and negative terminal last.
- Relieve the pressure from the spray system before servicing the machine.
- Empty the tank and/or hopper before tilting the machine for maintenance and before storage.
- Hydraulic fluid escaping under pressure can penetrate skin and cause injury. Fluid accidentally injected into the skin must be surgically removed within a few hours by a doctor familiar with this form of injury; otherwise, gangrene may result.
  - If equipped, ensure that all hydraulic fluid hoses and lines are in good condition and that all hydraulic connections and fittings are tight before applying pressure to the hydraulic system.
  - Keep your body and hands away from pinhole leaks or nozzles that eject high-pressure hydraulic fluid.
  - Use cardboard or paper, not your hands, to find hydraulic leaks.
  - Safely relieve all pressure in the hydraulic system by placing the motion-control levers in neutral and shutting off the engine before working on the hydraulic system.
- Raising the machine for service or maintenance relying solely on mechanical or hydraulic jacks could be dangerous. The mechanical or hydraulic jacks may not be enough support or may malfunction, allowing the machine to fall and cause possible injury. Do not rely solely on mechanical or hydraulic jacks for support. Use adequate jack stands or equivalent support.
- Carefully release the pressure from components with stored energy.
- Keep your hands and feet away from moving parts. If possible, do not make adjustments while the engine is running. If the maintenance or adjustment procedure requires the engine to be running and components moving, use extreme caution.
- Contact with moving parts or hot surfaces may cause personal injury. Keep your fingers, hands, and clothing clear of rotating components and hot surfaces.
- Check all bolts frequently to maintain their proper tightness.



# Recommended Maintenance Schedule(s)

Maintenance Service Interval	Maintenance Procedure
After the first 5 hours	<ul style="list-style-type: none"> <li>• Change the engine oil.</li> </ul>
After the first 100 hours	<ul style="list-style-type: none"> <li>• Check the wheel-hub nut torque.</li> <li>• Change the hydraulic fluid and filter.</li> </ul>
Before each use or daily	<ul style="list-style-type: none"> <li>• Check the engine-oil level.</li> <li>• Check the hydraulic-fluid level.</li> <li>• Check the machine for loose hardware.</li> </ul>
After each use	<ul style="list-style-type: none"> <li>• Clean and lubricate the spreader.</li> <li>• Clean the sprayer system.</li> <li>• Clean the strainer.</li> <li>• Clean the sprayer nozzles.</li> <li>• Clean the engine and the exhaust system area</li> <li>• Clean the grass and debris buildup from the machine.</li> </ul>
Every 25 hours	<ul style="list-style-type: none"> <li>• Check the foam pre-cleaner; replace if dirty (more often under severe conditions).</li> </ul>
Every 40 hours	<ul style="list-style-type: none"> <li>• Check the belt.</li> <li>• Check the hydraulic hoses and fittings for leaks, damage, or wear. Repair any leaking, damaged, or worn hydraulic components.</li> </ul>
Every 50 hours	<ul style="list-style-type: none"> <li>• Check the tire pressure.</li> <li>• Check the sprayer system.</li> <li>• Check the spreader system.</li> </ul>
Every 80 hours	<ul style="list-style-type: none"> <li>• Remove the engine shrouds and clean the cooling fins.</li> </ul>
Every 100 hours	<ul style="list-style-type: none"> <li>• Lubricate the grease fittings.</li> <li>• Grease the belt tensioner.</li> <li>• Change the engine oil (more often under severe condition).</li> <li>• Service the spark plugs.</li> </ul>
Every 100 hours or yearly, whichever comes first	<ul style="list-style-type: none"> <li>• Clean or change the air filter.</li> </ul>
Every 400 hours	<ul style="list-style-type: none"> <li>• Replace the air filter.</li> <li>• Replace the fuel filter.</li> </ul>
Every 500 hours	<ul style="list-style-type: none"> <li>• Check the wheel-hub nut torque.</li> <li>• Change the hydraulic fluid and filter.</li> </ul>
Monthly	<ul style="list-style-type: none"> <li>• Check the battery.</li> <li>• Check the wheel-lug nut torque.</li> </ul>
Yearly	<ul style="list-style-type: none"> <li>• Lubricate the caster-axle bearings.</li> </ul>
Yearly or before storage	<ul style="list-style-type: none"> <li>• Prepare the machine for storage.</li> </ul>



# Notation for Areas of Concern

Inspection performed by:		
Item	Date	Information
1		
2		
3		
4		
5		
6		
7		
8		

**Important:** Refer to your engine owner's manual for additional maintenance procedures.

## Pre-Maintenance Procedures

### Preparing the Machine


#### **⚠ WARNING**

While you are maintaining or adjusting the machine, someone could start the engine. Accidentally starting the engine could seriously injure you or other bystanders.

Remove the key from the ignition, engage parking brake, and pull the wire(s) off the spark plug(s) before you do any maintenance. Also push the wire(s) aside so it does not accidentally contact the spark plug(s).

Perform the following before servicing, cleaning, or making any adjustments to the machine.

1. Shut the hopper-door control, shut off the impeller-speed control, shut off the boom sprayer-control valves, and shut off the sprayer-pump switch.
2. Park the machine on a level surface.
3. Move the motion controls to the NEUTRAL position.
4. Shut off the engine and remove the key.
5. Engage the parking brake.
6. Wait for all moving parts to stop allow the engine to cool before servicing, storing, or making repairs.
7. Remove the cable from the negative battery terminal ([Figure 58](#)).

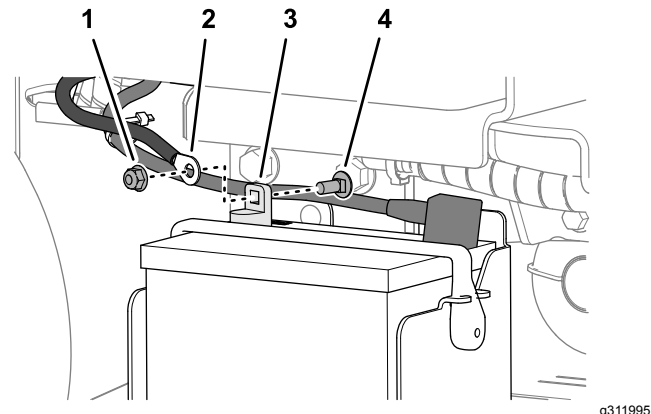

**Figure 58**

1. Flange locknut
2. Negative battery cable
3. Negative battery terminal
4. Carriage bolt

## Accessing the Machine

### Removing the Knee Pad

Rotate the knee pad up and remove it from the control console as shown in [Figure 59](#).

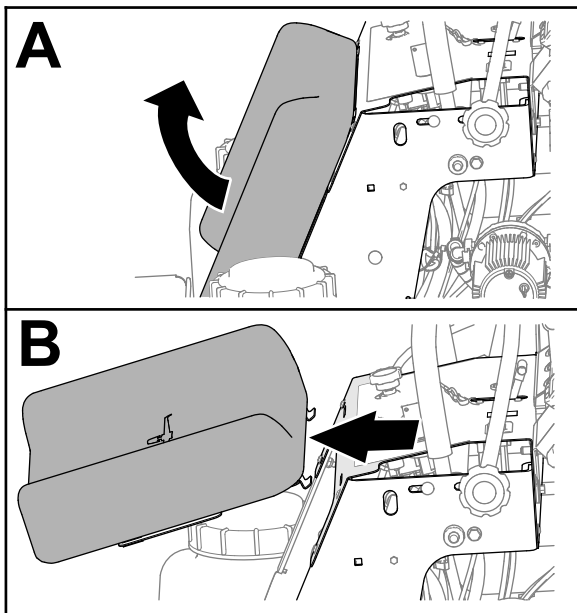


Figure 59

g317513

## Accessing the Engine

### Opening the Tanks

1. At the spray tank that you need to move, remove the flange-head bolt and flange locknut that secures the tank lock plate to the support (Figure 61).

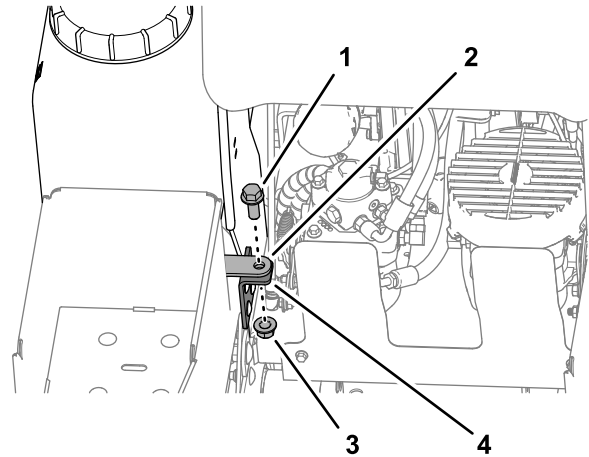


Figure 61

g311931

Left shown, the right tank is similar.

- |                     |                   |
|---------------------|-------------------|
| 1. Flange-head bolt | 3. Support        |
| 2. Tank lock plate  | 4. Flange locknut |

## Installing the Knee Pad

1. Insert the tabs of the knee pad into the slots in the control console (Figure 60).

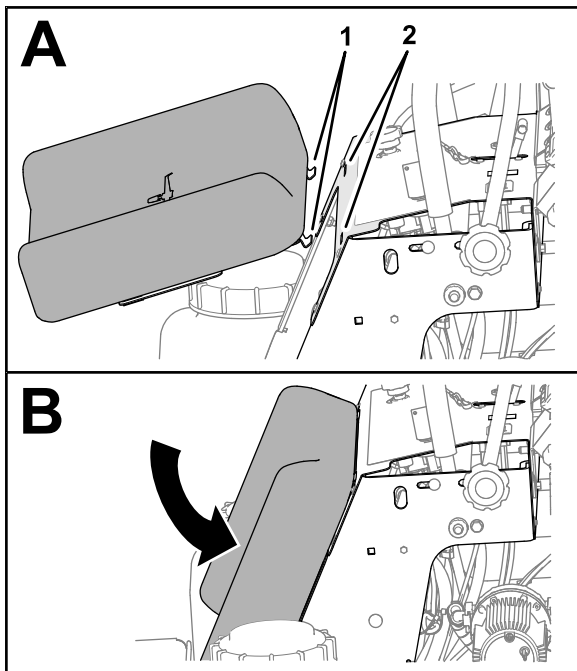


Figure 60

g317511

- |                    |                            |
|--------------------|----------------------------|
| 1. Tabs (knee pad) | 2. Slots (control console) |
|--------------------|----------------------------|

2. Rotate the knee pad down (Figure 60).


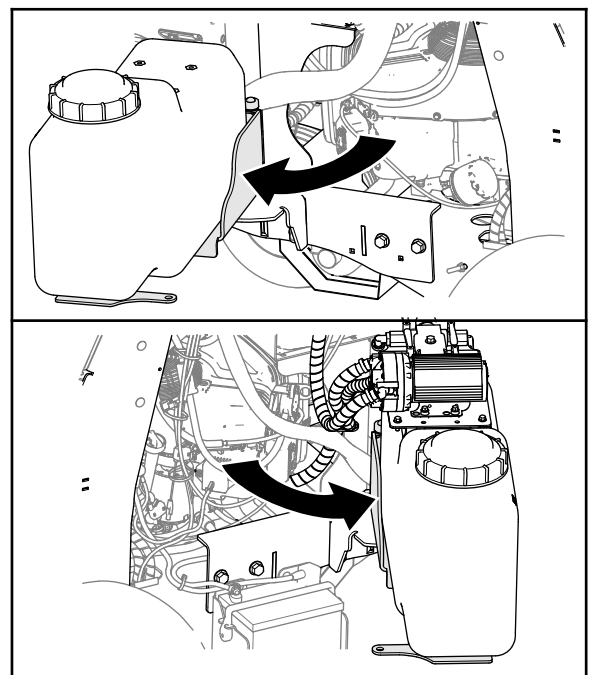


Figure 62

g311932

## Closing the Tanks


1. Rotate the tank closed as shown in [Figure 63](#).

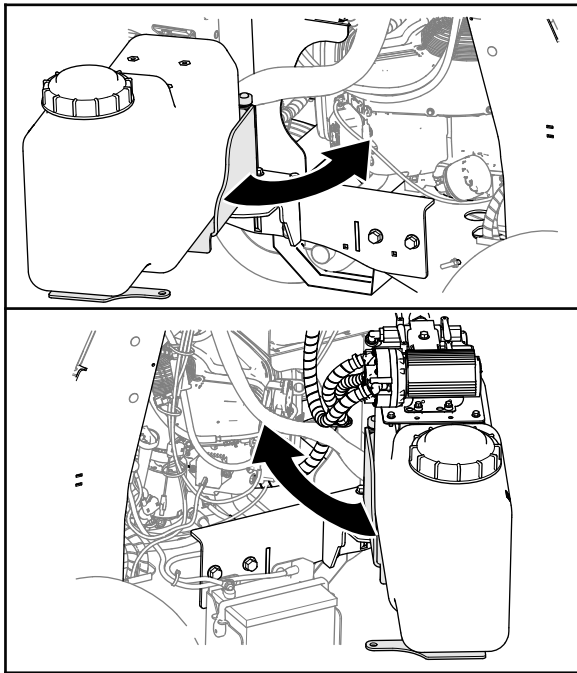

g311944

**Figure 63**

2. Align the hole in the tank lock plate with the hole in the support ([Figure 64](#)).

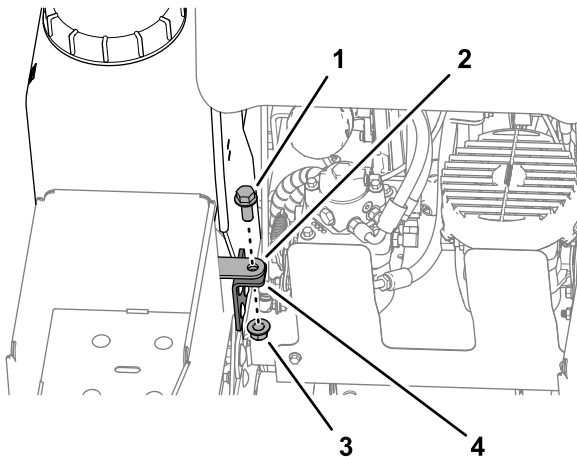

g311931

**Figure 64**

Left shown, the right tank is similar.

- |                     |                   |
|---------------------|-------------------|
| 1. Flange-head bolt | 3. Support        |
| 2. Tank lock plate  | 4. Flange locknut |

3. Assemble the flange-head bolt through the holes in the lock plate and support, and secure the bolt with the flange locknut ([Figure 64](#)).
4. Torque nut and bolt to 91 to 113 N·m (67 to 83 ft-lb).

## Lubrication


### Grease Specification

**Grease type:** National Lubricating Grease Institute (NLGI) grade No. 2 multi-purpose gun grease.

### Greasing the Caster Pivots

**Service Interval:** Every 100 hours

1. Prepare the machine for maintenance; refer to [Preparing the Machine](#) (page 49).
2. Wipe the grease fittings at caster clean with a rag ([Figure 65](#)).

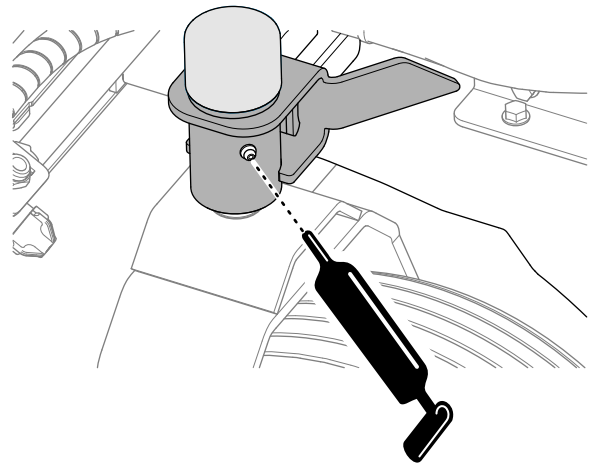

g312856


**Figure 65**

3. Connect a grease gun to the fittings ([Figure 65](#)).
4. Pump grease into the fittings until grease begins to come out of the bearings.
5. Wipe up any excess grease.
6. Repeat steps 1 through 5 at the other caster pivot.

# Lubricating the Caster-Axle Bearings

**Service Interval:** Yearly

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Connect a grease gun to the fitting in the hub of the caster wheel ([Figure 66](#)).

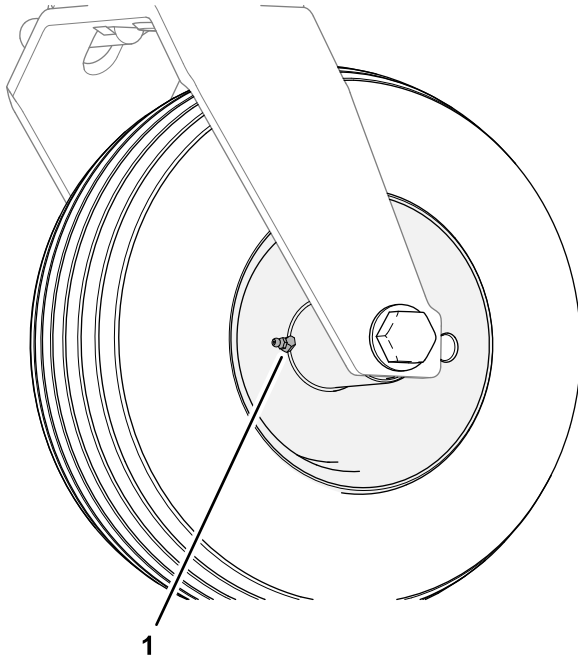

**Figure 66**

g314064


1. Grease fitting (caster-wheel hub)

- 
3. Pump grease into the fittings until grease begins to come out of the bearings.
  4. Wipe up any excess grease.
  5. Repeat steps [2](#) through [4](#) at the other caster wheel.

# Greasing the Belt Tensioner

**Service Interval:** Every 100 hours

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. At the bottom of the machine, wipe the grease fittings at belt tensioner pivot clean with a rag ([Figure 67](#)).

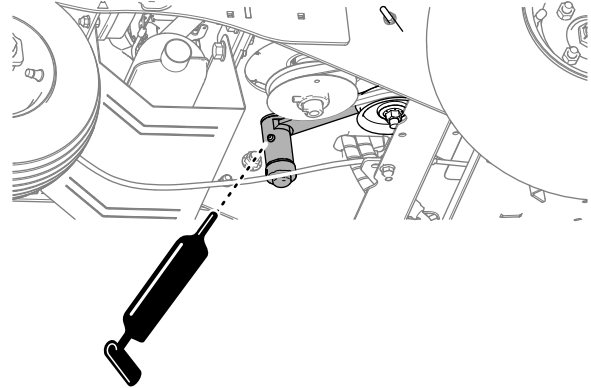

**Figure 67**

g312854

- 
3. Connect a grease gun to the fittings ([Figure 67](#)).
  4. Pump grease into the fittings until grease begins to come out of the bushings.
  5. Wipe up any excess grease.

# Engine Maintenance

## Servicing the Air Cleaner

**Service Interval:** Every 25 hours—Check the foam pre-cleaner; replace if dirty (more often under severe conditions).

Every 100 hours or yearly, whichever comes first—Clean or change the air filter.

Every 400 hours—Replace the air filter.

**Important:** Do not operate the engine without the air filter assembly; extreme engine damage may occur.

## Cleaning the Foam Filter Element

1. Open the spray tanks to access the engine; refer to [Opening the Tanks \(page 50\)](#).
2. Remove the foam pre-cleaner from the paper element. (Figure 68).
3. Wash the pre-cleaner with warm water and a mild detergent.
4. Rinse the pre-cleaner and allow it to air dry.
5. Lightly oil pre-cleaner with new engine oil; squeeze out excess oil.
6. Close the spray tanks; refer to [Closing the Tanks \(page 51\)](#).

## Replacing the Air-Cleaner Assembly

1. Open the spray tanks to access the engine; refer to [Opening the Tanks \(page 50\)](#).
2. Unhook the clips on the air-cleaner cover and remove the cover (Figure 68).
3. Remove the knob and plate (Figure 68).
4. Carefully remove the air-cleaner assembly to prevent debris from entering the carburetor.
5. Install the new foam pre-cleaner on to the new cartridge (Figure 68).
6. Install the air-cleaner assembly, plate, and knob in the body (Figure 68).
7. Install the cover and secure it using the clips (Figure 68).

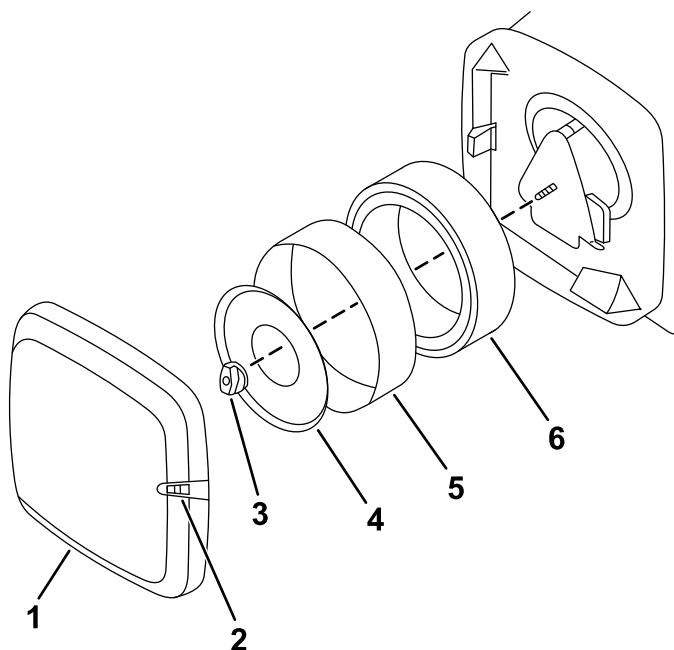


Figure 68

- |          |                     |
|----------|---------------------|
| 1. Cover | 4. Plate            |
| 2. Clip  | 5. Cartridge        |
| 3. Knob  | 6. Foam pre-cleaner |

8. Close the spray tanks; refer to [Closing the Tanks \(page 51\)](#).

## Engine Oil Specification

**Oil Type:** Toro 4-Cycle Premium Engine Oil or a high-quality detergent oil (including synthetic) API service SJ or higher

**Oil viscosity:** Refer to the table below.

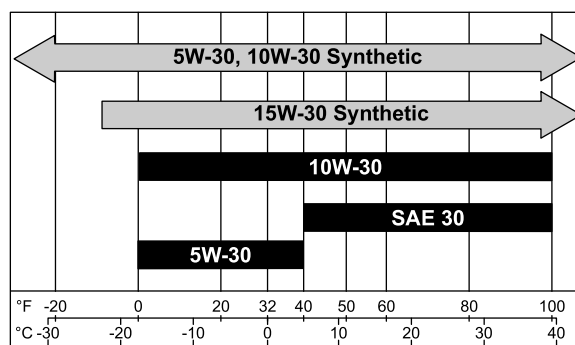



Figure 69

# Checking the Engine-Oil Level

**Service Interval:** Before each use or daily

**Important:** Do not operate the engine with the oil level below the Low (or Add) mark on the dipstick, or over the Full mark.

1. Move the machine to a level surface.
2. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
3. Rotate open the right spray tank and allow the engine to cool; [Opening the Tanks \(page 50\)](#).
4. Remove the dipstick from the engine and wipe the dipstick with a clean rag ([Figure 70](#)).

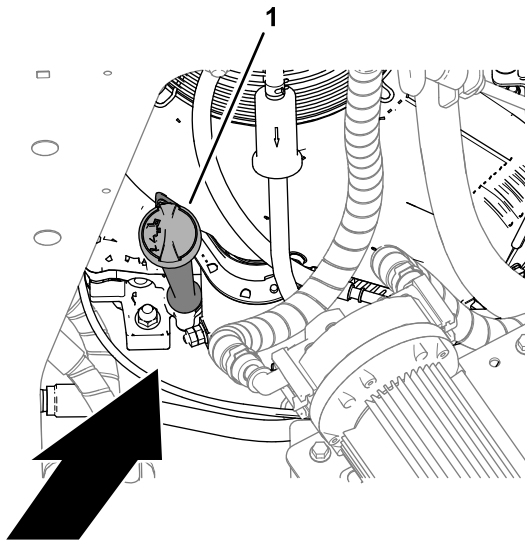


**Figure 70**

g312874

1. Dipstick and filler neck

5. Insert the dipstick into the engine, and tighten the dipstick ([Figure 71](#)).

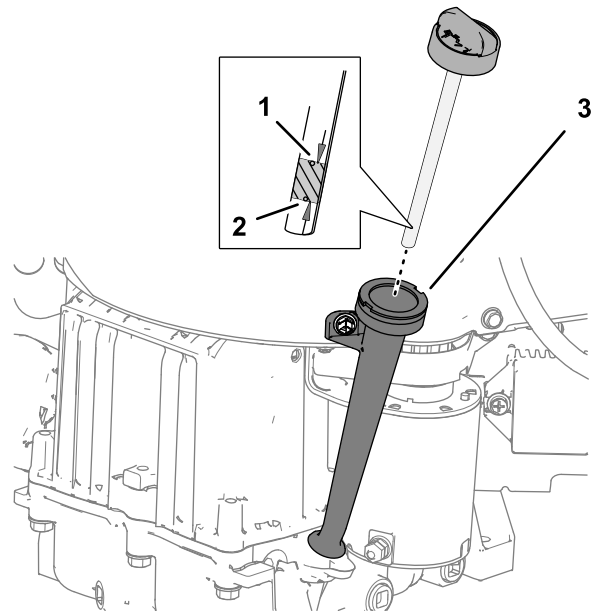

g312872

**Figure 71**


1. Maximum oil level (dipstick)
2. Minimum oil level (dipstick)
3. Filler neck

6. Remove the dipstick from the filler neck, and check oil level on the dipstick ([Figure 71](#)).

**Note:** The engine oil level must cover the hatch-marked area of the dipstick ([Figure 71](#)).

7. If the oil level is low, wipe off the area around the filler neck and add the specified oil ([Figure 72](#)) until the oil level is between the hatch marked areas on the dipstick.

**Important:** Do not overfill the engine with oil.

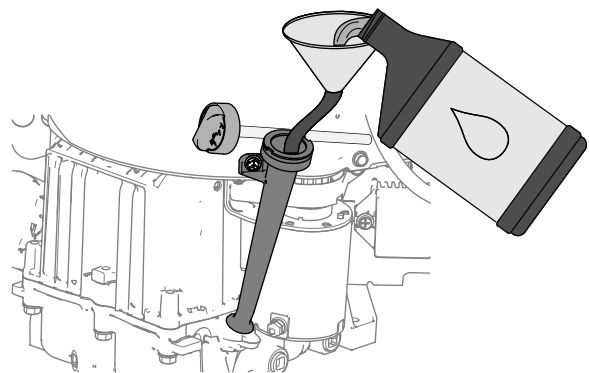

g312937

**Figure 72**

8. Hand tighten the dipstick into the filler neck ([Figure 70](#)).
9. Close and secure the right spray tank; refer to [Closing the Tanks \(page 51\)](#).



# Changing the Oil Filter and Engine Oil


**Service Interval:** After the first 5 hours

Every 100 hours (more often under severe condition).

## Draining the Engine Oil

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Rotate open the right spray tank and allow the engine to cool; refer to [Opening the Tanks \(page 50\)](#).
3. Align the oil-drain hose out the right side of the machine, and remove the plug from the hose ([Figure 73](#)).

**Note:** Allow the engine oil to drain completely.

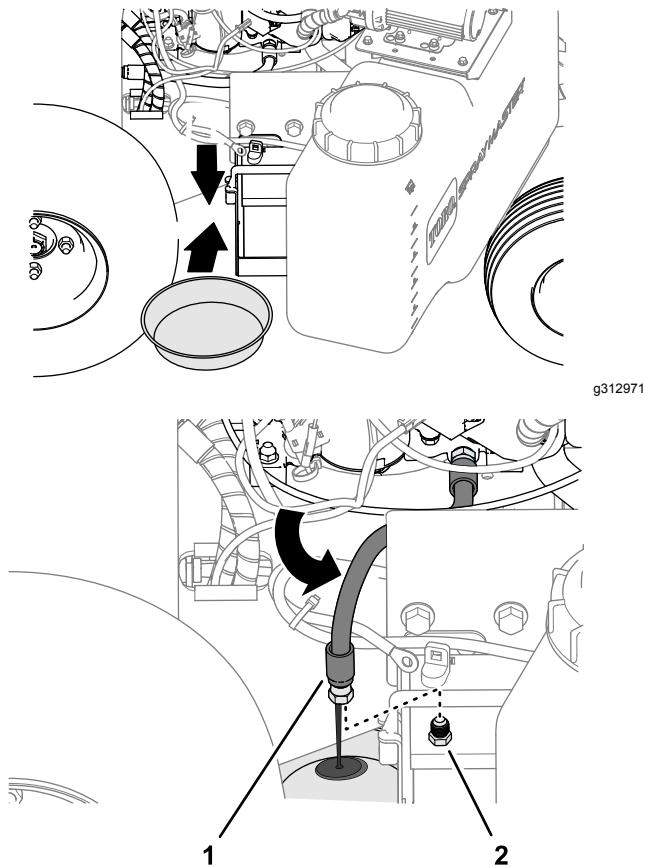


**Figure 73**

1. Drain hose
2. Plug

4. Install the drain plug into the hose, and tighten the plug ([Figure 73](#)).

**Note:** Wipe clean any residual oil.

5. Stow the drain hose as shown in [Figure 74](#).

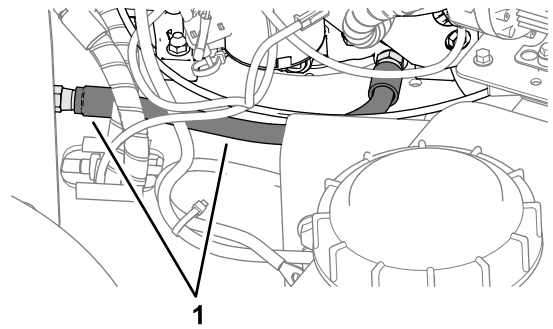


**Figure 74**

1. Drain hose (stowed position)

## Changing the Oil Filter

1. Rotate open the left spray tank; refer to [Opening the Tanks \(page 50\)](#).
2. Apply a light coat of clean engine oil to the gasket of the new oil filter.
3. Remove the oil filter from the engine ([Figure 75](#)).

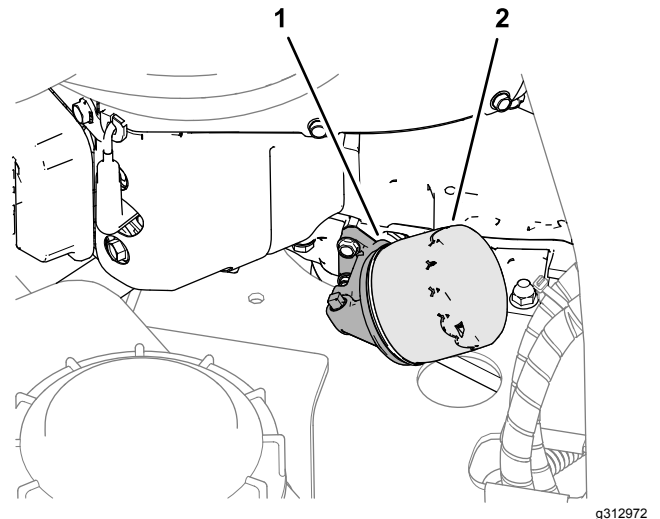

**Figure 75**

1. Filter adapter
2. Oil filter


4. Thread the new oil filter onto the filter adapter of the engine ([Figure 75](#)) until the gasket contacts the adapter, then tighten the filter an additional 1/2 to 3/4 turn.

## Adding Engine Oil to the Engine

**Approximate engine oil capacity:** 1.6 L (56 fl oz)

**Important:** Do not operate the engine with the oil level below the Low (or Add) mark on the dipstick, or over the Full mark.

1. Remove the dipstick from the filler neck of the engine and wipe the dipstick and filler neck with a clean rag ([Figure 76](#)).

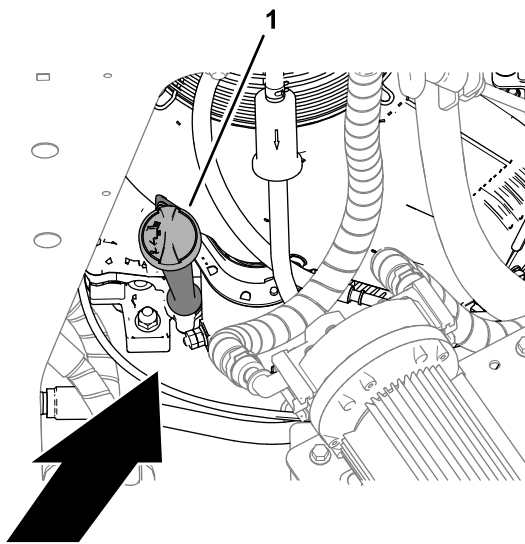


**Figure 76**

g312874

1. Dipstick and filler neck

2. Slowly pour 1.6 L (56 fl oz) of the specified oil into the filler neck ([Figure 77](#)) of the engine; refer to [Engine Oil Specification \(page 53\)](#).

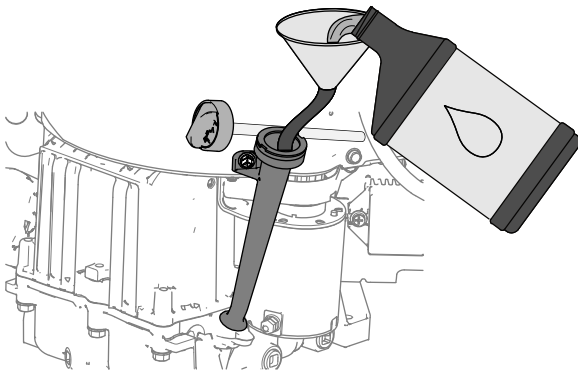


**Figure 77**

g312937

3. Insert the dipstick into the filler neck and tighten the dipstick [Figure 76](#).
4. Remove the dipstick from the filler neck and look at the oil level in the dipstick ([Figure 76](#)).

**Note:** The engine oil level must cover the hatch-marked area of the dipstick ([Figure 78](#)).

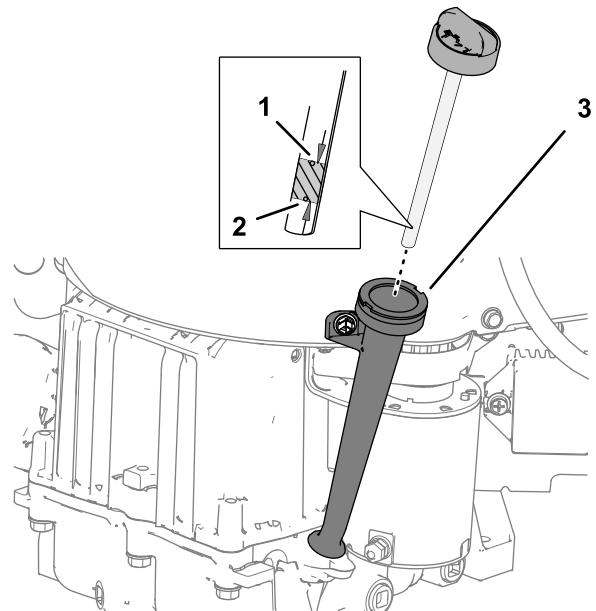

**Figure 78**

g312872

1. Maximum oil level (dipstick)
2. Minimum oil level (dipstick)
3. Filler neck

5. If the oil level is low, add the specified oil into the engine until the oil level is between the hatch marked areas on the dipstick ([Figure 78](#)).

**Important:** Do not overfill the engine with oil.

6. Insert the dipstick into the filler neck and hand tighten the dipstick ([Figure 78](#)).
7. Close and secure the left and right spray tanks; refer to [Closing the Tanks \(page 51\)](#).



# Servicing the Spark Plug


Service Interval: Every 100 hours

## Spark Plug Specification


Spark plug type: Champion® RJ12

## Removing the Spark Plug

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Rotate open the left and right spray tanks; refer to [Opening the Tanks \(page 50\)](#).
3. Remove the spark plug as shown in [Figure 79](#).

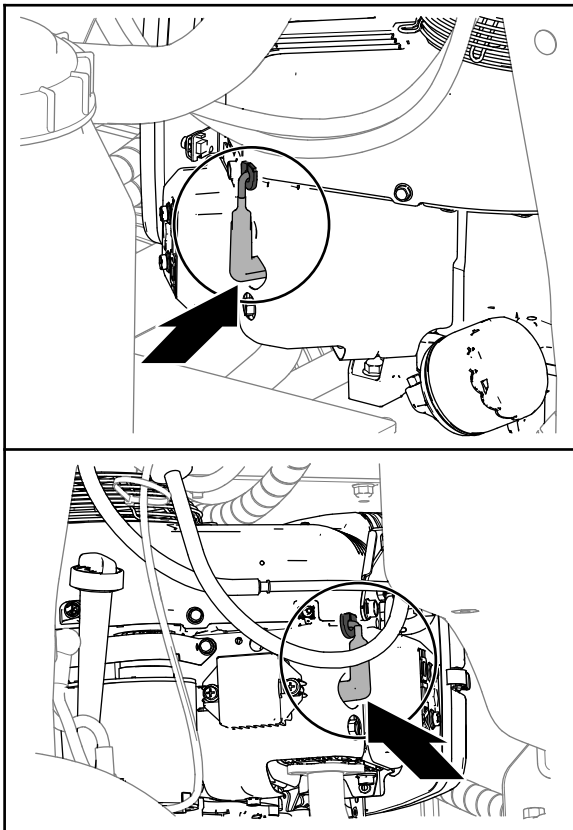

g312978

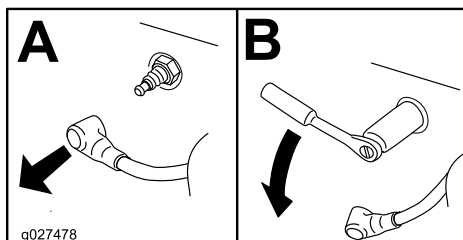

g027478

Figure 79


## Checking the Spark Plug

Spark-plug gap: 0.76 mm (0.030 inch)

**Important:** Do not clean the spark plug(s). Always replace the spark plug(s) when it has a black coating, worn electrodes, an oily film, or cracks.

If you see light brown or gray on the insulator, the engine is operating properly. A black coating on the insulator usually means the air cleaner is dirty.

Use a gapping tool/feeler gauge to check and adjust the air gap to 0.76 mm (0.030 inch).

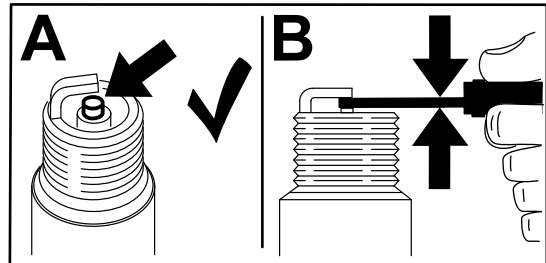


g206628

Figure 80

## Installing the Spark Plug

1. Tighten the spark plug as follows:
  - New spark plug—12 to 15 N·m (8.7 to 10.8 ft-lb)
  - In-service spark plug—23 to 27 N·m (16.6 to 19.5 ft-lb)

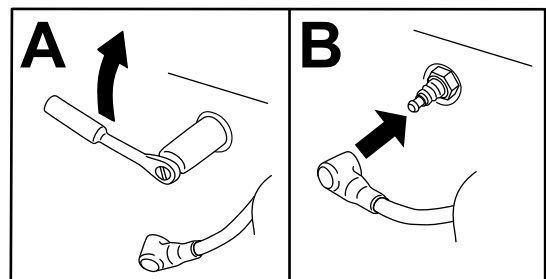

g313515

Figure 81



2. Close and secure the left and right spray tanks; refer to [Closing the Tanks \(page 51\)](#).

# Fuel System Maintenance

## Replacing the Fuel Filter

**Service Interval:** Every 400 hours

1. Rotate open the right spray tank; refer to [Opening the Tanks \(page 50\)](#).
2. Squeeze the tabs on the clamps and slide the clamps away from the fuel filter ([Figure 82](#)).

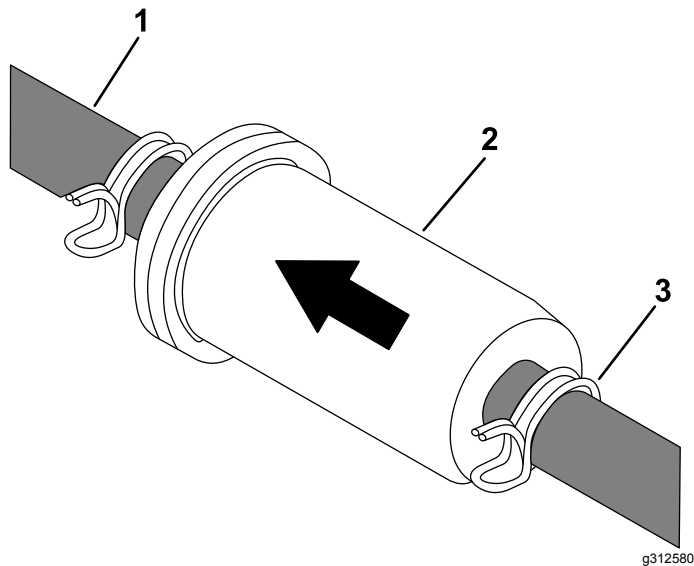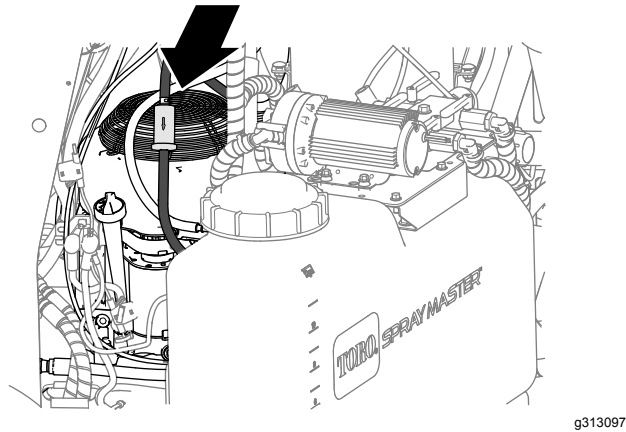

**Figure 82**

- |                |          |
|----------------|----------|
| 1. Fuel line   | 3. Clamp |
| 2. Fuel filter |          |

3. Twist and pull the fuel hoses from the fuel filter ([Figure 82](#)).

Check the fuel hoses for wear, damage, leaks; replace the hoses if necessary.

4. Assemble the fuel filter to the ends of the hoses ([Figure 82](#)).

**Important:** Align the fuel filter with the arrow pointing toward the engine fuel pump.

5. Secure the fuel hoses to the filter with the clamps ([Figure 82](#)).
6. Close and secure the right spray tank; refer to [Closing the Tanks \(page 51\)](#).

# Electrical System Maintenance

## Servicing the Battery

Service Interval: Monthly

Always keep the battery clean and fully charged. Use a paper towel to clean the battery case. If the battery terminals are corroded, clean them with a solution of 4 parts water and 1 part baking soda. Apply a light coating of grease to the battery terminals to prevent corrosion.

Voltage: 12 V

### ⚠ DANGER

Charging or jump starting the battery may produce explosive gases. Battery gases can explode causing serious injury.

- Keep sparks, flames, or cigarettes away from battery.
- Ventilate when charging or using battery in an enclosed space.
- Ensure that the venting path of battery is always open once the battery is filled with acid.
- Do not lean over the batteries.
- Always shield eyes and face from battery.

### ⚠ DANGER

Battery electrolyte contains sulfuric acid, which is poisonous and can cause severe burns. Swallowing electrolyte can be fatal or if it touches skin can cause severe burns.

- Wear eye protection to shield your eyes and rubber gloves to protect your skin and clothing when handling electrolyte.
- Do not swallow electrolyte.
- In the event of an accident, flush with water and call a doctor immediately.

## Checking the Battery Charge

### ⚠ CAUTION

If the ignition is in the ON position, there is potential for sparks and for engine components to move. Sparks could cause an explosion or moving parts could accidentally engage, causing personal injury.

**Ensure that the ignition switch is in the OFF position before charging the battery.**

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Carefully slip back the insulator cover of the positive battery cable ([Figure 86](#)).

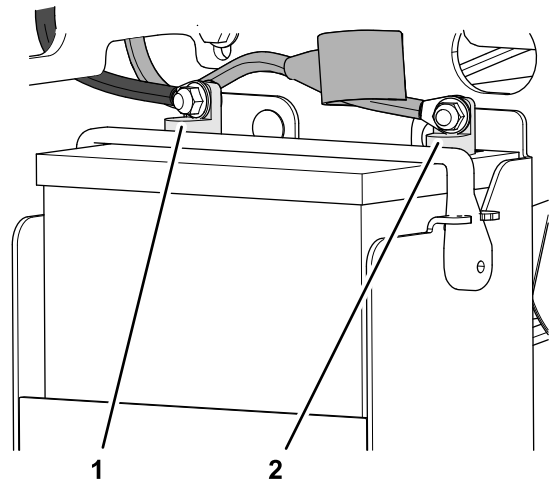


Figure 83

1. Negative battery terminal
2. Positive battery terminal

3. Measure the voltage of the battery with a voltmeter.
4. Use the table below to locate the charge state or the battery, and if needed, the battery-charger setting and charging interval recommended to charge the battery to 12.6 V or greater; refer to the battery charge table below.

**Important:** Ensure that the negative battery cable is disconnected, and the battery charger used for charging the battery has an output of 16 V and 7 A or less to avoid damaging the battery (see chart for recommended charger settings).

## Battery Charge Table

Voltage Reading	Percent Charge	Maximum Charger Settings	Charging Interval
12.6 or greater	100%	16 V/ 7 A	No Charging Required
12.4 to 12.6	75 to 100%	16 V/ 7 A	30 Minutes
12.2 to 12.4	50 to 75%	16 V/ 7 A	1 Hour
12.0 to 12.2	25 to 50%	14.4 V/ 4 A	2 Hours
11.7 to 12.0	0 to 25%	14.4 V/ 4 A	3 Hours
11.7 or less	0%	14.4 V/ 2 A	6 Hours or More

- If the positive cable is also disconnected, connect the **positive (red) cable** to the positive battery terminal and slip terminal cover over the positive terminal ([Figure 83](#)).
  - Remove the screw, washer, and ground cable from the engine. Secure the battery cable to the battery terminal with the bolt, washer, and nut and torque the nut and bolt to 1978 to 2542 N·cm (175 to 225 in-lb).
- Note:** If time does not permit charging the battery or if charging equipment is not available, connect the negative battery cables and run the vehicle continuously for 20 to 30 minutes to charge the battery.
- Carefully slip back the insulator cover of the positive battery cable over the battery terminal ([Figure 83](#)).

## Charging the Battery

### ⚠ WARNING


Charging the battery produces gasses that can explode.

Never smoke near the battery and keep sparks and flames away from battery.

**Important:** Always keep the battery fully charged (1.265 specific gravity) to prevent battery damage when the temperature is below 32°F (0°C).

- Remove the battery from the chassis; refer to [Removing the Battery \(page 61\)](#).
- Check the electrolyte level.
- Ensure that the filler caps are installed on the battery.
- Charge the battery for 1 hour at 25 to 30 A or 6 hours at 4 to 6 A.
- When the battery is fully charged, unplug the charger from the electrical outlet, and disconnect the charger leads from the battery posts ([Figure 84](#)).
- Install the battery onto the machine and connect the battery cables; refer to [Installing the Battery \(page 61\)](#).

**Note:** Do not run the machine with the battery disconnected; electrical damage may occur.

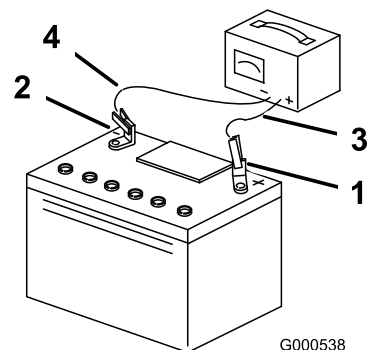

**Figure 84**

- |                          |                           |
|--------------------------|---------------------------|
| 1. Positive battery post | 3. Red (+) charger lead   |
| 2. Negative battery post | 4. Black (-) charger lead |

# Removing and Installing the Battery

## Removing the Battery

### ⚠ WARNING


Battery terminals or metal tools could short against metal machine components, causing sparks. Sparks can cause the battery gasses to explode, resulting in personal injury.

- When removing or installing the battery, do not allow the battery terminals to touch any metal parts of the machine.
- Do not allow metal tools to short between the battery terminals and metal parts of the machine.

### ⚠ WARNING

Incorrect battery-cable routing could damage the machine and cables causing sparks. Sparks can cause the battery gasses to explode, resulting in personal injury.

- Always disconnect the negative battery cable (black) before disconnecting the positive (red) cable.
  - Always connect the positive battery cable (red) before connecting the negative (black) cable.
1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
  2. Remove the flange locknut and carriage bolt that secure the negative battery cable to the battery, and remove the cable from the battery ([Figure 85](#)).

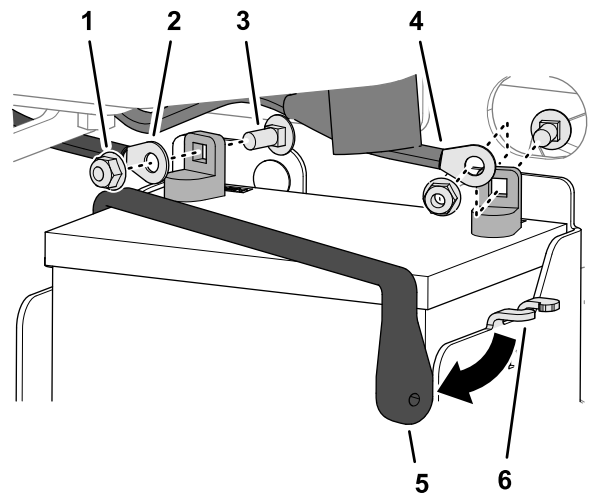

g313031

Figure 85

- |                           |                               |
|---------------------------|-------------------------------|
| 1. Flange locknut         | 4. Positive battery cable     |
| 2. Negative battery cable | 5. Battery strap              |
| 3. Carriage bolt          | 6. Strap flange (battery box) |
3. Slip back the insulator cover of the positive battery cable ([Figure 85](#)).
  4. Remove the flange locknut and carriage bolt that secure the positive battery cable to the battery, and remove the cable from the battery ([Figure 85](#)).
  5. Remove the battery strap from the flange of the battery box ([Figure 85](#)).
  6. Remove the battery from the battery box of the machine.

## Installing the Battery

1. Place the battery into the battery box.
2. Secure the battery to the battery box with the battery strap ([Figure 85](#)).
3. Assemble the positive battery cable to the positive terminal of the battery with the carriage bolt and flange locknut ([Figure 85](#)).
4. Slip back the insulator cover of the positive battery cable over the battery terminal.
5. Assemble the negative battery cable to the positive terminal of the battery with the carriage bolt and flange locknut ([Figure 85](#)).

# Jump-Starting the Machine

## ⚠ DANGER

Jump-starting a battery that is cracked, frozen, has low electrolyte level, or an open/shorted battery cell can cause an explosion, resulting in serious personal injury.

Do not jump-start a battery if these conditions exist; replace the battery.

## ⚠ CAUTION

Corrosion or loose connections can cause unwanted electrical voltage spikes at any time during the jump-starting procedure.

Do not attempt to jump start a machine with loose or corroded battery terminals, or damage to the engine can occur.

## ⚠ CAUTION

Connecting the jumper cables incorrectly can immediately damage the electrical system.

Be certain of the battery-terminal polarity and the jumper-cable polarity when connecting to the battery.

**Important:** Be sure that the vehicles do not touch and that both electrical systems are off and at the same rated system voltage. These instructions are for negative-ground systems only.

**Important:** Use the properly sized jumper cables (4 to 6 AWG) with short lengths to reduce the voltage drop between systems. Ensure that the cables are color coded or labeled for the correct polarity.

1. Check the battery terminals of the discharged battery and the booster battery for corrosion (white, green, or blue “snow”).

**Note:** Clean the corrosion from the battery terminals prior to jump starting. Tighten the battery cable connections as necessary.

2. Ensure that the booster is a 12 V battery with a sufficient amp rating that is in good condition and fully charged.

**Note:** Ensure that the vent caps are tight and level. If available, place a damp cloth over any vent caps on both batteries.

3. Connect the positive (+) cable clamp (red) to the positive (+) terminal of the discharged battery (Figure 86).

**Note:** The positive battery cable is wired to the starter or solenoid.

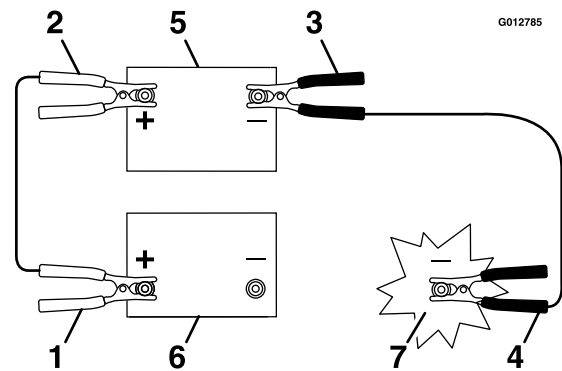


Figure 86

1. Positive (+) cable on the discharged battery
2. Positive (+) cable on booster battery
3. Negative (-) cable on the booster battery
4. Negative (-) cable on the engine block
5. Booster battery
6. Discharged battery
7. Engine block

4. Connect the other positive (+) cable clamp (red) to the positive terminal of the booster battery.
5. Connect the negative (-) cable clamp (black) to the negative terminal of the booster battery.
6. Connect the other negative (-) cable clamp (black) to the engine block of the stalled machine and away from the discharged battery.

**Important:** Do not connect the negative (-) cable clamp (black) to the negative battery post of the discharged battery.

7. Stand away from the discharged battery of the machine.
8. Start the machine and remove the cables in the reverse order of connection, disconnect the engine block connection first.

# Servicing the Fuses

The electrical system is protected by fuses. If a fuse opens, check the component or circuit for a load or short.

Circuit protected	Fuse size	Location
Main power	10 A	Between the ignition switch and start solenoid.
Sprayer	30 A	Between the start solenoid and spray-pump relay.
Display	1 A	Between the ignition switch and sprayer and information display.

6. Close the cover onto the fuse holder until the cover latches securely ([Figure 87](#)).
7. Close and secure the right spray tank; refer to [Closing the Tanks \(page 51\)](#).
8. Install the negative battery cable to the battery terminal, and install the battery cover; refer to steps 5 of [Installing the Battery \(page 61\)](#).

1. Remove the negative battery cable from the battery; refer to step 4 of [Removing the Battery \(page 61\)](#).  
**Note:** Ensure that the negative battery cable does not touch the battery terminal.
2. Rotate open the right spray tank; refer to [Opening the Tanks \(page 50\)](#).
3. Open the cover of the fuse holder ([Figure 87](#)).

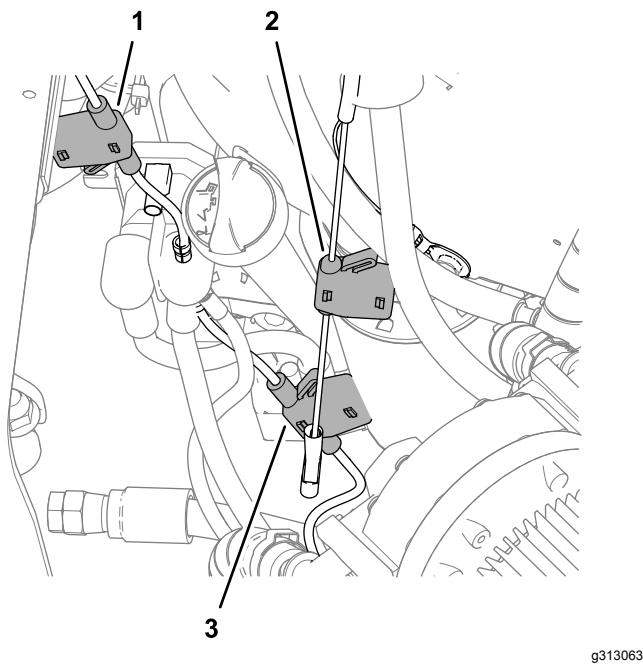


Figure 87

1. Fuse holder—10 A fuse (main power)

3. Fuse holder—30 A fuse (spray pump)
2. Fuse holder—1 A fuse (display)
- 
4. Pull the fuse from the socket of the fuse holder ([Figure 87](#)).
  5. Install a fuse of the same type into the socket of the fuse holder ([Figure 87](#)).



# Drive System Maintenance


## Checking the Tire Pressure

**Service Interval:** Every 50 hours

**Tire air pressure specification:** 110 to 138 kPa (16 to 20 psi)

**Important:** Do not exceed the maximum air pressure indicated on the sidewall of the tire.

**Note:** Do not add any type of tire liner or foam fill material to the tires.

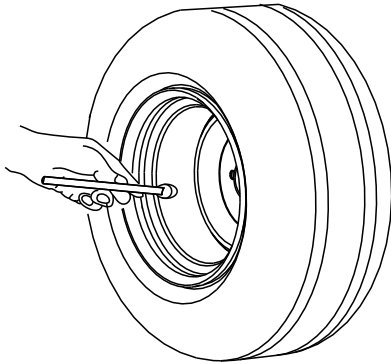


G001055

**Figure 88**

g001055

## Checking the Wheel-Lug Nuts

Check and torque the wheel-lug nuts ([Figure 89](#)) to 129 N·m (95 ft-lb), if needed.

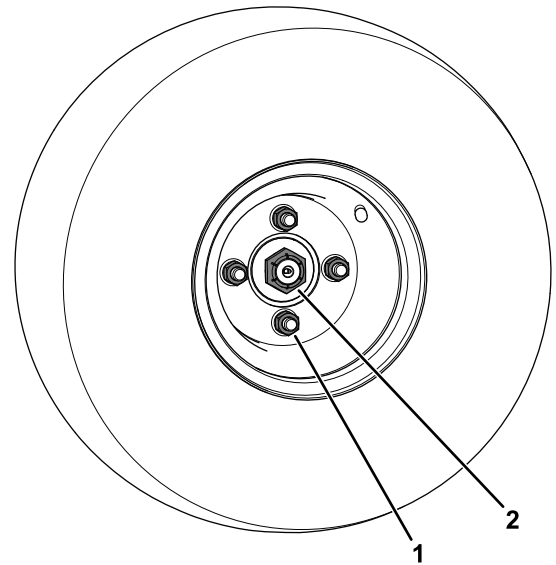

g311487

**Figure 89**

1. Wheel-lug nut

2. Wheel-hub nut

## Checking the Wheel-Hub Nut

**Service Interval:** After the first 100 hours

Every 500 hours

Check and torque the wheel-hub nut ([Figure 89](#)) to 319 N·m (235 ft-lb), if needed.



# Brake Maintenance

## Adjusting the Parking Brake

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Check the air pressure in the drive tires; refer to [Checking the Tire Pressure \(page 64\)](#).
3. Disengage the parking brake.
4. Loosen the 2 jam nuts on the brake linkage at the rear of the machine ([Figure 90](#)).
5. To increase the brake force, turn the linkage counterclockwise 1 to 2 turns ([Figure 90](#)).
6. Engage the parking brake and check if you need to further adjust the parking brake; repeat step 5, if needed.
7. Tighten the 2 jam nuts ([Figure 90](#)).

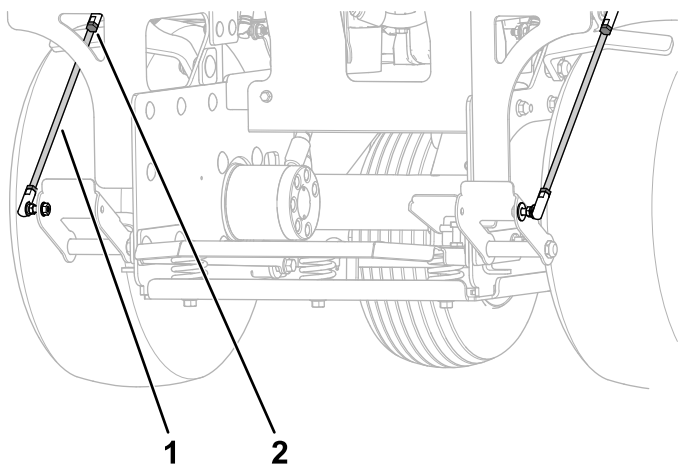


Figure 90

1. Brake linkage
2. Jam nut

8. Check the parking brake; repeat steps 4 to 7, if needed.
9. Repeat this procedure on the other side of the machine.

# Belt Maintenance

## Checking the Belt for Wear

**Service Interval:** Every 40 hours

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Raise the machine and support it with jack stands.
3. Check the belt for wear or damage.  
**Note:** If the belt is worn or damaged, replace the belt; refer to [Replacing the Belt \(page 65\)](#)
4. Lower the machine and remove the jack stands.

## Replacing the Belt

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Raise the machine and support it with jack stands.
3. While holding the eye bolt in place, loosen the locknut on the eye bolt to remove tension from the spring ([Figure 91](#)).

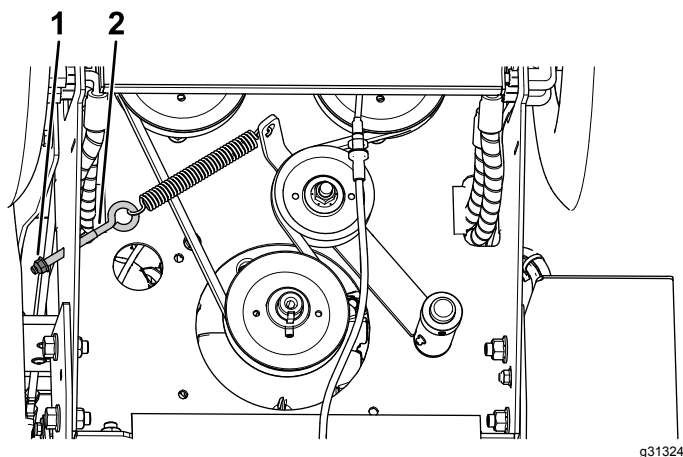



Figure 91

1. Locknut
2. Eye bolt

4. Pull the tension arm away from the belt and remove the existing belt from the pulleys ([Figure 92](#)).

# Adjusting the Belt Tension


1. Ensure that the tension arm and pulley move freely.
2. While holding the eye bolt from rotating, tighten the locknut until the thread length after the adjustment is 32 mm (1-1/4 inches) as shown in [Figure 94](#).

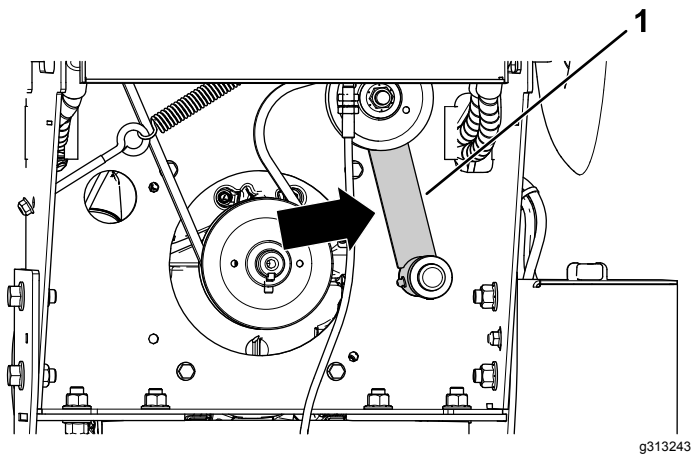

**Figure 92**

1. Tension arm


5. With the tension arm pulled away from the pulley system, route the new belt, starting at the 2 hydraulic-motor pulleys, then around the engine pulley and tensioner pulley ([Figure 93](#)).

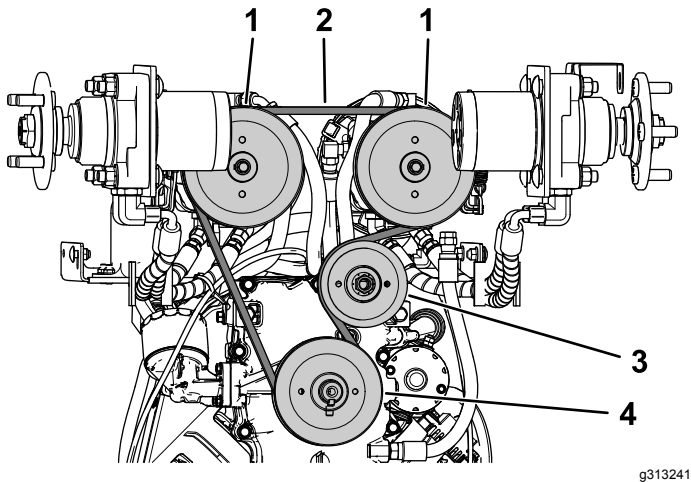

**Figure 93**

- |                            |                     |
|----------------------------|---------------------|
| 1. Hydraulic-motor pulleys | 3. Tensioner pulley |
| 2. Belt                    | 4. Engine pulley    |

6. Tension the belt; refer to [Adjusting the Belt Tension](#) (page 66).
7. Lower the machine from the jack stands.

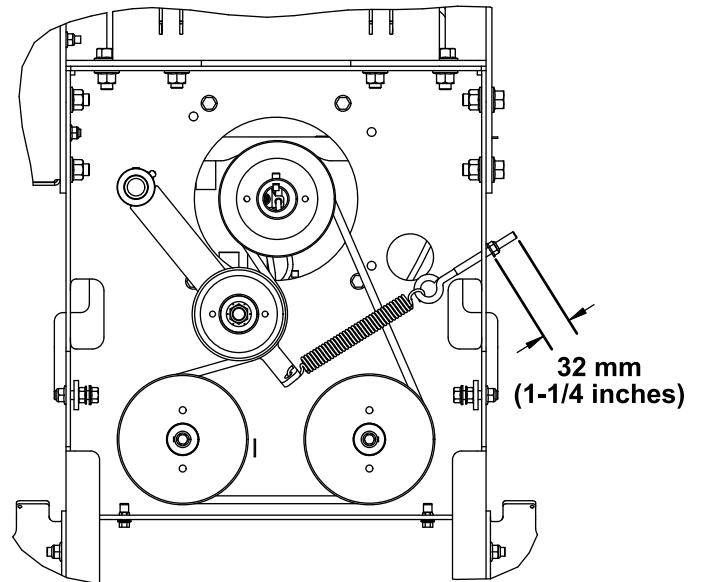


**Figure 94**

# Controls System Maintenance

## Adjusting the Maximum Forward Speed

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Loosen the 2 knobs that secure the speed bar ([Figure 95](#)).

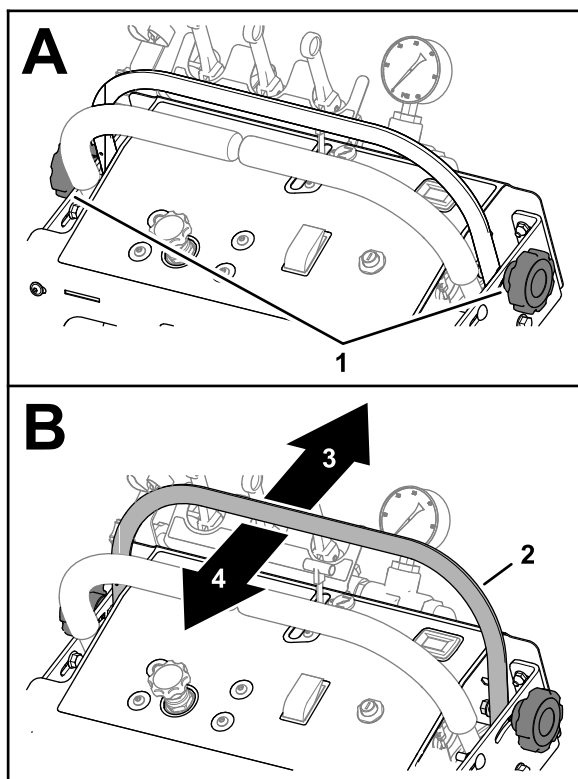


**Figure 95**

g317508

1. Knobs
  2. Speed bar
  3. Increase the maximum forward speed
  4. Decrease the maximum forward speed
3. Adjust the position of the speed bar as follows:
    - Move the speed bar forward to increase the maximum forward speed of the machine.
    - Move the speed bar rearward to decrease the maximum forward speed of the machine.
  4. Tighten the 2 knobs that secure the speed bar ([Figure 95](#)).

## Adjusting the Motion-Control Linkage

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Loosen the 2 knobs that secure the speed bar, and push the speed bar forward ([Figure 96](#)).

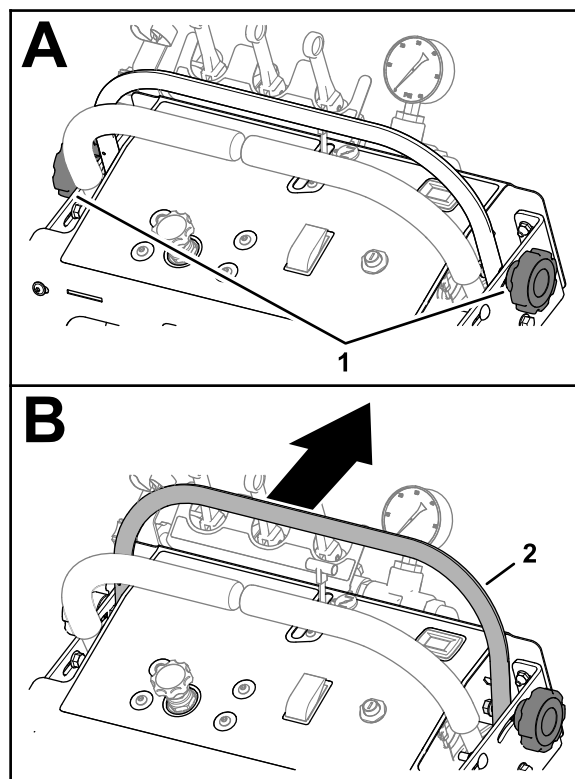


g317510

**Figure 96**

1. Knobs
2. Speed bar

3. Push the motion-control lever forward, and measure the distance between the speed bar and motion control lever ([Figure 97](#)).


**Note:** The motion-control linkage is correctly adjusted when the gap between the lever and bar is 79 to 87 mm (3-1/8 to 3-7/16 inches).

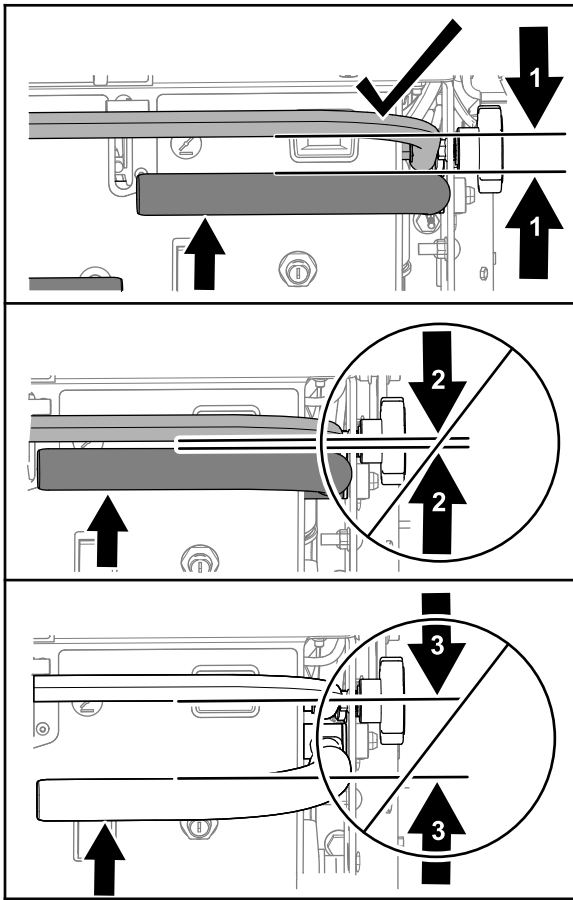

**Figure 97**

g317904

1. 79 to 87 mm (3-1/8 to 3-7/16 inches)
2. Less than 79 mm (3-1/8 inches)
3. More than 87 mm (3-7/16 inches)
4. If the gap is larger than or smaller than 79 to 87 mm (3-1/8 to 3-7/16 inches), remove the knee pad; refer to [Removing the Knee Pad \(page 49\)](#).
5. Loosen the 2 jam nuts that secure the motion-control rod at the upper and lower ball joints ([Figure 98](#)).

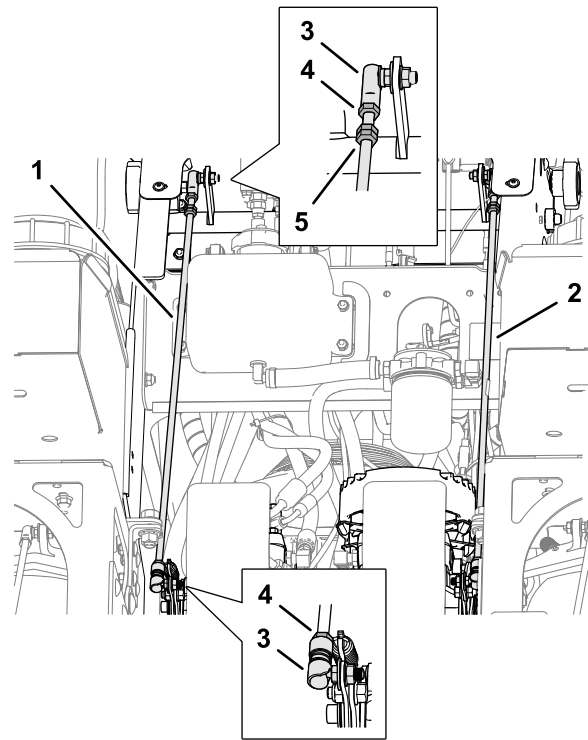

**Figure 98**

g313362

1. Left motion-control rod
2. Right motion-control rod
3. Ball joint
4. Jam nut
5. Jam nut (rod adjustment)
6. Adjust the motion-control rod as follows:
  - To increase the gap between the speed bar and motion control lever, rotate the motion-control rod counterclockwise.
  - To decrease the gap between the speed bar and motion control lever, rotate the motion-control rod clockwise.
7. Tighten the jam nuts ([Figure 98](#)).
8. Repeat steps [3](#) through [7](#) for the other motion control lever.
9. Install the knee pad; refer to [Installing the Knee Pad \(page 50\)](#).

# Adjusting the Motion Control Tracking

If the machine travels or pulls to one side when the motion-control levers are in the full forward position, adjust the tracking.

1. While driving the machine across a flat field, push both control levers forward the same distance.
2. Check if the machine pulls to one side, stop the machine, shut off the engine, and engage the parking brake.
3. Loosen the 2 jam nuts that secure the motion-control rod at the upper and lower ball joints ([Figure 99](#)).

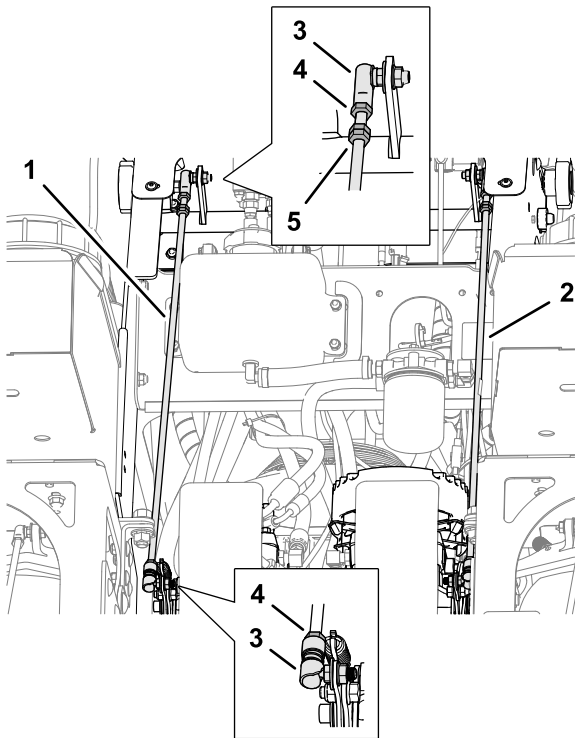


Figure 99

g313362

- |                             |                             |
|-----------------------------|-----------------------------|
| 1. Left motion-control rod  | 4. Jam nut                  |
| 2. Right motion-control rod | 5. Jam nut (rod adjustment) |
| 3. Ball joint               |                             |

4. Adjust the motion-control rod as follows:
  - To increase the speed for the drive, rotate the motion-control rod counterclockwise in 1/4 turn.
  - To decrease the speed for the drive, rotate the motion-control rod clockwise in 1/4 turn.
5. Tighten the jam nuts ([Figure 99](#)).
6. Repeat steps 1 through 5 until the machine tracks straight when the motion-control levers are in the full forward position.

# Hydraulic System Maintenance

## Hydraulic Fluid Specification

**Preferred fluid:** Toro Hypr-Oil 500

**Optional fluid:** 15W-50 API rating CI-4/CF hydraulic fluid

## Checking the Hydraulic Fluid Level

**Service Interval:** Before each use or daily

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Remove the knee pad; refer to [Removing the Knee Pad \(page 49\)](#).
3. Check the hydraulic fluid level in the tank ([Figure 100](#)).

**Important:** When the hydraulic fluid level is correct, it is between the full and add marks on the fluid-level decal.


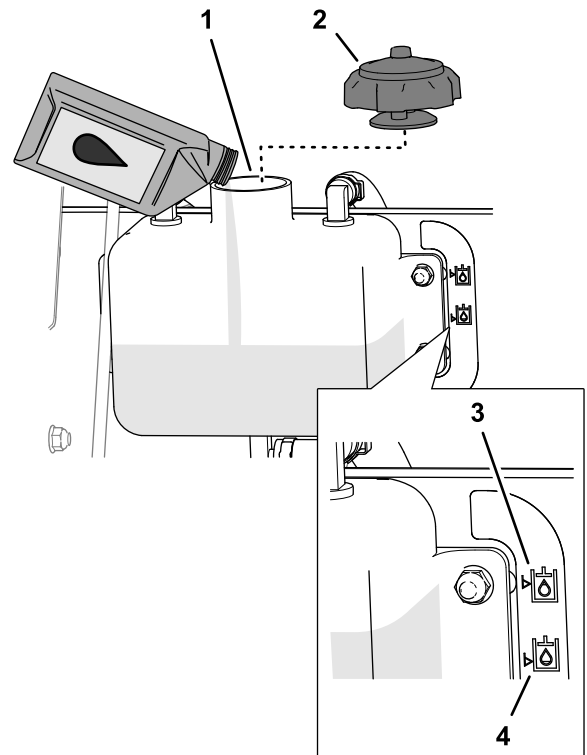


Figure 100

g313188

- |                   |                                  |
|-------------------|----------------------------------|
| 1. Hydraulic tank | 3. Full mark (fluid-level decal) |
| 2. Cap            | 4. Add mark (fluid-level decal)  |

4. If the hydraulic fluid level is low, perform the following:
  - A. Remove the cap ([Figure 100](#)).
  - B. Add the specified hydraulic fluid until it is level with the full mark on the fluid-level decal ([Figure 100](#)); refer to [Hydraulic Fluid Specification](#) (page 69).
  - C. Install the cap ([Figure 100](#)).
5. Install the knee pad; refer to [Installing the Knee Pad](#) (page 50).

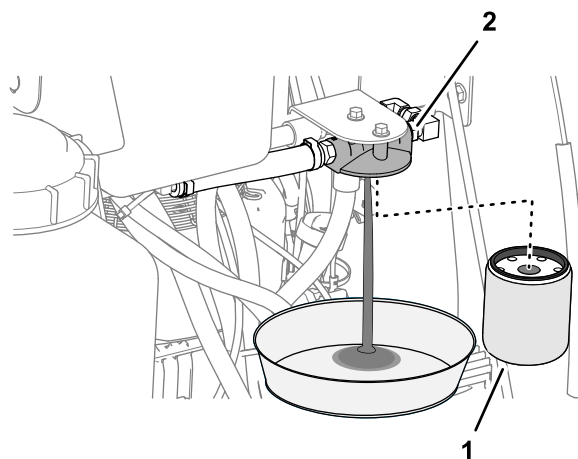

**Figure 102**

g313257

1. Hydraulic filter
2. Filter head


## Changing the Hydraulic Fluid and Filter

**Service Interval:** After the first 100 hours

Every 500 hours/Yearly (whichever comes first)

**Hydraulic fluid quantity:** 2.4 L (2.5 US qt)

1. Prepare the machine for maintenance; refer to [Preparing the Machine](#) (page 49).
2. Remove the knee pad; refer to [Removing the Knee Pad](#) (page 49).
3. Clean area around hydraulic filter and filter head ([Figure 101](#)).

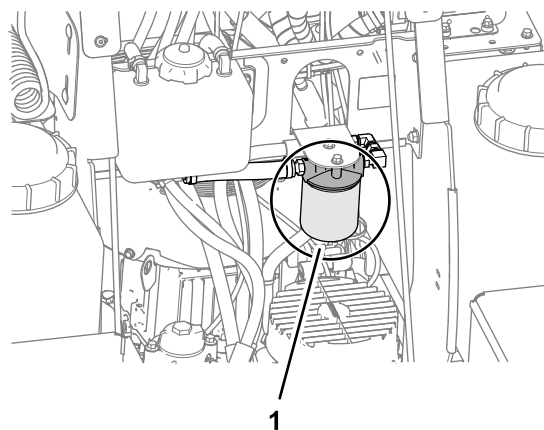

**Figure 101**

g313259

1. Hydraulic filter and filter head

4. Align a drain pan with a 3 L (3 US qt) or greater, under the filter ([Figure 102](#)).


5. Remove the filter, and allow the hydraulic fluid to drain ([Figure 102](#)).
6. Apply a thin coat of the specified hydraulic fluid to the gasket of the new hydraulic filter; refer to [Hydraulic Fluid Specification](#) (page 69).
7. Thread the filter onto the filter head until the gasket contacts the filter head, and tighten the filter an additional 2/3 to 3/4 turn.
8. Add the specified hydraulic fluid to the tank; refer to step 4 in [Checking the Hydraulic Fluid Level](#) (page 69).
9. Purge the air from the hydraulic system; refer to [Purging Air from the Hydraulic System](#) (page 71).




# Purging Air from the Hydraulic System

**Note:** You must purge air from the hydraulic system when you remove any hydraulic components, including oil filter, or disconnect any hydraulic lines.

1. Open the drive release valves at each hydraulic pump (Figure 103).

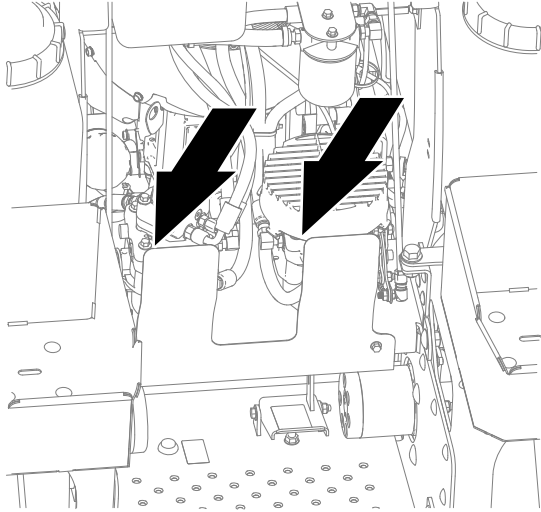

g313237

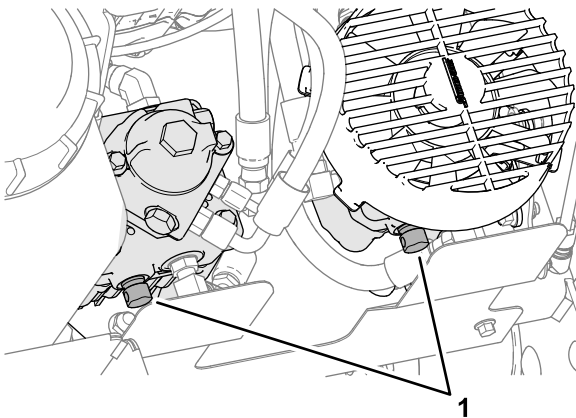

g313239

**Figure 103**

1. Drive release valves
- 
2. Raise the back of the machine until both drive wheels are off the ground, and support the machine with jack stands.
  3. Start engine and move throttle control ahead to full throttle position.
  4. Move the traction-control levers to the FORWARD and REVERSE positions several times position.
  5. Move the traction-control levers to the NEUTRAL position, and shut off the engine.
  6. Lower the machine and remove the jack stands.
  7. Close the drive release valves at each hydraulic pump (Figure 103).

8. Check the hydraulic fluid level, start the engine, and run it at full throttle for several minutes, refer to [Checking the Hydraulic Fluid Level \(page 69\)](#).
9. Shut off the engine, and Install the knee pad refer to [Installing the Knee Pad \(page 50\)](#).

## Checking the Hydraulic System Fittings

**Service Interval:** Every 40 hours

Check the hydraulic hoses and fittings for leaks, damage, or wear. Repair any leaking, damaged, or worn hydraulic components.



# ***Maintaining the Chassis***

## **Checking the Machine for Loose Hardware**

**Service Interval:** Before each use or daily

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Visually inspect machine for damaged or worn parts, and check for loose hardware.

**Note:** Before operating the machine, replace any damaged parts and tighten all loose hardware.

# ***Maintaining the Sprayer and Spreader Systems***

## **Checking the Sprayer System**

**Service Interval:** Every 50 hours

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Check all hoses, nozzles, and fittings for damage and leaks.

**Note:** Replace all damaged or leaking sprayer components.

3. Check the nozzle strainers and in-line strainers for accumulation of dirt and chemical sludge.

**Note:** Clean or replace strainers with an accumulation of dirt and chemical sludge.

## **Checking the Spreader System**

**Service Interval:** Every 50 hours

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Spray the hopper cables, accuway cable, and the deflector-shield cable with silicone spray, if needed.
3. Clean the bottom of the hopper with a wire brush and clean off any fertilizer, if needed.
4. Replace the hopper bottom bushing or the impeller, if needed.

# Cleaning

## Cleaning the Engine and the Exhaust System Area

**Service Interval:** After each use (clean more often when operating the machine in dry or dirty conditions.)

### ⚠ CAUTION

**Excessive debris around engine-air intake and exhaust system area can cause engine, exhaust area, and hydraulic system to overheat which can create a fire hazard.**

**Clean all debris from engine and exhaust system area.**

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Clean all debris from the engine, around engine shrouding, fuel tank, and exhaust system area.
3. Wipe up any excessive grease or oil around the engine and exhaust system area.
4. Clean muffler-heat shields of all debris, dirt, and oil.

## Cleaning the Debris from the Machine

**Service Interval:** After each use


1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Clean off any debris or chemical build-up on the machine, especially the nozzles, sprayer-tank opening, impeller, and the spray wand and its holder.

## Cleaning the Engine Debris Guard

**Service Interval:** Every 80 hours

1. Prepare the machine for maintenance; refer to [Preparing the Machine \(page 49\)](#).
2. Rotate open the left spray tank; refer to [Opening the Tanks \(page 50\)](#).
3. Use a brush or dry cloth to remove debris from the engine debris guard ([Figure 104](#)).

**Note:** Also, clean dust, dirt, and oil from external surfaces of engine which can cause improper cooling.

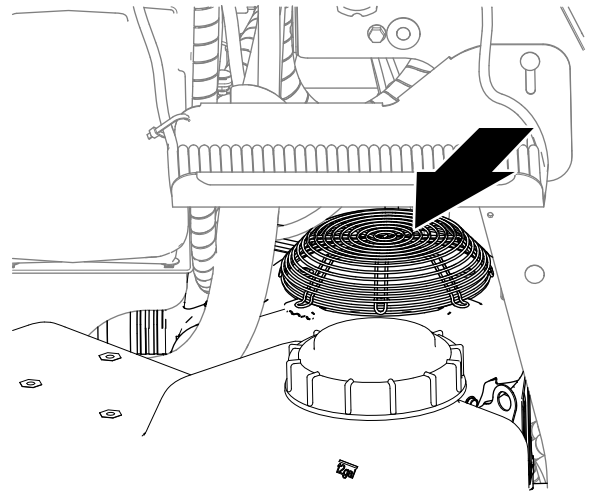

**Figure 104**

g313101

4. Close and secure the left spray tank; refer to [Closing the Tanks \(page 51\)](#).

# Waste Disposal

## Chemical Disposal

Improper chemical disposal can pollute the environment and cause health issues.

Follow the disposal directions on the chemical-manufacturer's label. Dispose of chemicals and containers in accordance to local/state/federal laws.

## Disposing of the Engine Oil

Engine oil and hydraulic fluid are both pollutants to the environment. Dispose of used pollutants at a certified-recycling center or according to your state and local regulations.

## Disposing of the Battery

### **⚠ DANGER**

**Battery electrolyte contains sulfuric acid, which is poisonous and can cause severe burns. Swallowing electrolyte can be fatal or if it touches skin can cause severe burns.**

- **Wear eye protection to shield eyes, and rubber gloves to protect skin and clothing when handling electrolyte.**
- **Do not swallow electrolyte.**
- **In the event of an accident, flush with water and call a doctor immediately.**

Federal law states that batteries should not be placed in the garbage. Management and disposal practices for batteries must follow relevant federal, state, or local laws.

Take the battery to a local certified-recycling center if you replace a worn or damaged battery or if the machine no longer operates and is being scrapped.

**Note:** If no local recycling is available, return the battery to any certified battery seller.

# Storage

## Short-Term Storage

1. Set sprayer-pump switch to the OFF position, stop the machine, move motion-control lever to the NEUTRAL position, shut off the engine, wait for all moving parts to stop, remove key, and engage parking brake.
2. Remove dirt and grime from the entire machine.

**Important:** Do not use brackish or reclaimed water to clean the machine.

**Important:** You can wash the machine with mild detergent and water. Do not pressure wash the machine. Avoid excessive use of water, especially near the engine and hydrostatic drive.

3. Service the air cleaner; refer to [Servicing the Air Cleaner \(page 53\)](#).
4. Lubricate the machine; refer to [Lubrication \(page 51\)](#).
5. Change the engine oil filter and oil; refer to [Changing the Oil Filter and Engine Oil \(page 55\)](#).
6. Check and tighten all bolts, nuts, and screws. Repair or replace any part that is damaged.
7. Paint all scratched or bare metal surfaces. Paint is available from your Authorized Service Dealer.
8. Store the machine in a clean, dry garage or storage area.
9. Cover the machine to protect it and keep it clean.

## Preparing the Machine for Extended or Winter Storage

To help protect the pumps from freezing temperatures, ensure that the machine is free of all caustic chemicals and residue.

### Cleaning the Spreader

Perform all the steps in [Cleaning and Lubricating the Spreader \(page 41\)](#).

### Winterizing the Sprayer

#### Emptying the Tank

1. Perform all the steps in [Cleaning the Sprayer System and Wand \(page 42\)](#), [Cleaning the Strainer \(page 43\)](#), and [Cleaning the Sprayer Nozzles \(page 44\)](#).

2. Empty the sprayer system by performing the following:
  - A. Empty the sprayer tank.
  - B. Start the machine and set sprayer-pump switch to the ON position
  - C. Move the 3 boom spray-control valves to the ON position.

**Note:** Run the sprayer pump until the spray nozzles is spray air.

3. Shut off the sprayer pump and the engine.

#### Preparing the Sprayer System

**Antifreeze type:** 15 L (4 US gallon) rust inhibiting, non-alcohol based, RV-antifreeze concentrate

**Important:** Do not allow all the antifreeze mixture to empty from the sprayer tank while running the sprayer nozzles and wand. Keeping some of the antifreeze in the pump, valves, and hoses will help prevent corrosion and damage caused by moist air trapped in the sprayer system.

**Do not use brackish or reclaimed water in the spray system.**

1. Pour 7.5 L (2 US gallon) RV anti-freeze concentrate into each sprayer tank.

**Note:** Use a rust inhibiting, non-alcohol based, RV antifreeze concentrate.

2. Open the tank shutoff valves for both spray tanks; refer to [Selecting Both Spray Tanks \(page 34\)](#).
3. Open the throttle valve; refer to [Adjusting the Sprayer Pressure \(page 36\)](#).
4. Start the machine and set the sprayer-pump switch to the ON position.
5. Move the spray-control valves to the ON position.

**Note:** Allow the antifreeze to circulate through sprayer and nozzle.

6. Remove the wand from its holder, point it in a safe direction, and squeeze the spray-wand trigger.

**Note:** Allow the antifreeze to circulate through sprayer and nozzle and then return the wand to its holder.

7. Set the sprayer-pump switch to the OFF position and shut off the engine.

#### Battery Storage

Disconnect the battery and place it on a trickle charger for a few hours, once per month.

# Troubleshooting

**Important:** Ensure that the operator safety mechanisms for the machine are connected and in proper operating condition before you use the machine.

When a problem occurs, do not overlook the simple causes. For example, starting problems could be caused by an empty fuel tank.

The following table lists some of the common causes of trouble. Do not attempt to service or replace major engine items or any items that call for special timing of adjustments procedures (such as valves, governor, etc.). Have this work done by your engine service dealer.

**Note:** When disconnecting electrical connectors, do not pull on the wires to separate the connectors.

## The Charging System

### 20 Amp Regulated Alternator

The regulated alternator system provides AC current through two output leads to the regulator-rectifier ([Figure 105](#)). The regulator-rectifier converts the AC current to DC, and regulates current to the battery. The charging rate will vary with engine RPM and temperature.

**Note:** Stator, regulator/rectifier, and fly-wheel are not interchangeable with other charging systems.

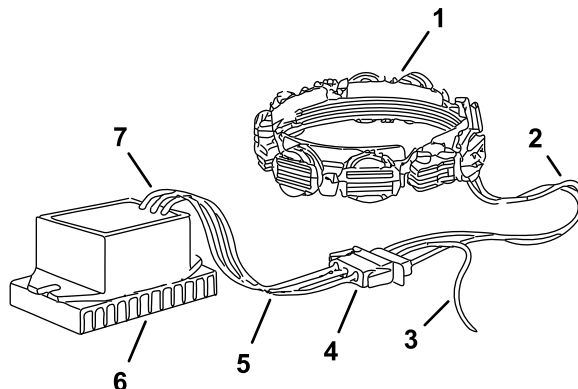


Figure 105

g314087

- |  |  |
|--|--|
| 1. Stator assembly                         | 5. 2 yellow AC input leads               |
| 2. 2 yellow leads (from stator)            | 6. Regulator/rectifier                   |
| 3. Red DC output lead (from the connector) | 7. Red DC output lead (to the connector) |
| 4. Connector                               |  |

---

## Testing the Alternator

**Important:** When checking the alternator components, perform the tests in the following sequence:

1. [Testing Alternator Output \(page 77\)](#)
2. [Testing the DC Output Charging Wire \(page 78\)](#)
3. [Testing the Regulator/Rectifier \(page 78\)](#)

# Testing Alternator Output

## ⚠ CAUTION

Attach meter test leads to the AC output terminals (the yellow wires) in the connector before starting the engine. If the stator is grounded (damaged or worn) and the meter test leads contact the center DC output pin (the red wire) in the connector, arcing could occur, damaging the wiring.

When checking the alternator components, perform the tests in the following sequence:

1. Disconnect stator wire harness from regulator/rectifier.
2. Insert red test lead into VΩ receptacle in meter.
3. Insert black test lead into COM receptacle.
4. Rotate selector to V~ (AC volts) position.
5. Attach red and black test lead probes to the 2 AC output terminals (yellow wires) of the connector as shown in [Figure 106](#).

**Note:** You can attach the test lead probes to either AC output terminal.

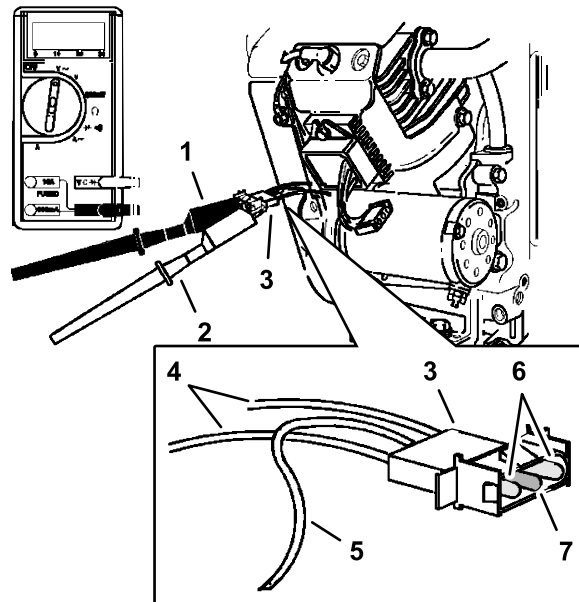


Figure 106

g314088

- |                        |                       |
|------------------------|-----------------------|
| 1. Black probe (meter) | 5. Red wire           |
| 2. Red probe (meter)   | 6. AC input terminals |
| 3. Connector           | 7. DC output terminal |
| 4. Yellow wires        |                       |

- 
6. If no or low output is found, check for bare wires or other damage.

**Note:** If shorted leads are not visible, replace the stator.

**Note:** With the engine running at 3600 rpm, the alternator should output 16 V or more.

7. Connect stator wire harness to regulator/rectifier.

## Testing the DC Output Charging Wire

Use this test to check the DC output charging wire circuit. If a wiring problem exists, you can correct it before testing regulator/rectifier.

Leave stator wire harness disconnected from regulator-rectifier. Ignition switch must be in OFF position.

1. Turn the ignition switch to the OFF position.
2. Disconnect stator wire harness from regulator/rectifier.
3. Insert red test lead into V $\Omega$  receptacle in meter.
4. Insert black test lead into COM receptacle.
5. Rotate selector to V~ (AC volts) position.
6. Attach red test lead probe to the red DC output terminal of the connector (Figure 106).
7. Attach black test lead probe to negative battery terminal.
8. Turn ignition switch to the ON position.

**Note:** Meter should display battery voltage.

**Note:** Regulator-Rectifier Test

## Testing the Regulator/Rectifier

You must install a DC shunt on the negative (-) terminal of the battery to avoid overloading the fuse in the meter when testing the alternator output. Ensure that all electrical connections are clean and tight for accurate amperage readings.

1. Connect stator wire harness to regulator/rectifier.
2. Install a DC shunt onto the negative battery terminal.
3. Insert red test lead into V $\Omega$  receptacle of the meter. Connect the other end of the red test lead to the post terminal of the shunt Figure 107.

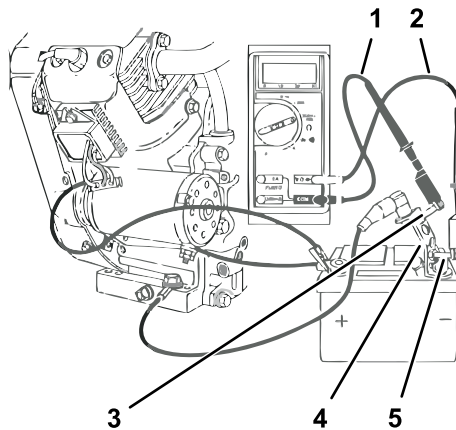


Figure 107

g314089

- |                                |                          |
|--------------------------------|--------------------------|
| 1. Black probe (meter)         | 4. DC shunt              |
| 2. Red probe (meter)           | 5. Post terminal (shunt) |
| 3. Black post terminal (shunt) |                          |

4. Insert black test lead in COM receptacle of the meter. Connect the other end of the black test lead to the black post terminal of the shunt.
5. Rotate selector of the meter to 300 mV position.
6. With the engine running at 3600 RPM, the alternator should output 3-20 A.

**Note:** Depending on battery voltage and/or current draw on system.



**Note:** If you find no or low alternator output, check that the regulator/rectifier is properly grounded, and that all electrical connections are clean and secure.

If there is still no or low alternator output, replace the regulator/rectifier.

## Troubleshooting the Machine

Problem	Possible Cause	Corrective Action
The starter does not rotate the engine.	<ol style="list-style-type: none"> <li>1. The battery does not have a full charge.</li> <li>2. An electrical connection(s) is corroded, loose or faulty.</li> <li>3. A fuse is open.</li> <li>4. A relay or switch is worn or damaged.</li> </ol>	<ol style="list-style-type: none"> <li>1. Charge the battery; refer to the Charging the Battery, and Jump Starting the Machine procedures.</li> <li>2. Check the electrical connection(s) for good contact. Clean the connector terminals thoroughly with electrical-contact cleaner, apply dielectric grease to the terminals, and connect the connectors.</li> <li>3. Replace the open fuse.</li> <li>4. Contact an authorized Toro service dealer.</li> </ol>
The engine does not start, it starts hard, or it fails to keep running.	<ol style="list-style-type: none"> <li>1. The fuel tank is empty.</li> <li>2. The throttle lever or choke lever or both are not in the correct position.</li> <li>3. There is dirt in fuel filter.</li> <li>4. There is dirt, water, or stale fuel is in the fuel system.</li> <li>5. The air-filter elements are dirty.</li> <li>6. An electrical connection(s) is corroded, loose or damaged.</li> <li>7. A relay or switch is worn or damaged.</li> <li>8. The spark plug is worn or damaged.</li> <li>9. The spark-plug wire is not connected to the spark plug.</li> </ol>	<ol style="list-style-type: none"> <li>1. Fill the fuel tank with fuel.</li> <li>2. Move the throttle control is midway between the SLOW and FAST positions. Set the choke to the ON position when starting a cold engine or set the choke to the OFF position when starting a warm engine.</li> <li>3. Replace the fuel filter; refer to Replacing the Fuel Filter procedure.</li> <li>4. Contact an authorized Toro service dealer.</li> <li>5. Clean the foam-filter element or replace the paper-filter element.</li> <li>6. Check the electrical connection(s) for good contact. Clean the connector terminals thoroughly with electrical-contact cleaner, apply dielectric grease to the terminals, and connect the connectors.</li> <li>7. Contact an authorized Toro service dealer.</li> <li>8. Clean, adjust or replace spark plug.</li> <li>9. Check the spark-plug wire connection at the spark plug.</li> </ol>
The engine loses power.	<ol style="list-style-type: none"> <li>1. The engine load is excessive.</li> <li>2. The air-filter elements are dirty.</li> <li>3. The oil level in the engine is low.</li> <li>4. The cooling fins and the air passages for the engine are plugged with dirt or debris.</li> <li>5. The vent hole in the fuel cap is plugged.</li> <li>6. There is dirt in the fuel filter.</li> <li>7. There is dirt, water, or stale fuel is in the fuel system.</li> </ol>	<ol style="list-style-type: none"> <li>1. Reduce the ground speed of the machine.</li> <li>2. Clean the foam-filter element or replace the paper-filter element.</li> <li>3. Add oil into the engine to the proper oil level.</li> <li>4. Clean the cooling fins and the air passages.</li> <li>5. Clean or replace the fuel cap.</li> <li>6. Replace the fuel filter; refer to Replacing the Fuel Filter procedure.</li> <li>7. Contact an authorized Toro service dealer.</li> </ol>


<b>Problem</b>	<b>Possible Cause</b>	<b>Corrective Action</b>
The engine overheats.	<ol style="list-style-type: none"> <li>1. The engine load is excessive.</li> <li>2. The oil level in the engine is low.</li> <li>3. The cooling fins and air passages for the engine are plugged with dirt or debris.</li> </ol>	<ol style="list-style-type: none"> <li>1. Reduce the ground speed of the machine.</li> <li>2. Add oil into the engine to the proper oil level.</li> <li>3. Clean the cooling fins and the air passages.</li> </ol>
The machine pulls to the left or the right (with steering control fully forward).	<ol style="list-style-type: none"> <li>1. The air pressure in the tires is not correct.</li> <li>2. The motion-control linkage is damaged.</li> <li>3. The front wheel axles are bent or damaged.</li> <li>4. The motion control tracking is out of adjustment.</li> </ol>	<ol style="list-style-type: none"> <li>1. Adjust air pressure in the drive tires.</li> <li>2. Replace motion-control linkage.</li> <li>3. Repair or replace the front wheel axles.</li> <li>4. Adjust the motion control tracking.</li> </ol>
The machine does not drive.	<ol style="list-style-type: none"> <li>1. The drive release valves are not fully closed.</li> <li>2. The belt is loose or broken.</li> </ol>	<ol style="list-style-type: none"> <li>1. Close the drive release valves.</li> <li>2. Tension the belt or replace it.</li> </ol>
The machine vibrates abnormally.	<ol style="list-style-type: none"> <li>1. The engine-mounting bolts are loose.</li> </ol>	<ol style="list-style-type: none"> <li>1. Tighten the engine-mounting bolts.</li> </ol>

## Troubleshooting the Spreader or Sprayer

<b>Problem</b>	<b>Possible Cause</b>	<b>Corrective Action</b>
The spreader or sprayer pattern is uneven.	<ol style="list-style-type: none"> <li>1. The impeller is dirty or damaged.</li> <li>2. The diffuser control is not adjusted properly.</li> <li>3. The sprayer nozzles are clogged.</li> <li>4. The hopper screen is plugged.</li> <li>5. Material in the hopper is clumped over the gate.</li> <li>6. The diffuser ramp setting is incorrect.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean, repair, or replace the impeller.</li> <li>2. Adjust the diffuser control; refer to the Adjusting the Diffuser Control procedure.</li> <li>3. Clean or replace the nozzles.</li> <li>4. Clean the hopper screen.</li> <li>5. Check to see if the agitator pin for the shaft of the impeller motor is present.</li> <li>6. Adjust the position of the control cable.</li> </ol>
The impeller does not rotate.	<ol style="list-style-type: none"> <li>1. There is debris buildup at the impeller.</li> <li>2. The hopper screen is plugged.</li> <li>3. The impeller motor is loose or damaged.</li> <li>4. The motor hydraulics are damaged.</li> <li>5. The Impeller-speed control is in the OFF position or set too slow.</li> <li>6. The impeller-drive pin is missing.</li> <li>7. The bearings failed in the impeller motor.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean the impeller.</li> <li>2. Clean the hopper screen.</li> <li>3. Repair or replace the impeller motor.</li> <li>4. Check the hydraulic hoses and connections.</li> <li>5. Set the Impeller-speed control ON position and adjust the impeller speed.</li> <li>6. Replace the drive pin.</li> <li>7. Replace the bearings in the motor or the motor assembly.</li> </ol>
No material dispensed from hopper.	<ol style="list-style-type: none"> <li>1. Hopper screen is plugged.</li> <li>2. Hopper door not adjusted properly.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean the hopper screen.</li> <li>2. Adjust the hopper door; refer to the Adjusting the Hopper-Door Control procedure.</li> </ol>

Problem	Possible Cause	Corrective Action
There is no spray from the sprayer nozzles in the boom or the nozzles have poor output.	<ol style="list-style-type: none"> <li>1. The sprayer tank is empty.</li> <li>2. The tank shutoff valve(s) is closed or partially closed.</li> <li>3. The strainer is clogged or damaged.</li> <li>4. The pump is clogged or damaged.</li> <li>5. The nozzles are clogged.</li> <li>6. The hoses are clogged, kinked, or damaged.</li> <li>7. The boom spray-control valves are not in the ON position.</li> <li>8. The sprayer pressure and ground speed are incorrect.</li> <li>9. The chemical mixture in the sprayer tank is incorrect.</li> <li>10. The spray system is leaking or drawing air.</li> </ol>	<ol style="list-style-type: none"> <li>1. Fill the sprayer tank.</li> <li>2. Fully open the tank shutoff valve(s).</li> <li>3. Clean, repair, or replace the strainer.</li> <li>4. Clean, repair, or replace the pump.</li> <li>5. Clean or replace the nozzles.</li> <li>6. Clean, repair, or replace the hoses.</li> <li>7. Move the lever for the boom spray-control valves to the ON position.</li> <li>8. Adjust the sprayer pressure and the ground speed of the machine.</li> <li>9. Follow the chemical manufacturer's recommendation.</li> <li>10. Inspect the components of the sprayer system; clean, repair, or replace the sprayer-system components as needed.</li> </ol>
The spray wand does not work.	<ol style="list-style-type: none"> <li>1. The sprayer tank is empty.</li> <li>2. The sprayer-wand-pressure control is in the wrong position.</li> <li>3. The wand is clogged or damaged.</li> <li>4. The spray nozzle for the wand is clogged.</li> <li>5. The trigger is not pressed.</li> <li>6. The hose is clogged or damaged.</li> <li>7. The hose is not connected to the wand.</li> <li>8. The hose for the wand is kinked.</li> </ol>	<ol style="list-style-type: none"> <li>1. Fill the sprayer tank.</li> <li>2. Rotate the pressure control to the OPEN position.</li> <li>3. Clean, repair, or replace the wand.</li> <li>4. Clean or replace the nozzle.</li> <li>5. Press the trigger.</li> <li>6. Clean, repair, or replace the hoses.</li> <li>7. Connect the hose to the wand.</li> <li>8. Straighten the kink in the hose.</li> </ol>

# Schematics

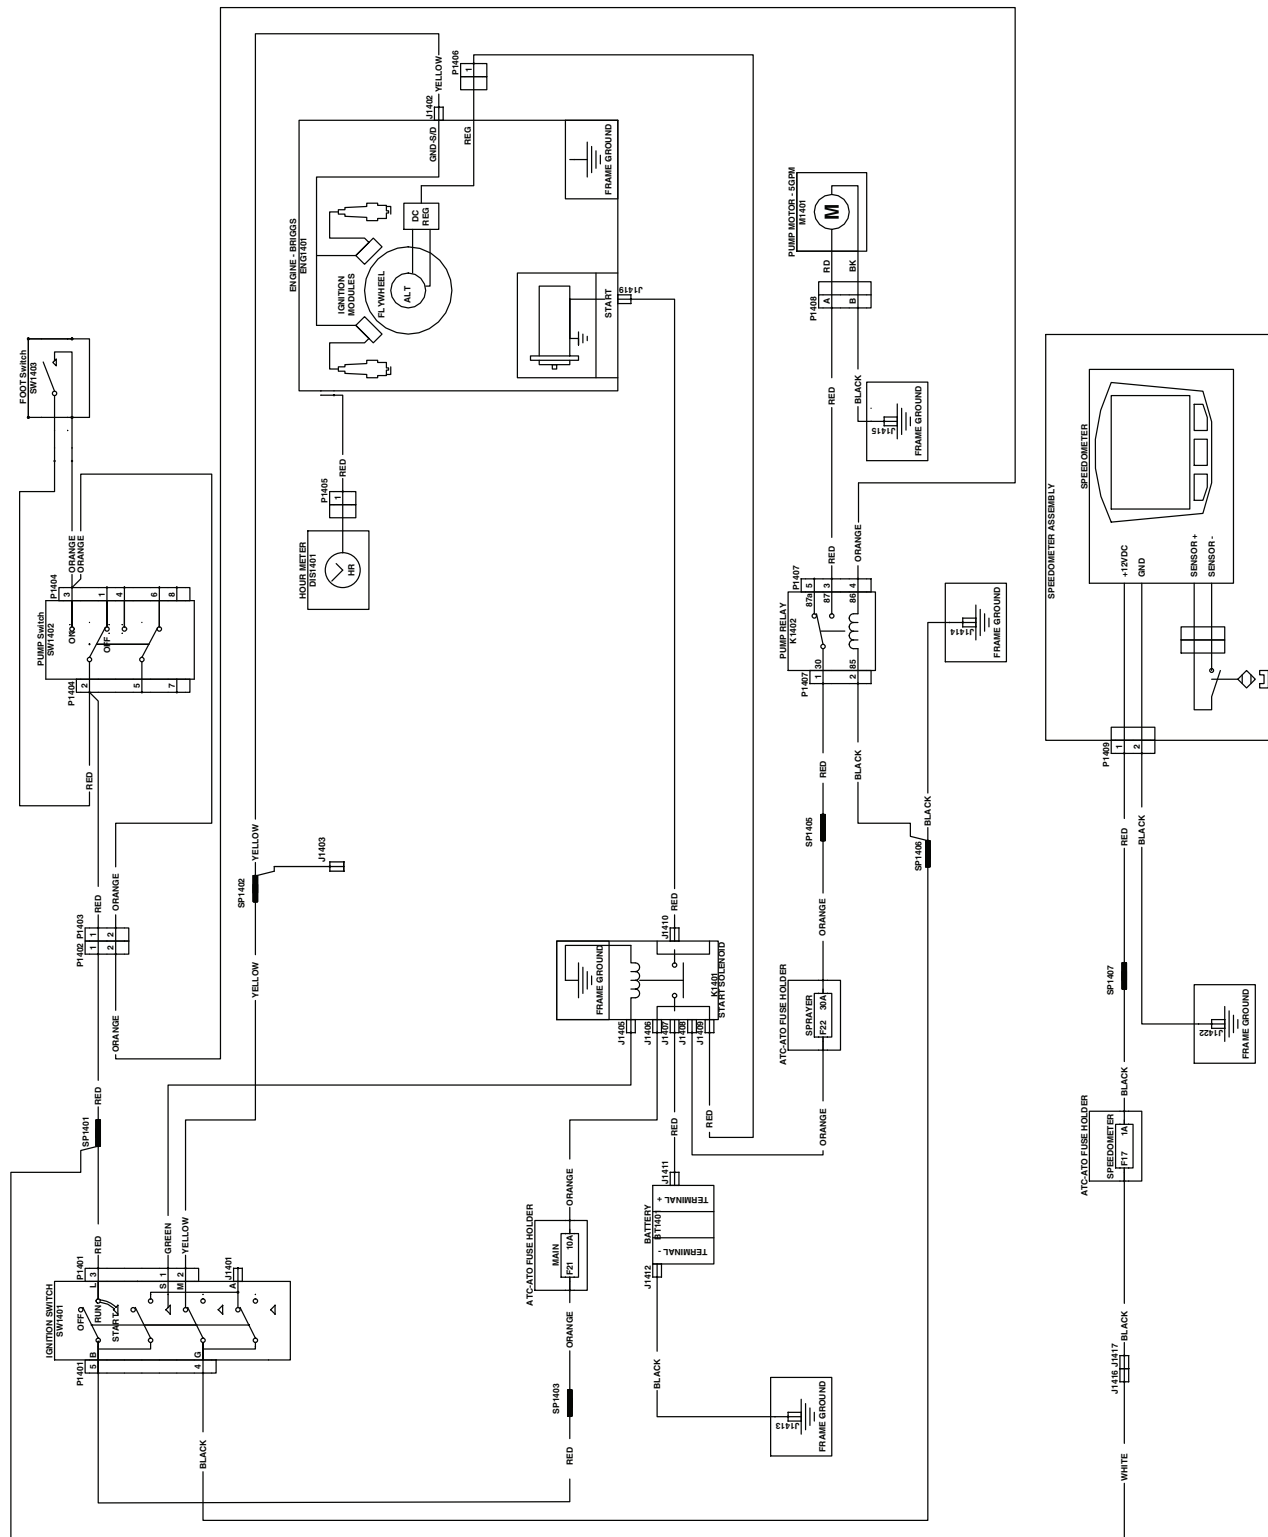

Electrical Schematic 135-6146 (Rev. A)

g317196

**Notes:**



**Count on it.**