



PARKMASTER 5, 7 & 9 UNIT

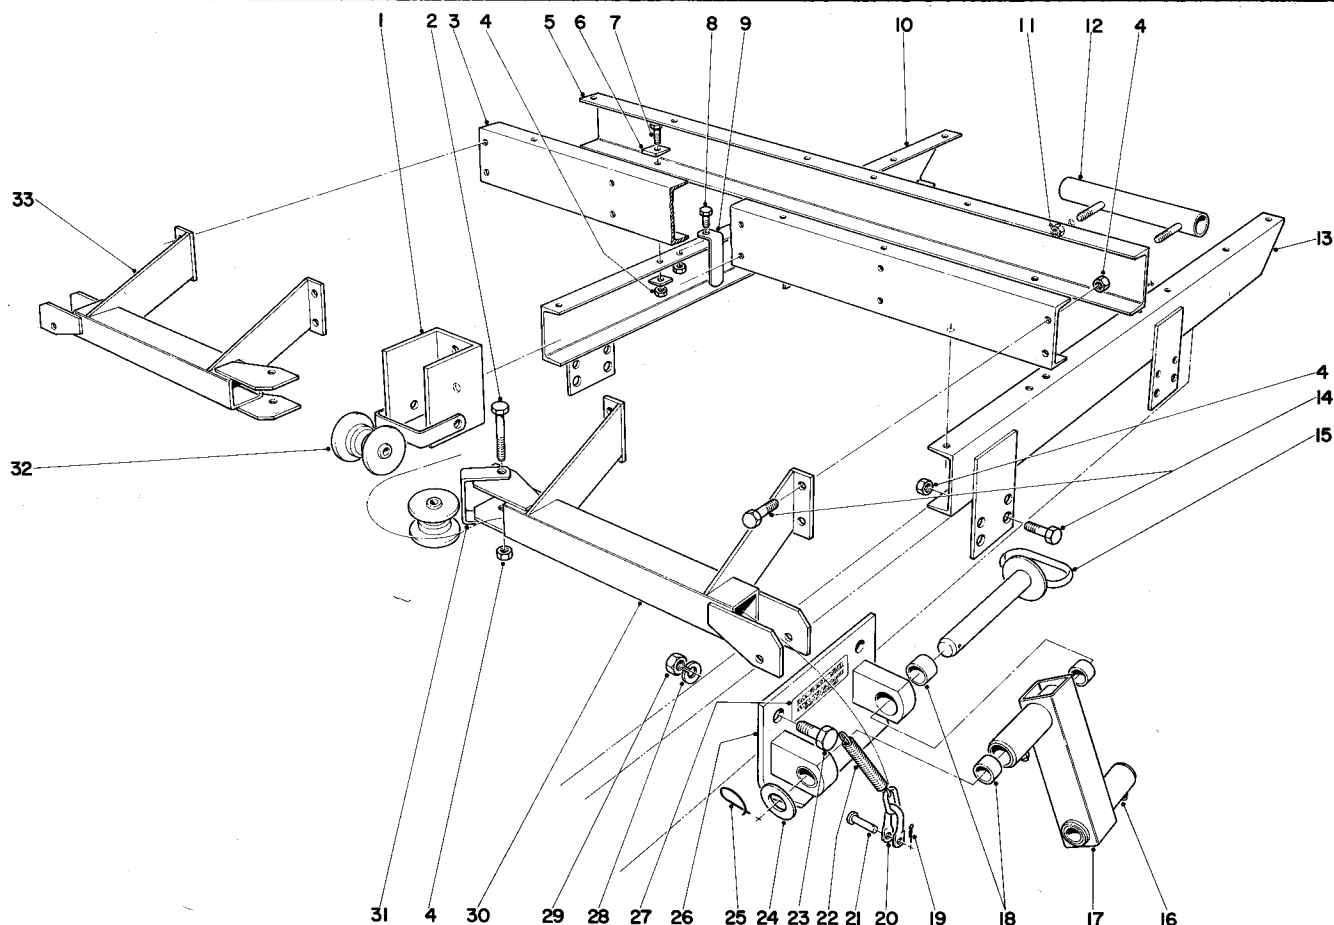

MAIN FRAME ASSEMBLY (Front — 5 Unit)

Ref. No.	Part No.	Description	No. Used
1	3-0112	Bracket, Sheave	1
2	325-18	Capscrew	5
3	3-0141	Front Cross Channel, Front	1
4	32146-13	Locknut	27
5	3-0142	Front Cross Channel, Rear	1
6	3290-216	Bevel Washer	8
7	325-6	Capscrew	4
8	325-5	Capscrew	2
9	3-0236	Clip, Hose	2
10	3-4608	Channel, R. H.	1
11	32146-6	Locknut	4
12	3-4250	Tube	2
13	3-4606	Channel, L. H.	1
14	325-6	Capscrew	16
15	3-0152	Pin	2
16	302-5	Grease Fitting	4
17	5-1996	Arm, Front (Incl. Ref. #18)	2

Ref. No.	Part No.	Description	No. Used
18	3-0348	Bushing	12
19	3272-10	Pin, Cotter	2
20	5-2942	Shackle	2
21	283-6	Pin, Clevis	2
22	5-1706	Spring	2
23	327-4	Capscrew	4
24	3256-30	Washer	2
25	5-3126	Pin, Spring	2
26	5-1998	Bracket (Incl. Ref. #18)	2
27	10-2490	Decal	1
28	3253-8	Lockwasher	4
29	3217-11	Nut	4
30	3-6690	Tube, L.H.	1
31	3-0136	Chain Keeper	5
32	3-2196	Sheave	5
33	3-6680	Tube, R.H.	1

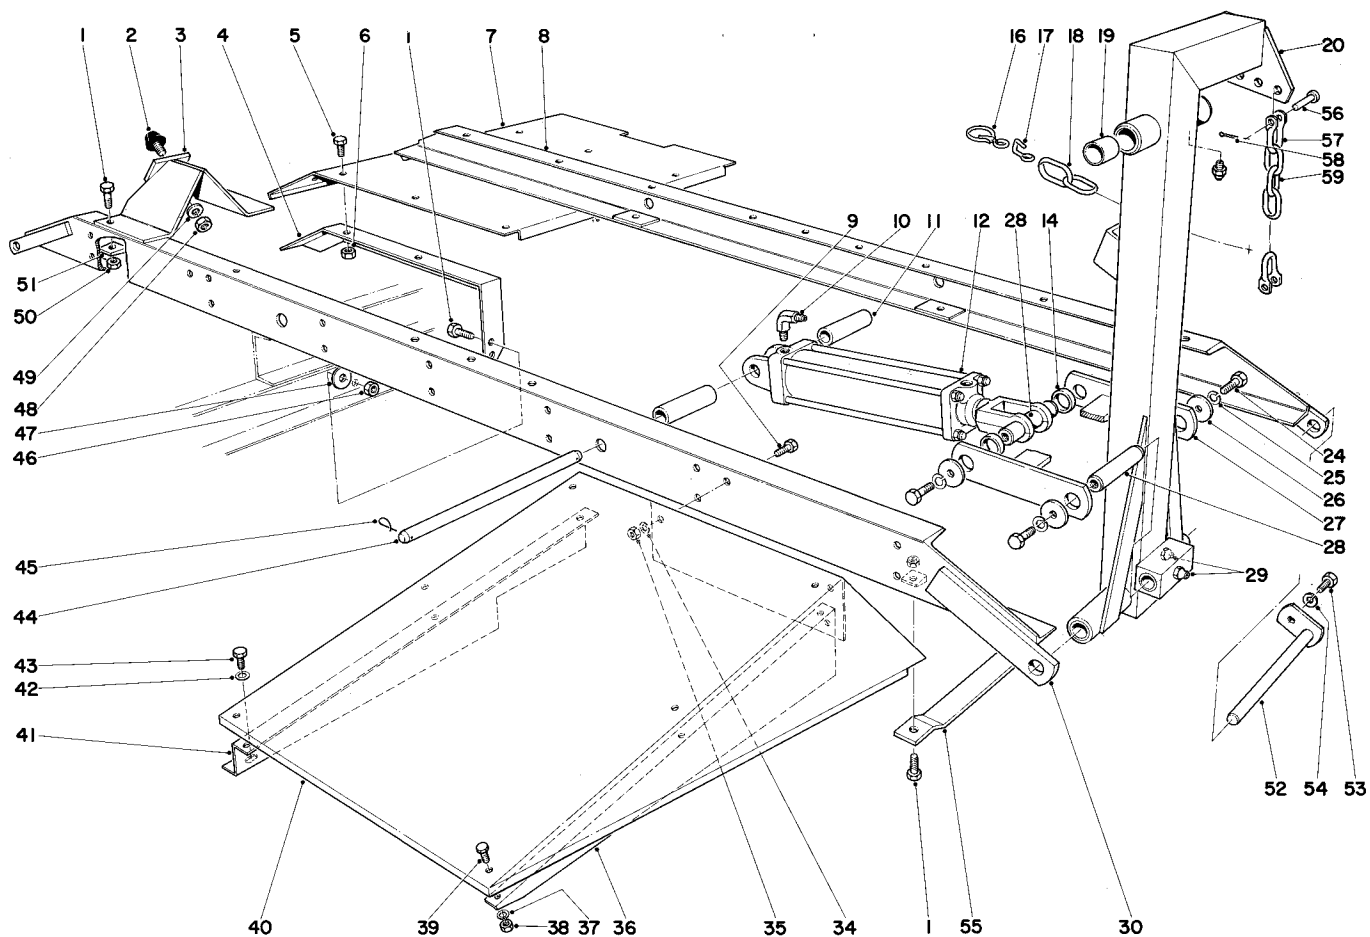


MAIN FRAME ASSEMBLY (Front — 7 Unit)

Ref. No.	Part No.	Description	No. Used
1	325-6	Capscrew	18
2	212-183	Rubber Bumper	2
3	3-0285	Arm, Stop	2
4	3-6520	Bracket	4
5	325-3	Capscrew	16
6	32146-13	Locknut	16
7	3-4596	Mudguard, R.H.	1
*	3-4597	Mudguard, L.H.	1
8	8-1330	Front Cross Channel, Rear	1
9	323-6	Capscrew	6
10	5-6560	Elbow (78)	4
11	3-6385	Tube, Spacer	4
12	5-3496	Cylinder, 12" (less pins)	2
14	5-3504	Tube, Spacer	4
16	286-3	Snap Hook	4
17	286-4	Cold Shut	4
18	3-1365	Chain, Safety	2
19	3-0348	Bushing	16
20	10-1990	Lift Arm	1
*	10-2020	Lift Arm	1
24	3211-4	Screw	8
25	3253-5	Lockwasher	8
26	5-1720	Washer	8
27	10-0700	Link, W.A.	2
28	3-0128	Shaft	4
29	302-5	Grease Fitting	6
30	8-2170	Front Cross Channel, Front	1
34	3253-21	Lockwasher	8

Ref. No.	Part No.	Description	No. Used
35	3217-7	Nut	8
36	5-2262	Brace, Fender	2
37	3253-4	Lockwasher	12
38	3217-6	Nut	12
39	322-2	Capscrew	12
40	5-2265	Fender, L.H.	1
*	5-2266	Fender, R.H.	1
41	5-2263	Mount, L.H. Fender	1
*	5-2264	Mount, R.H. Fender	1
42	3256-24	Washer	4
43	32104-6	Screw, Self-Tapping	4
44	3-0144	Shaft	2
45	5-3126	Pin, Spring	4
46	32146-13	Locknut	8
47	3-1615	Spacer	2
48	32146-6	Locknut	2
49	3256-3	Washer	2
50	32146-13	Locknut	12
51	3290-216	Bevel Washer	20
52	8-0390	Pin, Bail Lift	2
53	322-3	Capscrew	2
54	3254-4	Lockwasher	2
55	10-0750	Rest, Cylinder	2
56	283-10	Pin	4
57	5-2942	Shackle	4
58	3272-10	Cotter Pin	4
59	3-4636	Lift Chain (7 Links)	2


*Not Illustrated

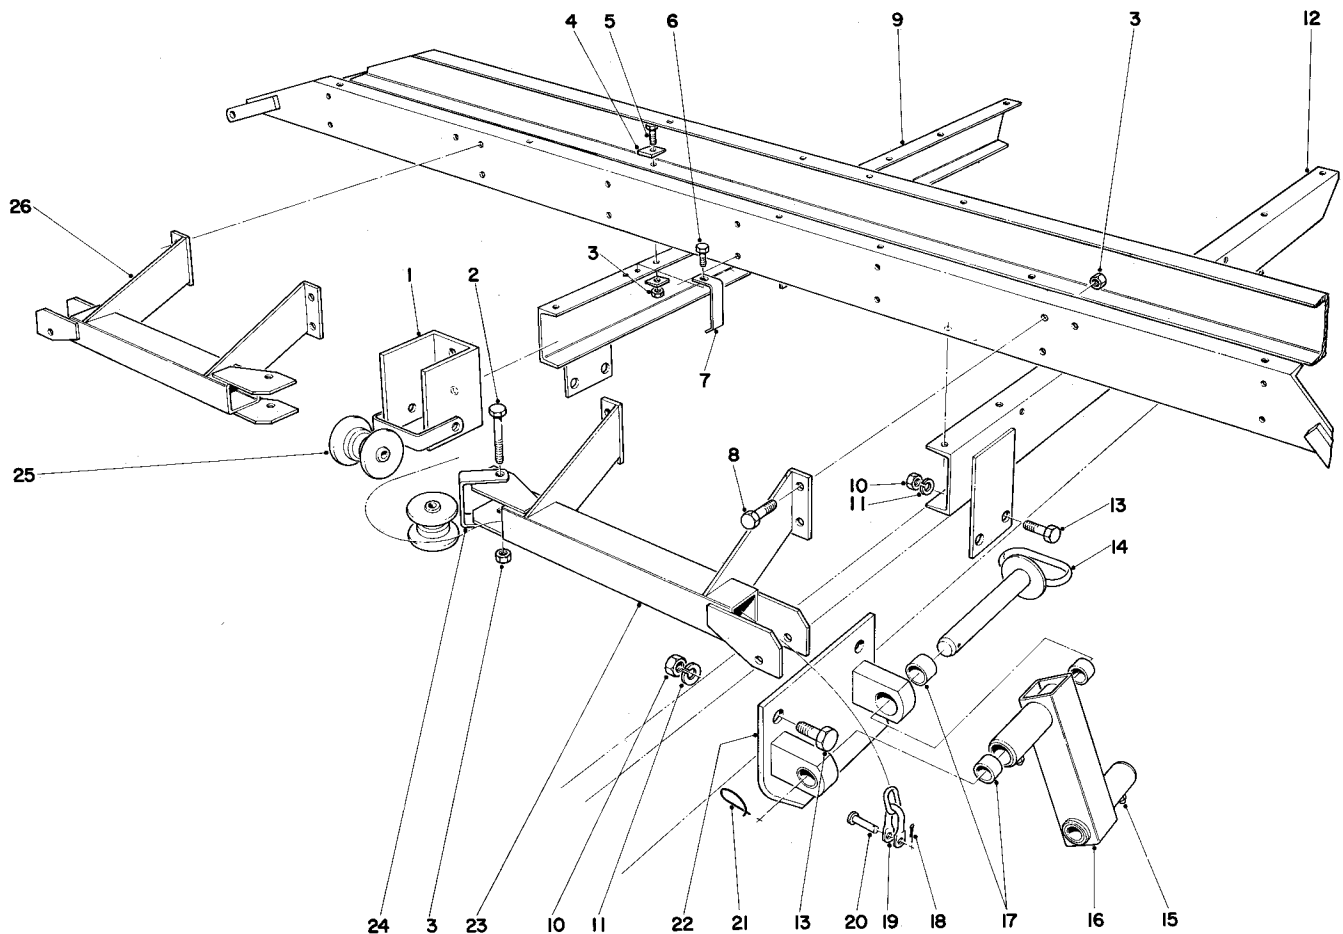

MAIN FRAME ASSEMBLY (Front — 9 Unit)

Ref. No.	Part No.	Description	No. Used
1	3-0112	Bracket, Sheave	1
2	325-18	Capscrew	5
3	32146-13	Locknut	23
4	3290-216	Bevel Washer	16
5	325-7	Capscrew	8
6	32104-6	Screw, Self Tapping	2
7	11-4630	Retainer, Hose	2
8	325-5	Capscrew	10
9	11-3980	Side Channel, R.H.	1
10	3217-11	Nut	12
11	3253-8	Lockwasher	12
12	11-4000	Side Channel, L.H.	1
13	327-4	Capscrew	12

Ref. No.	Part No.	Description	No. Used
14	3-0152	Pin	2
15	302-5	Grease Fitting	4
16	5-1996	Lift Arm (Incl. Ref. No. 17)	2
17	3-0348	Bushing	8
18	3272-10	Cotter Pin	2
19	5-2942	Shackle	2
20	283-10	Pin	2
21	5-3126	Pin, Spring	2
22	5-1998	Bracket	2
23	3-6690	Tube, L.H.	1
24	3-0136	Chain, Keeper	5
25	3-2196	Sheave	5
26	3-6680	Tube, R.H.	1

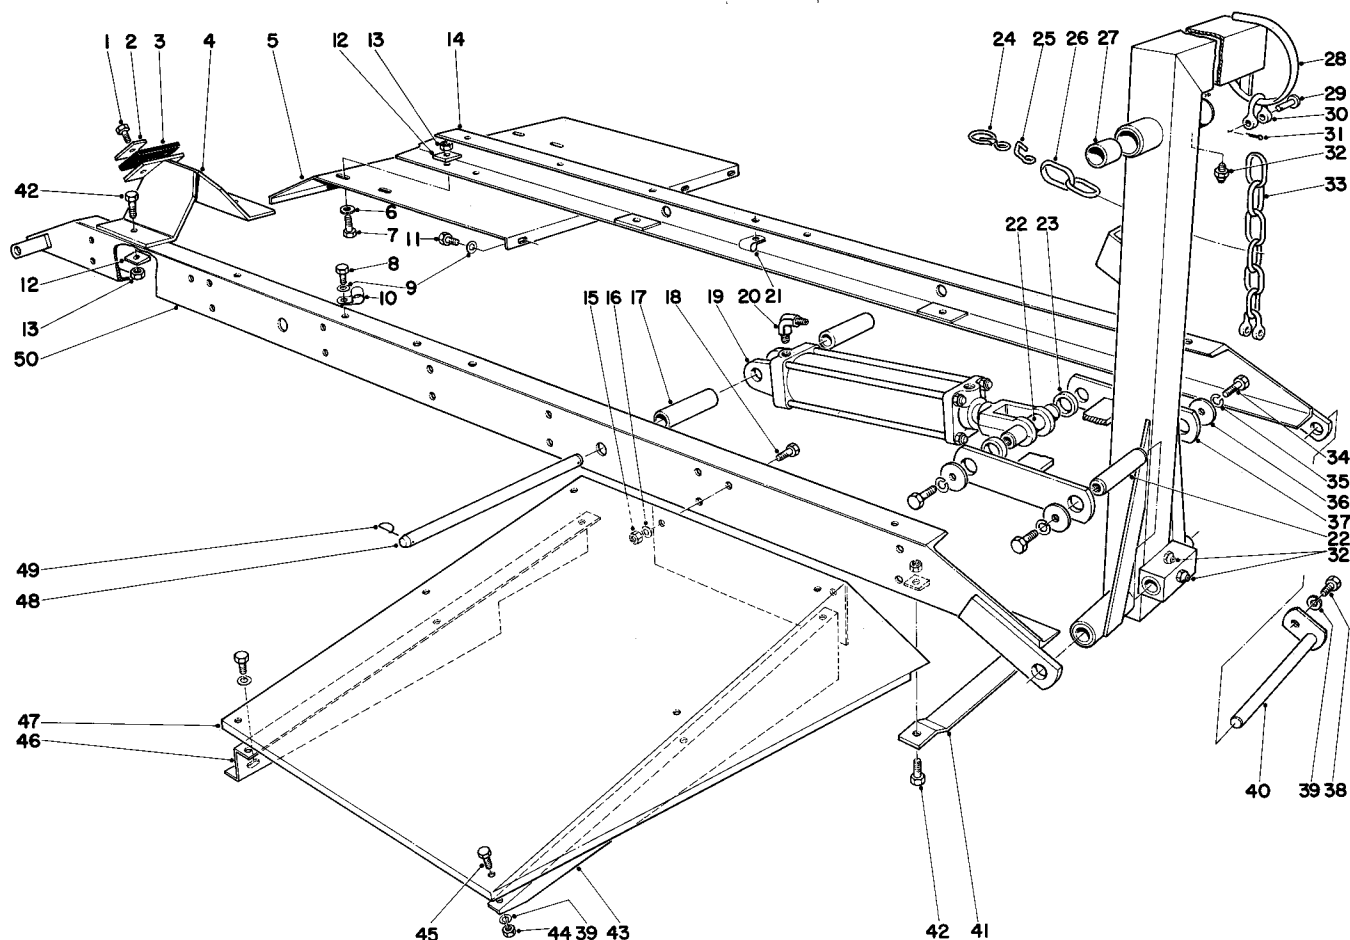


MAIN FRAME ASSEMBLY (Front Center — 9 Unit)

Ref. No.	Part No.	Description	No. Used
1	3290-319	Machine Screw	4
2	11-5270	Washer, Bumper	4
3	11-4590	Pad, Bumper	2
4	11-5630	Stop	2
5	11-4620	Fender, R.H.	1
*	11-4610	Fender, L.H.	1
6	3256-26	Washer	4
7	325-5	Capscrew	4
8	32104-6	Self Tapping Screw	1
9	3256-24	Washer	9
10	2412-39	Hose Clamp	1
11	32104-98	Self Tapping Screw	8
12	3290-216	Bevel Washer	12
13	32146-13	Locknut	12
14	11-4100	Rear Cross Chan. (Front Pos.)	1
15	3217-7	Nut	6
16	3253-21	Lockwasher	6
17	3-6385	Tube, Spacer	4
18	323-6	Capscrew	6
19	5-3496	Cylinder	2
20	5-6560	Elbow (78)	4
21	304-61	Clamp, Hose	1
22	3-0128	Shaft	4
23	5-3504	Spacer	4
24	286-3	Safety Hook	4
25	286-4	Cold Shut	4
26	3-1365	Chain	2

Ref. No.	Part No.	Description	No. Used
27	3-0348	Bushing	16
28	11-4220	Lift Arm #6 (Incl. Ref. #27)	1
*	11-4250	Lift Arm #5 (Incl. Ref. #27)	1
29	283-10	Pin	4
30	8-0280	Shackle	4
31	3272-10	Cotter Pin	4
32	302-5	Grease Fitting	6
33	11-4260	Lift Chain (6 Links)	2
34	3211-2	Capscrew	8
35	3253-5	Lockwasher	8
36	5-1720	Washer	8
37	10-0700	Link	2
38	322-3	Capscrew	2
39	3253-4	Lockwasher	14
40	8-0390	Pin, Bail Lift	2
41	10-0750	Rest Cylinder	2
42	325-6	Capscrew	8
43	5-2262	Brace, Fender	2
44	3217-6	Nut	12
45	322-2	Capscrew	12
46	5-2263	Mount, Fender, L.H.	1
*	5-2264	Mount, Fender, R.H.	1
47	5-2265	Fender, L.H.	1
*	5-2266	Fender, R.H.	1
48	3-0144	Shaft	2
49	5-3126	Pin, Spring	4
50	11-5610	Front Cross Chan. (Front Pos.)	1


*Not Illustrated

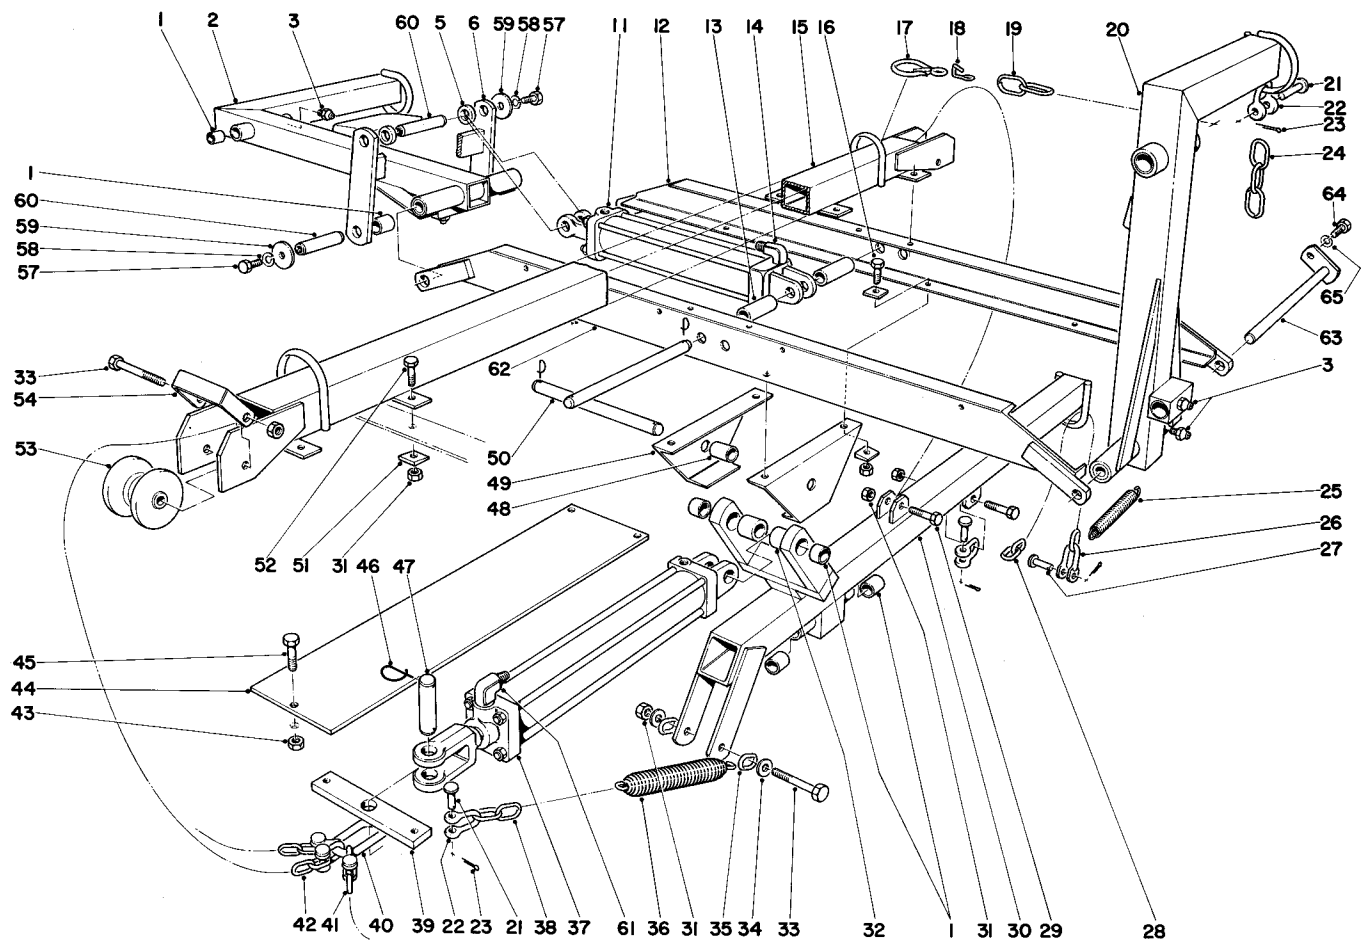

MAIN FRAME ASSEMBLY (Rear - 5 & 7 Unit)

Ref. No.	Part No.	Description	No. Used 5	No. Used 7
1	3-0348	Bushing	20	36
2	10-1940	Arm, Short, R.H.	1	1
3	302-5	Grease Fitting	6	6
5	5-3504	Tube, Spacer	4	4
6	10-0700	Link, W.A.	2	2
11	5-3495	Cylinder, 10" (less pins)	2	2
12	8-1280	Cross Channel, Rear	1	1
13	3-6385	Tube, Spacer	4	4
14	5-6560	Elbow (78)	4	4
15	3-0105	Brace, Channel	1	1
16	325-7	Capscrew	4	4
17	286-3	Snap Hook	4	4
18	286-4	Cold Shut	4	4
19	3-1365	Chain, Safety	2	4
20	10-1970	Arm, Short, Left	1	1
21	283-10	Pin	7	7
22	8-0280	Yoke	7	7
23	3272-10	Pin, Cotter	10	10
24	3-4636	Chain (7 Links)	2	2
25	5-1706	Spring	3	3
26	5-2942	Shackle	3	3


Ref. No.	Part No.	Description	No. Used 5	No. Used 7
27	283-6	Pin, Clevis	3	3
28	3-1364	Chain (36 Links)	1	1
29	325-9	Capscrew	2	2
30	3-0224	Drawbar, Rear	1	1
31	32146-13	Locknut	13	13
32	3-6386	Spacer	2	2
33	325-18	Capscrew	3	3
34	3256-26	Washer	2	2
35	2830-8	Link	2	2
36	5-0743	Spring	2	2
37	5-3496	Cylinder, 12" (Less Pins)	1	1
38	3-0295	Chain (22 Links)	2	2
39	3-0288	Link	1	1
40	3-0326	Ring	1	1
41	5-5130	Chain	2	2
42	3-4602	Chain	1	1
43	32146-2	Locknut	3	3
44	3-0175	Plate	1	1
45	323-7	Capscrew	3	3
46	5-3126	Pin, Spring	8	8
47	5-3505	Pin	1	1
Continued				

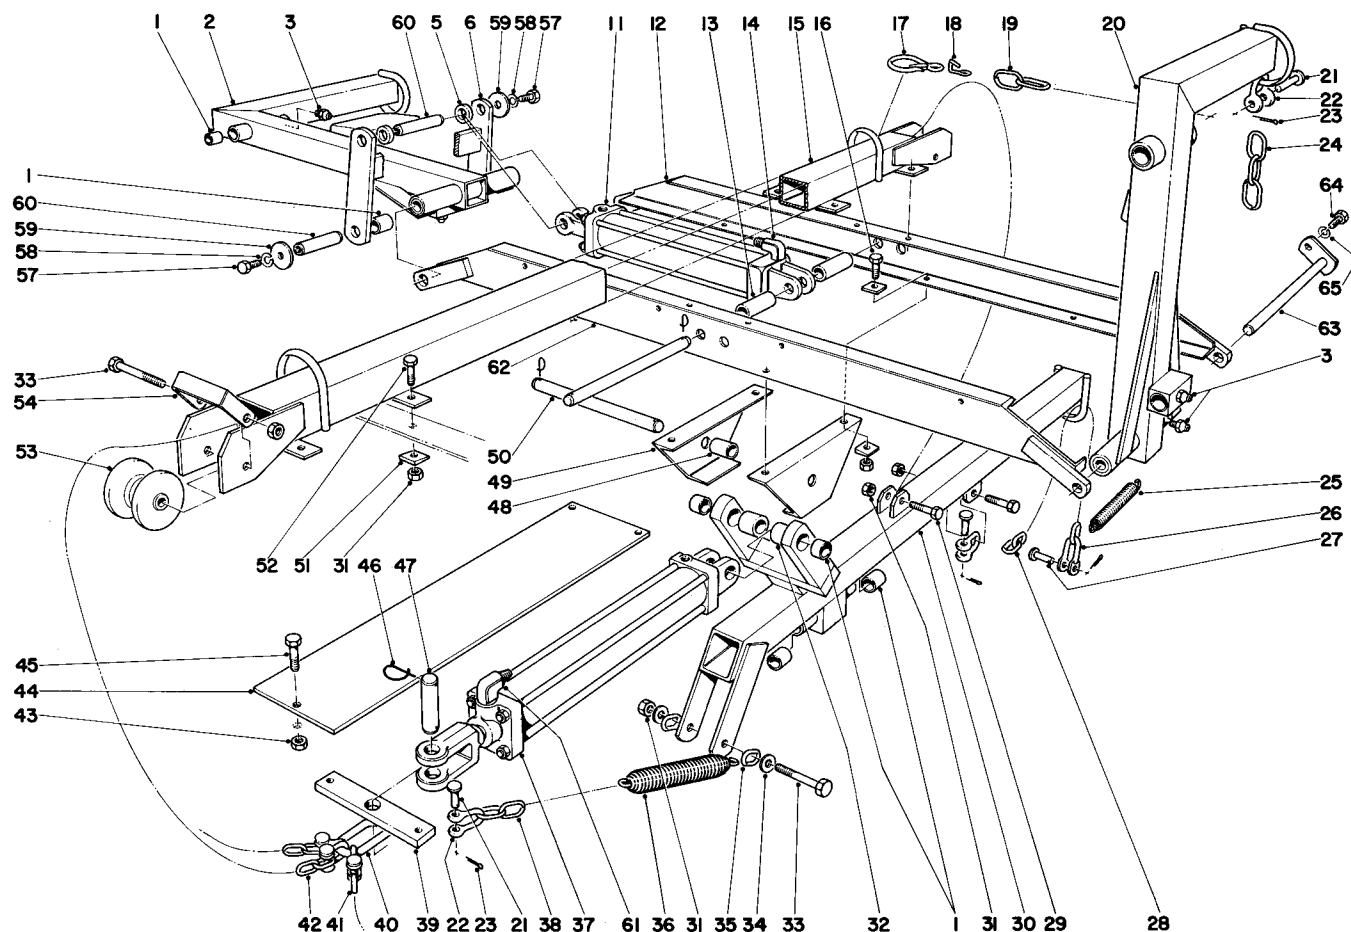

MAIN FRAME ASSEMBLY (Rear — 5 & 7 Unit)

Ref. No.	Part No.	Description	No. Used 5	No. Used 7
48	3-0145	Spacer	2	2
49	3-0146	Channel	2	2
50	3-0144	Shaft	3	3
51	3290-216	Bevel Washer	10	10
52	325-6	Capscrew	6	6
53	3-2196	Sheave	2	2
54	3-0136	Chain Keeper	2	2
57	3211-4	Capscrew	8	8

Ref. No.	Part No.	Description	No. Used 5	No. Used 7
58	3253-5	Lockwasher	8	8
59	5-1720	Washer	8	8
60	3-0128	Shaft	4	4
61	5-6560	Elbow	2	2
62	8-2180	Rear Cross Channel	1	1
63	8-0390	Pin, Bail Lift	2	2
64	322-3	Capscrew	2	2
65	3253-4	Lockwasher	2	2

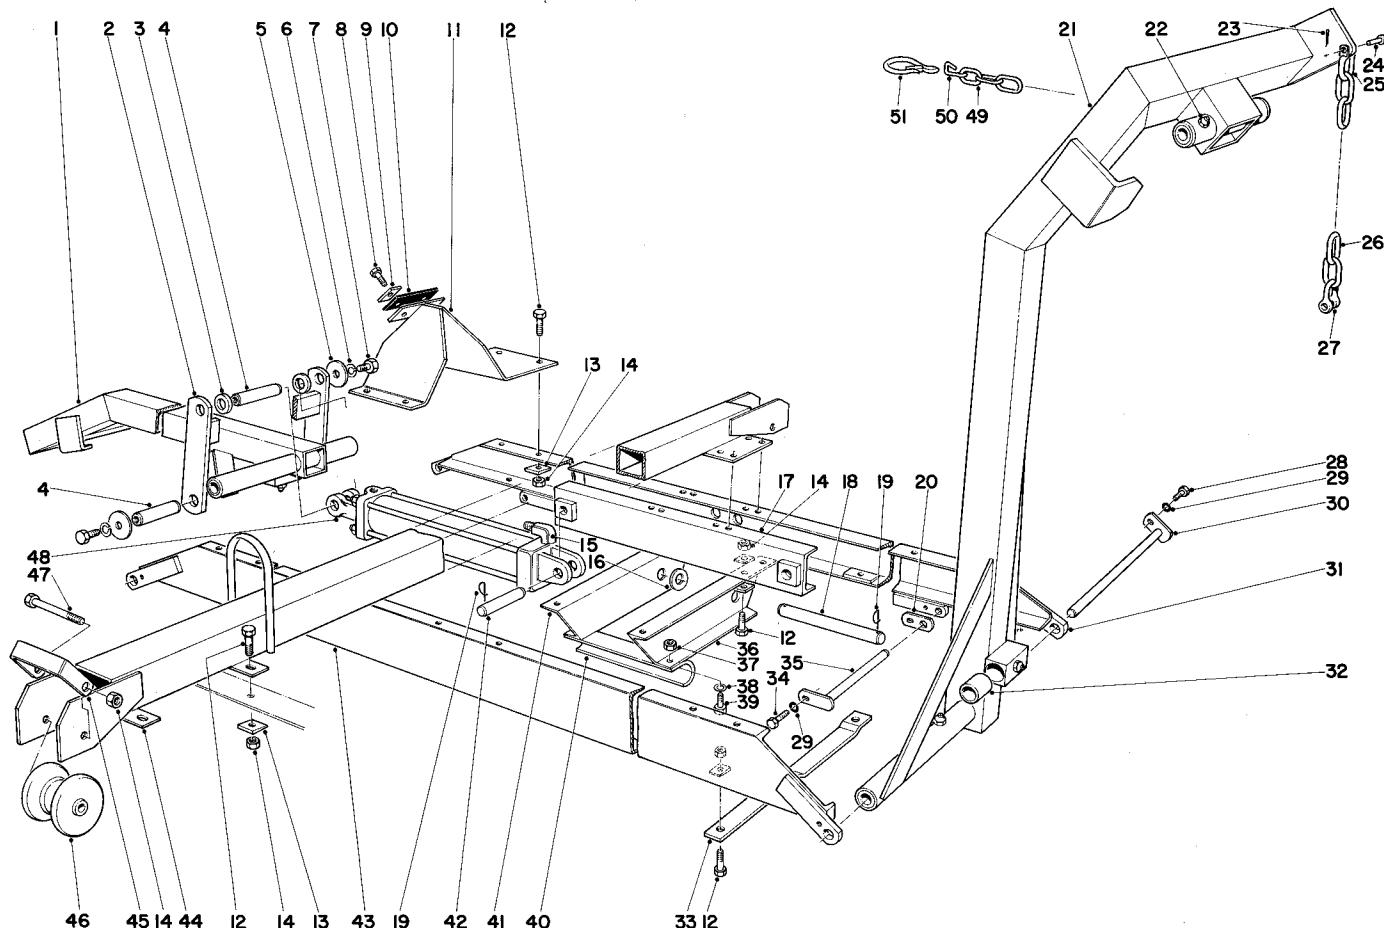


MAIN FRAME ASSEMBLY (Rear Center — 9 Unit)

Ref. No.	Part No.	Description	No. Used
1	11-4280	Lift Arm (Incl. Ref. #32)	1
2	11-4470	Link	2
3	5-3504	Spacer	4
4	11-4490	Shaft	4
5	5-1720	Washer	8
6	3253-5	Lockwasher	8
7	3211-2	Capscrew	8
8	3290-319	Machine Screw	4
9	11-5270	Washer, Bumper	4
10	11-4590	Pad, Bumper	2-6
11	11-4540	Stop, R.H.	1
*	11-4580	Stop, L.H.	1
12	325-6	Capscrew	32
13	3290-216	Bevel Washer	38
14	32146-13	Locknut	34
15	11-9800	Elbow (55)	4
16	3256-30	Washer	2
17	11-4440	Mount, Cylinder	1
18	3-0144	Shaft	1
19	5-3126	Pin, Spring	6
20	8-0410	Tab, Lift Arm	2
21	11-4270	Lift Arm (Incl. Ref. #32)	1
22	302-5	Grease Fitting	6
23	3272-10	Cotter Pin	4
24	283-10	Pin	4
25	5-2942	Shackle	2
26	3-4636	Lift Chain (7 Links)	2

Ref. No.	Part No.	Description	No. Used
27	8-0280	Shackle	2
28	322-3	Capscrew	2
29	3253-4	Lockwasher	4
30	11-4380	Lift Pin	2
31	11-4060	Center Cross Channel, Rear Position	1
32	3-0348	Bushing	16
33	11-4600	Rest, Cylinder	2
34	322-5	Capscrew	2
35	8-0390	Pin, Bail Lift	2
36	11-4160	Channel, L.H.	1
37	32146-3	Locknut	2
38	3256-24	Washer	2
39	323-6	Capscrew	2
40	11-4170	Chain Guide	1
41	11-4150	Channel, R.H.	1
42	5-3505	Pin	2
43	11-4080	Front Cross Channel, Rear Position	1
44	11-4120	Channel Brace	1
45	3-0136	Chain, Keeper	2
46	3-2196	Sheave	2
47	325-18	Capscrew	2
48	5-3496	Cylinder	2
49	11-4710	Safety Chain	1
50	286-4	Cold Shut	2
51	286-3	Snap Hook	2


*Not Illustrated

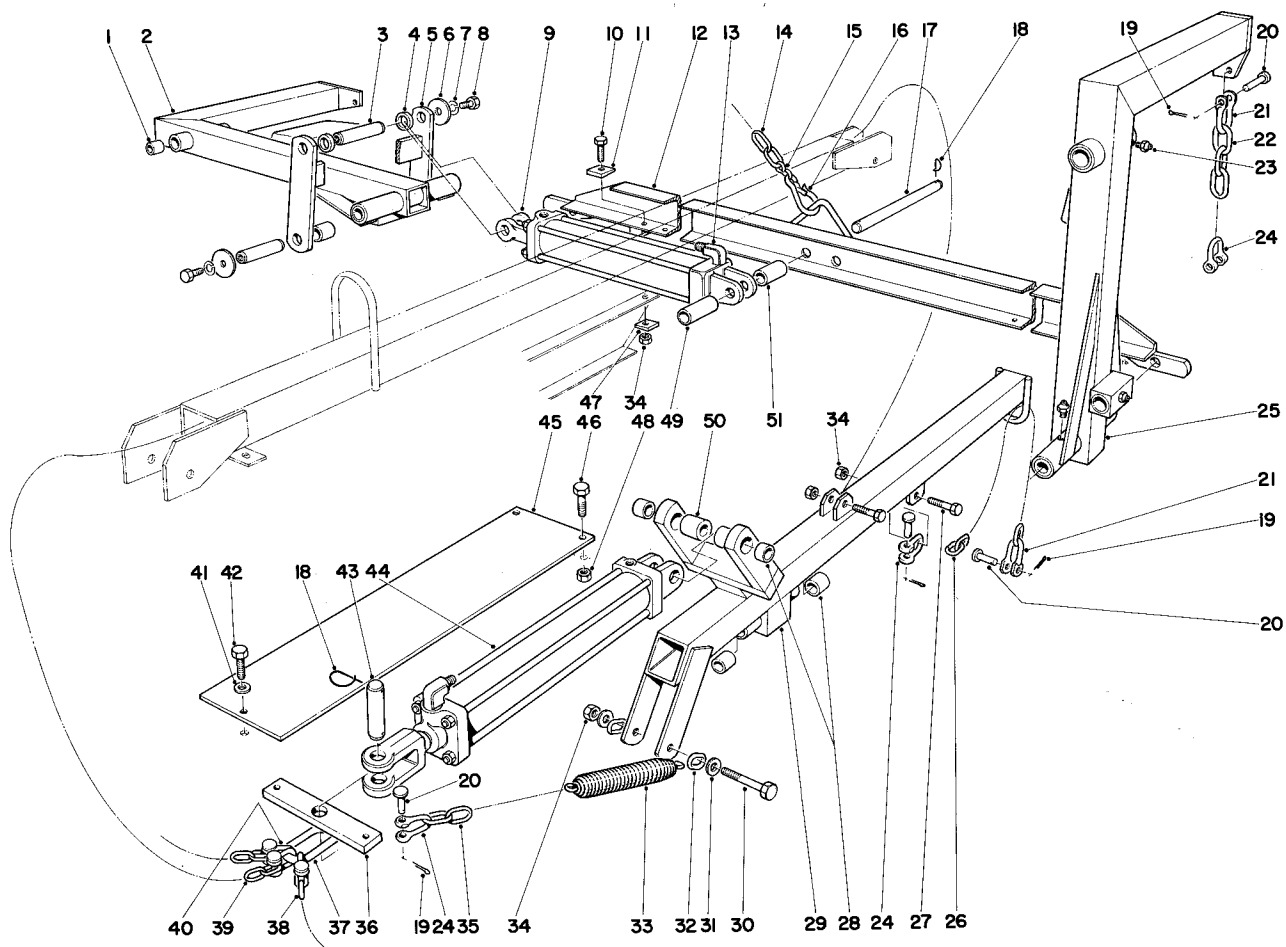

MAIN FRAME ASSEMBLY (Rear — 9 Unit)

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	16
2	11-4210	Lift Arm (Incl. Ref. #1)	1
3	3-0128	Shaft	4
4	5-3504	Spacer	4
5	10-0700	Link	2
6	5-1720	Washer	8
7	3253-5	Lockwasher	8
8	3211-2	Capscrew	8
9	5-3495	Cylinder 10"	2
10	325-10	Capscrew	2
11	11-4920	Bevel Washer	2
12	11-5210	Rear Cross Chan., Rear Pos.	1
13	5-6560	Elbow (78)	6
14	3-1365	Chain	2
15	286-4	Cold Shut	4
16	286-3	Snap Hook	4
17	3-0144	Shaft	2
18	5-3126	Pin, Spring	6
19	3272-10	Cotter Pin	11
20	283-10	Pin	11
21	5-2942	Shackle	3
22	12-0400	Lift Chain (9 Links)	2
23	302-5	Grease Fitting	7
24	8-0280	Shackle	5
25	11-4180	Lift Arm (Incl. Ref. #1)	1
26	11-6020	Lift Chain (28 Links)	1

Ref. No.	Part No.	Description	No. Used
27	325-9	Capscrew	2
28	3-0348	Bushing	4
29	11-5670	Draw Bar, Rear (Incl. Ref. #28)	1
30	325-17	Capscrew	1
31	3256-26	Washer	2
32	2830-8	Link	2
33	5-0743	Spring	2
34	32146-13	Locknut	5
35	3-0295	Chain	2
36	3-0288	Link	1
37	3-0326	Ring	1
38	11-4530	Chain, Lift	2
39	11-4520	Chain, Rear Mower	1
40	282-13	Chain, Shackle	3
41	3256-24	Washer	1
42	32104-6	Self Tapping Screw	1
43	5-3505	Pin	1
44	5-3496	Cylinder	1
45	3-0175	Plate	1
46	323-7	Capscrew	2
47	3290-216	Bevel Washer	2
48	32146-3	Locknut	2
49	11-4430	Spacer	2
50	11-5680	Spacer	2
51	11-4910	Spacer	2


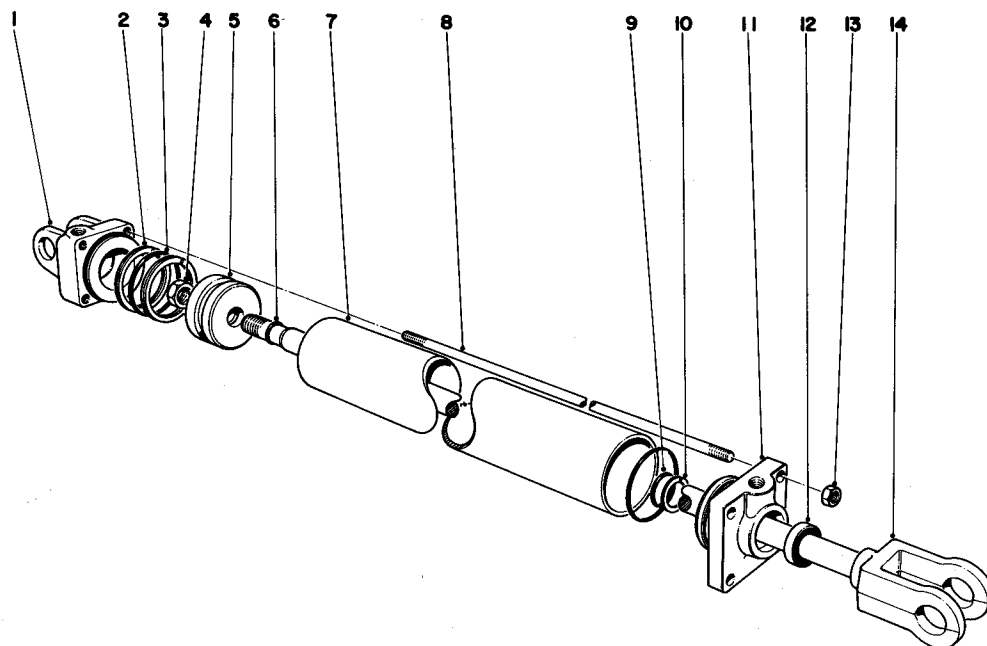


10" & 12" CYLINDERS

Ref. No.	Part No.	Description	No. Used
1	353-288	Cap, End	1
2	353-253	Seal, Piston	3
3	353-295	Washer, Backup	2
4	3219-8	Nut	1
5	353-292	Piston	1
6	353-296	"O" Ring	1
7	353-286	Barrel - 10"	1
*	353-287	Barrel - 12"	1
8	353-293	Tie Rod - 10"	4
*	353-294	Tie Rod - 12"	4

Ref. No.	Part No.	Description	No. Used
9	353-254	Seal, Rod	1
10	353-255	Washer, Backup	1
11	353-289	Cylinder Head	1
12	353-256	Rod, Wiper	1
13	3296-7	Nut	4
14	353-290	Piston Rod - 10"	1
*	353-291	Piston Rod - 12"	1
*	353-297	Seal Kit (Incl. Ref. Nos. 2, 3, 6, 9, 10 & 12)	1

*Not Illustrated

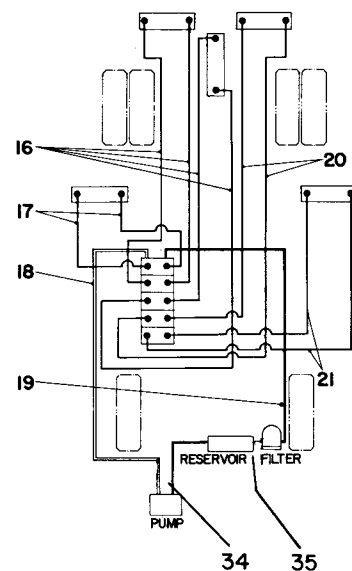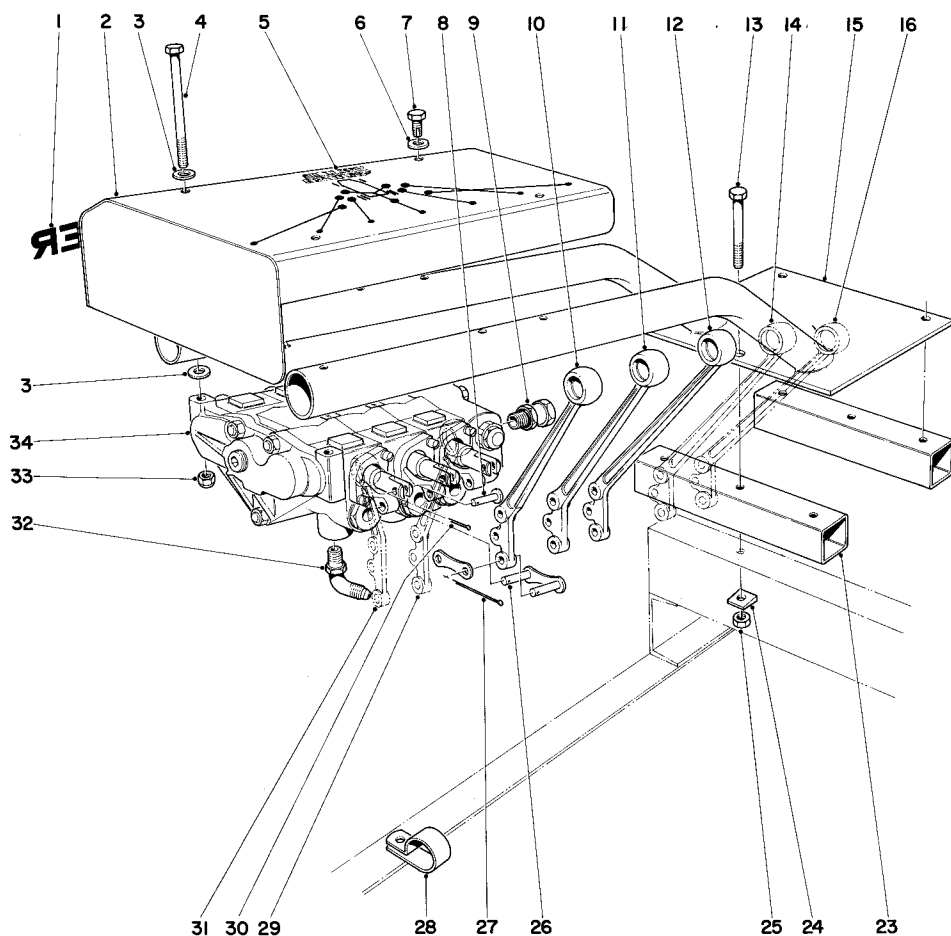


VALVE BANK (5 & 7 Unit)

Ref. No.	Part No.	Description	No. Used 5-Un.	No. Used 7-Un.
1	10-2610	Decal, Parkmaster	1	1
2	5-6600	Cover, Valve	1	1
3	3256-23	Washer	6	6
4	322-29	Capscrew	3	3
5	10-2480	Decal, Control	1	
*	10-2470	Decal, Control		1
6	3256-24	Washer	2	1
7	32104-6	Screw, Self-Tapping	2	1
8	353-322	Pin	3	5
9	353-211	Straight Swivel, Female	2	2
10	5-7840	Lever, Modified	1	1
11	353-323	Lever	1	1
12	5-7830	Lever, Modified	1	1
13	325-13	Capscrew	3	3
14	5-7860	Lever, Modified		1
15	5-7780	Valve Stand	1	1
16	5-0200	Hyd. Hose Assy. (77'')	4	4
17	5-0220	Hyd. Hose Assy. (46'')		2

Ref. No.	Part No.	Description	No. Used 5-Un.	No. Used 7-Un.
18	3-5293	High Pressure Hose	1	1
19	3-3397	Low Pressure Hose	1	1
20	5-0230	Hyd. Hose Assy. (102'')	2	2
21	5-0200	Hyd. Hose Assy. (77'')		2
22	3-0166	Tube, Spacer	2	2
23	3-0270	Spacer	1	1
24	3290-216	Bevel Washer	3	3
25	32146-13	Locknut	3	3
26	353-319	Link, Connecting	3	5
27	353-320	Pin, Cotter	3	5
28	304-61	Clip	2	2
29	5-7850	Lever, Modified		1
30	353-321	Pin, Cotter	3	5
31	353-212	Elbow, Male	6	10
32	3296-29	Locknut	3	3
33	5-8060	Valve Bank, Single	3	5
34	3-3284	Suct. Hose, Res. to Pump		1
35	3-3285	Hose, Filter to Res.		1


*Not Illustrated

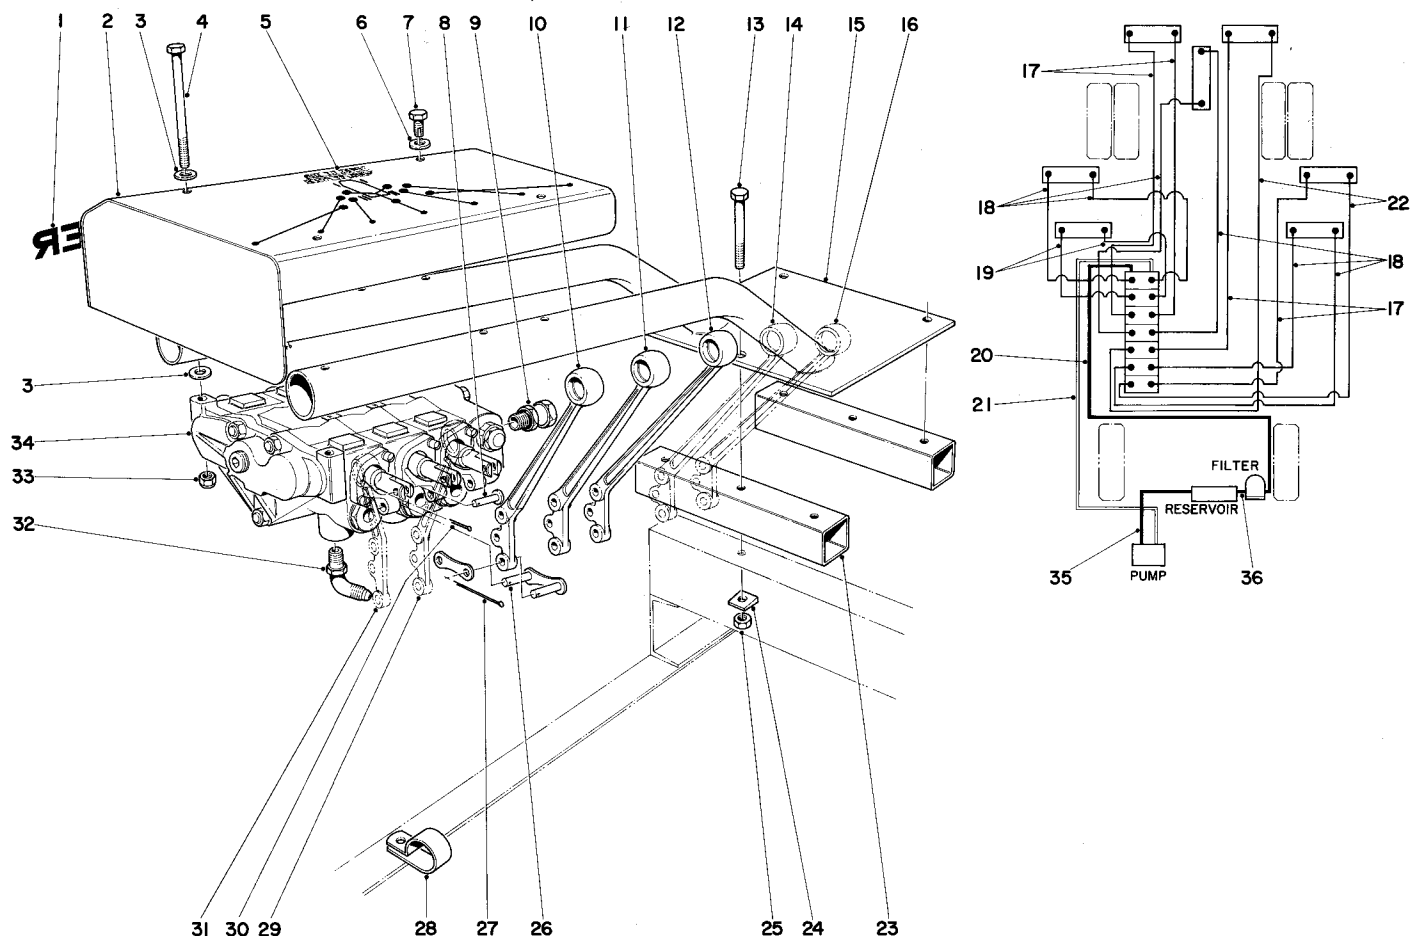

VALVE BANK (9 Unit)

Ref. No.	Part No.	Description	No. Used
1	5-7790	Decal	1
2	11-4730	Cover, Valve	1
3	3256-23	Washer	6
4	322-29	Capscrew	3
5	11-4770	Decal	1
6	3256-24	Washer	1
7	32104-6	Self Tapping Screw	1
8	353-322	Pin	7
9	353-211	Straight Swivel	2
10	5-7840	Lever, Modified	1
11	353-323	Lever	1
12	5-7830	Lever, Modified	1
13	325-13	Capscrew	3
14	5-7860	Lever, Modified	1
15	11-4750	Valve Stand	1
16	11-4780	Lever, Modified	1
17	5-0230	Hyd. Hose (102'')	4

Ref. No.	Part No.	Description	No. Used
18	5-0200	Hyd. Hose (77'')	6
19	5-0220	Hyd. Hose (46'')	2
20	3-3397	Low Pressure Hose	1
21	3-5293	High Pressure Hose	1
22	5-0210	Hyd. Hose (116'')	2
23	3-0166	Tube, Spacer	2
24	3290-216	Bevel Washer	3
25	32146-13	Locknut	3
26	353-319	Connecting Link	7
27	353-320	Cotter Pin	7
28	304-61	Hose Clamp	2
29	5-7850	Lever, Modified	1
30	353-321	Cotter Pin	7
31	11-4790	Lever, Modified	1
32	353-212	Elbow, Male	14
33	32146-5	Locknut	3
34	5-8060	Valve Bank, Single	7
35	3-3284	Suct. Hose, Res. to Pump	1
36	3-3285	Hose, Filter to Res.	1

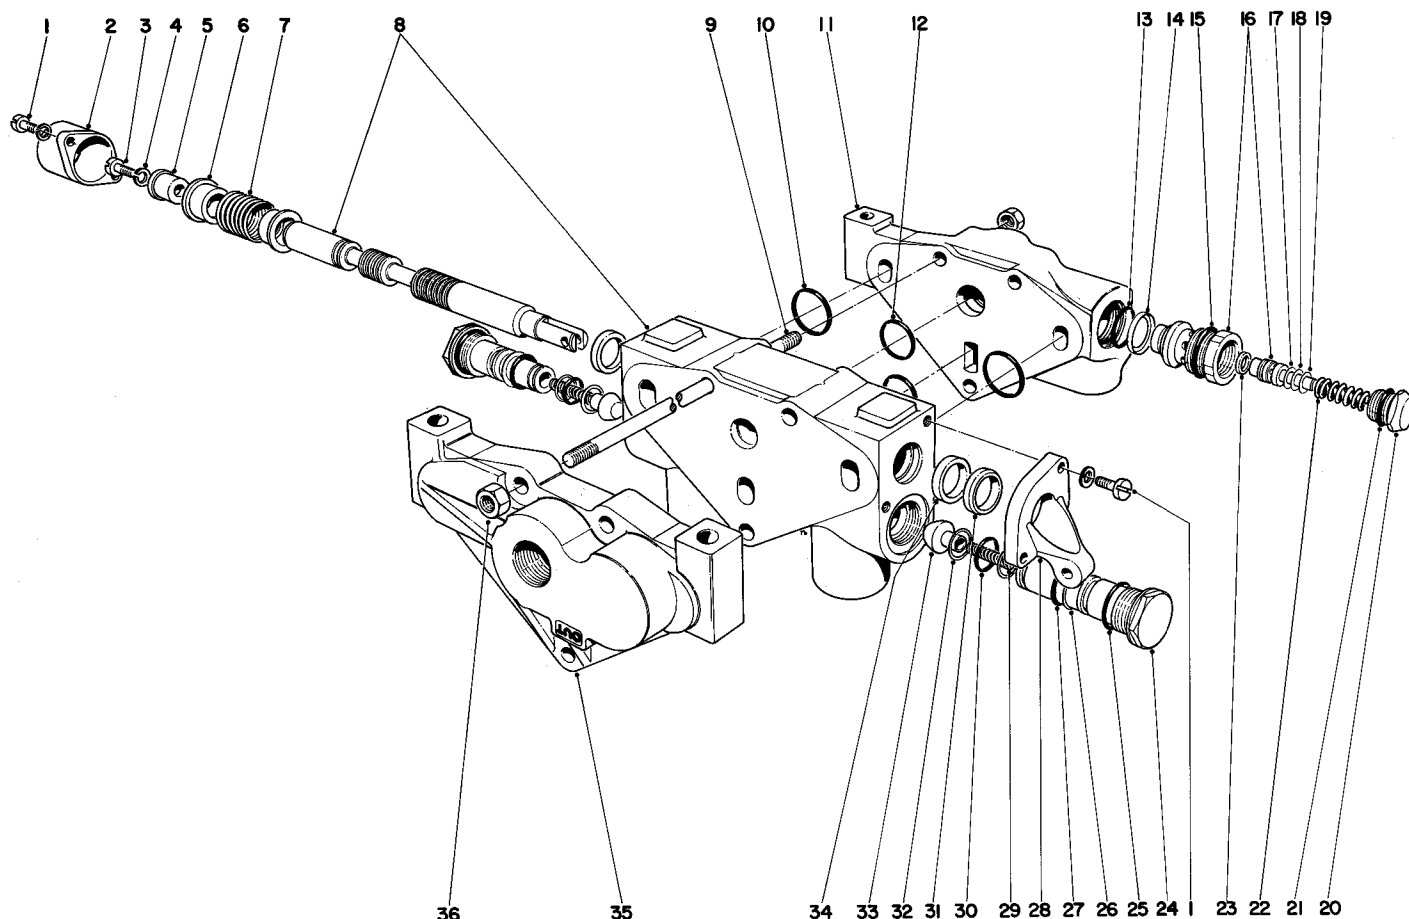


HYDRAULIC VALVE ASSEMBLY (5 & 7 Unit)

Ref. No.	Part No.	Description	No. Used 5-Un.	No. Used 7-Un.
1	353-315	Screw & Wash. Assy.	12	20
2	353-310	Bonnet	3	5
3	353-312	Screw	3	5
4	353-314	Washer	3	5
5	353-313	Spool Collar	3	5
6	353-311	Stop Collar	6	10
7	353-309	Spring	3	5
8	353-317	Housing & Spool Assy.	3	5
9	353-341	Stud	1	
*	353-342	Stud		1
10	353-339	Section Seal	8	12
11	353-337	End Cover	1	1
12	353-340	Sect. Seal, Pressure	8	12
13	353-399	O-Ring	1	1
14	353-391	Seal, Back Up	1	1
15	353-331	O-Ring Seal	1	1
16	353-336	Rel. Body & Rel. Poppet Assy. (Incl. Ref. #23)	1	1
17	353-328	Shim (.040)	1	1
18	353-329	Shim (.020)	1	1
19	353-330	Shim (.010)	1	1

Ref. No.	Part No.	Description	No. Used 5-Un.	No. Used 7-Un.
20	353-334	Relief Cap	1	1
21	353-308	O-Ring Cylinder Port Plug	1	1
22	353-333	Spring	1	1
23	353-392	Piston Ring	1	1
24	353-307	Lift Check Plug	6	10
25	353-308	O-Ring Cylinder Port	6	10
26	353-306	Back-Up Washer Cover	6	10
27	353-305	O-Ring Check	6	10
28	353-324	Handle Bracket	3	5
29	353-304	Lift Check Spring	6	10
30	353-302	O-Ring, Check Plug Seal (Inner)	6	10
31	353-318	Secondary Spool Wiper Seal	3	5
32	353-303	Back-Up Washer (Inner)	12	20
33	353-301	Lift Check Poppet	6	10
34	353-316	Spool Seal	6	10
35	353-338	End Cover	1	1
36	353-343	Stop Nut	6	6


*Not Illustrated

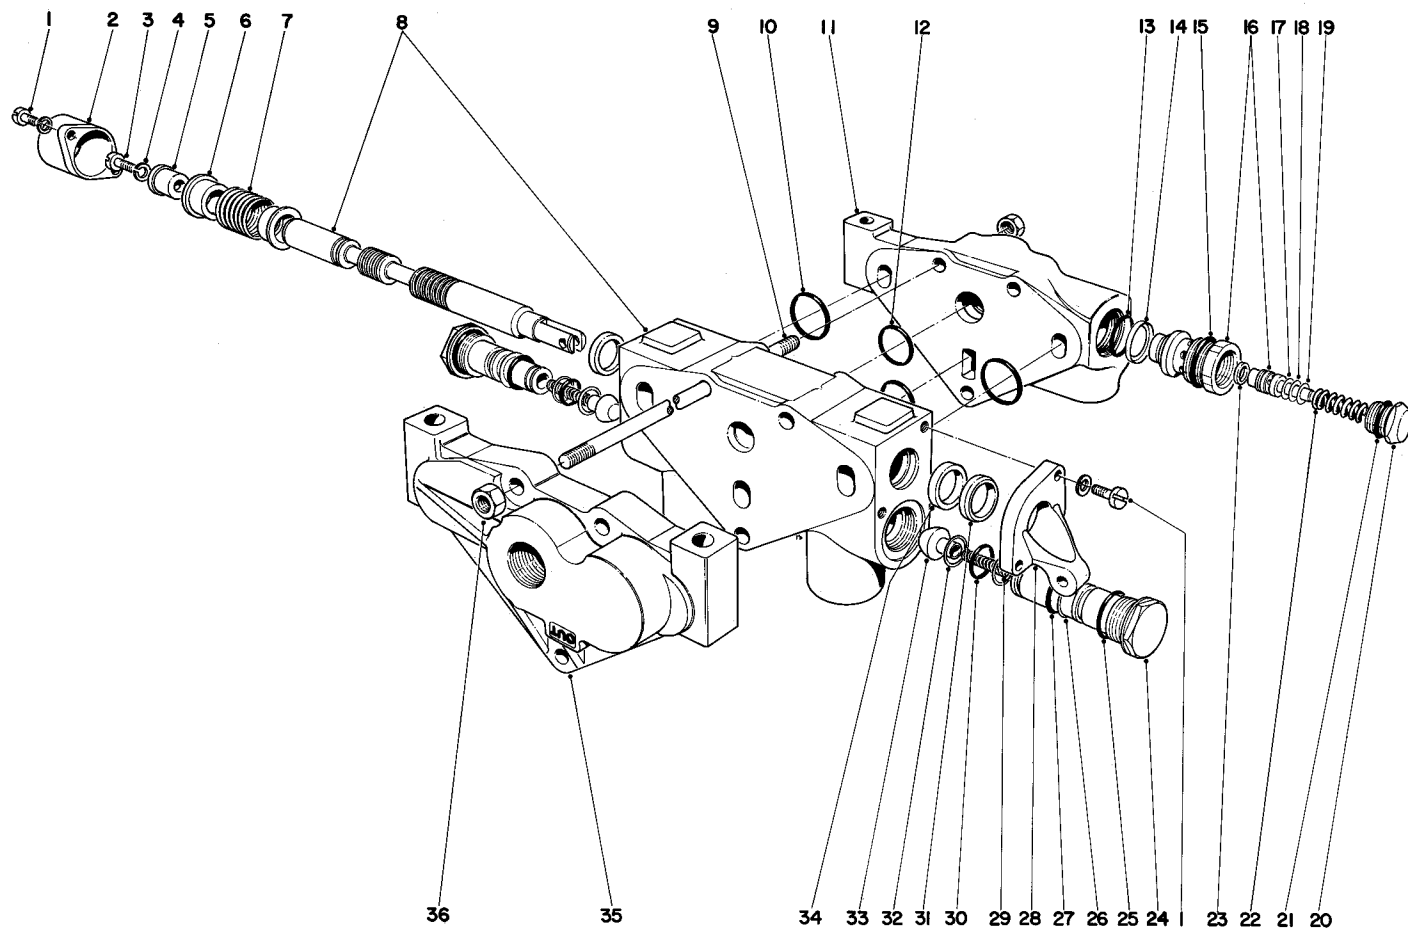

HYDRAULIC VALVE ASSEMBLY (9 Unit)

Ref. No.	Part No.	Description	No. Used
1	353-315	Screw & Washer Assy.	28
2	353-310	Bonnet	7
3	353-312	Screw	7
4	353-314	Washer	7
5	353-313	Spool Collar	7
6	353-311	Stop Collar	14
7	353-309	Spring	7
8	353-317	Housing & Spool Assy.	7
9	353-395	Stud	3
10	353-339	Section Seal	16
11	353-337	End Cover	1
12	353-340	Section Seal, Pressure	16
13	353-399	O-Ring	1
14	353-391	Seal, Back Up	1
15	353-331	O-Ring Seal	1
16	353-336	Rel. Body & Rel. Poppet Assy. (Incl. Ref. #23)	1
17	353-328	Shim (.040)	1
18	353-329	Shim (.020)	1
19	353-330	Shim (.010)	1

Ref. No.	Part No.	Description	No. Used
20	353-334	Relief Cap	1
21	353-308	O-Ring Cylinder Port Plug	1
22	353-398	Spring	1
23	353-392	Piston Ring	1
24	353-307	Lift Check Plug	14
25	353-308	O-Ring Cylinder Port	14
26	353-306	Back-Up Washer Cover	14
27	353-305	O-Ring Check	14
28	353-324	Handle Bracket	7
29	353-304	Lift Check Spring	14
30	353-302	O-Ring, Check Plug Seal (Inner)	14
31	353-318	Secondary Spool Wiper Seal	7
32	353-303	Back-Up Washer (Inner)	28
33	353-301	Lift Check Poppet	14
34	353-316	Spool Seal	14
35	353-338	End Cover	1
36	353-343	Stop Nut	6

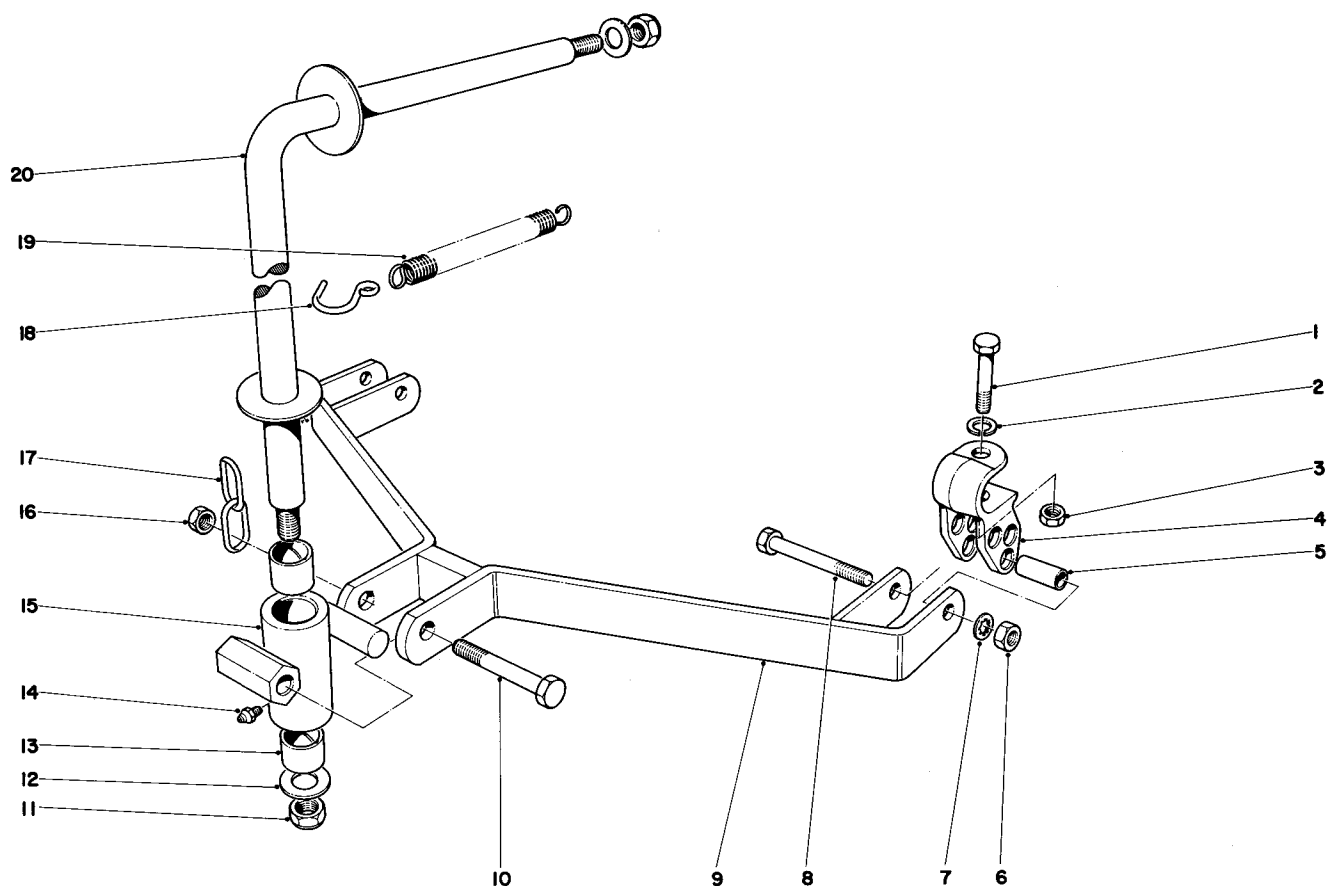

DRAWBAR ASSEMBLY (5 & 7 Unit)

Ref. No.	Part No.	Description	No. Used 5-Un.	No. Used 7-Un.	No. Used 9-Un.
1	324-10	Capscrew	10	14	18
2	3253-6	Lockwasher	10	14	18
3	3217-8	Nut	10	14	18
4	5-1090	Clamp, Drawbar	10	14	18
5	5-1091	Spacer	10	14	18
6	3217-9	Nut	10	14	18
7	3254-4	Lockwasher	10	14	18
8	325-14	Capscrew	10	14	18
9	3-9280	Drawbar	5	7	9
10	325-17	Capscrew	5	7	9
11	3296-50	Locknut	10	14	18

Ref. No.	Part No.	Description	No. Used 5-Un.	No. Used 7-Un.	No. Used 9-Un.
12	3-8448	Washer	10	14	18
13	3-0348	Bushing	10	14	18
14	302-5	Grease Fitting	5	7	9
15	1-6559	Housing (Incl. Ref. #13)	5	7	9
16	32146-13	Locknut	5	7	9
17	3-0293	Chain	2	4	6
18	3-2198	S-Hook	2	4	7
19	5-1706	Spring	5	7	9
20	3-6530	Bail, Lift	5	7	9
*	3-1571	Bail Lift			9

NOTE: When used on 9 unit, item No. 9 to be rotated 180 degrees.

*Not Illustrated

THE TORO PROMISE

It is Toro's policy to design and produce Toro products to provide our customers with a high level of performance and durability in normal operation. Our products, however, are produced in high volume, and it is inevitable that occasionally a unit will reach a customer with a defect in materials or workmanship which causes that unit to fall below the normal

high level of Toro performance. Invariably, such a defect will be noticed in a residential product within one year, and in an institutional product within ninety days after purchase.

Recognizing this possibility, Toro has established a simple guarantee policy and procedure that is intended to assure customer satisfaction. This guarantee statement is as follows:

The Toro Promise

Toro Manufacturing Corporation promises to repair any TORO product for the original purchaser if defective in materials or workmanship. The following time periods from date of purchase apply:

Residential products 1 year
Residential products used commercially . . 45 days
Institutional products 90 days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to a TORO Service Dealer, or any institutional product to a TORO distributor.

Should you feel that a product is defective, and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any TORO dealer or distributor, but preferably the dealer or distributor from whom you purchased the product.
2. He will instruct you to either return the product to him, or tell you the name and address of your nearest TORO Service Dealer if the product is to be returned to such dealer.
3. Take the product and your original sales slip, or other evidence of purchase date, to the servicing dealer.

4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you. If for any reason you are dissatisfied with the dealer's analysis of the defect or the service he performs, we urge you to contact us. Write:

TORO "Customer Care" Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

IMPORTANT ORDERING INSTRUCTIONS

Repair parts are available from your TORO distributor. To insure getting correct parts without delay, furnish following information:

1. Serial number of your frame as stamped on the rear cross channel.
2. Part number, description, and quantity of each part required.
3. State whether parts should be shipped by mail or express. All repair parts are shipped F. O. B. factory.
4. Name and address where parts are to be shipped.
5. Do not order by reference number; use part number only.

[illegible]