



Remote Lock and Lift Kit

Groundsmaster[®] 3000D Attachment

Model No. 30727-90001 & Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.


Contents

Description	Page	Description	Page
LH Lock and Lift Assembly	3	Electrical, Cover, and Switch Assembly	5
RH Lock and Lift Assembly	4	Electrical Schematic	6

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

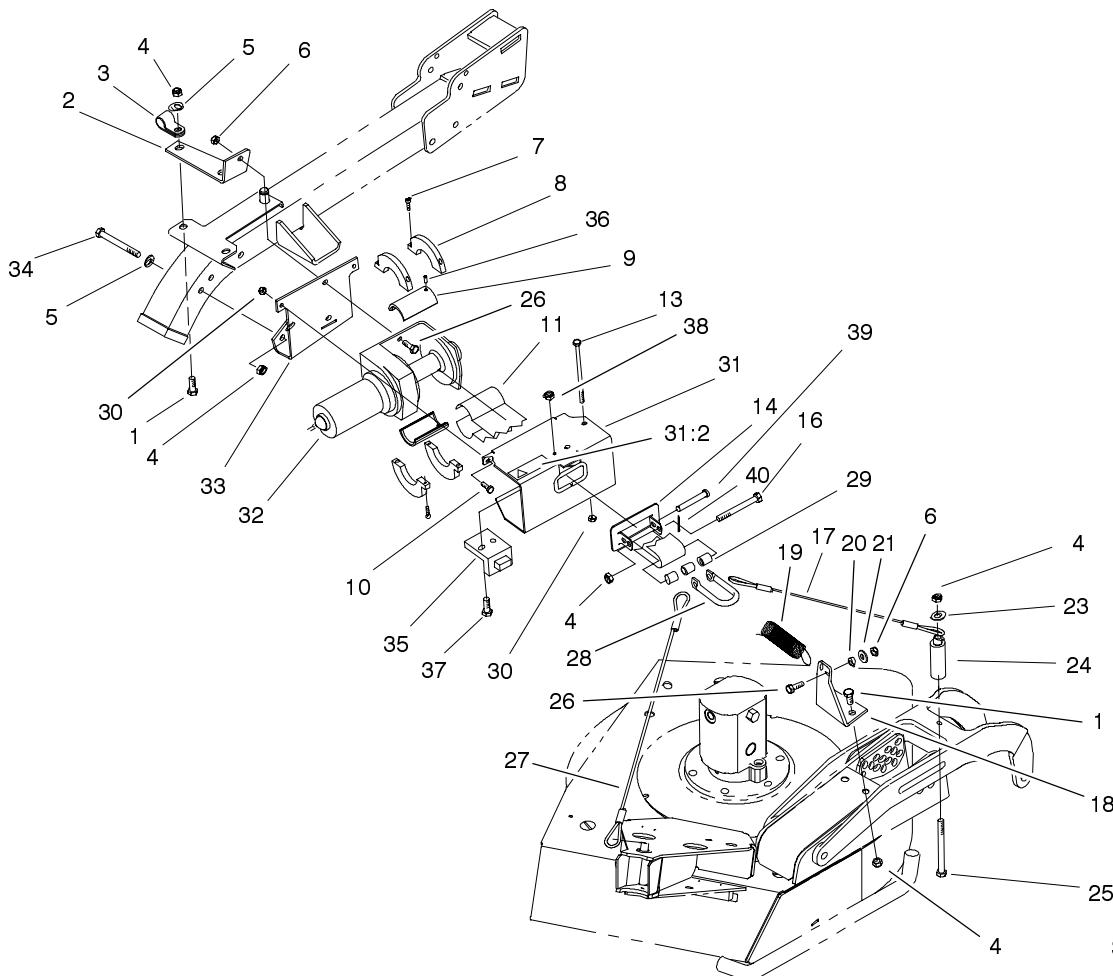


Sheet No.: 2

T-3239

LH Lock and Lift Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	323-6	4	Screw-HH	30	3296-42	3	Nut-Lock NI
2	99-5754-03	1	Bracket-Support, LH	31	100-1542	1	Cover W/ Decal
3	2412-81	1	Clamp	31:2	93-6674	1	Decal - Warning
4	3296-39	8	Nut-Lock, NI	32	100-3900	1	Winch ASM
5	3256-24	5	Washer-Flat	33	98-5189-03	1	Mount-Winch, LH
6	3296-29	3	Nut-Lock	34	323-15	2	Screw-HH
7	3274-14	4	Screw-HSH	35	94-9105	1	Switch & Roller Bracket ASM
8	100-1550	4	Collar - Lock	36	3245-31	1	Screw-HS
9	100-1551	2	Spool-Half	37	32144-1	2	Screw-Taptite
10	321-5	2	Screw-HH	38	3296-2	2	Nut-Lock
11	100-1546	1	Strap-Winch	39	283-52	1	Pin-Clevis
13	321-36	1	Screw-HH	40	3272-4	1	Pin-Cotter
14	100-3397-03	1	Plate - Stop, Switch				
16	323-15	1	Screw-HH				
17	100-3905	1	Cable-Lift, LH Rear				
18	100-1545-03	1	Bracket-Spring				
19	88-6460	1	Spring - Extension				
20	92-6290	1	Spacer				
21	3256-3	1	Washer-Flat				
23	3256-4	1	Washer-Flat				
24	99-5768	1	Spacer - Cable, Rear				
25	323-17	1	Screw-HH				
26	322-5	3	Screw-HH				
27	100-3904	1	Cable - Lift, LH Front				
28	5-2942	1	Shackle				
29	100-1548	3	Spacer				

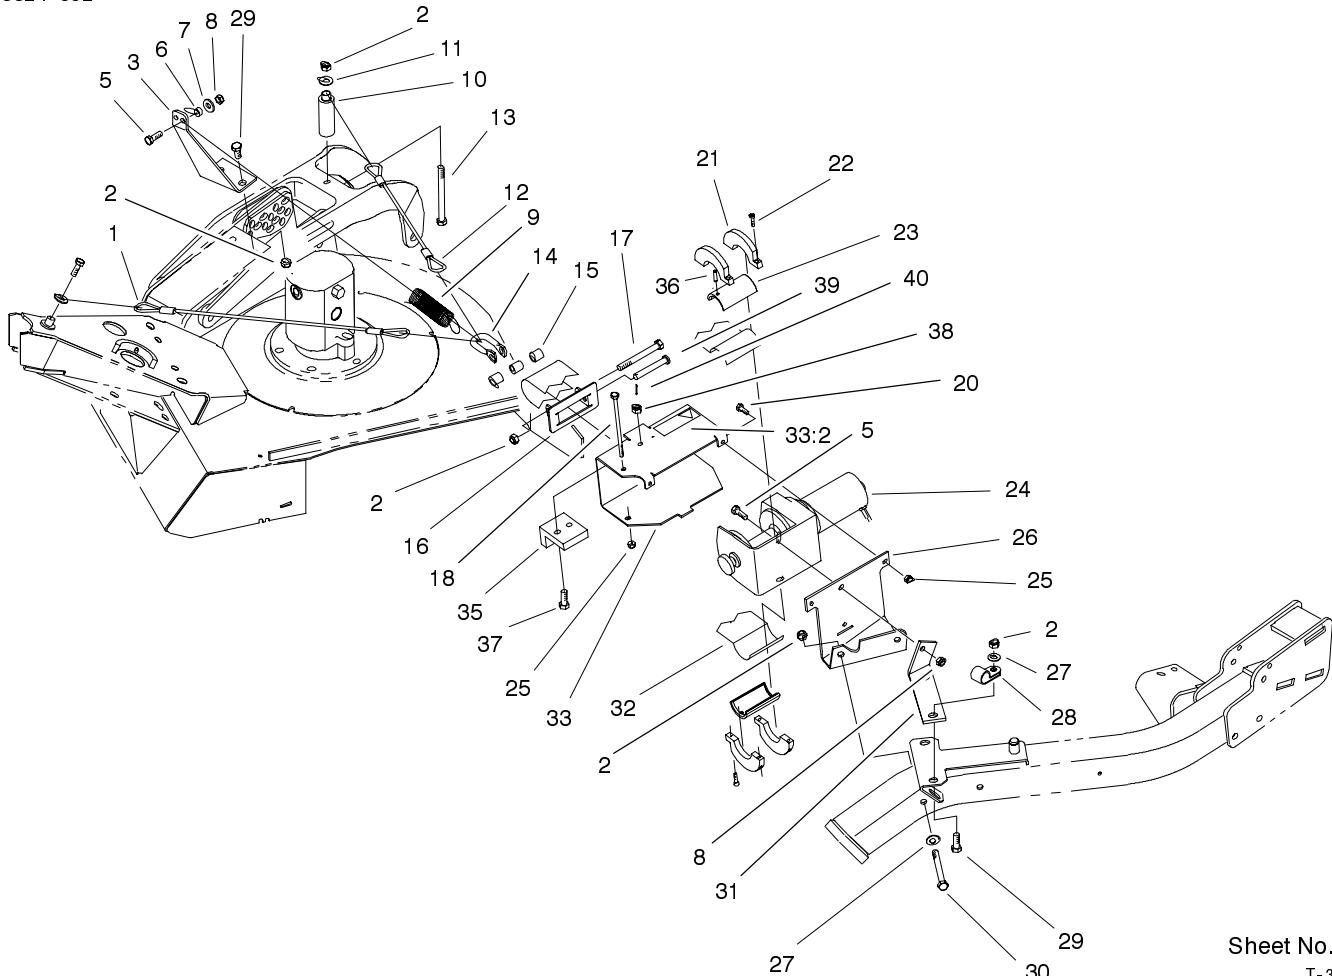


Sheet No.: 3
T-3240

RH Lock and Lift Assembly

Ref. No.	Part No.	Qty.	Description
1	100-3906	1	Cable - Lift, RH Front
2	3296-39	8	Nut-Lock, NI
3	100-1545-03	1	Bracket-Spring
5	322-5	3	Screw-HH
6	92-6290	1	Spacer
7	3256-3	1	Washer-Flat
8	3296-29	3	Nut-Lock
9	88-6460	1	Spring - Extension
10	99-5768	1	Spacer - Cable, Rear
11	3256-4	1	Washer-Flat
12	100-3907	1	Cable - Lift, RH Rear
13	323-17	1	Screw-HH
14	5-2942	1	Shackle
15	100-1548	3	Spacer
16	100-3397-03	1	Plate - Stop, Switch
17	323-15	1	Screw-HH
18	321-36	1	Screw-HH
20	321-5	2	Screw-HH
21	100-1550	4	Collar - Lock
22	3274-14	4	Screw-HSH
23	100-1551	2	Spool-Half
24	100-3900	1	Winch ASM
25	3296-42	3	Nut-Lock NI
26	98-5193-03	1	Mount-Winch,RH
27	3256-24	5	Washer-Flat
28	2412-81	1	Clamp

Ref. No.	Part No.	Qty.	Description
29	323-6	4	Screw-HH
30	323-15	2	Screw-HH
31	99-5752-03	1	Bracket-Support, RH
32	100-1546	1	Strap-Winch
33	100-1542	1	Cover W/ Decal
33:2	93-6674	1	Decal - Warning
35	94-9105	1	Switch & Roller Bracket ASM
36	3245-31	1	Screw-HS
37	32144-1	2	Screw-Taptite
38	3296-2	2	Nut-Lock
39	283-52	1	Pin-Clevis
40	3272-4	1	Pin-Cotter

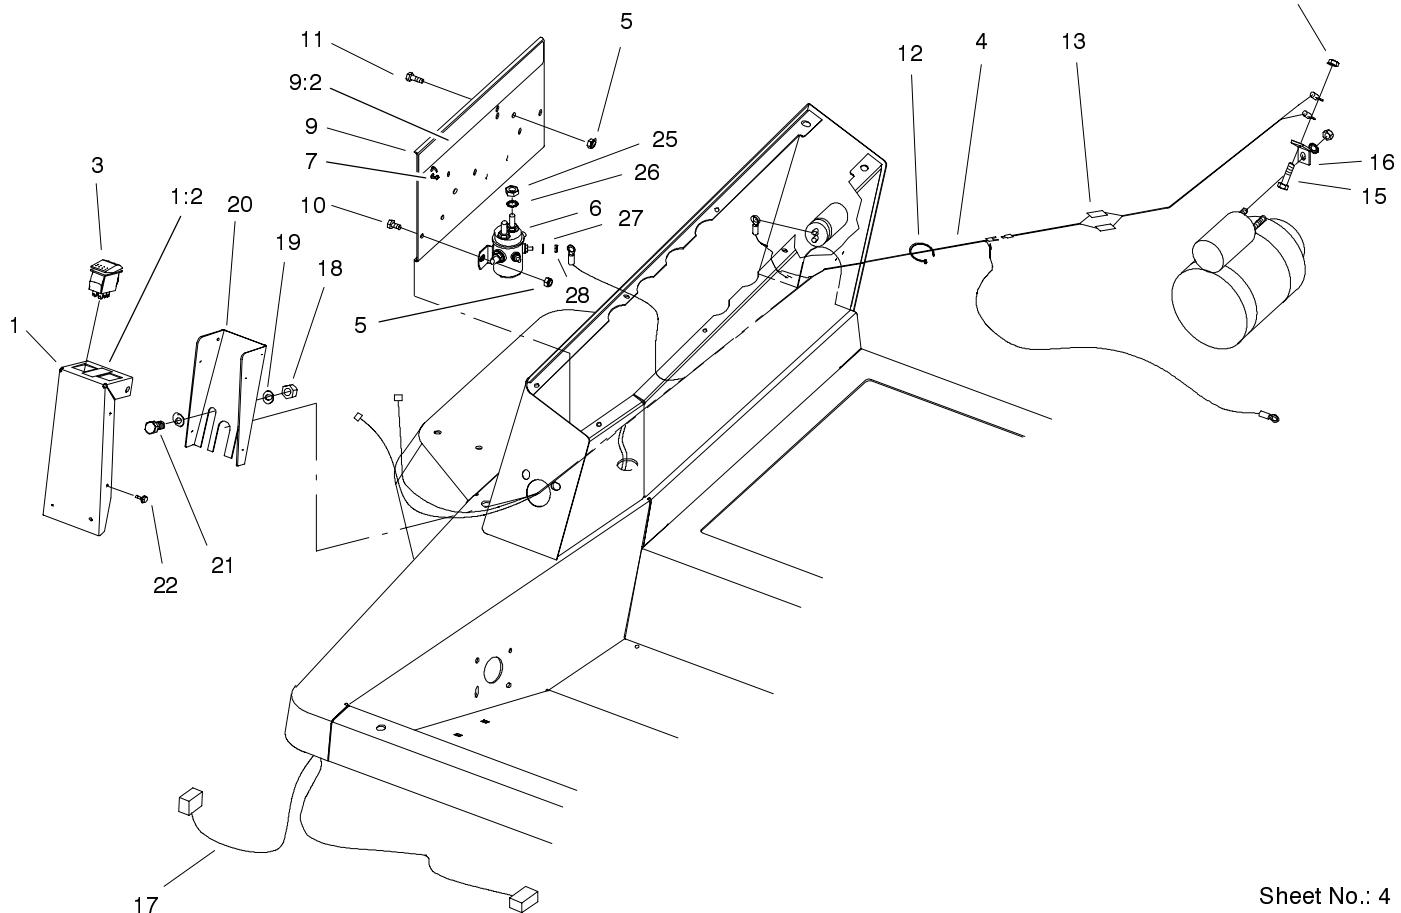


Sheet No.: 4

T-3241

Electrical, Cover, and Switch Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-1533	1	Cover W/ Decal				
1:2	100-1534	1	Decal-Lift				
3	100-1535	2	Switch				
4	100-3388	1	Harness-Wire, Engine				
5	3296-42	10	Nut-Lock NI				
6	100-1536	4	Solenoid-12 Volt Dc				
7	3290-378	2	Tie-Cable				
9	100-1539	1	Plate W/ Decal				
9:2	100-1537	1	Decal-Relay				
10	321-2	8	Screw-HH				
11	321-4	2	Screw-HH				
12	3290-379	10	Tie-Cable				
13	99-8878	1	Harness-Wire, Breaker				
14	3296-29	1	Nut-Lock				
15	322-6	1	Screw-HH				
16	100-1540	1	Strap-Bus Bar				
17	100-3387	1	Harness-Wire, Winch				
18	3296-48	2	Nut-Lock NI				
19	3256-25	4	Washer-Flat				
20	99-5756-03	1	Mount-Switch				
21	324-4	2	Screw-HH				
22	32144-1	6	Screw-Taptite				
25	3219-2	16	Nut-Hex				
26	3255-8	16	Washer-Lock/Ext				
27	3255-5	8	Washer-Lock/Ext				
28	3219-14	8	Nut-Hex				

Electrical Schematic

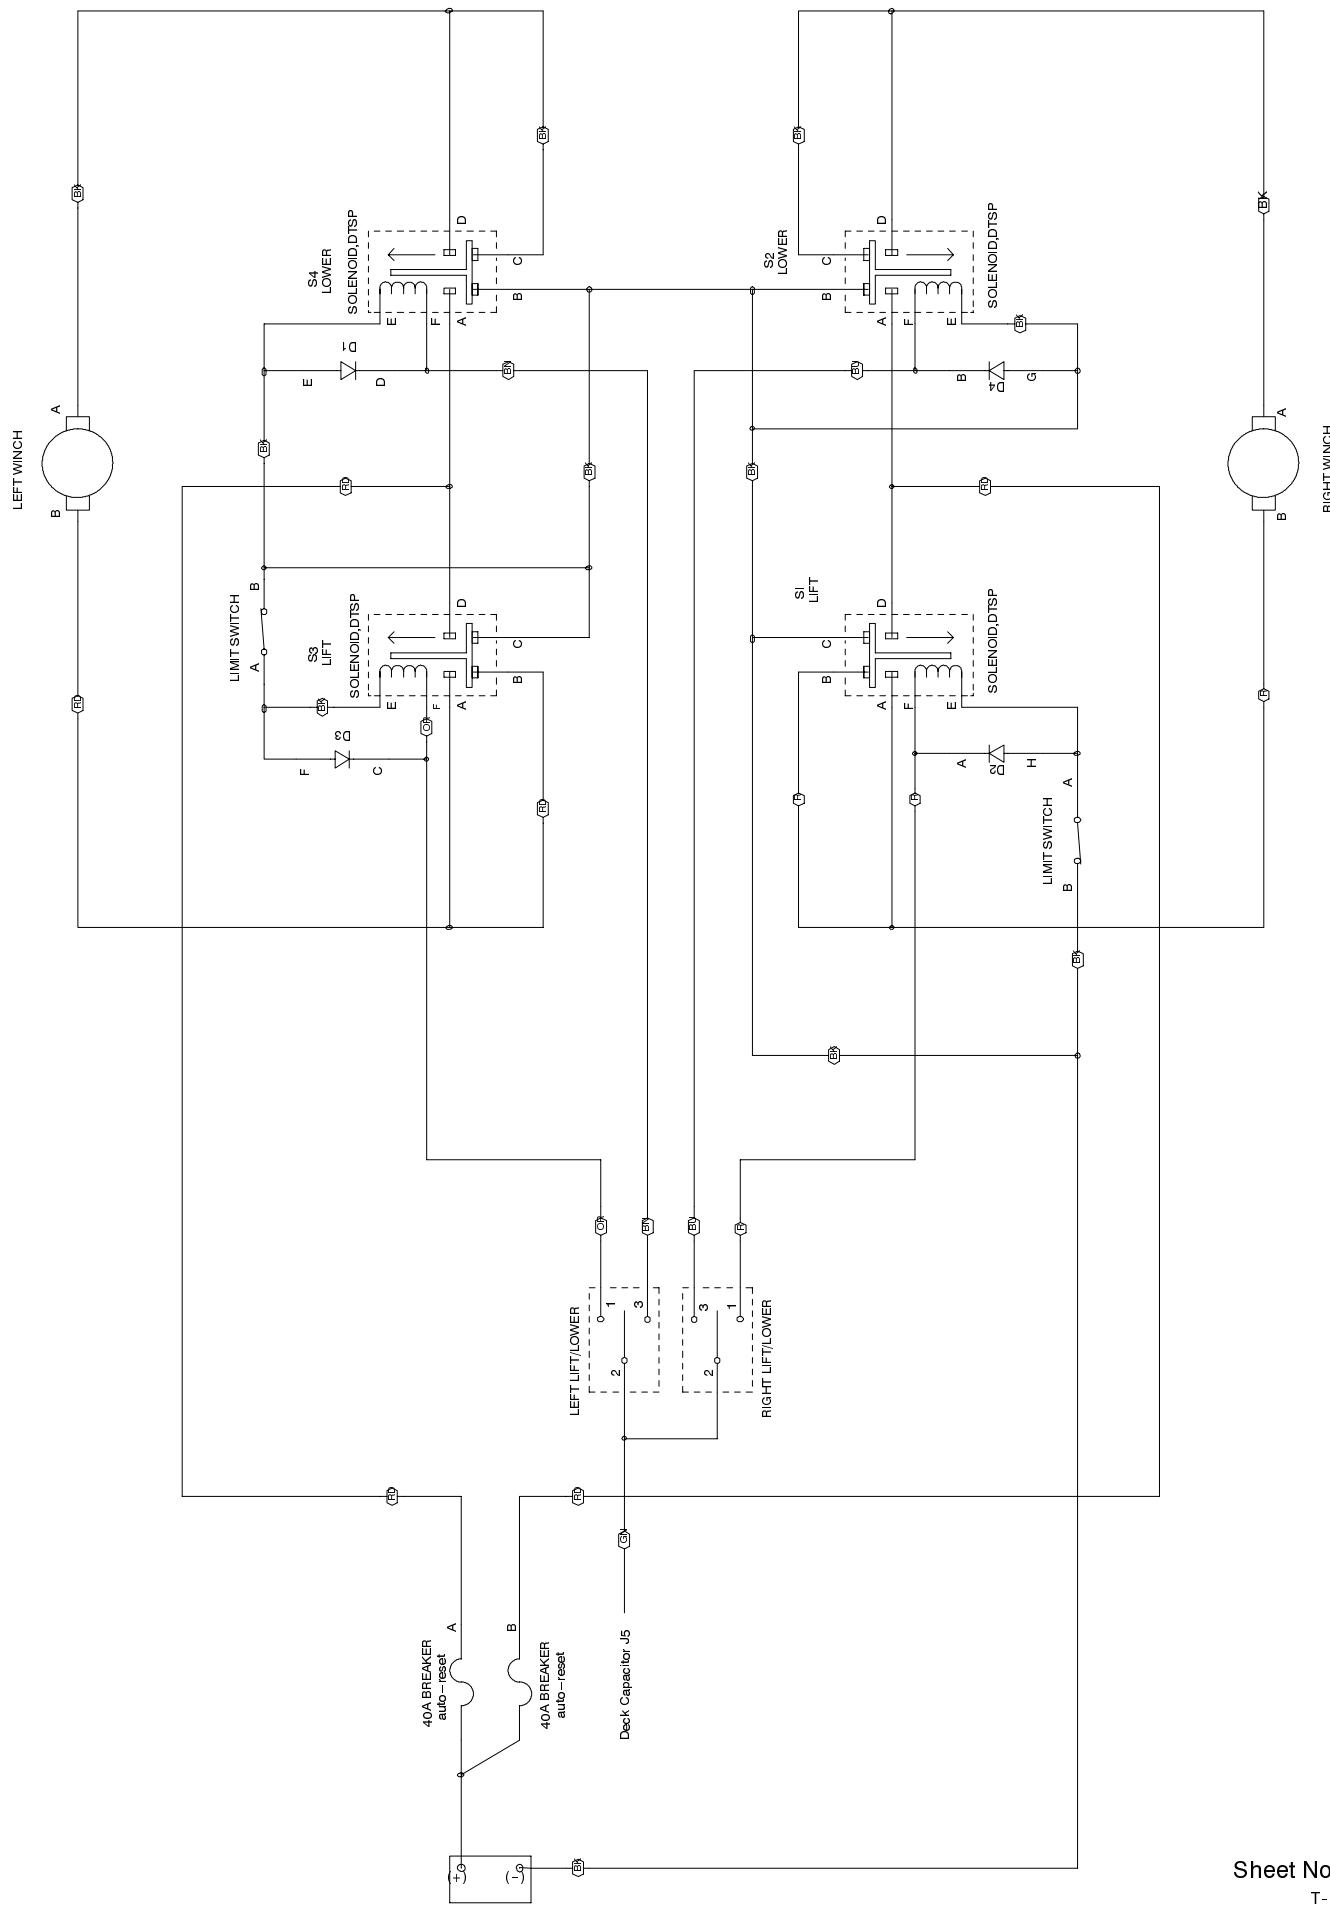

Maintenance Record

