



Count on it.

Parts Catalog

52in (5 GPM) Sprayer Spray Master Max

Model No. 34235—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame Assembly 4

Engine Assembly 6

Hydraulic Assembly 8

Park Brake Assembly 10

Electrical Assembly 12

Motion Control Assembly 14

Tire and Wheel Assembly 16

Fuel Assembly 18

Fuel Tank Assembly No. 140-4343 20

Spray System Assembly 22

Tank Hose Reel Assembly 24

Manifold Assembly 26


Spray Boom Assembly 28

Liquid Valve Assembly 30

Hopper Assembly 32

Attachments and Accessories 34


Main Frame Assembly

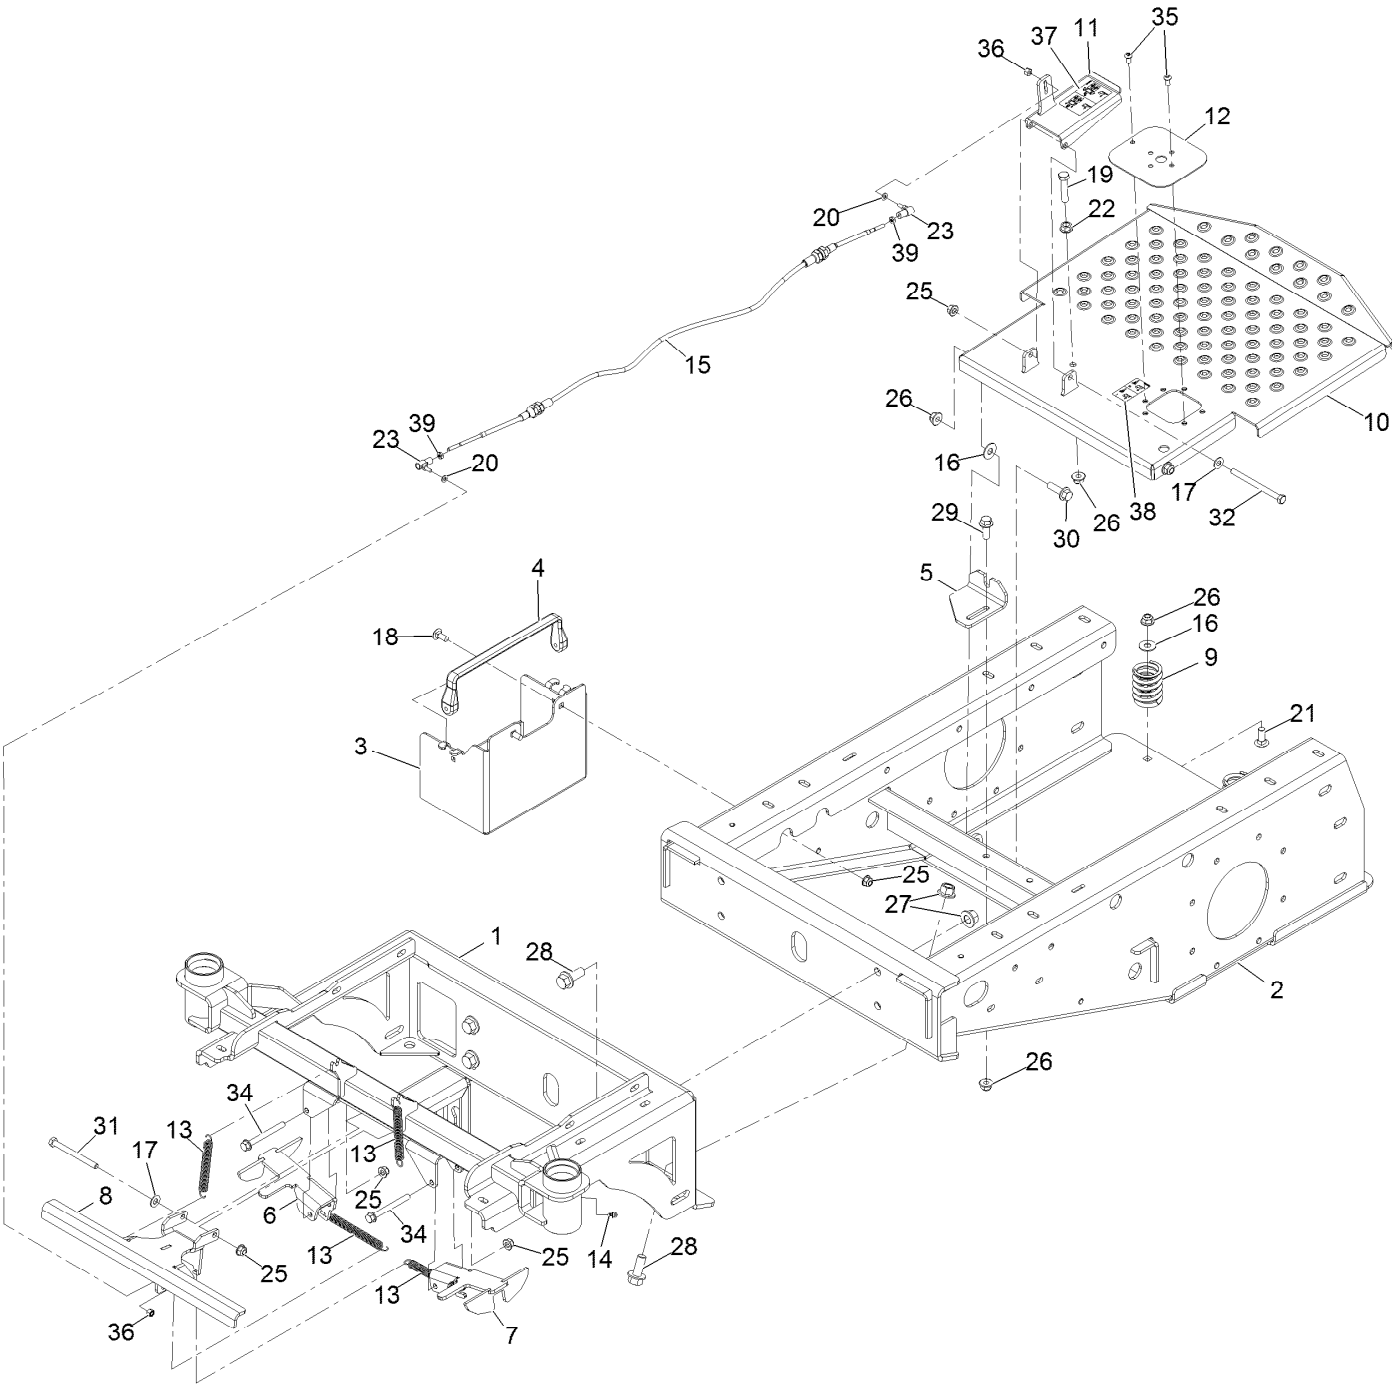

Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5179	1	Frame-Front	23	135-5682	2	Ball Joint-SS
2	135-5171	1	Frame-Rear	25	135-6109	6	Nut-Hex Flg 5/16-18 Nyloc SS
3	142-3038	1	Box-Battery	26	135-6110	7	Nut-Hex Flg 3/8-16 SS W/Patch SS
4	142-1748	1	Strap, Tarp	27	135-6111	6	Nut-Hex Flg 3/8-16 SS W/Patch SS
5	135-5494	1	Bracket-Cable, Lower	28	135-6207	6	Screw-HHF 5/16-18 X 1 1/4 SS
6	135-5195	1	Wing-Capture, Rt	29	135-6208	1	Screw-HHF 3/8-16 X 1 Serrated SS
7	135-5194	1	Wing-Capture, Lt	30	135-6211	2	Screw-HHF 3/8-16 X 1 1/4 Serrated SS
8	135-5369	1	Capture-Lcs	31	135-6217	1	Screw-HH 5/16-18 X 3 1/2 SS
9	135-5654	3	Spring-Compression	32	135-6218	1	Screw-HH 5/16-18 X 4 SS
10	135-7502	1	Plate-Foot	34	135-6222	2	Screw-HHF 5/16-18 X 3 Serrated SS
11	135-5191	1	Pedal-Foot	35	135-6367	2	Screw-Button Head 1/4-20 X 1/2 SS
12	135-5561	1	Panel-Switch, Foot	36	HDW05856	2	Nut-Hex Nyl Ins #10-32 Unf
13	135-5652	4	Spring-Extension	37	135-6430	1	Decal-Lock, Caster
14	302-63	2	Zerk	38	135-6728	1	Decal-Button, Foot (Spray)
15	135-5644	1	Cable-Caster, Locking	39	520-0019	2	Nut-Hex Jam #10-32 Unf
16	1126	5	Washer-Flat				
17	107-0279	2	Washer				
18	126-0695	2	Screw-Carriage 5/16-18 X 3/4 SS				
19	126-0710	1	Screw-HHF 3/8-16 X 1.75 SS				
20	126-0759	2	Washer-Flat				
21	126-0980	3	Bolt-Carriage 3/8-16 X 1 SS				
22	135-6806	1	Nut-Hex Flange 3/8-16 Serrated SS				


Engine Assembly

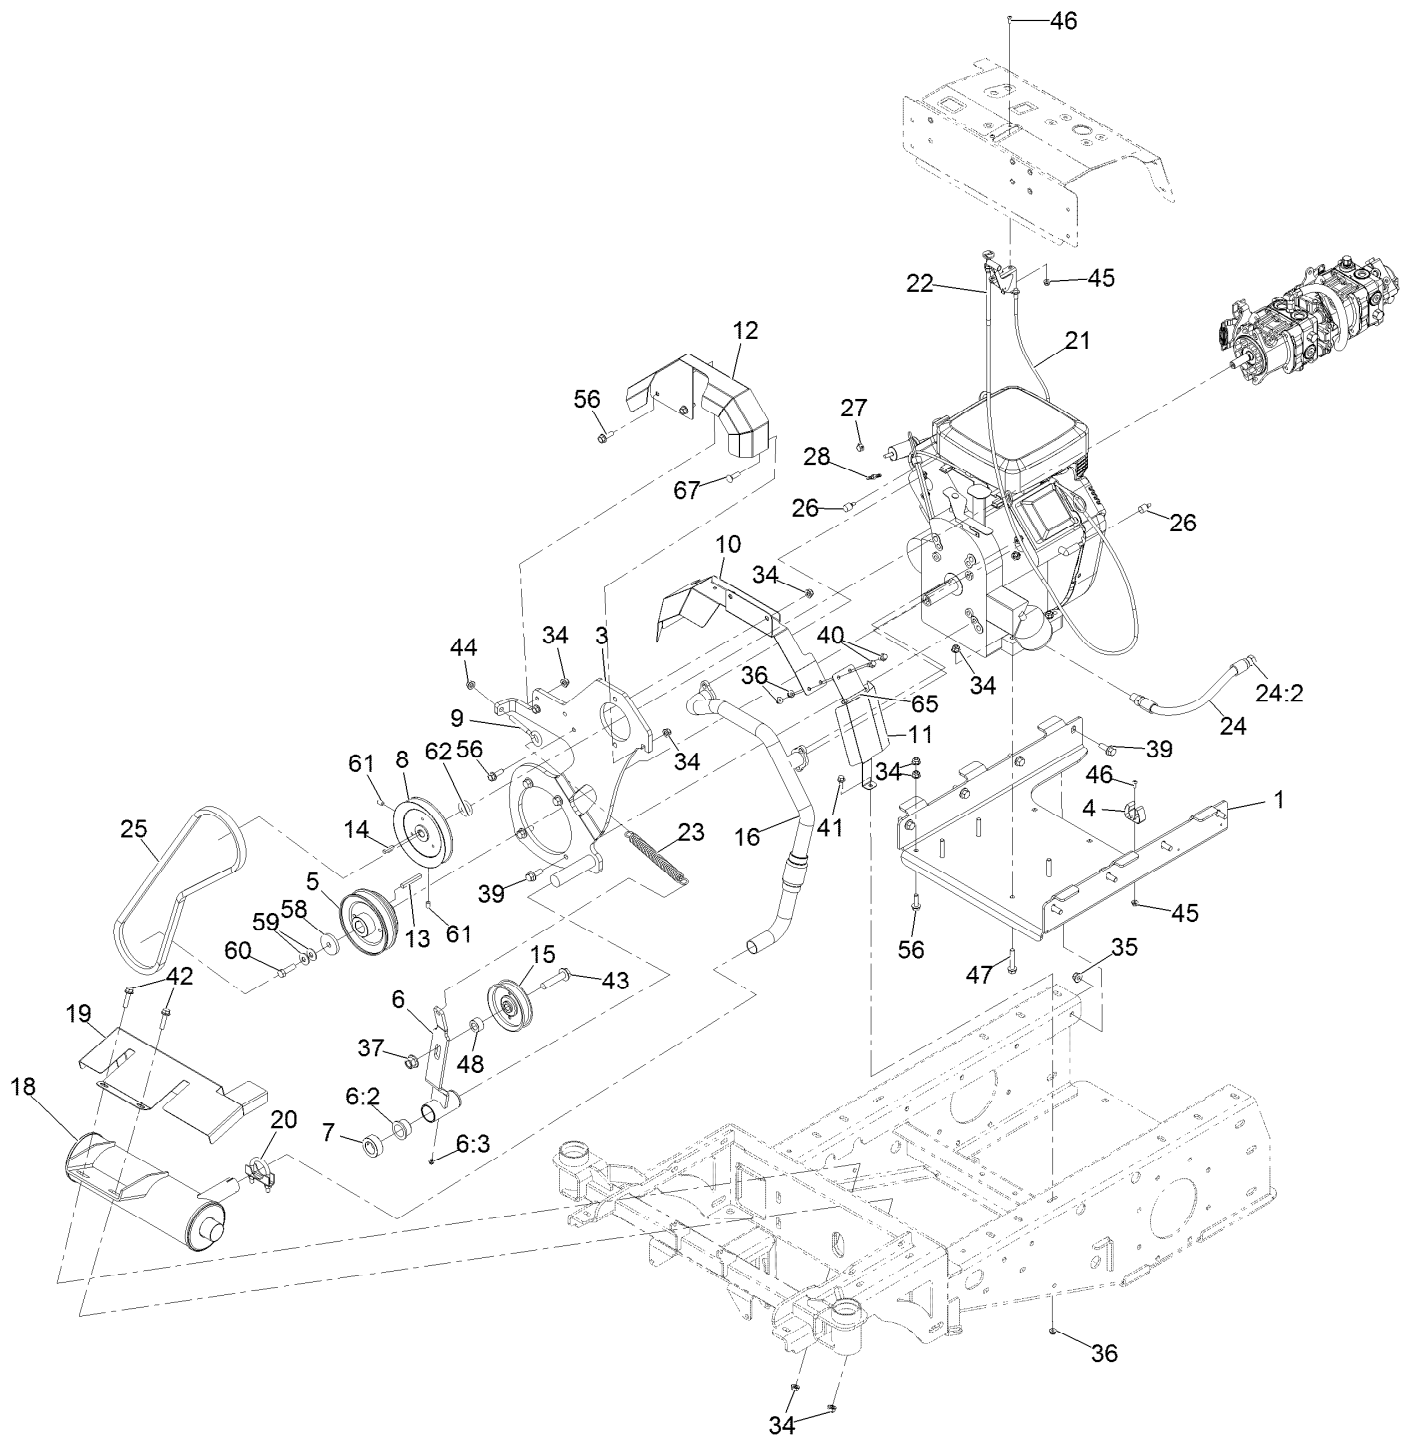

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5492	1	Tray-Engine	35	135-6110	8	Nut-Hex Flg 3/8-16 SS
3	135-5453-03	1	Bracket-Engine, Pump				W/Patch SS
4	135-5661	1	Holder-Tool, Clip	36	135-6108	3	Nut-Hex Flg 1/4-20 Nyloc
5	135-6394	1	Pulley-Double				SS
6	135-5669	1	Tension Arm ASM	37	99-5107	1	Nut-Lock 1/2-13
6:2	256-132	2	Bushing-Flange	39	135-6208	12	Screw-HHF 3/8-16 X 1
6:3	302-63	1	Zerk				Serrated SS
7	135-5382	1	Collar	40	135-6280	2	Screw-HHF 1/4-20 X 1/2
8	135-5663	1	Pulley-Drive, Pump				Serrated SS
9	135-5667	1	Bolt-Eye	41	135-6221	1	Screw-HHF 1/4-20 X 3/4
10	135-5565	1	Guard-Muffler, Lower				Serrated SS
11	135-5566	1	Guard-Muffler, Lower	42	135-6261	2	Screw-HHF 5/16-18 X 1 1/4
12	142-3320	1	Guard-Pulley				Serrated SS
13	103-4177	1	Key	43	3234-46	1	Screw-HHF 1/2-13 X 2 1/4
14	1-807272	1	Key-5Mm X 5Mm X 25Mm	44	104-8300	1	Nut-Nyloc 5/16-18 Flg
15	135-5662	1	Pulley-Idler, Flat	45	135-6342	3	Nut-Hex Flg #10-24 Nyloc
16	135-7089	1	Manifold-Exhaust				SS
18	135-7090	1	Muffler	46	135-6374	3	Screw-Button Head #10-24
19	135-5568	1	Shield-Heat, Muffler				X 1/2 SS
20	2112-11	1	Clamp-Muffler	47	135-5779	4	Screw-HHF 5/16-18 X 1 3/4
21	135-5260	1	Cable-Throttle				Serrated SS
22	135-5707	1	Cable-Choke	48	116-2959	1	Spacer
23	135-5780	1	Spring-Extension	56	135-6272	5	Screw-HHF 5/16-18 X 1
24	135-5365	1	Oil Drain Hose ASM				Serrated SS
			(W/Plug)	58	110-9981	1	Washer-Plain
24:2	AU218-774	1	Plug	59	3290-340	2	Washer-Belleville
25	135-5664	1	Belt-V	60	3211-5	1	Screw-HH 3/8-24 X 1 1/4
26	135-5677	2	Tube-Shrink, Heat	61	3246-17	2	Screw-Set 5/16-24 X 1/2
27	2412-98	1	Clamp-Hose	62	1-323539	1	Spacer-Blade Drive
28	120-1996	1	Fitting-STR	65	3290-378	1	Tie-Cable
34	135-6109	13	Nut-Hex Flg 5/16-18 Nyloc	67	HDW17294	1	Bolt-Carriage 5/16-18 X 1
			SS				SS

Hydraulic Assembly

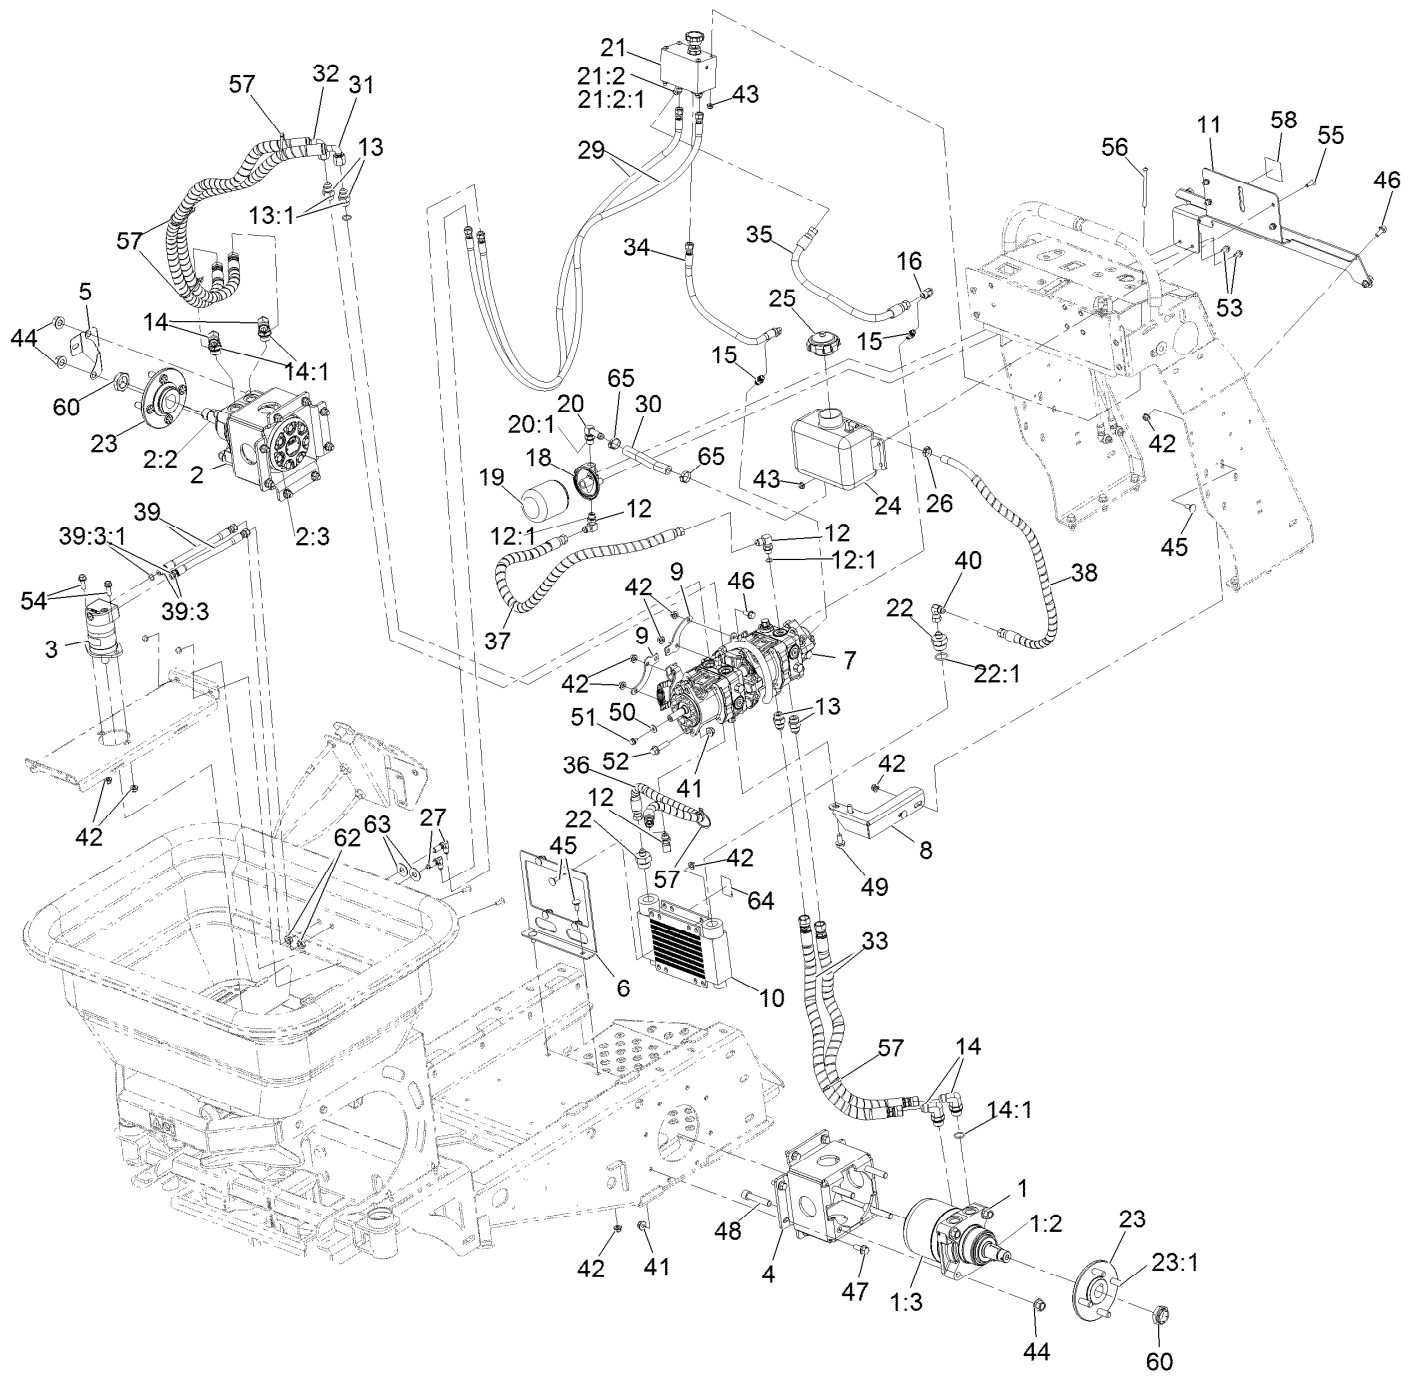


Hydraulic Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5230	1	Motor-Wheel, LH	26	135-5757	1	Clamp-Oetiker, 167
1:2	3257-42	1	Key-Woodruff	27	135-5796	2	Fitting-Elbow, 90
1:3	103-6994	1	Seal Kit	29	142-3111	2	Hose ASM, HYD HP
2	135-5231	1	Motor-Wheel, RH	30	109-5577	1	Hose-Hydraulic
2:2	3257-42	1	Key-Woodruff	31	142-3115	1	Hose ASM-HYD HP
2:3	103-6994	1	Seal Kit	32	142-3116	1	Hose ASM-HYD HP
3	135-5243	1	Motor-Hydraulic, Spreader	33	142-3114	2	Hose ASM-HYD HP
4	135-5448-03	2	Mount-Motor, Wheel [black]	34	142-3113	1	Hose ASM-HYD HP
5	135-5574	1	Bracket-Hopper, Speedometer Sensor	35	135-5361	1	Hose ASM, HYD LP
6	135-6483	1	Mount-Cooler	36	135-5384	1	Hose ASM, HYD LP
7	135-5665	1	Pump-Tandem	37	135-5385	1	Hose ASM, HYD LP
8	135-5551	1	Bracket-Support, Hydro Pump	38	135-5456	1	Hose ASM, HYD LP
9	135-5558	2	Extension-Pump, Hydro	39	142-3112	2	Hose ASM-HYD HP
10	135-5679	1	Cooler-Oil	39:3		1	Fitting-Straight, Rigid ●
11	135-5550	1	Mount-Tank And Filter, Hydraulic	39:3:1	237-42	1	O-Ring
12	103-1802	3	Fitting-Elbow, 90 DEG	40	AU218-980	1	Fitting-Swivel, 90 DEG
12:1	237-42	1	O-Ring	41	135-6110	18	Nut-Hex Flange
13	353-388	4	Fitting-Straight	42	135-6109	18	Nut-Hex Flange
13:1	237-79	1	O-Ring	43	135-6108	8	Nut-Hex Flange
14	353-426	4	Fitting-90 DEG	44	99-5107	8	Nut-Lock
14:1	237-80	1	O-Ring	45	126-0695	8	Screw-CARR
15	353-545	2	Fitting-Straight	46	126-2712	8	Screw-HHF
16	135-5680	1	Fitting-Swivel, 90 DEG	47	135-6208	16	Screw-HHF
18	104-7836	1	Head-Filter	48	3274-71	8	Screw-HSH
19	114-3494	1	Element-Filter, 25 Micron	49	135-6274	2	Screw-HHF
20	109-6449	1	Fitting-Elbow, 90	50	135-6273	1	Washer
20:1	237-42	1	O-Ring	51	81-1280	1	Screw-HHF
21	135-5256	1	Manifold-Hopper, W/Out Relief	52	135-6278	2	Screw-HHF
21:2	353-212	1	Fitting-Elbow, 45 DEG	53	135-6280	2	Screw-HHF, 1/4-20 X 1/2, Ser Flg, SS
21:2:1	237-42	1	O-Ring	54	135-6272	2	Screw-HHF
22	AU218-5044	2	Adapter-Straight	55	135-7080	4	Screw-Hsbhf
22:1	237-81	1	O-Ring	56	135-6385	4	Screw-HSBH
23	135-7525	2	Hub-Wheel	57	3290-378	6	Tie-Cable
23:1	135-7526	4	Stud-1/2-20 X 1.55	58	135-6398	1	Decal-Oil
24	135-5712	1	Tank-Hydraulic, Plastic	60	116-1399	2	Locknut
25	135-5713	1	Cap-Vented	62	3220-4	2	Nut-Jam
				63	135-5586	2	Washer
				64	106-5517	1	Decal-Warning
				65	135-5692	2	Clamp-Oetiker, 167

● Not serviced separately


Park Brake Assembly

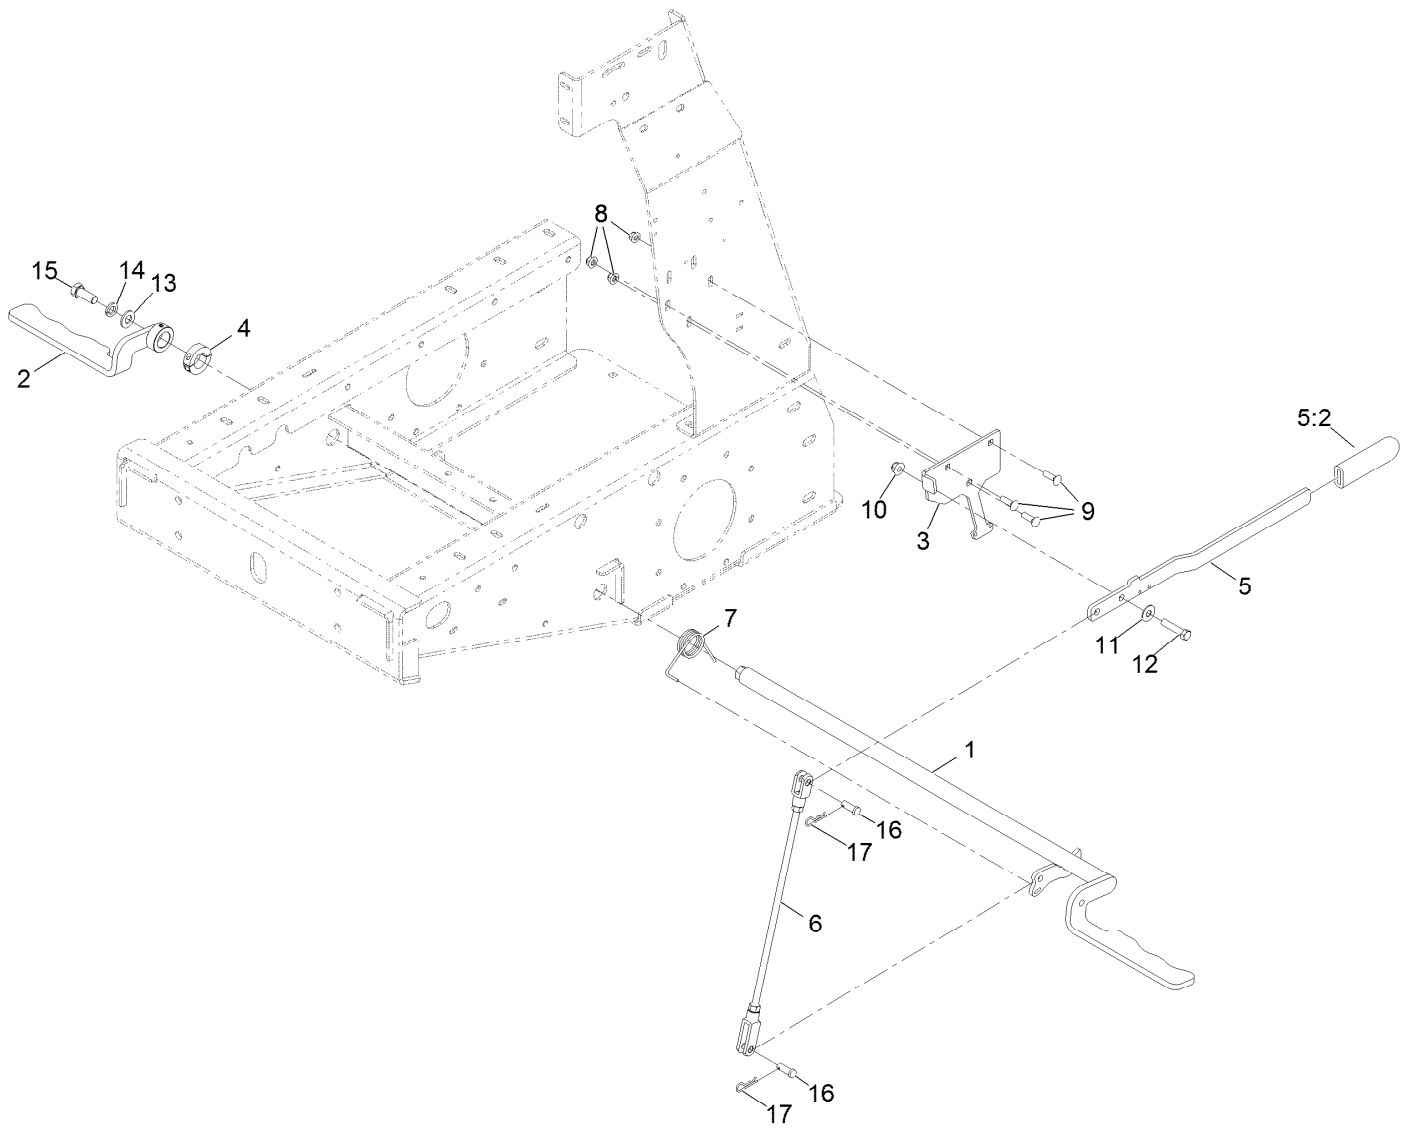

Park Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5380-03	1	Arm-Brake, Lt	10	104-8301	1	Nut-HF, NI
2	135-5376-03	1	Arm-Brake, Rt	11	1126	1	Washer-Flat
3	135-5432	1	Bracket-Handle, Brake	12	323-52	1	Screw-HH
4	116-7271	1	Collar-Locking	13	3256-26	1	Washer-Flat
5	135-6059	1	Brake Handle ASM	14	3253-7	1	Washer-Lock
5:2	1-633268	1	Grip-Lever	15	106-0378	1	Screw
6	135-6066	1	Brake Rod ASM	16	1-808284	2	Pin-Clevis
7	135-6106	1	Spring-Torsion	17	135-6284	2	Pin-Hair
8	135-6109	3	Nut-Hex Flange				
9	HDW17294	3	Bolt, Carriage, 5/16-18X1, ST/ST 18-8				

Electrical Assembly

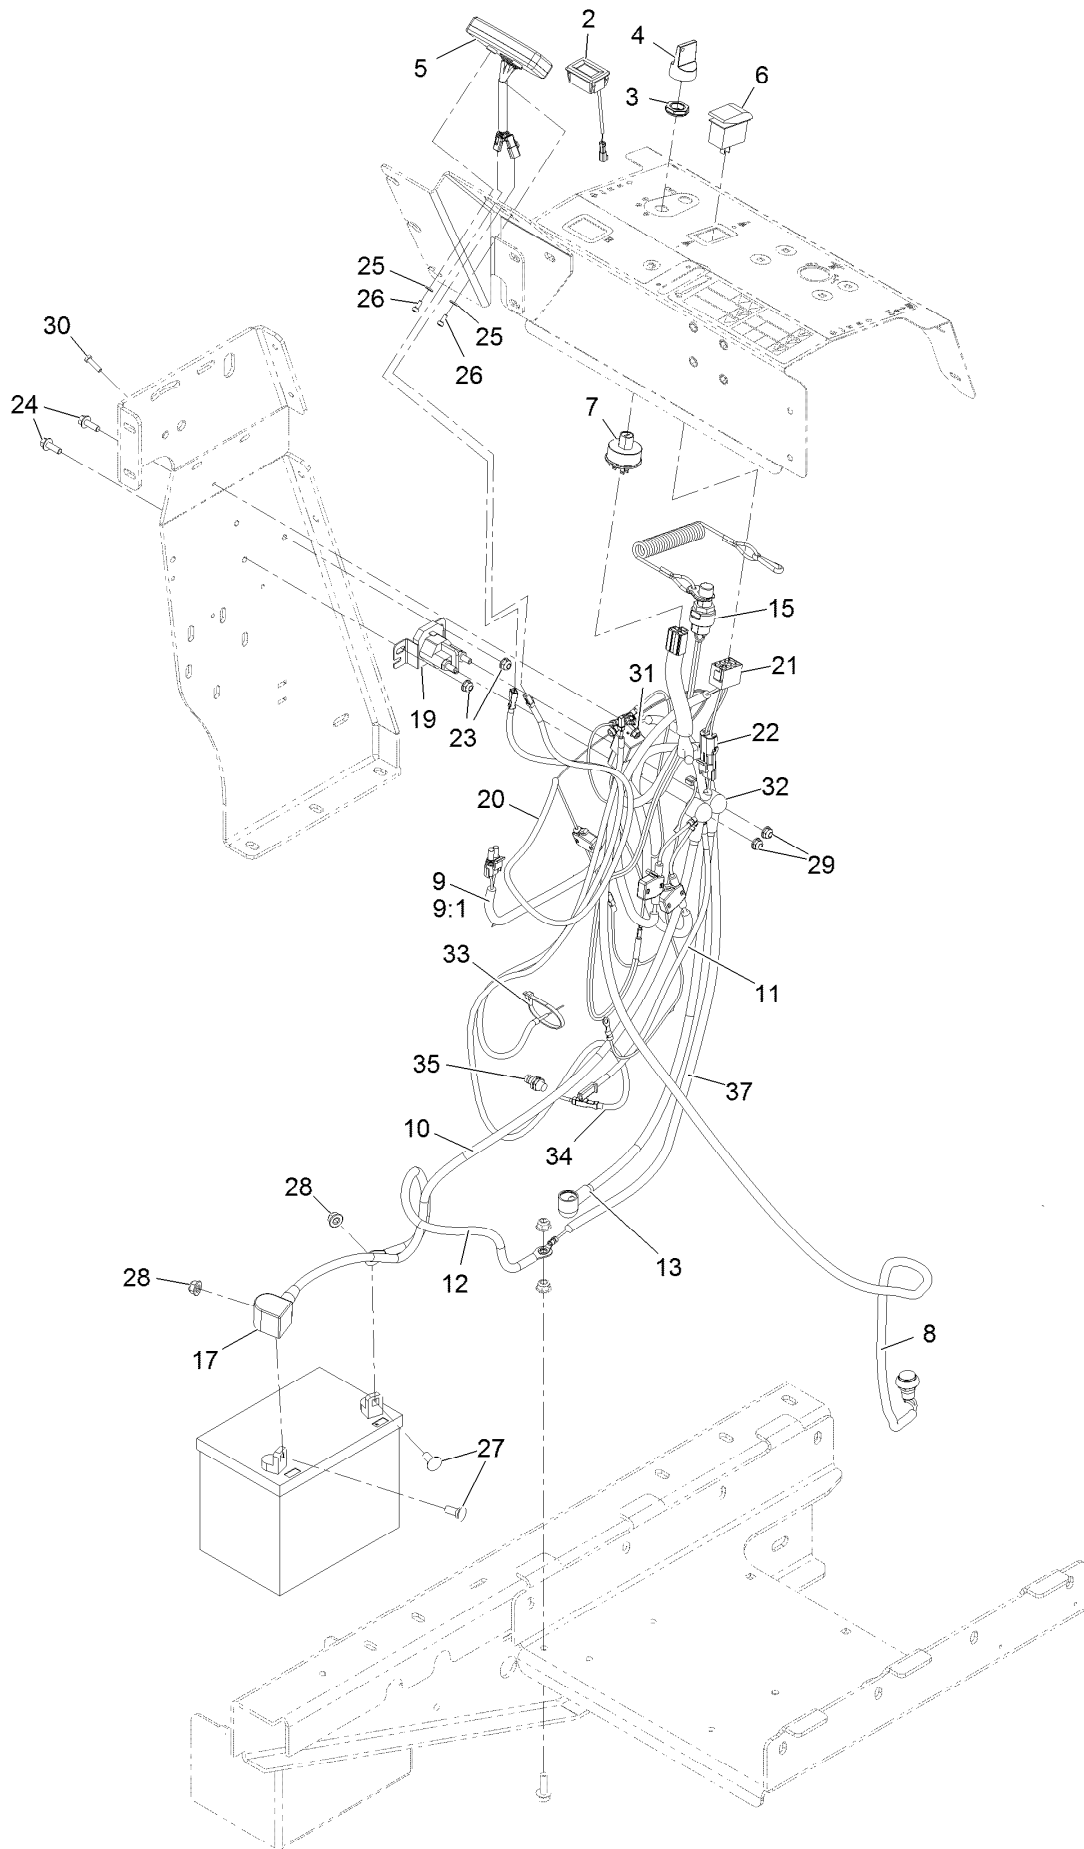


Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	135-5259	1	Meter-Tach/Hour	24	135-6221	2	Screw-HHF 1/4-20 X 3/4
3	135-5715	1	Nut-Switch, Key				Serrated SS
4	1-603511	1	Key-Ignition	25	126-0759	2	Washer-Flat
4	135-5708	1	Key-Umbrella	26	135-6357	2	Screw-HSH M4-0.7 X 10Mm
5	135-8900	1	Striker-Head Only	27	126-0695	2	Screw-Carriage 5/16-18 X
6	100-8469	1	Switch-Rocker				3/4 SS
7	135-6052	1	Switch-Ignition	28	135-6109	2	Nut-Hex Flg 5/16-18 Nyloc
8	135-6054	1	Switch-Push Button				SS
9	135-6113	1	Harness-Main	29	104-7201	2	Nut-Nyloc 1/4-20 Flg
9:1	135-6270	1	Relay-Mini ISO Pwr, 5M	30	135-6356	1	Screw-HH #10-24 X 3/4 SS
10	135-6114	1	Cable-Positive	31	135-6342	1	Nut-Hex Flg #10-24 Nyloc
11	135-6115	1	Wire-Solenoid				SS
12	135-6116	1	Cable-Ground	32	1-543393	3	Insulator-Solenoid
13	135-6117	1	Cable-Positive	33	3290-378	9	Tie-Cable
15	135-6121	1	Switch-Op	34	135-8898	1	Cable-Sensor, Trail Tech
17	135-2304	1	Insulator-Battery	35	135-8903	1	Magnet-Speedometer
19	135-6189	1	Solenoid-Starter	37	135-3998	1	Harness-Wire, Jumper
20	135-6443	1	Harness-Striker	99	135-7317	1	Manual-User, Striker●
21	32160-008	1	Connector-Carling, 8F	99	135-7318	1	Card-Striker, Quick Start●
22	32160-072	1	Connector-Wp,2M				
23	135-6108	2	Nut-Hex Flg 1/4-20 Nyloc				
			SS				

● Not illustrated


Motion Control Assembly

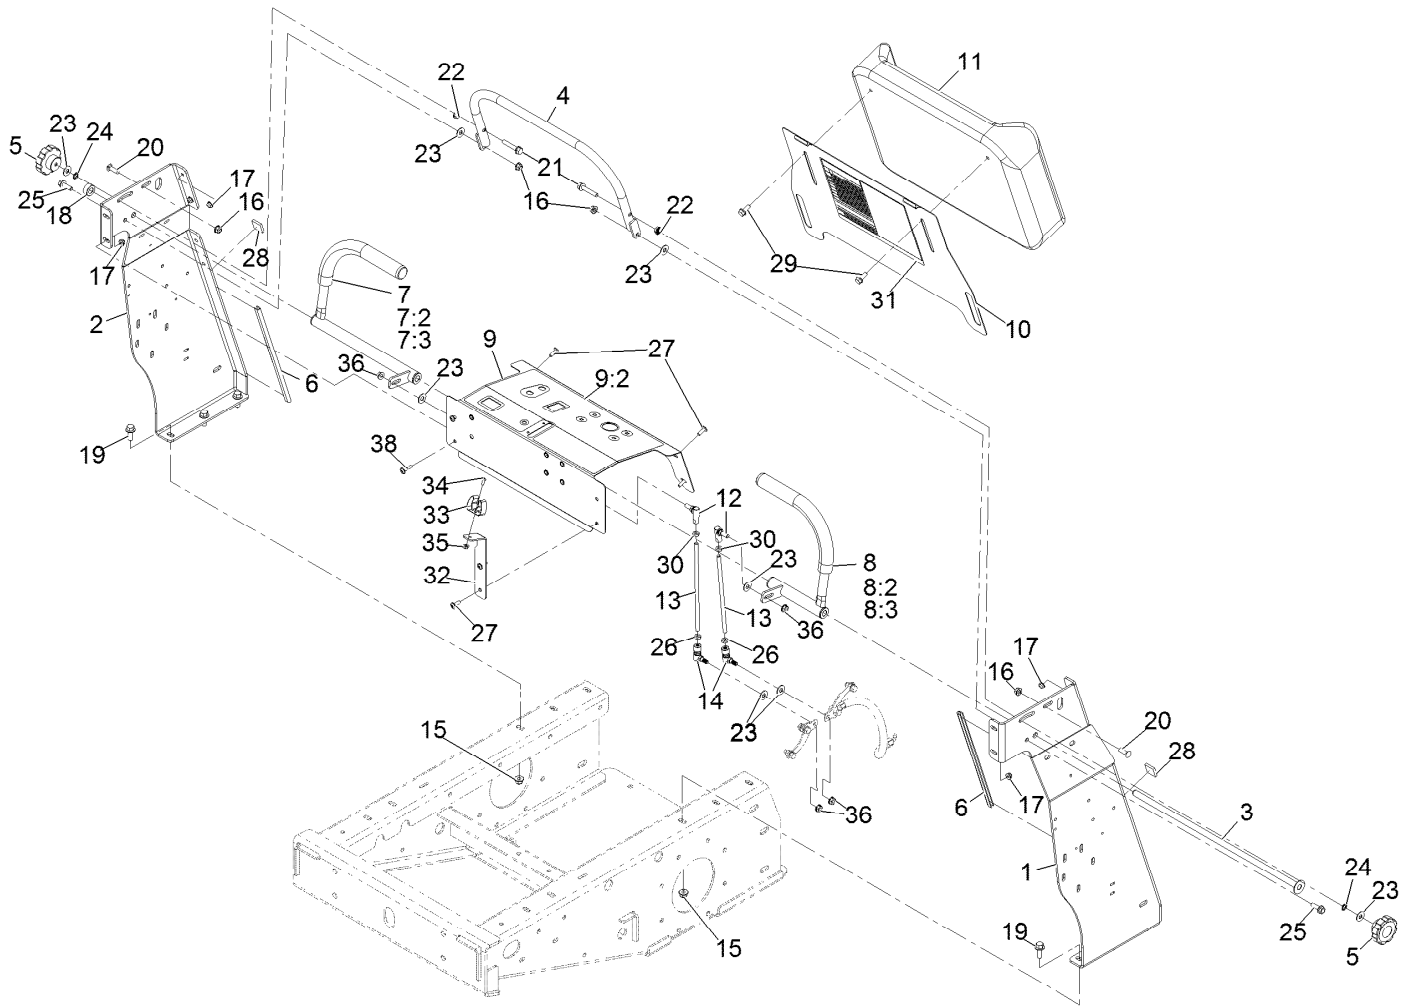

Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5423-05	1	Upright-Tower, Lt [blk-Txt]	18	135-6192	1	Collar
2	135-5425-05	1	Upright-Tower, Rt [blk-Txt]	19	135-6208	6	Screw-HHF
3	135-5430	1	Rod-Pivot, Joy Stick	20	HDW17294	2	Bolt, Carriage, 5/16-18X1, ST/ST 18-8
4	135-5427-05	1	Bar-Speed [blk-Txt]	21	135-5779	2	Screw-HHF
5	135-5689	2	Knob-Fluted	22	118-1722	2	Nut-Hex Flange
6	135-5336	2	Strip-Trim, 12.0 Inch	23	HDW14535	8	Flat Washer, 5/16 Nom, ST/ST, 18-8
7	135-5738	1	Stick-Joy, Rt	24	135-6286	2	Washer-Lock
7:2	1-633257	1	Grip-Control, Motion	25	135-6272	2	Screw-HHF
7:3	135-5694	2	Bushing-Flange	26	107-0282	2	Nut-Hex
8	135-5739	1	Stick-Joy, Lt	27	135-7080	6	Screw-Hsbhf
8:2	1-633257	1	Grip-Control, Motion	28	93-9155	2	Velcro
8:3	135-5694	2	Bushing-Flange	29	126-2712	2	Screw-HHF
9	142-3142	1	ASM-Panel, Control	30	135-6512	2	Nut-Hex
9:2	135-6223	1	Decal-Panel, Control	31	142-3313	1	Decal-Chart, Spray
10	135-5498-05	1	Plate-Pad, Knee	32	135-5506-05	1	Mount-Gun
11	135-7884	1	Pad-Knee	33	135-5661	1	Holder-Tool, Clip
12	135-5257	2	Balljoint-SS	34	135-6374	1	Screw-HSBH
13	135-5681	2	Rod-Control, Motion	35	135-6342	1	Nut-Hex Flange
14	135-5718	2	Ball Joint-Quick Disconnect, SS	36	107-0380	4	Nut-HHF
15	135-6110	6	Nut-Hex Flange	38	135-7081	2	Screw-Hsbhf
16	135-6109	4	Nut-Hex Flange				
17	135-6108	8	Nut-Hex Flange				


Tire and Wheel Assembly

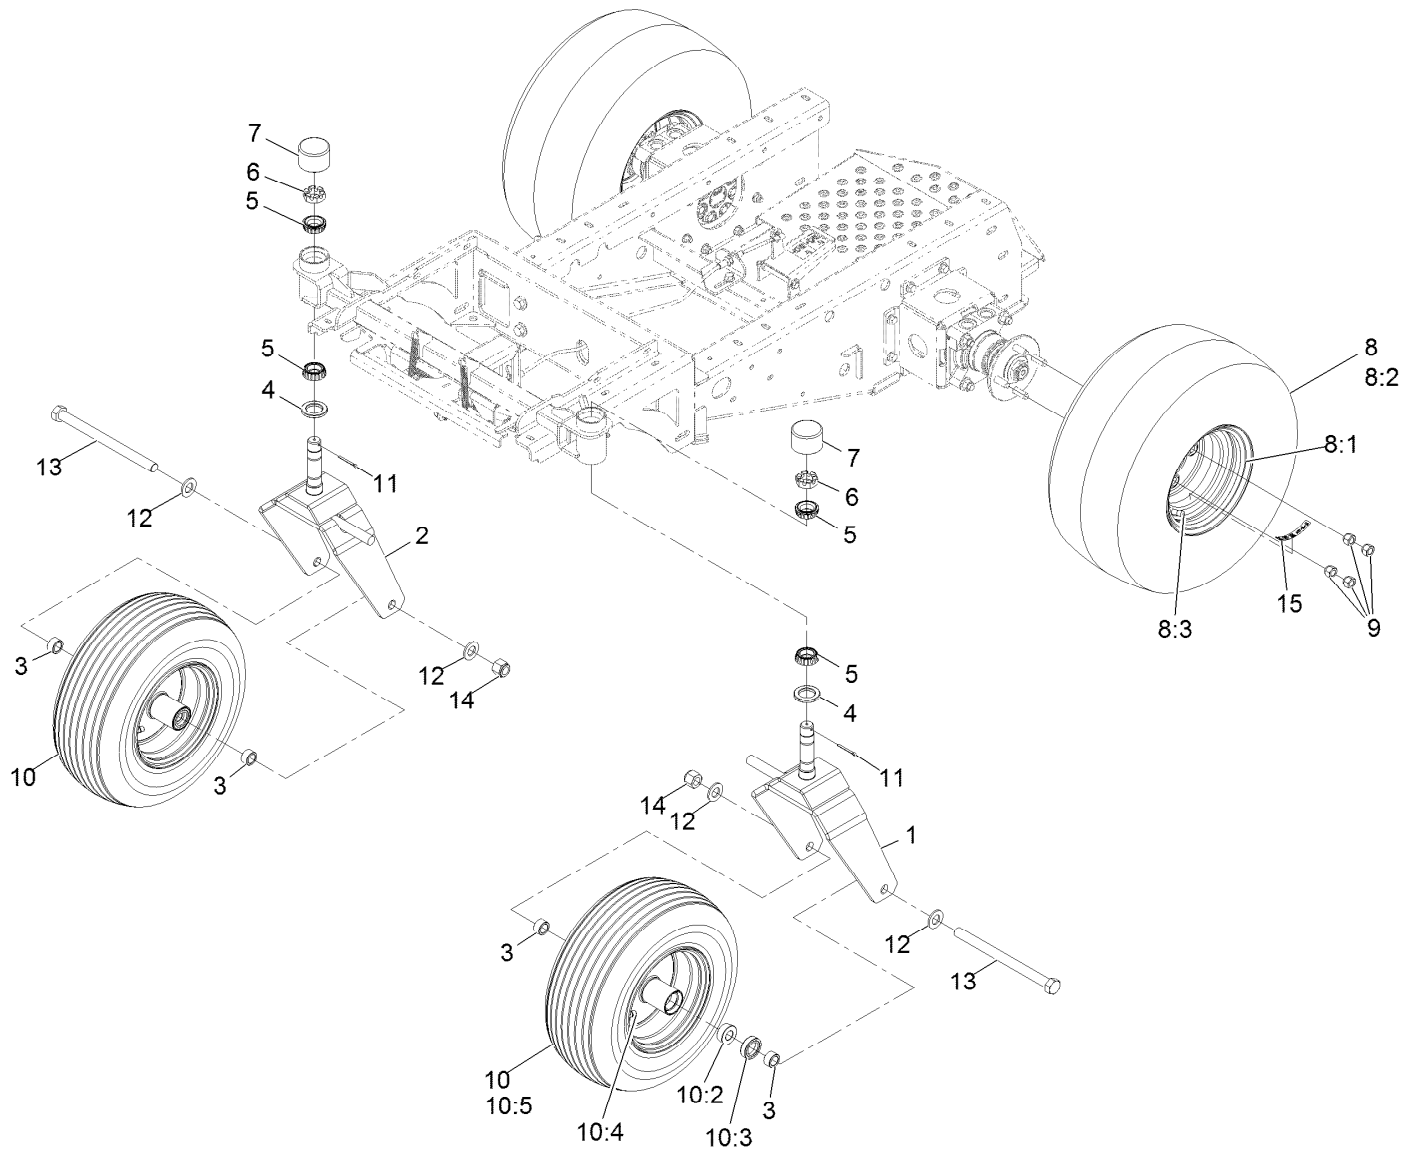

Tire and Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5441-05	1	Caster-Lt [blk-Txt]	10	135-5974	2	Wheel And Tire ASM
2	135-5446-05	1	Caster-Rt [blk-Txt]	10:2	1-633585	2	Bearing-Cone, Taper
3	135-5683	4	Spacer-Axle	10:3	103-0063	2	Seal-Caster
4	1-543511	2	Seal-Grease	10:4	5108	1	Valve
5	254-92	4	Cone-Bearing, Outer	10:5	135-5976	1	Tire-Rib
6	1-809082	2	Nut-SHH	11	135-6292	2	Pin-Cotter
7	135-5756	2	Cap-Dust, Rubber	12	3256-28	4	Washer-Flat
8	135-5968	2	Wheel And Tire ASM	13	135-6300	2	Screw-HH
8:1	135-5969	1	Rim-8 X 7, Black	14	3296-51	2	Nut-Lock, NI
8:2	120-6466	1	Tire	15	126-2055	2	Decal-Torque, Wheel Hub
8:3	232-27	1	Stem-Valve				Lug
9	242-50	8	Nut-Lug				


Fuel Assembly

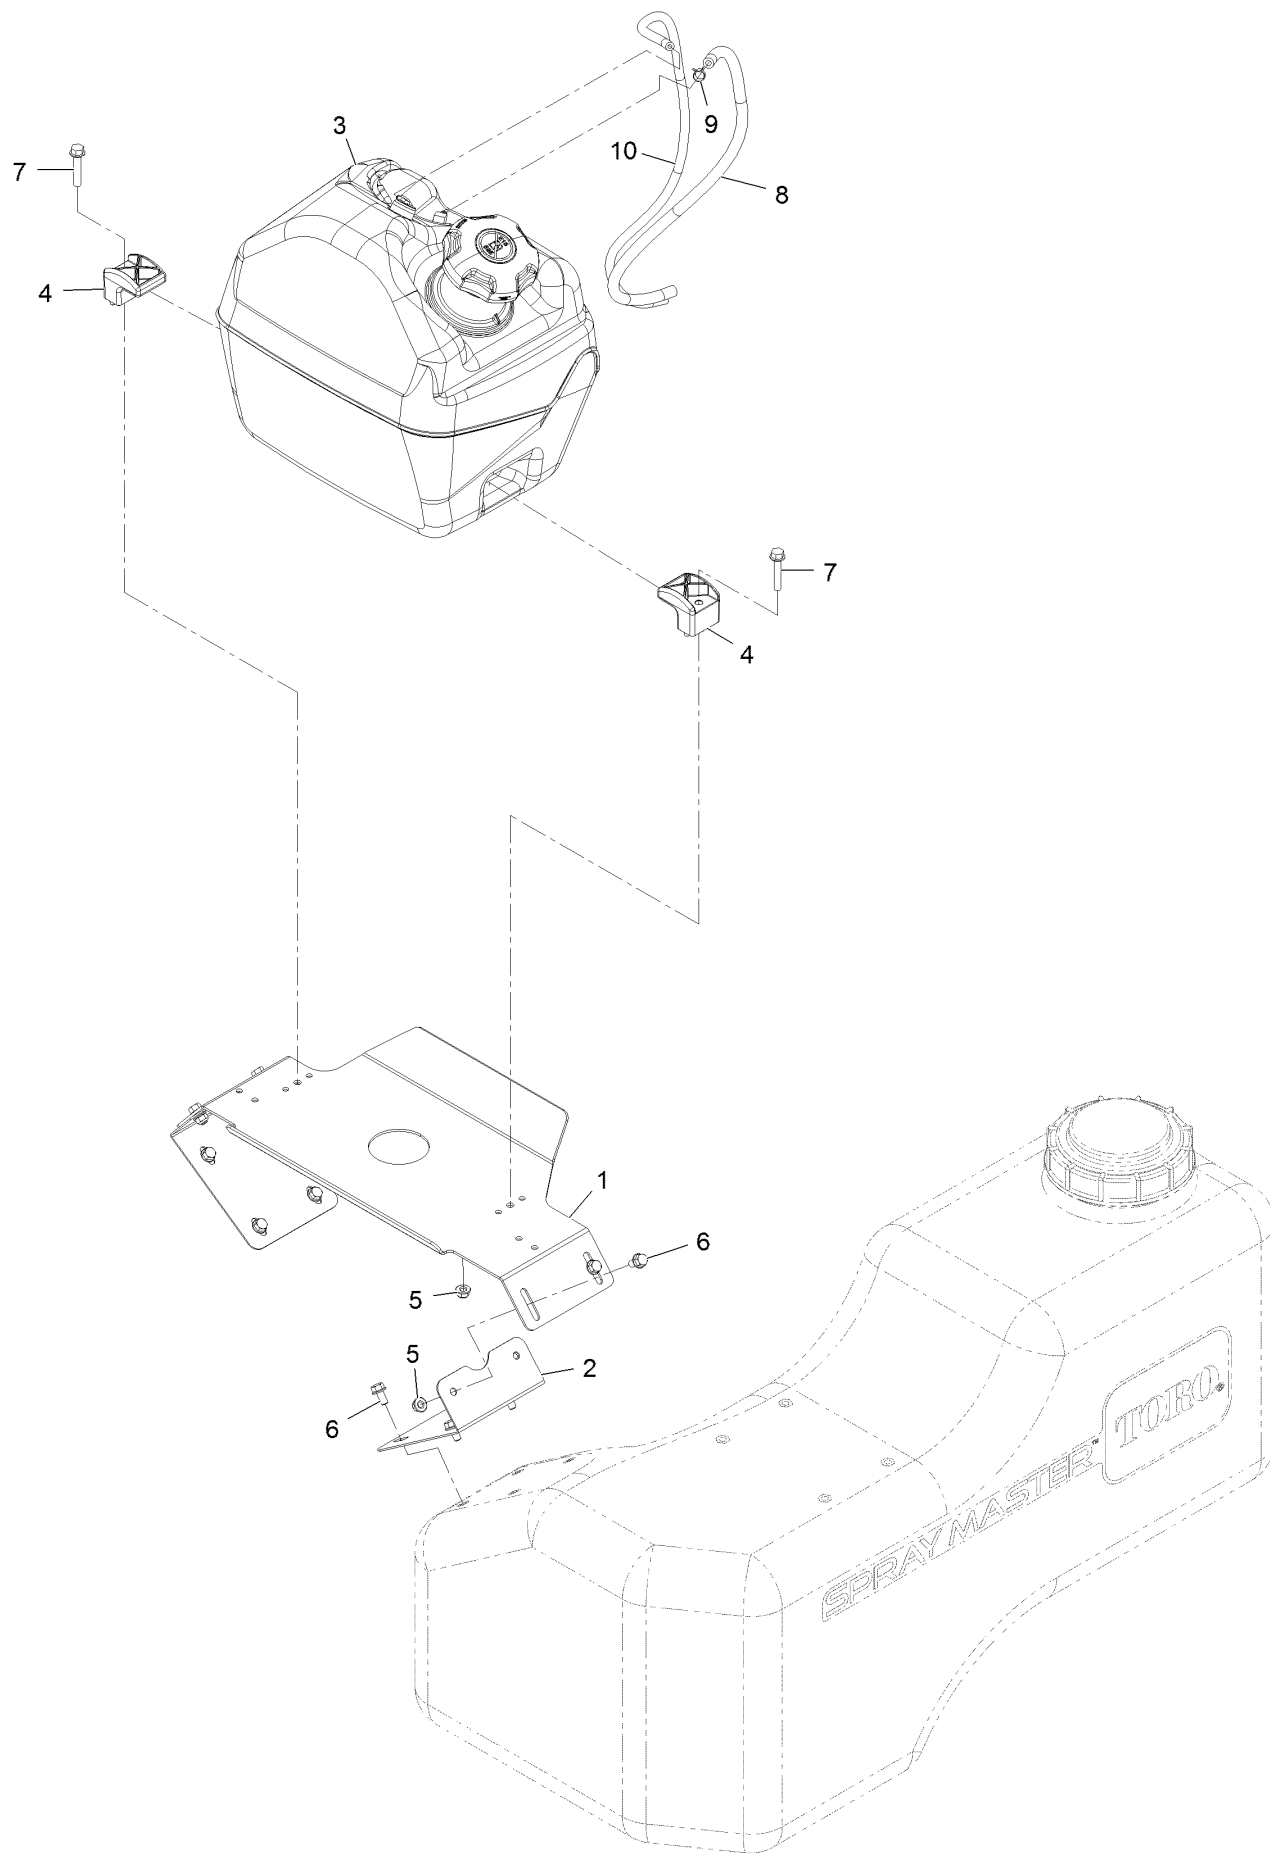

Fuel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-2975	1	Support-Fuel Tank	7	135-5779	2	Screw-HHF 5/16-18 X 1 3/4
2	135-5555	2	Bracket-Support, Gas Tank				Serrated SS
3	140-4343	1	Fuel Tank ASM, 5 Gal	8	109-1395	1	Hose-Fuel Line 27"
4	107-4543	2	Clamp	9	2412-98	1	Clamp-Hose
5	135-6109	6	Nut-Hex Flg 5/16-18 Nyloc SS	10	117-9569	1	Hose-Fuel
6	135-7086	12	Screw-HHF 5/16-18 X 5/8 Serrated SS				


Fuel Tank Assembly No. 140-4343

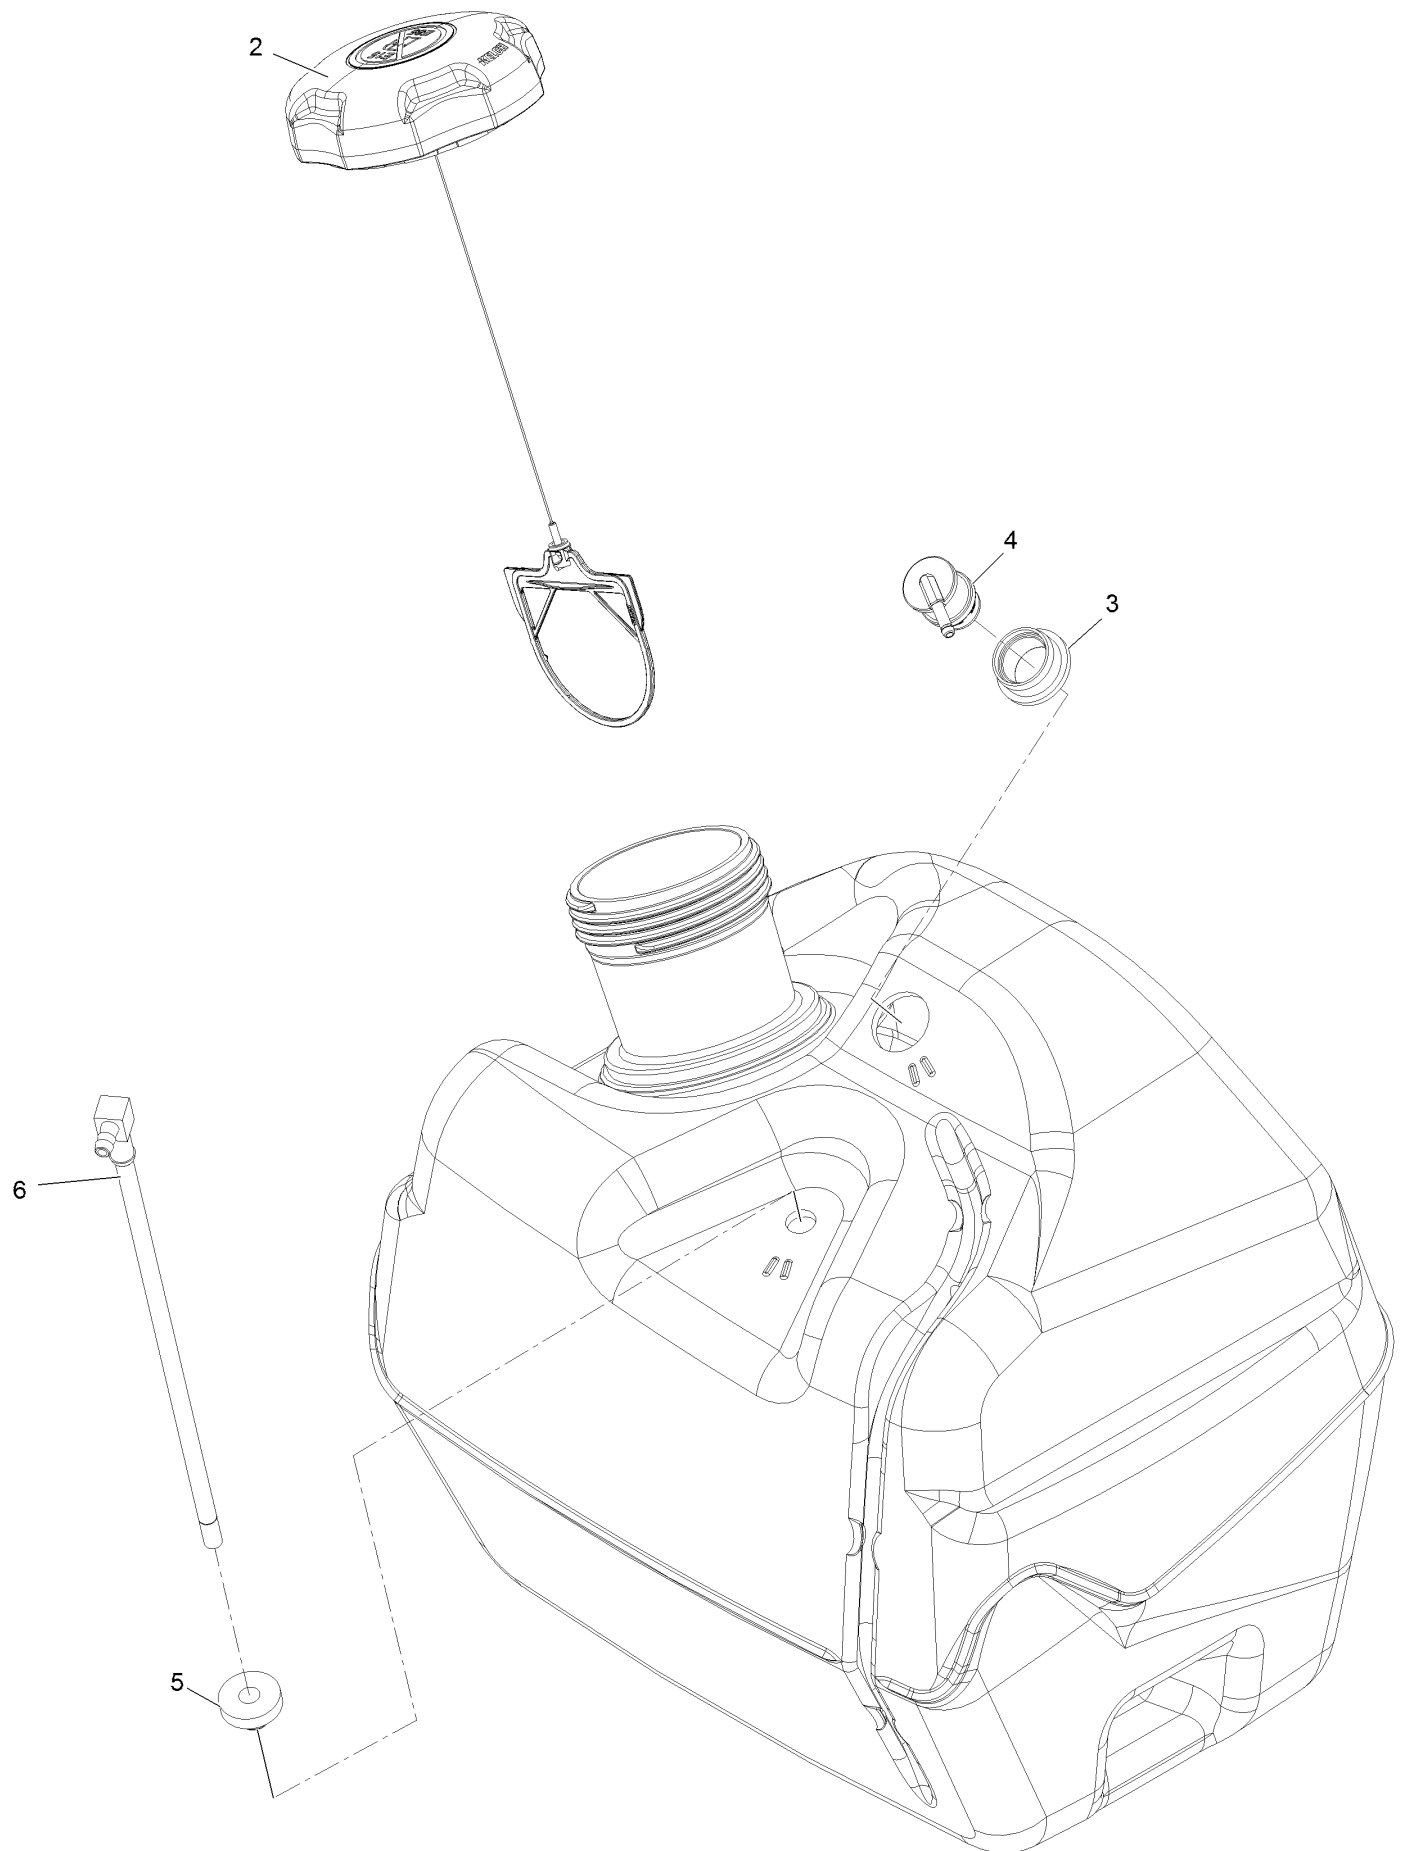

Fuel Tank Assembly No. 140-4343 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	137-4119	1	Cap-Fuel, Ratcheting	5	46-6560	1	Bushing
3	114-0284	1	Grommet	6	109-9364	1	Fitting-Fuel (W/Line And
4	119-3547	1	Valve-Vent, Fuel				Screen)

Spray System Assembly

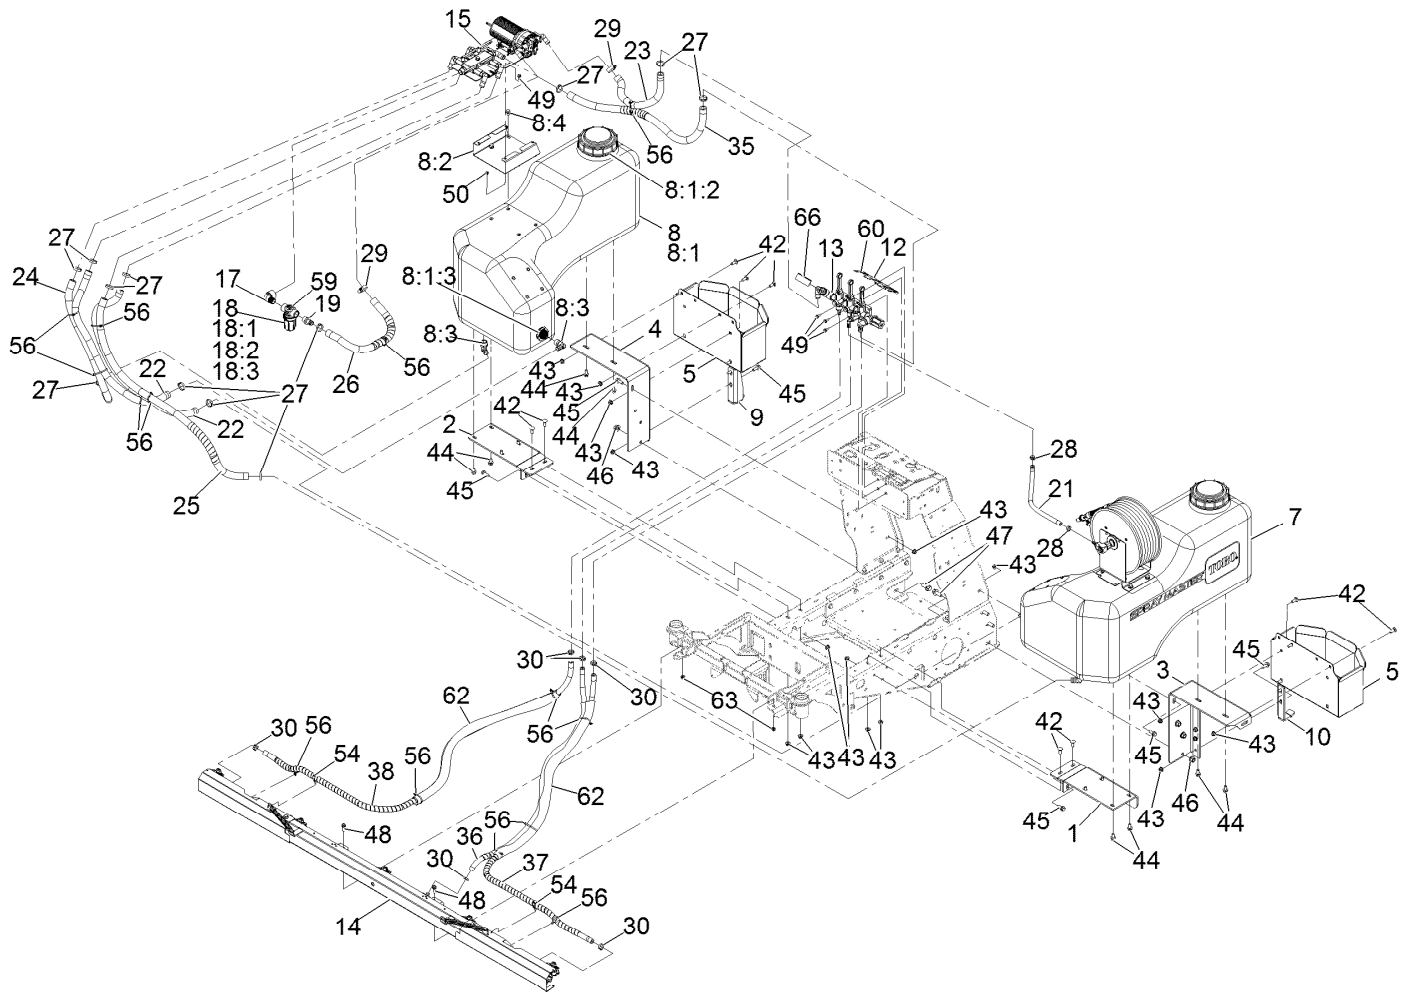


Spray System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5495	1	Mount-Tank, LH	24	135-5326	1	Hose-Spray
2	135-5496	1	Mount-Tank, RH	25	135-5327	1	Hose-Spray, Wrapped
3	135-5395	1	Mount-Box, Lt	26	135-5325	1	Hose-Spray, Wrapped
4	135-5397	1	Mount-Box, Rt	27	135-5890	12	Clamp-Oetiker, 167
5	142-2436	2	Box-Fert, Max	28	135-5757	2	Clamp-Oetiker, 167
7		1	ASM-Tank Hose Reel ■	29	2412-129	2	Clamp-Hose
8		1	ASM-Tank Rt ■	30	135-5692	6	Clamp-Oetiker, 167
8:1	135-7870	1	ASM-Tank, Rt	35	135-6480	1	Hose-Spray, Wrapped
8:1:2	135-5916	1	Cap-Tank, Spray	36	135-5294	1	Hose-Spray, Wrapped
8:1:3	126-4393	2	Fitting-Bulkhead	37	135-5295	1	Hose-Spray, Wrapped
8:2	135-5546	1	Mount-Platform, Liquid Valve	38	135-5296	1	Hose-Spray, Wrapped
8:3	135-5772	2	Fitting-Elbow, 90	42	126-0980	12	Screw-CARR
8:4	135-7096	4	Screw-HHF	43	135-6110	22	Nut-Hex Flange
9	135-5408	1	Bracket-Tip, Anti (Rt)	44	135-6274	12	Screw-HHF
10	135-5406	1	Bracket-Tip, Anti (Lt)	45	135-6208	10	Screw-HHF
12	135-5570-05	1	Bracket-Manifold	46	135-6111	6	Nut-Hex Flange
13		1	ASM-Manifold ■	47	135-6207	6	Screw-HHF
14		1	ASM-Boom, Spray ■	48	135-6272	2	Screw-HHF
15		1	ASM, Liquid Valve ■	49	135-6221	7	Screw-HHF
17	132-7706	1	Elbow-90 DEG	50	135-6108	4	Nut-Hex Flange
18	135-5765	1	Strainer-Inline	54	32180-030	2	Clip-Tie
18:1	126-7195	1	Bowl-Strainer	56	3290-378	14	Tie-Cable
18:2	126-2272	1	Gasket-Head, Line Strainer	59	135-6424	1	Decal-Cap, Strainer
18:3	135-5766	1	Screen-Strainer, 50 Mesh	60	135-6285	1	Decal-Valve, Boom
19	41257	1	Hosebarb	62	135-6484	2	Guard-Mesh
21	135-5321	1	Hose-Spray	63	135-6109	2	Nut-Hex Flange
22	135-6163	2	Hose-Spray	66	142-3437	1	Gauge-Plain
23	135-5324	1	Hose-Spray	99	3290-379	3	Tie-Cable ●

● Not illustrated

■ Not serviced separately

Tank Hose Reel Assembly

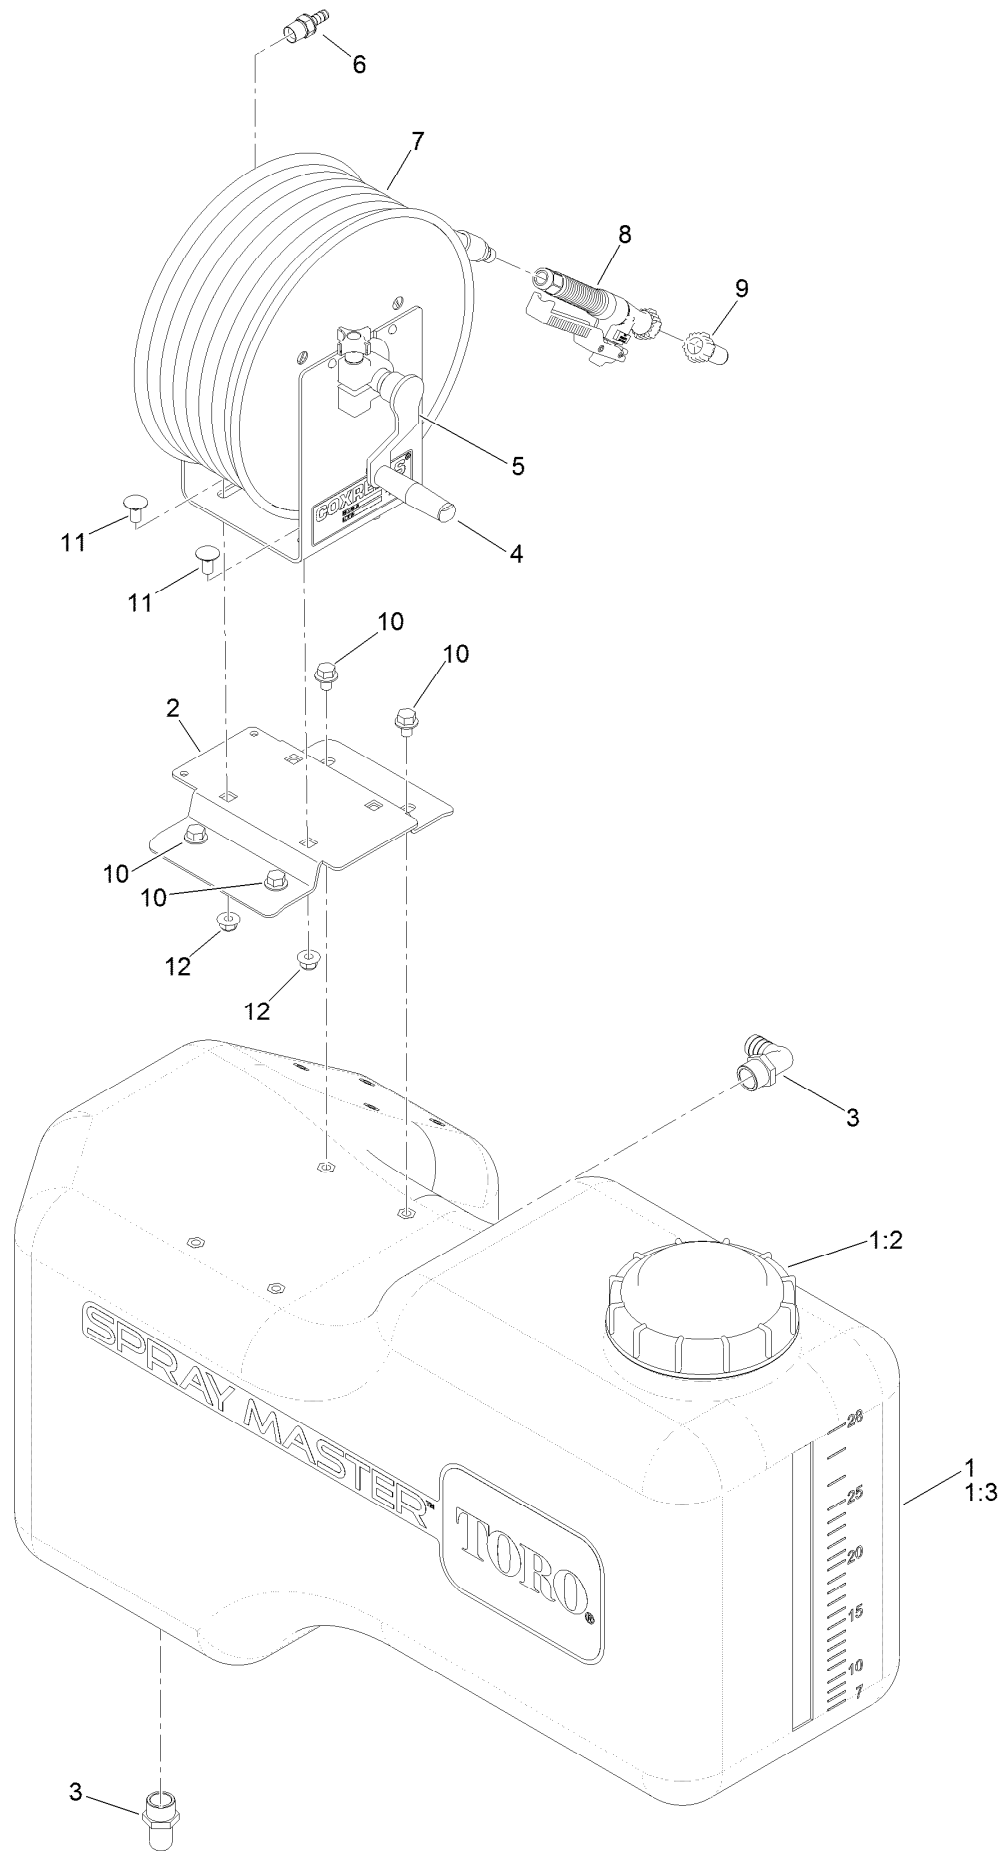


Tank Hose Reel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-7868	1	ASM-Tank, Lt	7	135-5794	1	Hose-Spray, 75'
1:2	135-5916	1	Cap-Tank, Spray	8	135-5773	1	Gun-Spray, Spot
1:3	126-4393	2	Fitting-Bulkhead	9	135-5778	1	Tip-Spray, #12 Spot
2	135-5497	1	Mount-Reel, Hose	10	135-7096	4	Screw-HHF
3	135-5772	2	Fitting-Elbow, 90	11	135-6271	4	Screw-Carriage
4	135-5787	1	Reel-Hose	12	135-6110	4	Nut-Hex Flange
5	135-6011	1	Crank-Reel	13	135-5757	1	Clamp-Oetiker, 167 ●
6	1-513200	2	Fitting, Male				

● Not illustrated


Manifold Assembly

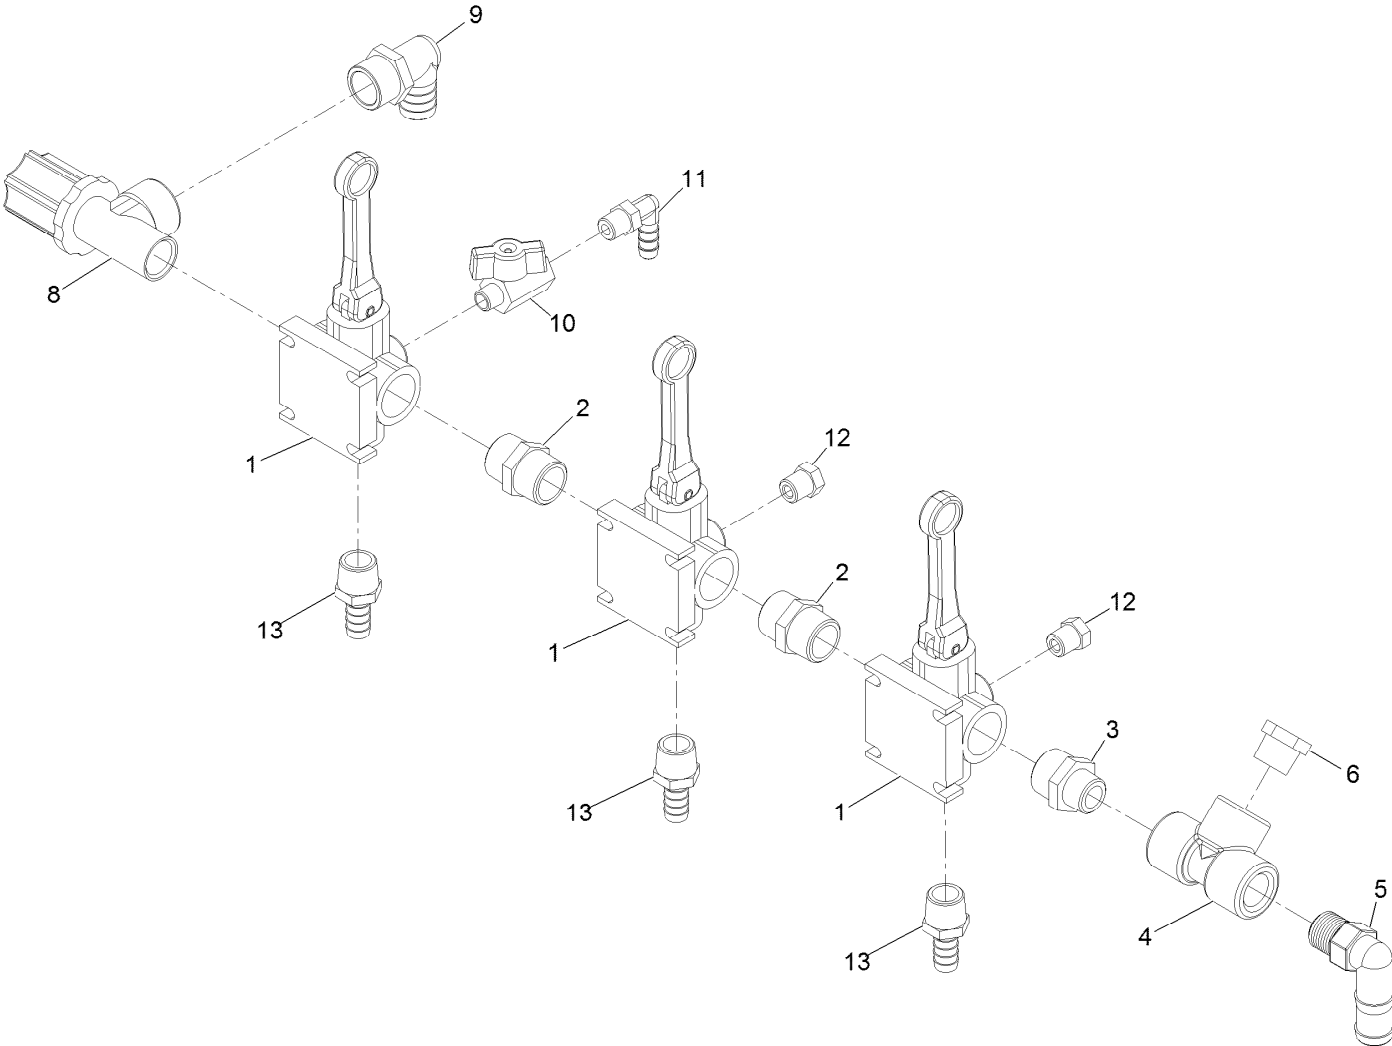

Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5721	3	Valve-Directo	8	135-5736	1	Valve-Throttle
2	135-5741	2	Fitting-Nipple	9	135-5772	1	Fitting-Elbow, 90
3	135-5742	1	Fitting-Nipple	10	135-5737	1	Valve-Chrome, 1/4
4	94-7100	1	Tee	11	135-5745	1	Fitting-Elbow, 90
5	92-8557	1	Elbow-90	12	135-5735	2	Plug-Valve
6	135-5743	1	Fitting-Reducer	13	120-8671	3	Fitting-Hosebarb


Spray Boom Assembly

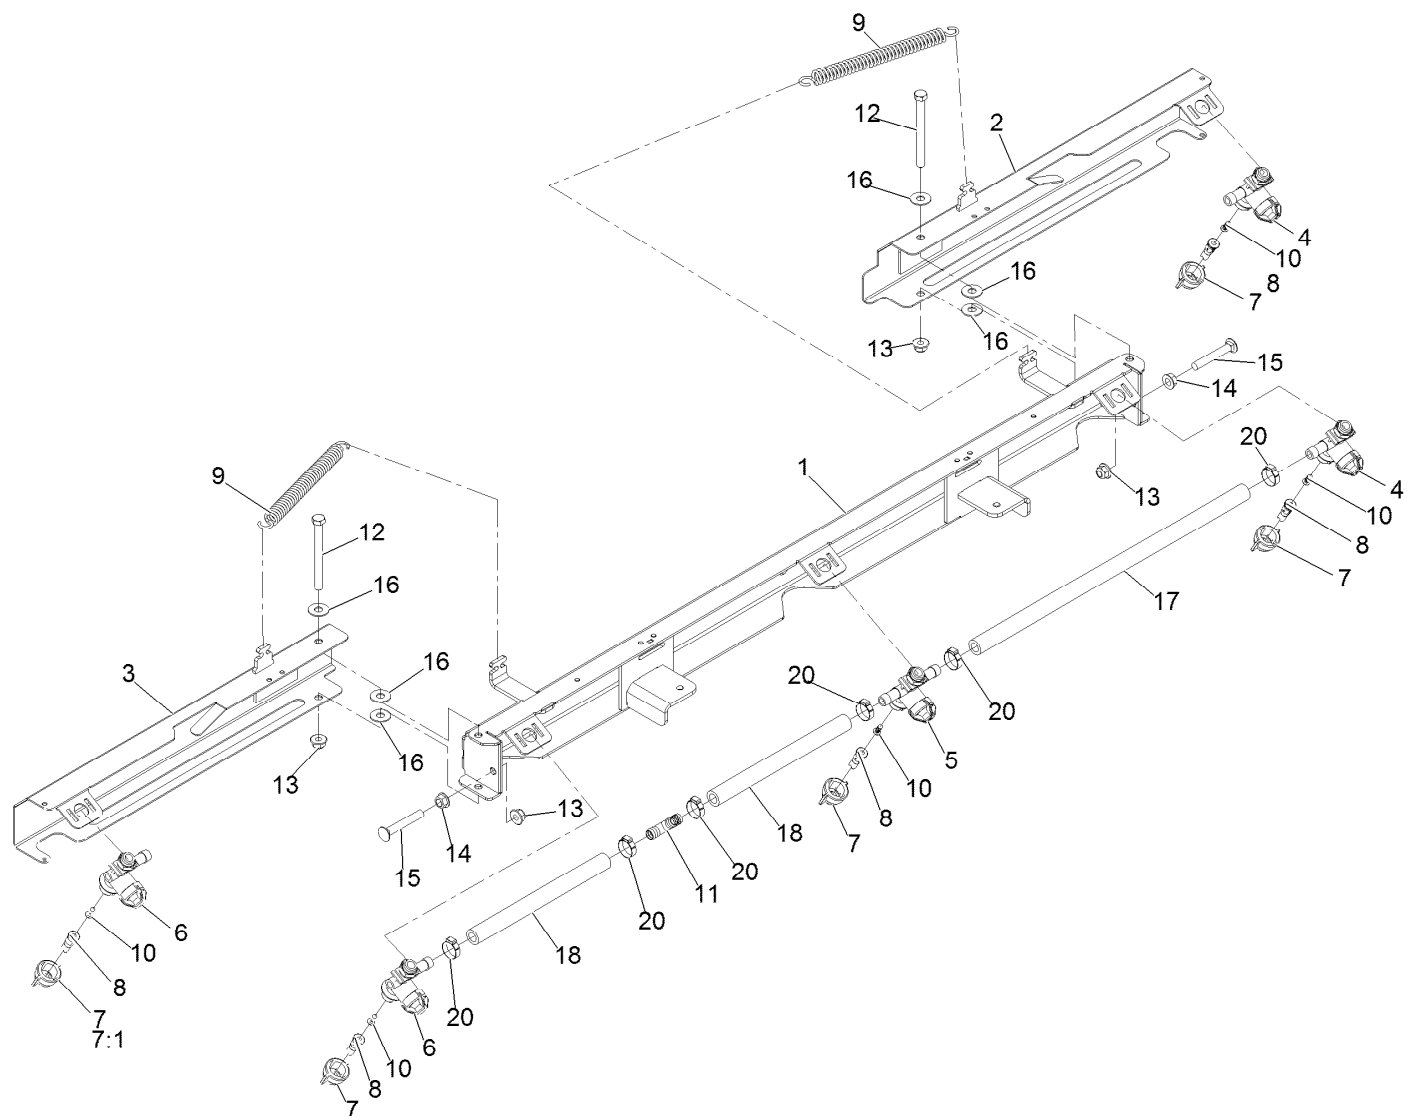

Spray Boom Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5409	1	Boom-Center	11	138-2751	1	Fitting-Tee, Barb
2	135-5415	1	Boom-Wing, Rt	12	135-6310	2	Screw-HH 3/8-16 X 4 SS
3	135-5419	1	Boom-Wing, Lt	13	135-6110	4	Nut-Hex Flg 3/8-16 SS W/Patch SS
4	135-5790	2	Body-Nozzle, Right	14	135-6806	2	Nut-Hex Flange 3/8-16 Serrated SS
5	135-5789	1	Body-Nozzle, Center	15	126-0702	2	Bolt-Carriage 3/8-16 X 2 1/2 SS
6	135-5788	2	Body-Nozzle, Left	16	1126	6	Washer-Flat
7	135-5781	5	Cap-Nozzle	17	135-7106	1	Hose-Spray
7:1	40998	1	Seat-Gasket	18	135-7105	2	Hose-Spray
8	142-3308	5	Tip-Spray, 025	20	135-5692	6	Clamp-Oetiker, 167
9	135-5780	2	Spring-Extension				
10	126-3943	5	Strainer-Nozzle, 50M 5PSI Check				


Liquid Valve Assembly

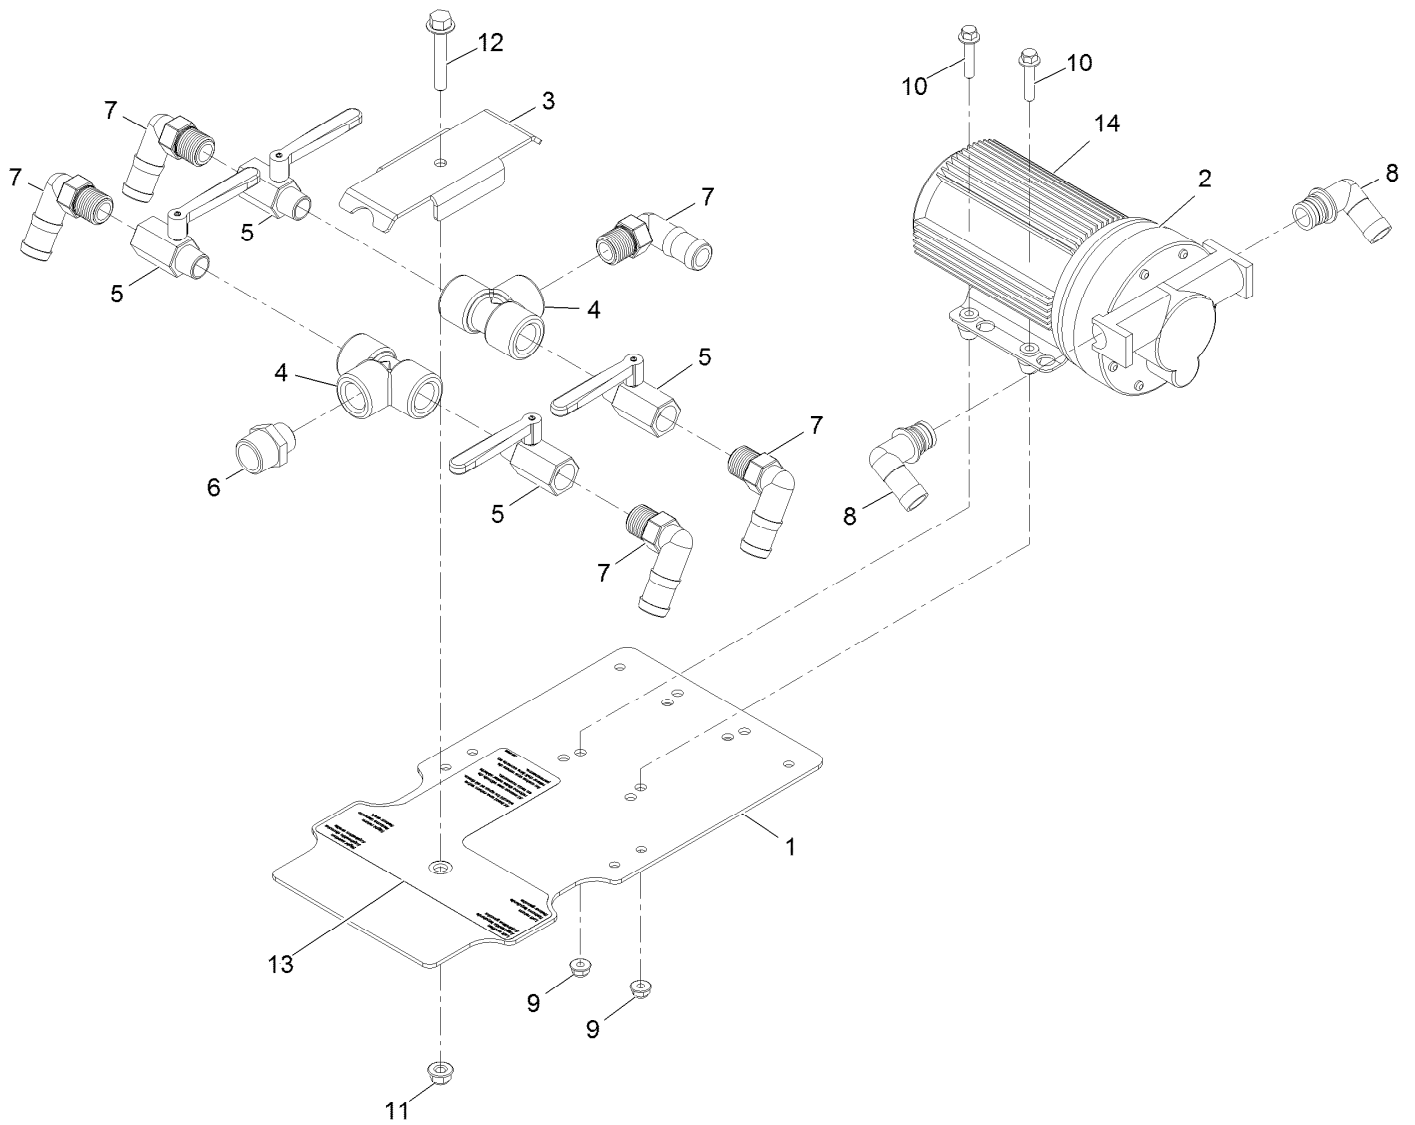

Liquid Valve Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5491	1	Mount-Plate, Liquid Valve	9	135-6108	4	Nut-Hex Flg 1/4-20 Nyloc SS
2	142-3321	1	Pump-5.3 GPM	10	135-6312	4	Screw-HHF 1/4-20 X 1 1/4 Serrated SS
3	135-5504	1	Plate-Clamp, Liquid Valve Fittings	11	135-6109	1	Nut-Hex Flg 5/16-18 Nyloc SS
4	94-7100	2	Tee	12	126-2711	1	Screw-HHF 5/16-18 X 2 Serrated SS
5	135-5760	4	Valve-Chrome, 1/2	13	135-6420	1	Decal-Valve, Tank
6	135-5742	1	Fitting-Nipple	14	142-3322	1	Heatsink-3.0"
7	92-8557	5	Elbow-90				
8	135-6003	2	Fitting-Elbow, 3/4Qd X 3/4Barb				

Hopper Assembly

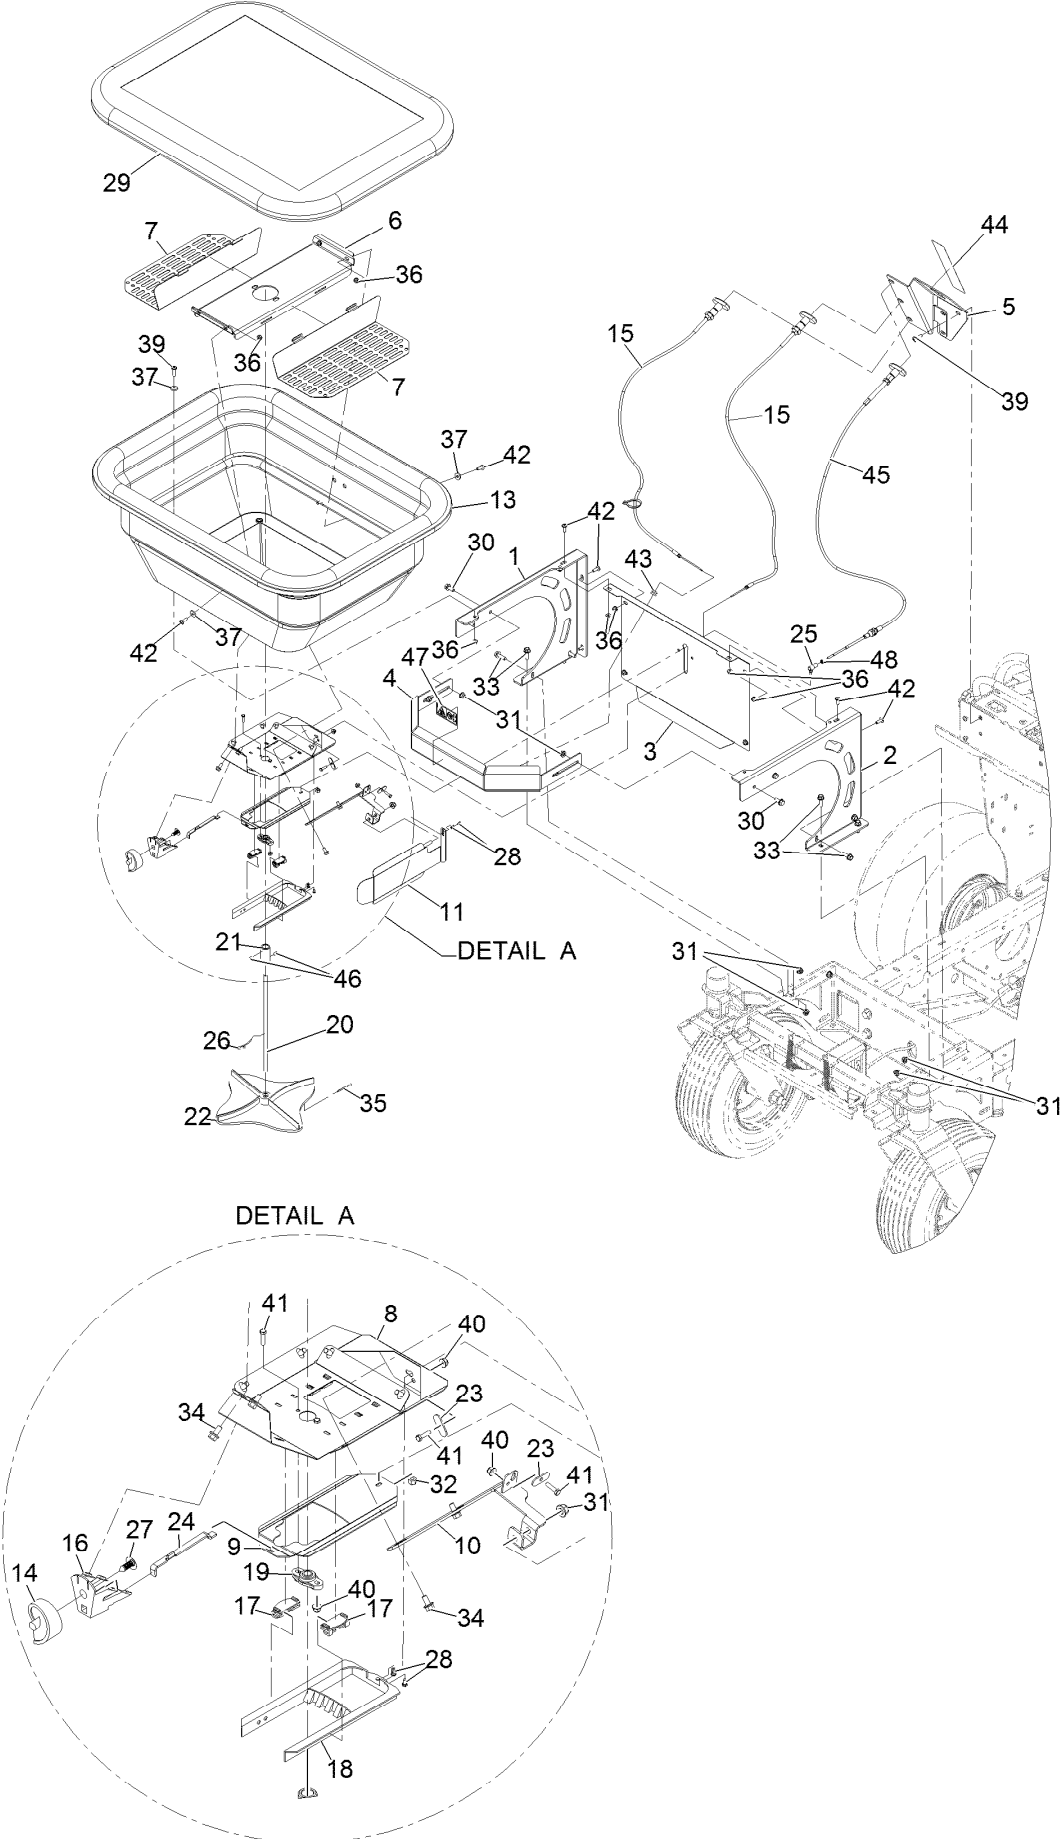

Hopper Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5391	1	Side-Hopper, Rt	27	126-0986	1	Clip
2	135-5393	1	Side-Hopper, Lt	28	135-5961	2	Retainer-Cable, Wire
3	135-5571	1	Backshield-Hopper	29	135-7981	1	Cover-Hopper, Large
4	135-5567	1	Bumper-Front, Hopper	30	126-2712	4	Screw-HHF
5	142-3283-05	1	Mount-Speedometer	31	135-6109	13	Nut-Hex Flange
6	135-5542	1	Pan-Hopper, 220	32	HDW05856	1	Nut-NYL Lock,#10-32,ST/ST 18-8
7	135-5544	2	Screen-Hopper, 220	33	135-6272	8	Screw-HHF
8	135-5572	1	Plate-Base, Hopper	34	135-6280	8	Screw-HHF, 1/4-20 X 1/2, Ser Flg, SS
9	135-5573	1	Slide-Door, Hopper	35	135-6340	1	Pin-Cotter
10	135-5388	1	Mount-Deflector, Side	36	135-6108	14	Nut-Hex Flange
11	135-5589	1	Deflector-Side, Spreader	37	135-6341	8	Washer
13	135-5985	1	Hopper-220Lb	39	135-7081	5	Screw-Hsbhf
14	126-0988	1	Dial	40	135-6342	4	Nut-Hex Flange
15	135-5931	2	Cable-Push/Pull	41	135-6356	4	Screw-HH
16	126-0985	1	Mount-Dial	42	135-7080	10	Screw-Hsbhf
17	126-0990	4	Guide-Rate, Gate	43	135-5988	1	Grommet-Rubber
18	126-0991	1	Diffuser	44	142-3351	1	Decal-Hopper Control
19	135-5943	1	Bearing-Flange	45	135-5935	1	Cable-Push/Pull
20	135-5936	1	Shaft-Hopper, 220	46	3241-7	2	Screw-SQH
21	135-5937	1	Coupler-SS	47	135-6725	1	Decal-Dismemberment Hazard
22	135-5954	1	Spinner-Spreader	48	520-0019	1	Nut-Hex, Jam
23	135-5569	2	Retainer, Cable	50	3290-378	1	Tie-Cable ●
24	135-5965	1	Linkage-Gate, Rate				
25	135-5682	1	Ball Joint-SS				
26	135-5957	1	Wire-Agitator				

● Not illustrated

Attachments and Accessories

For 34235 52in (5 GPM) Sprayer Spray Master Max

Product Name	Model/Part
Foam Marker Kit	135-6663
Liquid Valve and Alternator Kit	135-7916
Alternator Kit	135-7923
7 Gallon Auxiliary Tank Kit	142-2269
7 Gallon Isolated Tank Kit	142-2270
30 Gallon Auxiliary Tank Kit	142-2271
TIP-SPRAY, 015	142-3306
TIP-SPRAY, 02	142-3307
TIP-SPRAY, 025	142-3308
TIP-SPRAY, 03	142-3309
TIP-SPRAY, 04	142-3310
TIP-SPRAY, 05	142-3311
TIP-SPRAY, 06	142-3312

Notes:



Count on it.