



Form No. 3436-768 Rev B

**Count on it.**

# Parts Catalog

## **Workman® GTX** **Electric Utility Vehicle**

Model No. 07410—Serial No. 400000000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.


## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                                          |    |
|----------------------------------------------------------|----|
| Front Frame and Suspension Assembly . . . . .            | 4  |
| Floor Plate and Rear Suspension Mount Assembly . . . . . | 5  |
| Rear Frame and Suspension Assembly . . . . .             | 6  |
| Frame Mount and Rear Shock/Spring Assembly . . . . .     | 7  |
| Brake Assembly . . . . .                                 | 8  |
| Master Cylinder Assembly No. 104-6782 . . . . .          | 9  |
| Brake Caliper Assembly No. 140-2575 . . . . .            | 10 |
| Steering Assembly . . . . .                              | 11 |
| Pedal and Control Assembly . . . . .                     | 12 |
| Hood and Fender Assembly . . . . .                       | 13 |
| Dash Assembly . . . . .                                  | 14 |
| Seatbase Assembly . . . . .                              | 15 |
| Cargo Bed Assembly . . . . .                             | 16 |
| Battery Assembly . . . . .                               | 17 |
| Rear Axle and Motor Assembly . . . . .                   | 18 |
| Transaxle Assembly No. 136-6340 . . . . .                | 19 |
| Electric Motor Assembly No. 137-6936 . . . . .           | 20 |
| Controller Assembly . . . . .                            | 21 |
| Sevcon Controller Assembly No. 137-9898 . . . . .        | 23 |
| Onboard Charger Assembly No. 131-8490 . . . . .          | 24 |
| Accelerator Pedal and Key Switch Assembly . . . . .      | 25 |
| Attachments and Accessories . . . . .                    | 26 |

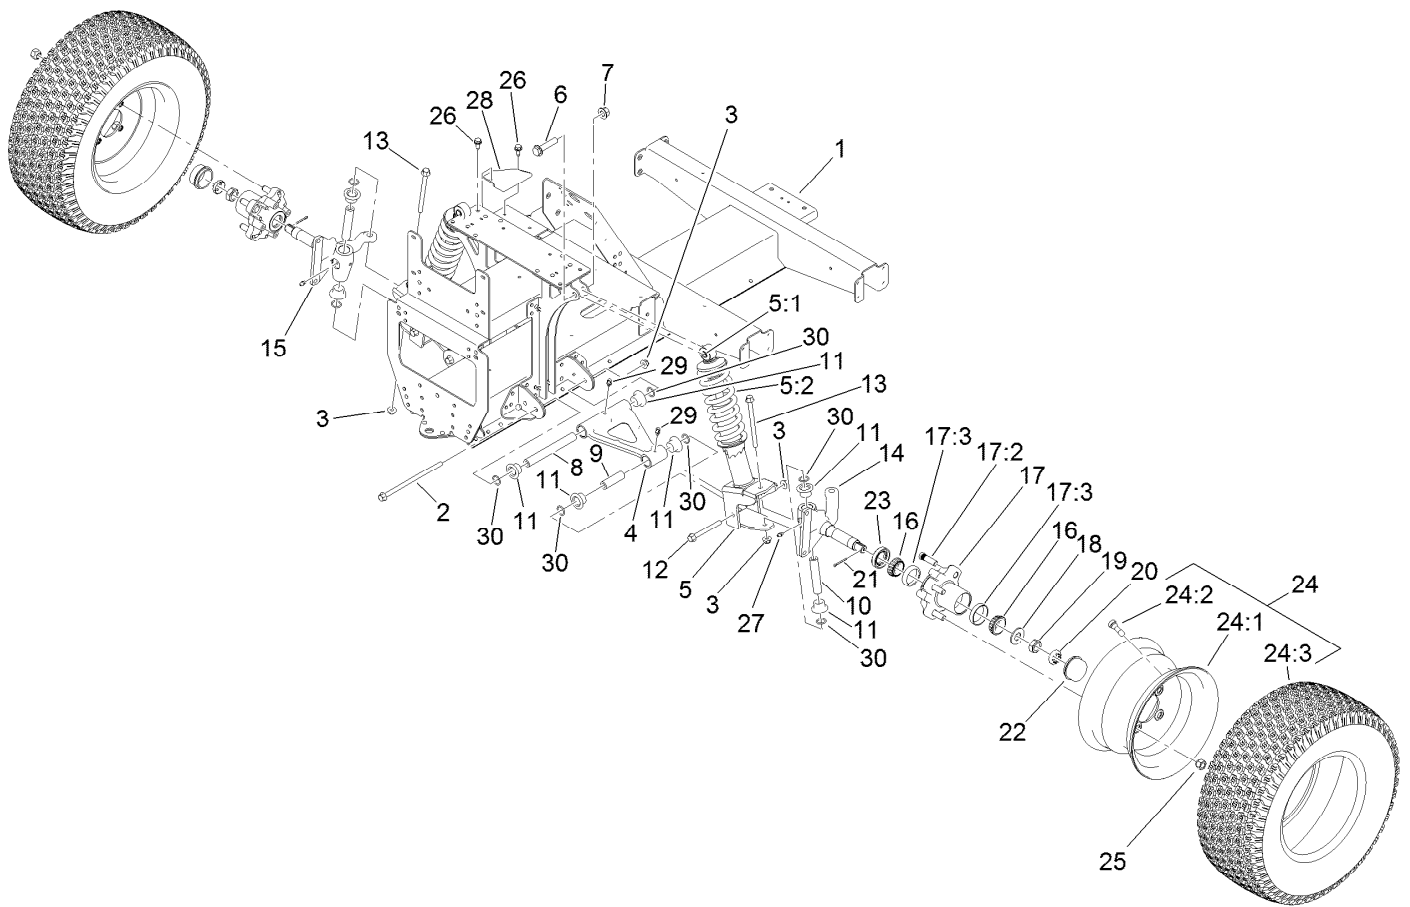

## Front Frame and Suspension Assembly

| Ref. | Part Number | Qty. | Description                           |
|------|-------------|------|---------------------------------------|
| 1    | 127-7718-03 | 1    | Frame-Front                           |
| 2    | 139-3360    | 2    | Screw-HF                              |
| 3    | 139-3380    | 6    | Nut-HF                                |
| 4    | 139-4465    | 2    | A-Arm                                 |
| 5    | 139-4484    | 2    | Strut ASM, 250 Lb (16.33" EXT Length) |
| 5:1  | 131-8574    | 1    | Isolator-Shock                        |
| 5:2  | 137-6719    | 1    | Spring-Compression, 250Lb             |
| 6    | 3234-46     | 2    | Screw-HHF                             |
| 7    | 99-5107     | 2    | Nut-Lock                              |
| 8    | 131-8581    | 2    | Sleeve-Control Arm, Inner             |
| 9    | 131-8583    | 2    | Sleeve-Control Arm, Outer             |
| 10   | 131-8582    | 2    | Sleeve-Kingpin                        |
| 11   | 133-0643    | 12   | Bushing-Flange, O-Ring                |
| 12   | 139-3370    | 2    | Screw-HF                              |
| 13   | 139-3350    | 2    | Screw-HF                              |
| 14   | 127-8825-03 | 1    | Spindle-LH                            |
| 15   | 127-8826-03 | 1    | Spindle-RH                            |
| 16   | 254-94      | 4    | Bearing-Cone, Tapered                 |


| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 17   | 127-8851    | 2    | Front Hub ASM        |
| 17:2 | 10-6830     | 4    | Stud-Type, Drive     |
| 17:3 | 254-72      | 2    | Bearing-Cup, Tapered |
| 18   | 93-0309     | 2    | Washer-Tab           |
| 19   | 3220-7      | 2    | Nut-Jam              |
| 20   | 93-0307     | 2    | Nut-Lock, Retainer   |
| 21   | 3272-12     | 2    | Pin-Cotter           |
| 22   | 241-119     | 2    | Cap-Dust             |
| 23   | 112-1690    | 2    | Seal-Oil             |
| 24   | 139-4495    | 2    | Wheel And Tire ASM   |
| 24:1 | 131-8317    | 1    | Wheel                |
| 24:2 | 232-27      | 1    | Stem-Valve           |
| 24:3 | 139-4475    | 1    | Tire-20 X 8.00-10    |
| 25   | 242-50      | 8    | Nut-Lug              |
| 26   | 32144-70    | 2    | Screw-HWHTF          |
| 27   | 302-5       | 2    | Fitting-Grease       |
| 28   | 131-8339-03 | 1    | Reinforcement-Tower  |
| 29   | 302-60      | 4    | Fitting-Grease       |
| 30   | 237-54      | 12   | O-Ring               |



## Floor Plate and Rear Suspension Mount Assembly

| Ref. | Part Number | Qty. | Description                  |
|------|-------------|------|------------------------------|
| 1    | 104-8301    | 2    | Nut-HF, NI                   |
| 2    | 131-8466    | 1    | Mount-Suspension, Rear       |
| 3    | 127-7820-03 | 1    | Channel-Frame, Front (LH)    |
| 4    | 127-7821-03 | 1    | Channel-Frame, Front (RH)    |
| 5    | 127-7829    | 1    | Plate-Floor                  |
| 6    | 131-8597    | 1    | Plate-Gimbal, Upper          |
| 7    | 323-42      | 2    | Screw-HH                     |
| 8    | 127-7837-03 | 2    | Bracket-Support, Floor Plate |

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 9    | 127-7832    | 2    | Bracket-Angle   |
| 10   | 32144-70    | 16   | Screw-HWHTF     |
| 11   | 32144-49    | 4    | Screw-HWHTF     |
| 12   | 132-6777    | 4    | Screw-TTH       |
| 13   | 104-7201    | 4    | Nut-HF          |
| 14   | 110-4549    | 1    | Washer-Snubbing |
| 15   | 131-8480    | 1    | Isolator        |
| 16   | 104-5877    | 1    | Screw-HH        |

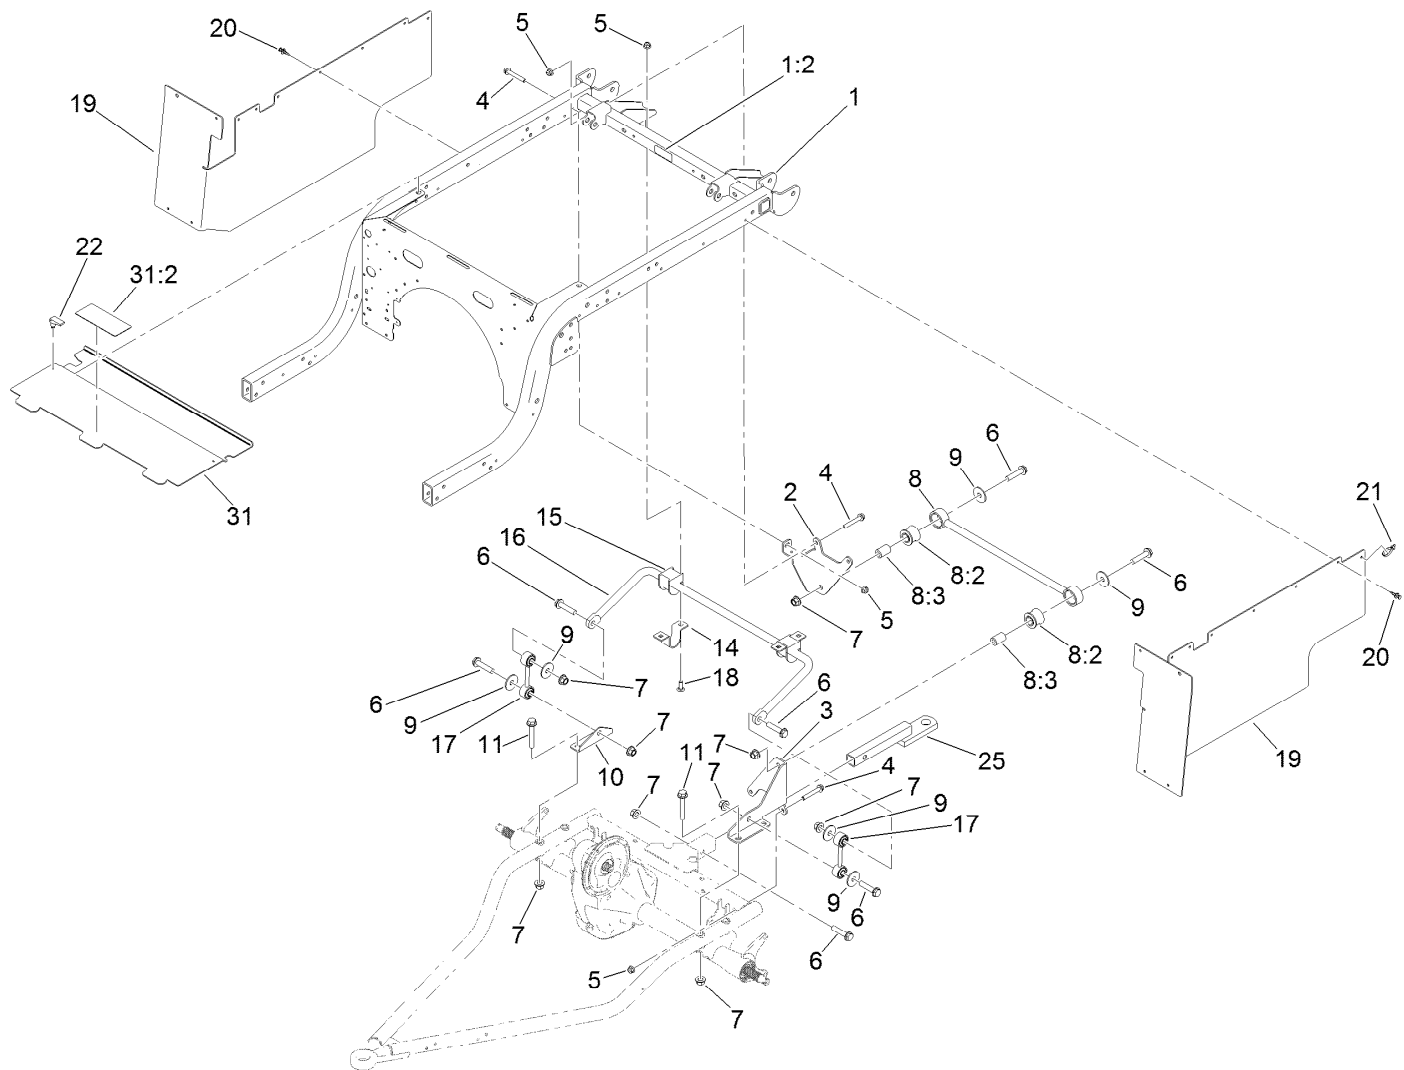

## Rear Frame and Suspension Assembly


| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 131-8594    | 1    | *obs* Rear Frame ASM       |
| 1:2  | 115-2047    | 1    | Decal-Surface, Hot         |
| 2    | 139-4647-03 | 1    | Bracket-Stabilizer Bar     |
| 3    | 127-7411-03 | 1    | Bracket-Bar, Stabilizer    |
| 4    | 3234-39     | 5    | Screw-HHF                  |
| 5    | 104-8301    | 9    | Nut-HF, NI                 |
| 6    | 3234-46     | 7    | Screw-HHF                  |
| 7    | 99-5107     | 11   | Nut-Lock                   |
| 8    | 109-5013    | 1    | Panhard Rod ASM            |
| 8:2  | 109-5009    | 2    | Bushing-Suspension, Rubber |
| 8:3  | 109-5010    | 2    | Spacer                     |
| 9    | 86-1990     | 6    | Washer-Thrust              |
| 10   | 131-8315    | 1    | Bracket-Link, Sway Bar     |

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 11   | 3234-40     | 4    | Screw-HF             |
| 14   | 139-4644    | 2    | Clamp, Anti-Sway Bar |
| 15   | 87-3910     | 2    | Bushing-Rubber       |
| 16   | 131-8310-03 | 1    | Bar-Sway, Anti       |
| 17   | 131-8394    | 2    | Link-Bar, Sway       |
| 18   | 3231-22     | 4    | Screw-CARR           |
| 19   | 131-8346    | 2    | Panel-Side           |
| 20   | 125-9622    | 20   | Rivet-Blind          |
| 21   | 3290-378    | 2    | Tie-Cable            |
| 22   | 74-5950     | 2    | Latch-Swell          |
| 25   | 137-6741    | 1    | Ball Mount ASM       |
| 31   | 140-4573    | 1    | Extended Panel-Cover |
| 31:2 | 99-7345     | 1    | Decal-Warning        |



## Frame Mount and Rear Shock/Spring Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 3234-39            | 8           | Screw-HHF          |
| 2           | 104-8301           | 8           | Nut-HF, NI         |
| 3           | 3234-46            | 4           | Screw-HHF          |
| 4           | 99-5107            | 4           | Nut-Lock           |
| 5           | 139-4607           | 2           | Shock/Spring ASM   |
| 5:1         | 131-8574           | 2           | Isolator-Shock     |

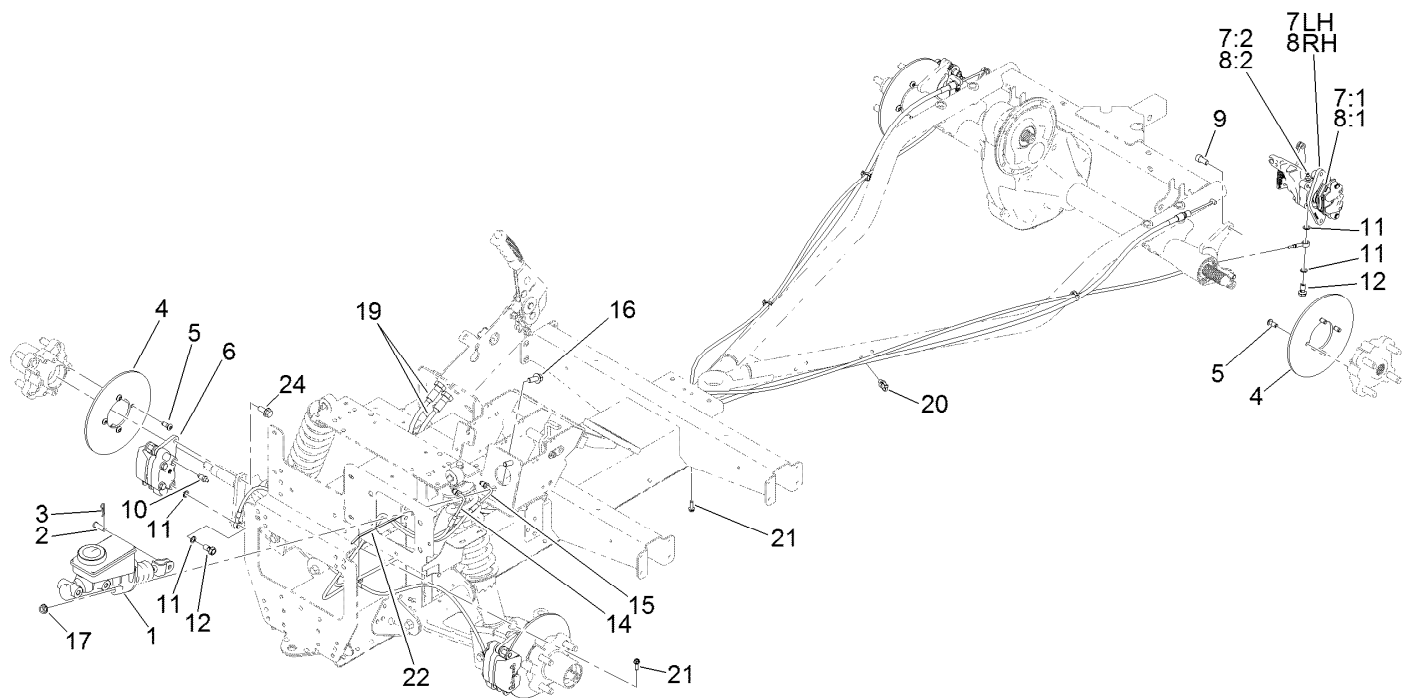

## Brake Assembly

| Ref. | Part Number | Qty. | Description                         |
|------|-------------|------|-------------------------------------|
| 1    | 104-6782    | 1    | Master Cylinder ASM                 |
| 2    | 283-2       | 1    | Pin-Clevis                          |
| 3    | 1-806003    | 1    | Pin-Cotter                          |
| 4    | 139-4474    | 4    | Rotor-Brake                         |
| 5    | 121-9671    | 16   | Screw-HSBH                          |
| 6    | 140-2575    | 2    | Brake Caliper ASM                   |
| 7    | 140-2585    | 1    | Brake Caliper ASM, LH               |
| 7:1  | 140-2595    | 1    | Brake Pad Service Kit (Rear, Qty 4) |
| 7:2  | 119-9509    | 1    | Screw-Bleed                         |
| 7:3  | 136-6328    | 2    | Spring-Rattle, Anti ●               |
| 8    | 140-2590    | 1    | Brake Caliper ASM, RH               |
| 8:1  | 140-2595    | 1    | Brake Pad Service Kit (Rear, Qty 4) |
| 8:2  | 119-9509    | 1    | Screw-Bleed                         |

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 8:3  | 136-6328    | 2    | Spring-Rattle, Anti ● |
| 9    | 131-8573    | 4    | Screw-HSH             |
| 10   | 119-9509    | 2    | Screw-Bleed           |
| 11   | 115-2341    | 8    | Washer-Banjo          |
| 12   | 120-4875    | 4    | Bolt-Flange, Banjo    |
| 14   | 127-7781    | 1    | Brake Line-Front      |
| 15   | 127-7782    | 1    | Brake Line-Rear       |
| 16   | 3234-11     | 2    | Screw-HHF             |
| 17   | 3290-357    | 2    | Nut-HHF, Whiz         |
| 19   | 131-8406    | 2    | Cable-Park Brake      |
| 20   | 32180-030   | 4    | Clip-Tie              |
| 21   | 49-2040     | 2    | Screw-HWHTF           |
| 22   | 3290-378    | 1    | Tie-Cable             |
| 24   | 3234-25     | 4    | Screw-HHF             |

● Not illustrated




## Master Cylinder Assembly No. 104-6782

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 104-6845    | 1    | Reservoir ASM        |
| 1:1  | 92-4112     | 1    | Cap ASM              |
| 2    | 93-8971     | 2    | Seal-Port, Flange    |
| 3    | 92-4103     | 1    | Pin-Stop             |
| 4    | 92-4102     | 1    | Secondary Piston ASM |
| 5    | 92-4110     | 1    | Clevis               |
| 6    | 21-0360     | 1    | Nut-Hex              |
| 7    | 94-5209     | 1    | Cover-Dust           |
| 8    | 94-5210     | 1    | Rod-Push             |
| 9    | 92-4109     | 1    | Ring-Snap            |
| 10   | 92-4108     | 1    | Retainer-Washer      |
| 11   | 92-4101     | 1    | Primary Piston ASM   |



## Brake Caliper Assembly No. 140-2575


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                   |
|-------------|--------------------|-------------|--------------------------------------|
| 1           | 140-2580           | 1           | Brake Pad Service Kit (Front, Qty 4) |
| 2           | 119-9511           | 1           | Bracket Kit                          |
| 3           | 133-0614           | 1           | Piston Kit                           |

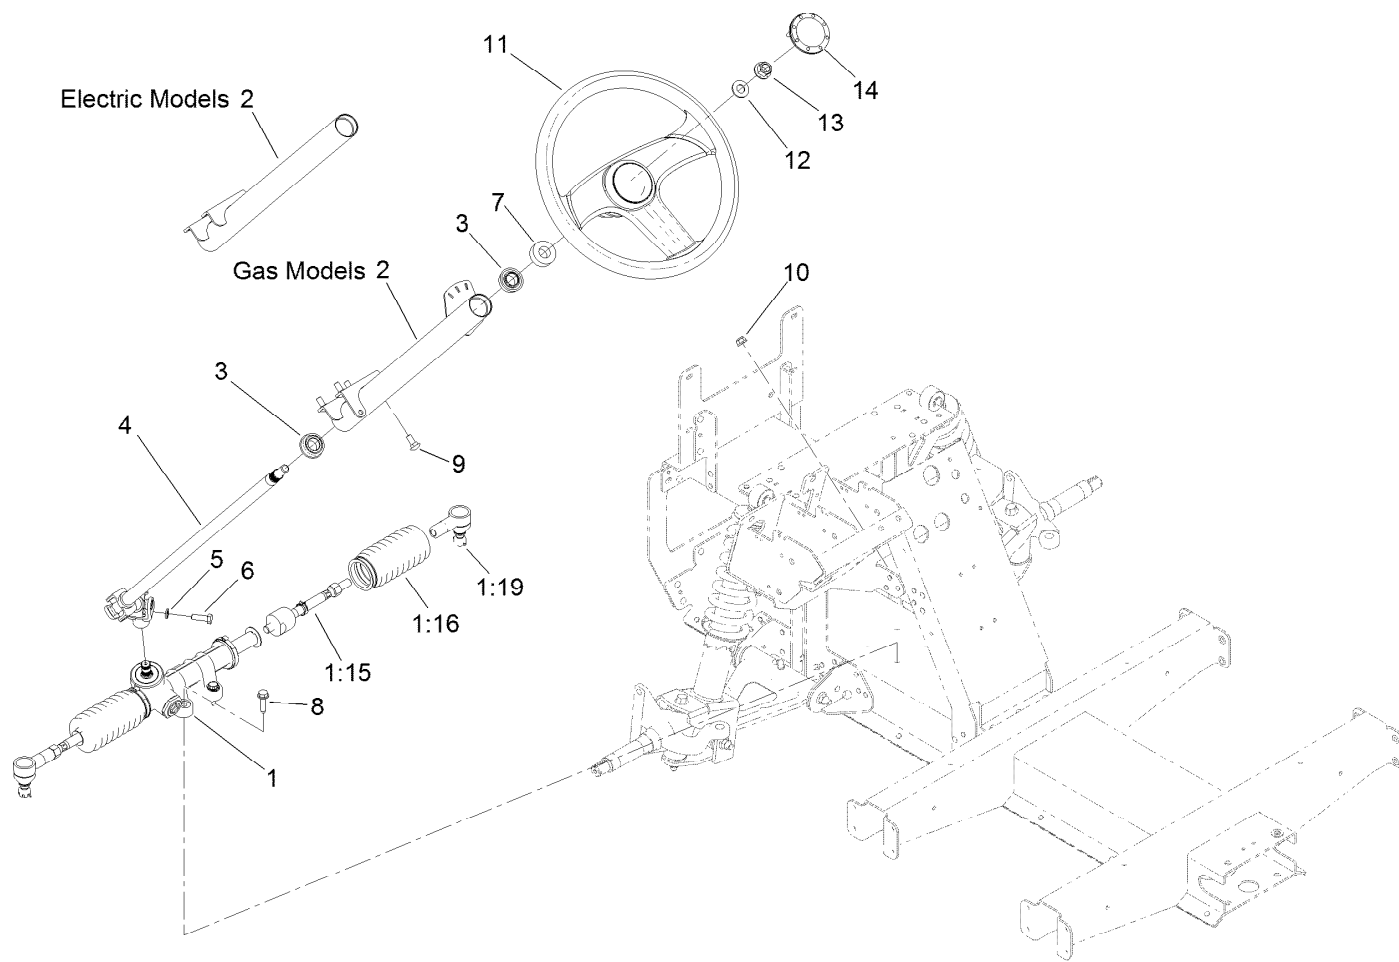

## Steering Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 138-0114    | 1    | Steering Rack ASM   |
| 1:15 | 138-0119    | 2    | Rod-Tie, Inner      |
| 1:16 | 138-0130    | 2    | Bellows-Steering    |
| 1:19 | 138-0133    | 2    | Rod End-Steering    |
| 2    | 139-3343    | 1    | Steering Column ASM |
| 3    | 112-3262    | 2    | Bearing             |
| 4    | 127-8804    | 1    | Shaft-Steering      |
| 5    | 3253-4      | 1    | Washer-Lock         |
| 6    | 116-3515    | 1    | Screw-HH, Special   |


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 7    | 21-9260     | 1    | Cover-Dust          |
| 8    | 32144-49    | 4    | Screw-HWHTF         |
| 9    | 3230-1      | 4    | Bolt-CARR           |
| 10   | 104-8300    | 4    | Nut-HF, NI          |
| 11   | 131-0957    | 1    | Wheel-Steering      |
| 12   | 3256-26     | 1    | Washer-Flat         |
| 13   | 99-5107     | 1    | Nut-Lock            |
| 14   | 131-3630    | 1    | Cap-Wheel, Steering |

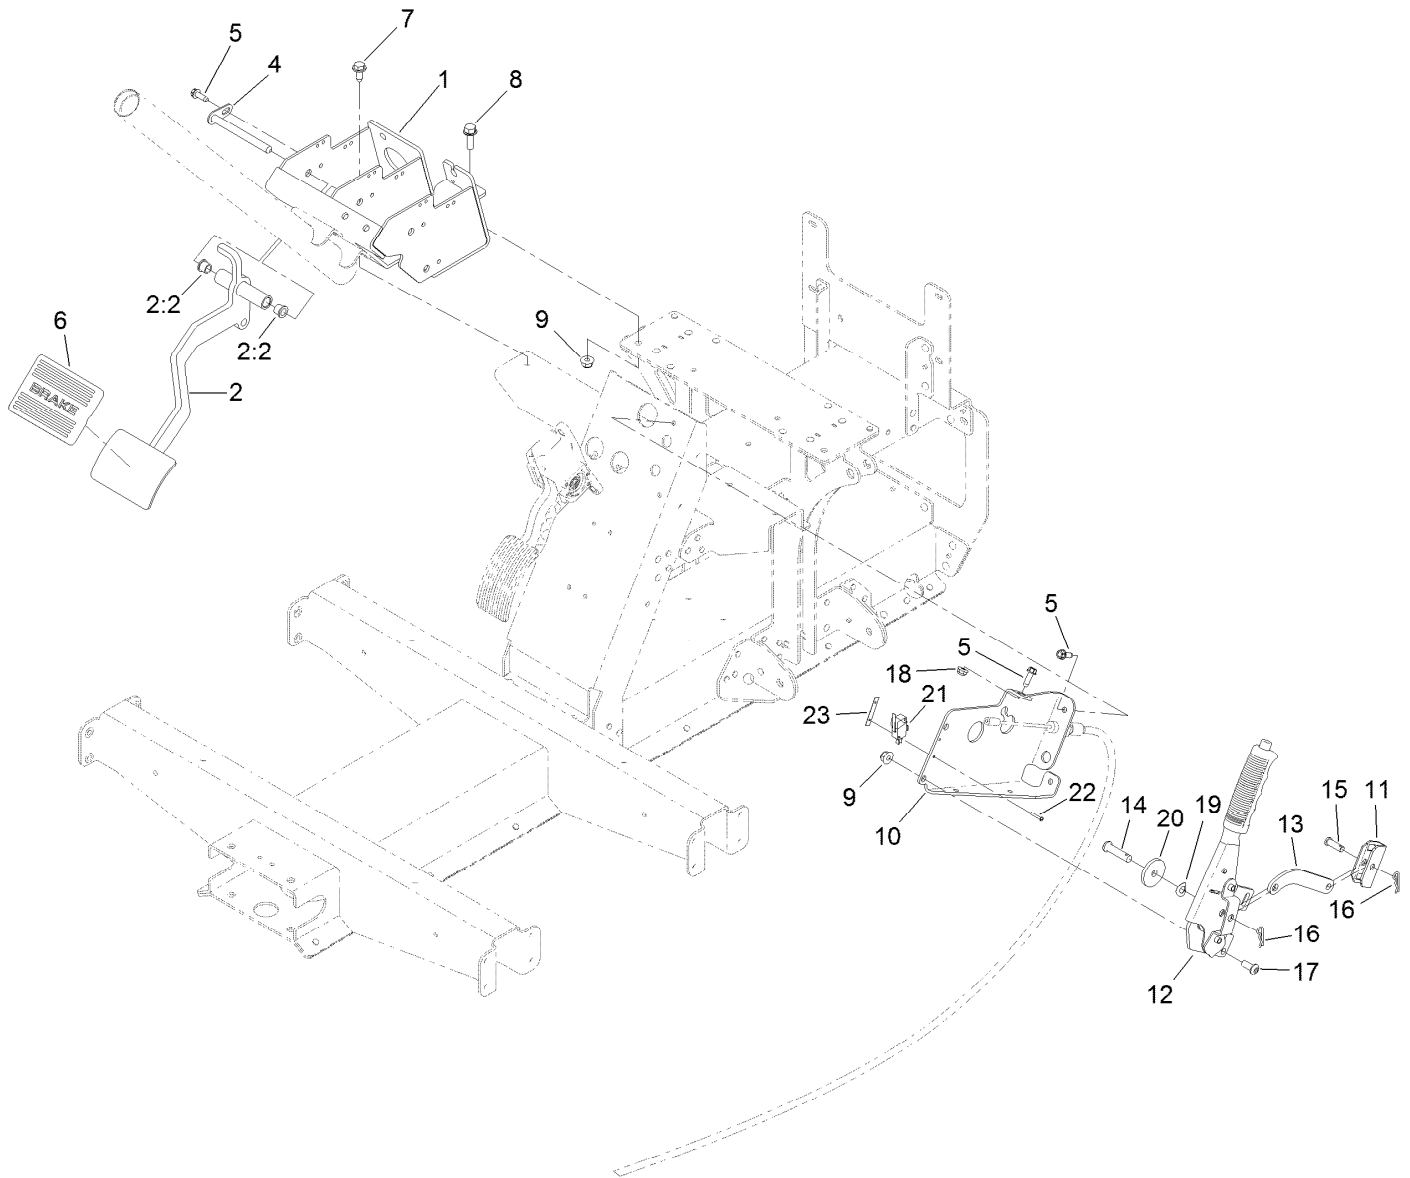

## Pedal and Control Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 127-8817-03 | 1    | Mount-Pedal              |
| 2    | 138-9385    | 1    | Brake Pedal ASM          |
| 2:2  | 256-116     | 2    | Bushing-Flange           |
| 4    | 131-8459    | 1    | Shaft-Pivot              |
| 5    | 49-2040     | 4    | Screw-HWHTF              |
| 6    | 7-3900      | 1    | Pad-Brake                |
| 7    | 32144-70    | 2    | Screw-HWHTF              |
| 8    | 3234-29     | 1    | Screw-HHF                |
| 9    | 104-8300    | 3    | Nut-HF, NI               |
| 10   | 127-8834-03 | 1    | Mount-Brake, Park        |
| 11   | 87-3480     | 1    | Bracket-Equalizer, Cable |
| 12   | 131-8320    | 1    | Lever-Brake, Park        |


| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 13   | 127-8836-03 | 1    | Link-Brake, Park |
| 14   | 283-10      | 1    | Pin-Clevis       |
| 15   | 1-808280    | 1    | Pin-Clevis       |
| 16   | 1-806003    | 2    | Pin-Cotter       |
| 17   | 3274-55     | 2    | Screw-HSBH       |
| 18   | 104-7201    | 1    | Nut-HF           |
| 19   | 121-4605    | 1    | Washer-Spring    |
| 20   | 131-8496    | 1    | Washer-Plain     |
| 21   | 108-6496    | 1    | Switch (W/Boot)  |
| 22   | 3290-313    | 2    | Screw-SPH        |
| 23   | 3290-354    | 1    | Nut-Speed        |

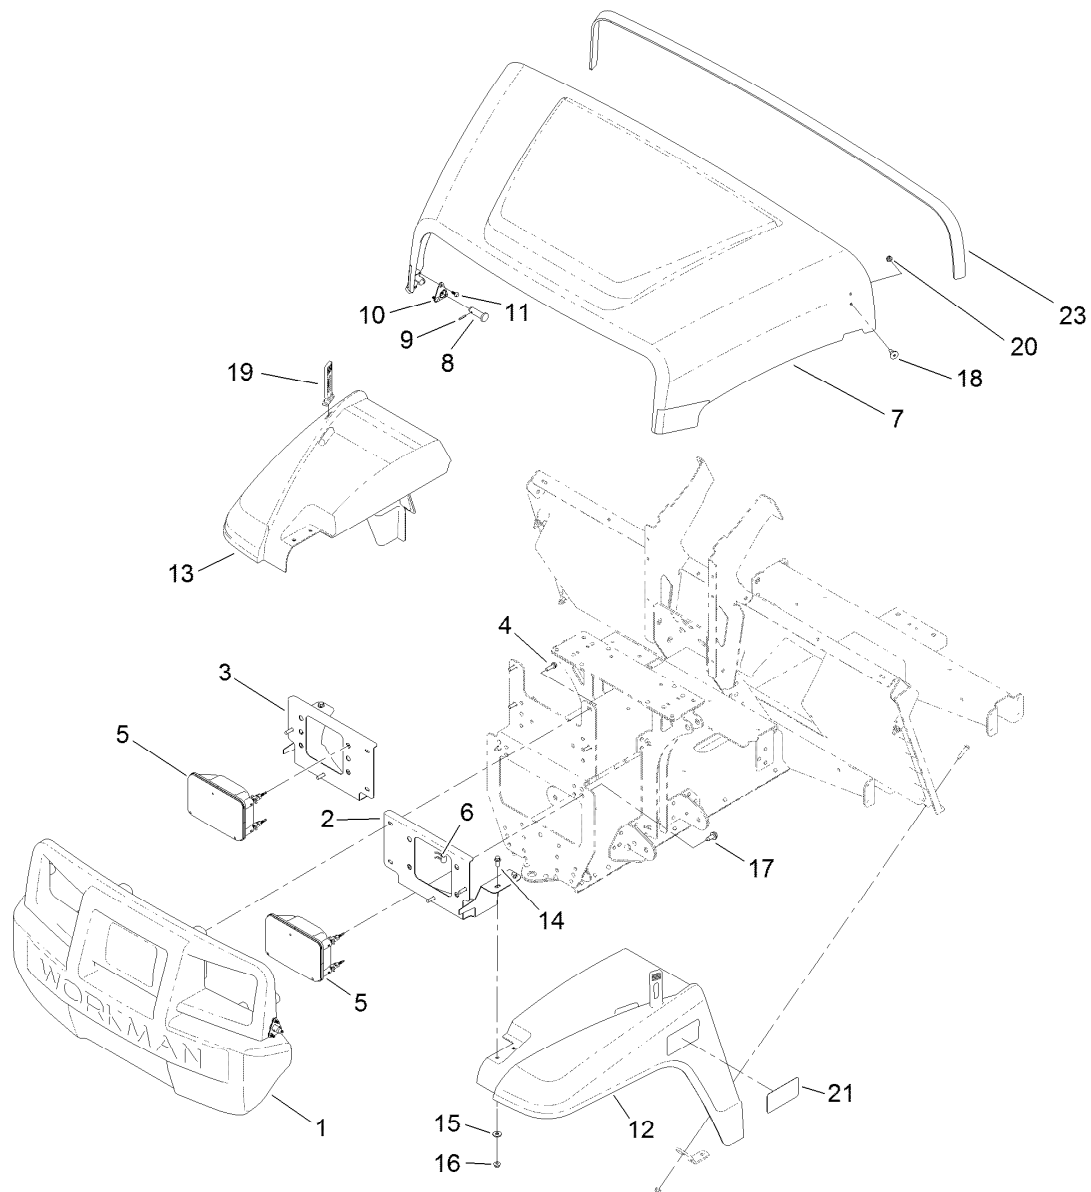

## Hood and Fender Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 132-8530    | 1    | Bumper                |
| 2    | 131-8455-03 | 1    | Bracket-Headlight, LH |
| 3    | 131-8456-03 | 1    | Bracket-Headlight, RH |
| 4    | 46-8091     | 8    | Screw-HWH             |
| 5    | 138-9260    | 2    | Headlight ASM         |
| 6    | 115-2408    | 6    | Clip-Speed            |
| 7    | 136-6281    | 1    | Hood                  |
| 8    | 117-5094    | 2    | Pin-Clevis            |
| 9    | 32121-50    | 2    | Pin-Spring            |
| 10   | 112-3308    | 2    | Retainer-Pin          |
| 11   | 121-9605    | 6    | Screw-HWH             |


| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 12   | 127-7771    | 1    | Fender-Front, LH |
| 13   | 127-7772    | 1    | Fender-Front, RH |
| 14   | 3234-33     | 4    | Screw-HHF        |
| 15   | 3256-2      | 4    | Washer-Flat      |
| 16   | 104-7201    | 4    | Nut-HF           |
| 17   | 32144-70    | 2    | Screw-HWHTF      |
| 18   | 125-1122    | 2    | Screw            |
| 19   | 131-8402    | 2    | Strap-Down, Hold |
| 20   | 3296-56     | 2    | Nut-Lock, NI     |
| 21   | 131-8516    | 2    | Decal-Fender     |
| 23   | 133-7210    | 1    | Seal-Trim, Hood  |

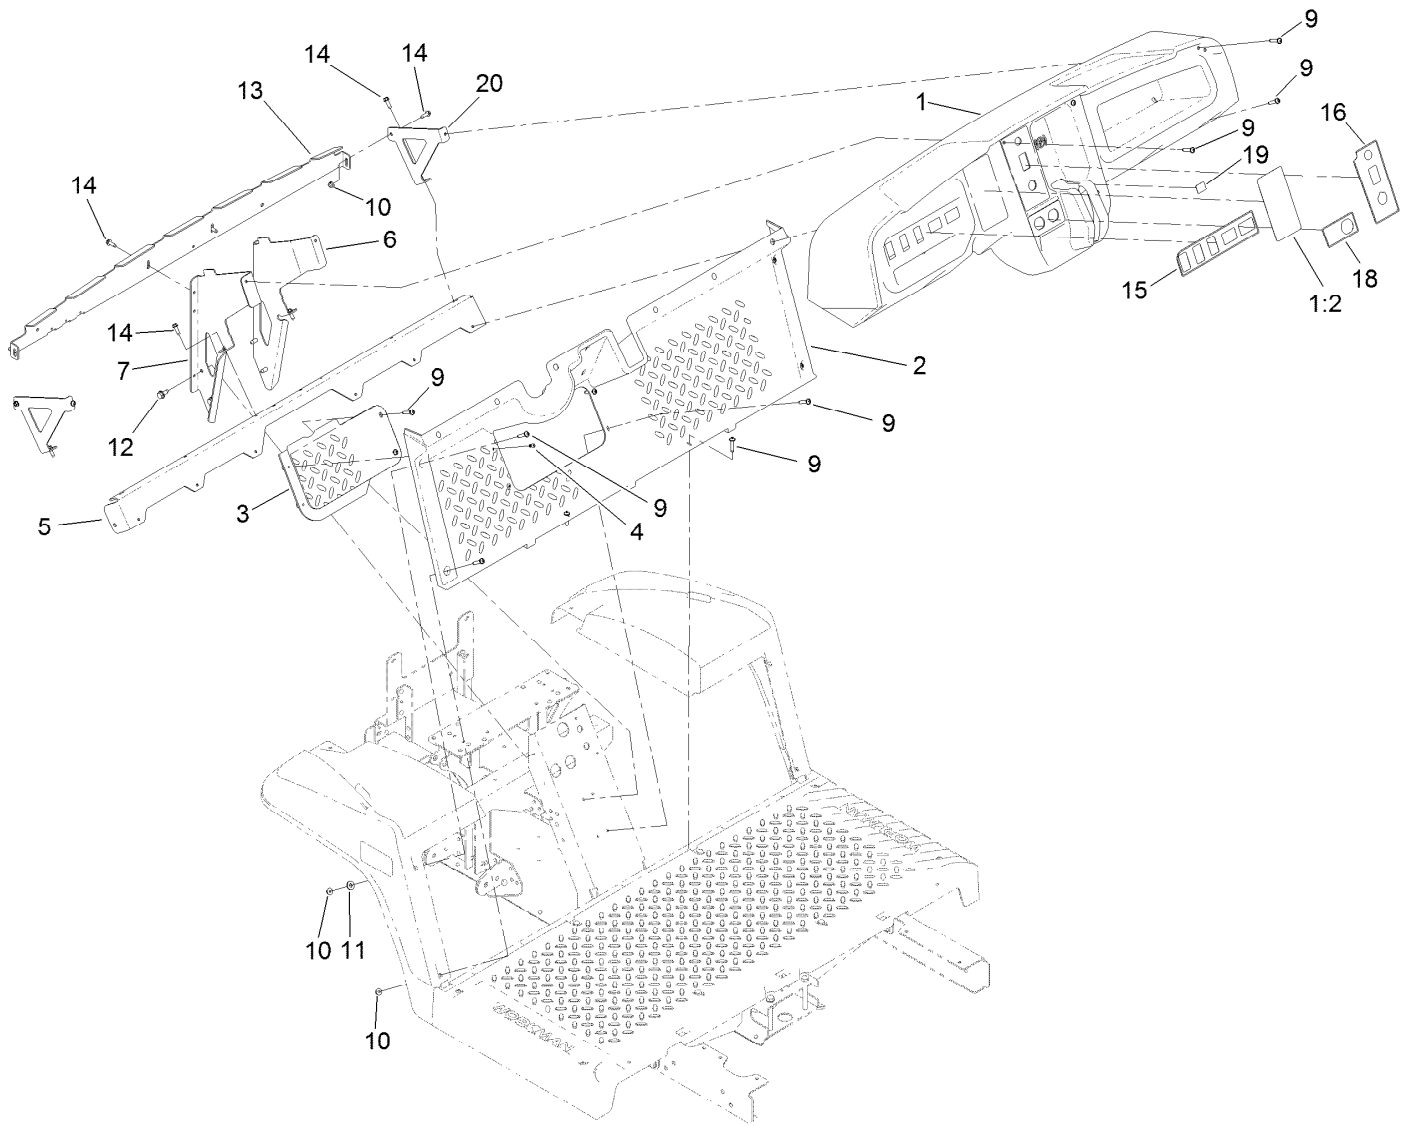

## Dash Assembly


| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 131-8593    | 1    | Dash             |
| 1:2  | 131-8414    | 1    | Decal-Danger     |
| 2    | 127-7846    | 1    | Footboard        |
| 3    | 127-7847    | 1    | Cover-Footboard  |
| 4    | 107-7461    | 2    | Screw-Plastite   |
| 5    | 127-7831-03 | 1    | Angle            |
| 6    | 131-8336-03 | 1    | Bracket-Dash, RH |
| 7    | 131-8335-03 | 1    | Bracket-Dash, LH |
| 9    | 132-6777    | 20   | Screw-TTH        |
| 10   | 104-7201    | 6    | Nut-HF           |

| Ref. | Part Number | Qty. | Description                   |
|------|-------------|------|-------------------------------|
| 11   | 3256-2      | 2    | Washer-Flat                   |
| 12   | 32144-70    | 4    | Screw-HWHTF                   |
| 13   | 131-8568-03 | 1    | Reinforcement-Dash            |
| 14   | 49-2040     | 8    | Screw-HWHTF                   |
| 15   | 138-3525    | 1    | Decal-Dashboard               |
| 16   | 131-8412    | 1    | Decal-Control Panel, Electric |
| 18   | 131-8493    | 1    | Decal-USB                     |
| 19   | 131-8506    | 1    | Decal-Status, Machine         |
| 20   | 131-8569-03 | 2    | Bracket-Dash, Side            |

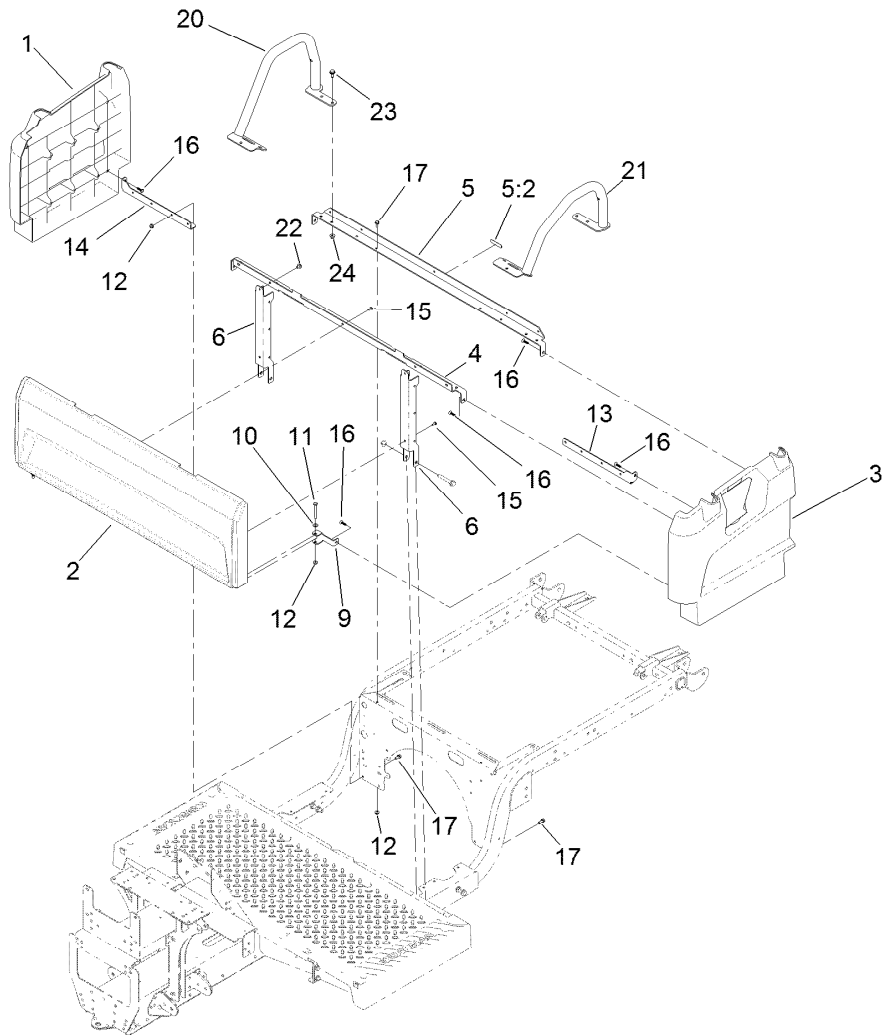


## Seatbase Assembly

| Ref. | Part Number | Qty. | Description           | Ref. | Part Number | Qty. | Description                |
|------|-------------|------|-----------------------|------|-------------|------|----------------------------|
| 1    | 127-7805    | 1    | Side-Base, Seat (RH)  | 13   | 127-7842-03 | 1    | Bracket-Support, Side (LH) |
| 2    | 133-7188    | 1    | Panel-Base, Seat      | 14   | 127-7843-03 | 1    | Bracket-Support, Side (RH) |
| 3    | 127-7807    | 1    | Side-Base, Seat (LH)  | 15   | 112-6349    | 5    | Screw-HWH                  |
| 4    | 133-7345-03 | 1    | Support-Seat          | 16   | 120-2349    | 8    | Screw                      |
| 5    | 137-6991    | 1    | Seat Support ASM      | 17   | 3234-33     | 6    | Screw-HHF                  |
| 5:2  | 120-9570    | 1    | Decal-Warning         | 20   | 131-8352-05 | 1    | Restraint-Hip, RH          |
| 6    | 127-7841-03 | 2    | Channel-Support, Seat | 21   | 131-8353-05 | 1    | Restraint-Hip, LH          |
| 9    | 127-7844-03 | 2    | Clamp-Plate, Floor    | 22   | 46-6810     | 2    | Screw And Washer ASM       |
| 10   | 3256-22     | 2    | Washer-Flat           | 23   | 32144-70    | 6    | Screw-HWHTF                |
| 11   | 321-18      | 2    | Screw-HH              | 24   | 104-8300    | 6    | Nut-HF, NI                 |
| 12   | 104-7201    | 8    | Nut-HF                |      |             |      |                            |

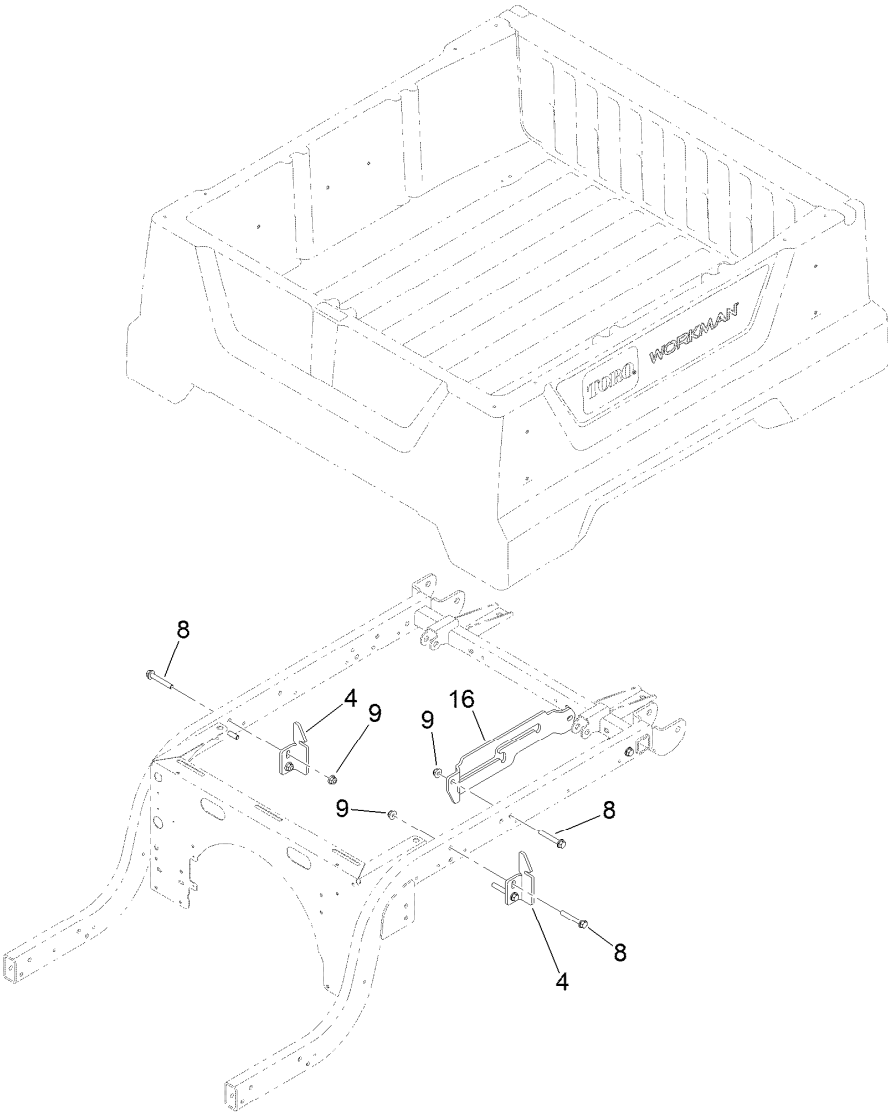

Cargo Bed Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 4    | 127-7428-03 | 2    | Striker-Latch, Bed |
| 8    | 3234-39     | 6    | Screw-HHF          |
| 9    | 104-8301    | 6    | Nut-HF, NI         |
| 16   | 132-8518    | 1    | Bracket-Rod, Prop  |

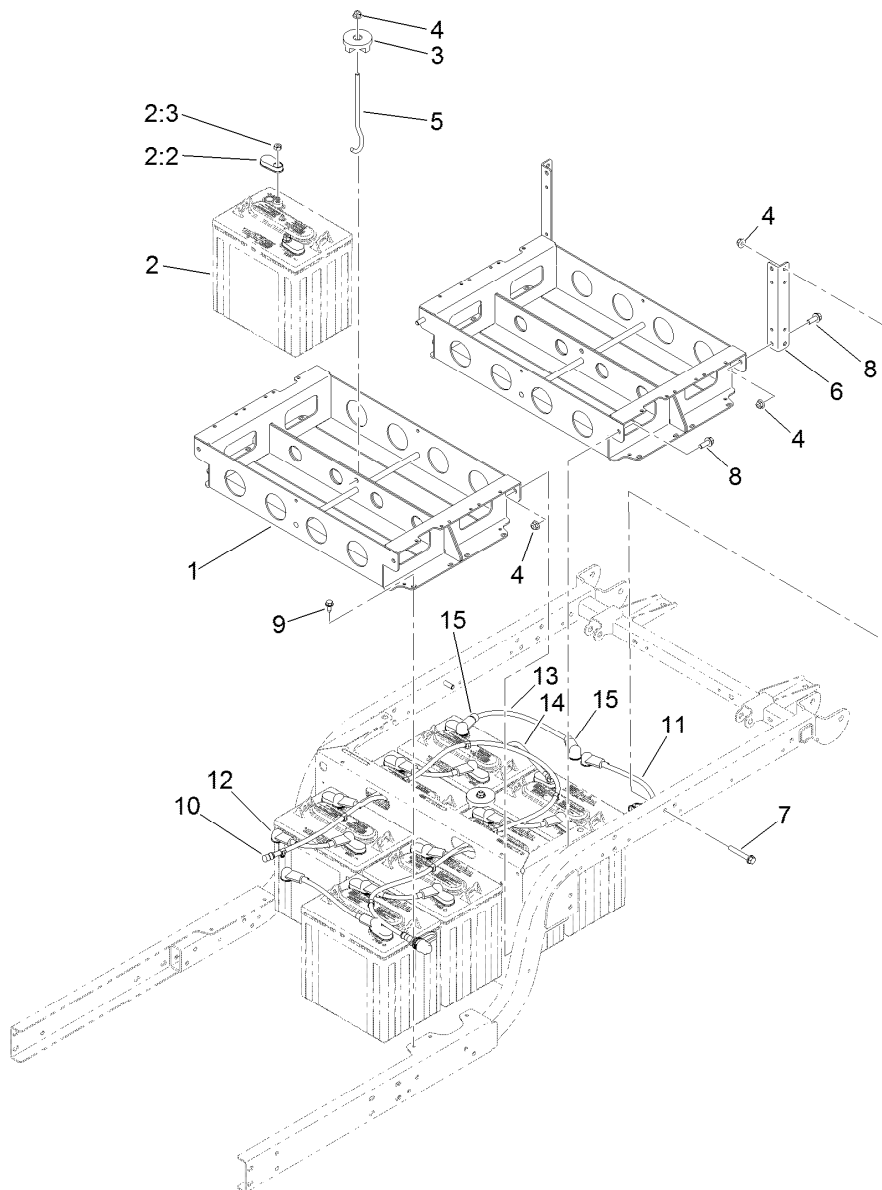


## Battery Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 131-8300-03 | 2    | Tray-Battery             |
| 2    |             | 8    | Battery-Lead Acid, Wet ■ |
| 2:2  | 107-0289    | 2    | Cover-Terminal, Battery  |
| 2:3  | 107-0388    | 2    | Nut                      |
| 3    | 104-7149    | 2    | Hold Down ASM            |
| 4    | 104-8301    | 8    | Nut-HF, NI               |
| 5    | 131-8387    | 2    | Rod-Battery Hold Down    |
| 6    | 131-8302-03 | 2    | Bracket-Box, Battery     |
| 7    | 3234-39     | 2    | Screw-HHF                |
| 8    | 3234-42     | 4    | Screw-HHF                |

| Ref. | Part Number | Qty. | Description                    |
|------|-------------|------|--------------------------------|
| 9    | 32144-70    | 4    | Screw-HWHTF                    |
| 10   | 131-8491    | 1    | Watering Hose ASM              |
| 11   | 107-0739    | 2    | Cable-Battery, Positive        |
| 12   | 107-0738    | 6    | Cable-Battery, Positive        |
| 13   | 122-0750    | 1    | Cable-Battery, Positive        |
| 14   | 94-6168     | 1    | Wire-Ground, Battery           |
| 15   | 32180-009   | 2    | Insulator-Lug, Red             |
| 99   | 107-0392    | 1    | Protection-Terminal, Aerosol ● |

● Not illustrated

■ Not serviced separately

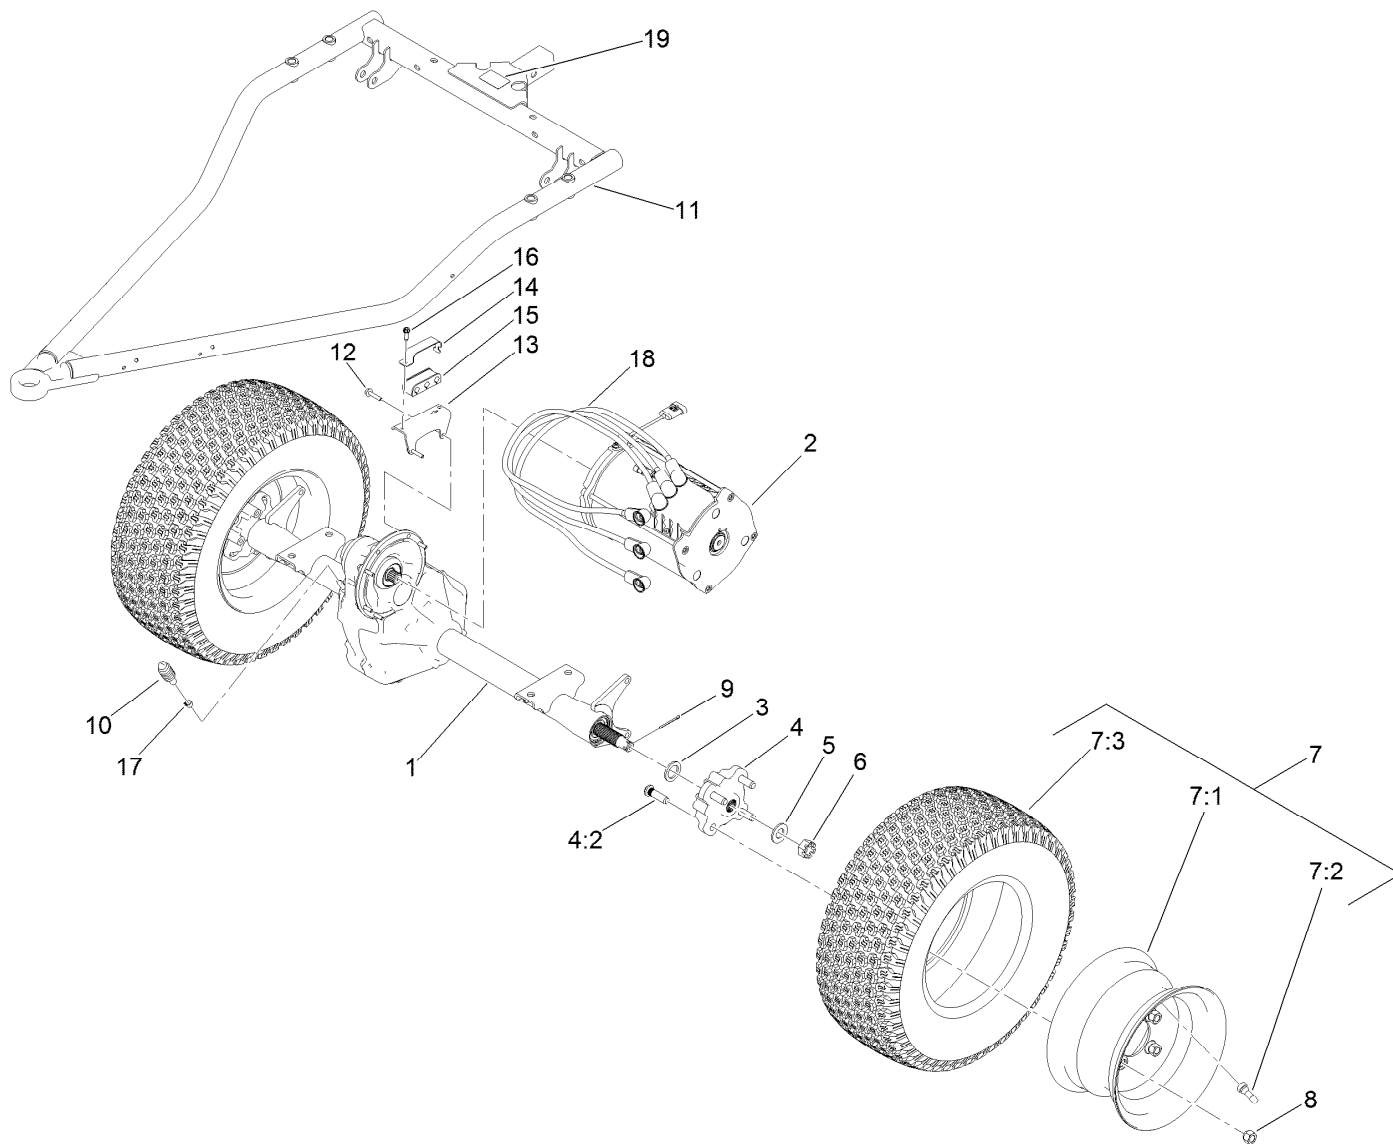


## Rear Axle and Motor Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 136-6340    | 1    | Transaxle ASM      |
| 2    | 137-6936    | 1    | Motor-AC           |
| 3    | 131-8570    | 2    | Spacer-Hardened    |
| 4    | 127-8848    | 2    | Rear Hub ASM       |
| 4:2  | 10-6830     | 4    | Stud-Type, Drive   |
| 5    | 92-5836     | 2    | Washer             |
| 6    | 32136-5     | 2    | Nut-Hex, Slotted   |
| 7    | 139-4495    | 2    | Wheel And Tire ASM |
| 7:1  | 131-8317    | 1    | Wheel              |
| 7:2  | 232-27      | 1    | Stem-Valve         |
| 7:3  | 139-4475    | 1    | Tire-20 X 8.00-10  |
| 8    | 242-50      | 8    | Nut-Lug            |
| 9    | 1-806800    | 2    | Pin-Cotter         |

| Ref. | Part Number | Qty. | Description                  |
|------|-------------|------|------------------------------|
| 10   | 127-8859    | 1    | Bellows-Breather             |
| 11   | 140-2568-03 | 1    | Gtx-E Swing Arm ASM [black]  |
| 12   | 33103-030   | 6    | Screw-HHF                    |
| 13   | 131-8416    | 1    | Bracket-Cable                |
| 14   | 131-8482    | 1    | Retainer-Isolator            |
| 15   | 131-8420    | 1    | Isolator-Clamp               |
| 16   | 49-2040     | 1    | Screw-HWHTF                  |
| 17   | 2412-146    | 1    | Clamp-Hose                   |
| 18   | 122-0743    | 3    | Cable-Battery, Positive      |
| 19   | 137-9984    | 1    | Decal-Load, Towing           |
| 99   | 107-0392    | 1    | Protection-Terminal, Aerosol |


● Not illustrated

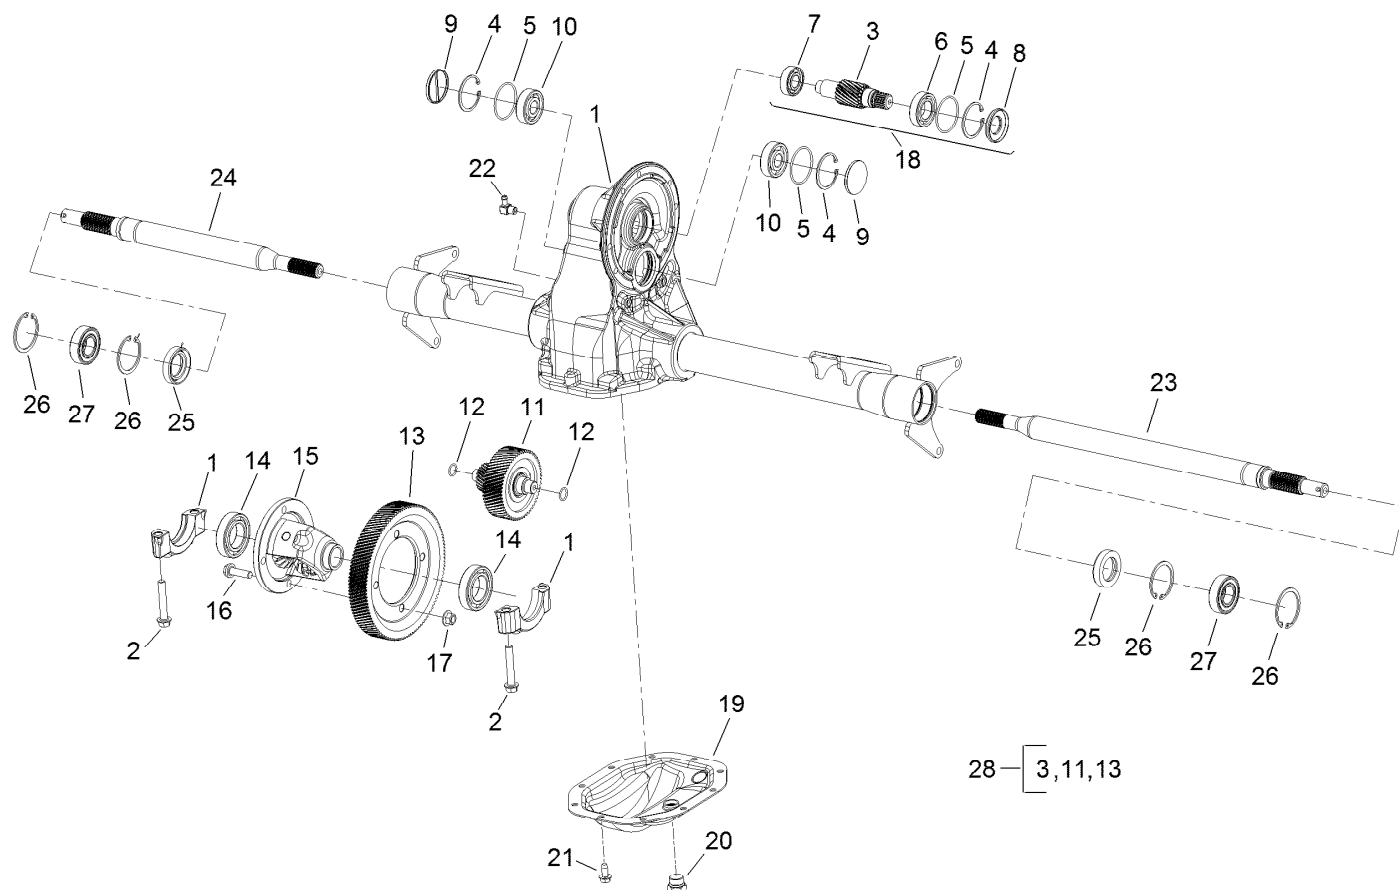

## Transaxle Assembly No. 136-6340

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 133-2447    | 1    | Housing-Axle          |
| 2    | 133-2448    | 4    | Bolt-Cap, Bearing     |
| 3    | 133-2485    | 1    | Gear-Input            |
| 4    | 133-2450    | 3    | Ring-Retaining        |
| 5    | 133-2451    | 3    | O-Ring                |
| 6    | 133-2452    | 1    | Bearing-Ball          |
| 7    | 133-2453    | 1    | Bearing-Ball          |
| 8    | 133-2454    | 1    | Seal-Oil              |
| 9    | 133-2455    | 2    | Plug-Cap, End         |
| 10   | 133-2456    | 2    | Bearing-Ball          |
| 11   | 133-2486    | 1    | Intermediate Gear ASM |
| 12   | 133-2458    | 2    | O-Ring                |
| 13   | 133-2459    | 1    | Gear-Drive, Final     |
| 14   | 133-2460    | 2    | Bearing-Ball          |


| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 15   | 133-2461    | 1    | Differential ASM  |
| 16   | 133-2462    | 4    | Bolt-HHF          |
| 17   | 133-2463    | 4    | Nut-Lock          |
| 18   | 133-2487    | 1    | Input Gear Kit    |
| 19   | 136-6341    | 1    | Plate-Cover       |
| 20   | 133-2466    | 1    | Plug-HH           |
| 21   | 133-2467    | 10   | Screw-Tapping     |
| 22   | 133-2468    | 1    | Elbow-Hose        |
| 23   | 133-2469    | 1    | Shaft-Axle, LH    |
| 24   | 133-2470    | 1    | Shaft-Axle, RH    |
| 25   | 112-3140    | 2    | Seal-Oil          |
| 26   | 133-2472    | 4    | Ring-Retaining    |
| 27   | 108-2425    | 2    | Bearing-Ball      |
| 28   | 108-2409    | 1    | Internal Gear Kit |

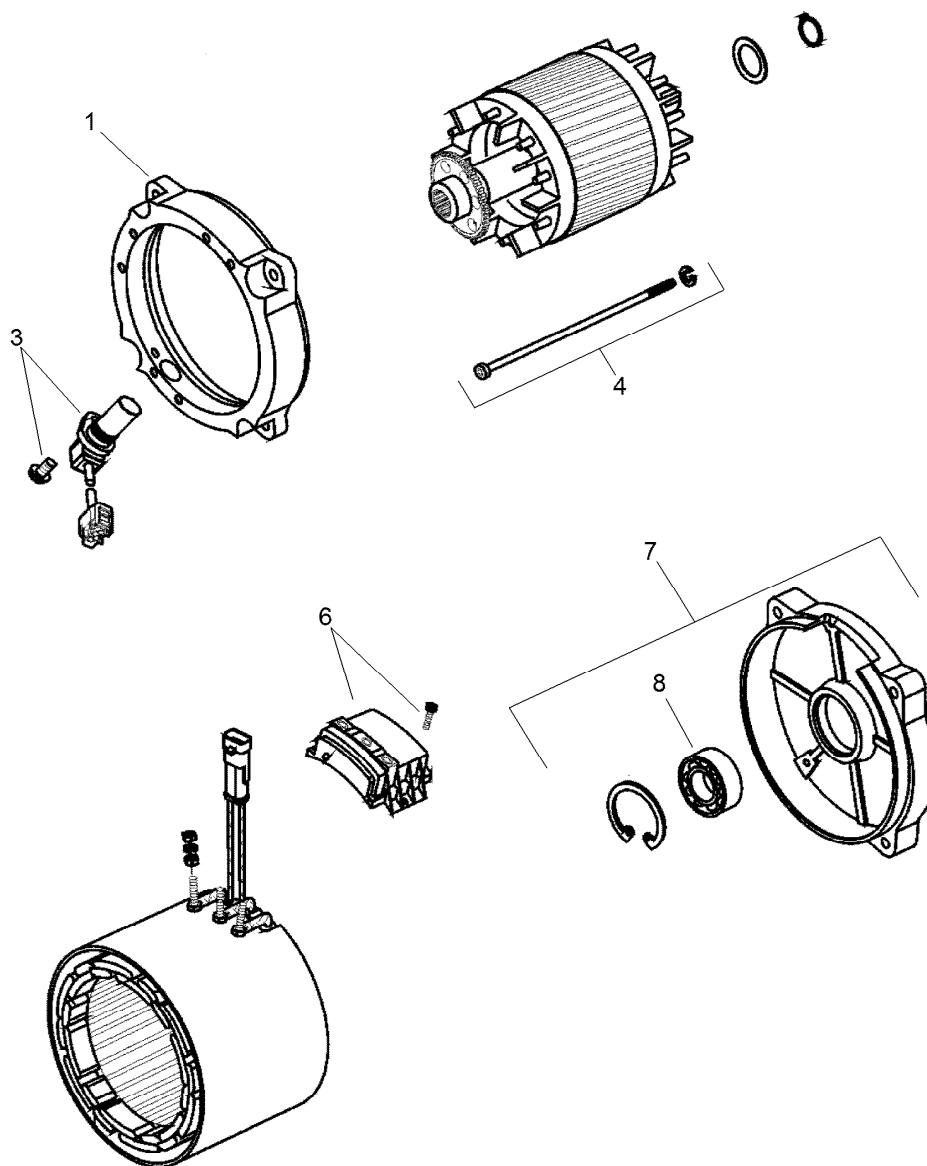

## Electric Motor Assembly No. 137-6936

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 132-4924    | 1    | Bracket-End, Drive |
| 3    | 132-4925    | 1    | Sensor             |
| 4    | 132-4926    | 1    | Screw              |
| 6    | 132-4927    | 1    | Plate-Connection   |
| 7    | 132-4928    | 1    | Bracket-End, Rear  |
| 8    | 132-4929    | 1    | Bearing            |



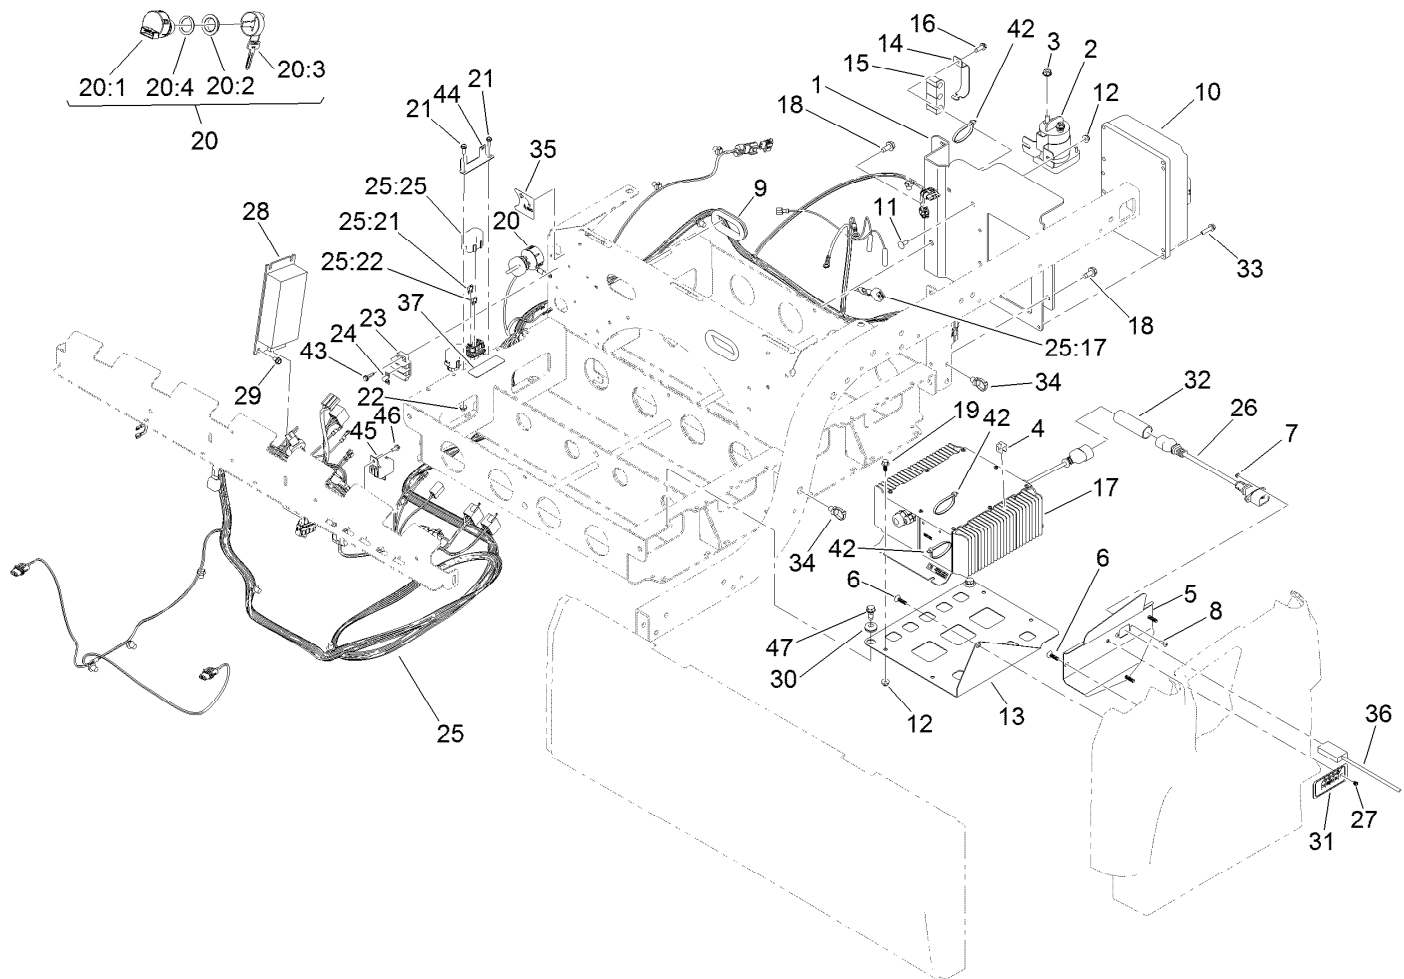


## Controller Assembly (continued)

| Ref.  | Part Number | Qty. | Description                        |
|-------|-------------|------|------------------------------------|
| 25:24 | 121-8866    | 1    | Fuse-Mini Blade, 10 Amp ●          |
| 25:25 | 32180-195   | 2    | Cover-Cooper-Bussmann, Cfh (Short) |
| 26    | 131-8497    | 1    | Cordset                            |
| 27    | 131-8499    | 1    | Holder-LED                         |
| 28    | 137-7952    | 1    | Converter-DC-DC                    |
| 29    | 99-8445     | 2    | Screw-HWH                          |
| 30    | 109-0023    | 2    | Grommet                            |
| 31    | 131-8495    | 1    | Decal-Function, Charger            |
| 32    | 107-0341    | 1    | Tube-Shrink, Heat                  |
| 33    | 32144-86    | 4    | Screw-HWHTF                        |
| 34    | 32180-030   | 3    | Clip-Tie                           |

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 35   | 131-8527    | 1    | Decal-Mode            |
| 36   | 107-0382    | 1    | Powercord-AC, Europe  |
| 36   | 107-0383    | 1    | Powercord-AC, U.K.    |
| 36   | 107-0384    | 1    | Powercord-AC          |
| 37   | 139-3338    | 1    | Decal-Fuse Block, 48V |
| 42   | 3290-378    | 3    | Tie-Cable             |
| 43   | 100-4351    | 2    | Screw-HWH             |
| 44   | 138-9299    | 1    | Bracket-Fuse Block    |
| 45   | 122-1488    | 1    | Relay                 |
| 46   | 32144-1     | 1    | Screw-Taptite         |
| 47   | 126-4424    | 2    | Screw-Shoulder        |


● Not illustrated

■ Not serviced separately

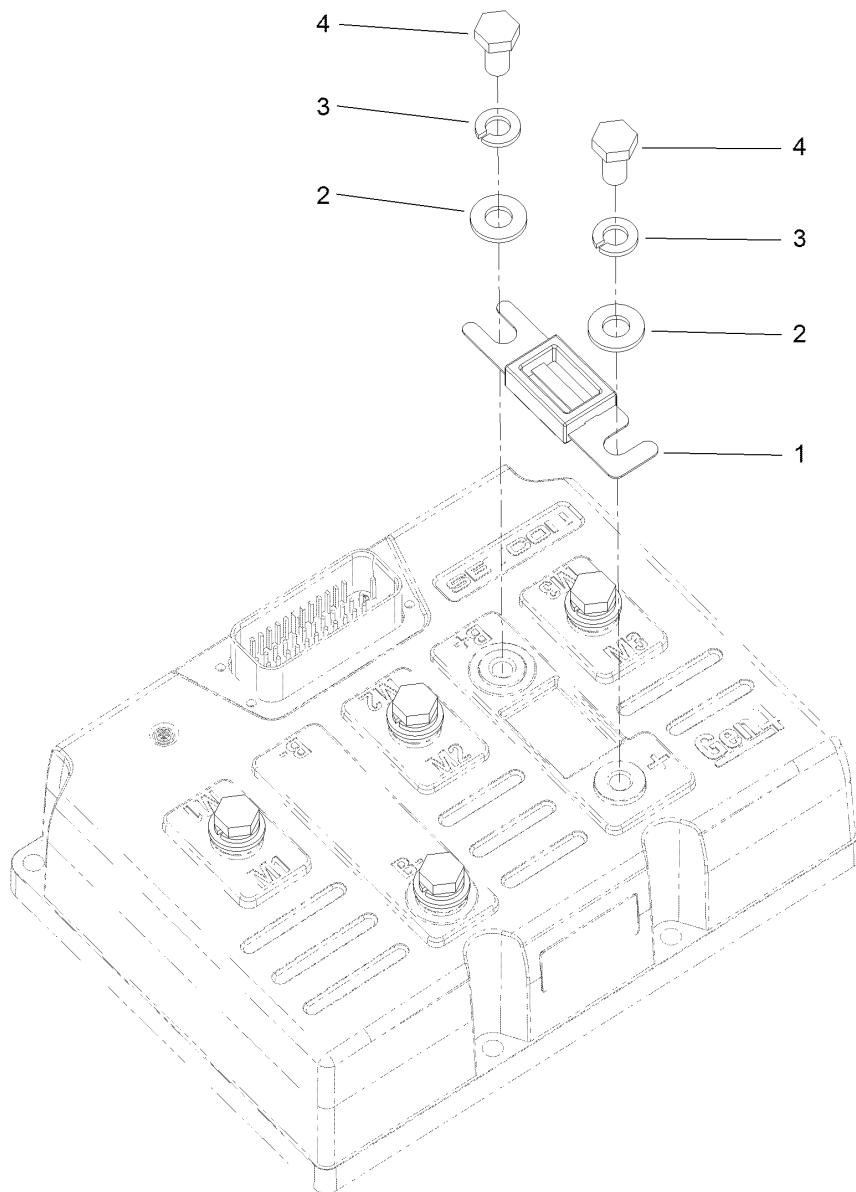


## Sevcon Controller Assembly No. 137-9898

| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 1    | 131-8494    | 1    | Fuse-425 Amp |
| 2    | 33094-00    | 6    | Washer-Plain |
| 3    | 3253-4      | 6    | Washer-Lock  |
| 4    | 33114-016   | 6    | Screw-HH     |

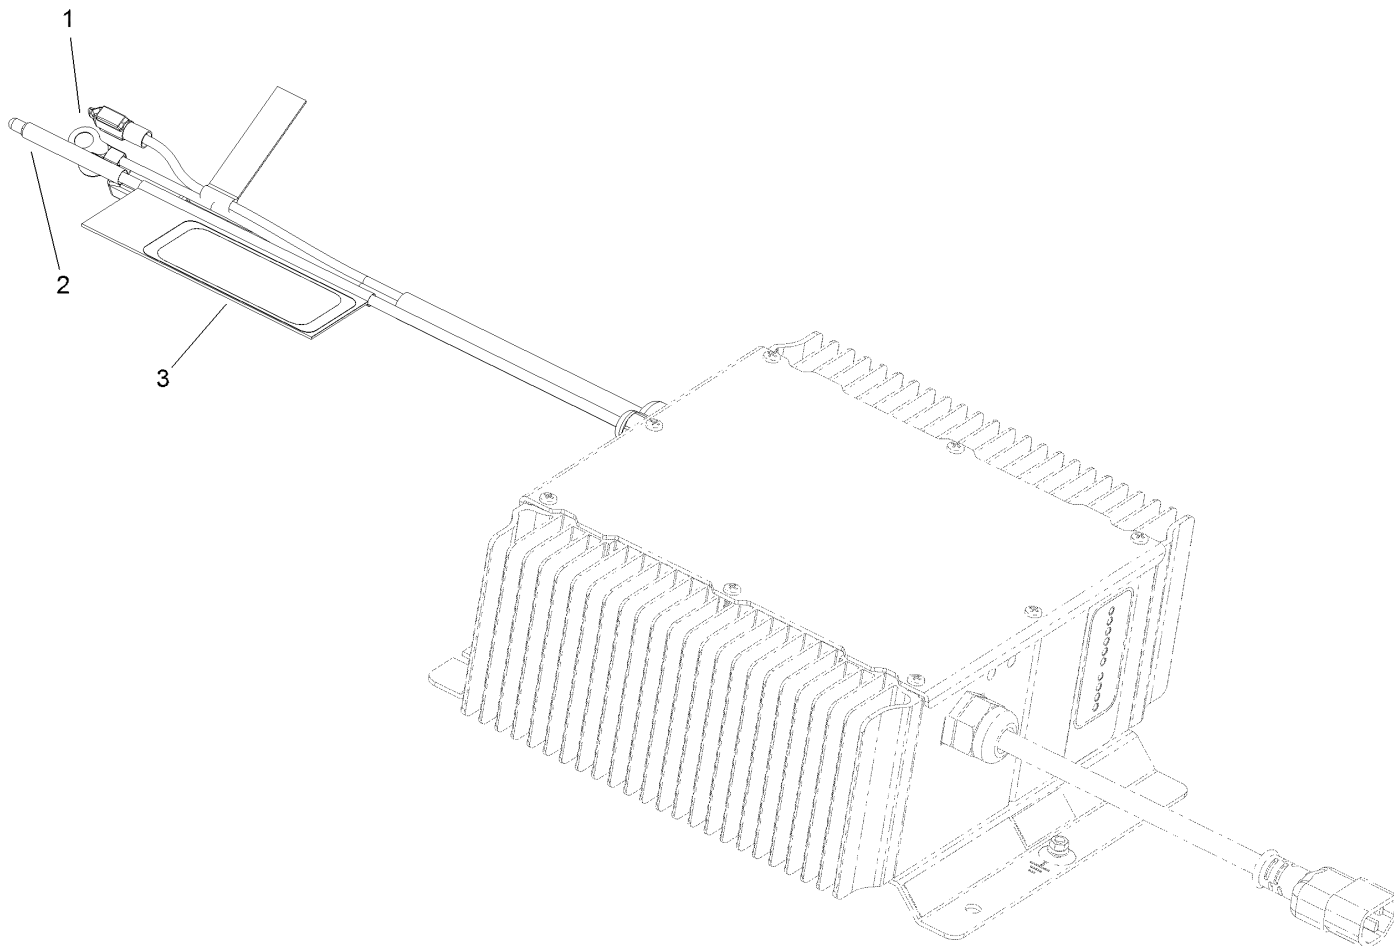

## Onboard Charger Assembly No. 131-8490

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|
| 1           | 131-8511           | 1           | Thermister Repair Kit   |
| 2           | 131-8512           | 1           | Remote LED              |
| 3           | 131-8495           | 1           | Decal-Function, Charger |

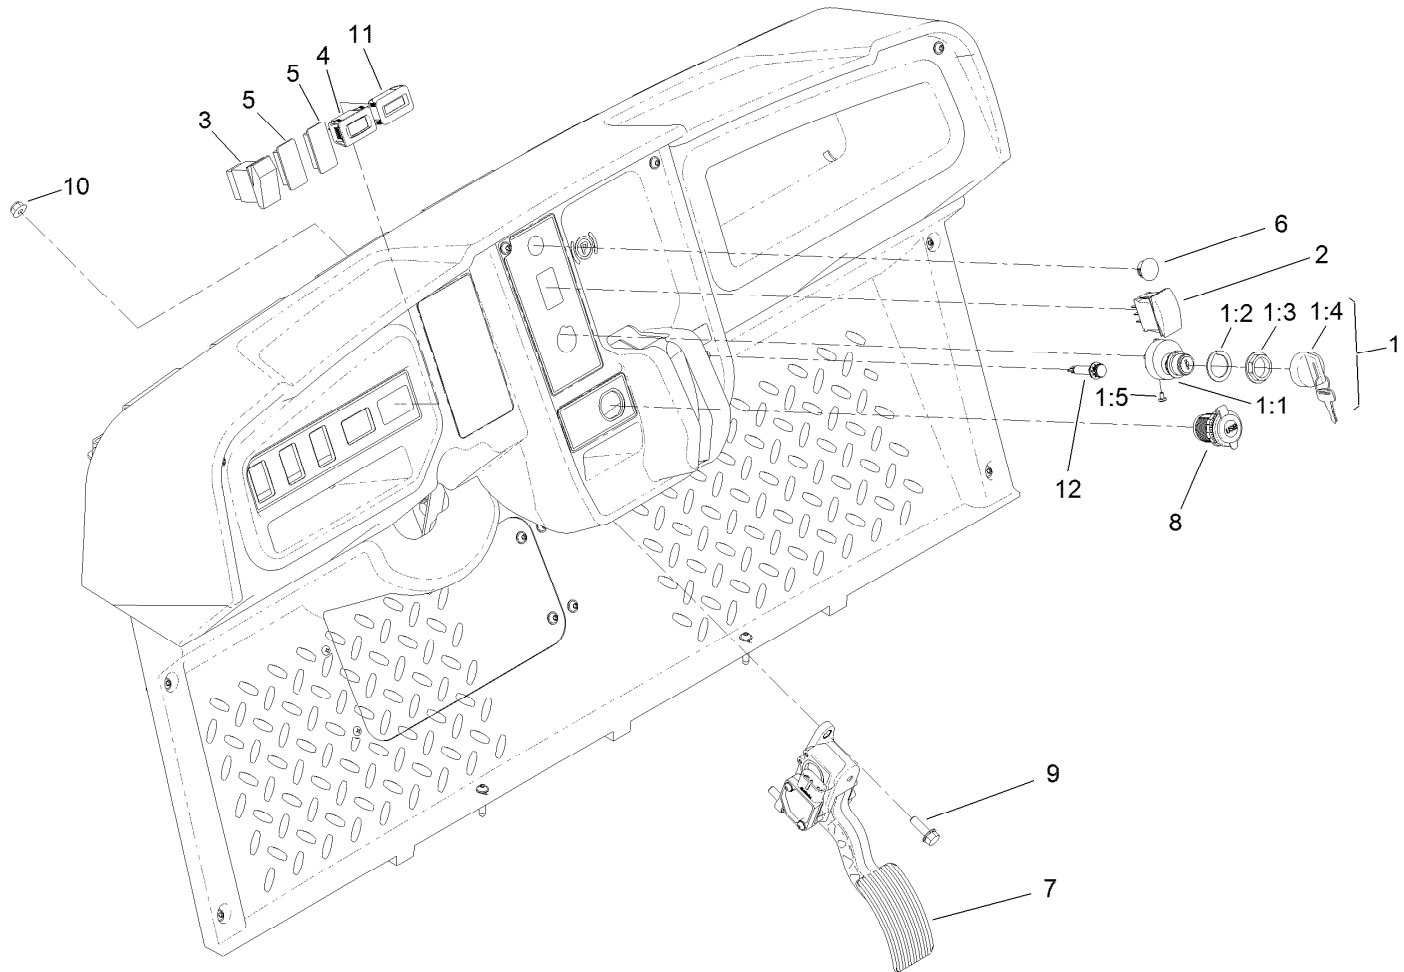

## Accelerator Pedal and Key Switch Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 120-4815    | 1    | 48V Key Switch ASM       |
| 1:1  |             | 1    | Switch-Key ●             |
| 1:2  | 108-8659    | 1    | Washer-Backup            |
| 1:3  | 108-8660    | 1    | Nut-Mounting             |
| 1:4  | 106-5270    | 1    | Ignition Key Set         |
| 1:5  | 3250-28     | 3    | Screw                    |
| 2    | 122-0784    | 1    | Switch-Rocker, On-Off-On |
| 3    | 95-8999     | 1    | Switch                   |
| 4    | 120-2244    | 1    | Hourmeter                |

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 5    | 99-7420     | 2    | Plug-Hole         |
| 6    | 94-5627     | 1    | Plug              |
| 7    | 121-9675    | 1    | Pedal-Accelerator |
| 8    | 131-8388    | 1    | Socket-USB        |
| 9    | 3234-29     | 3    | Screw-HHF         |
| 10   | 104-8300    | 3    | Nut-HF, NI        |
| 11   | 131-8381    | 1    | Gauge-Battery     |
| 12   | 140-4603    | 1    | Light-Indicator   |

● Not serviced separately

# Attachments and Accessories

## For 07410 Workman GTX Electric Utility Vehicle

| Product Name                                                                         | Model/Part  |
|--------------------------------------------------------------------------------------|-------------|
| Multi-passenger Kit.....                                                             | 07133       |
| Bucket Seat Base Kit (2016).....                                                     | 07134       |
| Bench Seat Base Kit (2016).....                                                      | 07135       |
| 48V Electric Lift Kit.....                                                           | 07143       |
| Brush Guard Kit.....                                                                 | 07145       |
| Front Hitch Kit, Workman GTX Series Utility Vehicles with Brush Guard.....           | 07146       |
| Front Hitch Kit, Workman GTX or MDX Series Utility Vehicles without Brush Guard..... | 07147       |
| Storage Box Kit.....                                                                 | 07156       |
| Ball Picker Mounting Bracket Kit.....                                                | 07157       |
| Walk Spreader Mounting Kit.....                                                      | 07029       |
| 6in L-Track Kit.....                                                                 | 07158       |
| 2in L-Track Kit.....                                                                 | 07159       |
| Hose Reel Mounting Kit.....                                                          | 07027       |
| Class 1 Draw Bar Kit.....                                                            | 133-3095    |
| Aggressive Tire Kit.....                                                             | 07423       |
| Hand Pump Hose Asm.....                                                              | 131-8522    |
| Horn Kit.....                                                                        | 133-3017    |
| Reverse Alarm Kit.....                                                               | 131-8549    |
| Power Point Kit.....                                                                 | 131-8550    |
| Power Converter Kit.....                                                             | 133-0959    |
| Trash Can Mounting Kit.....                                                          | 07028       |
| Bed Rack Kit.....                                                                    | 07031       |
| Cab Kit.....                                                                         | 07142       |
| Canopy Kit.....                                                                      | 07140       |
| Mount-Ball.....                                                                      | 133-7116    |
| Brake and Signal Light Kit.....                                                      | 133-7127    |
| Road Light and Homologation Kit.....                                                 | 133-7128    |
| 48V 6 Foot Bed Electric Lift Kit.....                                                | 07168       |
| Front Spring Kit.....                                                                | 133-7145    |
| Canopy Mount Kit, Workman GTX Utility Vehicle with Extended Flatbed.....             | 133-7160    |
| Tire-20 8.00-10.....                                                                 | 116-7333    |
| MVP Kit 400 Hour.....                                                                | 136-6280    |
| Cab Mount Kit, Workman GTX Utility Vehicle with Extended Flatbed.....                | 133-7198    |
| Service Hood ASM.....                                                                | 133-7209    |
| ROPS Kit.....                                                                        | 07032       |
| Crated Finishing Kit.....                                                            | 07045       |
| Cargo Bed Kit.....                                                                   | 07046       |
| Bench Seat Base Kit.....                                                             | 07047       |
| Bucket Seat Base Kit.....                                                            | 07048       |
| Extension Kit.....                                                                   | 07049       |
| Small Bedrack Mount Grip Kit.....                                                    | 136-6311    |
| Large Bedrack Mount Grip Kit.....                                                    | 136-6312    |
| Wireless Hourmeter Kit.....                                                          | 136-6324    |
| Optional Rear Tire GTX-K500.....                                                     | 137-2785    |
| Deionizer-Water.....                                                                 | 137-2884    |
| Plate-Skid.....                                                                      | 137-2887-03 |

Attachments and Accessories (continued)

Seat Hinge Kit..... 133-7346

Ignition Switch ASM (Key1) ..... 138-3505

Ignition Switch ASM (Key2) ..... 138-3506

Ignition Switch ASM (Key3) ..... 138-3507

Ignition Switch ASM (Key4) ..... 138-3508

Ignition Switch ASM (Key5) ..... 138-3509

Glove Box Cover Kit ..... 137-2883

Fold-Down Rear Facing Seat..... 07123

Door Mount Mirror Kit..... 136-1997



**Count on it.**