



Form No. 3415-768 Rev C

Count on it.

Parts Catalog

Power Max[®] Commercial 1028 OHXE Snowthrower

Model No. 38806—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Housing and Bypass Assembly 4

Housing Assembly 6

Idler and Linkage Assembly 8

Auger and Impeller Assembly..... 10

Gear Case Assembly No. 125-7926 12

Impeller Assembly 14

Engine Assembly 16

Engine Assembly No. 1..... 18

Engine Assembly No. 2..... 20

Engine Assembly No. 3..... 22

Engine Decal Assembly 24

Chute Assembly 26

Lever Chute Control Assembly..... 28

Handle Assembly 30

 
Control Assembly 32

Wheel Clutch Assembly 34

Wheel Clutch Sprocket Assembly 36

Attachments and Accessories 38


Housing and Bypass Assembly

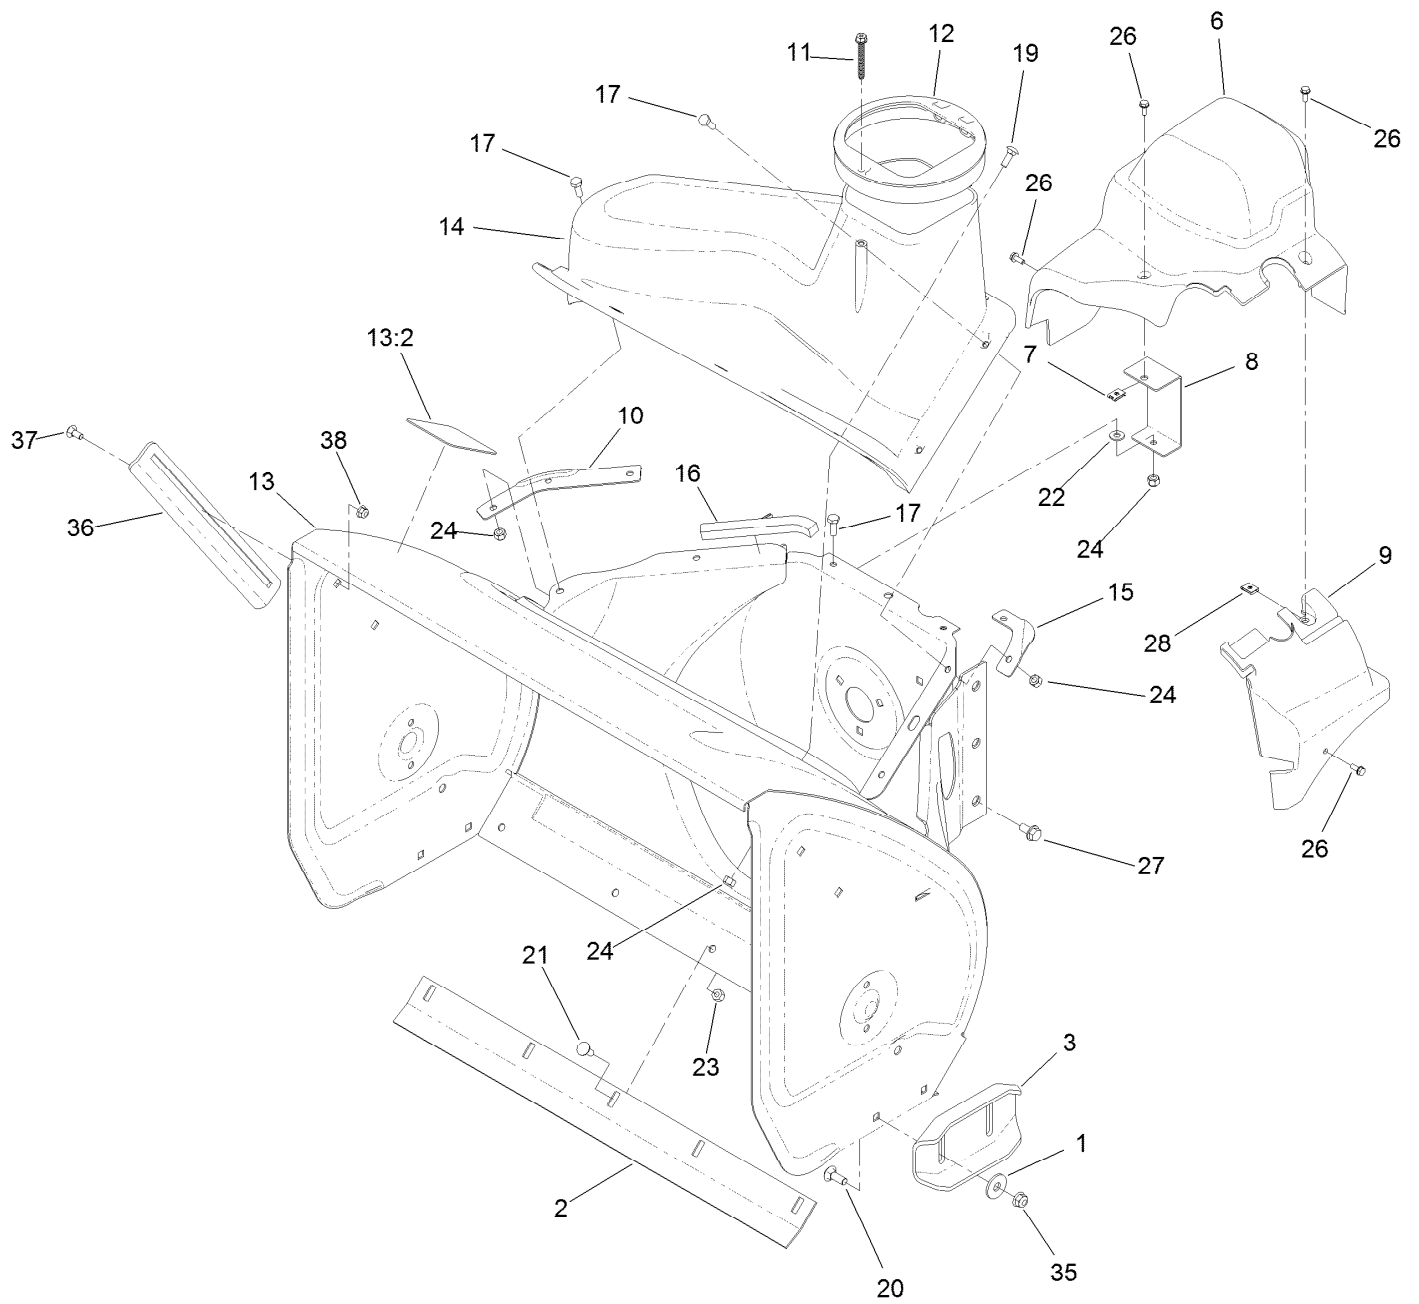

Housing and Bypass Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	52-2861	4	Washer	17	321-4	7	Screw-HH
2	106-4573-01	1	Scraper-Fixed	19	3229-1	4	Bolt-CARR
3	120-3098-03	2	Skid-Cast	20	3230-16	4	Screw-CARR
6	119-1563	1	Cover-Belt	21	3230-23	5	Screw-CARR
7	107-1013	1	Nut-Speed	22	3256-22	1	Washer-Flat
8	107-1014-03	1	Bracket-Cover, Clip Nut	23	3296-29	5	Nut-Lock, NI
9	107-1016	1	Cover-Extension, Belt	24	3296-42	11	Nut-Lock, NI
10	107-1017-03	1	Seal-Flange, Cover	26	32144-112	4	Screw-HWH
11	114-3751	1	Screw-HWH, Plastite	27	32144-14	6	Screw-HWHTF
12	107-3006	1	Guide-Chute	28	701493	1	Nut-Speed
13	107-3824	1	Housing-Auger, 28 Inch	35	104-8300	4	Nut-HF, NI
13:2	107-3040	1	Decal-Danger	36	121-1228-03	2	Breaker-Drift, Side
14	108-0017	1	Cover	37	3230-1	4	Bolt-CARR
15	108-0039-03	1	Seal	38	104-8300	4	Nut-HF, NI
16	120-0124	1	Seal-Housing				

 
Housing Assembly

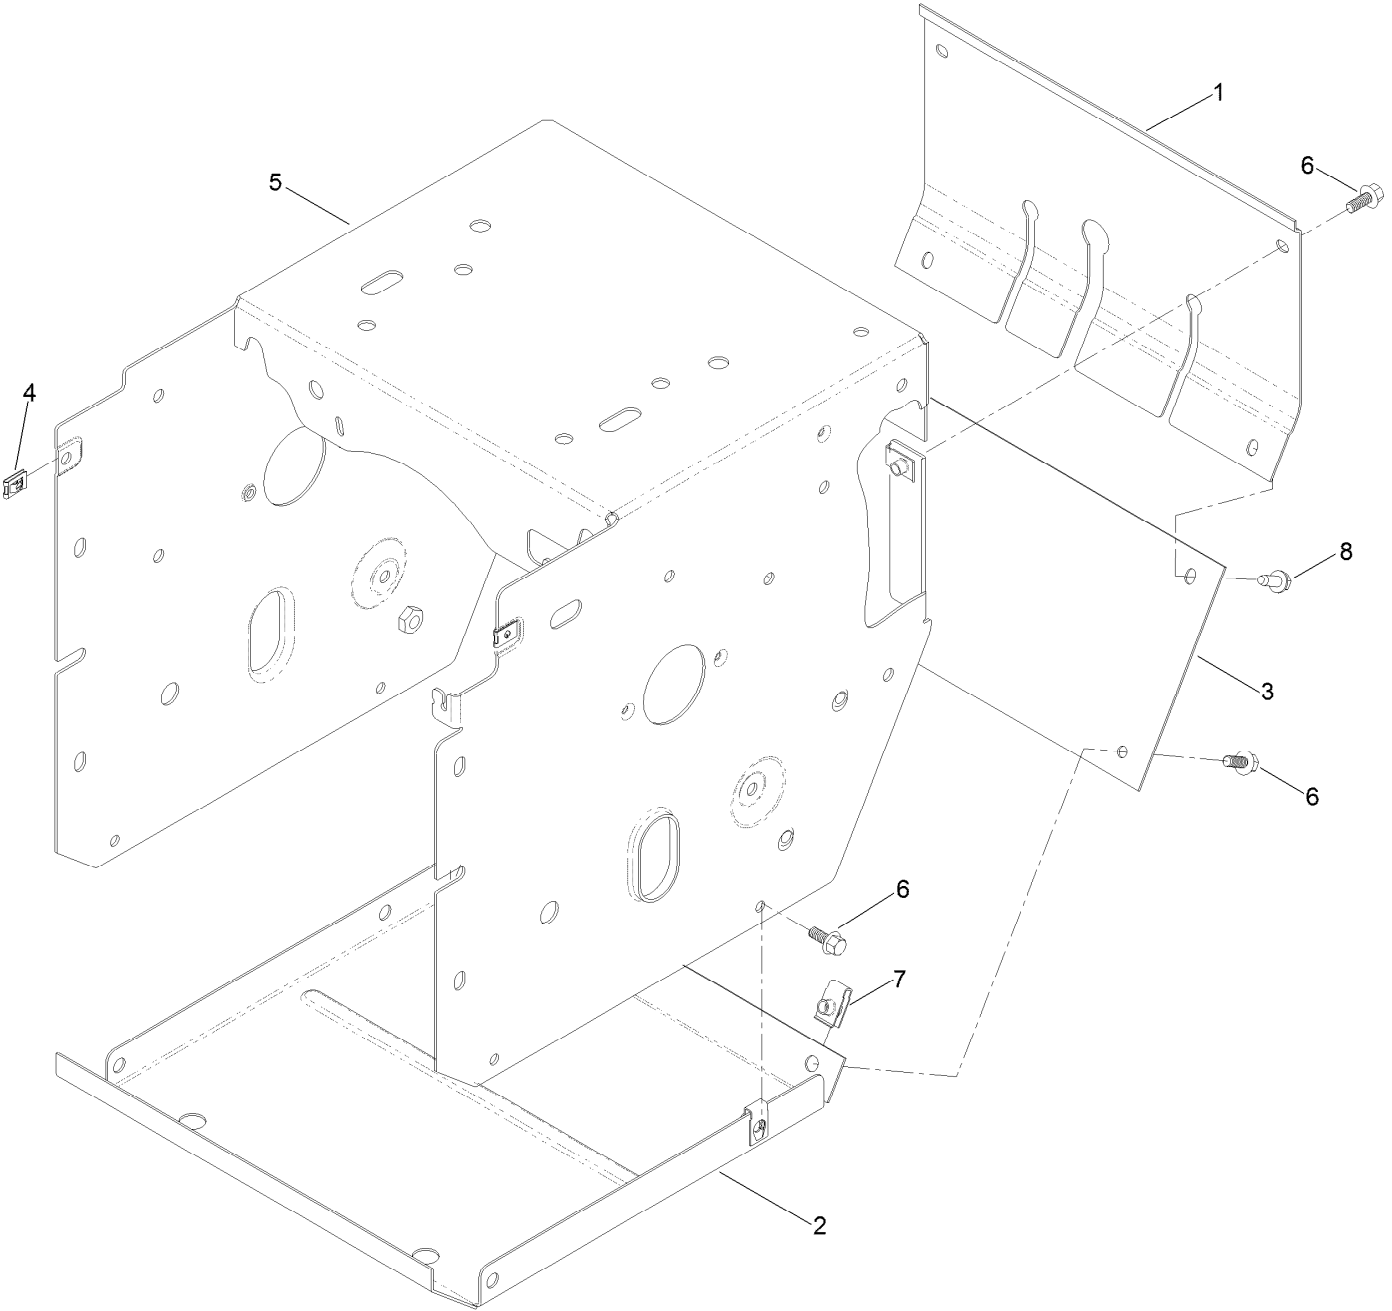

Housing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-0022-01	1	Cover-Upper	5	120-9832-01	1	Frame-Traction
2	106-7330-01	1	Pan-Bottom	6	99-6810	8	Screw-HHF
3	106-7345-01	1	Cover-Lower	7	107069	7	Clip
4	107-1013	2	Nut-Speed	8	32144-10	2	Screw-HWH

 
Idler and Linkage Assembly

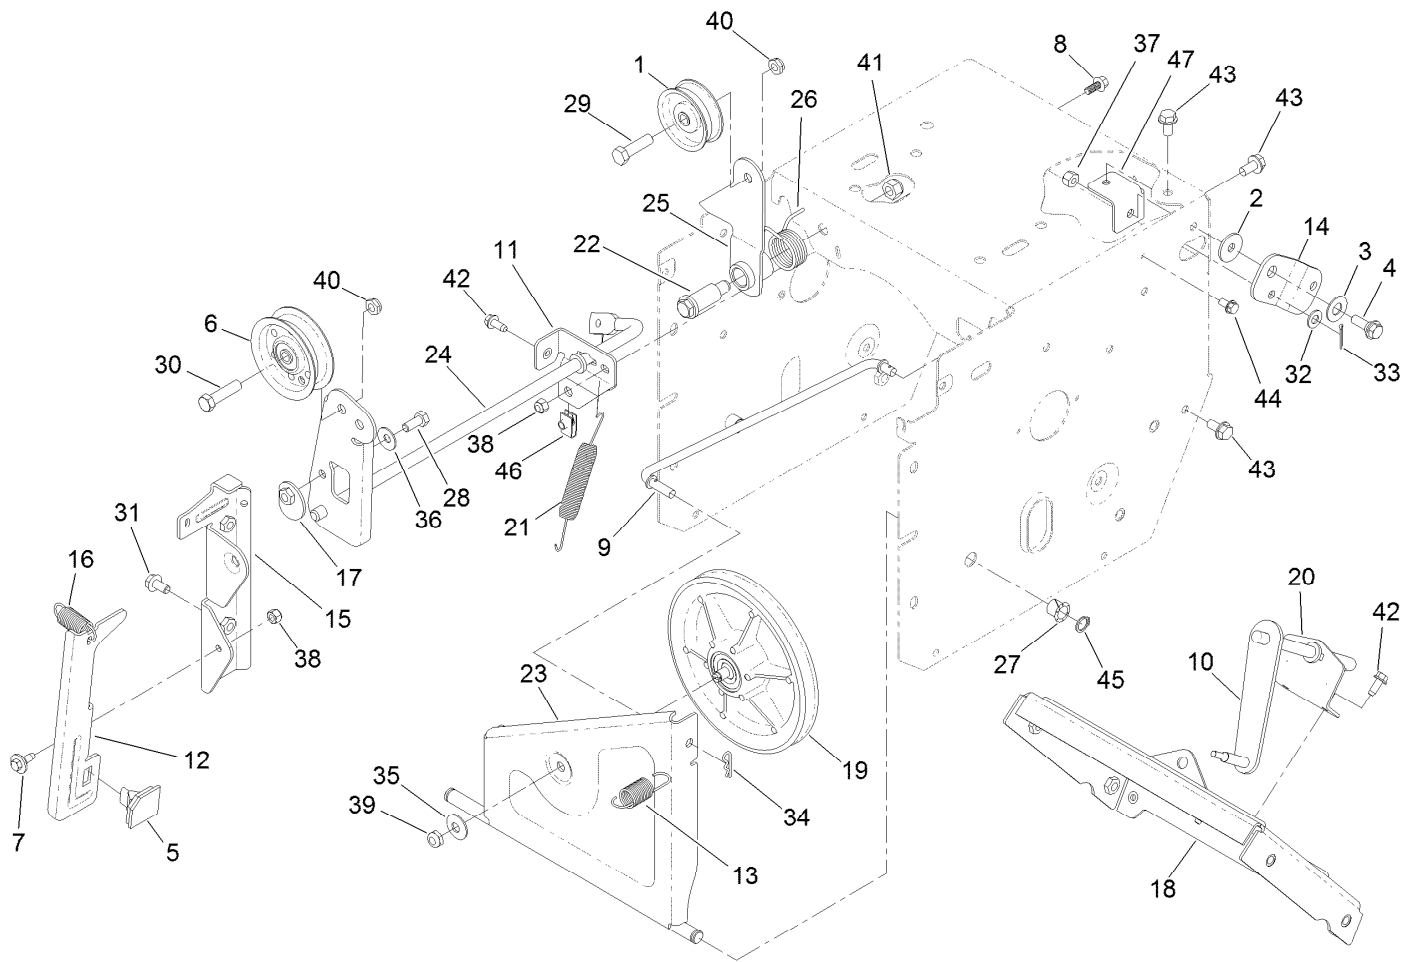

Idler and Linkage Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3-4244	1	Pulley-Idler	25	136-7186	1	Arm-Idler, Traction
2	5-4460	1	Washer-Pivot	26	120-3060	1	Spring-Torsion
3	25-5640	1	Washer	27	256-257	2	Bushing-Nyliner
4	27-0410	1	Screw-Shoulder	28	322-3	1	Screw-HH
5	66-8060	1	Pad-Brake	29	323-29	1	Screw-HH
6	92-7104	1	Pulley-Idler	30	323-8	1	Screw-HH
7	92-9698	1	Screw-Shoulder	31	3234-7	2	Screw-HHF
8	99-6810	1	Screw-HHF	32	3256-23	1	Washer-Plain
9	136-7101	1	Link-Speed, Control	33	3272-4	1	Pin-Cotter
10	136-7106	1	Traction Lever ASM	34	3290-307	1	Pin-Cotter
11	136-7181	1	Bracket-Impeller, Clutch	35	3290-340	1	Washer-Belleville
12	136-7108	1	Arm-Brake	36	3290-456	1	Washer-Belleville
13	107-1003	1	Spring-Extension	37	3296-29	1	Nut-Lock, NI
14	136-7110	1	Bellcrank	38	3296-42	2	Nut-Lock, NI
15	136-7112	1	Bracket-Impeller, Idler	39	3296-5	1	Nut-Hex
16	107-1045	1	Spring-Extension	40	3296-59	2	Nut-Lock, NI
17	136-7113	1	Nut Assembly	41	3296-76	1	Nut-Lock, NI
18	108-0026-01	1	Shift Plate ASM	42	32144-10	3	Screw-HWH
19	136-7319	1	Pulley-Traction ASM	43	32144-14	6	Screw-HWHTF
20	136-7114	1	Bracket-Shift, Rod	44	32144-4	1	Screw-HWH
21	136-7115	1	Spring-Extension	45	32151-61	2	Ring-Retaining
22	136-7116	1	Bolt-Shoulder	46	107069	1	Clip
23	136-7118	1	Bracket-Wheel, Friction	47	125-1124-03	1	Bracket-Frame, LH
24	120-0144-03	1	Impeller Clutch ASM				

 
Auger and Impeller Assembly

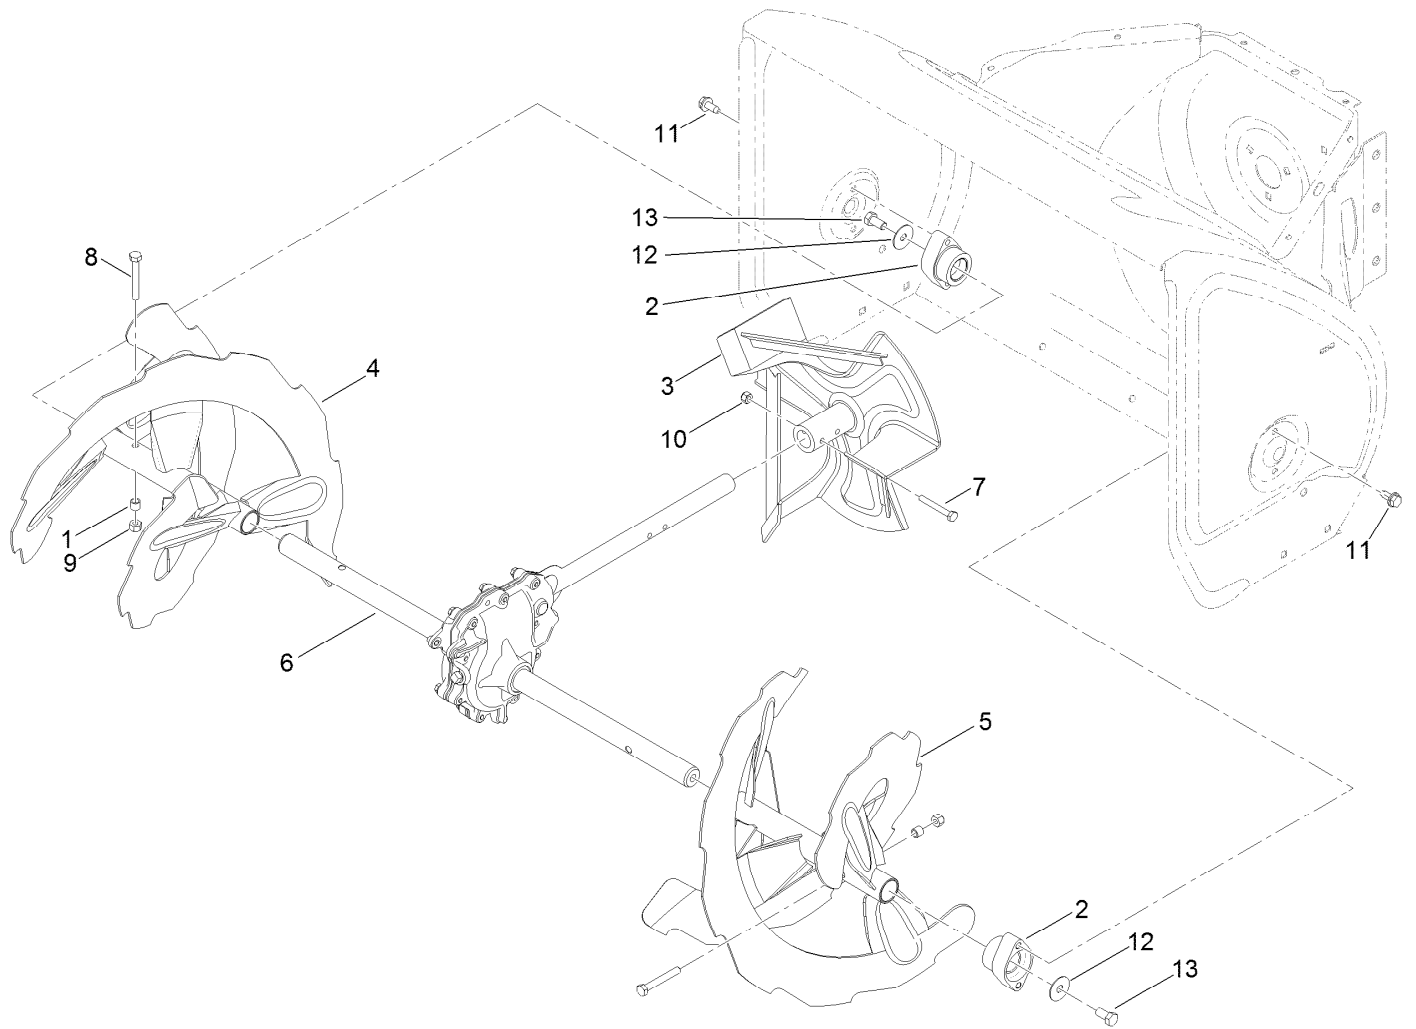

Auger and Impeller Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-633545	2	Spacer	7	321-11	2	Screw-HH
2	106-4570	2	Bearing-Auger	8	322-11	2	Screw-HH
3	106-4576-03	1	Impeller ASM	9	3296-29	2	Nut-Lock, NI
4	106-7291-03	1	RH Auger ASM	10	3296-42	2	Nut-Lock, NI
5	106-7301-03	1	LH Auger ASM	11	32144-70	4	Screw-HWHTF
6	125-7926	1	28 Inch Auger Gearcase ASM	12	3-0750	2	Washer
				13	323-4	2	Screw-HH

 Gear Case Assembly No. 125-7926

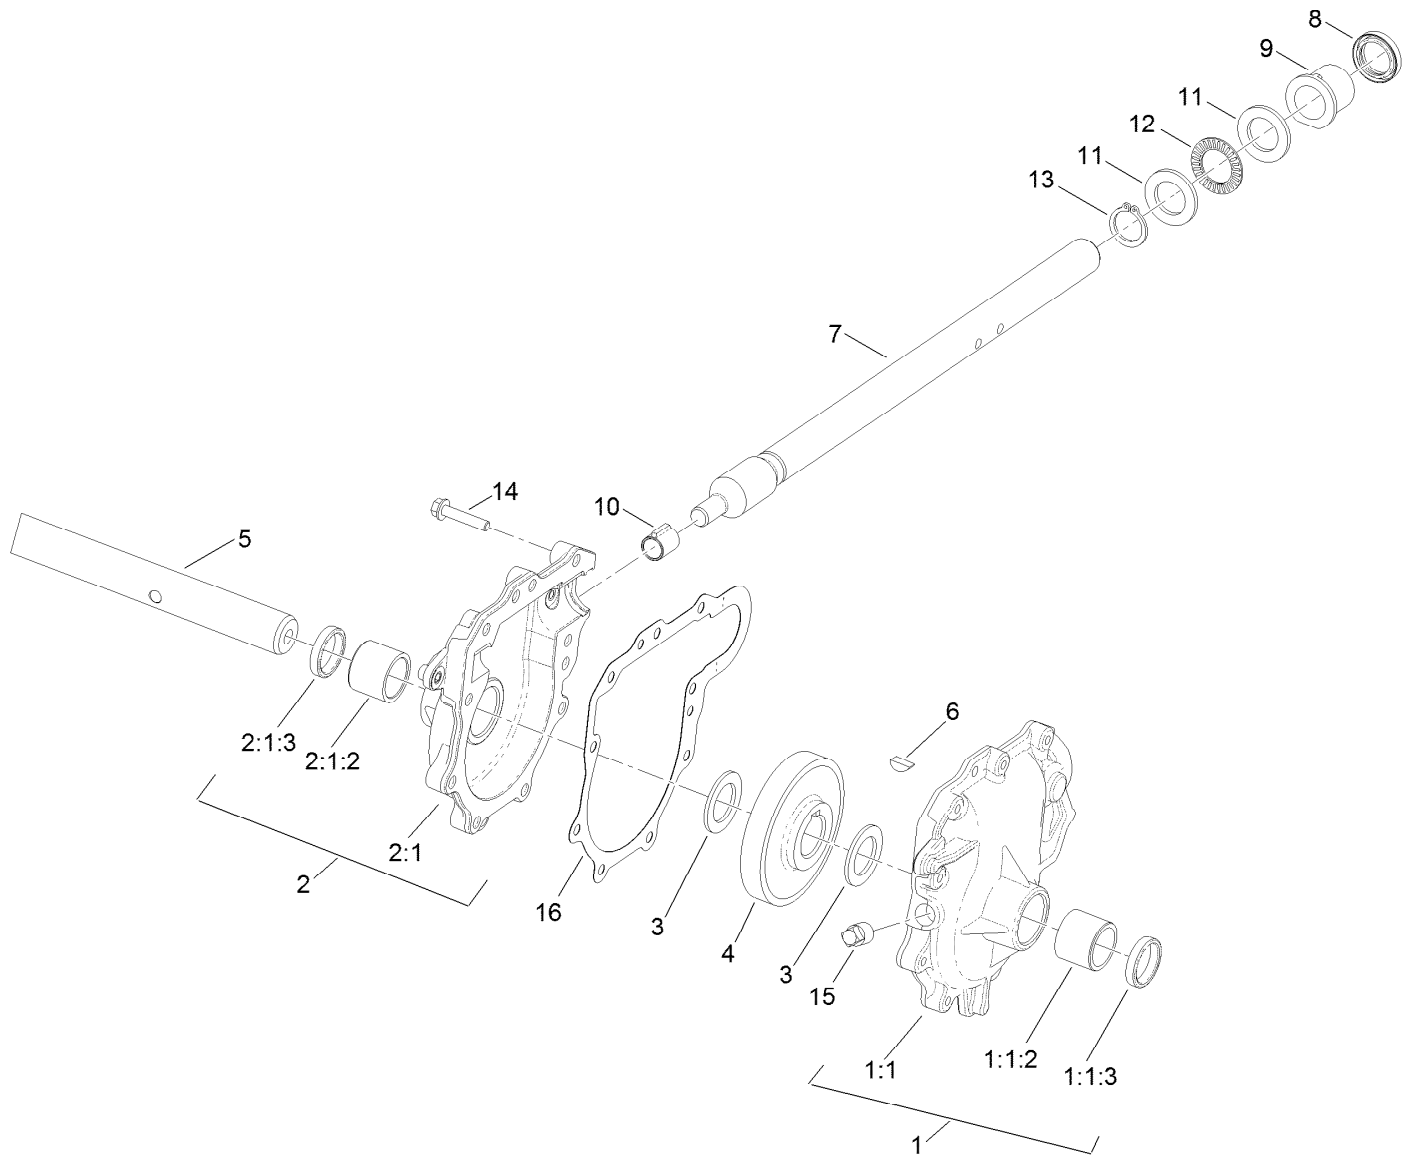


Gear Case Assembly No. 125-7926 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-7325	1	LH Auger Gearcase ASM	6	3257-10	1	Key-Woodruff
1:1		1	Gearcase-Auger, LH ●	7	66-7811	1	Shaft-Impeller
1:1:2	112-6635	1	Bushing-Sleeve	8	253-149	1	Seal-Oil
1:1:3	7-0045	1	Seal-Oil	9	37-6560	1	Bushing-Input
2	108-7327	1	RH Auger Gearcase ASM	10	62-1150	1	Bushing-Worm
2:1		1	Gearcase-Auger, RH ●	11	252-78	2	Washer-Thrust
2:1:2	112-6635	1	Bushing-Sleeve	12	252-76	1	Bearing-Thrust
2:1:3	7-0045	1	Seal-Oil	13	32151-33	1	Ring-Retaining, EXT
3	252-71	2	Washer-Thrust	14	108-4862	9	Screw-HWH Thd Roll
4	62-0120	1	Gear-Helical	15	121-6832	1	Plug-Pipe, SQH
5	106-4421	1	Shaft-Auger	16	108-7330	1	Gasket-Gearcase, Auger

● Not serviced separately

 
Impeller Assembly

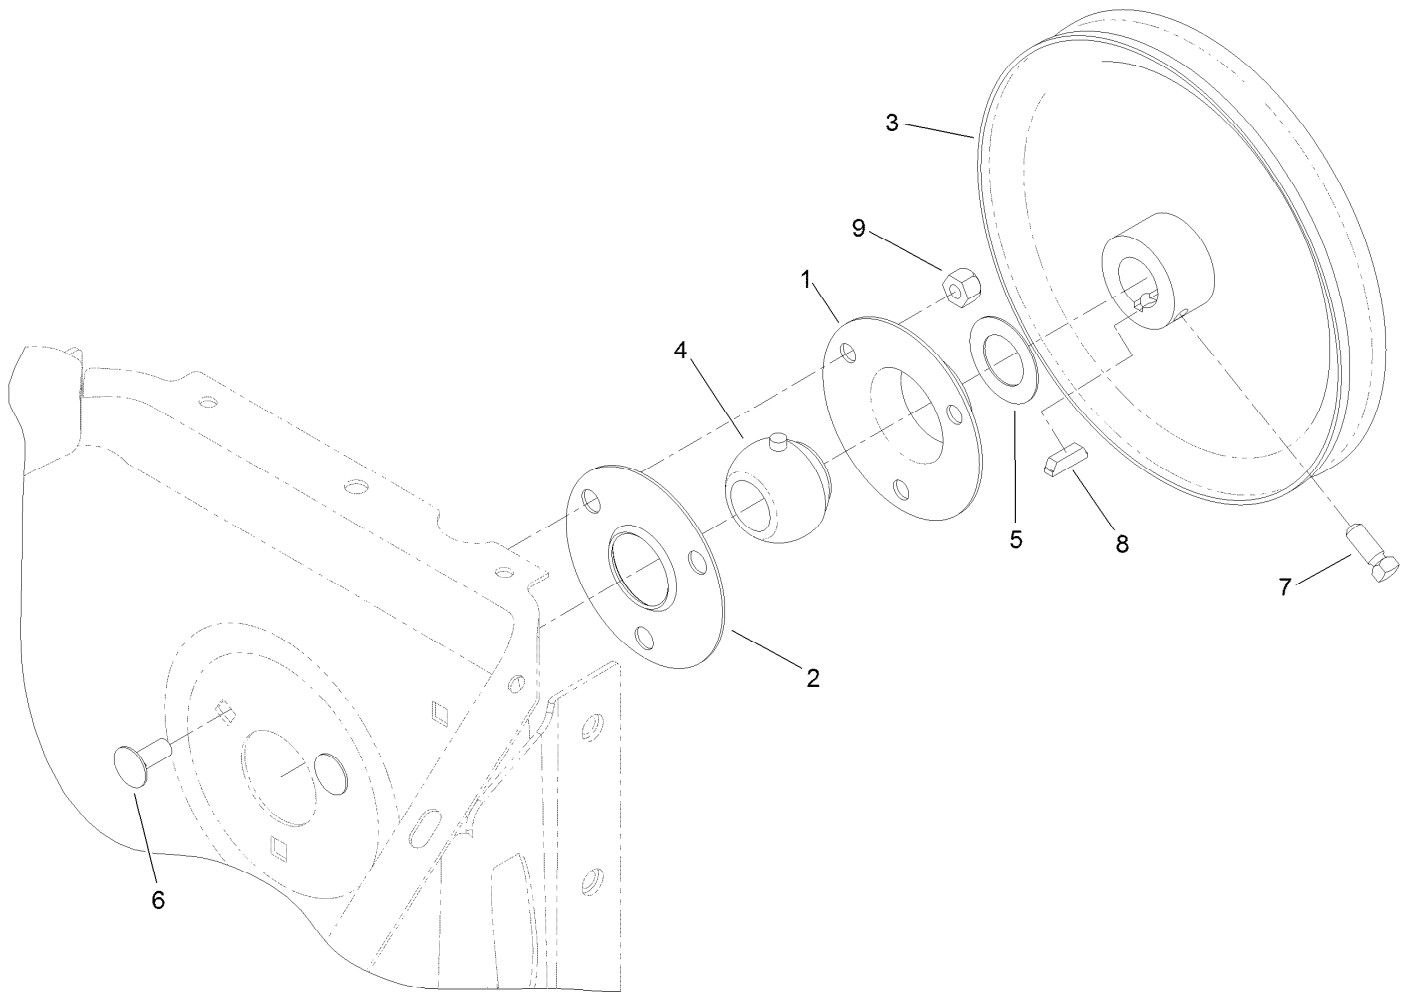

Impeller Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	26-6110	1	Flange-Cup, Bearing	6	3230-23	3	Screw-CARR
2	26-6120	1	Flange-Cup, Bearing	7	1-803050	2	Screw-Set
3	136-7119	1	Pulley-Impeller	8	3257-23	1	Key-Woodruff
4	63-3450	1	Bearing-Ball	9	3296-29	3	Nut-Lock, NI
5	110-6767	1	Washer-Thrust				

 
Engine Assembly

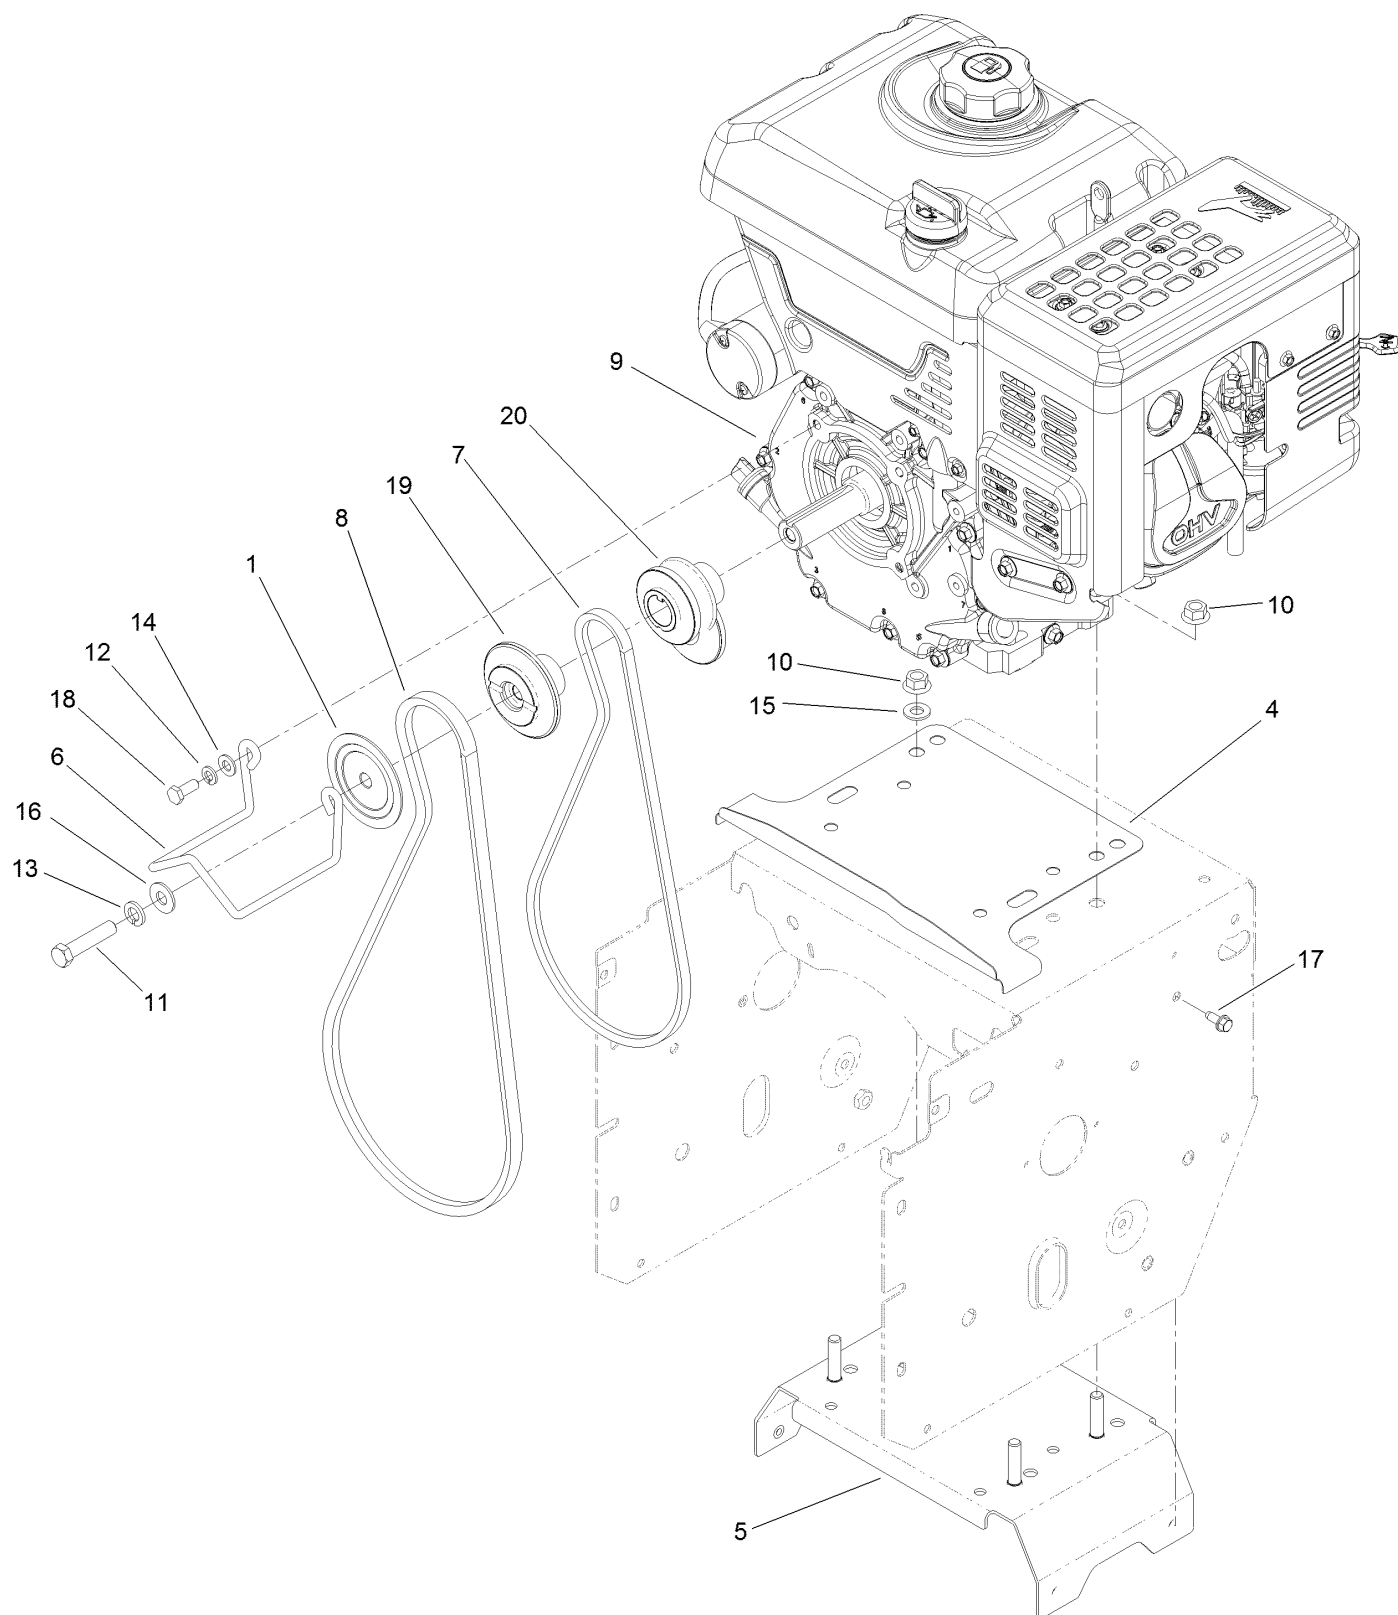

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	62-0940	1	Sheave-Half, Impeller	12	3253-4	2	Washer-Lock
4	117-6022-01	1	Shield-Drive	13	3253-6	1	Washer-Lock
5	119-1560	1	Frame Brace ASM	14	3256-23	2	Washer-Plain
6	136-8673	1	Guide-Belt	15	3256-24	1	Washer-Flat
7	119-1564	1	Belt-V	16	3256-4	1	Washer-Flat
8	125-1145	1	Belt-V	17	32144-10	4	Screw-HWH
9	120-4425	1	Engine-180Fds-1	18	33114-020	2	Screw-HH
10	120-3067	4	Nut-Flange	19	121-6602	1	Pulley-Engine, Impeller
11	3212-8	1	Screw-HH	20	121-6617	1	Pulley-Traction

 
Engine Assembly No. 1

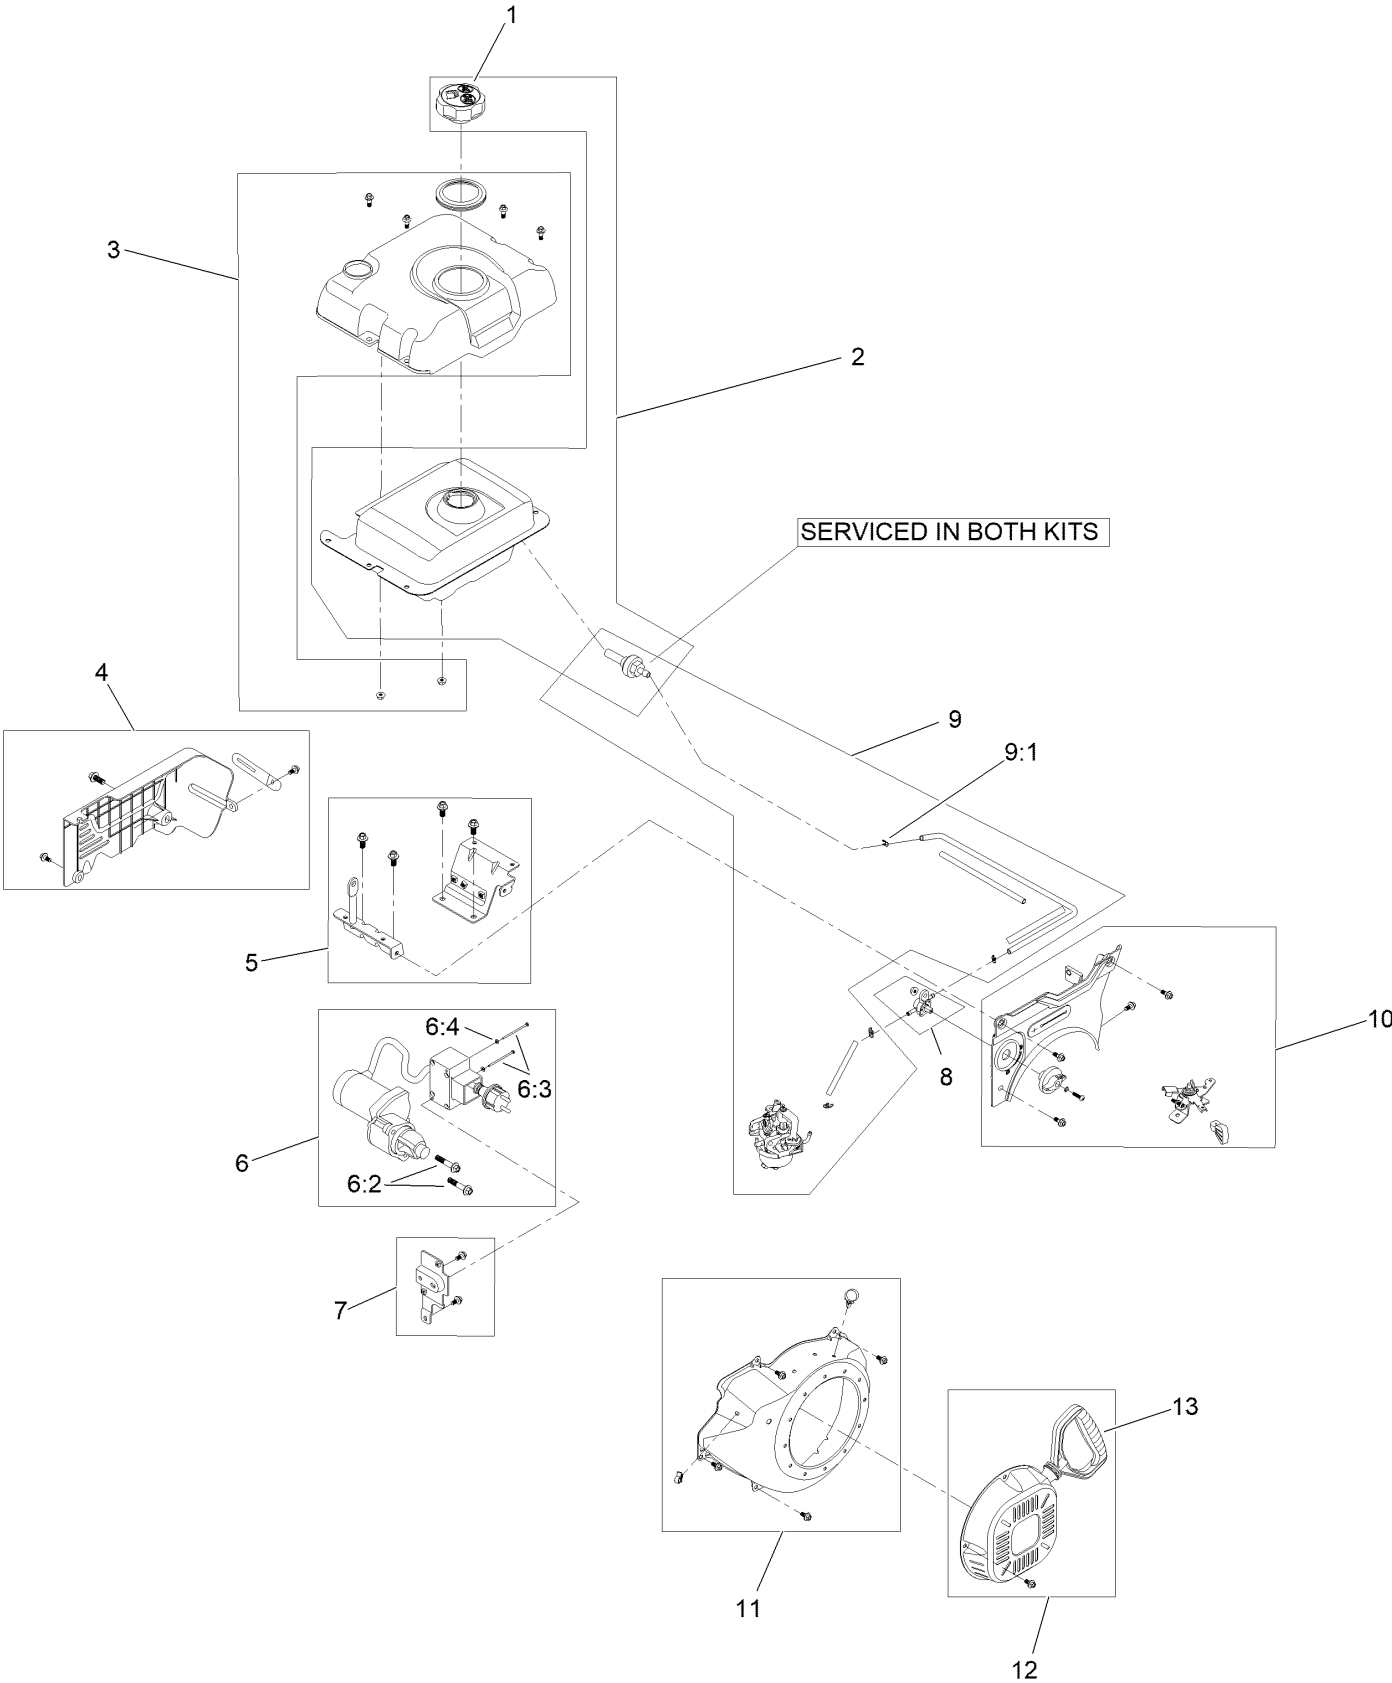

Engine Assembly No. 1 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-9823	1	Cap-Fuel	6:4	121-0312	2	Washer-Plain
2	136-7802	1	Fuel Tank And Cap Kit	7	121-4103	1	Switch Box Bracket Kit
3	121-0349	1	Fuel Tank Cover Kit	8	121-4109	1	Fuel Shut-Off Valve Kit
4	121-0347	1	Rear Panel And Hardware Kit	9	136-7801	1	Fuel Line Kit
5	121-0351	1	Tank Mount Bracket Kit	9:1	121-0087	6	Clamp-Hose
6	136-7799	1	Electric Starter Kit	10	121-4105	1	Front Panel Kit
6:2	121-0298	2	Screw-HHF	11	121-0274	1	Recoil Shroud Kit
6:3	121-0306	2	Screw-Bhp	12	121-0342	1	Recoil Kit
				13	121-0287	1	Handle-Recoil

 
Engine Assembly No. 2

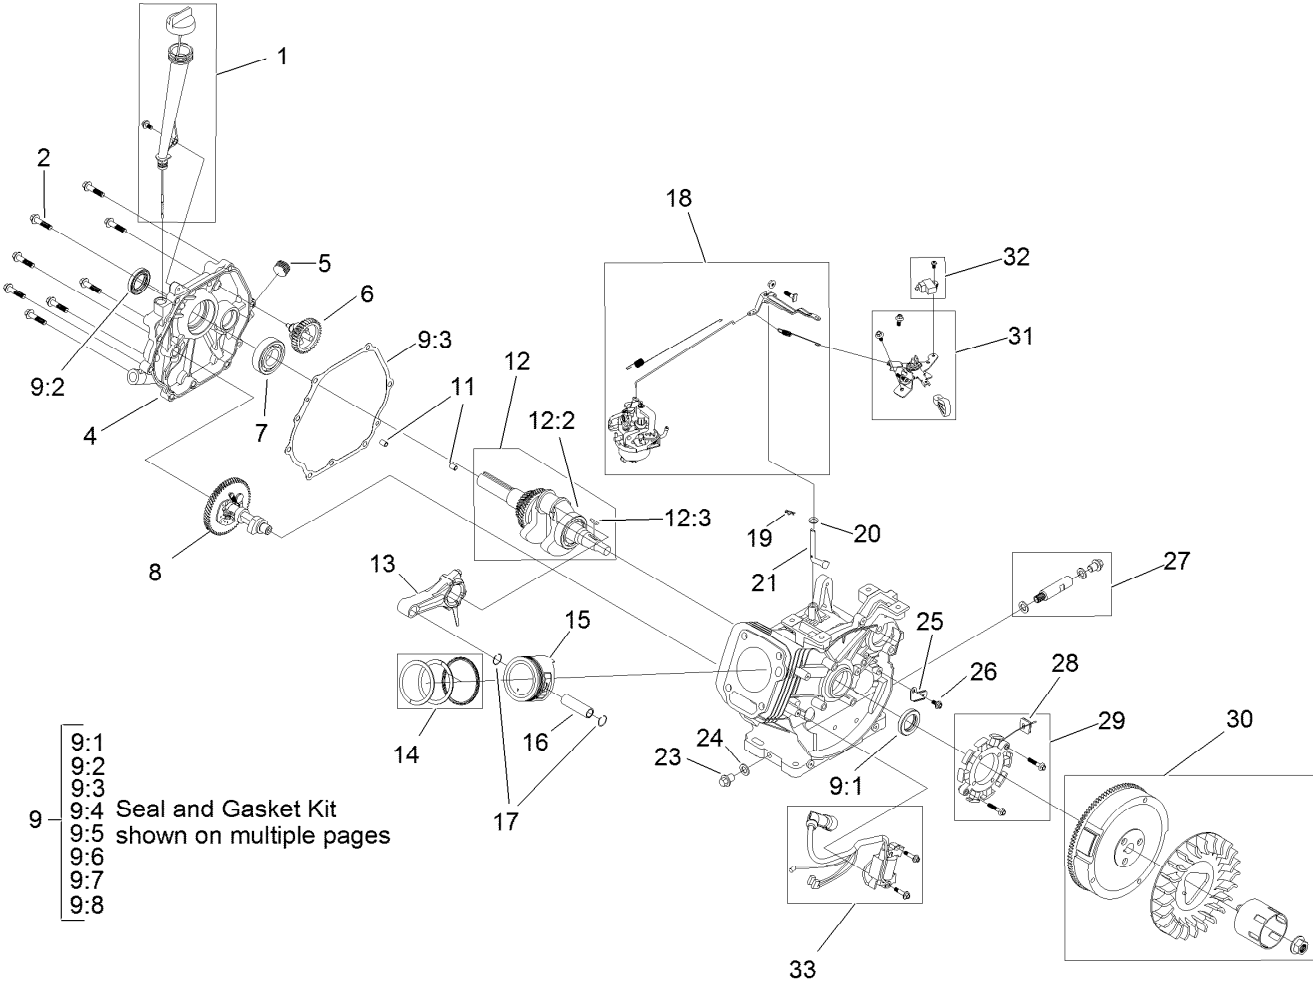

Engine Assembly No. 2 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-9854	1	Oil Fill Kit	13	121-0240	1	Connecting Rod ASM
2	121-0299	8	Screw-HHF	14	121-0238	1	Set-Ring, Piston
4	133-9856	1	Cover-Crankcase	15	121-0333	1	Piston
5	133-9805	1	Plug-Drain	16	121-0237	1	Pin-Piston
6	136-7782	1	Governor Gear ASM	17	121-0313	2	Clip-Pin, Piston
7	121-0315	1	Bearing-Main	18	121-0352	1	Complete Governor Kit
8	121-0243	1	Camshaft ASM	19	120-4256	1	Pin-Hair
9	121-0358	1	Seal And Gasket Kit	20	121-0311	1	Washer-Plain
9:1	121-0316	1	Seal-Oil	21	136-7783	1	Shaft-Governor
9:2	121-0317	1	Seal-Oil	23	121-0222	1	Screw-HHF
9:3	121-0228	1	Gasket-Cover, Crankcase	24	121-0310	1	Washer-Plain
9:4	121-0231	1	Gasket-Head, Cylinder	25	121-0278	1	Clamp
9:5	121-0234	1	Gasket-Cover, Valve	26	121-0118	1	Screw-HHF
9:6	121-0272	1	Gasket-Exhaust	27	121-0341	1	Drain Plug Kit
9:7	121-0252	1	Gasket-Carburetor	28	121-0325	1	Grommet-Rubber
9:8	121-0253	1	Gasket-Carburetor	29	121-0362	1	Stator Kit
11	121-0314	2	Pin-Dowel	30	121-0354	1	Fan And Flywheel Kit
12	121-0241	1	Crankshaft ASM	31	121-4107	1	Throttle Control Kit
12:2	121-0315	1	Bearing-Main	32	121-4106	1	Kill Switch Kit
12:3	120-4320	1	Key-Woodruff	33	136-7798	1	Ignition Kit

 Engine Assembly No. 3

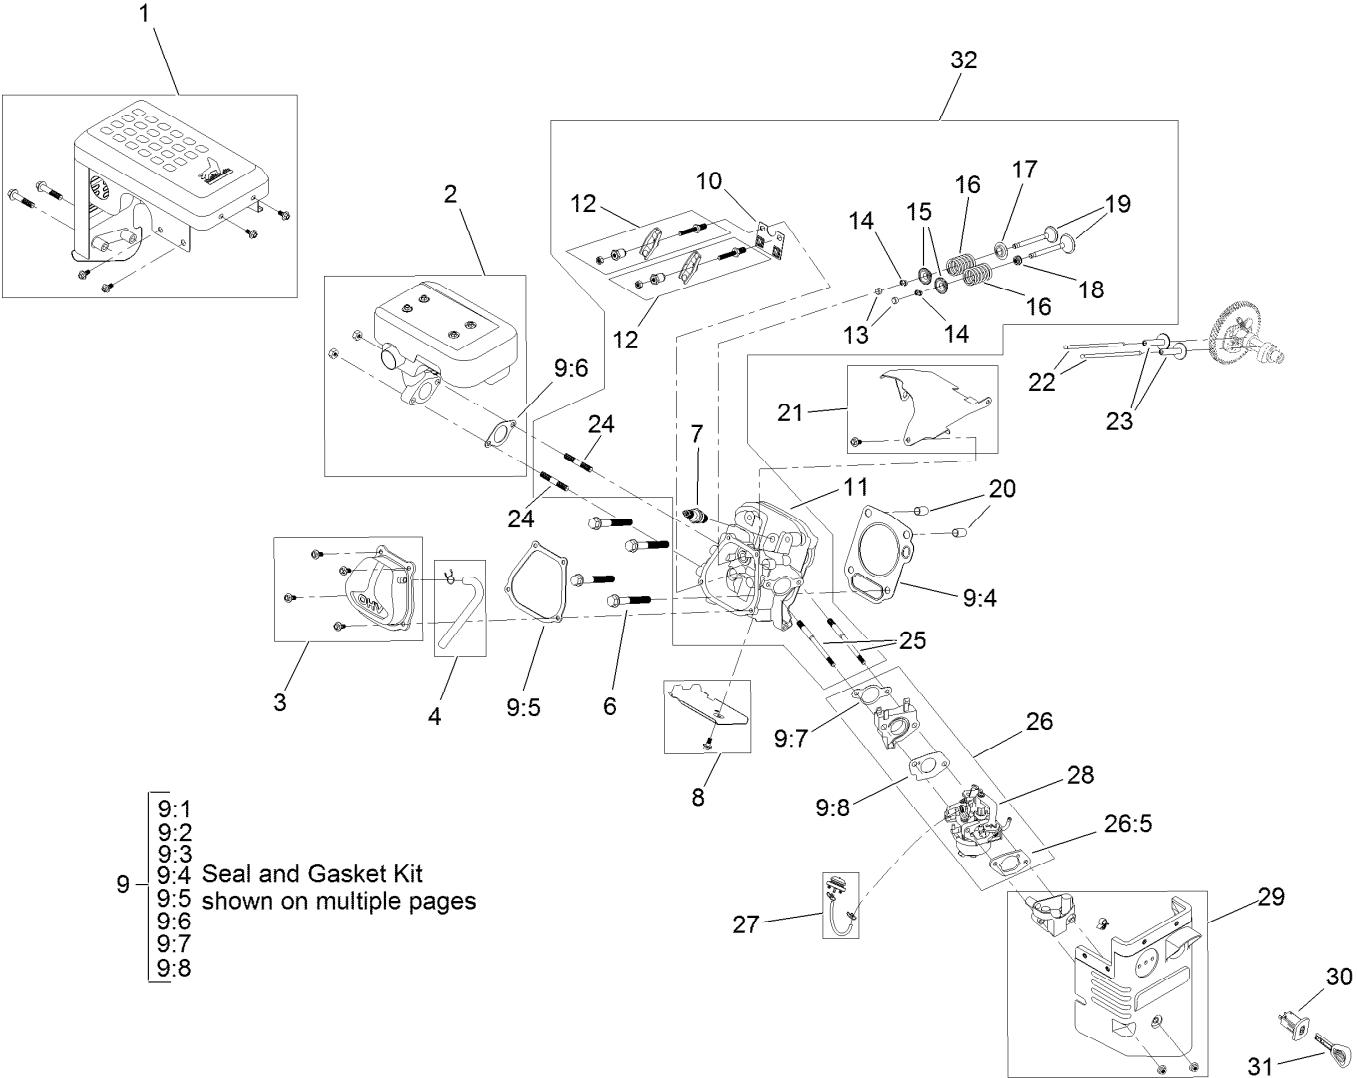


Engine Assembly No. 3 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-4101	1	Muffler Shield Kit	16	120-4305	2	Spring-Valve
2	127-9373	1	Muffler Kit	17	120-4303	1	Seat-Spring, Valve
3	121-0343	1	Valve Cover Kit	18	120-4304	1	Seal-Stem, Valve
4	121-0340	1	Breather Tube Kit	19	121-0328	1	Valve Kit
6	121-0302	4	Screw-HHF	20	120-4200	2	Pin-Dowel
7	119-1901	1	Plug-Spark	21	121-4102	1	Upper Heat Shroud Kit
8	121-0348	1	Lower Heat Shroud Kit	22	121-0246	2	Rod-Push
9	121-0358	1	Seal And Gasket Kit	23	120-4298	2	Lifter-Valve
9:1	121-0316	1	Seal-Oil	24	121-0304	2	Stud-Mount, Muffler
9:2	121-0317	1	Seal-Oil	25	121-0303	2	Stud-Mount, Carburetor
9:3	121-0228	1	Gasket-Cover, Crankcase	26	121-0359	1	Complete Carb Service Kit
9:4	121-0231	1	Gasket-Head, Cylinder	26:5	121-0254	1	Gasket-Coated, Rubber
9:5	121-0234	1	Gasket-Cover, Valve	27	127-9372	1	Primer Kit
9:6	121-0272	1	Gasket-Exhaust	28	127-9143	1	Carb Repair Kit With Gaskets
9:7	121-0252	1	Gasket-Carburetor	29	121-0355	1	Heater Box Kit
9:8	121-0253	1	Gasket-Carburetor	30	121-0283	1	Switch-Key
10	121-0247	1	Plate-Guide, Push Rod	31	117-7728	1	Key
11	121-0230	1	Head-Cylinder	32	133-9855	1	Complete Head ASM
12	121-0245	2	Rocker Arm ASM	99	121-4241	1	High Altitude Kit-Power Max HD ●
13	121-0244	2	Rotator-Valve				
14	120-4307	4	Keeper-Valve				
15	120-4306	2	Retainer-Spring, Valve				

● Not illustrated

 Engine Decal Assembly

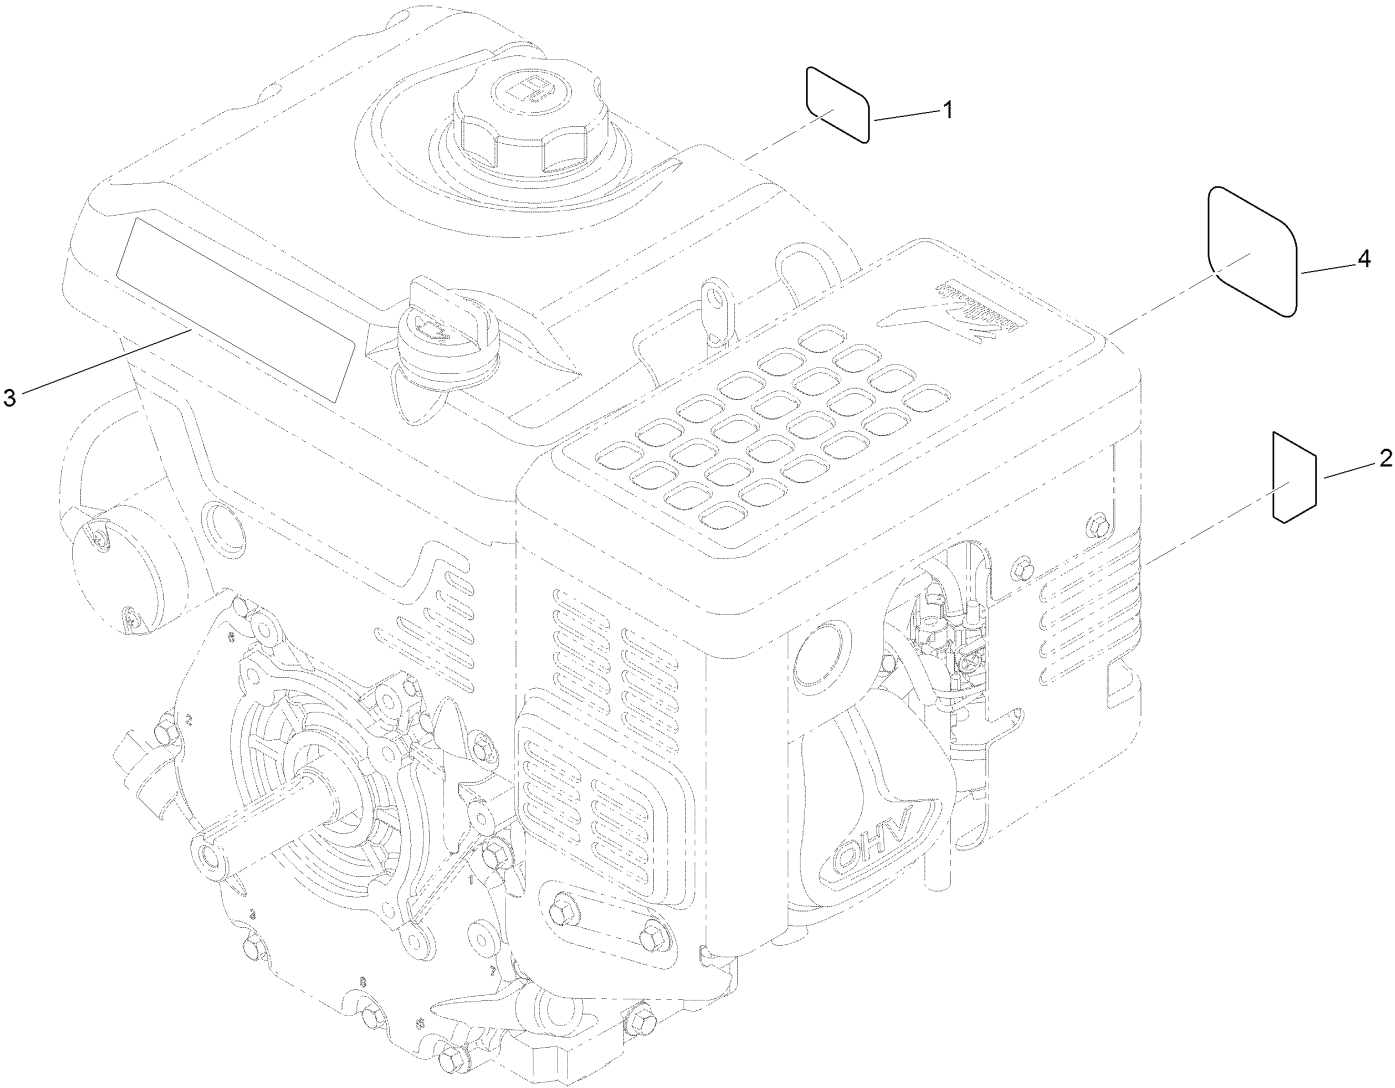


Engine Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-1102	1	Decal-Throttle
2	120-9805	1	Decal-Control, Engine

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	120-9808	1	Decal-Engine
4	120-9811	1	Decal-Recoil

 
Chute Assembly

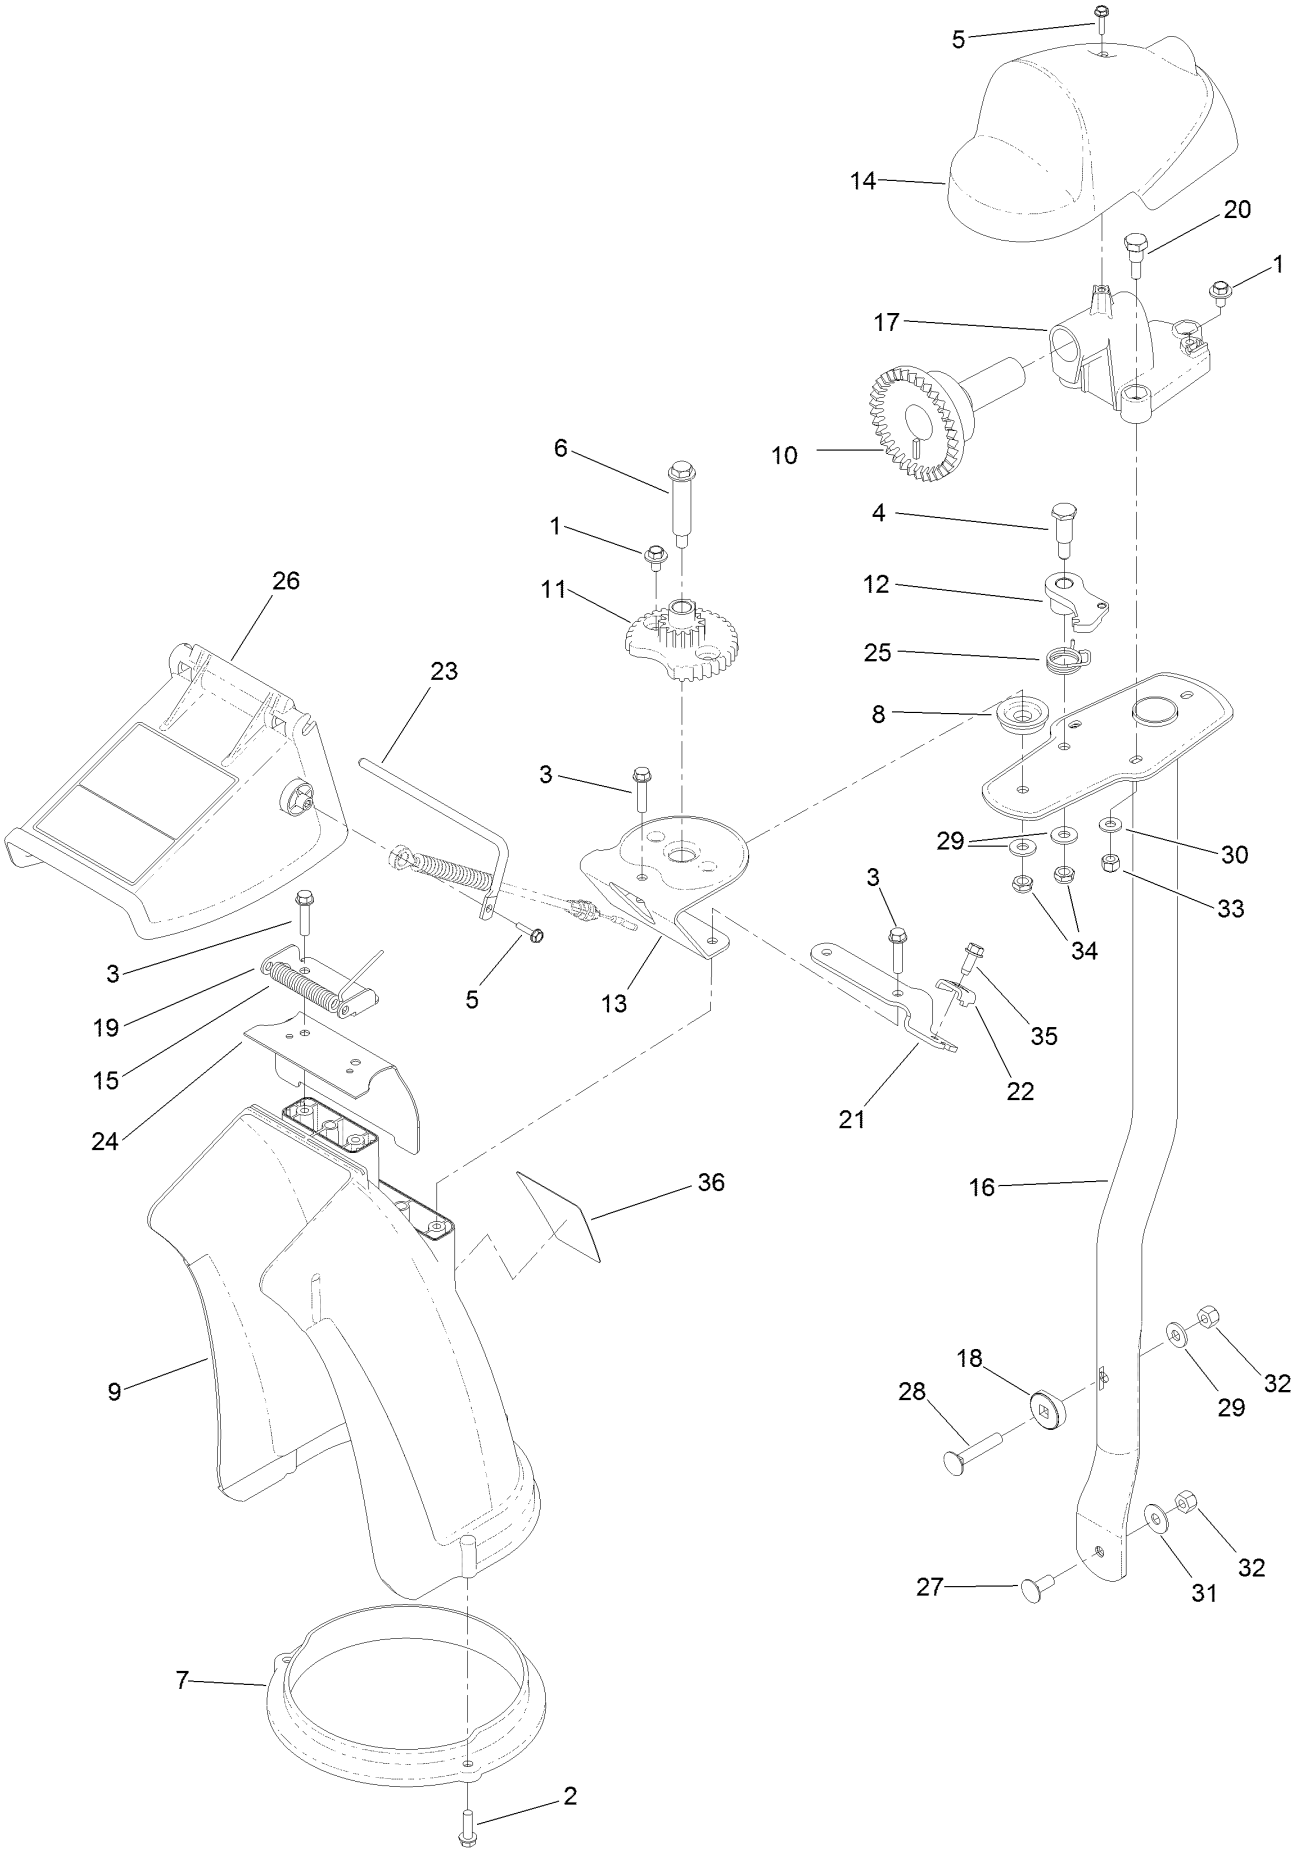

Chute Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	46-6810	3	Screw And Washer ASM	19	136-7105	1	Bracket-Deflector
2	46-8091	3	Screw-HWH	20	136-7197	3	Screw-Shoulder
3	46-8092	5	Screw-Plastite	21	136-7107	1	Bracket-Clamp, Cable
4	63-2650	1	Screw-Shoulder	22	136-7191	1	Clamp-Cable
5	98-1375	2	Screw-HWH	23	136-7111	1	Rod-Deflector
6	136-7199	1	Bolt-Shoulder	24	108-5052	1	Seal-Chute
7	105-9991	1	Ring-Chute	25	108-7315	1	Spring-Torsion
8	106-4422	1	Spacer-Chute	26	112-6629	1	Deflector-Chute, CE
9	106-4440	1	Chute-Discharge	27	3230-23	1	Screw-CARR
10	106-4471	1	Gear-Face	28	3230-5	1	Bolt-CARR
11	106-4472	1	Gear-Chute	29	3256-2	3	Washer-Flat
12	106-4476	1	Latch-Chute	30	3256-22	3	Washer-Flat
13	106-4582-03	1	Bracket-Support, Chute	31	3290-456	1	Washer-Belleville
14	106-4585	1	Cover-Gear, Chute	32	3296-29	2	Nut-Lock, NI
15	136-7104	1	Spring-Torsion	33	3296-42	3	Nut-Lock, NI
16	106-7253-03	1	Tube-Support	34	3296-47	2	Nut-Lock, NI
17	106-7257	1	Mount-Gear, Face	35	32144-10	1	Screw-HWH
18	106-7260	1	Washer-Curved	36	125-1121	1	Decal-Guarantee

 
Lever Chute Control Assembly

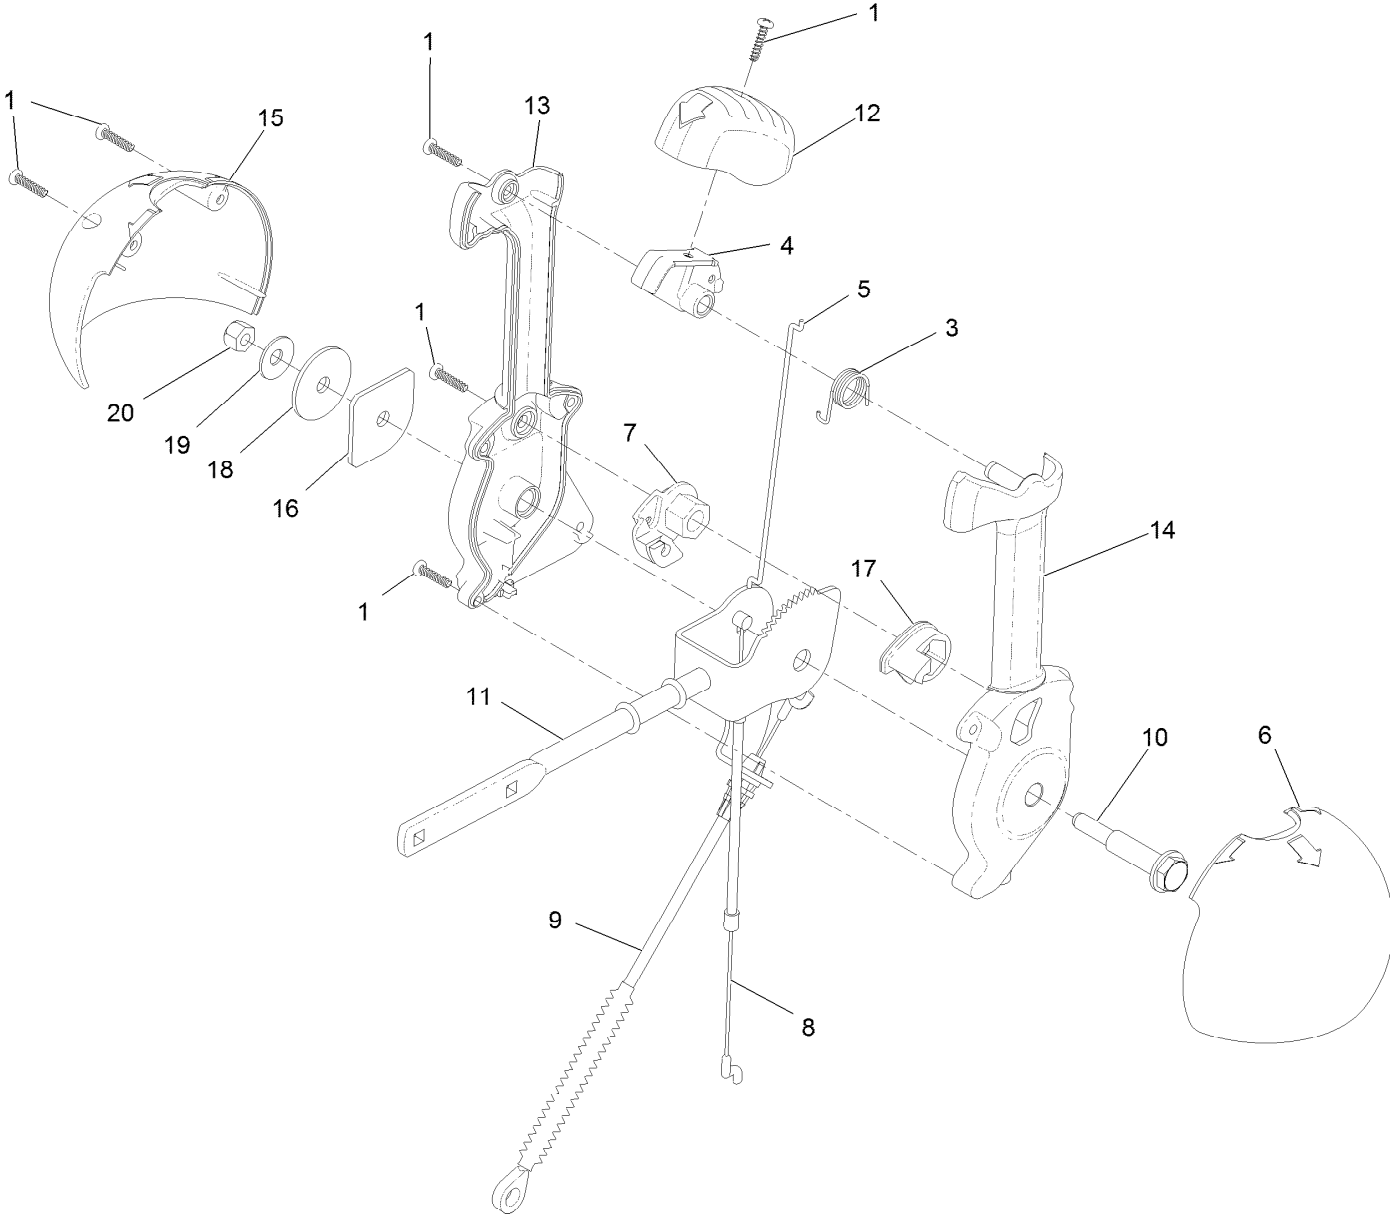

Lever Chute Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	94-4496	6	Screw-PPH	12	106-7280	1	Cap-Lever
3	105-9982	1	Spring-Torsion	13	106-7281	1	Lever-Control, Chute (RH)
4	105-9984	1	Trigger-Latch	14	106-7282	1	Lever-Control, Chute (LH)
5	136-7127	1	Link-Latch	15	106-7292	1	Cover-Lever, Chute (RH)
6	105-9986	1	Cover-Lever, Chute (LH)	16	136-7129	1	Plate-Friction
7	105-9988	1	Lever-Cable, Deflector	17	106-7310	1	Pawl-Latch
8	125-1113	1	Cable-Release, Chute	18	107-3002	1	Washer-Nylon
9	105-9990	1	Cable-Control, Deflector	19	3290-456	1	Washer-Belleville
10	136-7190	1	Screw-Shoulder	20	3296-29	1	Nut-Lock, NI
11	136-7128	1	Chute Control Rod				

 
Handle Assembly

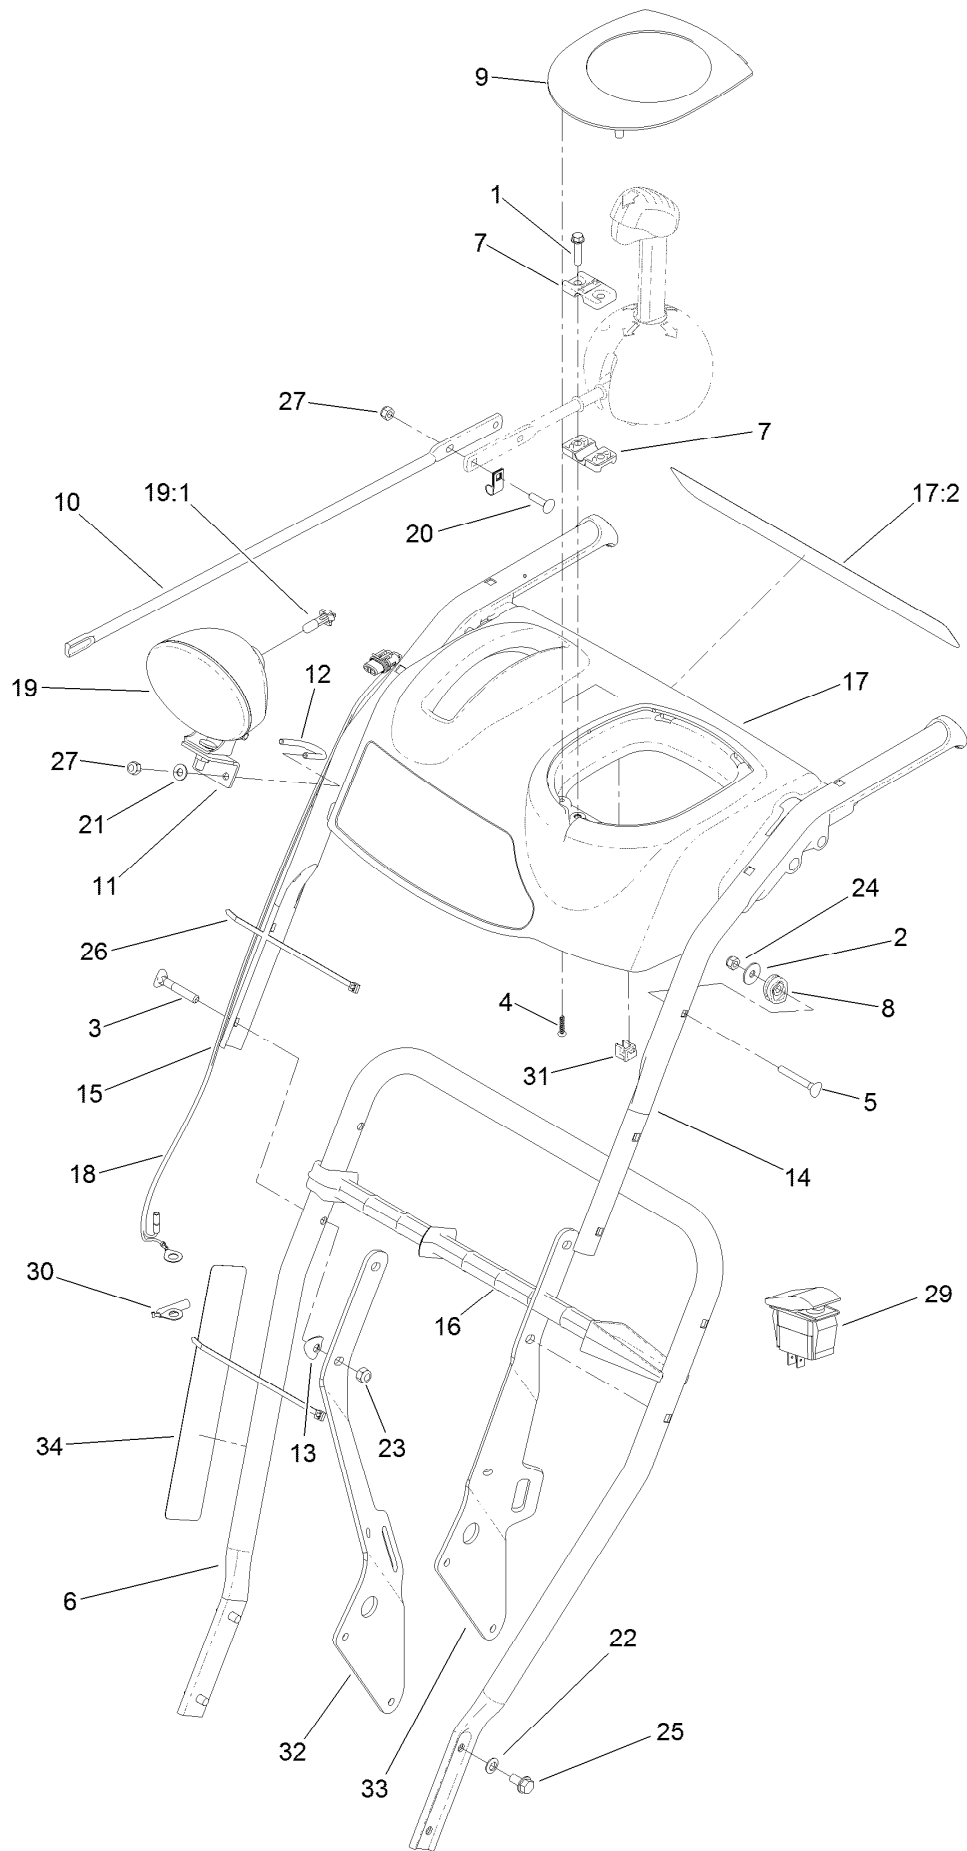

Handle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	46-8092	2	Screw-Plastite	19	120-3074	1	Headlamp ASM
2	87-6630	2	Washer-Plain	19:1	120-3075	1	Lamp-12 Volt
3	92-2260	4	Screw-Handle	20	3229-30	2	Screw-CARR
4	94-4496	2	Screw-PPH	21	3256-1	2	Washer-Flat
5	95-4453	2	Screw	22	3290-475	4	Washer-Belleville
6	105-9981-03	1	Handle-Lower	23	3296-72	4	Nut-Lock, NI
7	105-9987	2	Support-Rod	24	3296-73	2	Nut-Lock, NI
8	106-4509	2	Clamp-Cable	25	32144-14	4	Screw-HWHTF
9	106-4586	1	Cover-Panel, Control	26	614249	2	Tie-Cable
10	106-7283	1	Rod-Chute, Front	27	3296-73	4	Nut-Lock, NI
11	107-1020-03	1	Bracket-Light	29	127-5999	1	Switch-Rocker, Off-None-On
12	136-7120	1	Clamp-Light	30	127-5998	1	Harness-Wire, Ground Jumper
13	107-3844	4	Washer	31	32180-078	1	Clip-Edge
14	127-5952-03	1	Handle-Upper, LH	32	116-7672-03	1	Brace-Handle, LH
15	127-5953-03	1	Handle-Upper, RH	33	116-7673-03	1	Brace-Handle, RH
16	110-3408	1	Stick-Cleanout	34	125-7938	2	Decal-Tape, Reflective
17	127-5990	1	Control Panel ASM				
17:2	127-5991	1	Decal-Control				
18	127-5950	1	Harness-Wire, Heated Grips				

 
Control Assembly

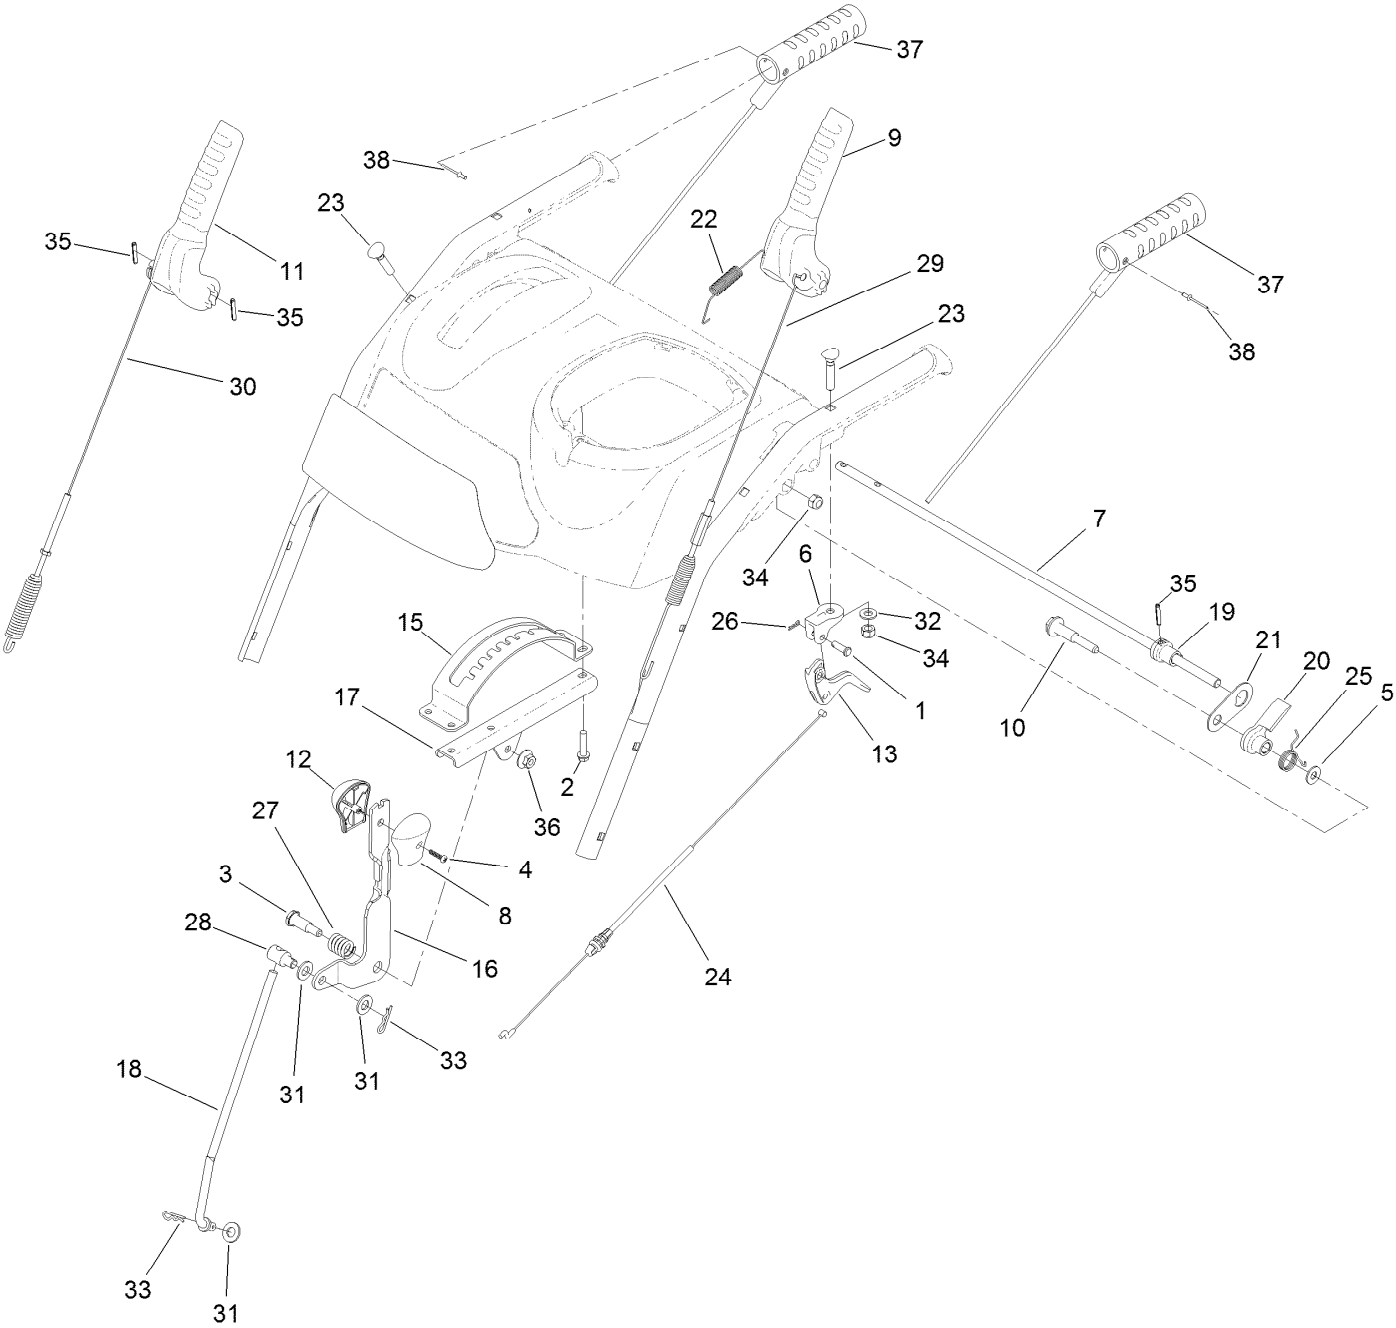

Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-808265	2	Pin-Clevis	21	136-7314	1	Link-Lockout
2	46-8092	4	Screw-Plastite	22	136-7315	1	Spring-Tension
3	63-2650	1	Screw-Shoulder	23	107-3018	4	Screw-Handle
4	94-4496	1	Screw-PPH	24	107-8896	2	Cable-Clutch
5	98-3499	1	Washer-Flat	25	108-0024	1	Spring-Torsion
6	105-9980	2	Mount-Lever, Clutch	26	108-2992	2	Pin-Hair
7	136-7100	1	Rod-Lockout	27	136-7121	1	Spring-Compression
8	105-9999	1	Knob-Shift, LH	28	136-7193	1	Trunnion-Rod
9	125-7946	1	Lever-Traction	29	120-0132	1	Cable-Traction
10	136-7196	1	Screw-Shoulder	30	120-3086	1	Cable-Auger
11	125-7947	1	Lever-Auger	31	3256-24	3	Washer-Flat
12	106-4423	1	Knob-Shift, RH	32	3256-70	4	Washer-Flat
13	106-4505	2	Lever-Clutch	33	3290-307	2	Pin-Cotter
15	106-7277-03	1	Guide-Selector, Speed	34	3296-72	5	Nut-Lock, NI
16	106-7278-03	1	Selector-Speed	35	32121-125	3	Pin-Spring
17	130-9775-03	1	Bracket-Selector, Speed	36	32128-13	1	Nut-HF
18	136-7109	1	Rod-Shift	37	127-5951	2	Grip-Heated
19	107-1043	1	Cam-Lockout	38	3290-271	4	Rivet-Pop
20	108-0023	1	Latch-Lockout				

 Wheel Clutch Assembly

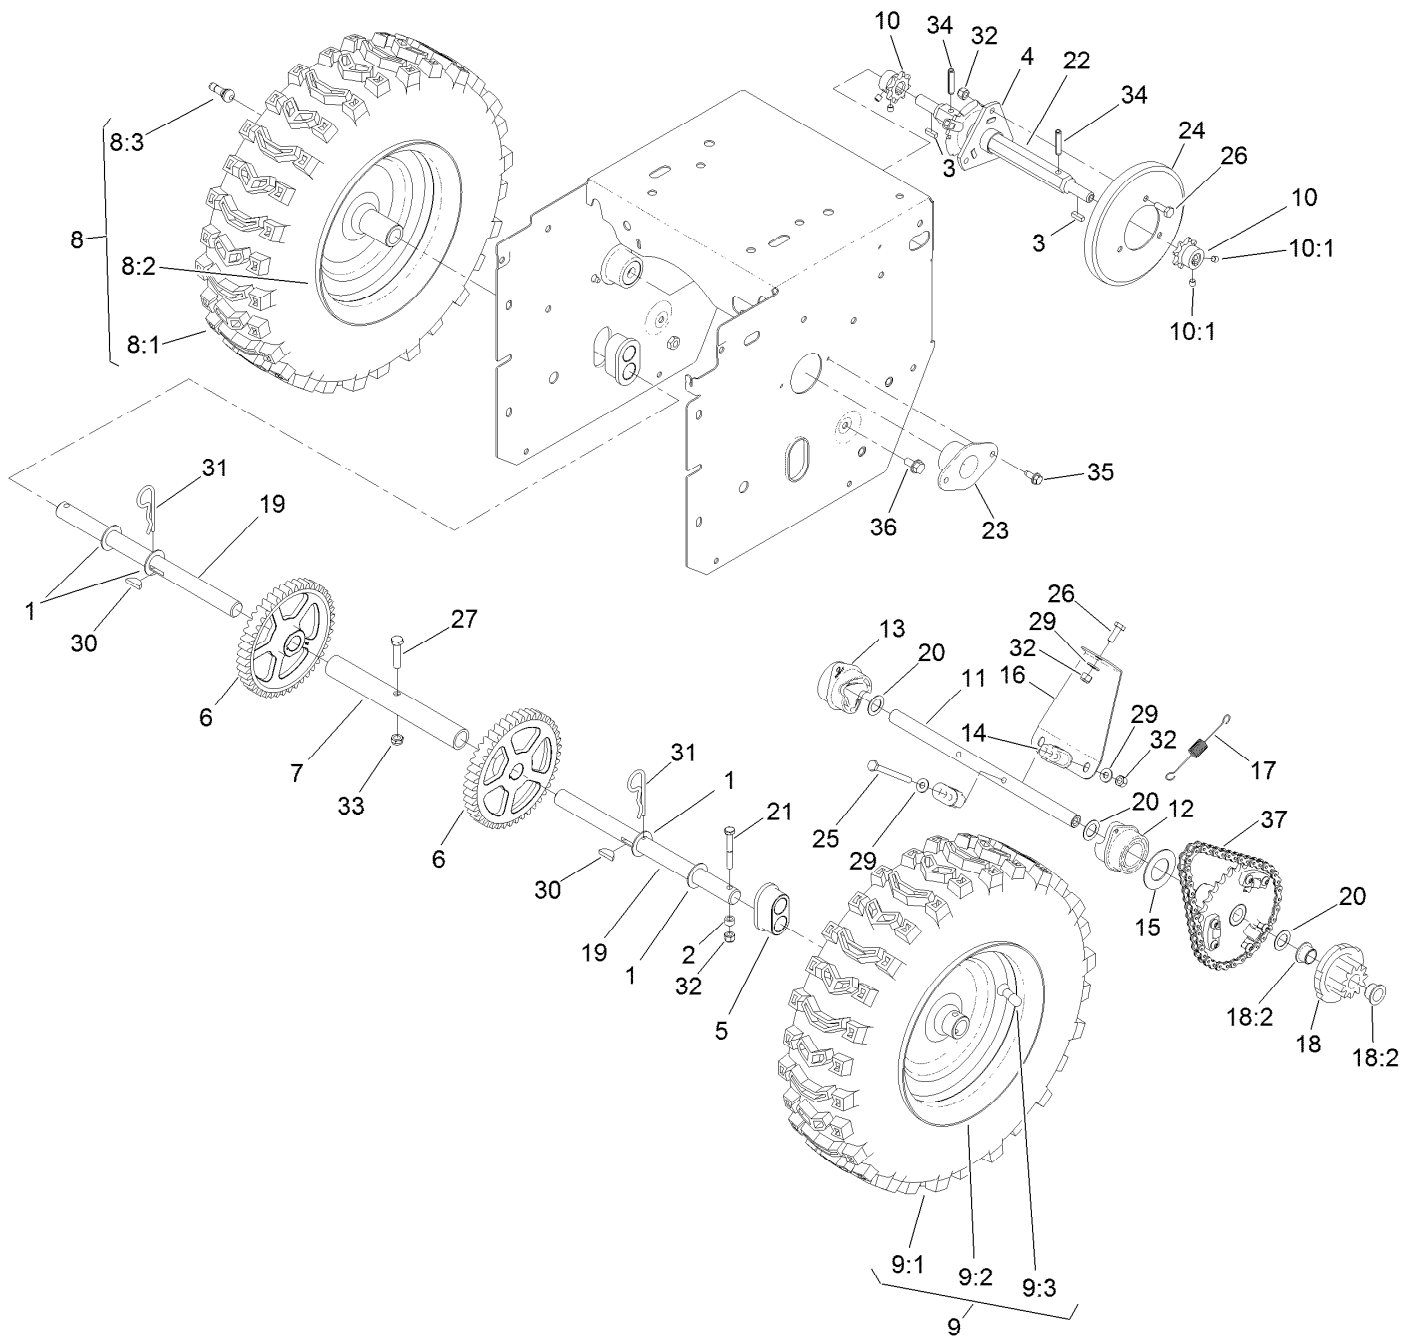


Wheel Clutch Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3-8664	4	Washer-Thrust	17	107-8893	2	Spring-Extension
2	55-9370	2	Spacer-Blade, Rotor	18	107-8894	2	11T Gear ASM
3	94-8850	2	Key-Square	18:2	108-2973	2	Bushing-Flange
4	106-4434	1	Trunnion-Hex	19	107-8898	2	Shaft-Axle
5	106-4558	2	Bearing-Axle	20	108-0015	4	Washer-Flat
6	106-4572	2	Gear-Axle, 44 Tooth	21	108-2975	2	Screw-HH
7	106-7259	1	Tube-Axle	22	108-7314	1	Shaft-Hex
8		1	RH Wheel And Tire ASM ●	23	108-7319	2	Retainer-Bearing
8:1	121-6610	1	Rim-Tire	24	119-1567	1	Wheel-Friction
8:2	121-6611	1	Tire	25	321-23	2	Screw-HH
8:3	232-27	1	Stem-Valve	26	321-4	4	Screw-HH
9		1	LH Wheel And Tire ASM ●	27	322-17	1	Screw-HH
9:1	121-6610	1	Rim-Tire	29	3256-22	5	Washer-Flat
9:2	121-6611	1	Tire	30	3257-7	2	Key-Woodruff
9:3	232-27	1	Stem-Valve	31	3290-343	2	Pin-Hair
10	106-7317	2	Sprocket-8 Tooth	32	3296-42	8	Nut-Lock, NI
10:1	3245-32	2	Screw-HSH	33	3296-47	1	Nut-Lock, NI
11	107-8883	1	Shaft-Intermediate	34	32121-9	2	Pin-Roll, Slotted
12	107-8887	1	Collar-Shift, LH	35	32144-10	4	Screw-HWH
13	107-8888	1	Collar-Shift, RH	36	32144-14	2	Screw-HWHTF
14	107-8889	4	Guide-Collar	37	108-0016	2	Chain-Roller
15	107-8891	2	Washer-Thrust	37	2710-6	2	Link-Connecting
16	107-8892-03	1	Brace-Collar, Shift				

● Not serviced separately

 Wheel Clutch Sprocket Assembly

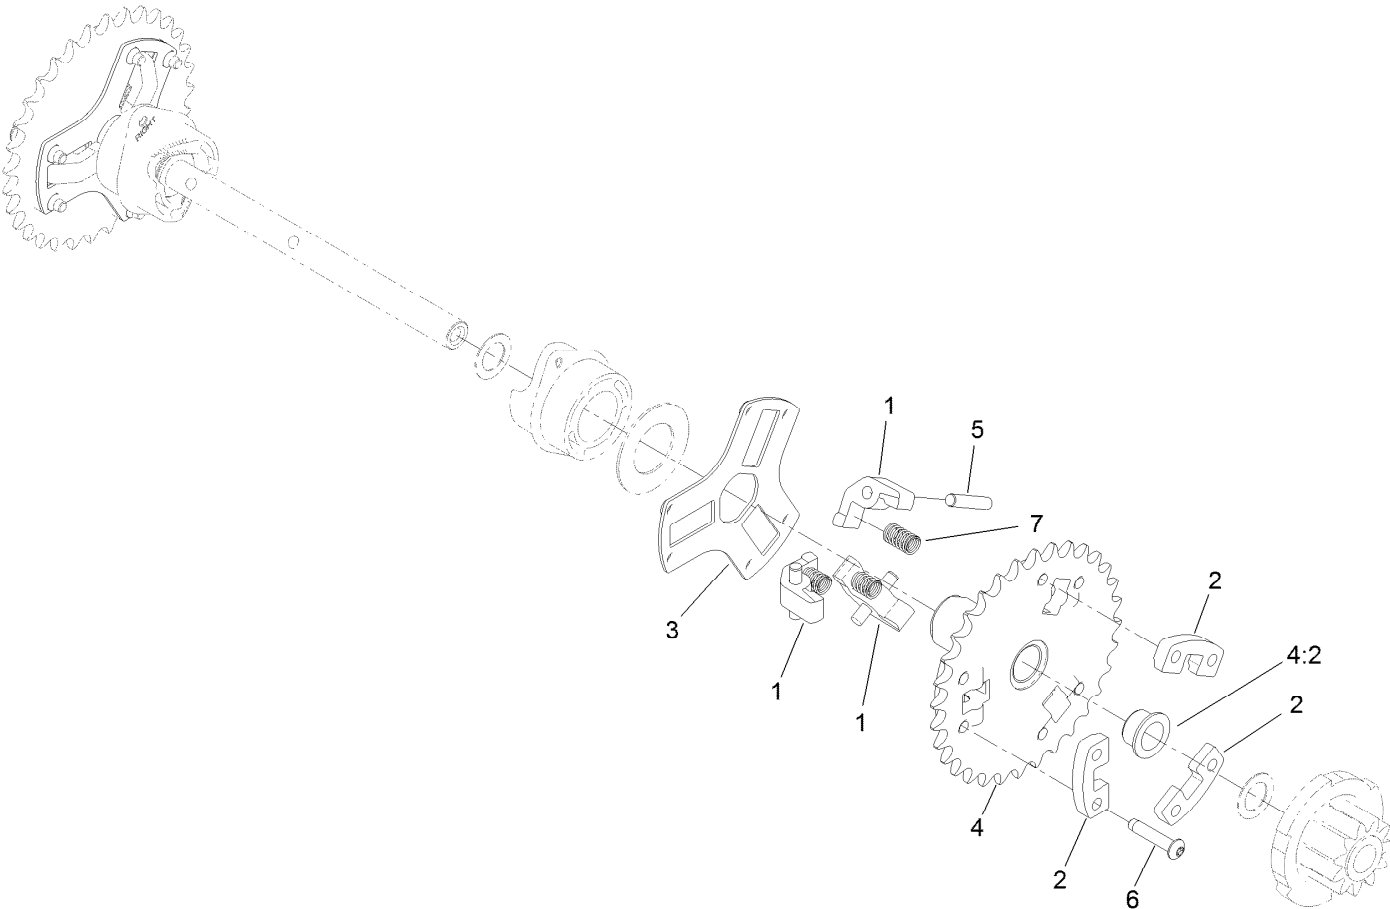

Wheel Clutch Sprocket Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	107-8879	6	Pawl-Clutch	4:2	108-2973	2	Bushing-Flange
2	107-8880	6	Support-Pawl	5	107-8899	6	Pin-Dowel
3	136-7318	2	Retainer-Pawl, Pin	6	108-0035	12	Screw
4	107-8895	2	32T Sprocket ASM	7	107-8885	6	Spring-Compression

Attachments and Accessories

For 38806 Power Max Commercial 1028 OHXE Snowthrower

Product Name	Model/Part
Weight Kit	107-3815
28in Drift Breaker	107-3817
Heavy-Duty Skid Kit	125-1104
Snow Cab Kit	127-5960
Engine Maintenance Kit	138-0704
Non-Marking Skid Kit	38211
Tire Chain Kit, 16in Tires	38215
Toro Snow Oil 0W30 Synthetic 20-Ounce Bottle	38913
Toro 2-Stage Cover	490-7466
Plain 2-Stage Cover	490-7467

Notes:



Count on it.