



Count on it.

Parts Catalog

**Power Max® Heavy Duty 1028
OXE
Snowthrower**

Model No. 38834—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

 
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

- Housing and Bypass Assembly 4
- Housing Assembly 6
- Idler and Linkage Assembly 8
- Auger and Impeller Assembly..... 10
- Gear Case Assembly No. 125-7926 12
- Impeller Assembly 14
- Engine Assembly 16
- Engine Assembly No. 1..... 18
- Engine Assembly No. 2..... 20
- Engine Assembly No. 3..... 22
- Engine Decal Assembly 24
- Chute Assembly 26
- Lever Chute Control Assembly..... 28
- Handle Assembly 30
- Control Assembly 32
- Wheel Clutch Assembly 34
- Wheel Clutch Sprocket Assembly 36
- Attachments and Accessories 38


Housing and Bypass Assembly

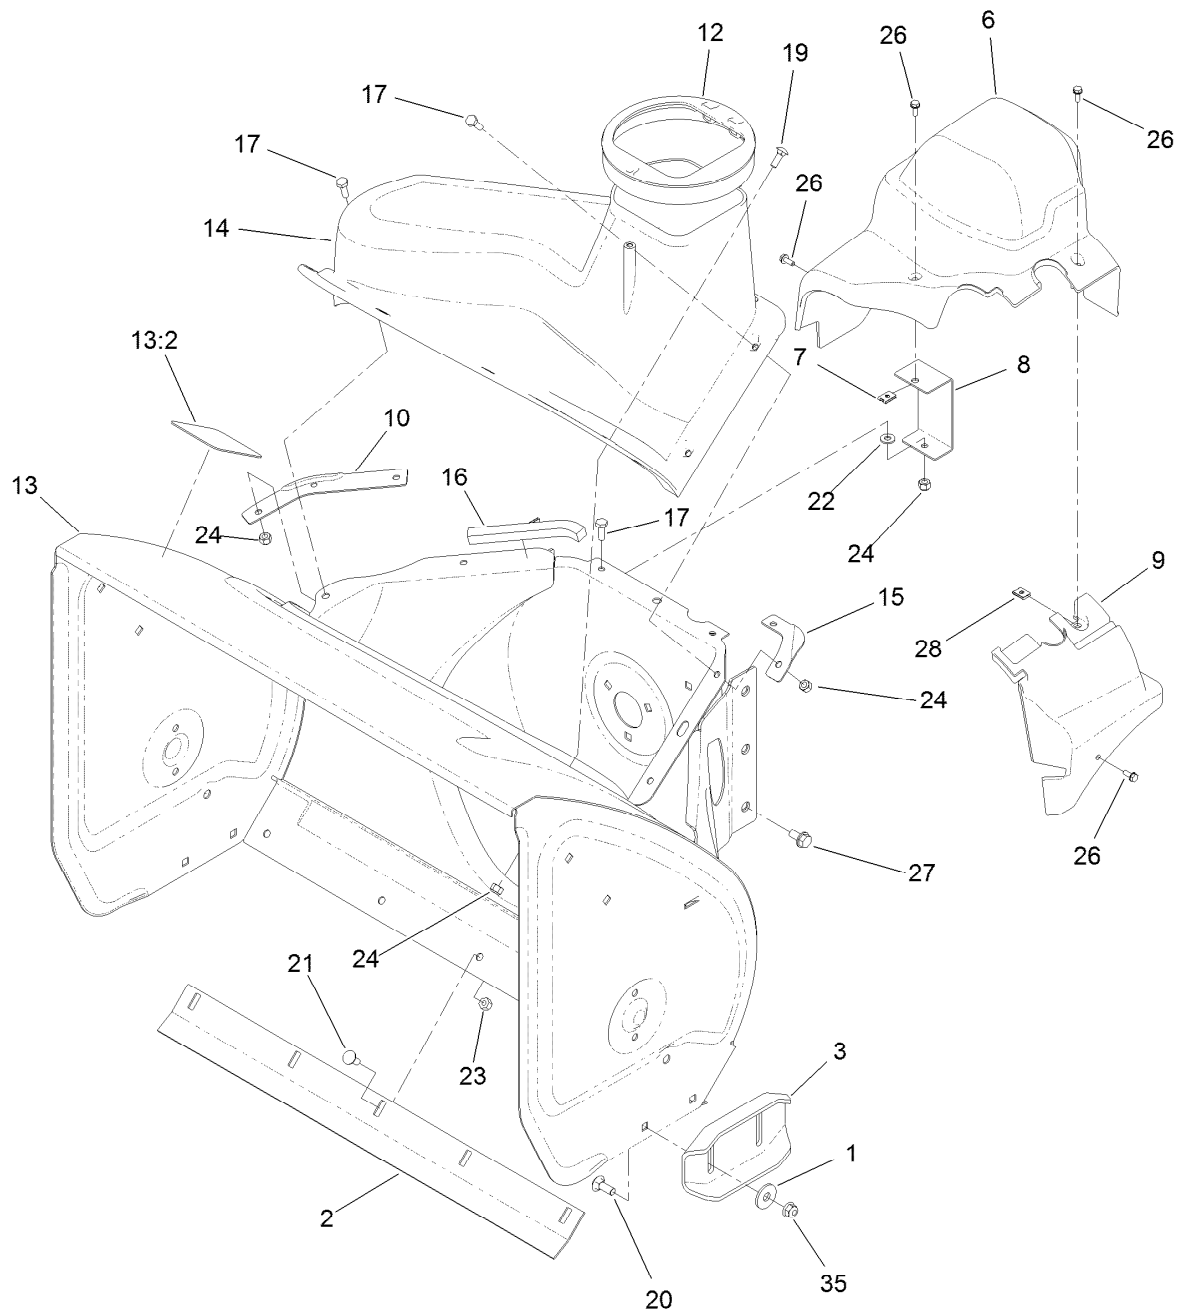

Housing and Bypass Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-4150	4	Washer-Flat	16	120-0124	1	Seal-Housing
2	106-4573-01	1	Scraper-Fixed	17	137-3042	7	Screw-HH
3	106-4588-01	2	Skid	19	137-3053	4	Bolt-CARR
6	119-1563	1	Cover-Belt	20	137-3059	4	Bolt-CARR
7	107-1013	1	Nut-Speed	21	137-3061	5	Bolt-CARR
8	107-1014-03	1	Bracket-Cover, Clip Nut	22	120-9679	1	Washer-Flat
9	107-1016	1	Cover-Extension, Belt	23	119-4038	5	Nut-Hex
10	107-1017-03	1	Seal-Flange, Cover	24	137-3088	11	Nut-Hex
12	107-3006	1	Guide-Chute	26	32144-112	4	Screw-HWH
13	107-3824	1	Housing-Auger, 28 Inch	27	32144-14	6	Screw-HWHTF
13:2	107-3040	1	Decal-Danger	28	701493	1	Nut-Speed
14	108-0017	1	Cover	35	119-4041	4	Nut-HF
15	108-0039-03	1	Seal				

 
Housing Assembly

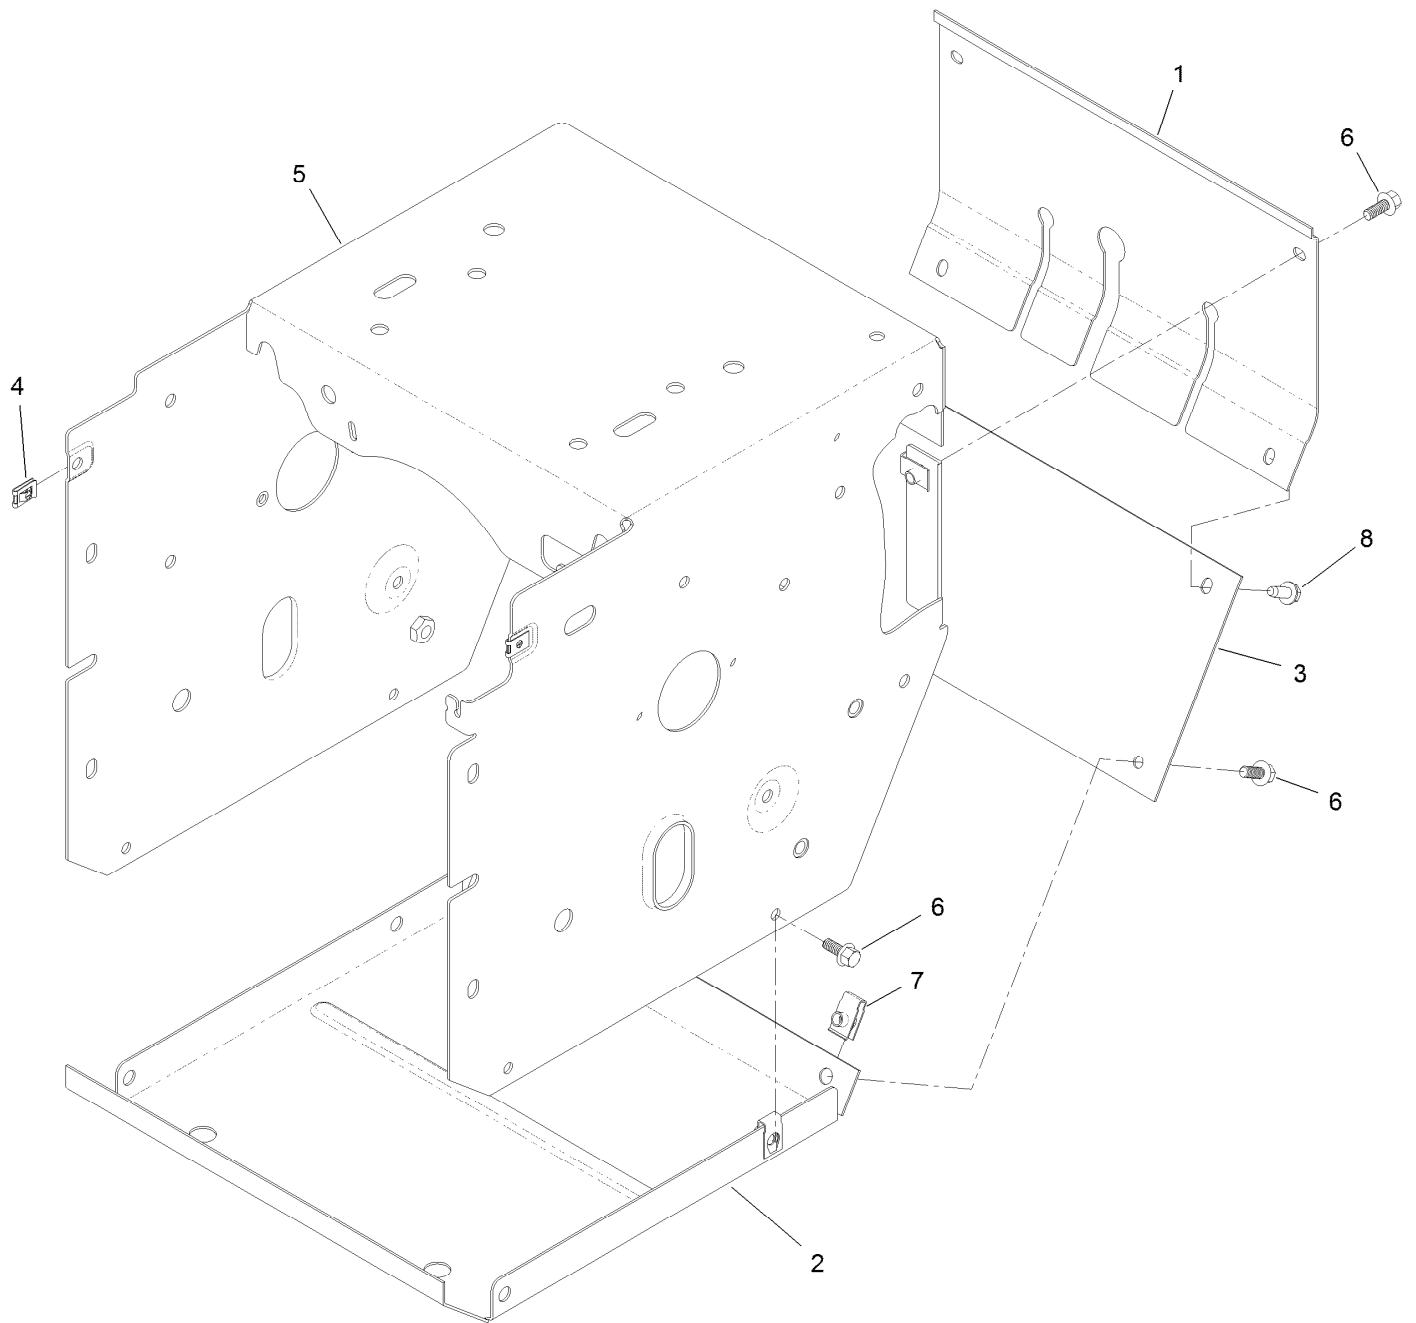

Housing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-0022-01	1	Cover-Upper	5	120-9832-01	1	Frame-Traction
2	106-7330-01	1	Pan-Bottom	6	137-3111	8	Screw-HHF
3	106-7345-01	1	Cover-Lower	7	107069	7	Clip
4	107-1013	2	Nut-Speed	8	137-3043	2	Screw-HWH

 
Idler and Linkage Assembly

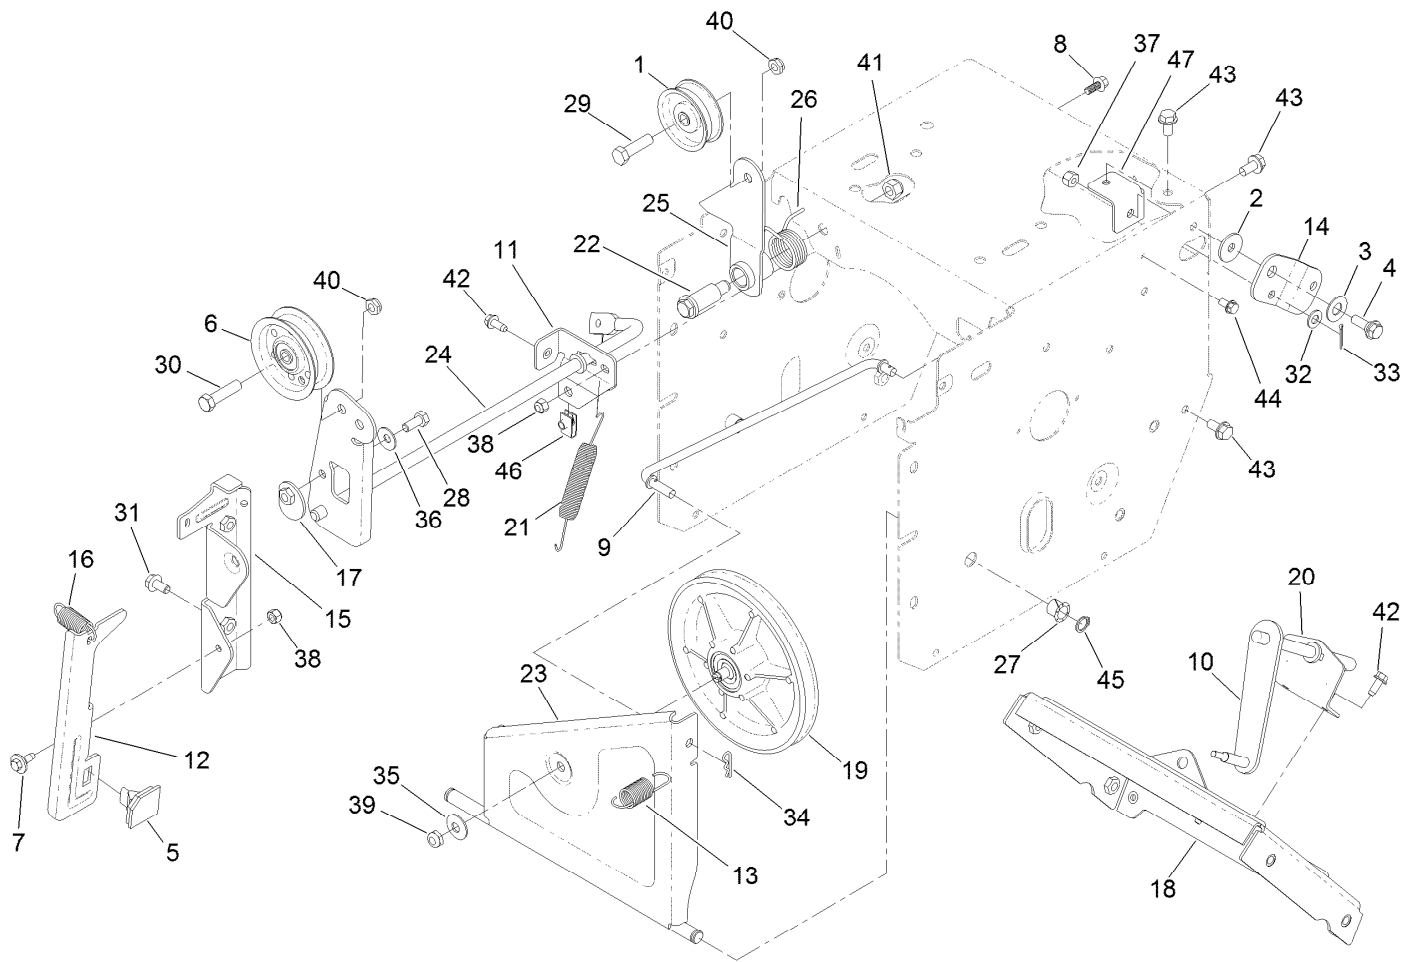

Idler and Linkage Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3-4244	1	Pulley-Idler	25	136-7186	1	Arm-Idler, Traction
2	5-4460	1	Washer-Pivot	26	120-3060	1	Spring-Torsion
3	25-5640	1	Washer	27	256-257	2	Bushing-Nyliner
4	27-0410	1	Screw-Shoulder	28	137-3052	1	Screw-HH
5	66-8060	1	Pad-Brake	29	137-3065	1	Screw-HH
6	92-7104	1	Pulley-Idler	30	137-3070	1	Screw-HH
7	92-9698	1	Screw-Shoulder	31	137-3068	2	Screw-HHF
8	137-3111	1	Screw-HHF	32	120-9683	1	Washer-Plain
9	136-7101	1	Link-Speed, Control	33	3272-4	1	Pin-Cotter
10	136-7106	1	Traction Lever ASM	34	137-3083	1	Pin-Hair
11	136-7181	1	Bracket-Impeller, Clutch	35	3290-340	1	Washer-Belleville
12	136-7108	1	Arm-Brake	36	3290-456	1	Washer-Belleville
13	107-1003	1	Spring-Extension	37	119-4038	1	Nut-Hex
14	136-7110	1	Bellcrank	38	137-3088	2	Nut-Hex
15	136-7112	1	Bracket-Impeller, Idler	39	121-4606	1	Nut-Hex
16	107-1045	1	Spring-Extension	40	121-4600	2	Nut-Hex
17	136-7113	1	Nut Assembly	41	137-3095	1	Nut-Hex
18	108-0026-01	1	Shift Plate ASM	42	137-3043	3	Screw-HWH
19	136-7319	1	Pulley-Traction ASM	43	32144-14	6	Screw-HWHTF
20	136-7114	1	Bracket-Shift, Rod	44	32144-4	1	Screw-HWH
21	136-7115	1	Spring-Extension	45	32151-61	2	Ring-Retaining
22	136-7116	1	Bolt-Shoulder	46	107069	1	Clip
23	136-7118	1	Bracket-Wheel, Friction	47	125-1124-03	1	Bracket-Frame, LH
24	120-0144-03	1	Impeller Clutch ASM				

 
Auger and Impeller Assembly

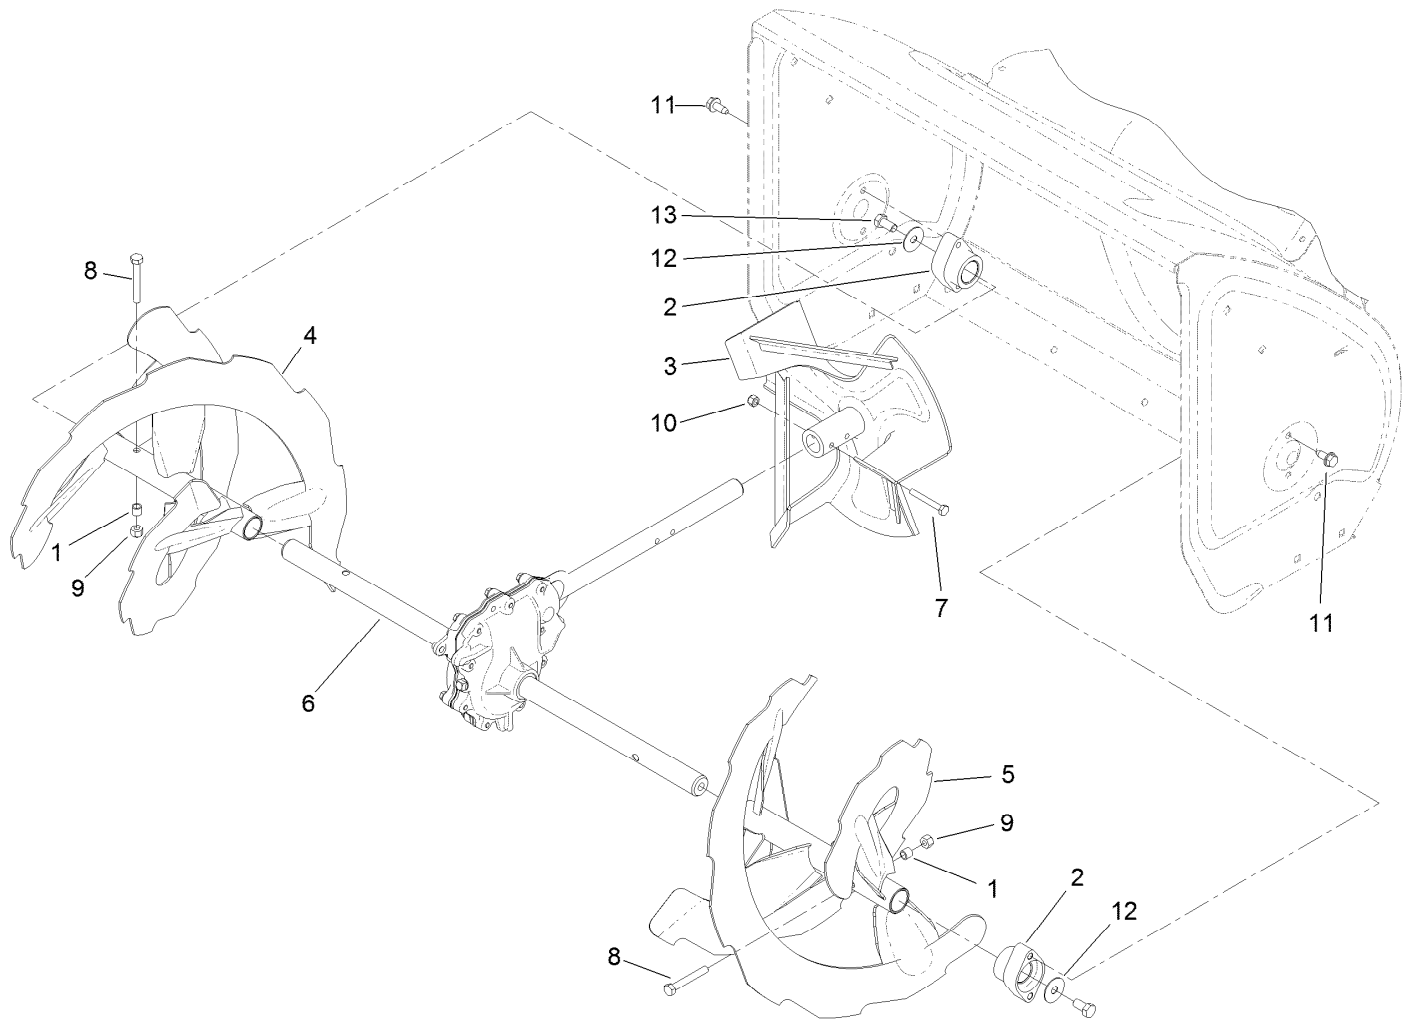

Auger and Impeller Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-7148	2	Spacer-Grommet	7	137-3032	2	Screw-HH
2	106-4570	2	Bearing-Auger	8	120-9738	2	Screw-HH
3	106-4576-03	1	Impeller ASM	9	119-4038	2	Nut-Hex
4	106-7291-03	1	RH Auger ASM	10	137-3088	2	Nut-Hex
5	106-7301-03	1	LH Auger ASM	11	32144-70	4	Screw-HWHTF
6	125-7926	1	28 Inch Auger Gearcase ASM	12	3-0750	2	Washer
				13	137-3066	2	Screw-HH

 Gear Case Assembly No. 125-7926

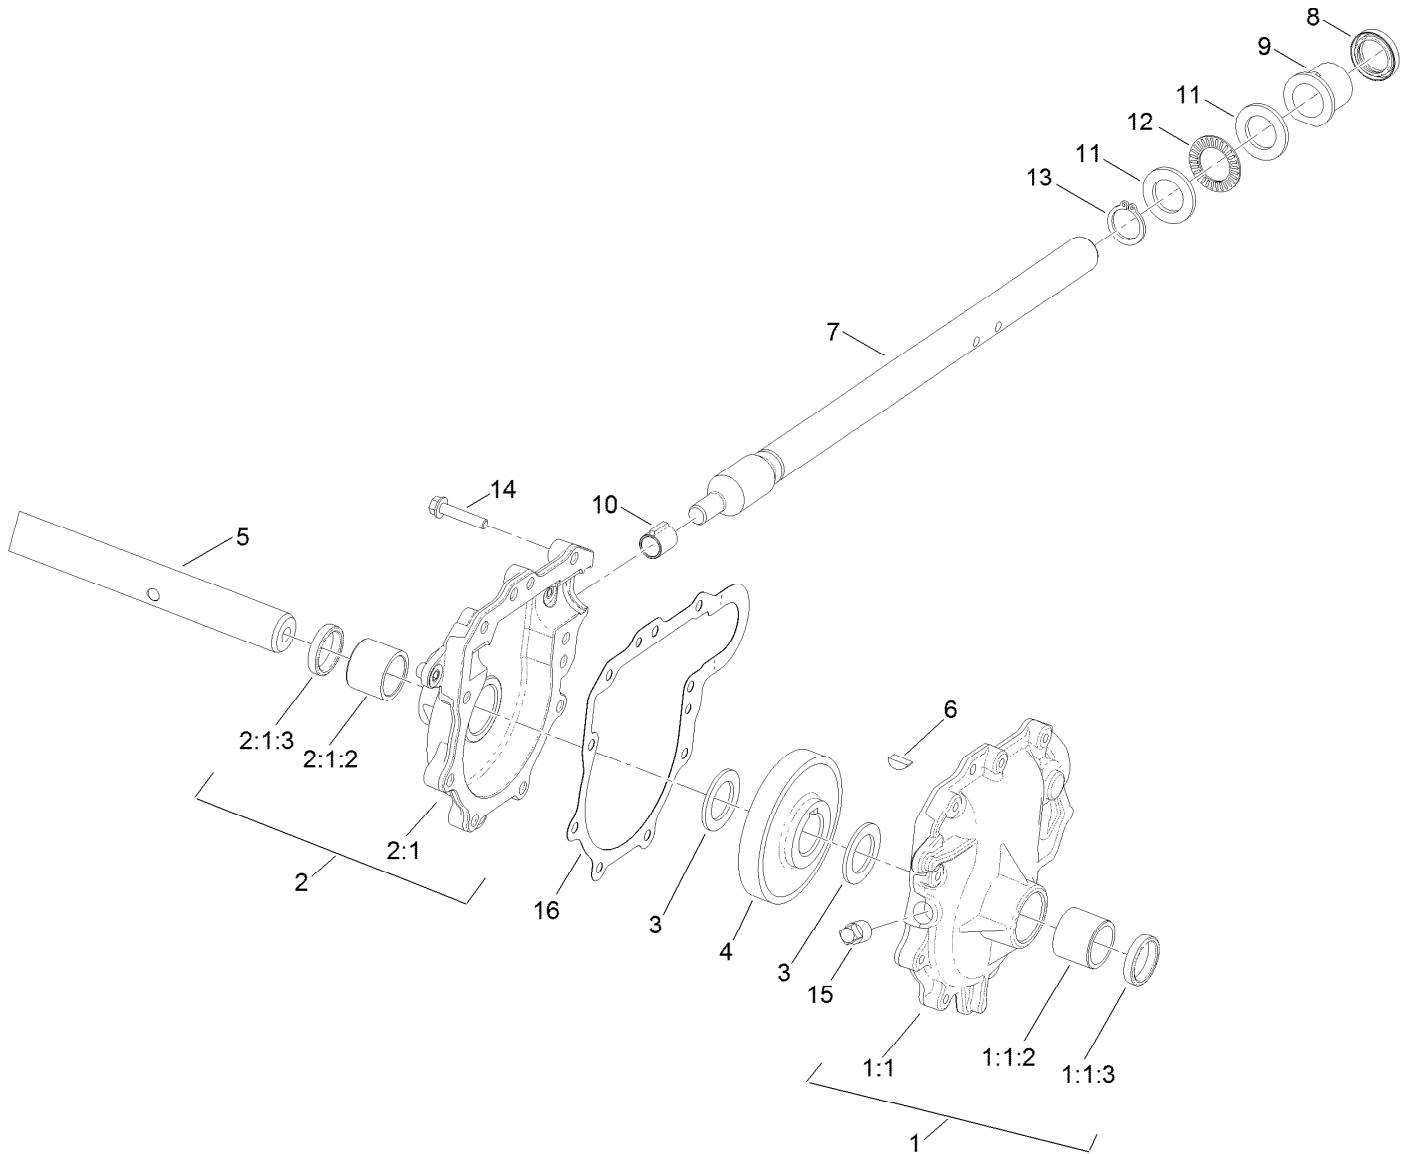


Gear Case Assembly No. 125-7926 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-7325	1	LH Auger Gearcase ASM	6	3257-10	1	Key-Woodruff
1:1		1	Gearcase-Auger, LH ●	7	66-7811	1	Shaft-Impeller
1:1:2	112-6635	1	Bushing-Sleeve	8	253-149	1	Seal-Oil
1:1:3	7-0045	1	Seal-Oil	9	37-6560	1	Bushing-Input
2	108-7327	1	RH Auger Gearcase ASM	10	62-1150	1	Bushing-Worm
2:1		1	Gearcase-Auger, RH ●	11	252-78	2	Washer-Thrust
2:1:2	112-6635	1	Bushing-Sleeve	12	252-76	1	Bearing-Thrust
2:1:3	7-0045	1	Seal-Oil	13	32151-33	1	Ring-Retaining, EXT
3	252-71	2	Washer-Thrust	14	108-4862	9	Screw-HWH Thd Roll
4	62-0120	1	Gear-Helical	15	121-6832	1	Plug-Pipe, SQH
5	106-4421	1	Shaft-Auger	16	108-7330	1	Gasket-Gearcase, Auger

● Not serviced separately

 Impeller Assembly

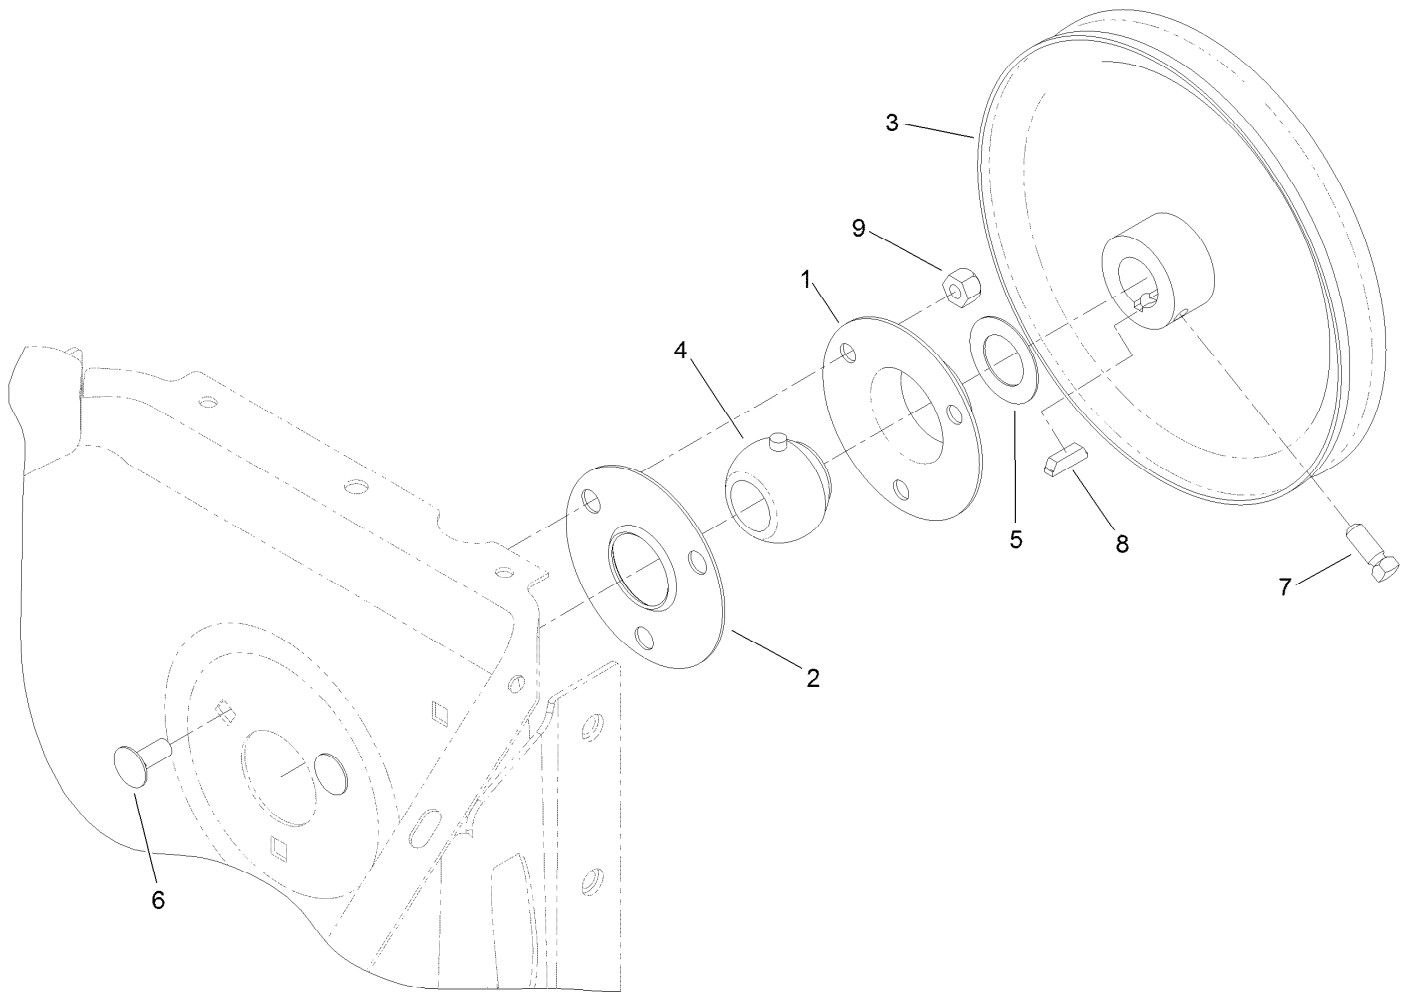


Impeller Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	26-6110	1	Flange-Cup, Bearing
2	26-6120	1	Flange-Cup, Bearing
3	136-7119	1	Pulley-Impeller
4	63-3450	1	Bearing-Ball
5	110-6767	1	Washer-Thrust

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	137-3061	3	Bolt-CARR
7	137-3000	2	Screw-Set, SQH
8	3257-23	1	Key-Woodruff
9	119-4038	3	Nut-Hex

 
Engine Assembly

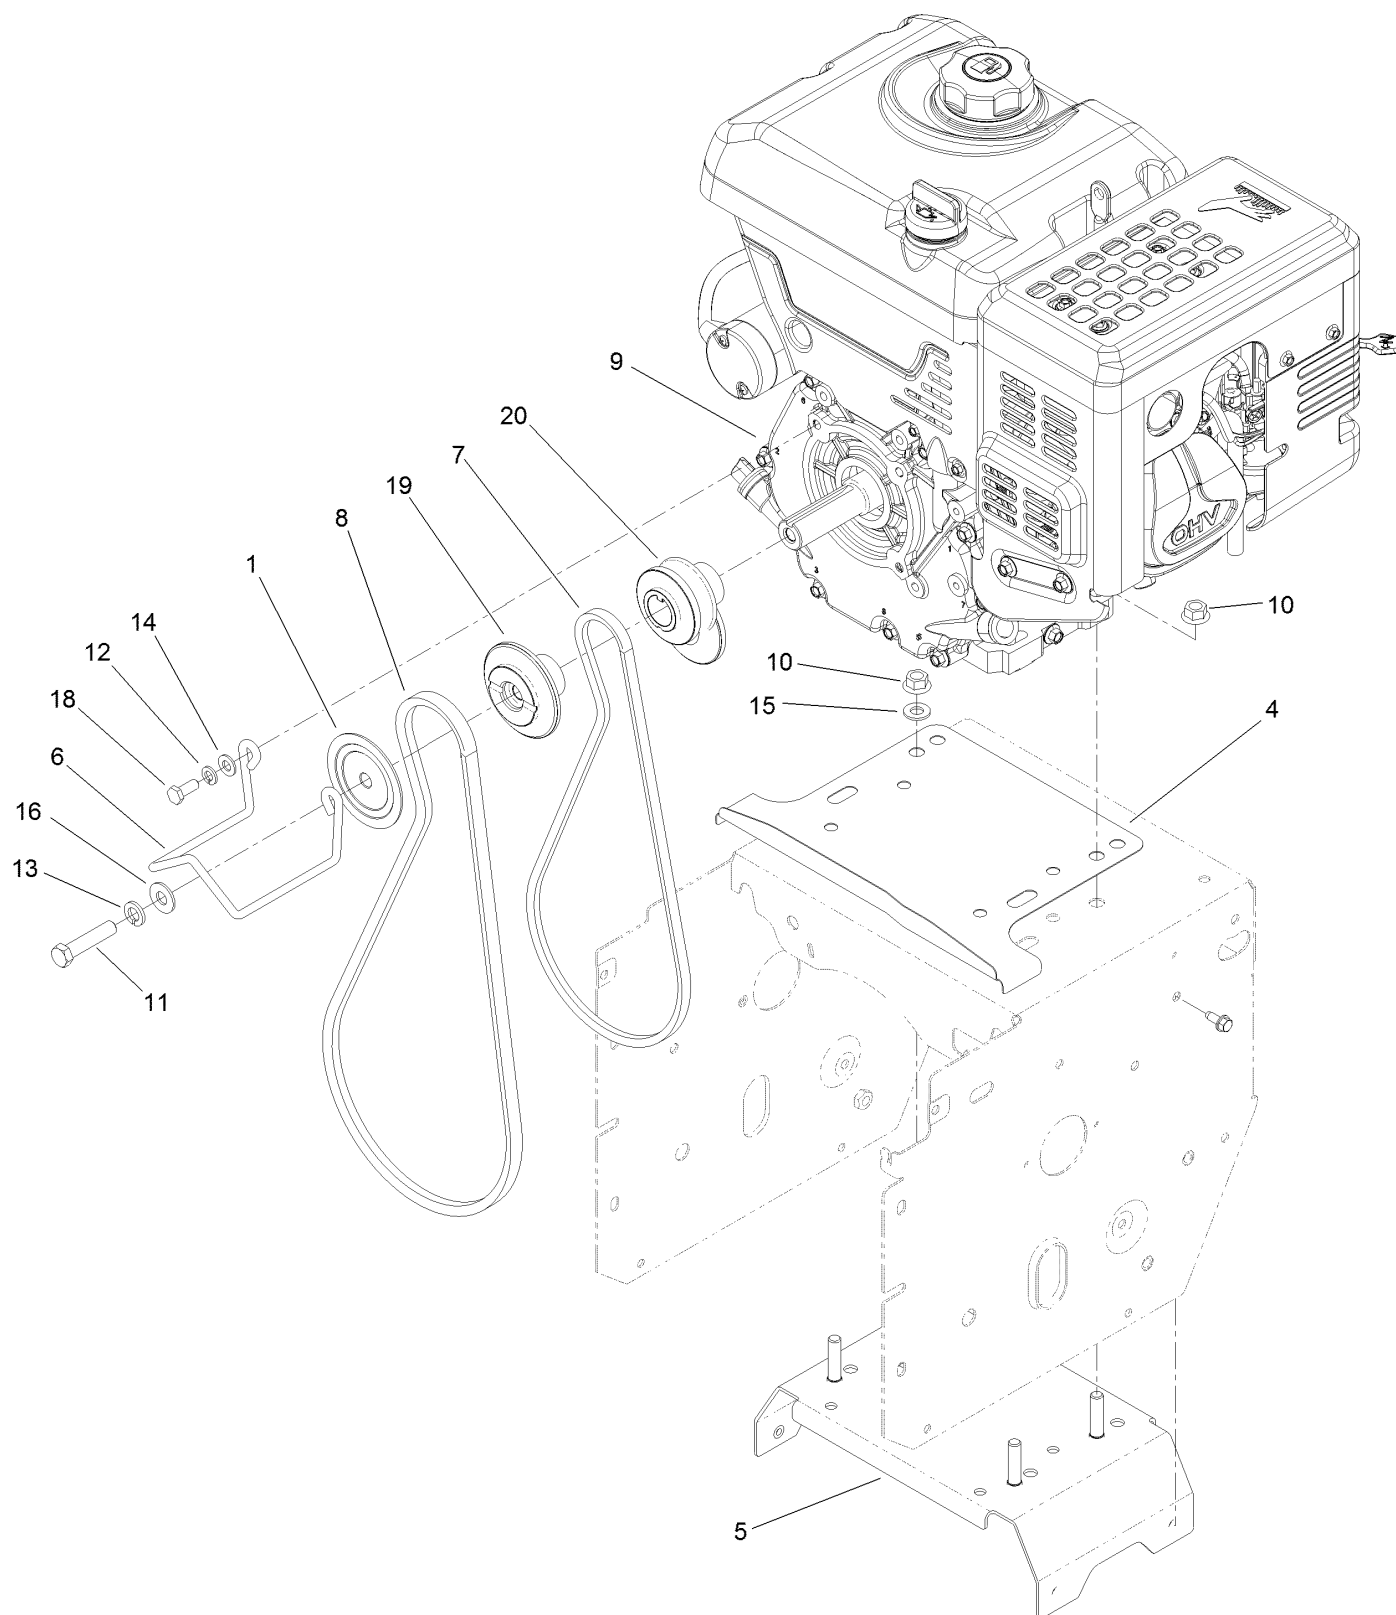

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	62-0940	1	Sheave-Half, Impeller	12	136-8682	2	Washer-Lock
4	117-6022-01	1	Shield-Drive	13	137-3071	1	Washer-Lock
5	119-1560	1	Frame Brace ASM	14	120-9683	2	Washer-Plain
6	136-8673	1	Guide-Belt	15	115-1166	1	Washer-Flat
7	119-1564	1	Belt-V	16	137-3078	1	Washer-Plain
8	125-1145	1	Belt-V	18	137-3098	2	Screw-HH
9	120-4426	1	Engine-180Fds-1	19	121-6602	1	Pulley-Engine, Impeller
10	136-8683	4	Nut-Lock	20	121-6617	1	Pulley-Traction
11	137-3037	1	Screw-HH				

 
Engine Assembly No. 1

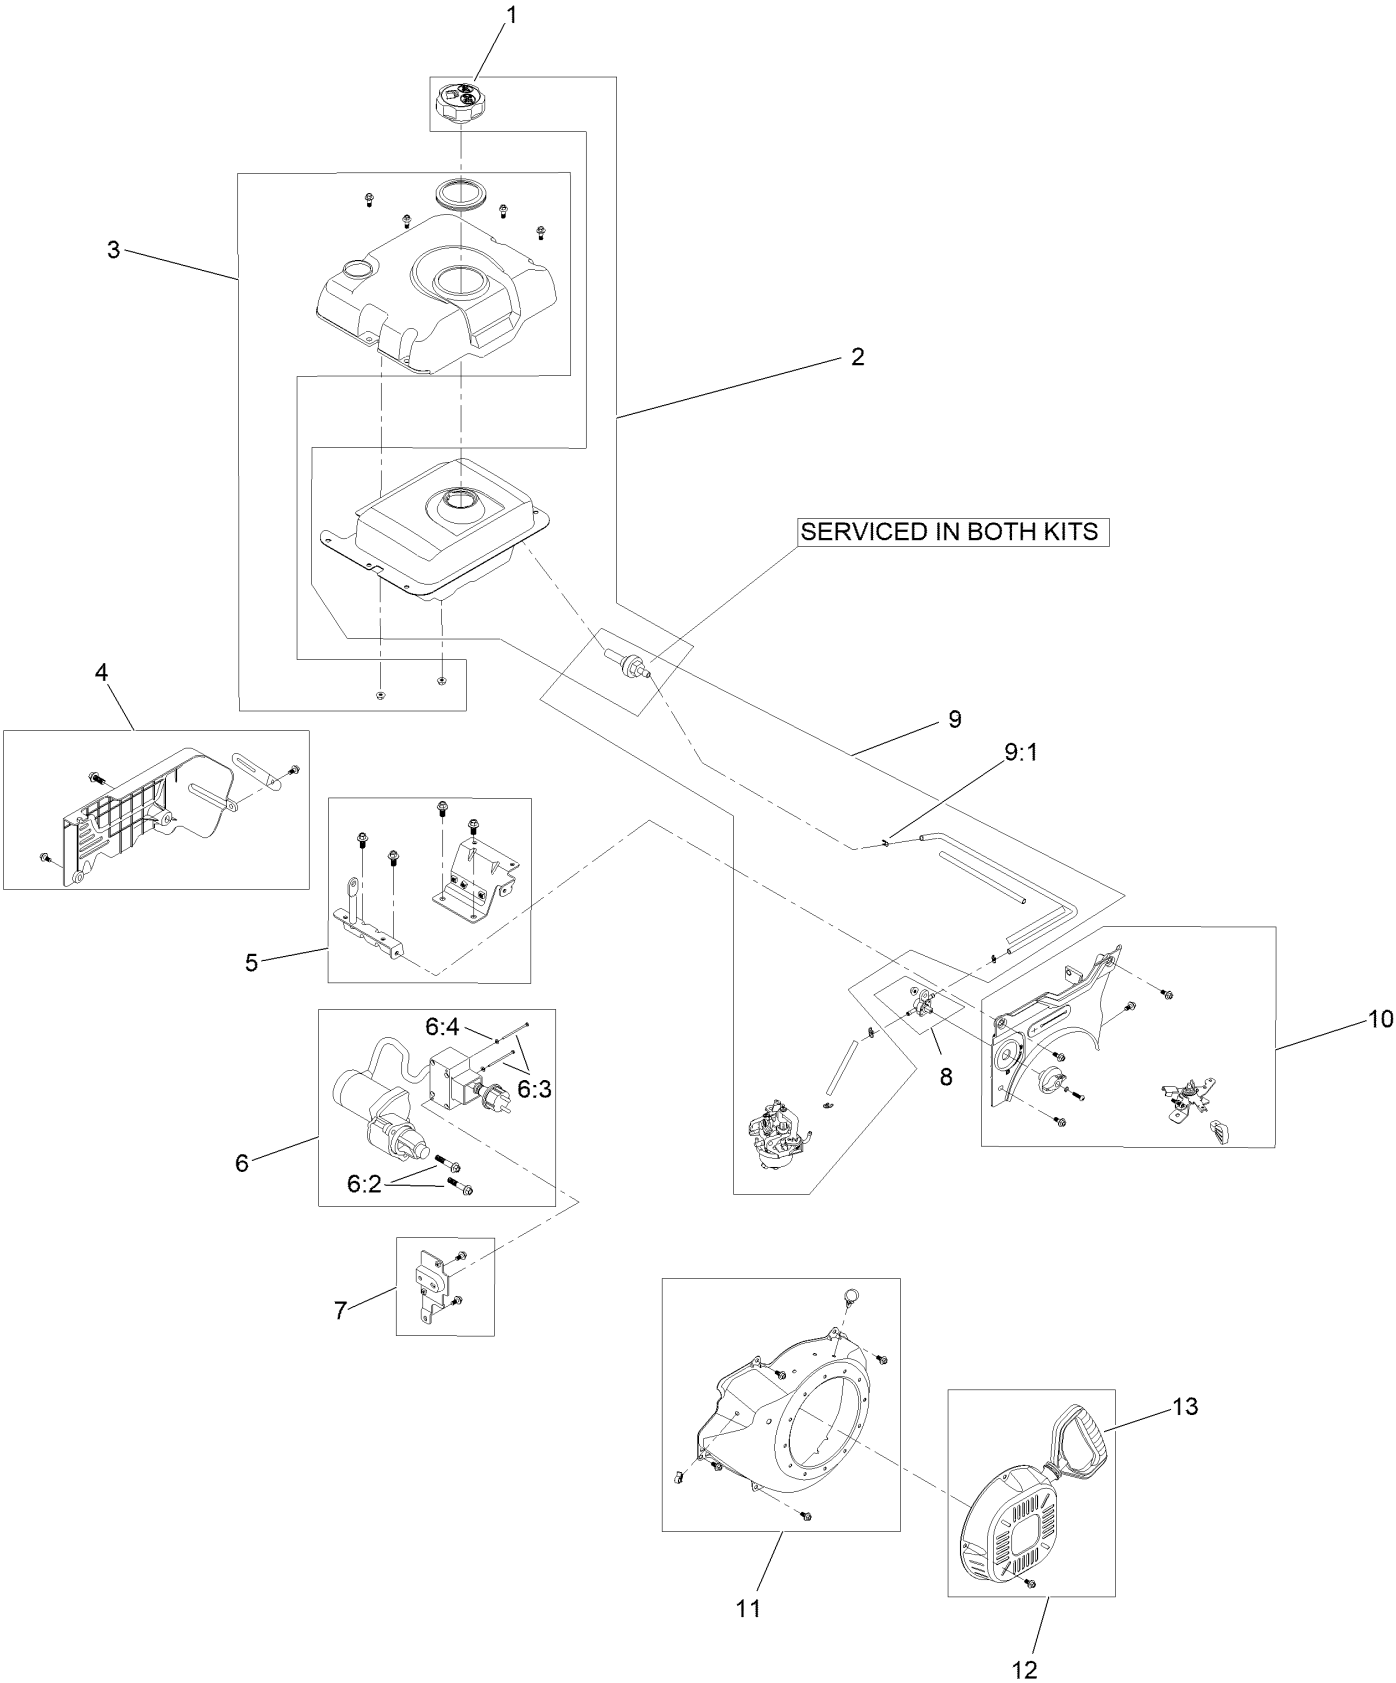

Engine Assembly No. 1 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-9823	1	Cap-Fuel	6:4	121-0312	2	Washer-Plain
2	136-7802	1	Fuel Tank And Cap Kit	7	121-4103	1	Switch Box Bracket Kit
3	121-0349	1	Fuel Tank Cover Kit	8	121-4109	1	Fuel Shut-Off Valve Kit
4	121-0347	1	Rear Panel And Hardware Kit	9	136-7801	1	Fuel Line Kit
5	121-0351	1	Tank Mount Bracket Kit	9:1	121-0087	6	Clamp-Hose
6	136-7800	1	Electric Starter Kit	10	121-4105	1	Front Panel Kit
6:2	121-0298	2	Screw-HHF	11	121-0274	1	Recoil Shroud Kit
6:3	121-0306	2	Screw-Bhp	12	121-0342	1	Recoil Kit
				13	121-0287	1	Handle-Recoil

 
Engine Assembly No. 2

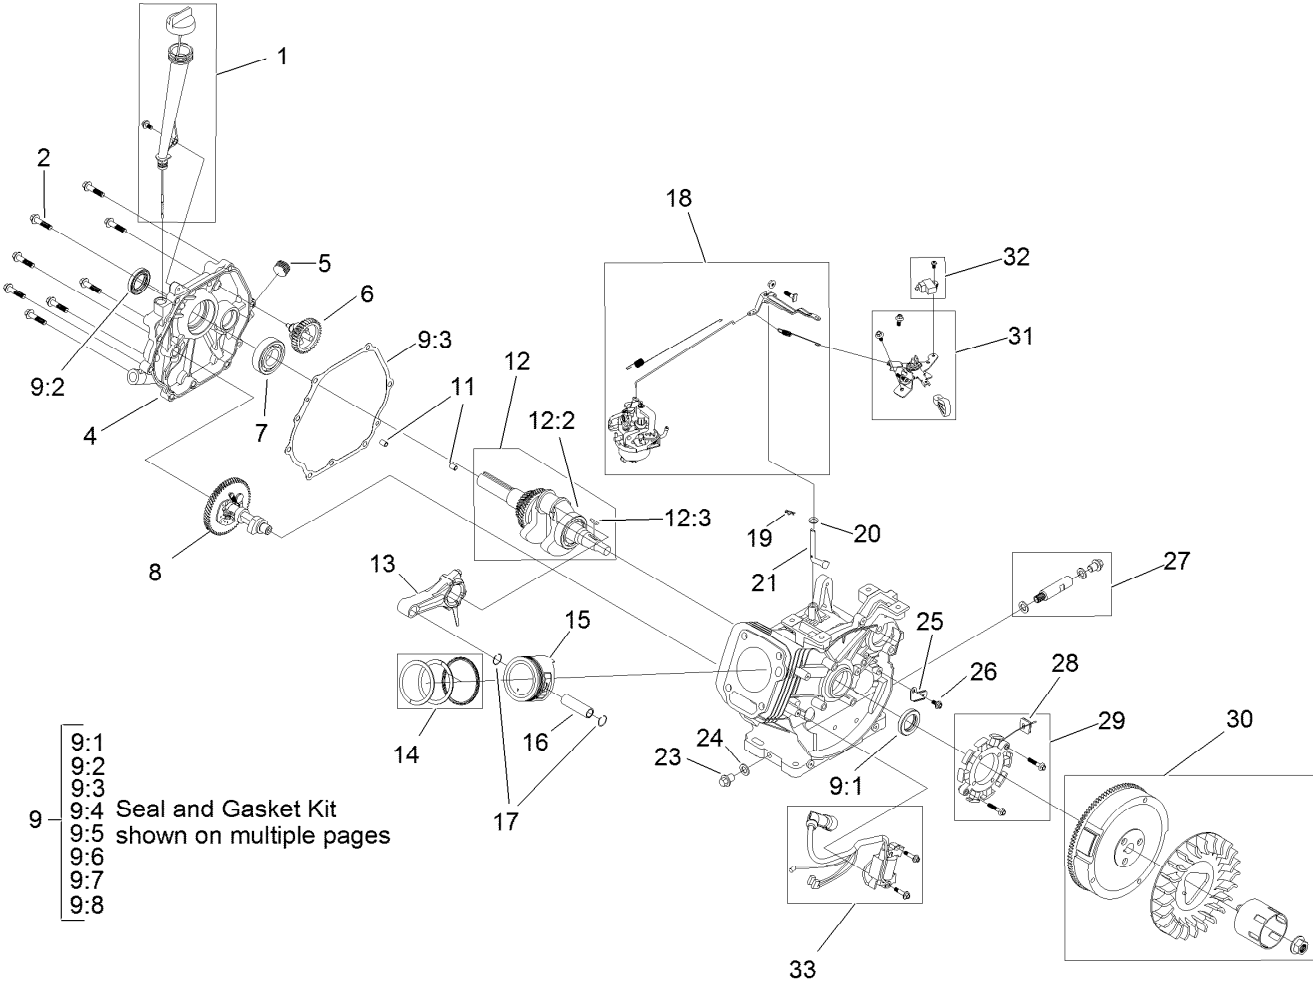

Engine Assembly No. 2 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-9854	1	Oil Fill Kit	13	121-0240	1	Connecting Rod ASM
2	121-0299	8	Screw-HHF	14	121-0238	1	Set-Ring, Piston
4	133-9856	1	Cover-Crankcase	15	121-0333	1	Piston
5	133-9805	1	Plug-Drain	16	121-0237	1	Pin-Piston
6	136-7782	1	Governor Gear ASM	17	121-0313	2	Clip-Pin, Piston
7	121-0315	1	Bearing-Main	18	121-0352	1	Complete Governor Kit
8	121-0243	1	Camshaft ASM	19	120-4256	1	Pin-Hair
9	121-0358	1	Seal And Gasket Kit	20	121-0311	1	Washer-Plain
9:1	121-0316	1	Seal-Oil	21	136-7783	1	Shaft-Governor
9:2	121-0317	1	Seal-Oil	23	121-0222	1	Screw-HHF
9:3	121-0228	1	Gasket-Cover, Crankcase	24	121-0310	1	Washer-Plain
9:4	121-0231	1	Gasket-Head, Cylinder	25	121-0278	1	Clamp
9:5	121-0234	1	Gasket-Cover, Valve	26	121-0118	1	Screw-HHF
9:6	121-0272	1	Gasket-Exhaust	27	121-0341	1	Drain Plug Kit
9:7	121-0252	1	Gasket-Carburetor	28	121-0325	1	Grommet-Rubber
9:8	121-0253	1	Gasket-Carburetor	29	121-0362	1	Stator Kit
11	121-0314	2	Pin-Dowel	30	121-0354	1	Fan And Flywheel Kit
12	121-0241	1	Crankshaft ASM	31	121-4107	1	Throttle Control Kit
12:2	121-0315	1	Bearing-Main	32	121-4106	1	Kill Switch Kit
12:3	120-4320	1	Key-Woodruff	33	136-7798	1	Ignition Kit

 Engine Assembly No. 3

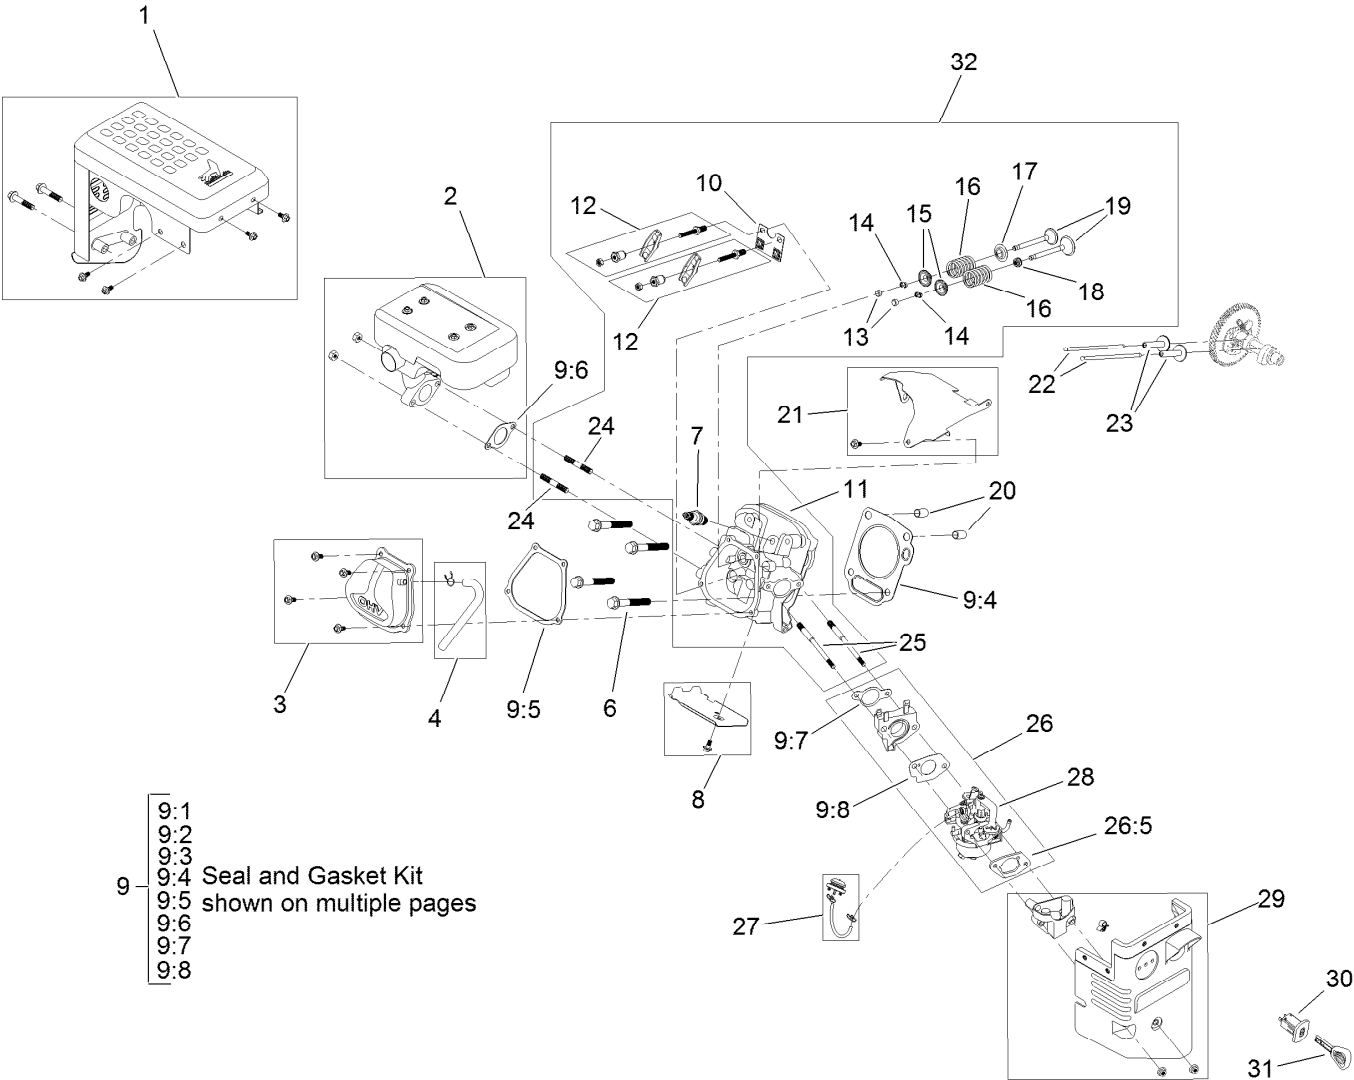


Engine Assembly No. 3 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-4101	1	Muffler Shield Kit	16	120-4305	2	Spring-Valve
2	127-9373	1	Muffler Kit	17	120-4303	1	Seat-Spring, Valve
3	121-0343	1	Valve Cover Kit	18	120-4304	1	Seal-Stem, Valve
4	121-0340	1	Breather Tube Kit	19	121-0328	1	Valve Kit
6	121-0302	4	Screw-HHF	20	120-4200	2	Pin-Dowel
7	119-1901	1	Plug-Spark	21	121-4102	1	Upper Heat Shroud Kit
8	121-0348	1	Lower Heat Shroud Kit	22	121-0246	2	Rod-Push
9	121-0358	1	Seal And Gasket Kit	23	120-4298	2	Lifter-Valve
9:1	121-0316	1	Seal-Oil	24	121-0304	2	Stud-Mount, Muffler
9:2	121-0317	1	Seal-Oil	25	121-0303	2	Stud-Mount, Carburetor
9:3	121-0228	1	Gasket-Cover, Crankcase	26	121-0359	1	Complete Carb Service Kit
9:4	121-0231	1	Gasket-Head, Cylinder	26:5	121-0254	1	Gasket-Coated, Rubber
9:5	121-0234	1	Gasket-Cover, Valve	27	127-9372	1	Primer Kit
9:6	121-0272	1	Gasket-Exhaust	28	127-9143	1	Carb Repair Kit With Gaskets
9:7	121-0252	1	Gasket-Carburetor	29	121-0355	1	Heater Box Kit
9:8	121-0253	1	Gasket-Carburetor	30	121-0283	1	Switch-Key
10	121-0247	1	Plate-Guide, Push Rod	31	117-7728	1	Key
11	121-0230	1	Head-Cylinder	32	133-9855	1	Complete Head ASM
12	121-0245	2	Rocker Arm ASM	99	121-4241	1	High Altitude Kit-Power Max HD ●
13	121-0244	2	Rotator-Valve				
14	120-4307	4	Keeper-Valve				
15	120-4306	2	Retainer-Spring, Valve				

● Not illustrated

 
Engine Decal Assembly

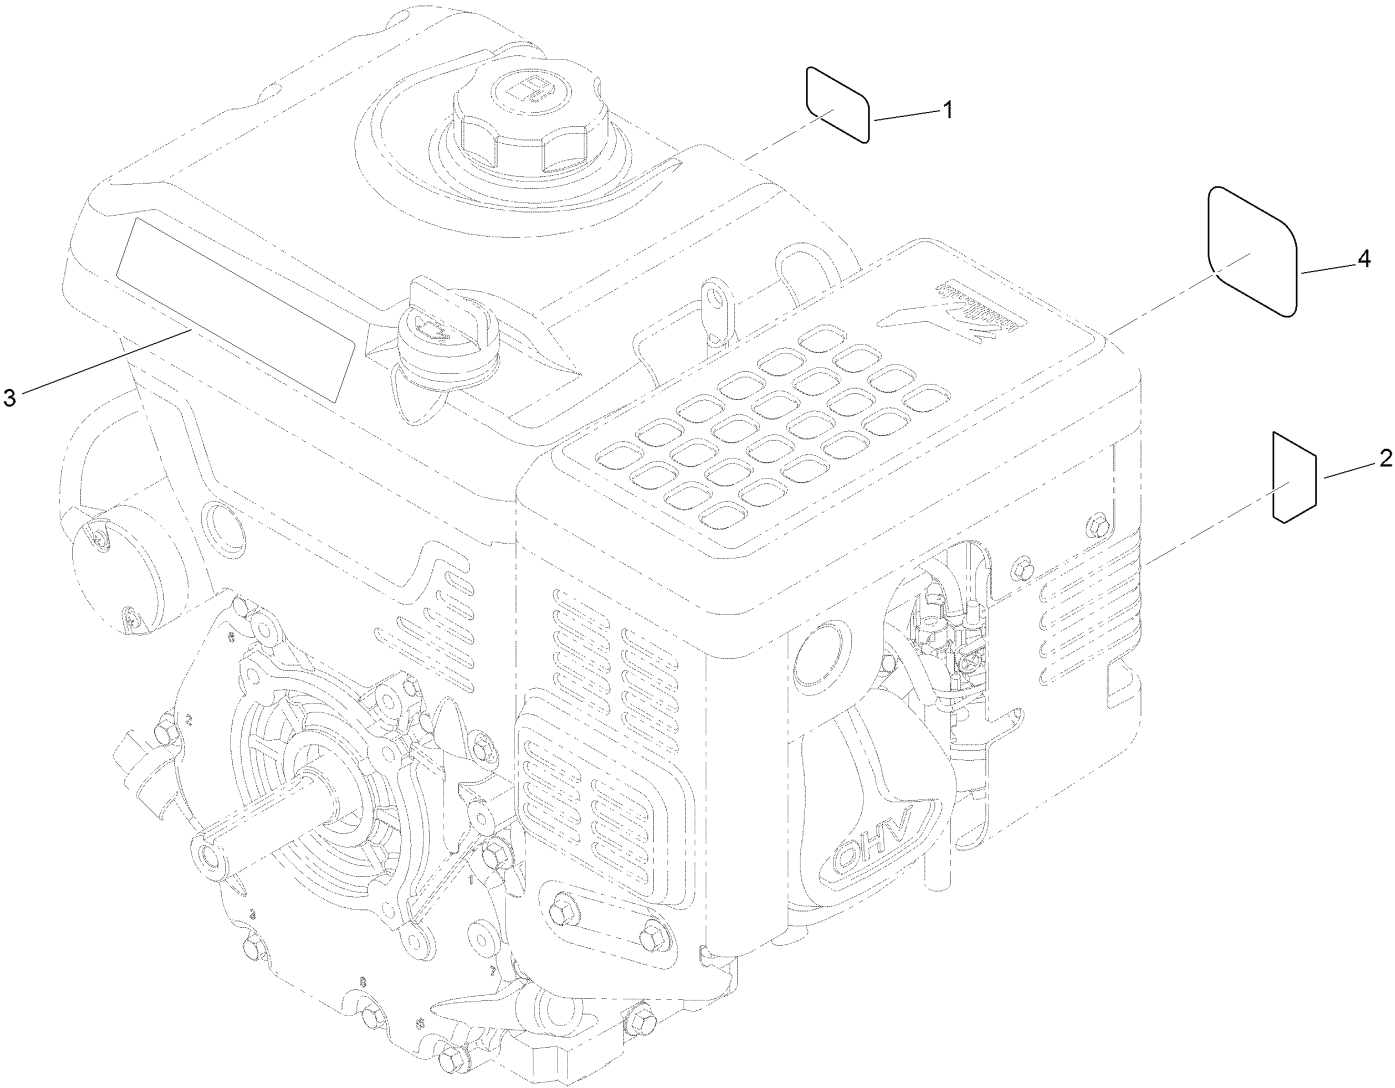

Engine Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-1102	1	Decal-Throttle	3	120-9808	1	Decal-Engine
2	120-9805	1	Decal-Control, Engine	4	120-9811	1	Decal-Recoil

 
Chute Assembly

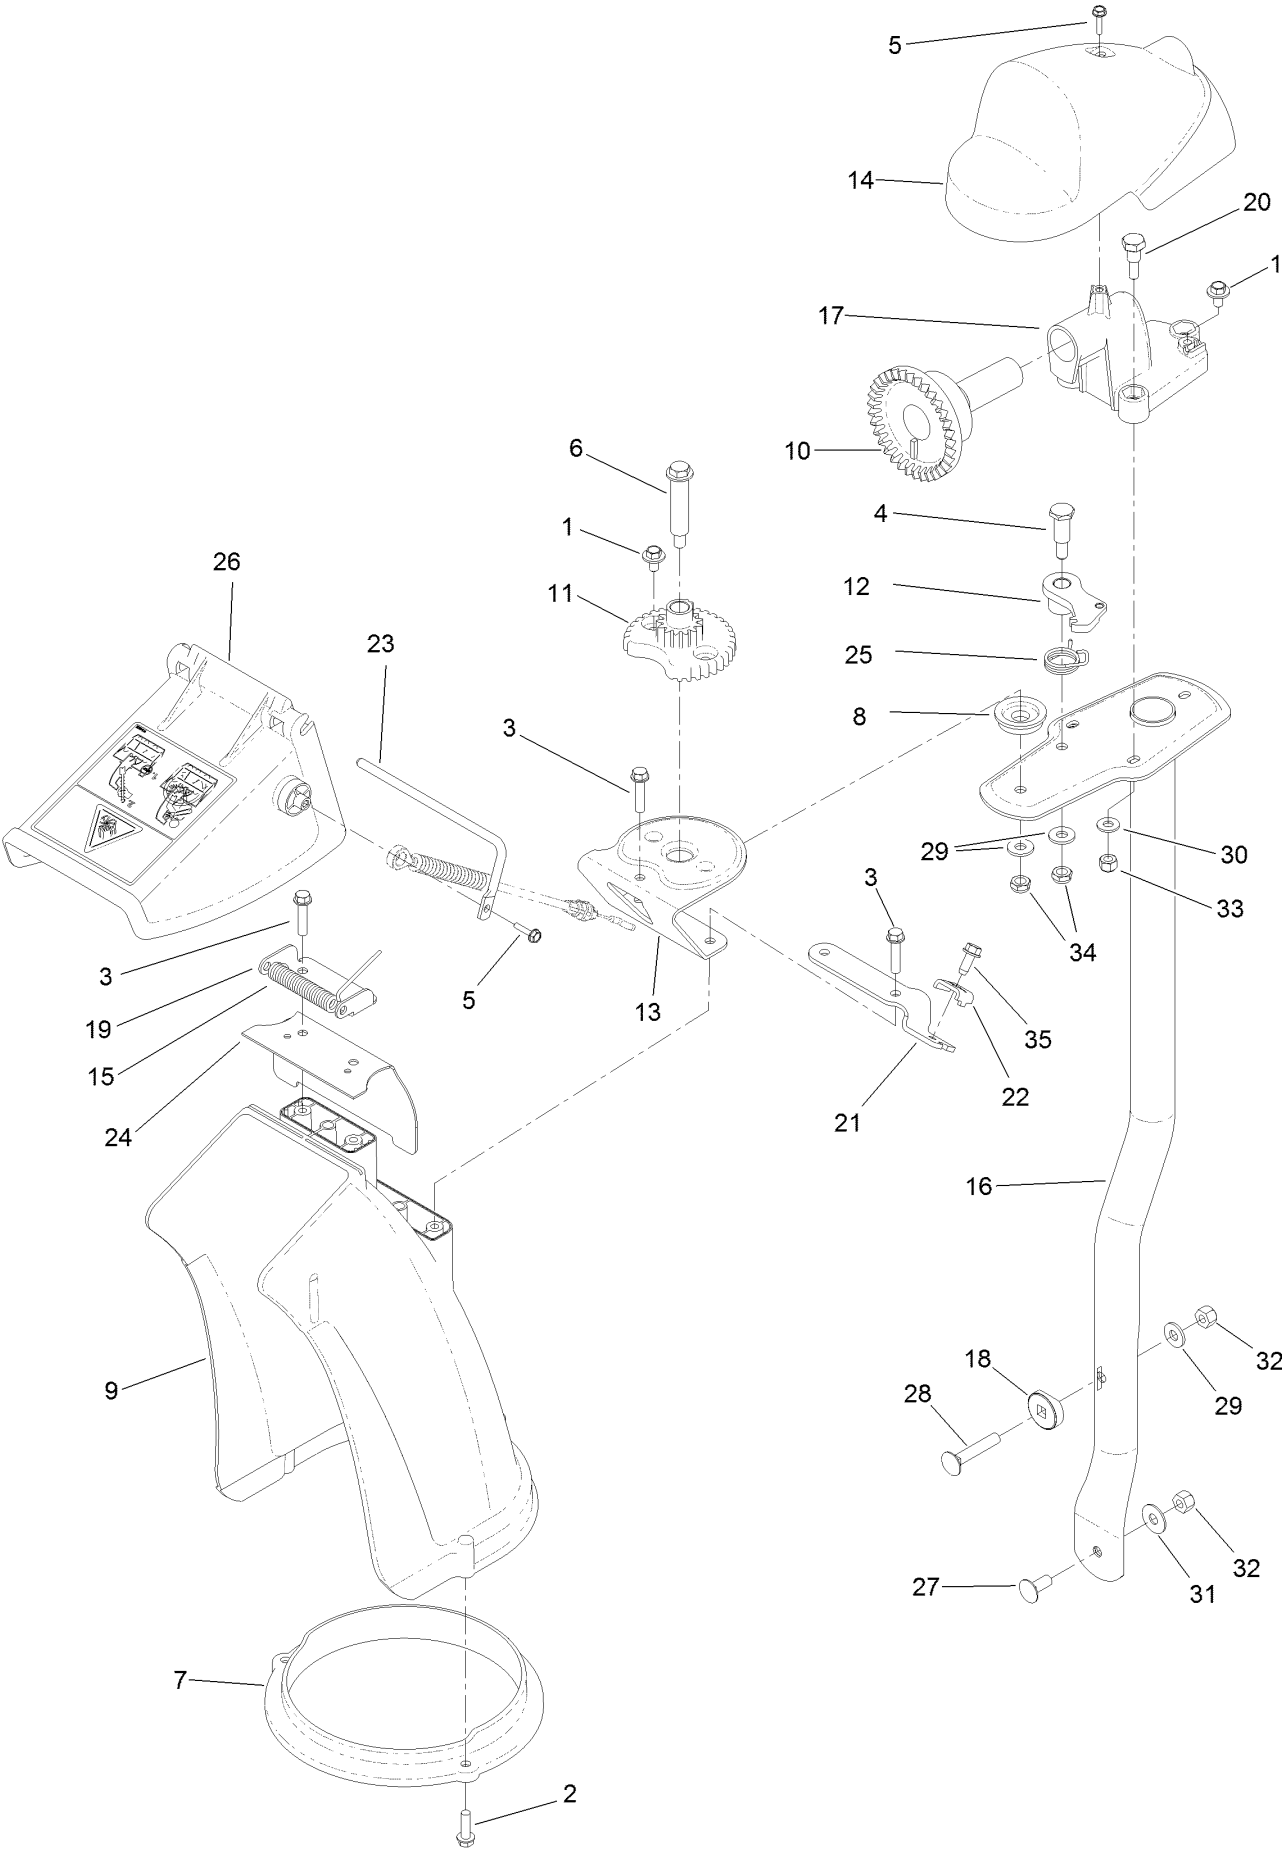

Chute Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	46-6810	3	Screw And Washer ASM	19	136-7105	1	Bracket-Deflector
2	137-3099	3	Screw-Plastite, HWH	20	136-7197	3	Screw-Shoulder
3	137-3100	5	Screw-Plastite, HWH	21	136-7107	1	Bracket-Clamp, Cable
4	137-3103	1	Screw-Shoulder, HH	22	136-7191	1	Clamp-Cable
5	137-3110	2	Screw-Plastite, HWH	23	136-7111	1	Rod-Deflector
6	136-7199	1	Bolt-Shoulder	24	108-5052	1	Seal-Chute
7	105-9991	1	Ring-Chute	25	108-7315	1	Spring-Torsion
8	106-4422	1	Spacer-Chute	26	112-6629	1	Deflector-Chute, CE
9	106-4440	1	Chute-Discharge	27	137-3061	1	Bolt-CARR
10	106-4471	1	Gear-Face	28	137-3063	1	Bolt-Car
11	106-4472	1	Gear-Chute	29	120-9646	3	Washer-Flat
12	106-4476	1	Latch-Chute	30	120-9679	3	Washer-Flat
13	106-4582-03	1	Bracket-Support, Chute	31	3290-456	1	Washer-Belleville
14	106-4585	1	Cover-Gear, Chute	32	119-4038	2	Nut-Hex
15	136-7104	1	Spring-Torsion	33	137-3088	3	Nut-Hex
16	106-7253-03	1	Tube-Support	34	137-3089	2	Nut-Hex
17	106-7257	1	Mount-Gear, Face	35	137-3043	1	Screw-HWH
18	106-7260	1	Washer-Curved				

 
Lever Chute Control Assembly

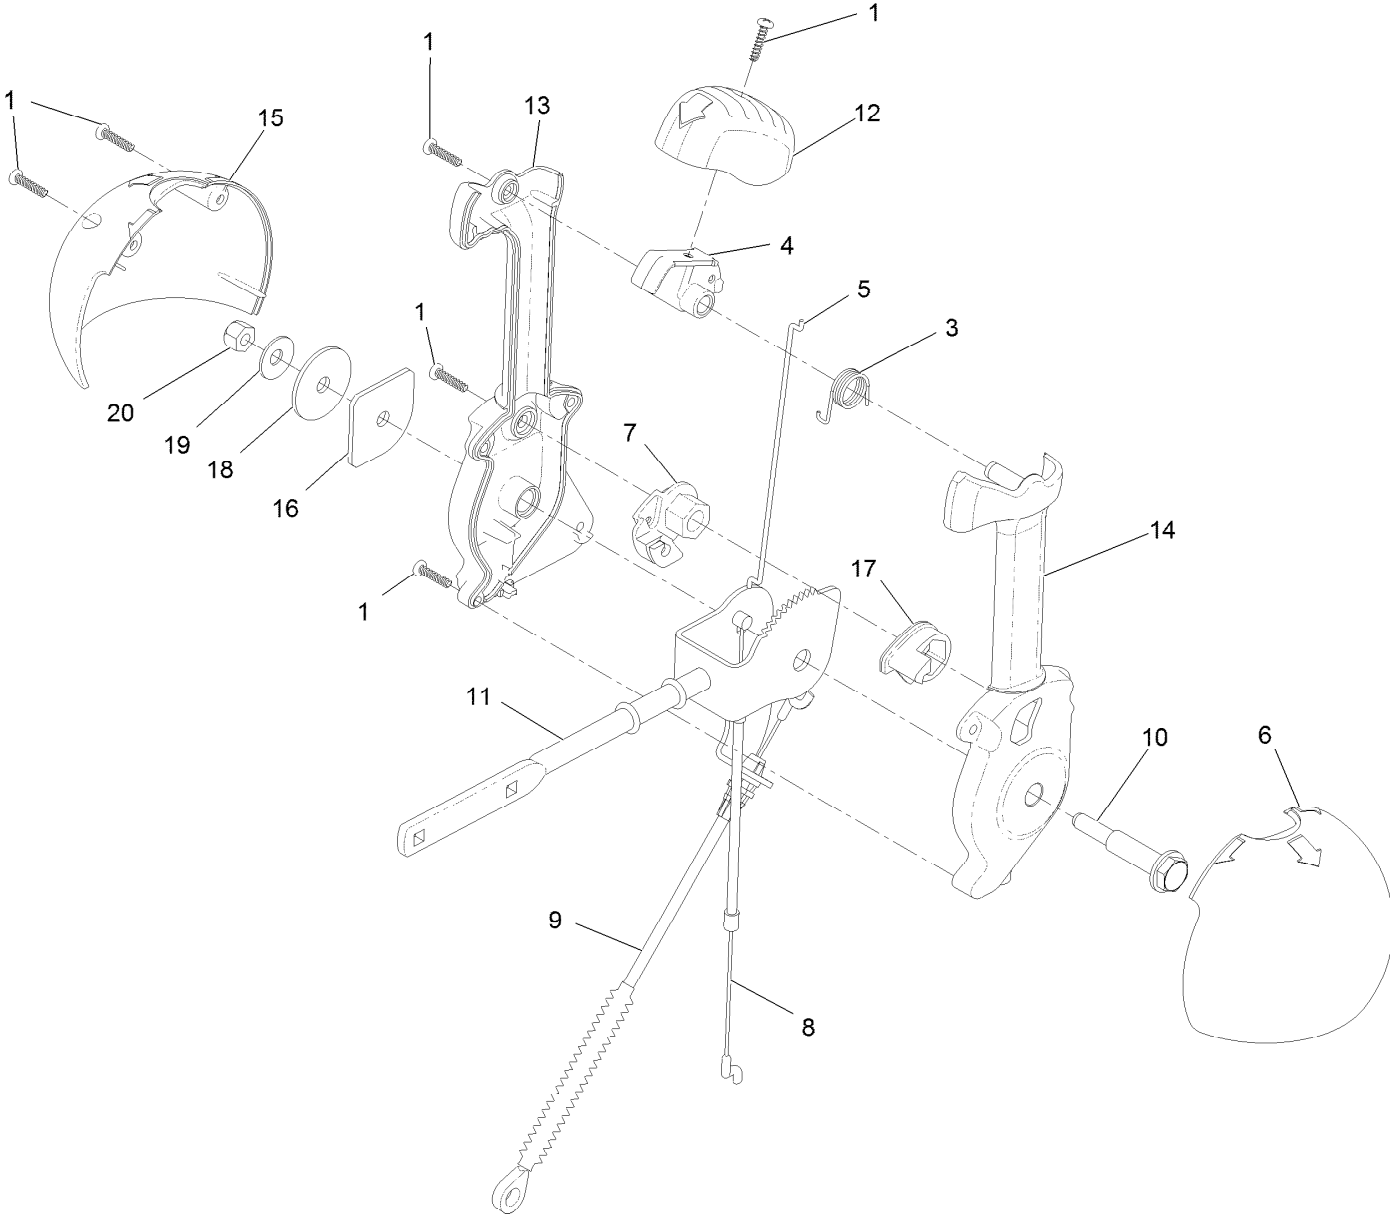

Lever Chute Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	94-4496	6	Screw-PPH	12	106-7280	1	Cap-Lever
3	105-9982	1	Spring-Torsion	13	106-7281	1	Lever-Control, Chute (RH)
4	105-9984	1	Trigger-Latch	14	106-7282	1	Lever-Control, Chute (LH)
5	136-7127	1	Link-Latch	15	106-7292	1	Cover-Lever, Chute (RH)
6	105-9986	1	Cover-Lever, Chute (LH)	16	136-7129	1	Plate-Friction
7	105-9988	1	Lever-Cable, Deflector	17	106-7310	1	Pawl-Latch
8	125-1113	1	Cable-Release, Chute	18	107-3002	1	Washer-Nylon
9	105-9990	1	Cable-Control, Deflector	19	3290-456	1	Washer-Belleville
10	136-7190	1	Screw-Shoulder	20	119-4038	1	Nut-Hex
11	136-7128	1	Chute Control Rod				

 
Handle Assembly

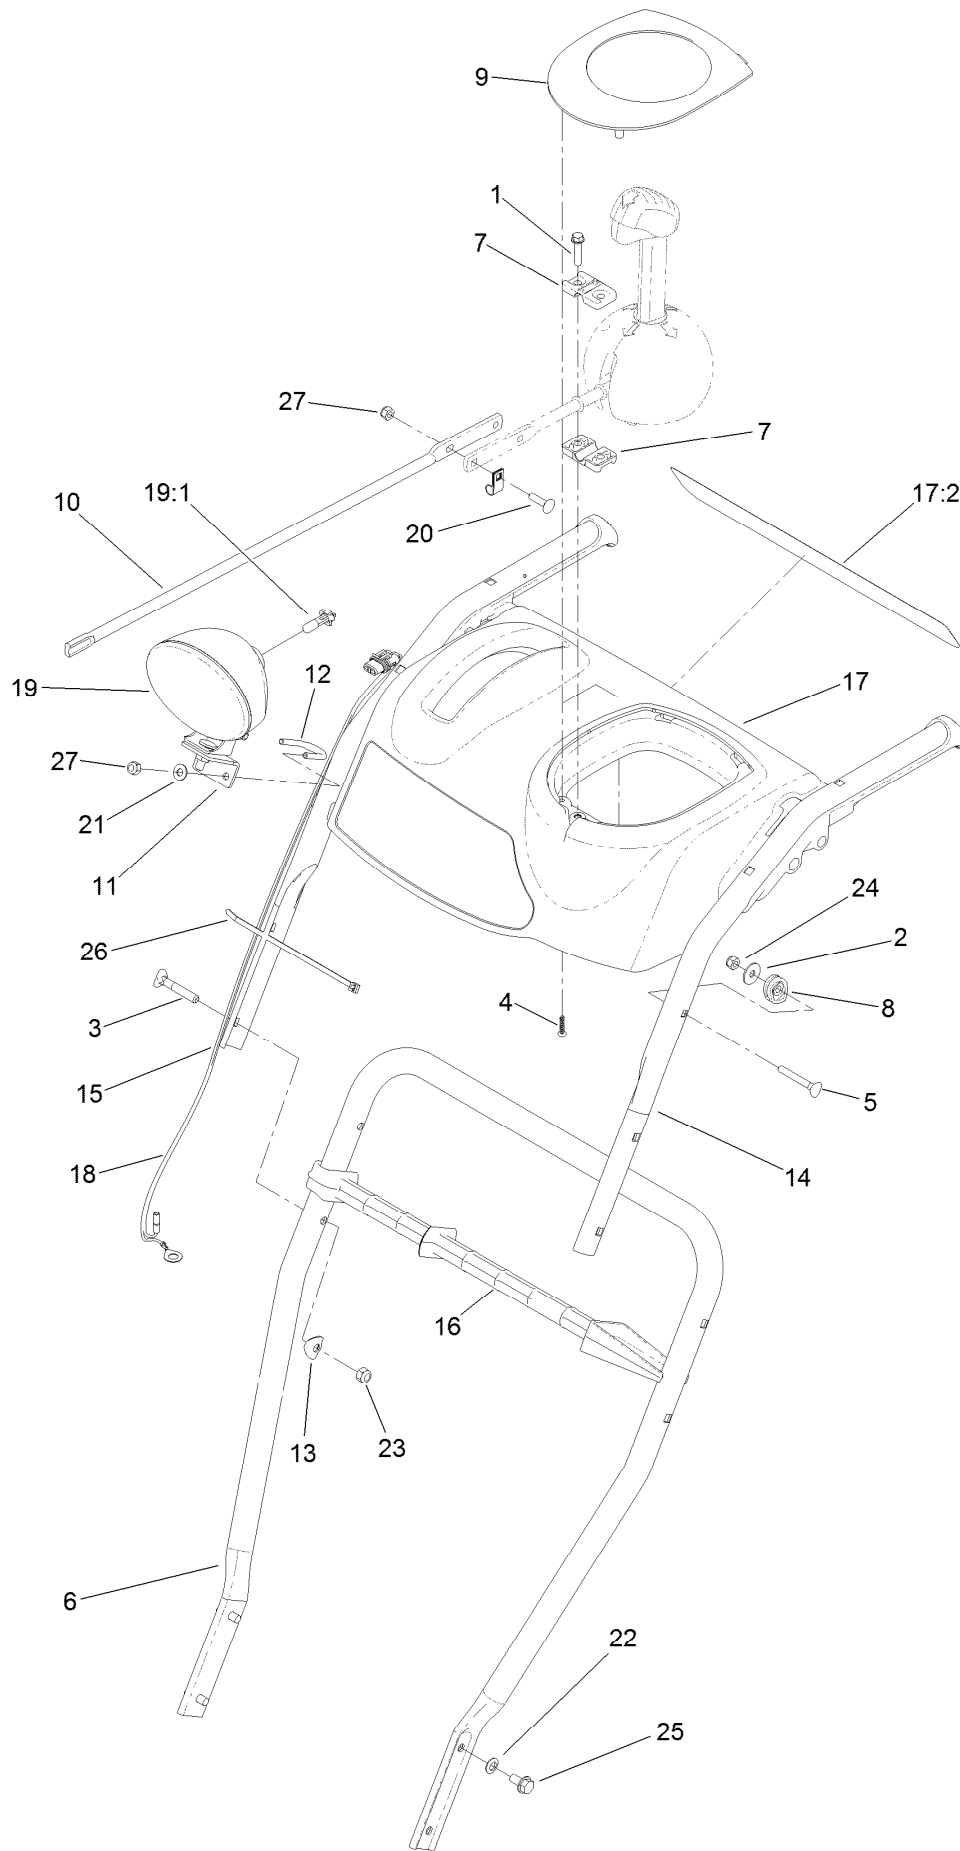

Handle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-3100	2	Screw-Plastite, HWH	16	110-3408	1	Stick-Cleanout
2	137-3106	2	Washer-Plain	17	112-6633	1	Panel-Control
3	137-3107	4	Screw-Handle	17:2	112-6627	1	Decal-Warning
4	94-4496	2	Screw-PPH	18	120-3062	1	Harness-Wire, Headlight
5	137-3109	2	Bolt-CARR	19	120-3074	1	Headlamp ASM
6	105-9981-03	1	Handle-Lower	19:1	120-3075	1	Lamp-12 Volt
7	105-9987	2	Support-Rod	20	137-3056	2	Bolt-CARR
8	106-4509	2	Clamp-Cable	21	137-3072	2	Washer-Plain
9	106-4586	1	Cover-Panel, Control	22	3290-475	4	Washer-Belleville
10	106-7283	1	Rod-Chute, Front	23	137-3093	4	Nut-Hex
11	107-1020-03	1	Bracket-Light	24	137-3094	2	Nut-Hex
12	136-7120	1	Clamp-Light	25	32144-14	4	Screw-HWHTF
13	137-3009	4	Washer-Cup	26	614249	2	Tie-Cable
14	127-5952-03	1	Handle-Upper, LH	27	137-3094	4	Nut-Hex
15	127-5953-03	1	Handle-Upper, RH				

 
Control Assembly

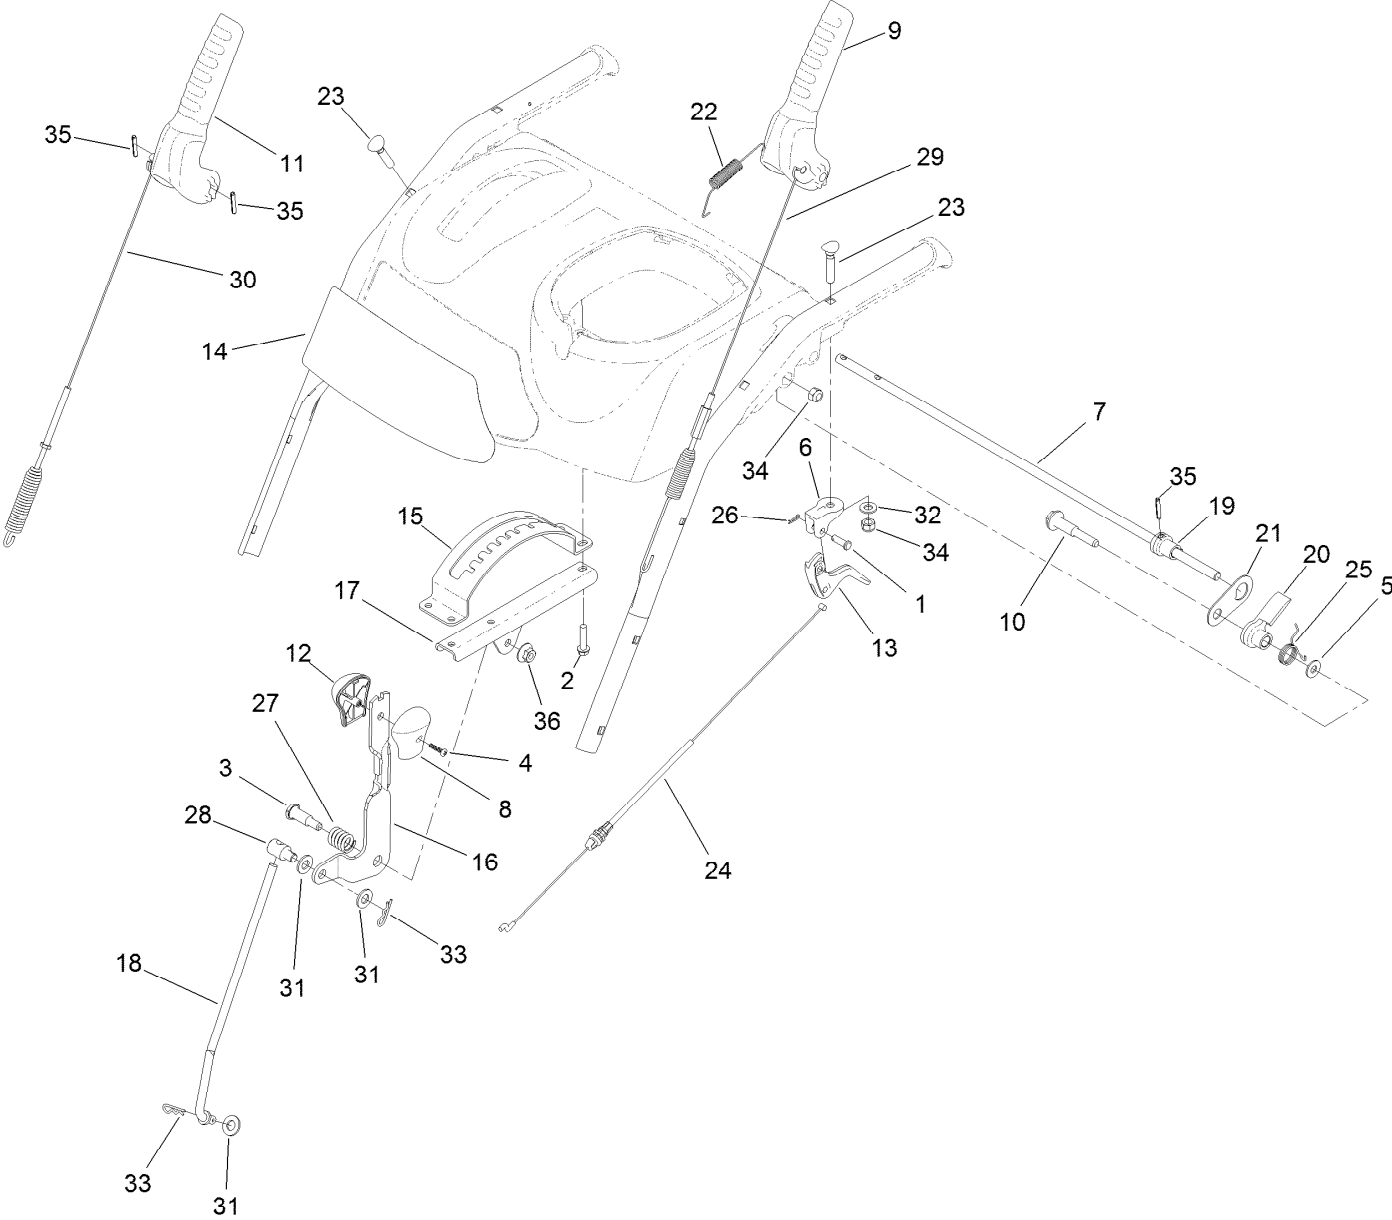

Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-808265	2	Pin-Clevis	19	107-1043	1	Cam-Lockout
2	137-3100	4	Screw-Plastite, HWH	20	108-0023	1	Latch-Lockout
3	137-3103	1	Screw-Shoulder, HH	21	136-7314	1	Link-Lockout
4	94-4496	1	Screw-PPH	22	136-7315	1	Spring-Tension
5	98-3499	1	Washer-Flat	23	137-3008	4	Screw-Handle
6	105-9980	2	Mount-Lever, Clutch	24	107-8896	2	Cable-Clutch
7	136-7100	1	Rod-Lockout	25	108-0024	1	Spring-Torsion
8	105-9999	1	Knob-Shift, LH	26	108-2992	2	Pin-Hair
9	106-4410	1	Lever-Traction	27	136-7121	1	Spring-Compression
10	136-7196	1	Screw-Shoulder	28	136-7193	1	Trunnion-Rod
11	106-4413	1	Lever-Augur	29	120-0132	1	Cable-Traction
12	106-4423	1	Knob-Shift, RH	30	120-3086	1	Cable-Augur
13	106-4505	2	Lever-Clutch	31	115-1166	3	Washer-Flat
14	121-6644	1	Decal-Control Panel	32	137-3081	4	Washer-Plain
15	106-7277-03	1	Guide-Selector, Speed	33	137-3083	2	Pin-Hair
16	106-7278-03	1	Selector-Speed	34	137-3093	5	Nut-Hex
17	130-9775-03	1	Bracket-Selector, Speed	35	137-3035	3	Pin-Spring
18	136-7109	1	Rod-Shift	36	137-3038	1	Nut-HF

 Wheel Clutch Assembly

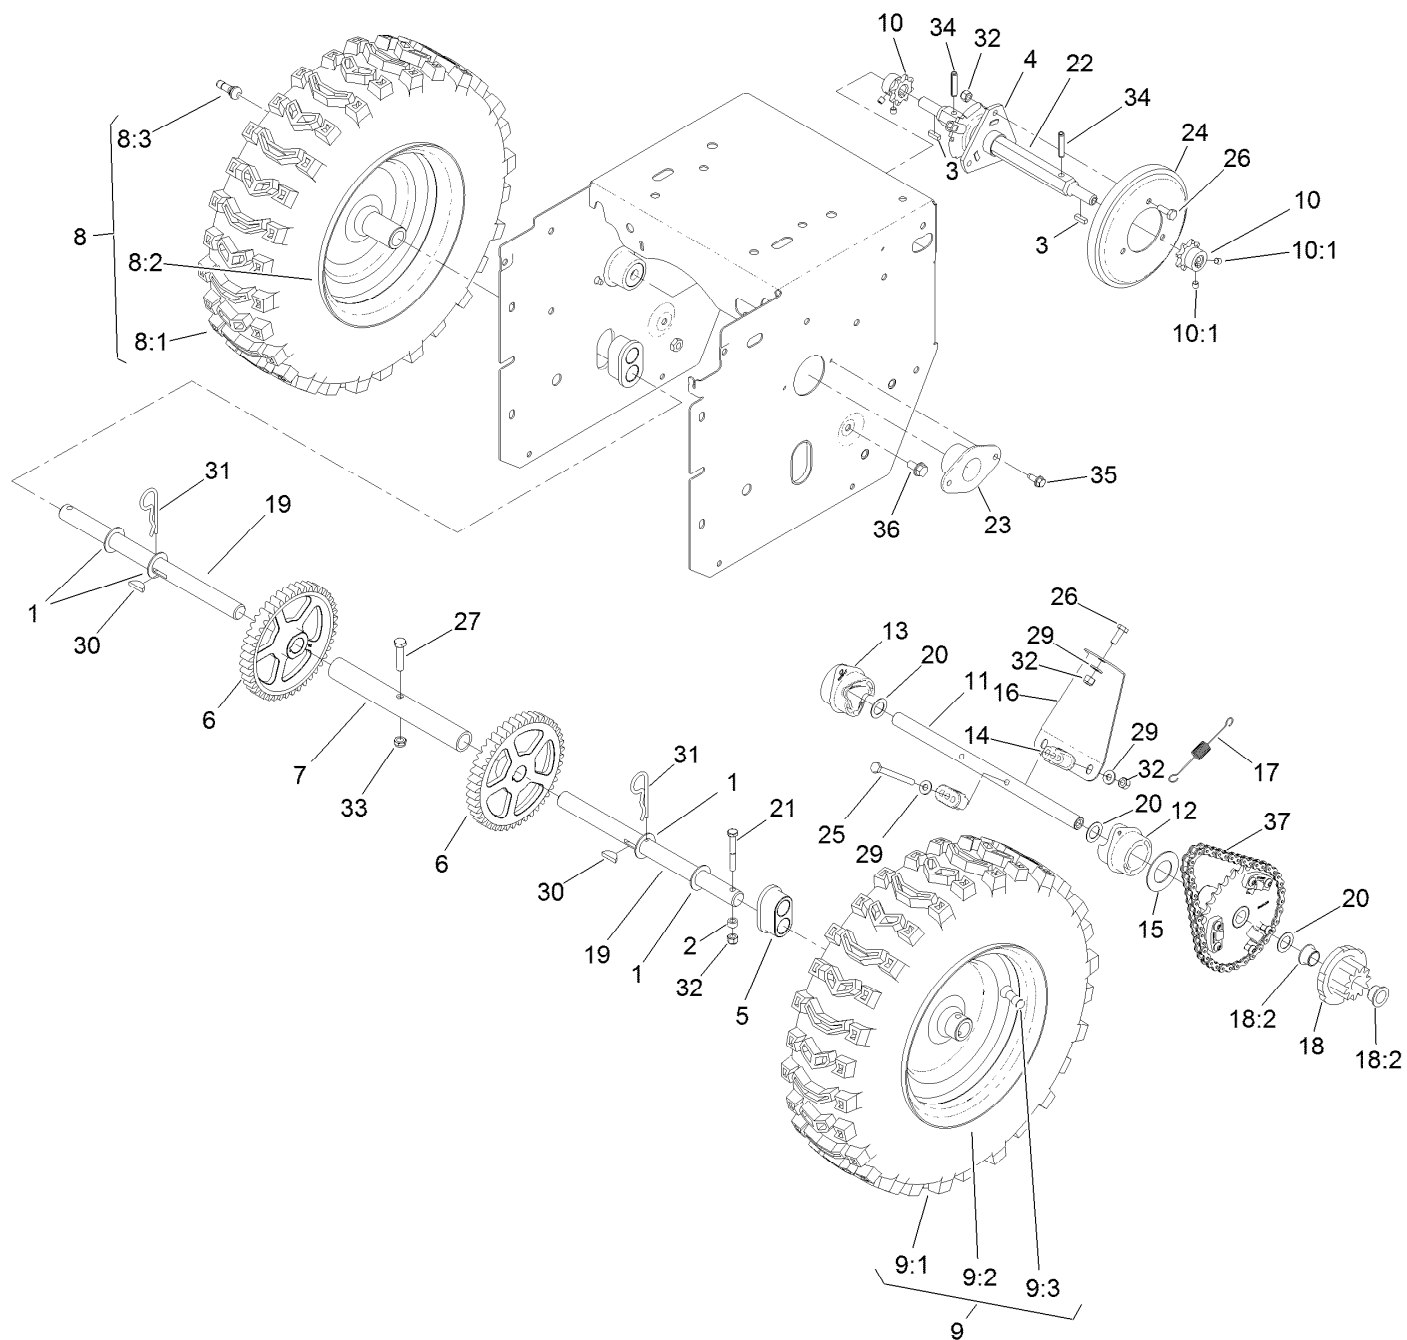


Wheel Clutch Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3-8664	4	Washer-Thrust	17	107-8893	2	Spring-Extension
2	55-9370	2	Spacer-Blade, Rotor	18	107-8894	2	11T Gear ASM
3	94-8850	2	Key-Square	18:2	108-2973	2	Bushing-Flange
4	106-4434	1	Trunnion-Hex	19	107-8898	2	Shaft-Axle
5	106-4558	2	Bearing-Axle	20	108-0015	4	Washer-Flat
6	106-4572	2	Gear-Axle, 44 Tooth	21	108-2975	2	Screw-HH
7	106-7259	1	Tube-Axle	22	108-7314	1	Shaft-Hex
8		1	RH Wheel And Tire ASM ●	23	108-7319	2	Retainer-Bearing
8:1	121-6610	1	Rim-Tire	24	119-1567	1	Wheel-Friction
8:2	121-6611	1	Tire	25	120-2778	2	Screw-HH
8:3	232-27	1	Stem-Valve	26	137-3042	4	Screw-HH
9		1	LH Wheel And Tire ASM ●	27	137-3051	1	Screw-HH
9:1	121-6610	1	Rim-Tire	29	120-9679	5	Washer-Flat
9:2	121-6611	1	Tire	30	3257-7	2	Key-Woodruff
9:3	232-27	1	Stem-Valve	31	3290-343	2	Pin-Hair
10	106-7317	2	Sprocket-8 Tooth	32	137-3088	8	Nut-Hex
10:1	3245-32	2	Screw-HSH	33	137-3089	1	Nut-Hex
11	107-8883	1	Shaft-Intermediate	34	32121-9	2	Pin-Roll, Slotted
12	107-8887	1	Collar-Shift, LH	35	137-3043	4	Screw-HWH
13	107-8888	1	Collar-Shift, RH	36	32144-14	2	Screw-HWHTF
14	107-8889	4	Guide-Collar	37	108-0016	2	Chain-Roller
15	107-8891	2	Washer-Thrust	37	2710-6	2	Link-Connecting
16	107-8892-03	1	Brace-Collar, Shift				

● Not serviced separately

 Wheel Clutch Sprocket Assembly

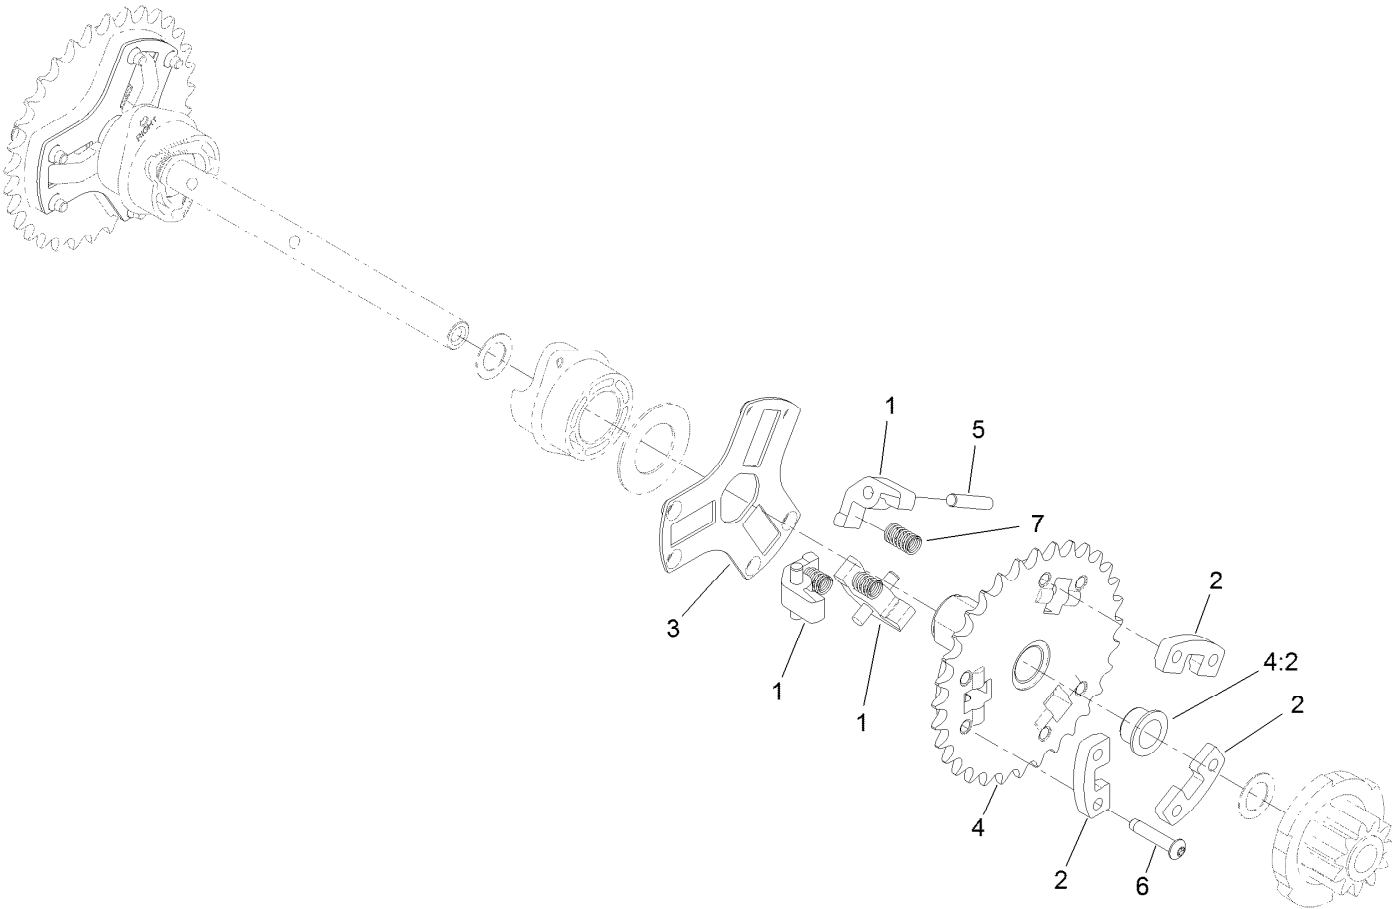

Wheel Clutch Sprocket Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	107-8879	6	Pawl-Clutch	4:2	108-2973	2	Bushing-Flange
2	107-8880	6	Support-Pawl	5	107-8899	6	Pin-Dowel
3	136-7318	2	Retainer-Pawl, Pin	6	137-3010	12	Screw-BHCS
4	107-8895	2	32T Sprocket ASM	7	107-8885	6	Spring-Compression

Attachments and Accessories

For 38834 Power Max Heavy Duty 1028 OXE Snowthrower

Product Name	Model/Part
Weight Kit	107-3815
28in Drift Breaker.....	107-3817
Heavy-Duty Skid Kit.....	125-1104
Snow Cab Kit	127-5960
Non-Marking Skid Kit.....	38211
Tire Chain Kit, 16in Tires.....	38215
Toro Snow Oil 0W30 Synthetic 20-Ounce Bottle	38913
Toro 2-Stage Cover.....	490-7466
Plain 2-Stage Cover.....	490-7467

Notes:



Count on it.