

LAWN-BOY®

Commercial Walk-Behind Mower

Model No. 11002 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Engine Assembly (cont.)	5
Engine & Blade Assembly	2	Short Block Assembly	6
Handle Assembly	3	Carburetor Assembly	7
Engine Assembly	4	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Mulching Plate	Model No. 89864
Leaf Bag	Model No. 89804	Leaf Bag w/Chute	Model No. 89811
Rear Bagging Kit	Model No. 89800		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

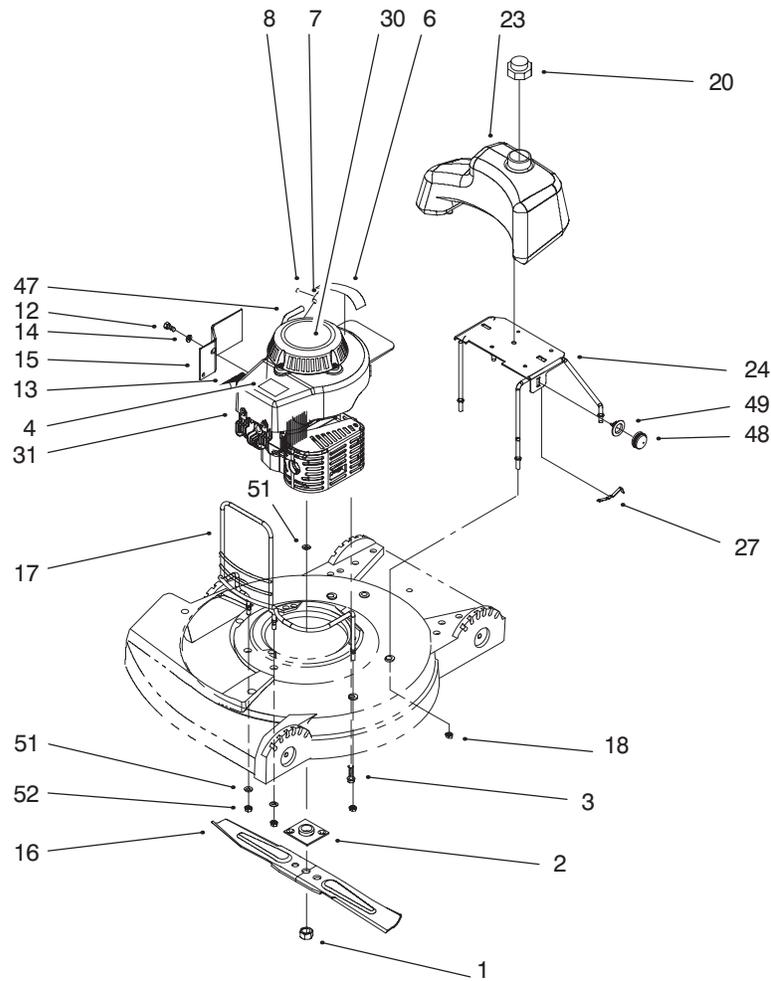

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	603164	1	Nut-Blade
2	677525	1	ASM-Plate & Collar
3	98-4480	3	Screw
4	99-1517	1	Decal-Lawn Boy
6	99-1520	1	Decal-Fuel Mix
7	47-2480	1	Rope Stop
8	3290-443	1	Staple
12	322-3	2	Screw-HH
13	93-4306	1	Spring-Compression
14	3253-4	2	Washer-Lock
15	99-1515-03	1	Guard-Brake
16	612543	1	Blade-21"
17	98-1598	1	Guard-Engine
18	608311	5	Locknut
20	98-8344	1	Fuel/Oil Cap ASM
21	314576	1	Screw-Throttle Cable
22	306531	1	Nut-Throttle Cable
23	98-4497	1	Tank-Fuel
24	98-4458-03	1	Tank Bracket ASM
27	609830	2	Spring
30	92-9551	1	Decal - Recoil
31		1	Engine
47	612782	1	Gas Line
48	66-7460	1	Bulb-Primer
49	44-2750	1	Body-Primer

Ref. No.	Part No.	Qty.	Description
51	68-5920	5	Washer-Flat
52	3296-39	2	Locknut

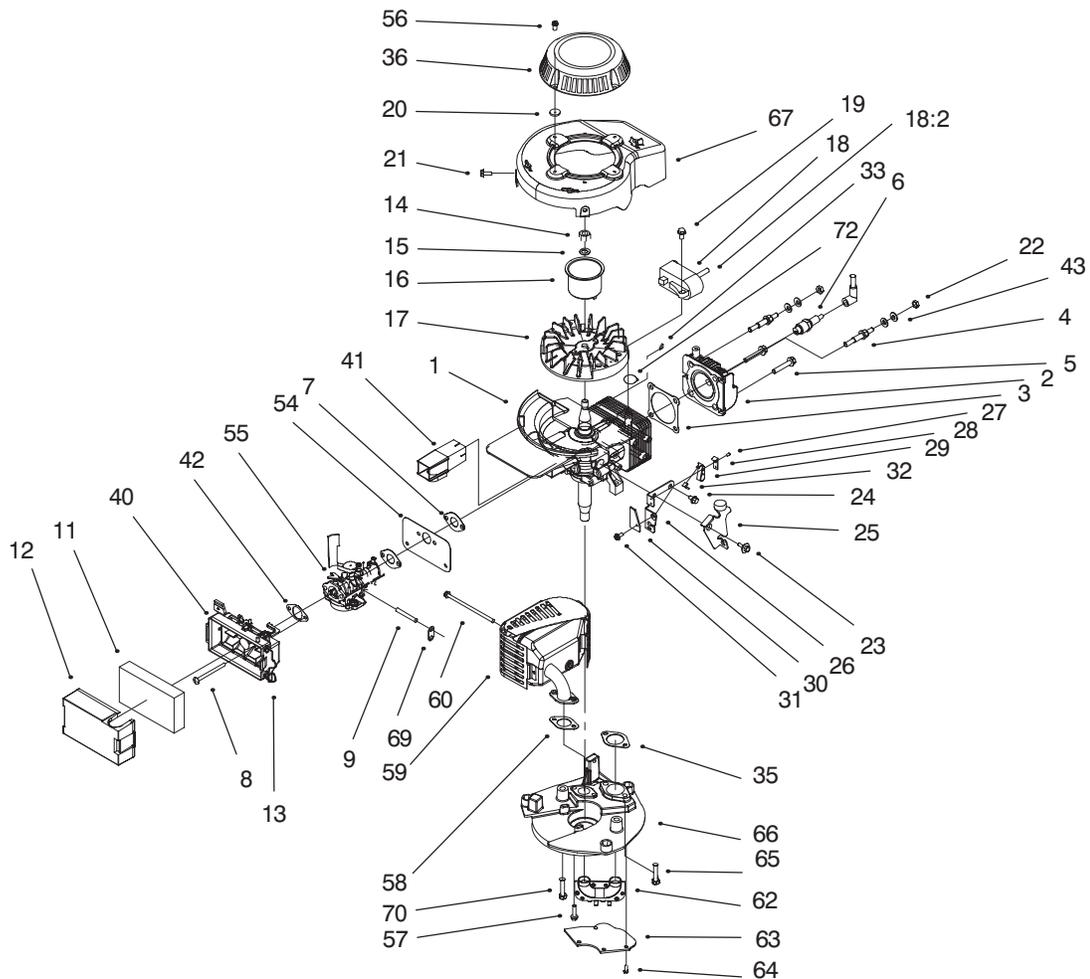

Sheet No.:A3

Engine Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-7636	1	Block	26	84-7820	1	Plate-Brake
2	94-5776	1	Head	27	3290-459	2	Rivet-Plastic
3	94-5778	1	Gasket-Head	28	92-2925	1	Strap-Insulation
4	94-5779	2	Stud	29	60-9010	1	Strap-Ground
5	94-5780	2	Bolt - Head	30	53-4690	1	Stop-Strap
6	50-1170	1	Plug-Spark	31	12-5450	1	Screw-Special
7	94-5795	2	Gasket-Intake	32	98-7037	1	Wire -Lead
8	612507	2	Screw	33	607199	1	Key
9	44-3170	1	Primer Hose	35	95-1778	1	Gasket-Exhaust
11	95-5574	1	Filter-Air	36	684566	1	Starter ASM
12	95-5577	1	Cover-Air Filter	40	95-5588	1	Base ASM
13	610383	1	Retainer	41	95-5578	1	Tunnel
14	130743	1	Nut	42	95-7613	1	Gasket-Filter
15	316959	1	Washer-Lock	43	3290-456	4	Washer-Belleville
16	612949	1	Hub Starter	54	98-1388	1	Shield - Carb.
17	95-1866	1	Flywheel	55	98-7042	1	Carburetor ASM With Gaskets
18	92-1152	1	Ignition	56	98-4484	4	Screw Sems
18:2	681678	1	Lead&cover	57	613208	2	Screw
18:2	684698	1	Cover & Term. ASM	58	98-1392	1	Gasket
19	613208	2	Screw	59	99-2904	1	Muffler And Guard ASM
20	98-4478	4	Spacer	59:4	98-1394	2	Screw-HWH
21	700094	2	Screw-HH	59:5	3254-1	2	Washer-Lock/Int
22	146501	2	Nut	60	611228	1	Bolt-Console
23	95-1870	1	Screw-Shoulder	62	98-1557	1	Pipe-Transfer
24	95-1871	1	Screw-HWH				
25	93-4312	1	Brake Plate ASM				

LAWN-BOY®