

48" Snow Blade Lawn & Garden Tractor Model No. 79253–210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form \mathbf{nX} \mathbf{y} . The \mathbf{n} represents the quantity of the part, the \mathbf{X} is the multiplication symbol, and the \mathbf{y} represents the reference number.


For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

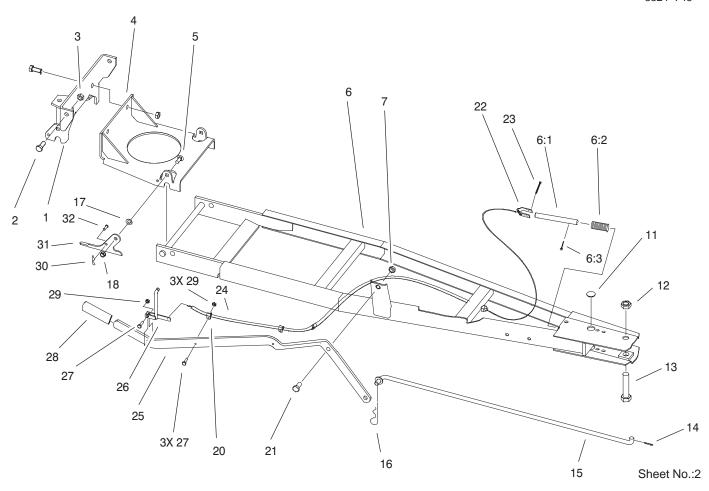

Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	93–1389–03	1	Bracket-Mounting
2	325-5	5	Screw-HH
3	3296–23	5	Nut-Lock, NI
4	100-8707-03	1	Bracket-Blade Mount
5	3231–25	2	Screw-CARR
6	104-1290-01	1	Blade Frame ASM
6:1	88-6520	1	Pin-Index
6:2	2354	1	Spring-Compression
6:3	3272-11	1	Pin–Cotter
7	3218–18	1	Nut-Jam
11	4944	2	Plug
12	9156404	1	Nut-Lock
13	3216–7	1	Screw-HH
14	3272-11	1	Pin-Cotter
15	79–4790	1	Rod
16	9335124	1	Pin-Hair
17	3256-24	2	Washer–Flat
18	3296–39	2	Nut-Lock, NI
20	2412–32	3	R-Clamp-Throttle/C
			oke
21	325–4	1	Screw-HH
22		1	Bracket – Cable End
	3272–12	1	Pin-Cotter
	104–1289	1	Cable-Tension
	104–5073–01	1	Lever-Blade
26	92–7036	1	Lever-Index

Ref. No.	Part No.	Qty.	Description
	321–6	4	Screw–HH
	5359	1	Grip
	32146–17	4	Nut–Lock
	9335044	2	Pin–Hair
	104657	2	Plate–Latching
	9321204	2	Pin–Clevis

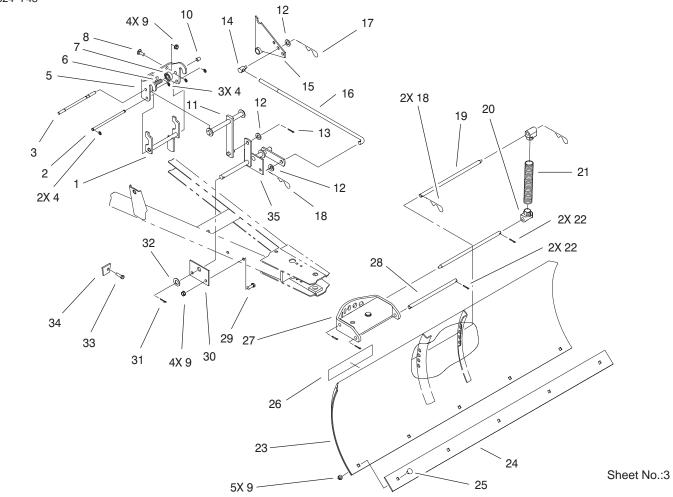

Blade Assembly

-				
	Ref. No.	Part No.	Qty.	Description
	1	93–1613	1	Latch
	2	101750	1	Rod-Latch Pivot
	3	101751	1	Rod-Lock
	4	105797	5	Ring-Retaining
	5	78–1720–01	1	Hitch-Front
	6	8616	1	Spring
	7	101707	1	Lock
	8	3231–22	4	Screw-CARR
	9	3296–39	13	Nut-Lock, NI
	10	105316	1	Cap-Plunger Rod
	11	79–5430–01	1	Arm
	12	3256–26	3	Washer–Flat
	13	3272–7	1	Pin-Cotter
	14	7736	1	Stud-Trunion
	15	79–5510–01	1	Plate
	16	100–8706	1	Rod
	17	9335054	1	Pin-Hair
	18	9335124	3	Pin-Hair
	19	5120	2	Rod-Blade Pivot
	20	88–2080–03	4	Lug-Spring
	21	93–1611–03	2	Spring-Trip Return
	22	3272–11	4	Pin–Cotter
	23	78–1330–01	1	Blade ASM
	24	93–1612–01	1	Plate – Blade Edge
	25	3231–1	5	Screw-CARR
	26	92–8748	1	Decal-Attachment

Ref. No.	Part No.	Qty.	Description
27 28 29 30 31 32 33 34 35	4564 323–6 79–5490–01 3272–22 3256–27 9267204	1 1 4 1 1 2 2 1	Quadrant Rod-Lower Plated Screw-HH Plate Pin-Cotter Washer-Flat Screw Stop Arm-lift

