



Z Master[®]
with Mower and Bagger
Model No. 74189 – 200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Traction Frame Assembly	3	Blower Assembly	22
Tail, Wheel and Bumper Assembly	4	Air Cleaner and Bagger Frame Assembly	23
Engine and Fuel Assembly	5	Bagger Assembly	24
Hydraulic Oil Cooler Assembly	6	Electric Schematic	25
Hydraulic Assembly	7	Hydraulic Schematic	26
Electrical Assembly	8	Crankshaft (CH25S PS68656)	27
Electrical Assembly #2	9	Crankcase (CH25S PS68656)	28
Parking Brake Assembly	10	Oil Pan / Lubrication (CH25S PS68656)	29
Steering Control Assembly	11	Head/Valve/Breather (CH25S PS68656)	30
Seat Assembly	12	Ignition/Electrical (CH25S PS68656)	31
Exhaust Assembly	13	Blower Housing/Baffles (CH25S PS68656)	32
PTO and Hydro Drive Assembly	14	Starting System (CH25S PS68656)	33
Gearcase Assembly No. 100–5842	16	Fuel System (CH25S PS68656)	34
Carrier Frame Assembly	17	Fuel System – Continued (CH25S PS68656) ..	35
Deck Assembly	19	Engine Controls (CH25S PS68656)	36
Gearbox Assembly 100–2419	20	Air Intake / Filtration (CH25S PS68656)	37
Plenum Assembly	21	Exhaust (CH25S PS68656)	38

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

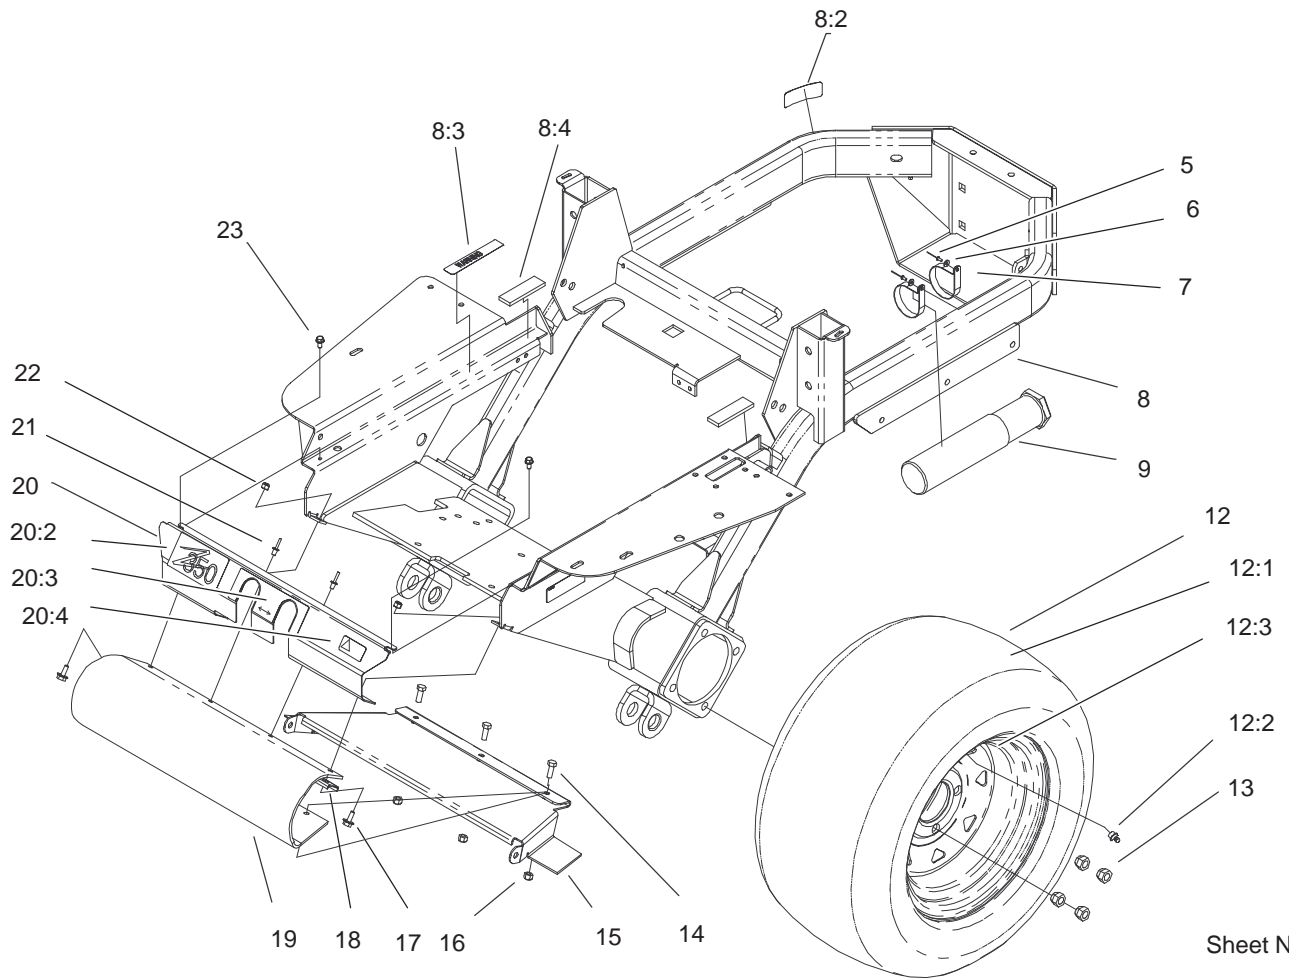


Sheet No.:2

Traction Frame Assembly

Ref. No.	Part No.	Qty.	Description
5	3269-8	2	Rivet
6	3256-21	2	Washer-Flat
7	2412-120	2	R-Clamp
8	94-9598	1	Frame ASM w/ Decals
8:2	93-9198	1	Decal - Hot Surface
8:3	98-4361	1	Decal - Warning
8:4	52-5260	2	Rubber Pad
9	74-0720	1	Tube-Manual
12	94-9381	2	Tire And Wheel ASM
12:1	94-9388	1	Tire
12:2	232-27	1	Stem-Valve
12:3	94-9385	1	Wheel
13	242-50	8	Nut-Lug
14	322-4	3	Screw-HH
15	100-9614-01	1	Cover - Driveshaft
16	3296-29	3	Nut-Lock, NI
17	3234-4	2	Screw-HHF
18	100-9620-03	1	Bracket - Guard
19	100-9619	1	Guard - Footrest
20	104-2401	1	Cover Plate ASM w/ Decals
20:2	100-7790	1	Decal - Z355
20:3	98-1313	1	Decal - Operation
20:4	98-4387	1	Decal-Protection, Ear
21	3290-412	2	Rivet

Ref. No.	Part No.	Qty.	Description
22	3296-42	2	Nut-Lock
23	32144-4	2	Screw-HH

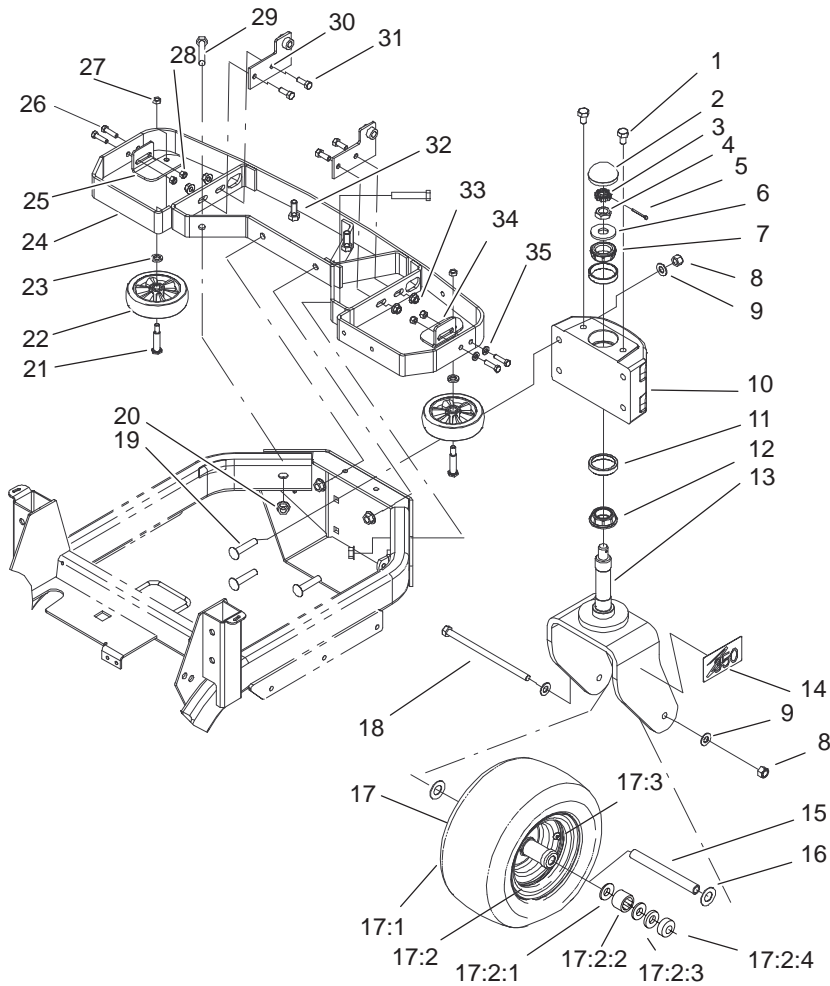


Sheet No.:3

Tail, Wheel and Bumper Assembly

Ref. No.	Part No.	Qty.	Description
1	325-2	2	Screw-HH
2	94-4665	1	Dustcap
3	93-0307	1	Nut Retainer-Lock
4	3220-7	1	Nut-Jam
5	3272-17	1	Pin-Cotter
6	3256-8	1	Washer-Flat
7	254-62	1	Roller Brg Cone
8	3296-23	5	Nut-Lock, NI
9	3256-26	6	Washer-Flat
10	94-9489-01	1	Housing - Spindle
11	254-61	2	Cup-Bearing
12	254-70	1	Cone-Bearing
13	94-4647-01	1	Caster Fork ASM
14	100-7790	1	Decal - Z355
15	94-4753	1	Tube - Spacer,Castor
16	3256-39	2	Washer-Flat
17	98-4352	1	Tire And Wheel ASM
17:1	94-9384	1	Tire
17:2	98-4351	1	Wheel ASM
17:2:1	99-0246	4	Washer-Stop
17:2:2	99-0247	2	Bearing-Roller
17:2:3	99-0248	2	Seal-Felt
17:2:4	99-0249	2	Cap-End
17:3	232-27	1	Stem-Valve
18	325-24	1	Screw-HH
19	3233-27	4	Screw-CARR

Ref. No.	Part No.	Qty.	Description
20	32128-23	4	Nut-HF
21	5188	2	Bolt-Shoulder
22	109375	2	Wheel ASM
23	9202424	2	Spacer
24	104-0358-03	1	Bumper ASM
25	100-7772-03	1	Bracket - Roller, RH
26	322-6	4	Screw-HH
27	32153-2	2	Nut-Lock
28	32128-20	4	Nut-HF
29	325-11	2	Screw-HH
30	100-9613-03	2	Pivot Plate ASM
31	323-6	4	Screw-HH
32	325-5	2	Screw-HH
33	32128-21	4	Nut-HF
34	100-7779-03	1	Bracket - Roller, LH
35	3256-23	2	Washer-Flat

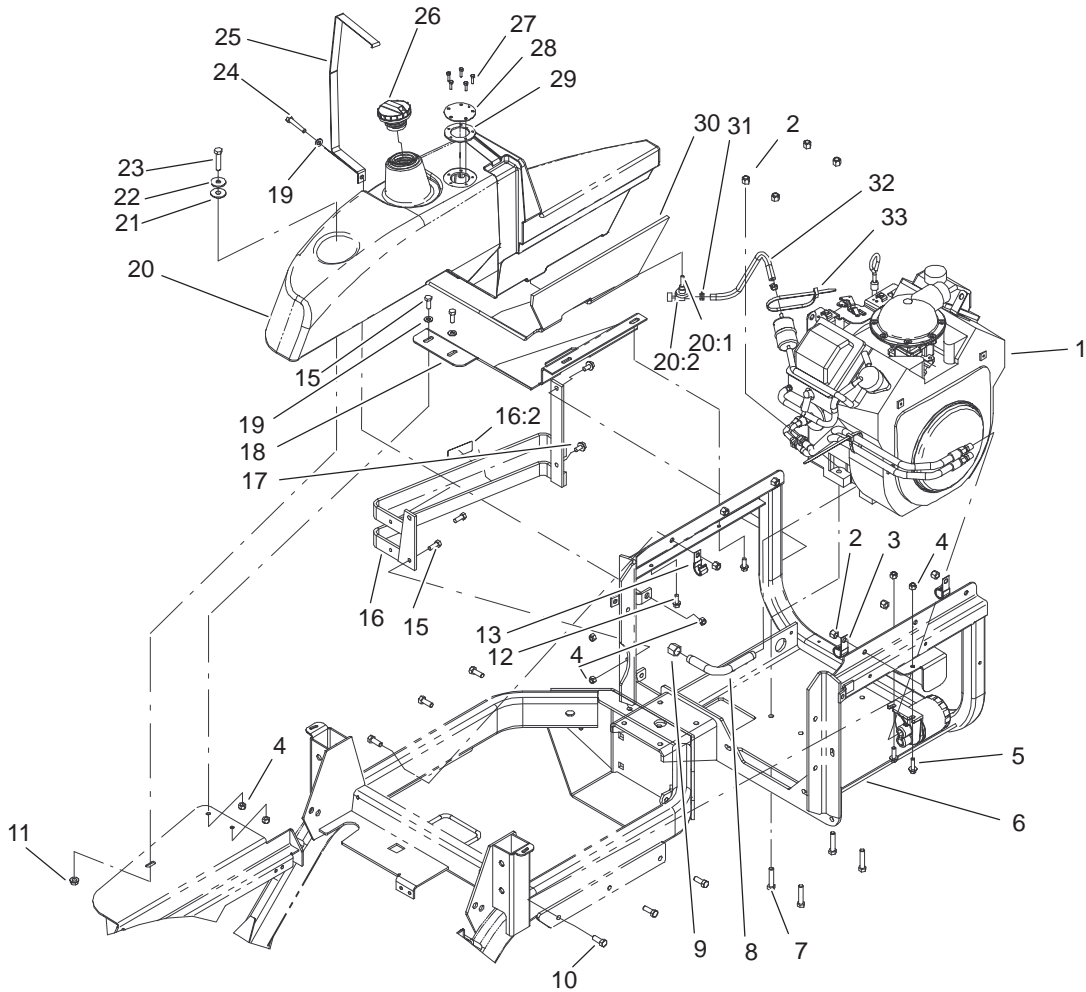


Sheet No.:4

Engine and Fuel Assembly

Ref. No.	Part No.	Qty.	Description
1		1	Engine-Kohler, Ch25s Ps-68656
2	3296-39	10	Nut-Lock, NI
3	94-9580	2	Clamp - J
4	3296-29	7	Nut-Lock, NI
5	3234-17	2	Screw-HHF
6	94-4618-03	1	Engine Support ASM
7	323-9	4	Screw-HH
8	94-9499	1	Tube - Oil Drain
9	288-4	1	Pipe Cap
10	323-6	6	Screw-HH
11	3290-357	1	Nut-Flange, Lock
12	32144-11	2	Screw-TAP
13	8830	1	Clip
15	322-4	4	Screw-HH
16	98-1995	1	Bumper ASM
16:1	93-9198	1	Decal-Hot Surface
17	32144-14	2	Screw-HWH
18	94-4798-01	1	Plate - Tank Support
19	3256-23	3	Washer-Flat
20	94-9553	1	Fuel Tank ASM
20:1	104047	1	Bushing
20:2	104048	1	Valve-Fuel
21	240-11	1	Grommet-Mount, Tank
22	63-8410	1	Washer

Ref. No.	Part No.	Qty.	Description
23	323-9	1	Screw-HH
24	322-10	1	Screw-HH
25	94-4799-03	1	Strap - Fuel Tank
26	93-3101	1	Cap-Fuel
27	3250-29	5	Screw-PPH
28	94-9597-03	1	Cover-Fuel Tank Opening
29	62-7650	1	Gasket
30	98-1319	1	Foam - Fuel Tank
31	2412-98	2	Clamp
32	98-0976	1	Hose - Gas
33	3290-378	2	Tie-Cable

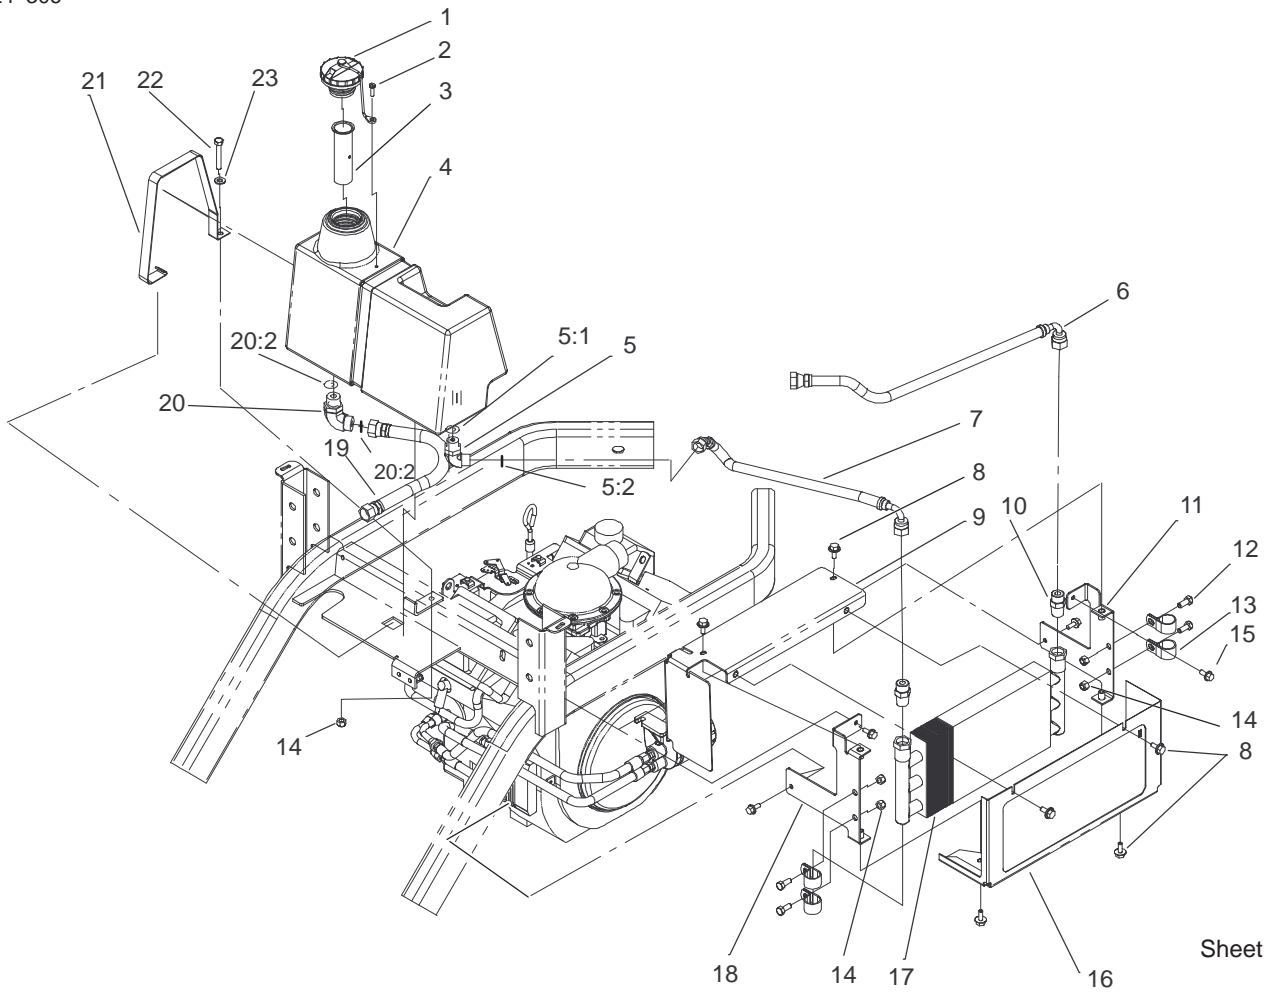


Sheet No.:5

Hydraulic Oil Cooler Assembly

Ref. No.	Part No.	Qty.	Description
1	93-4365	1	Cap-Oil
2	3290-126	1	Screw
3	92-1705	1	Filter-Screen
4	94-4700	1	Tank - Hydraulic
5	340-98	1	Fitting-Hyd, 90°
5:1	237-79	1	O-Ring
5:2	237-30	1	O-Ring
6	94-4709	1	Hydraulic Hose ASM
7	94-4713	1	Hydraulic Hose ASM
8	3234-4	6	Screw-HHF
9	98-1969-03	1	Cooler Shroud ASM
10	93-5107	2	Fitting - Adapter
11	98-1972-03	1	Rear Cooler Bracket ASM
12	322-3	4	Screw-HH
13	2412-39	4	Clamp-R
14	3296-29	5	Nut-Lock, NI
15	32144-10	2	Screw-HWH
16	94-9556-03	1	Cooler Shroud ASM
17	24-0760	1	Cooler ASM
18	98-1970-03	1	Front Cooler Bracket ASM
19	94-4710	1	Hydraulic Hose ASM
20	340-105	1	Fitting-Hyd., 90°
20:1	237-30	1	O-Ring
20:2	237-80	1	O-Ring


Ref. No.	Part No.	Qty.	Description
21	94-4642-03	1	Strap - Hydraulic Tank
22	322-10	1	Screw-HH
23	3256-23	1	Washer-Flat

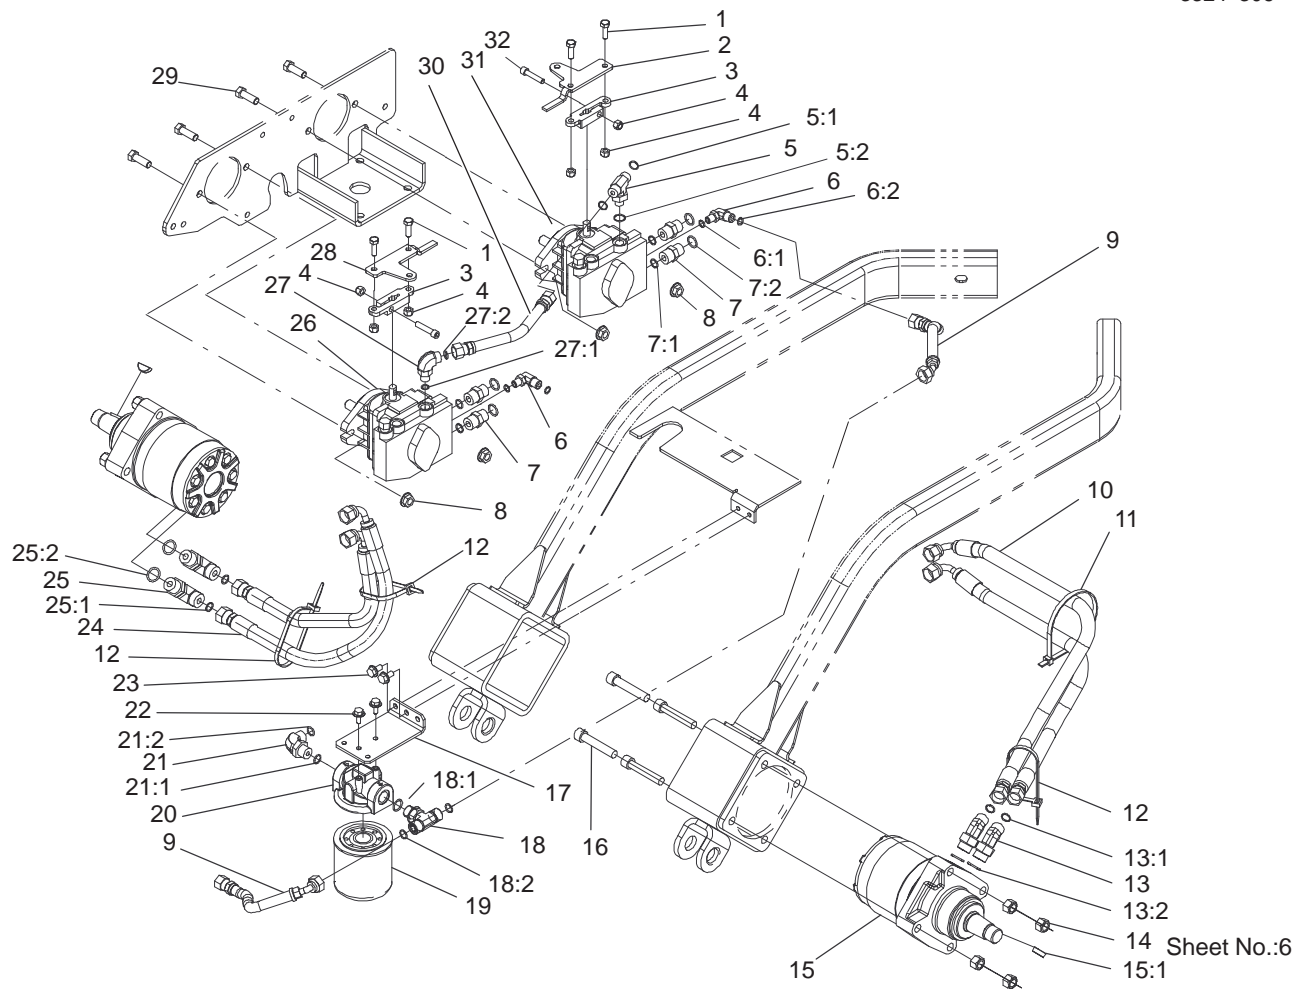

Hydraulic Assembly

Ref. No.	Part No.	Qty.	Description
1	322-5	4	Screw-HH
2	94-4702-03	1	Plate - Control, Left
3	94-4678	2	Arm - Pump Control
4	3296-29	6	Nut-Lock, NI
5	340-94	1	Adapter
6	340-97	2	Fitting-90°
6:1	237-22	1	O-Ring
6:2	237-78	1	O-Ring
7	340-4	4	Adapter
7:1	237-30	1	O-Ring
7:2	237-79	1	O-Ring
8	32128-42	4	Nut-HF
9	98-4384	2	Hydraulic Hose ASM
10	94-4714	2	Hydraulic Hose ASM
11	3334-945	1	Tie-Cable
12	3290-378	3	Tie-Cable
13	340-89	2	Fitting-45°
13:1	237-30	1	O-Ring
13:2	237-80	1	O-Ring
14	3296-23	8	Nut-Lock, NI
15	94-4640	2	Motor - Hydraulic Wheel
15:1	3257-42	1	Key-Woodruff
16	3274-93	8	Screw-HSH
17	94-9525-03	1	Angle-Mount, Hyd Filter

Ref. No.	Part No.	Qty.	Description
18	340-157	1	Fitting-Hydraulic
18:1	237-79	1	O-Ring
18:2	237-30	2	O-Ring
19	67-8110	1	Cartridge - Filter, Oil
20	86-9080	1	Filter Head
21	340-98	1	Fitting-Hyd, 90°
21:1	237-79	1	O-Ring
21:2	237-30	1	O-Ring
22	3234-4	2	Screw-HHF
23	32144-14	2	Screw-HWH
24	94-4705	2	Hydraulic Hose ASM
25	340-105	2	Fitting-Hyd., 90°
25:1	237-30	1	O-Ring
25:2	237-80	1	O-Ring
26	98-4375	1	Pump - Hydraulic
27	340-77	1	Fitting-Hyd., 90°
27:1	237-22	1	O-Ring
27:2	237-42	1	O-Ring
28	94-4701-03	1	Plate - Control, Right
29	324-5	4	Screw-HH
30	94-4712	1	Hydraulic Hose ASM
31	98-4374	1	Pump - Hydraulic
32	3274-83	2	Screw-HSH

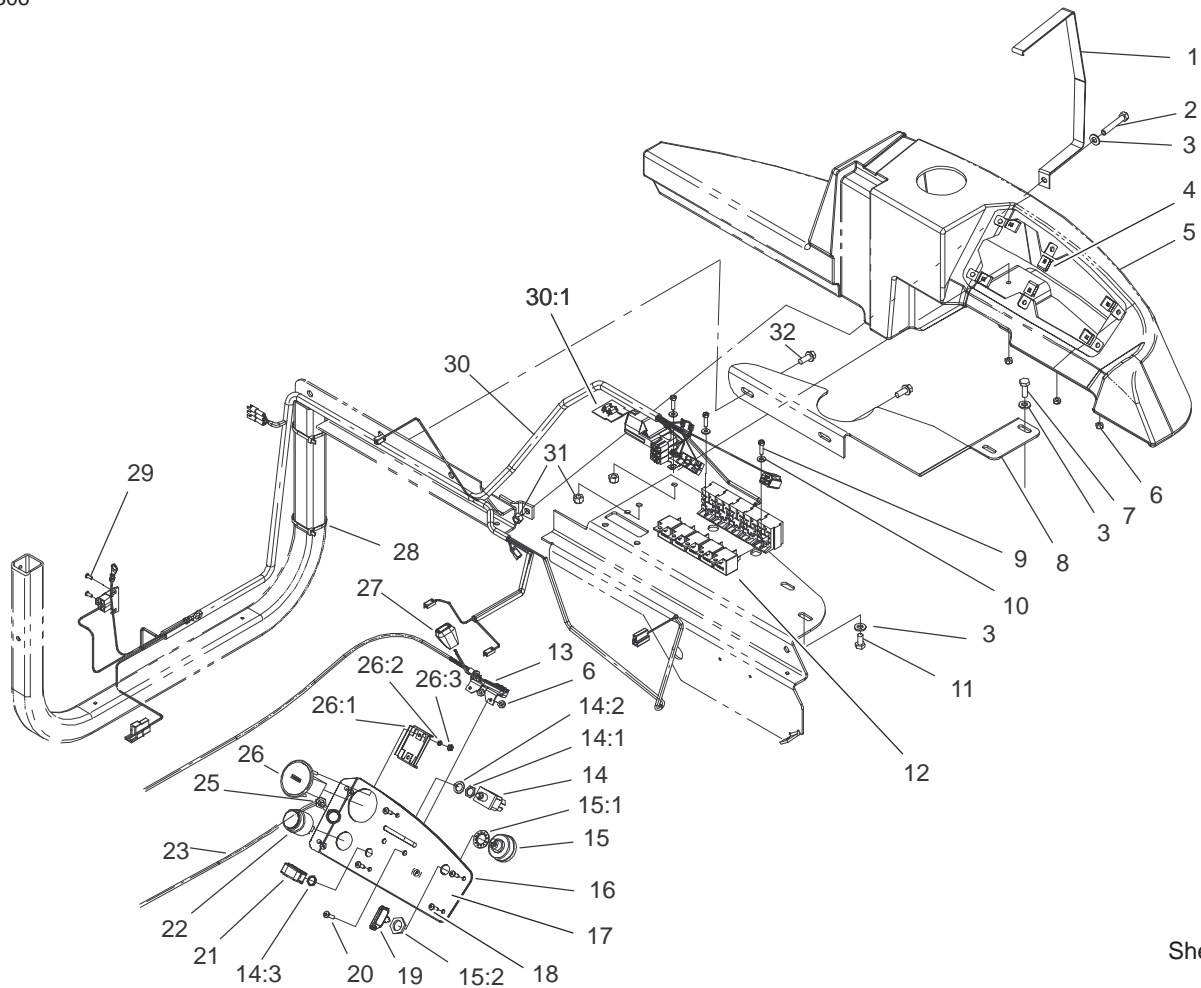


Sheet No.:7

Electrical Assembly

Ref. No.	Part No.	Qty.	Description
1	94-9488-03	1	Strap - Console
2	322-10	1	Screw-HH
3	3256-23	5	Washer-Flat
4	95-1962	6	Clip - Tinnerman
5	104-0365	1	Console
6	3296-2	5	Nut-Lock
7	322-4	2	Screw-HH
8	100-7792-01	1	Plate - Support, Console
9	32105-13	3	Screw-Shh
10	3256-14	3	Washer-Flat
11	322-2	2	Screw-HH
12	116397	5	Relay, Spdt
13	98-4350	1	Throttle Control ASM
14	92-9811	1	Switch - Toggle, Sealed
14:1	105805	1	Nut-Hex Special
14:2	102950	1	Washer Tab
14:3	113179	1	Nut-Hex
15	111216	1	Ignition Switch ASM
15:1	9201604	1	Lockwasher
15:2	101884	1	Nut
16	98-1999-03	1	Panel - Instrument
17	98-4357	1	Decal - Instrument
18	32144-124	6	Screw - PPH, Type Ab


Ref. No.	Part No.	Qty.	Description
19	62-7770	2	Key-Ignition
20	3250-13	2	Screw-PPH
21	113050	1	Cover-PTO Switch
22	80-9330	1	Alarm - Audio
23	98-1956	1	Control - Choke
25	3220-3	1	Nut-Jam
26	78-0020	1	Hour-Meter
26:1	78-3320	1	Clamp-Hour Meter
26:2	3255-25	2	Washer-Lock/Ext
26:3	3217-27	2	Nut-Hex
27	66-0120	1	Knob
28	3290-379	2	Tie-Cable
29	32144-74	2	Screw-TAP
30	98-3317	1	Harness
30:1	92-3188	1	Diode - Circuit Board
31	3296-29	3	Nut-Lock, NI
32	32144-11	2	Screw-TAP

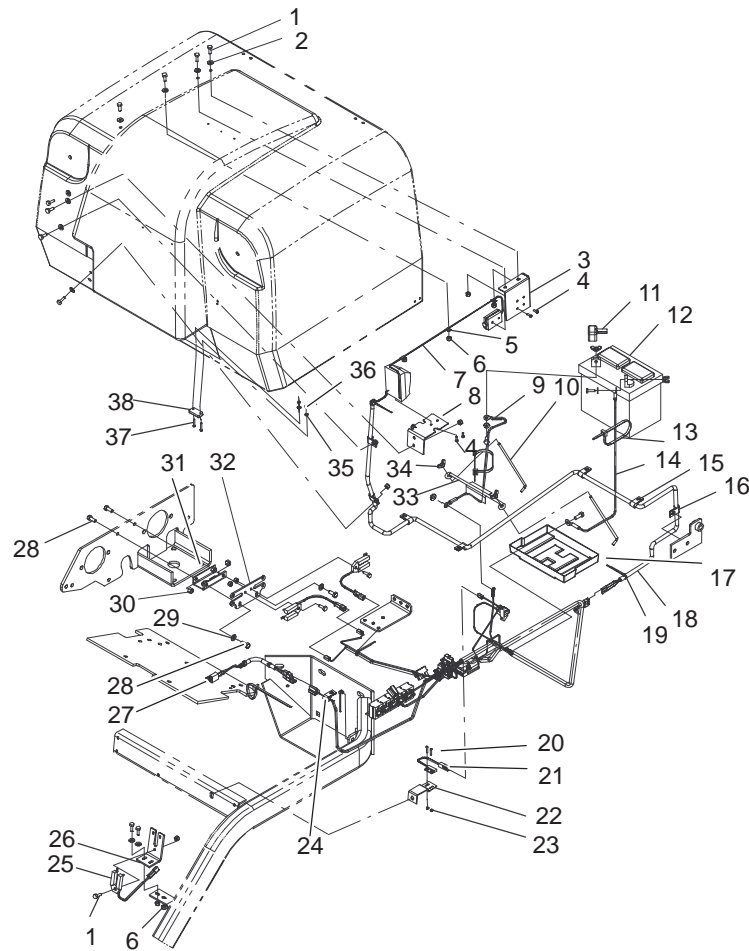

Sheet No.:8

Electrical Assembly #2

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	321-4	15	Screw-HH	25	98-1324	3	Switch - Interrupter
2	3256-22	12	Washer-Flat	26	94-4696	1	Angle - Mount, Switch
3	100-2440-03	1	Bracket - Emitter	27	98-4373	1	Harness - Seat
4	3250-19	4	Screw-PPH				Adapter
5	2412-127	3	Clamp-R	28	322-3	4	Screw-HH
6	3296-42	13	Nut-Lock	29	3256-23	2	Washer-Flat
7	98-2367	1	Module - Obstruction Det	30	3296-29	4	Nut-Lock, NI
8	98-3000-03	1	Bracket - Receiver	31	94-4797-03	1	Channel-Mount, Switch
9	28-3893	1	Wire ASM	32	94-9460	1	Plate - Switch Mount
10	94-6146	2	Retainer - Battery	33	113010	1	Battery Hold Down
11	28-8080	1	Boot-Terminal	34	32103-22	4	Nut-Wing
12	94-1867	1	Battery	35	3256-12	2	Washer-Flat
13	3290-378	3	Tie-Cable	36	3296-9	2	Nut-Lock NI
14	92-6287	1	Wire ASM - Negative	37	3290-124	2	Screw-HH
15	2412-93	6	R-Clamp	38	98-3006	1	Actuator
16	2412-138	1	R-Clamp				
17	106948	1	Tray-Battery				
18	98-3009	1	Conduit - Convolved				
19	3290-381	4	Tie - Cable				
20	3290-313	2	Screw - PH				
21	95-7669	1	Switch - Reed, Magnetic				
22	98-0823-03	1	Bracket - Switch				
23	3296-52	2	Nut-Lock NI				
24	2412-93	1	R-Clamp				

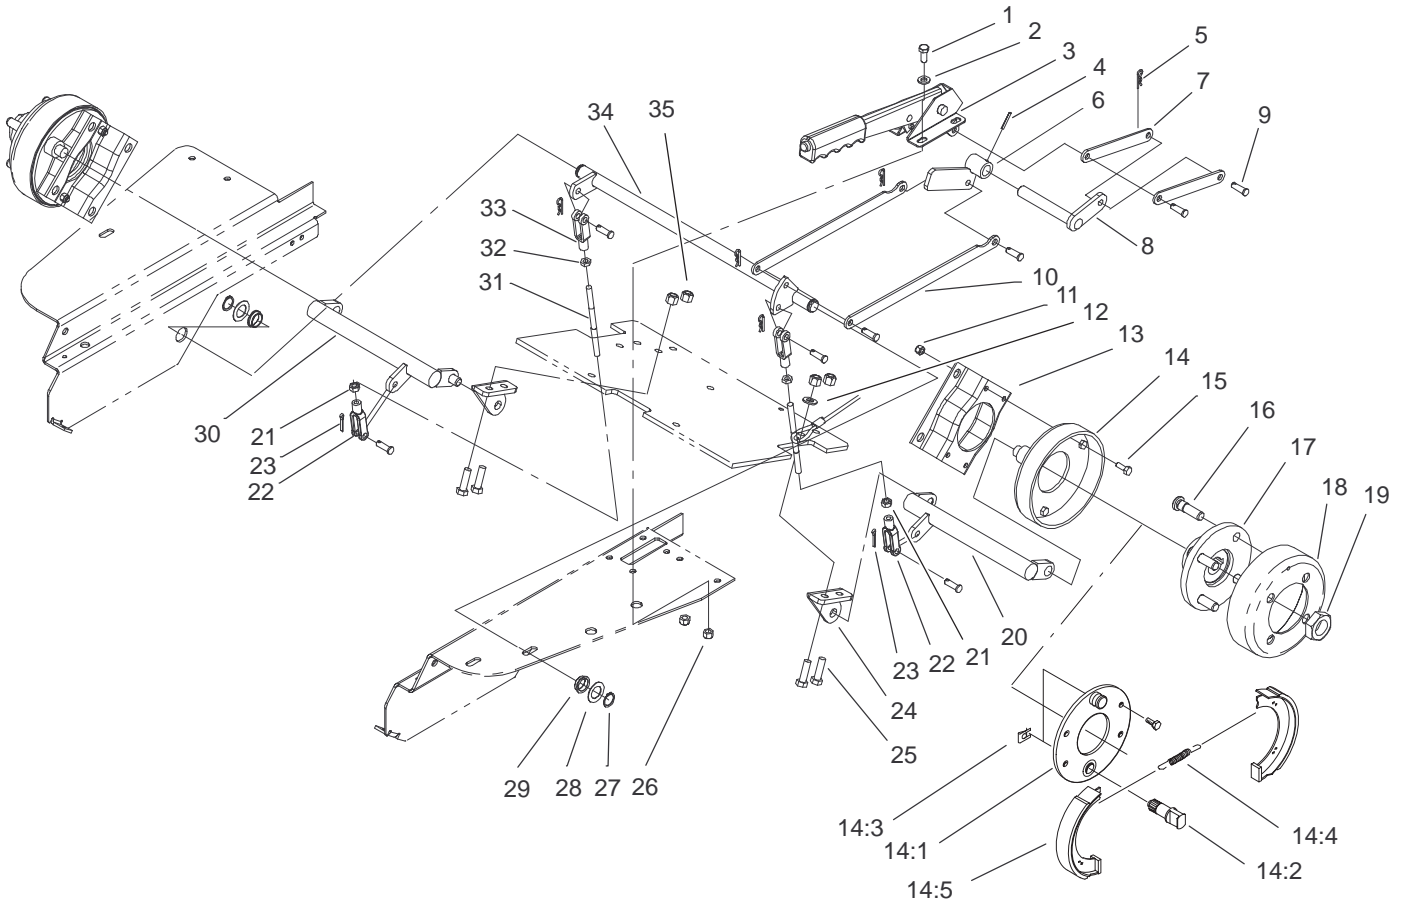


Sheet No.:9

Parking Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	322-3	4	Screw-HH
2	3256-23	4	Washer-Flat
3	94-4602	1	Lever - Brake
4	32121-93	1	Spiral Pin
5	3290-307	6	Pin-Hair
6	98-1994	1	Brake Hub ASM
7	98-1992	2	Link - Brake
8	98-1990	1	Transfer Shaft ASM
9	283-1	8	Pin-Yoke
10	98-1991	2	Link - Connect
11	3296-42	8	Nut-Lock
12	3256-24	1	Washer-Flat
13	84-2000-03	2	Bracket-Brake
14	71-1500	2	Brake ASM
14:1	70-9870	1	Plate-Backing
14:2	70-9860	1	Cam-Brake
14:3	70-9850	1	Clip-Retaining
14:4	70-9880	2	Spring-Return
14:5	70-9840	2	Shoe-Brake
15	321-4	8	Screw-HH
16	85-6540	8	Stud-Drive
17	10-6870-03	2	Hub-Wheel
18	10-6850	2	Drum-Brake
19	26-3790	2	Nut-Lock
20	98-1997	1	LH Brake Lever ASM
21	3220-20	2	Nut-Jam LH


Ref. No.	Part No.	Qty.	Description
22	98-4367	2	Clevis - Adjustable
23	3272-10	2	Pin-Cotter
24	94-9573-01	2	Mount-Lever, Brake RH
25	323-7	4	Screw-HH
26	3296-29	4	Nut-Lock, NI
27	32120-72	2	Ring-Snap
28	9202574	2	Washer-Flat
29	106950	2	Bushing
30	98-1998	1	RH Brake Lever ASM
31	98-1996	2	Rod - Brake
32	3220-2	2	Nut-Jam
33	282-2	2	Yoke
34	98-1988	1	Torsion Shaft ASM
35	3296-39	4	Nut-Lock, NI

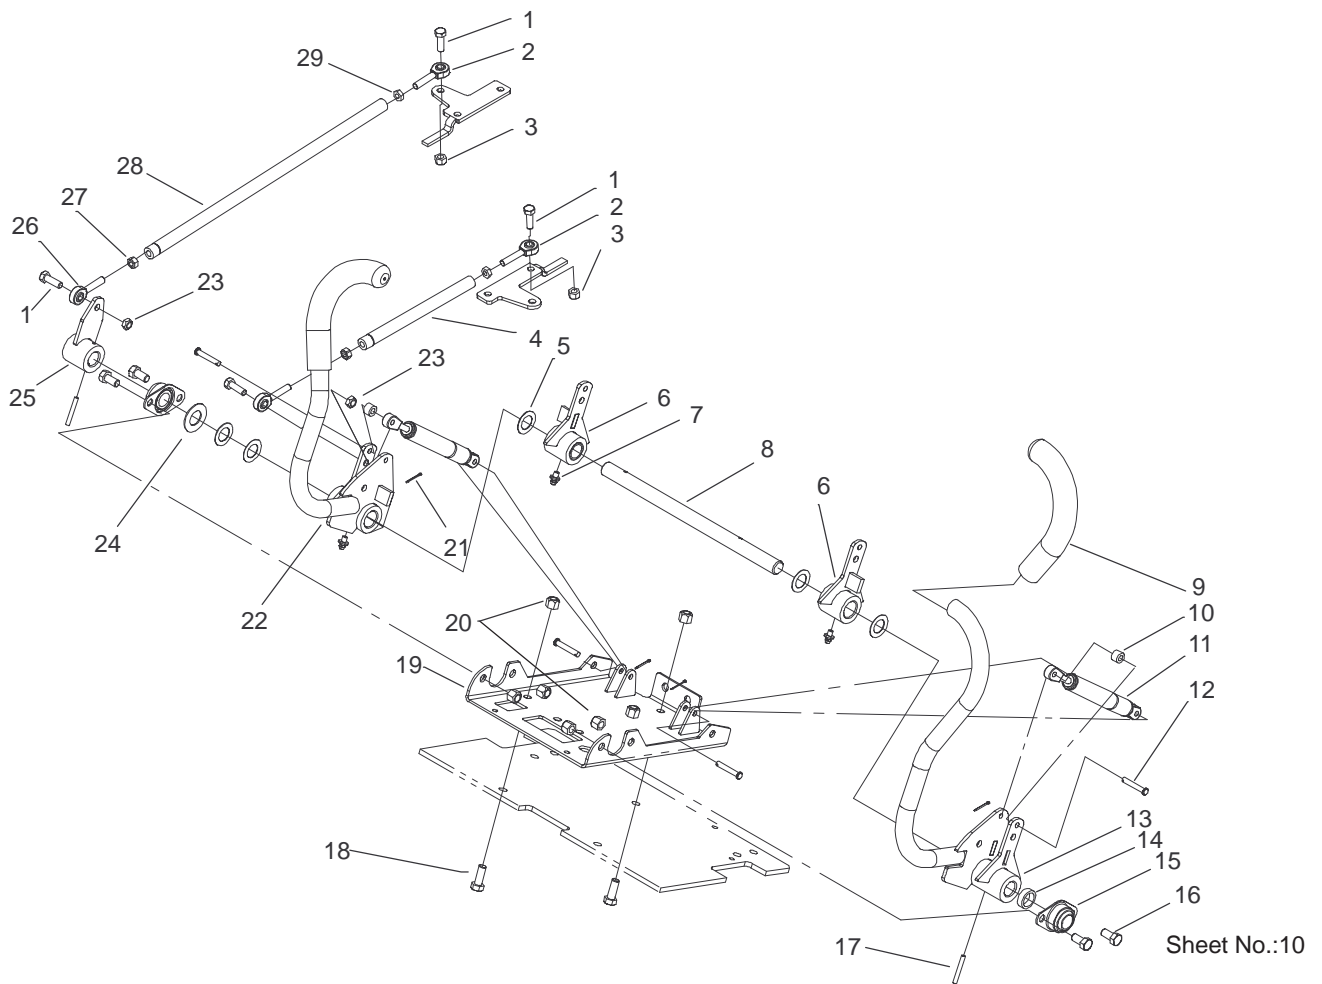

Sheet No.:10

Steering Control Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	322-5	4	Screw-HH	24	3256-39	1	Washer-Flat
2	2411-52	2	Bearing - Rod End, RH	25	94-9594-03	1	Control Hub ASM
3	3296-29	2	Nut-Lock, NI	26	2411-53	2	Bearing - Rod End, RH
4	94-4717	1	Rod - Control, RH	27	3220-20	2	Nut-Jam LH
5	9202574	5	Washer-Flat	28	94-4718	1	Rod - Control, LH
6	94-9552	2	Center Control ASM	29	3220-2	2	Nut-Jam
7	302-5	3	Fitting-Lube				
8	94-9515	1	Shaft - Control				
9	94-9490	2	Grip - Cushion				
10	94-9593	2	Spacer - Damper				
11	98-4397	2	Damper - Bidirectional				
12	283-66	4	Pin-Clevis				
13	94-9517-03	1	LH Control Handle ASM				
14	94-9524	1	Spacer - Control				
15	27-2320	2	Bearing				
16	323-4	4	Screw-HH				
17	32121-103	2	Pin-Spring				
18	323-6	3	Screw-HH				
19	94-9591-03	1	Channel Mount ASM				
20	3296-39	7	Nut-Lock, NI				
21	3272-4	4	Pin-Cotter				
22	94-9551	1	RH Control Handle ASM				
23	3296-47	2	Nut-Lock, NI				

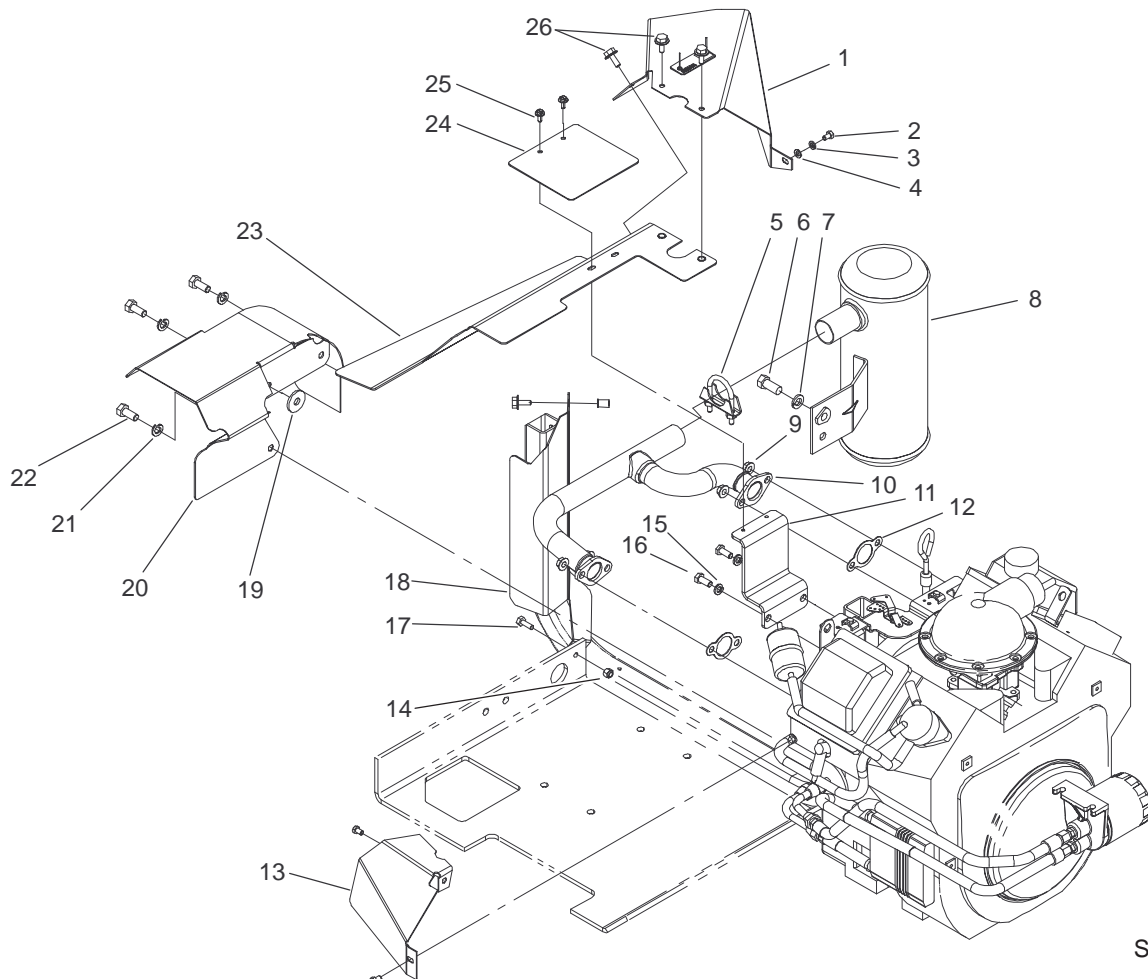

Sheet No.:12

Exhaust Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-1968	1	ASM – Rear Heat Baffle	24	98-1979	1	Panel – Access, Baffle
2	42-9430	1	Bolt/Washer	25	12-5450	2	Screw
3	48-8020	1	Washer-Spring	26	3234-4	4	Screw-HHF
4	33093-00	1	Washer-Flat				
5	2112-11	1	Clamp-Muffler				
6	324-4	1	Screw-HH				
7	3253-6	1	Washer-Lock/Sp				
8	94-9495	1	Muffler				
9	92-6780	4	Nut-Hex Flange				
10	94-9494	1	Manifold				
11	94-9561	1	Bracket – Manifold Shield				
12	93-0350	2	Gasket – Exhaust				
13	98-1349	1	Baffle – Heat, Front				
14	3296-42	1	Nut-Lock				
15	42-9850	2	Washer-Lock, Spring				
16	33114-020	2	Screw-HH				
17	321-4	1	Screw-HH				
18	98-1329	1	Baffle – Heat, Middle				
19	2844	1	Washer				
20	98-1326	1	Baffle – Heat, Lower				
21	3253-5	3	Washer-Lock/Sp				
22	323-5	3	Screw-HH				
23	98-1967	1	ASM – Top Heat Baffle				

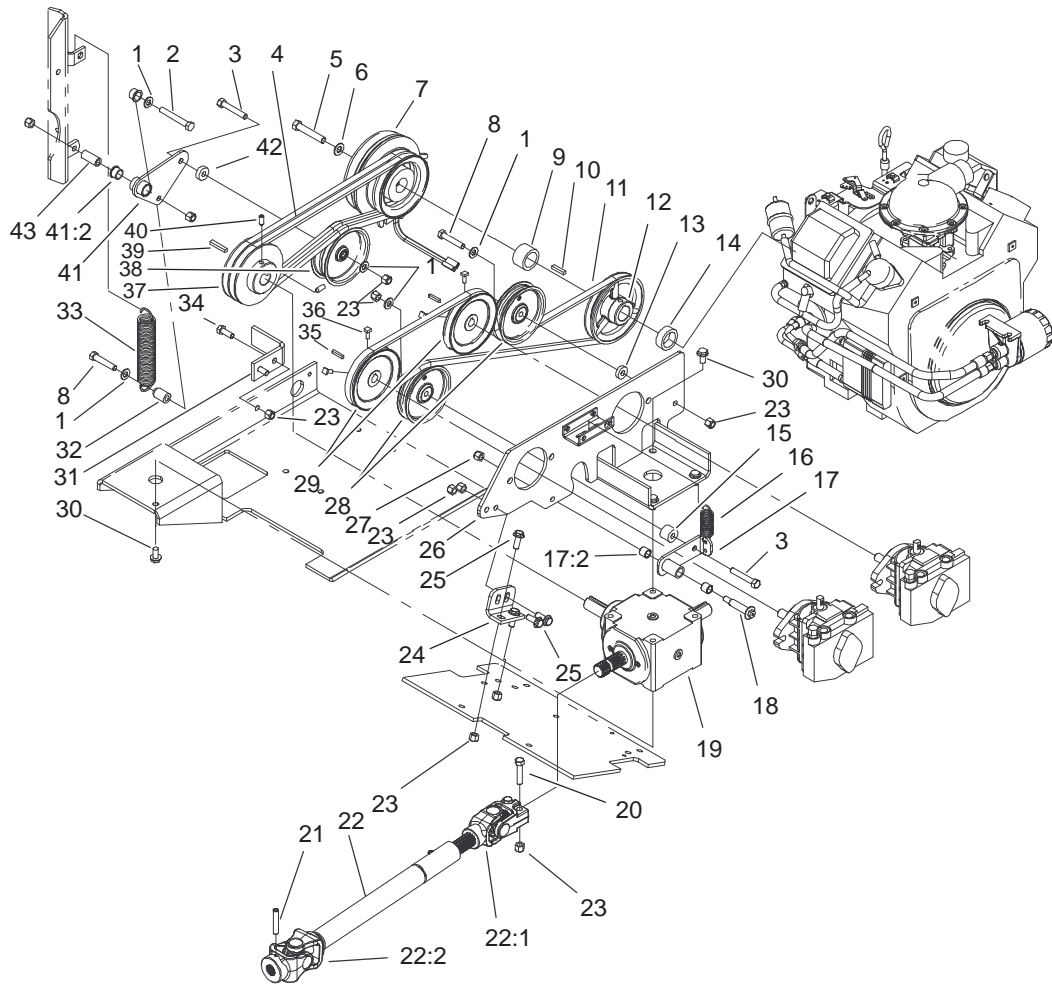


Sheet No.:13

PTO and Hydro Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	3256-24	5	Washer-Flat
2	323-13	1	Screw-HH
3	323-11	2	Screw-HH
4	94-4608	1	V-Belt, Matched Pair
5	3212-10	1	Screw-HH
6	3256-25	1	Washer-Flat
7	94-4632	1	Clutch - Electromagnetic
8	323-10	2	Screw-HH
9	94-4689	1	Spacer - Shaft, Engine
10	5-0698	1	Key
11	94-4607	1	V-Belt
12	94-4628	1	Pulley - Engine
13	9202204	1	Washer
14	94-4688	1	Spacer - Shaft, Engine
15	94-4792	1	Spacer - Idler Arm
16	94-9599	1	Spring - Extension
17	95-1950	1	Idler Arm ASM w/ Bushings
17:2	256-154	2	Bushing
18	27-6230	1	Bolt-Wheel
19	100-5842	1	Gearbox ASM
19:1		1	Gearbox - PTO
19:2	2811-7	1	Elbow

Ref. No.	Part No.	Qty.	Description
20	323-19	2	Screw-HH
21	32121-48	1	Pin-Spring
22	94-4722	1	Shaft - Drive
22:1	100-7765	1	Joint & Shaft Half ASM
22:2	100-7766	1	Joint & Tube Half ASM
23	3296-39	13	Nut-Lock, NI
24	94-4787-03	1	Mount - Plate, Pump
25	3234-11	4	Screw-HHF
26	94-4658-03	1	Pump Mount ASM
27	3296-6	1	Nut-Lock, NI
28	93-1622	2	Pulley-Idler
29	80-8170	2	Pulley - Pump, Traction
30	3234-1	8	Screw-HHF
31	98-1301-03	1	Stop - Clutch
32	95-1967	1	Spacer - Spring
33	88-6460	1	Spring - Extension
34	323-6	2	Screw-HH
35	80-6090	2	Key - Pump
36	3241-5	4	Screw-Set
37	94-4629	1	Pulley - Clutch
38	66-4210	1	Pulley
39	67-7490	1	Key
40	3246-6	2	Screw-Set, HSH
41	95-1968	1	Idler Arm ASM
41:2	109859	2	Bushing

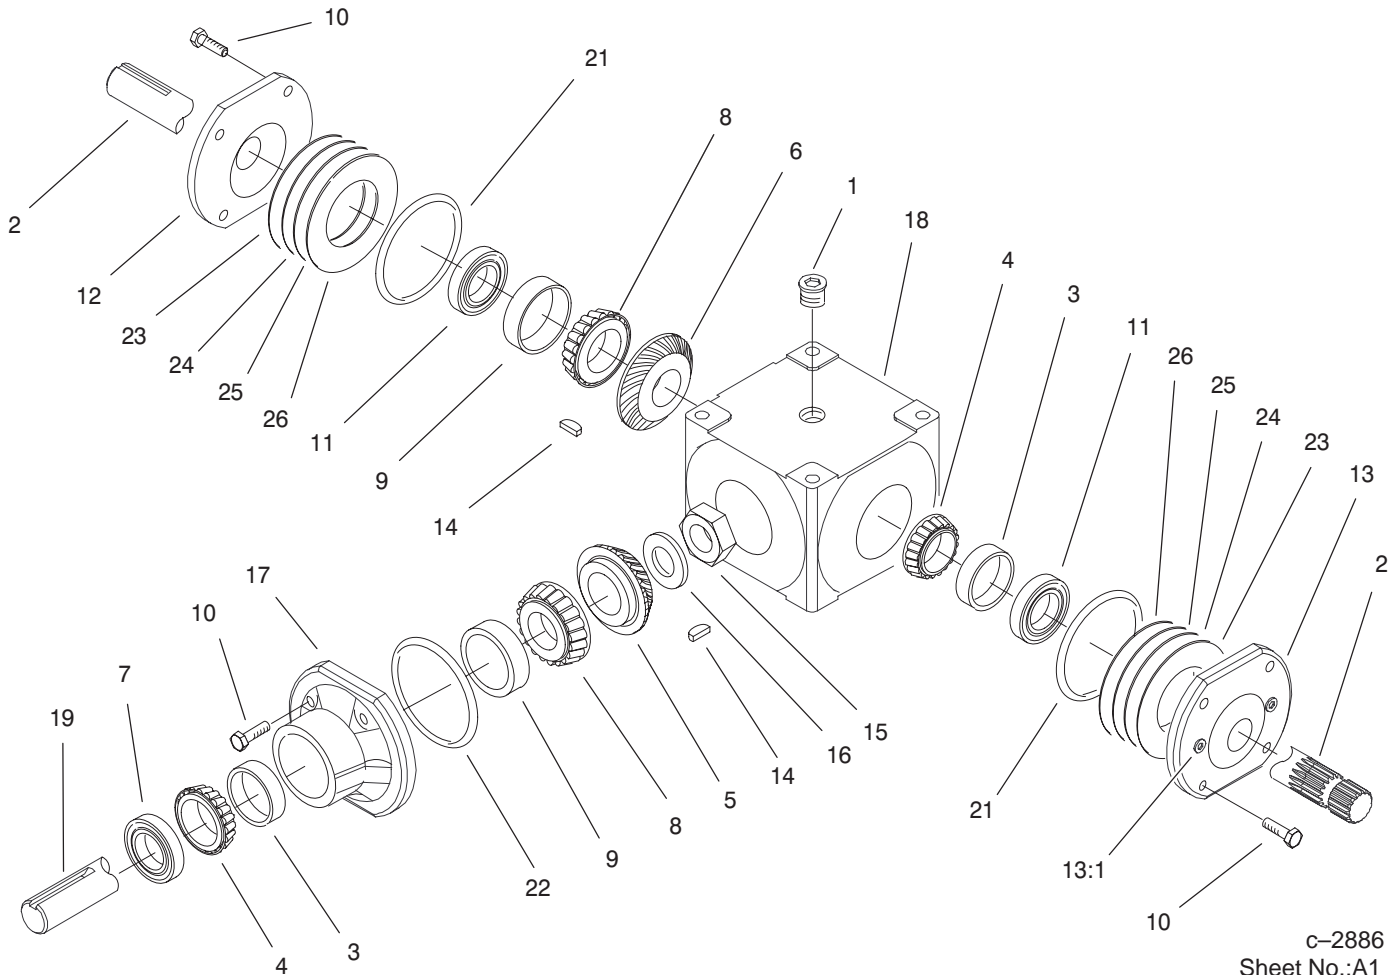


c-2886
Sheet No.:A1

Gearcase Assembly No. 100-5842

Ref. No.	Part No.	Qty.	Description
1	100-5812	3	Plug
2	100-5828	1	Shaft – Cross
3	100-4571	2	Cup – Bearing
4	100-4572	2	Cone – Bearing
5	100-5814	1	Gear – Spiral, RH
6	100-5815	1	Gear – Spiral, LH
7	100-4575	1	Seal
8	100-5816	2	Cone – Bearing
9	100-5817	2	Cup – Bearing
10	100-5818	12	Screw-HH
11	100-5819	2	Seal
12	100-5820	1	Cap – End
13	100-5821	1	End Cap w/ Drain Plugs
14	100-5822	2	Key
15	100-5823	1	Nut – Lock
16	100-5824	1	Washer
17	100-5825	1	Housing – Pinion
18	100-5826	1	Case
19	100-5827	1	Shaft – Pinion
20	100-4583	2	Plug
21	100-5847	2	O-Ring
22	100-5848	1	O-Ring
23	100-7757	1	Shim – Green
24	100-7758	1	Shim – Blue

Ref. No.	Part No.	Qty.	Description
25	100-7759	1	Shim – Brown
26	100-7760	1	Shim – Yellow

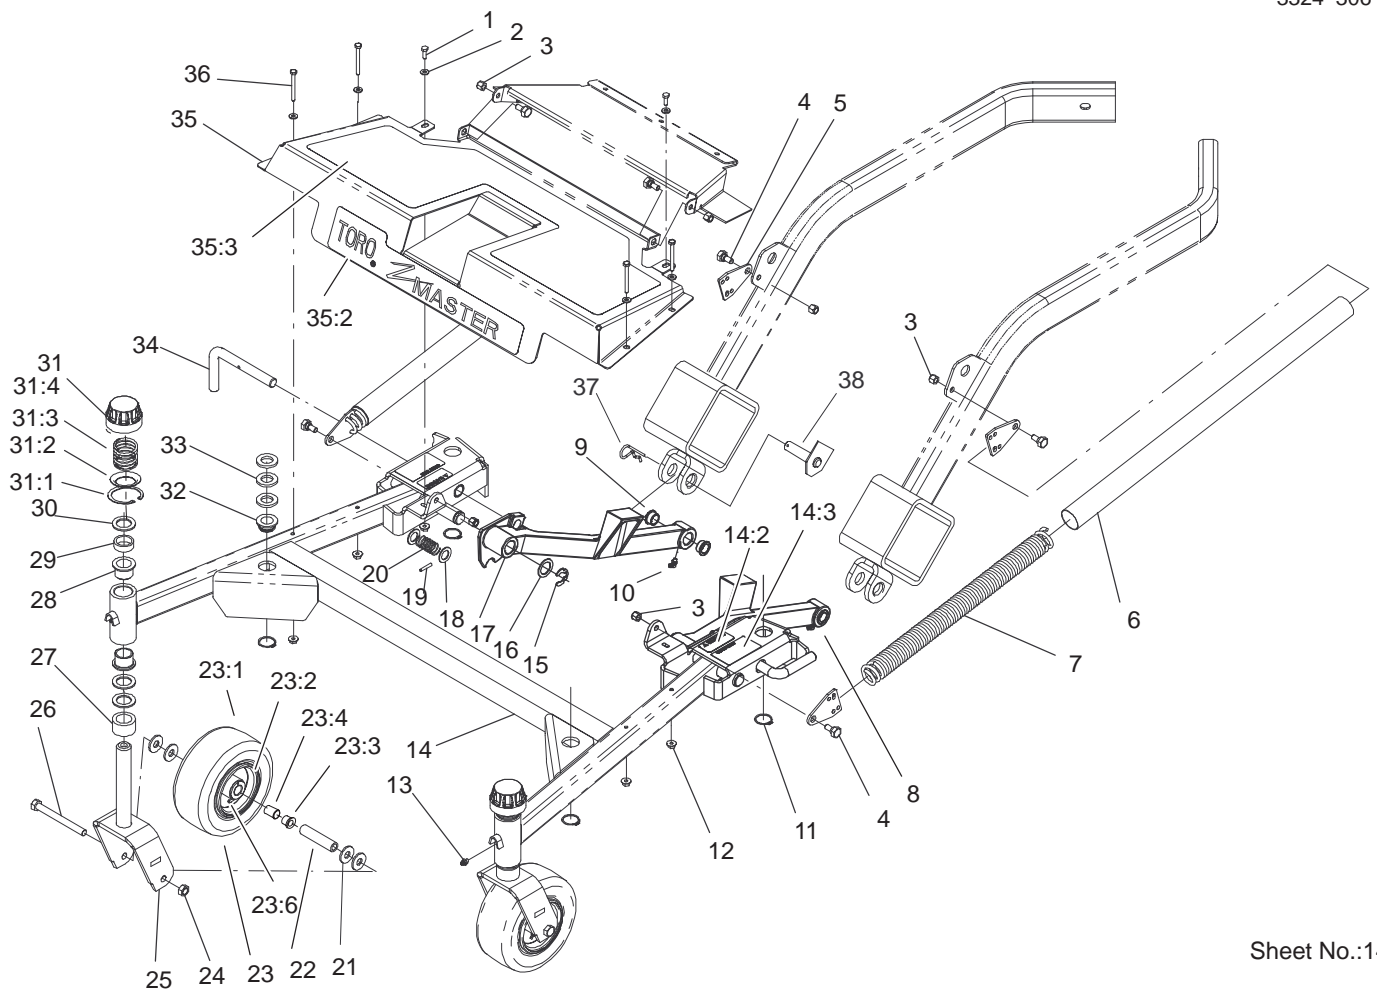


Sheet No.:14

Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	321-4	2	Screw-HH	23	99-1268	2	Castor Wheel ASM
2	3256-22	6	Washer-Flat	23:1	93-9939	1	Tire
3	3296-39	6	Nut-Lock, NI	23:2	100-2348	1	Rim Assembly
4	46-3380	6	Bolt-Shoulder	23:3	62-5580	2	Bearing-Outside
5	94-4750	4	Plate - End, Spring	23:4	62-5570	1	Bearing-Roller
6	94-9550	2	Cover - Spring	*23:5	100-5832	1	Tube w/ Valve
7	94-4664	2	Spring - Extension	23:6	302-11	1	Fitting-Lube, 45°
8	98-0817-01	1	Casting - Lift Arm, LH	24	32153-5	2	Nut-Lock
9	27-9080	4	Bearing-Flange	25	99-0295-01	2	Castor Fork ASM
10	302-60	2	Fitting-Lube	26	325-19	2	Screw-HH
11	32120-33	4	Ring-Retaining	27	93-1167	2	Spacer - Castor
12	32128-33	6	Nut-HF	28	94-1291	4	Bushing-Special
13	302-5	2	Fitting-Lube	29	63-0070	2	Spacer
14	100-7780	1	Carrier Frame ASM w/ Decals	30	3-6781	6	Washer-Thrust
14:2	55-4300	2	Decal	31	92-8862	2	Cap ASM-HOC
14:3	100-7769	2	Decal - Adjustment, Cutting Height	31:1	92-5581	1	Ring-Retaining
15	32151-91	2	Ring-Retaining	31:2	92-5583	1	Washer-Cap
16	9202514	2	Washer	31:3	92-5584	1	Spring-Compression
17	98-0818-01	1	Casting - Lift Arm, RH	31:4	92-8861	1	Cap-HOC
18	9202254	4	Washer	32	1-513336	4	Bushing - Deck
19	32121-79	2	Pin-Roll	33	1-513338	12	Washer - Flat
20	98-1339	2	Spring - Compression	34	100-2389	2	Pin - Pivot
21	3256-6	8	Washer-Flat	35	100-7774	1	Footrest ASM w/ Decals
22	68-8980	2	Spanner-Tire	35:2	100-7770	1	Decal - Z Master, Toro


* Not illustrated

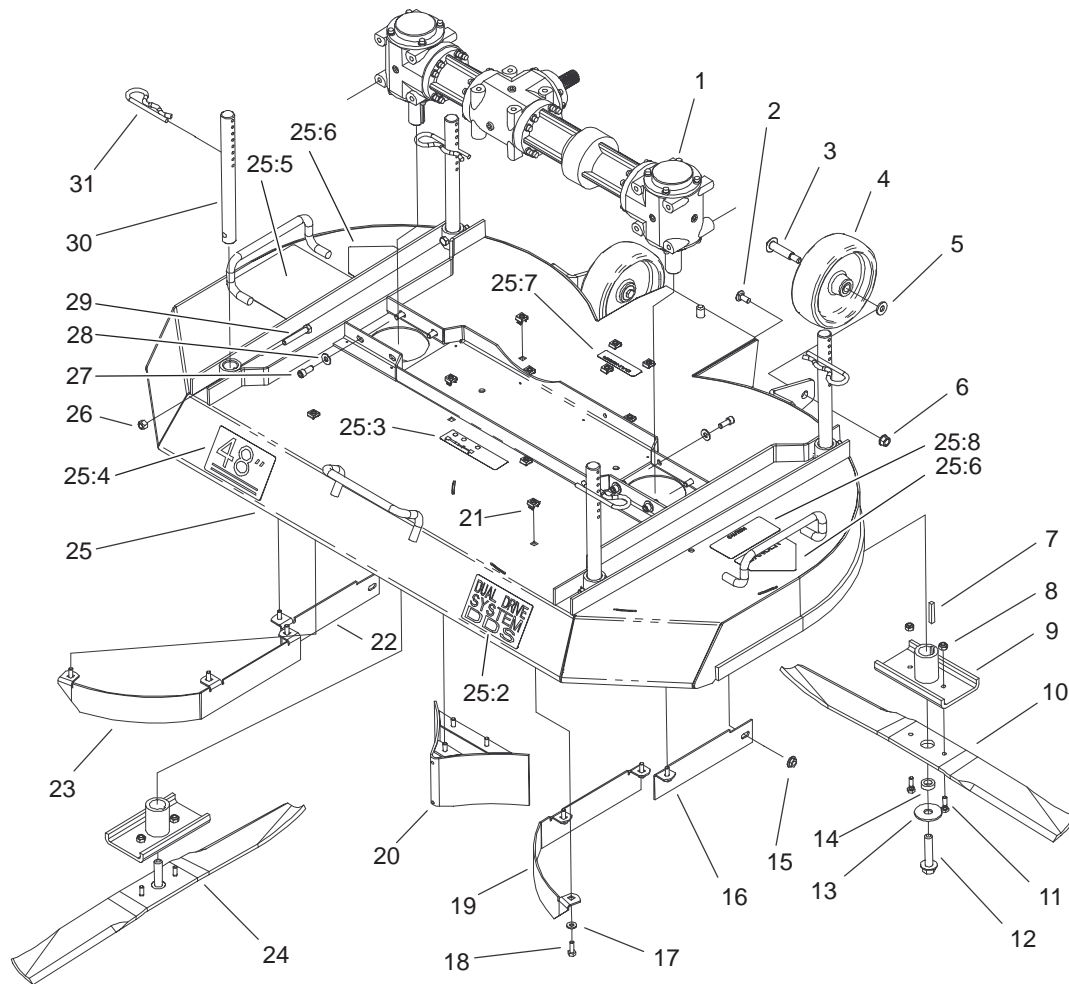

Sheet No.:15

Deck Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2419	1	Gearbox Service ASM	18	321-4	11	Screw-HH
1:1		1	Gearbox - 48" Deck, Splined	19	98-3015-01	1	Baffle - LH
1:2	3274-10	8	Screw-HSH	20	100-9655-01	1	Center Baffle ASM
1:3	100-2400	8	Washer - Hard	21	32115-5	11	Nut-Retained
1:4	32121-48	1	Pin-Spring	22	104-0389-01	1	Bracket - Discharge, RH
1:5	100-5809	1	Decal - Transmission Fluid	23	98-3016-01	1	Baffle - RH
1:99	505-76	3	Loctite .02 Oz/Tube	24	99-4941	1	Blade - 25", RH
2	3230-23	2	Screw-CARR	25	104-0371	1	48 Deck ASM w/ Decals
3	92-1057	2	Bolt-Shoulder	25:2	100-7788	1	Decal - Dds
4	95-4102	2	Wheel	25:3	100-5809	1	Decal - Transmission Fluid
5	3256-3	2	Washer-Flat	25:4	104-0354	1	Decal - 48
6	32128-40	2	Nut-Flange	25:5	98-1304	1	Decal - Danger
7	67-7490	2	Key	25:6	43-8480	2	Decal-Danger
8	3296-16	4	Nut-Lock, NI	25:7	80-8760	1	Decal - Danger
9	98-0810-01	2	Blade Retainer ASM	25:8	68-8340	1	Decal-Torque, Blade Bolt
10	99-4942	1	Blade - 25", LH	26	3296-29	4	Nut-Lock, NI
11	99-0283	4	Bolt - Shear	27	104-0356	8	Screw - HSH
12	92-5816	2	Bolt-Blade	28	100-2400	8	Washer - Hard
13	86-1990	2	Washer	29	322-10	4	Screw-HH
14	99-0217	2	Spacer	30	100-2393	4	Pin - Deck
15	32128-13	2	Nut-HF	31	3290-256	4	Pin-Cotter, Hair
16	104-0388-01	1	Bracket - Discharge, LH				
17	3256-22	11	Washer-Flat				

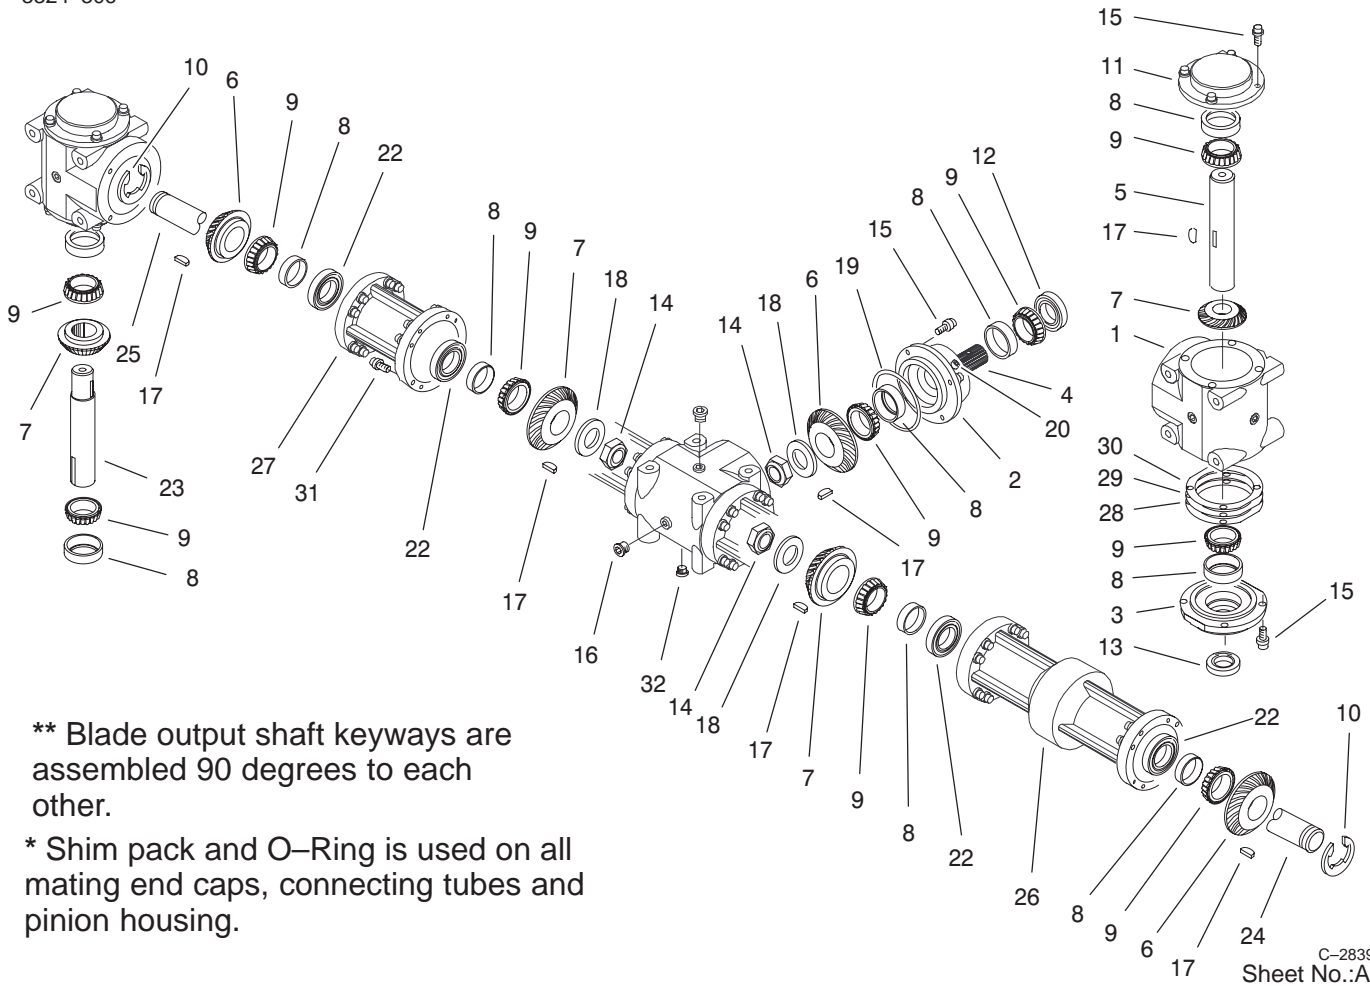

**** Blade output shaft keyways are assembled 90 degrees to each other.**


*** Shim pack and O-Ring is used on all mating end caps, connecting tubes and pinion housing.**

C-2839
Sheet No.:A2

Gearbox Assembly 100-2419

Ref. No.	Part No.	Qty.	Description
1	100-4564	3	Case
2	100-4565	1	Housing – Pinion
3	100-4566	2	Cap – End, Open
4	100-7755	1	Pinion Service ASM, Splined
4	100-4567	1	Shaft – Input, Splined
5	100-7754	1	Shaft Service ASM, LH
5	100-4568	1	Shaft – Cross, A/D
6	100-4569	3	Gear – LH, 27 Tooth
7	100-4570	4	Gear – RH, 29 Tooth
8	100-4571	10	Cup – Bearing
9	100-4572	10	Cone – Bearing
10	100-4573	2	Ring – Retaining
11	100-4574	2	Cap – End, Closed
12	100-4575	1	Seal
13	100-4576	2	Seal
14	100-4577	3	Nut – Jam
15	100-4578	20	Screw
16	100-4579	8	Plug
17	100-4580	7	Key – Woodruff
18	100-4581	3	Washer
19	100-4582	9	O-Ring
20	100-4583	1	Plug
21	100-4584	1	Cover – Transparent
22	100-4585	4	Seal
23	100-4586	1	Shaft – Cross, B/D


Ref. No.	Part No.	Qty.	Description
23	100-7753	1	Shaft Service ASM, RH
24	100-4587	1	Shaft – Connecting, Long
25	100-4588	1	Shaft – Connecting, Short
26	100-4589	1	Flange – Connecting, Long
27	100-4590	1	Flange – Connecting, Short
28	100-4591	1	Shim – Brown
29	100-4592	1	Shim – Blue
30	100-4593	1	Shim – Green
31	100-4594	32	Screw
32	100-4595	1	Plug – Magnetic

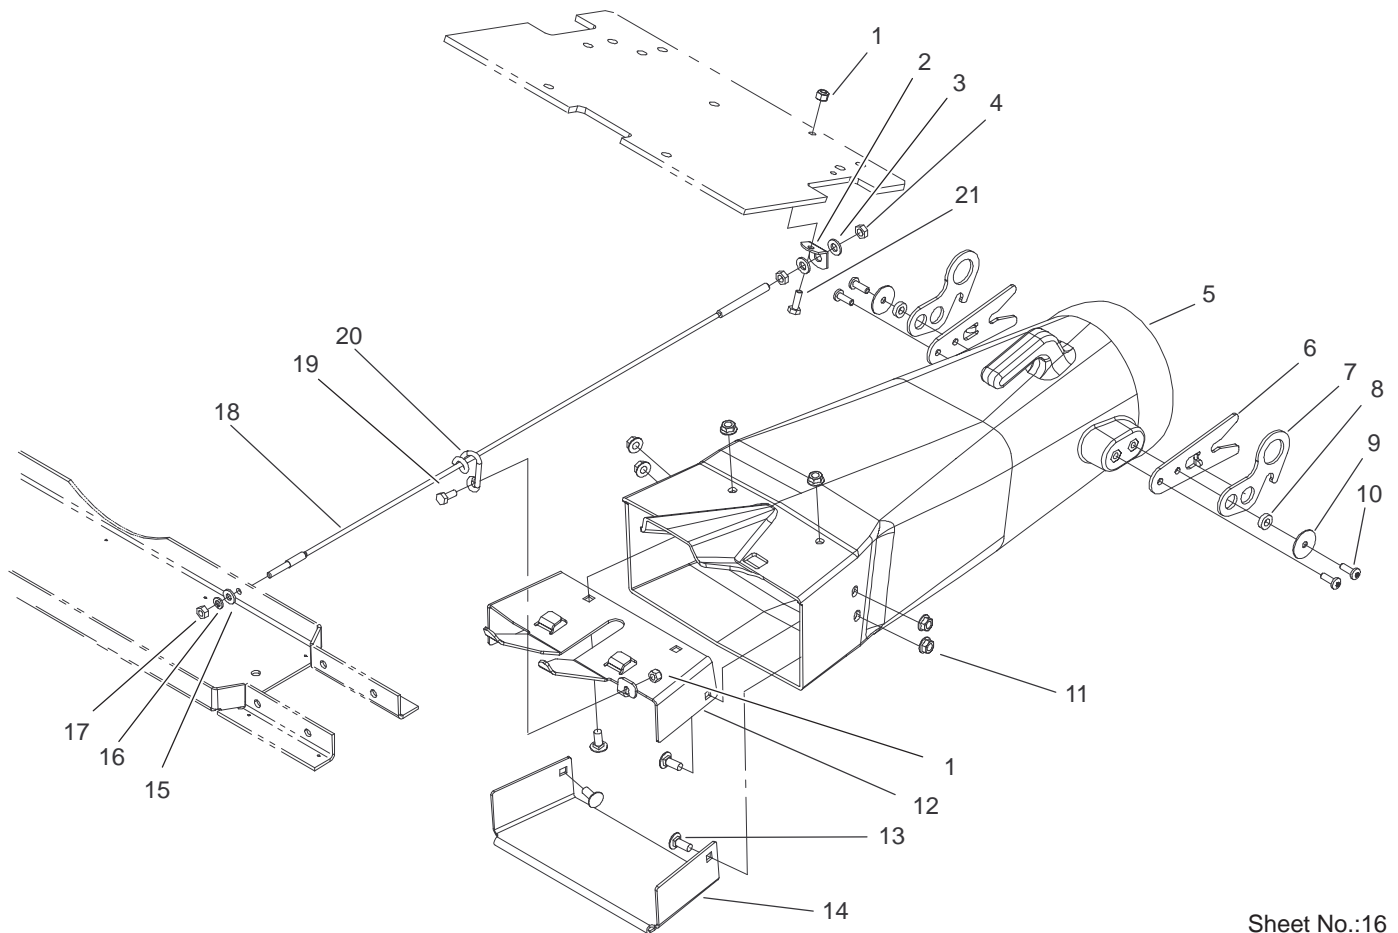

Sheet No.:16

Plenum Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3296-42	2	Nut-Lock				
2	98-3035	1	Bracket - Spring				
3	3256-23	2	Washer-Flat				
4	3218-2	2	Nut-Jam				
5	100-7787	1	Plenum				
6	104-0350	2	Plate - Guide				
7	100-7799	2	Plate - Latch				
8	104-0351	2	Spacer				
9	3256-58	2	Washer-Flat				
10	614267	4	Screw-PH,Torx				
11	32128-35	6	Nut-Hex, Flange				
12	104-0385-03	1	Plate - Plenum, Top				
13	3230-23	6	Screw-CARR				
14	104-0386-03	1	Plate - Plenum, Bottom				
15	3256-22	1	Washer-Flat				
16	3253-3	1	Washer-Lock/Sp				
17	3217-5	1	Nut-Hex				
18	104-0396	1	Cable - Tension				
19	321-3	1	Screw-HH				
20	104-2405	1	Guide - Cable				
21	321-4	1	Screw-HH				

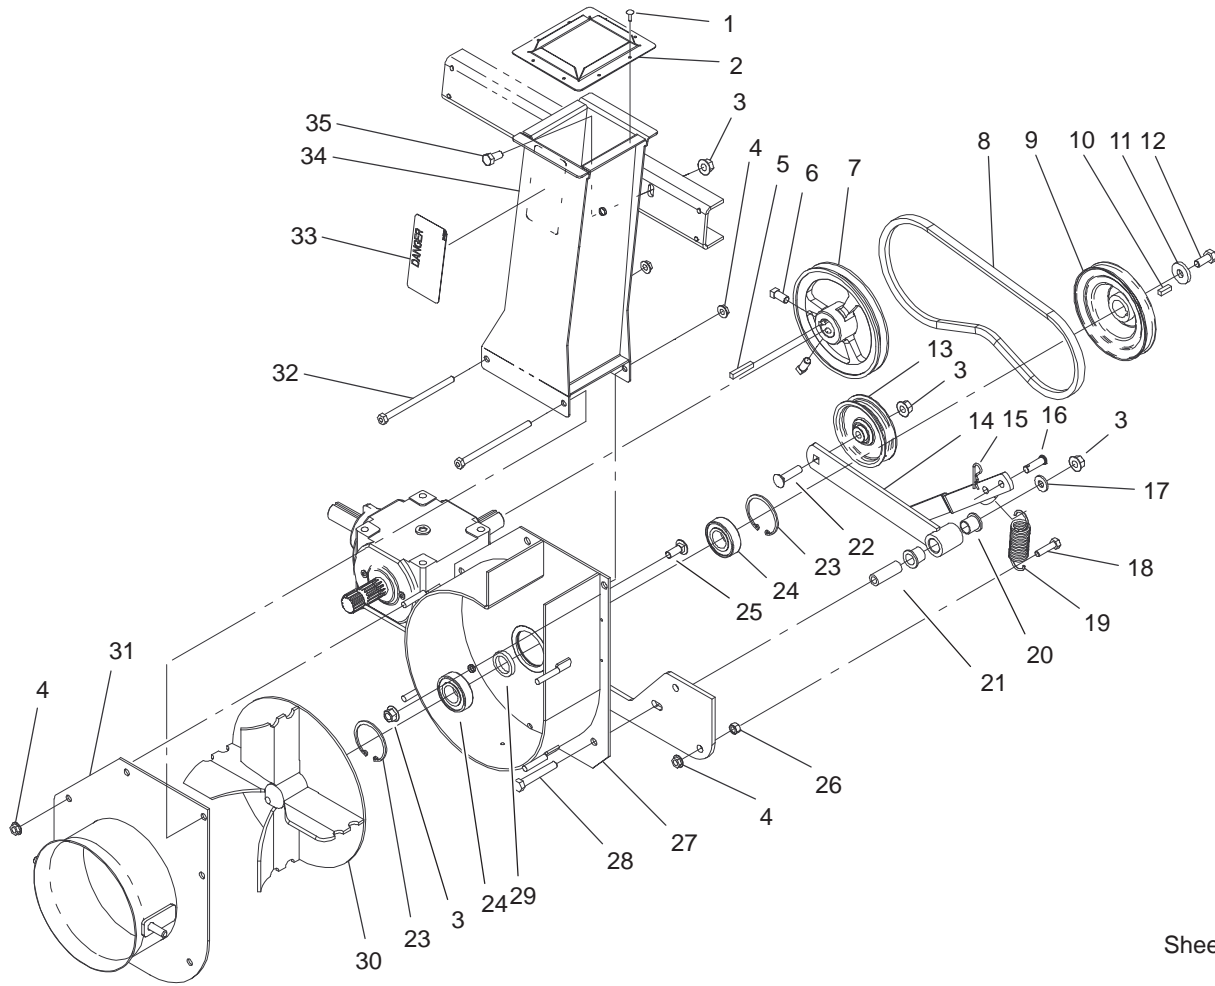


Sheet No.:17

Blower Assembly

Ref. No.	Part No.	Qty.	Description
1	3290-271	8	Rivet-Pop
2	100-4558-03	1	Flange-Chute
3	32128-21	4	Nut-HF
4	32128-25	7	Nut-Flange
5	67-7490	1	Key
6	3242-4	2	Screw-Set, SQH
7	94-4630	1	Pulley - Gearbox
8	19-2650	1	V-Belt
9	99-0287	1	Pulley - Impeller
10	20-9540	1	Key
11	65-8680	1	Washer - Thrust, Plain
12	323-5	1	Screw-HH
13	56-4920	1	Idler Pulley
14	95-6437-03	1	Idler Arm ASM
15	3290-467	1	Pin-Hair
16	283-2	1	Pin-Clevis
17	3256-3	1	Washer-Flat
18	322-6	1	Screw-HH
19	67-1440	1	Spring-Extension
20	256-90	2	Bushing-Flange
21	95-6448	1	Spacer
22	3231-4	1	Screw-CARR
23	32120-8	2	Ring-Snap
24	251-82	2	Bearing-Ball
25	3231-2	1	Screw-CARR
26	3217-6	1	Nut-Hex

Ref. No.	Part No.	Qty.	Description
27	99-0290-03	1	Housing ASM
28	323-12	1	Screw-HH
29	95-6427	1	Spacer - Bearing
30	99-0288-03	1	Impeller ASM
31	100-7795-03	1	Cover ASM
32	322-29	2	Screw-HH
33	79-0360	1	Decal-Danger
34	95-4345-03	1	Impeller Chute ASM
35	323-4	1	Screw-HH

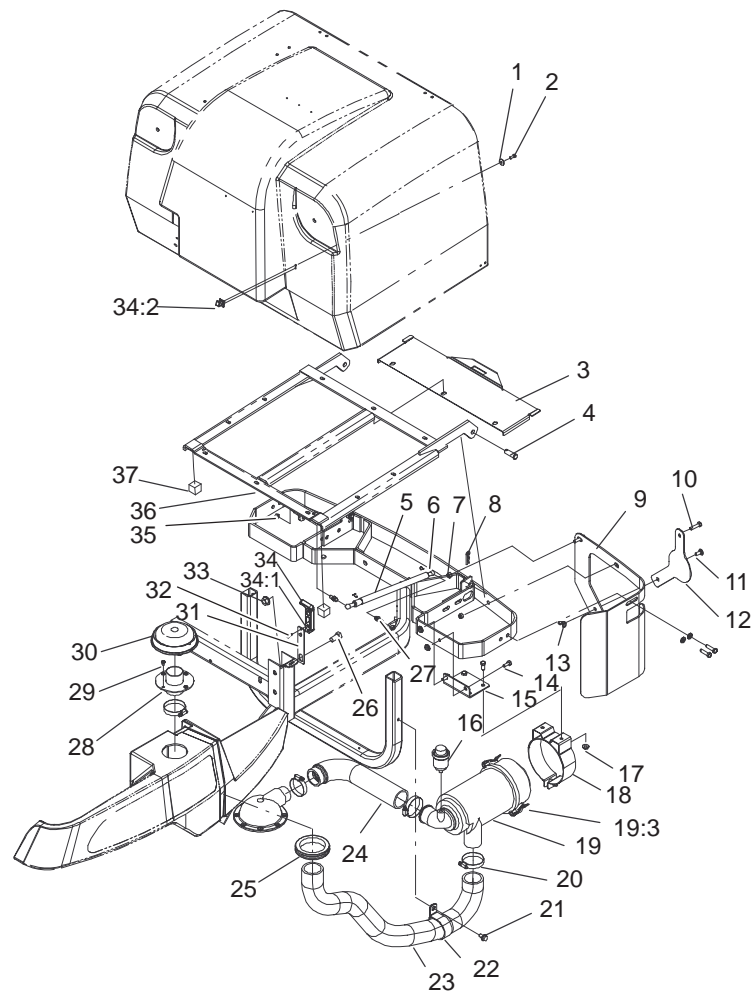


Sheet No.:18

Air Cleaner and Bagger Frame Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3256-61	1	Washer-Flat	23	100-2405	1	Hose
2	3290-134	1	Screw-Ind Hex	24	100-2406	1	Hose
3	100-7773-03	1	Plate - Latch	25	240-8	1	Rubber Grommet
4	283-68	2	Clevis Pin	26	325-4	1	Screw-HH
5	98-3043	1	Gas Spring	27	88-6770	2	Stud-Ball
6	98-3044	2	Safety Clip	28	100-2411-03	1	Flanged Connector ASM
7	3296-29	2	Nut-Lock, NI	29	32104-111	4	Screw
8	3290-355	2	Pin-Hair	☆30		1	Hood
9	104-0355-03	1	Guard - Filter, Air	31	98-3032	1	Bracket - Latch
10	322-6	2	Screw-HH	32	3290-359	2	Screw-HWH
11	3230-23	1	Screw-CARR	33	32128-23	1	Nut-HF
12	104-0364-03	1	Plate - Cover	34	94-5626	1	Latch - Draw, Flexible
13	32103-29	1	Nut-Wing	34:1	100-5806	1	Handle - Latch
14	322-3	4	Screw-HH	34:2	100-5807	1	Keeper - Latch
15	100-2412-03	1	Bracket	35	32152-1	2	Nut-Lock, NI
16	99-4664	1	Filter Minder	36	95-6418-03	1	Frame ASM
17	32128-13	4	Nut-HF	37	104-0367	2	Cushion
☆18		1	Bracket - A/C				
☆19		1	Air Cleaner				
*19:1	100-4557	1	Filter - Safety				
*19:2	100-4556	1	Element A/C				
19:3	99-3174	2	Clip-Cleaner, Air				
*19:4	99-3175	1	Valve-Ejector, Dust				
20	2412-130	4	Hose Clamp				
21	32144-14	1	Screw-HWH				
22	2412-102	1	R-Clamp				

☆ Not serviced

* Not illustrated

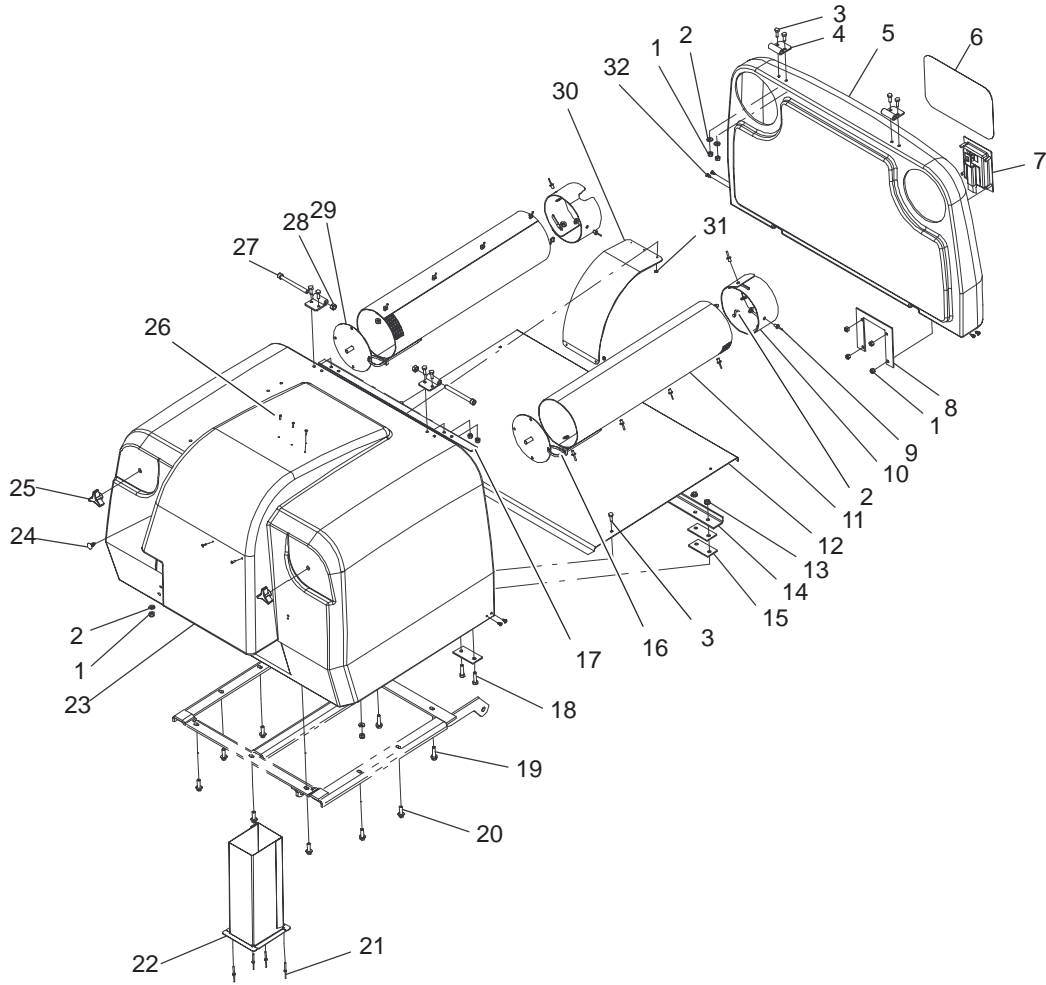


Sheet No.:19

Bagger Assembly


Ref. No.	Part No.	Qty.	Description
1	3296-42	14	Nut-Lock
2	3256-22	20	Washer-Flat
3	321-4	10	Screw-HH
4	98-3027-03	4	Hinge
5	100-9617	1	Cover - Bin
6	67-7310	1	Decal - Toro Logo, 7"
7	100-9631	1	Lever - Latch
8	100-9632-03	1	Plate - Latch
9	3290-412	14	Rivet
10	100-5845	2	Ring - Support
11	95-6441	2	Screen
12	100-4550-03	1	Floor - Hopper
13	32128-25	14	Nut-Flange
14	98-0849-03	1	Flange - Bin
15	98-3004	6	Spacer
16	3290-378	8	Tie-Cable
17	98-3036-03	1	Angle - Bin
18	322-6	4	Screw-HH
19	3234-36	3	Screw-HHF
20	3234-17	7	Screw-HHF
21	98-7310	4	Rivet
22	95-6482-03	1	Chute ASM
23	95-6422	1	Bin - Grass
24	104-0395	1	Plug - Plastic
25	233-52	2	Knob
26	3269-17	5	Pop Rivet


Ref. No.	Part No.	Qty.	Description
27	3274-102	2	Screw-HSH
28	3296-59	2	Nut-Lock, NI
29	95-6444-03	2	Plate ASM
30	100-4552	1	Plate - Wear
31	3256-12	5	Washer-Flat
32	104-0397	8	Plug - Plastic

Electric Schematic

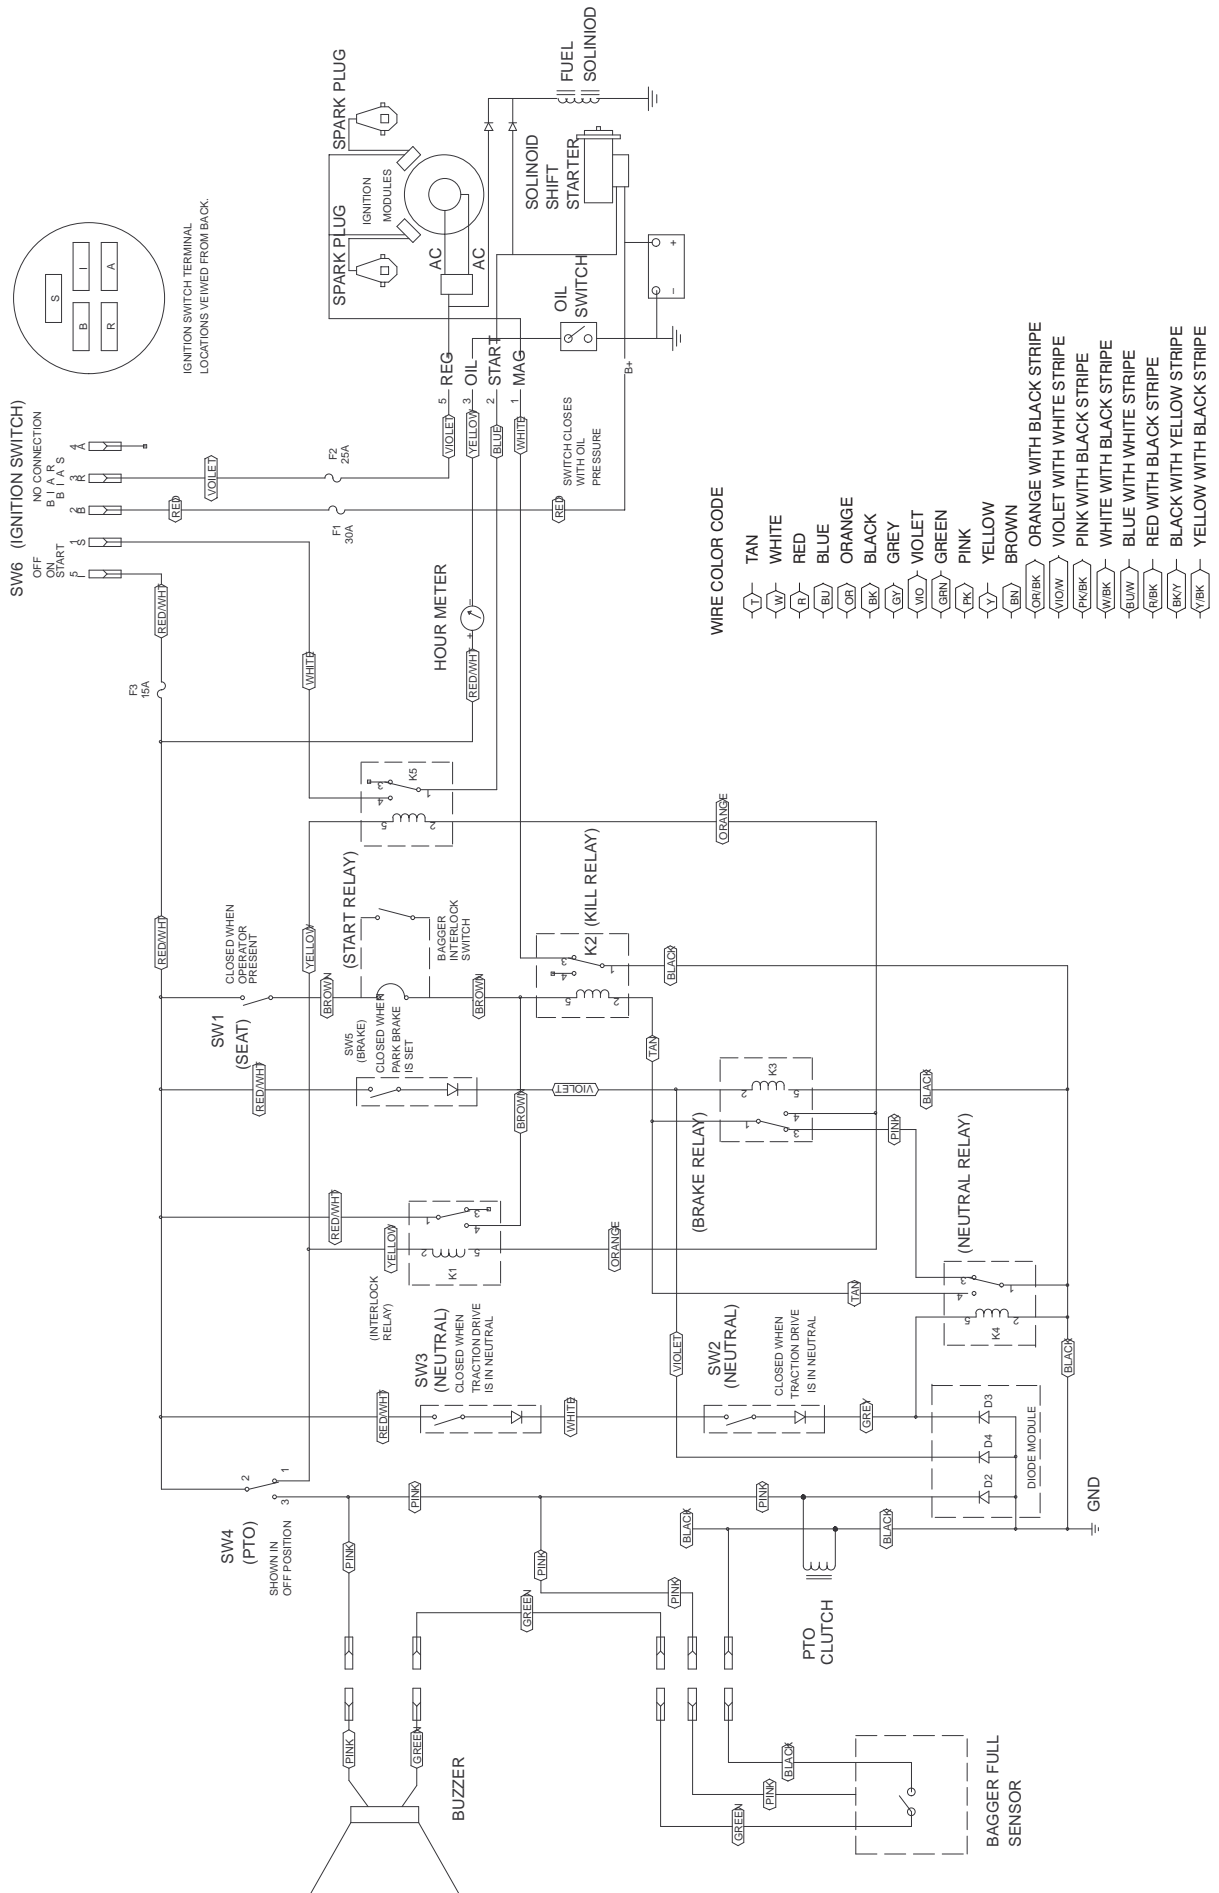

Hydraulic Schematic

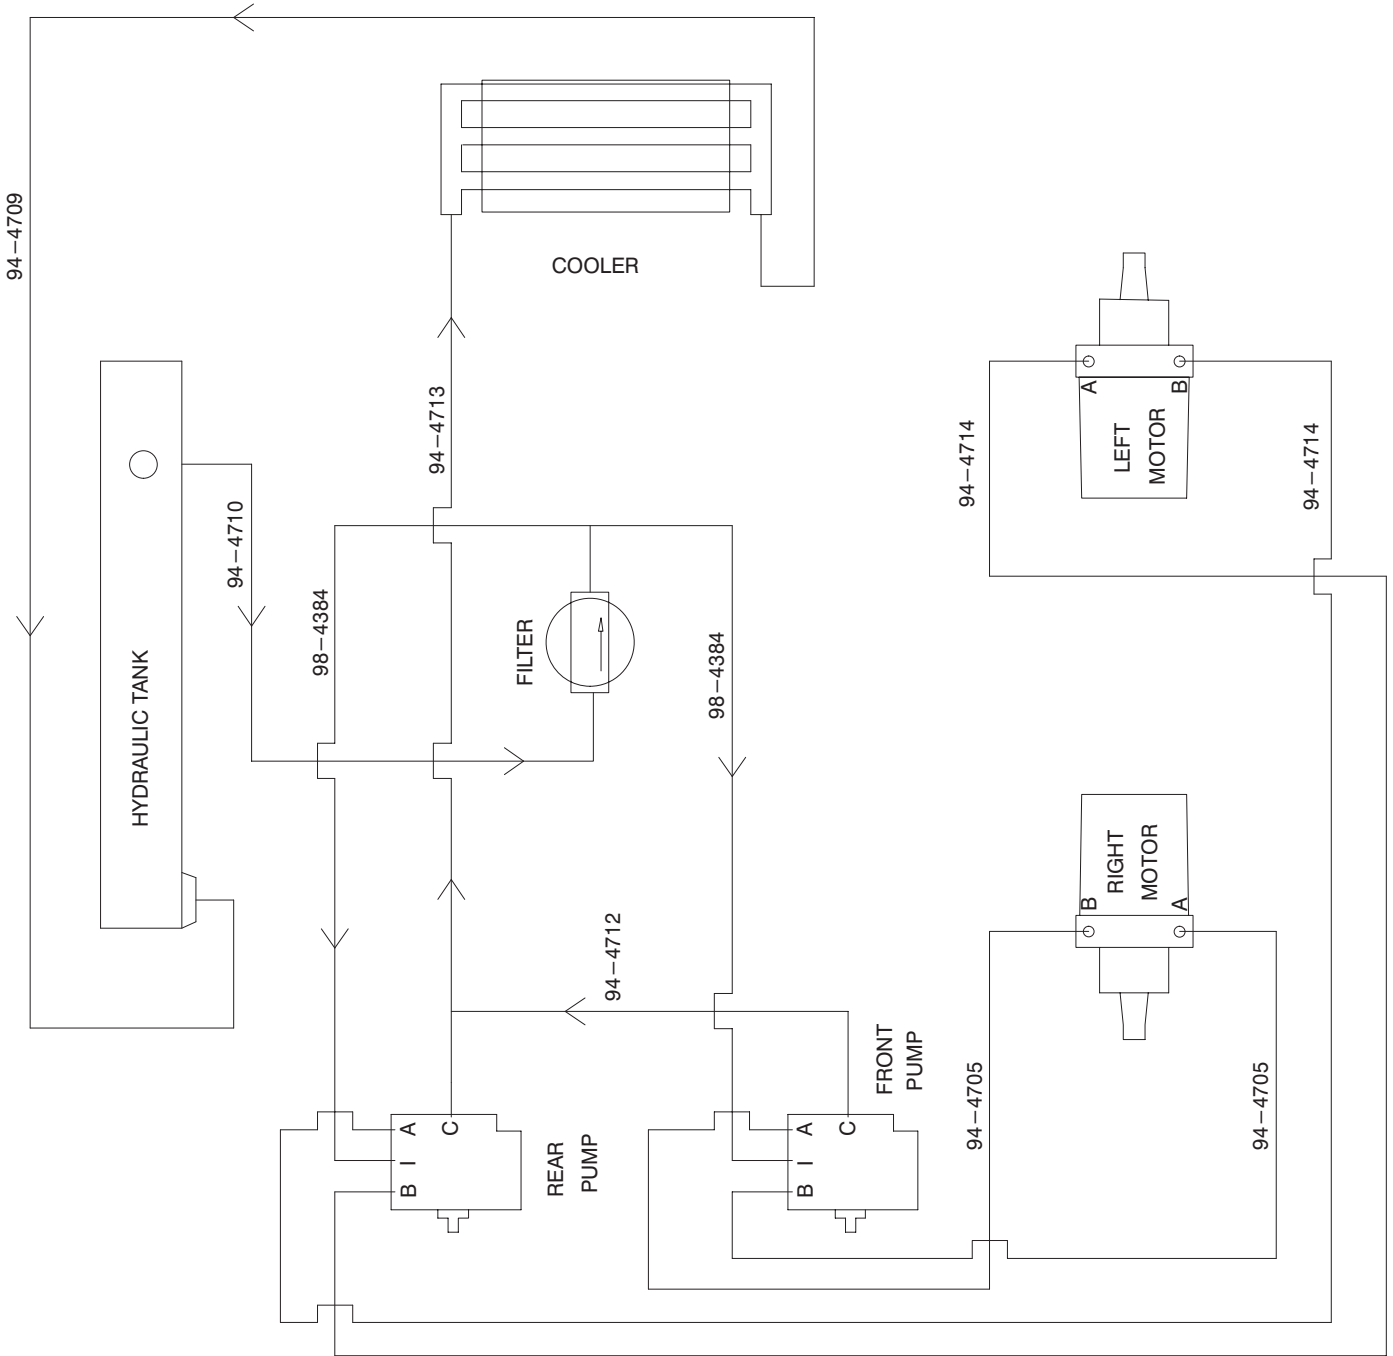

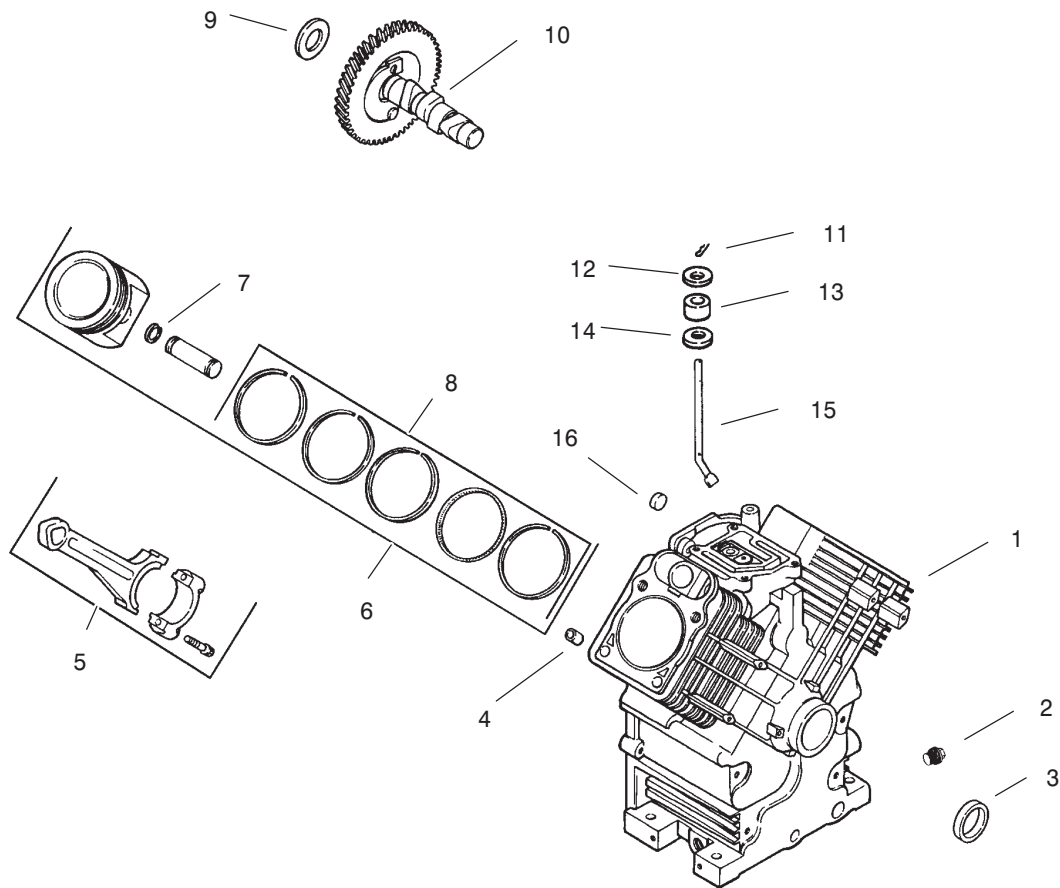


Sheet No.: 3

Crankcase (Kohler CH25S PS68656)

Ref. No.	Description	Part No.
1	Kit, service crankcase (Incl. Ref. 2, 4, 16 & 24 113 56)	24 561 33-S
2	Plug, pipe 3/8 (2)	X -75-10-S
3	Seal, oil front	24 032 01-S
4	Pin, dowel locating (6)	12 380 17-S
5	Connecting Rod (Std.) (2)	24 067 13-S
	Connecting Rod (.25) (2)	24 067 14-S
6	Piston w/Ring Set (Std.) (2) (Includes 7,8)	24 874 06-S
7	Retainer, piston pin (4)	24 018 01-S
8	Ring Set (Std.)	24 108 04-S
9	Shim, camshaft (AR) red	12 422 09-S
	Shim, camshaft (AR) black	12 422 13-S
	Shim, camshaft (AR) white	12 422 07-S
	Shim, camshaft (AR) blue	12 422 08-S
	Shim, camshaft - yellow	12 422 10-S
	Shim, camshaft (AR) green	12 422 11-S
	Shim, camshaft (AR) gray	12 422 12-S
10	Camshaft	24 012 10-S
11	Pin, hitch	12 380 04-S
12	Washer, plain 6 mm	M-631005-S
13	Seal, governor cross shaft	12 032 01-S
14	Washer, plain 1/4	X-25-102-S
15	Shaft, governor cross	24 144 01-S
16	Plug, cup	52 139 09-S

Ref. No.	Description	Part No.
	NOT ILLUSTRATED Decal	24 113 56-S

Obtain Parts from Kohler

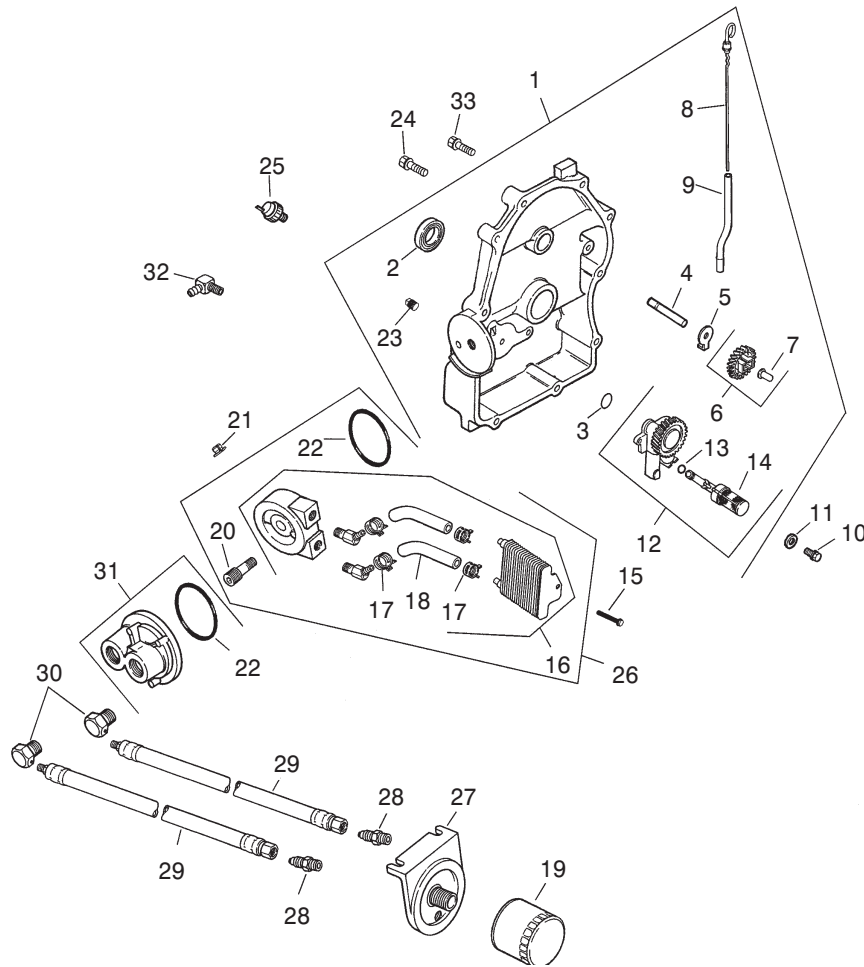


Sheet No.: 4

Oil Pan / Lubrication (Kohler CH25S PS68656)

Ref. No.	Description	Part No.	Ref. No.	Description	Part No.
1	Kit, closure plate (incl. 2-9 & 13, 14 & 23)	24 009 82-S	22	O-Ring	24 153 13-S
2	Seal, oil (PTO end)	52 032 08-S	23	Plug, allen hd. 1/8 pipe	X-75-23-S
3	O-Ring	24 153 08-S	24	Screw, hex. flange M8x1.25x45 (9)	24 086 16-S
4	Shaft, governor gear	12 144 02-S	25	Switch, oil pressure	24 099 03-S
5	Tab, locking	52 448 02-S	26	Kit, alum base oil cooler (incl. 16-18, 20 & 22)	54 755 21-S
6	Kit, governor gear w/pin (Includes 7)	24 043 12-S	27	Adapter, remote oil filter	25 029 01-S
7	Pin, governor regulating	12 380 01-S	28	Nipple, hex (2)	52 136 02-S
8	Dipstick	24 038 06-S	29	Hose, oil (2)	52 326 11-S
9	Tube, dipstick	24 123 08-S	30	Reducing, fitting (2)	24 294 04-S
10	Screw, hex. flange M6x1.0x25 (2)	M-645025-S	31	Adapter, oil filter (incl. 22) (2)	24 029 02-S
11	Washer, plain 6 mm (2)	M-631005-S	32	Connector	25 155 02-S
12	Oil pump assembly (Includes 13-14)	24 393 10-S	33	Screw, hex. flange M8x1.25x45	24 086 17-S
13	O-Ring, oil pick-up	24 153 01-S		NOT ILLUSTRATED	
14	Pick-up, oil	24 381 04-S		Decal, oil cooler	24 113 25-S
15	Screw, hex. cap M6x1.7x18 (2)	24 086 12-S			
16	Cooler, oil (Includes 17,18)	24 594 09-S			
17	Clamp, hose (4)	24 237 03-S			
18	Hose, oil (2)	24 326 15-S			
19	Filter, oil	52 050 02-S			
20	Nipple, oil filter	24 136 03-S			
21	Nut, plastic (2)	24 100 01-S			

Obtain Parts from Kohler

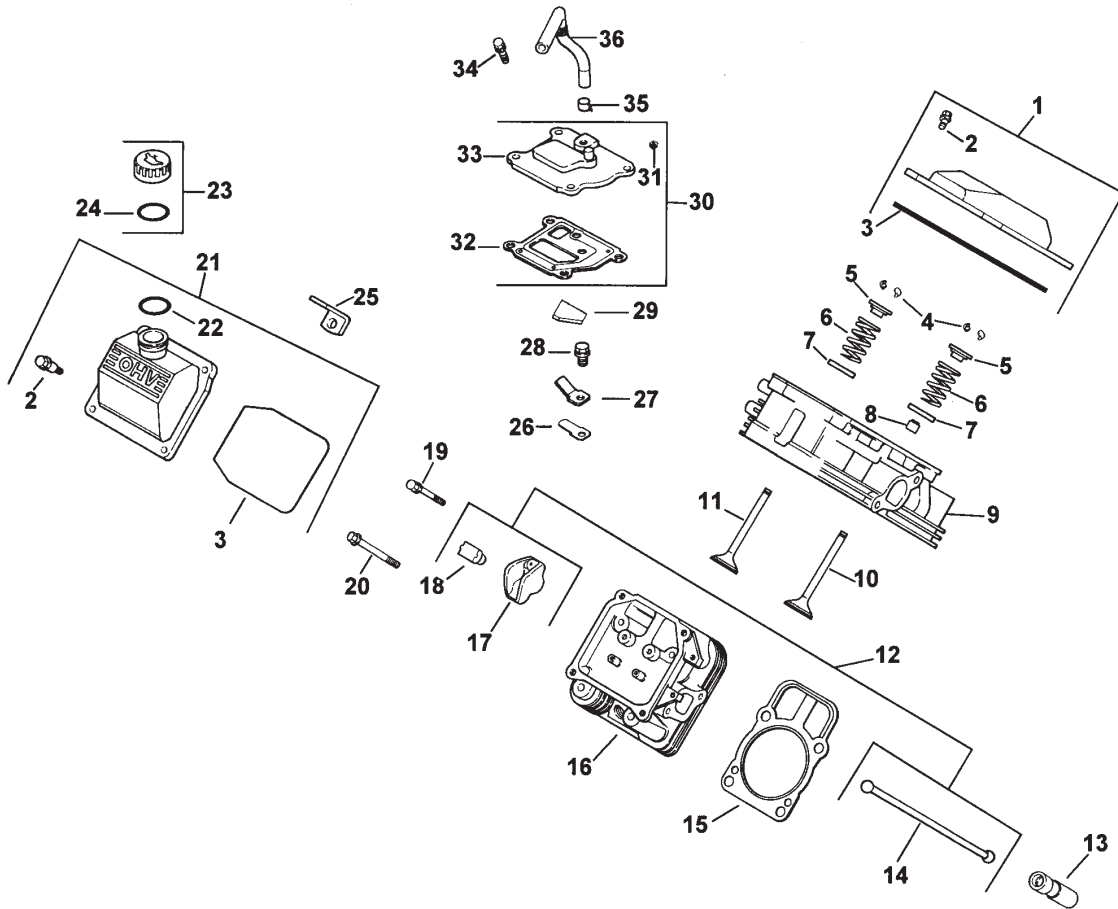


Sheet No.: 5

Head / Valve / Breather (Kohler CH25S PS68656)

Ref. No.	Description	Part No.	Ref. No.	Description	Part No.
1	Kit, valve cover – plain (Includes 2,3)	24 755 74-S	20	Stud, M10x1.5x90 (8)	24 072 09-S
2	Screw, shoulder (4)	24 086 32-S	21	Kit, valve cover – oil fill (Includes 2,3,22)	24 755 75-S
3	O-Ring	24 153 16-S	22	O-Ring	24 153 09-S
4	Kit, retainer (4)	12 755 03-S	23	Kit, oil fill cap (Includes 24)	24 755 46-S
5	Cap, valve spring (4)	12 173 01-S	24	O-Ring, oil fill cap	12 153 03-S
6	Spring, valve (4)	24 089 02-S	25	Strap, lifting	24 445 01-S
7	Retainer, spring (4)	235011-S	26	Reed, breather	24 402 03-S
8	Seal, valve stem (2)	24 032 05-S	27	Retainer, breather reed	12 018 01-S
9	Head assembly, #1 cylinder	24 318 13-S	28	Screw, hex. flange M5x0.8x10	M-545010-S
10	Valve, intake (Std.) (2)	24 017 01-S	29	Filter, breather	24 050 01-S
	Valve, intake (.25) (2)	24 017 02-S	30	Kit, breather (Includes 31-33)	24 033 01-S
11	Valve, exhaust (Std.) (2)	24 016 01-S	31	Plug, allen head 1/8 pipe	X-75-23-S
	Valve, exhaust (.25) (2)	24 016 02-S	32	Gasket, breather	24 041 23-S
12	Kit, valve train (Includes 14,17,18)	24 755 66-S	33	Cover, breather	24 096 02-S
13	Lifter, valve (4)	12 351 02-S	34	Screw, hex. flange M6x1.0x20 (4)	M-645020-S
14	Rod, push (4)	24 411 05-S	35	Clamp, breather	X-426-9-S
15	Gasket, cylinder head (2)	24 041 16-S	36	Hose, breather	24 326 06-S
16	Head assembly, #2 cylinder	24 318 14-S	37	Washer, flat (8)	24 468 18-S
17	Arm, rocker (4)	25 186 01-S	38	Nut, hex. flange M8x1.25 (8)	M-841080-S
18	Pivot, rocker arm (4)	24 599 01-S			
19	Screw, hex. flange M6x1.0x34 (4)	M-640034-S			

Obtain Parts from Kohler

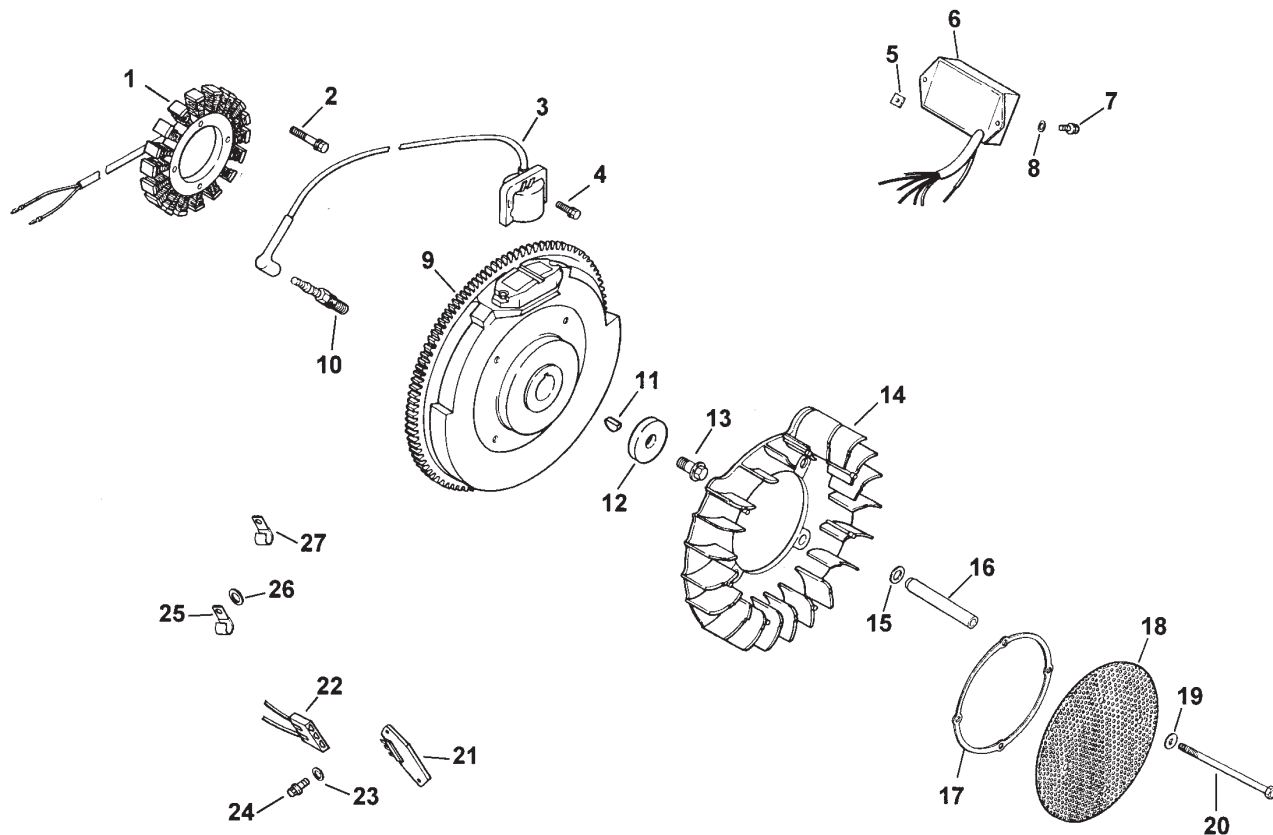


Sheet No.: 6

Ignition / Electrical (Kohler CH25S PS68656)

Ref. No.	Description	Part No.	Ref. No.	Description	Part No.
1	Kit, 15 amp stator (Incl. 28)	54 755 09-S	19	Washer, plain 1/4" (4)	X-25-53-S
2	Screw, hex. cap M5x0.8x25 (2)	M-548025-S	20	Screw, hex. head. M6x1.0x100 (4)	M-603100-S
3	Module, ignition (2)	24 584 15-S	21	Rectifier-regulator 15 amp	25 403 03-S
4	Screw, hex. socket hd. M5x0.8x25 (4)	M-561025-S	22	Connector	236602-S
5	Nut, plastic (2)	24 100 02-S	23	Washer, plain 3/16 (2)	X-25-92-S
6	Module, speed advance	24 584 09-S	24	Screw, phillips hd. 11-16x7/8 (2)	24 086 18-S
7	Screw, phillips head 11-16x1/2" (2)	24 086 41-S	25	Clip, cable	47 154 01-S
8	Washer, lock 1/4"	X-22-11-S	26	Washer, plain 1/4	X-25-63-S
9	Flywheel	24 025 03-S	27	Clip, cable	48 154 02-S
10	Spark Plug (2)	12 132 02-S	28	Bracket, stator wire	24 126 71-S
11	Key	X-42-15-S	29	Kit, chopper screen (incl. 15-19)	24 755 79-S
12	Washer, plain 3/8.	12 468 03-S		NOT ILLUSTRATED	
13	Screw, hex. flange M10x1.5x46	12 086 14-S		Harness, wiring	24 176 16-S
14	Fan	24 157 03-S		Lead, black (5"-12 gauge - insulated grip barrel eyelet terminals)	24 518 12-S
15	Washer, spring 10 mm (4)	24 468 11-S		Screw, set (adjusts grass scraper blade)	25 086 43-S
16	Spacer, grass screen (4)	24 112 14-S			
17	Ring, support	24 141 06-S			
18	Screen, grass	24 162 25-S			

Obtain Parts from Kohler

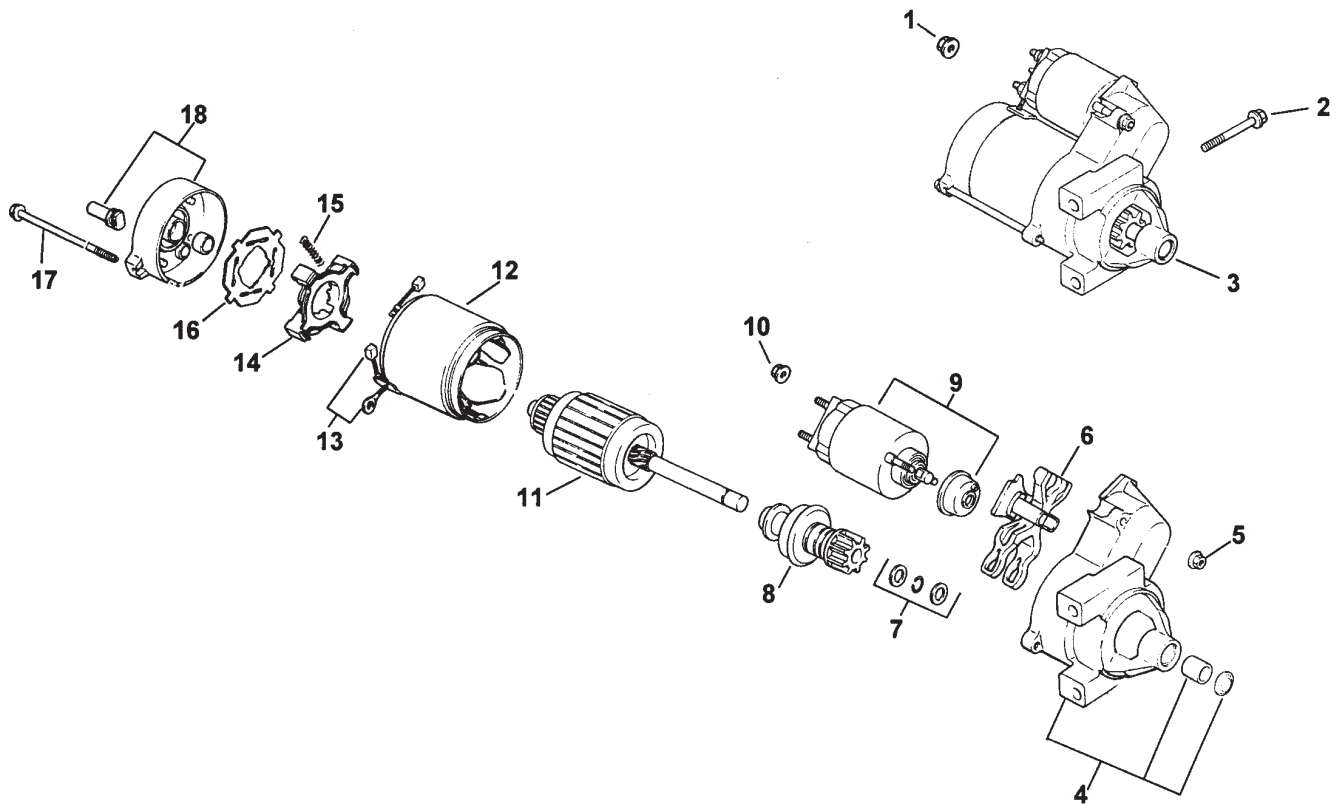


Sheet No.: 8

Starting System (Kohler CH25S PS68656)

Ref. No.	Description	Part No.	Ref. No.	Description	Part No.
1	Nut, hex flange M8x1.25	M-841080-S			
2	Screw, hex. flange M8x1.25x80 (2)	M-839080-S			
3	Starter, solenoid shift (Includes 4-18)	24 098 01-S			
4	Drive, end cap	24 081 04-S			
5	Nut, starter (2)	52 100 10-S			
6	Lever, starter drive	12 090 10-S			
7	Kit, starter repair	24 755 84-S			
8	Drive, pinion	12 239 01-S			
9	Solenoid	52 435 02-S			
10	Nut, starter	52 100 09-S			
11	Armature, starter	12 170 04-S			
12	Frame	12 471 01-S			
13	Kit, brush & spring (Includes 15)	52 221 01-S			
14	Holder, brush	52 323 03-S			
15	Spring, brush (4)	52 089 09-S			
16	Insulator	52 168 01-S			
17	Bolt, thru M5x0.8x99 (2)	52 211 05-S			
18	Commutator, end cap	24 301 01-S			

Obtain Parts from Kohler

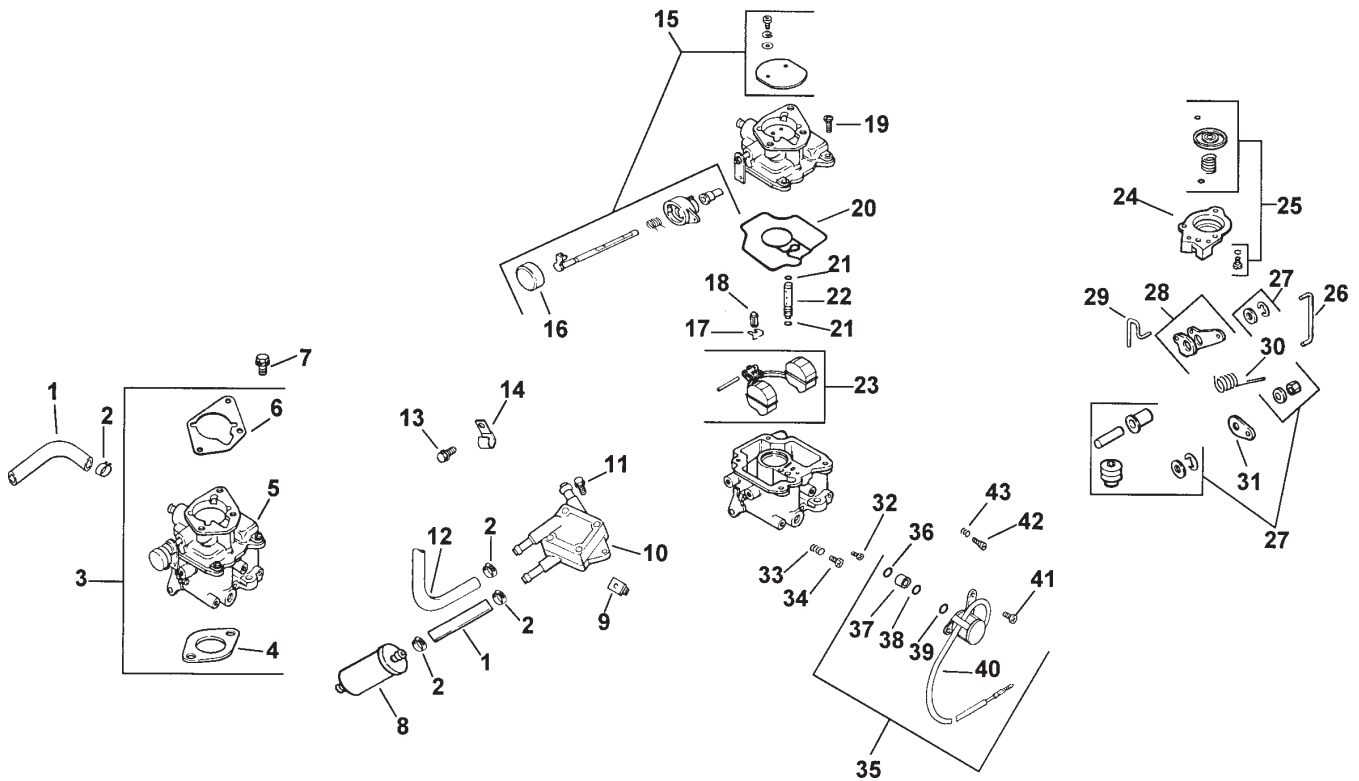


Sheet No.: 9

Fuel System (Kohler CH25S PS68656)

Ref. No.	Description	Part No.
1	Line, fuel 9" (2)	25 353 10
2	Clamp, hose (6)	X-426-9
3	Kit, carburetor w/gasket (Includes 4-6)	24 853 34
4	Gasket, air cleaner	24 041 06
5	Carburetor assembly (Includes 15-43 and carburetor repair kit (For information only not available separately)	24 757 03)
6	Gasket, carburetor	24 041 17
7	Screw, hex. flange M6x1.0x30 (2)	M-0651030
8	Filter, fuel	24 050 02
9	Nut, plastic (2)	24 100 01
10	Pump, fuel - pulse	24 393 04
11	Screw, hex. cap 18 mm (2)	24 086 12
12	Line, fuel 15-1/2"	24 353 02
13	Screw, hex. flange M6x1.0x10	M-0650012
14	Clip, cable	24 154 01
15	Kit, choke repair (Includes 16)	24 757 07
16	Cap, choke lever	24 173 02
17	Clip, inlet needle valve	24 154 01
18	Valve, inlet needle	24 462 01

Ref. No.	Description	Part No.
19	Screw, carburetor body (4)	24 086 09
20	Gasket, carburetor body	24 041 09
21	O-Ring, slow jet (2)	24 153 02
22	Jet, slow	24 337 29
23	Kit, float repair	24 757 02
24	Housing, pump	24 081 05
25	Kit, repair - accelerator pump seal & bushing)	24 757 08
26	Linkage, rod	24 079 07
27	Kit, repair - accelerator pump diaphragm	24 757 09
28	Lever, linkage	24 090 16
29	Linkage, rod	24 079 06
30	Spring, linkage	24 089 27
31	Lever, linkage	24 090 15
32	Jet, main	24 337 30
33	Spring, idle adjust	24 089 11
34	Needle, idle adjust	24 368 01
35	Kit, solenoid assembly (Includes 36-41)	24 757 01
36	O-Ring, solenoid	24 153 06
37	Seat, solenoid	24 521 01
38	O-Ring, solenoid	24 153 05
39	O-Ring, solenoid	24 153 04
40	Solenoid	24 435 01

Obtain Parts from Kohler

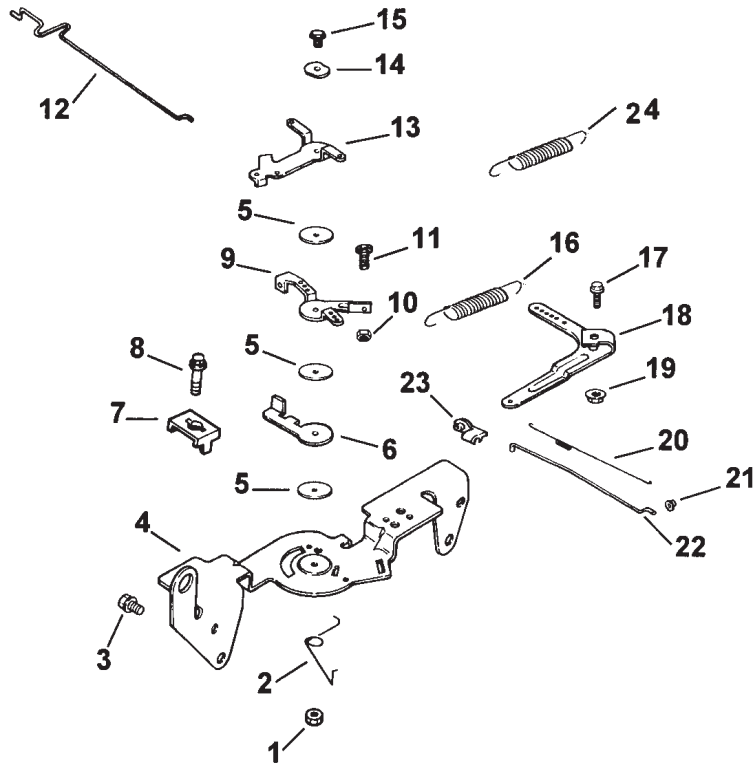


Sheet No.: 10

Engine Controls (Kohler CH25S PS68656)

Ref. No.	Description	Part No.	Ref. No.	Description	Part No.
1	Nut, hex. lock M5x0.8	M-547050-S	22	Linkage, throttle	24 079 01-S
2	Spring, choke return	24 089 03-S	23	Bushing, throttle linkage	25 158 11-S
3	Screw, hex. flange M6x1.0x16 (4)	M-645016-S	24	Spring, governor	24 089 51-S
4	Bracket, control	24 126 56-S			
5	Washer, plain 1/4 (3)	24 468 01-S			
6	Lever, throttle actuator	24 090 07-S			
7	Clamp, cable (2)	12 237 01-S			
8	Screw hex. flange M5x0.8x16 (3)	M-545016-S			
9	Lever, throttle control	24 090 03-S			
10	Nut, hex. flange M4x0.7	M-446030-S			
11	Screw, hex. flange M4x0.7x30	M-401030-S			
12	Linkage, choke	24 079 02-S			
13	Lever, choke	24 090 05-S			
14	Washer, spring 1/4	41 468 03-S			
15	Screw, hex. flange M5x0.8x20	M-545020-S			
16	Spring, governor	24 089 15-S			
17	Screw, hex. flange M6x1.0x25	SM-642025-S			
18	Lever, governor	24 090 14-S			
19	Nut, hex. flange M6x1.0	M-641060-S			
20	Spring, linkage	24 089 01-S			
21	Bushing, linkage retaining	25 158 08-S			

Obtain Parts from Kohler

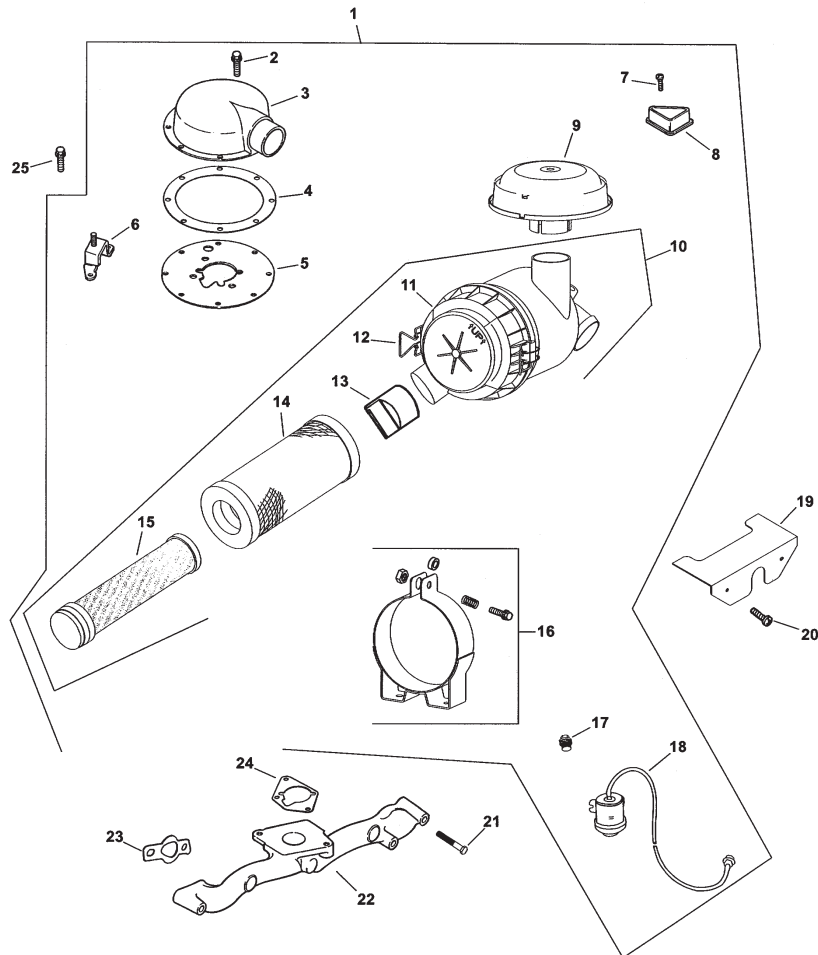

Sheet No.: 11

Air Intake / Filtration (Kohler CH25S PS68656)

Ref. No.	Description	Part No.	Ref. No.	Description	Part No.
1	Kit, heavy duty air cleaner (Includes 2-18)	24 743 26-S	21	Screw, hex. flange M6x1.0x55 (4)	M-651055-S
2	Screw, hex. flange M6x1.0x16 (7)	M-645016-S	22	Manifold, intake	24 164 14-S
3	Adapter, air intake	24 029 28-S	23	Gasket, intake manifold (2)	24 041 01-S
4	Gasket, air cleaner adapter	24 041 38-S	24	Gasket, air cleaner base	24 041 06-S
5	Plate, adapter	24 029 35-S	25	Screw, hex. flange M6x1.0x16 (3)	M-639016-S
6	Bracket, air cleaner base	24 126 21-S		NOT ILLUSTRATED	
7	Screw, slotted hex. head (2)	X-67-3-S		Decal, air cleaner	25 113 27-S
8	Cover, blower housing (2)	24 096 17-S			
9	Hood, air cleaner (5-1/4")	25 324 02-S			
10	Cleaner assembly, air (incl. 11-15)	25 048 07-S			
11	Cover assembly	25 096 06-S			
12	Clip (2)	25 154 05-S			
13	Valve, dust ejector	24 462 07-S			
14	Element, air filter-primary	25 083 01-S			
15	Element, air filter-safety	25 083 04-S			
16	Bracket assembly, air cleaner	25 126 02-S			
17	Plug, pipe	25 139 20-S			
18	Kit, air filter gauge	25 755 24-S			
19	Shield, debris	24 314 25-S			
20	Screw, phillips head 11-16x3/4" (2)	24 086 06-S			

Obtain Parts from Kohler

