




Z-SPRAY®

Model No. ZSL3620—Serial No. 408644346 and Up

Picture below may not reflect actual product.

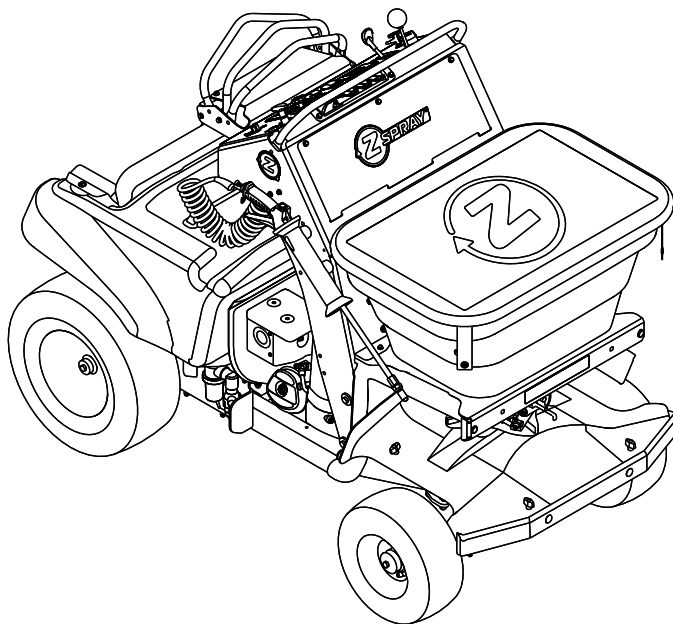

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame Assembly	4
Control Tower W/Decals Assembly	6
Knee Pad Assembly	8
Steering Assembly	10
Steering Linkage Assembly No. 126-7185	12
Spray System Assembly	14
Sprayer Tank Assembly	16
Strainer Assembly	18
Control Valve Manifold and Hose Assembly	20
Control Valve Manifold Assembly No. 135-6362	22
Left Nozzle Assembly No. 126-3667	24
Right Nozzle Assembly No. 126-3669	26
Center Nozzle Assembly No. 126-3668	28
Spreader Assembly	30
Spreader Hopper Assembly	32
Side Deflector Assembly	34
Engine Assembly	36
Ground Drive Assembly	38
Transaxle Cover Assembly No. 126-1462	40
Electrical Assembly	42

Main Frame Assembly

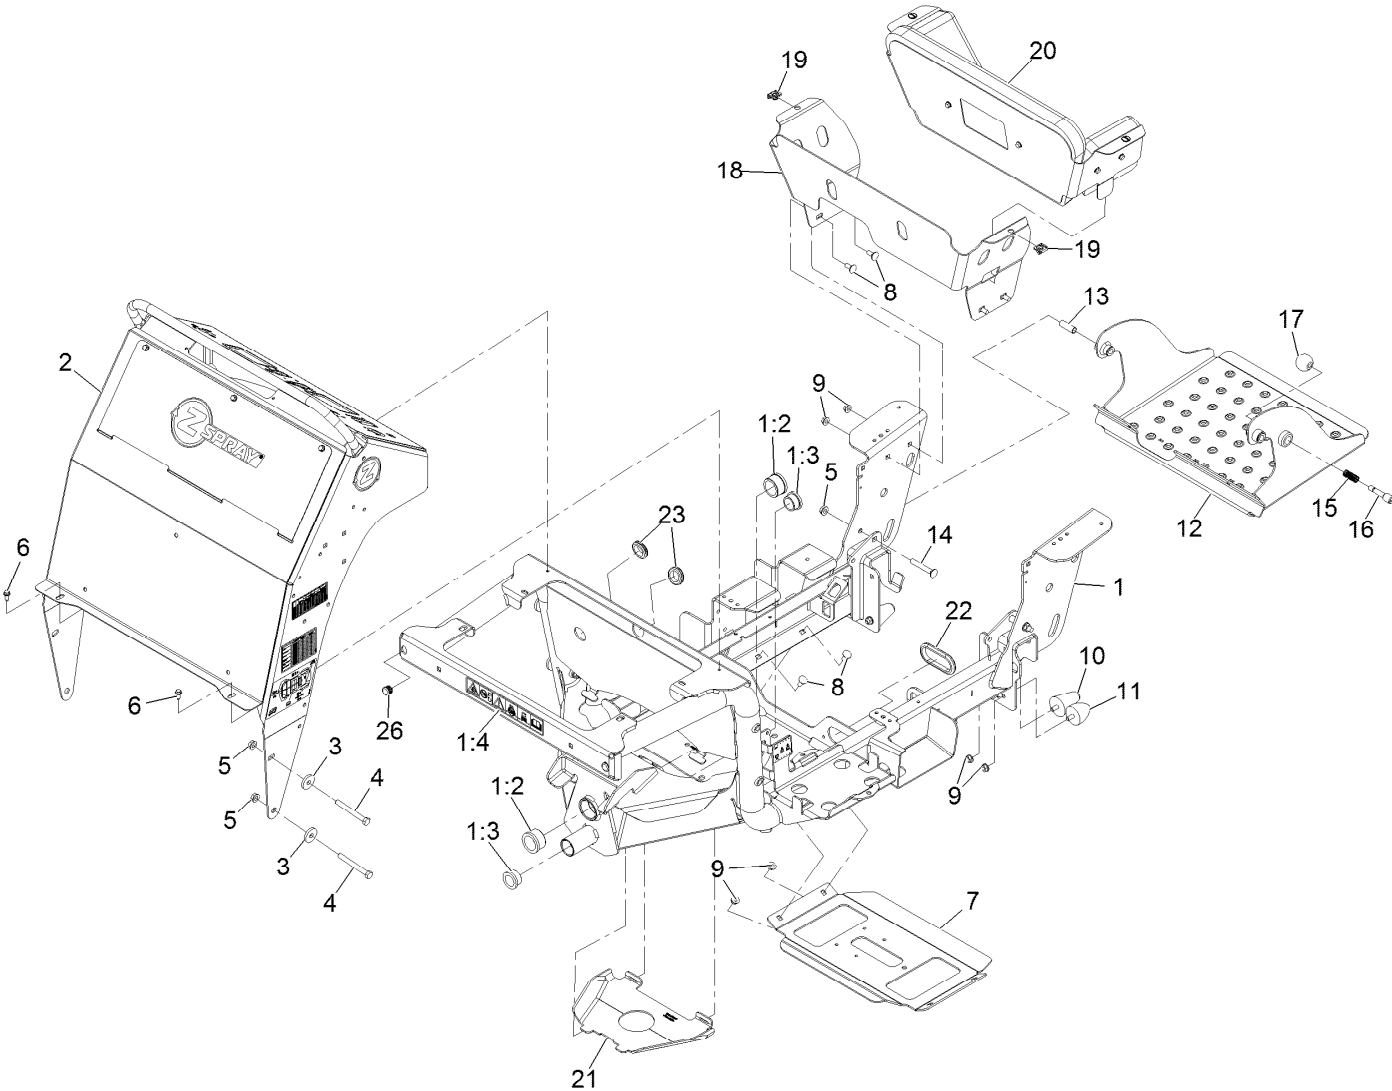


Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-2788	1	Frame ASM	12	126-0435	1	Operator Platform ASM
1:2	126-3008	2	Bearing-Flanged	13	126-0434	2	Bushing-Pivot, Platform
1:3	126-3002	2	Bearing-Flanged	14	126-0702	2	Screw-CARR
1:4	126-4994	1	Decal-Down, Tie	15	114-5348	1	Spring
2	135-6467	1	Control Tower ASM	16	119-8650	1	Pin-Latch
3	126-3875	4	Washer	17	1-603175	1	Knob-Ball
4	126-2661	4	Screw-HH	18	126-1234-03	1	Mount-Pad, Knee
5	135-2882	6	Nut-HF	19	119-1730	2	Receptacle-Clip, Mini
6	32144-10	2	Screw-HWH 1/4-20 X .62	20		1	ASM-Pad ●
7	126-1415	1	Guard-Lower	21	126-2567	1	Shield-Dust
8	126-0695	8	Screw-CARR	22	237-164	2	Grommet
9	135-2881	12	Nut-HF	23	240-5	2	Grommet
10	114-1925	2	Bumper-Rubber	26	126-5147	2	Plug-Tube
11	114-1926	2	Bumper-Rubber				

● Not serviced separately


Control Tower W/Decals Assembly

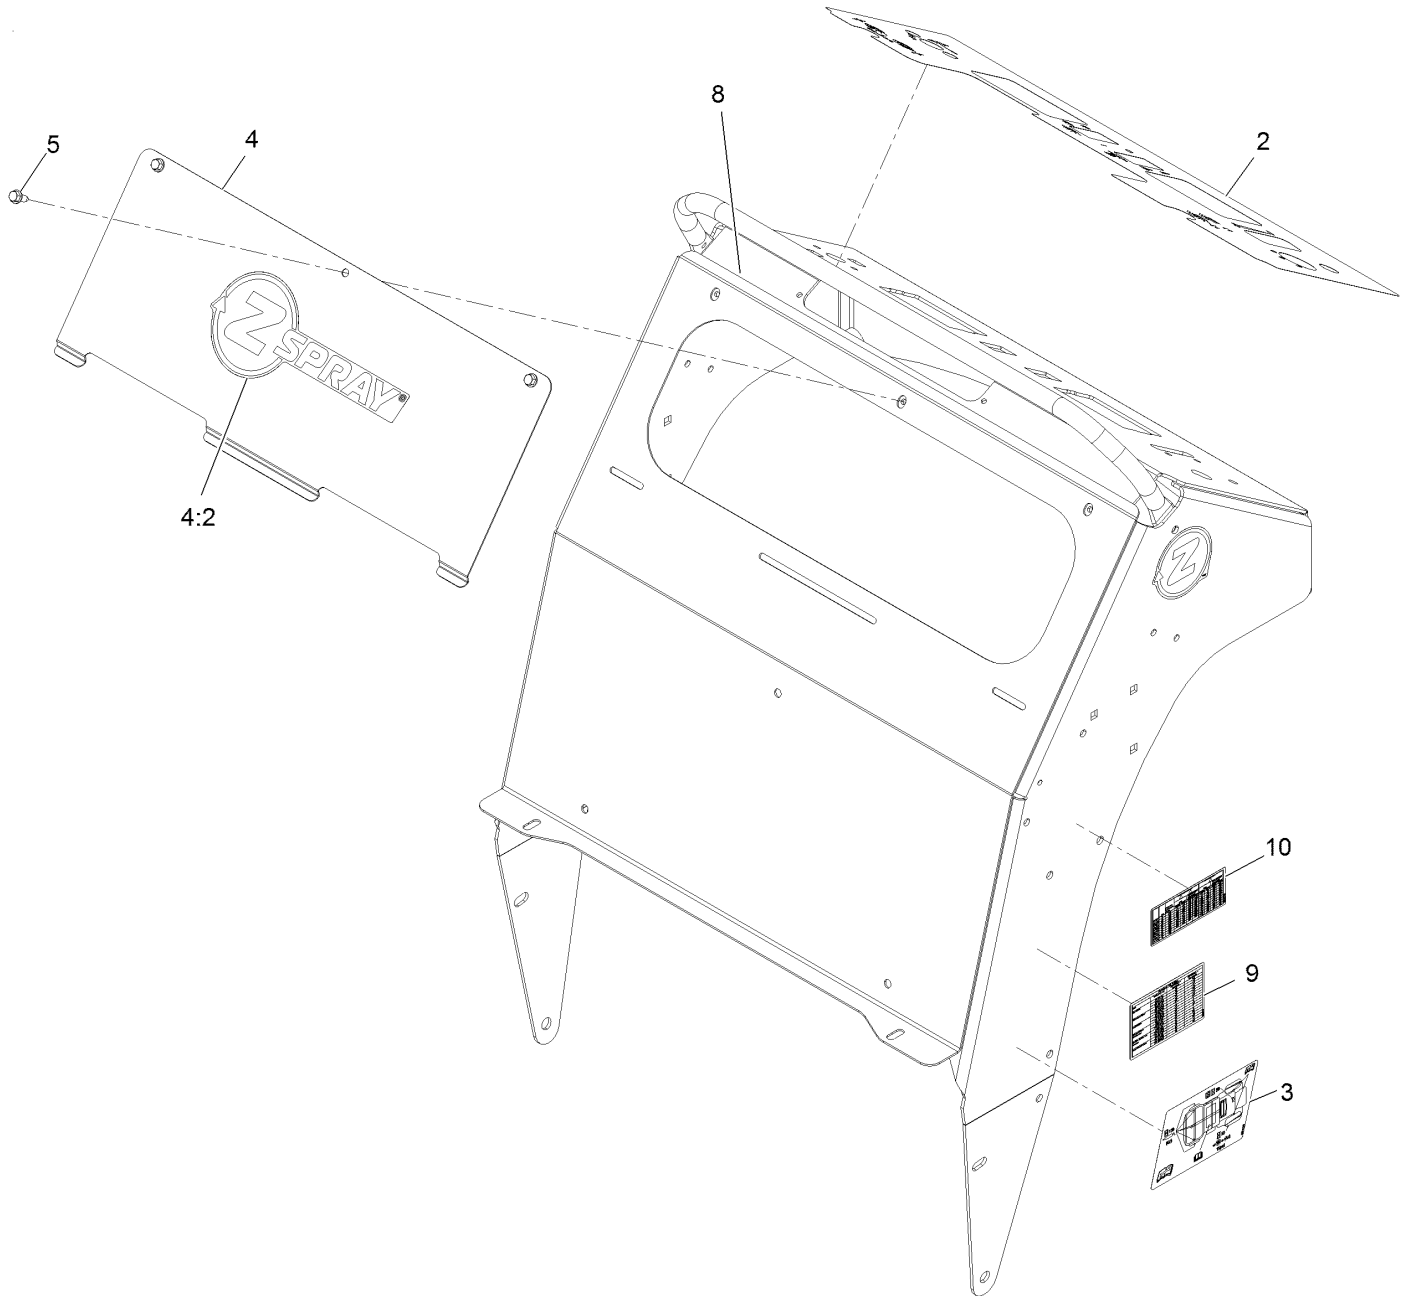

Control Tower W/Decals Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	135-7247	1	Decal-Control	5	32144-10	3	Screw-HWH 1/4-20 X .62
3	126-5186	1	Decal-Service Aid	8	142-3051	2	Decal-Z-Logo
4	142-2758	1	Access Panel W/ Decal	9	142-2770	1	Decal-Spread Chart
4:2	142-3053	1	Decal-Z-Spray	10	142-2769	1	Decal-Spray Chart


Knee Pad Assembly

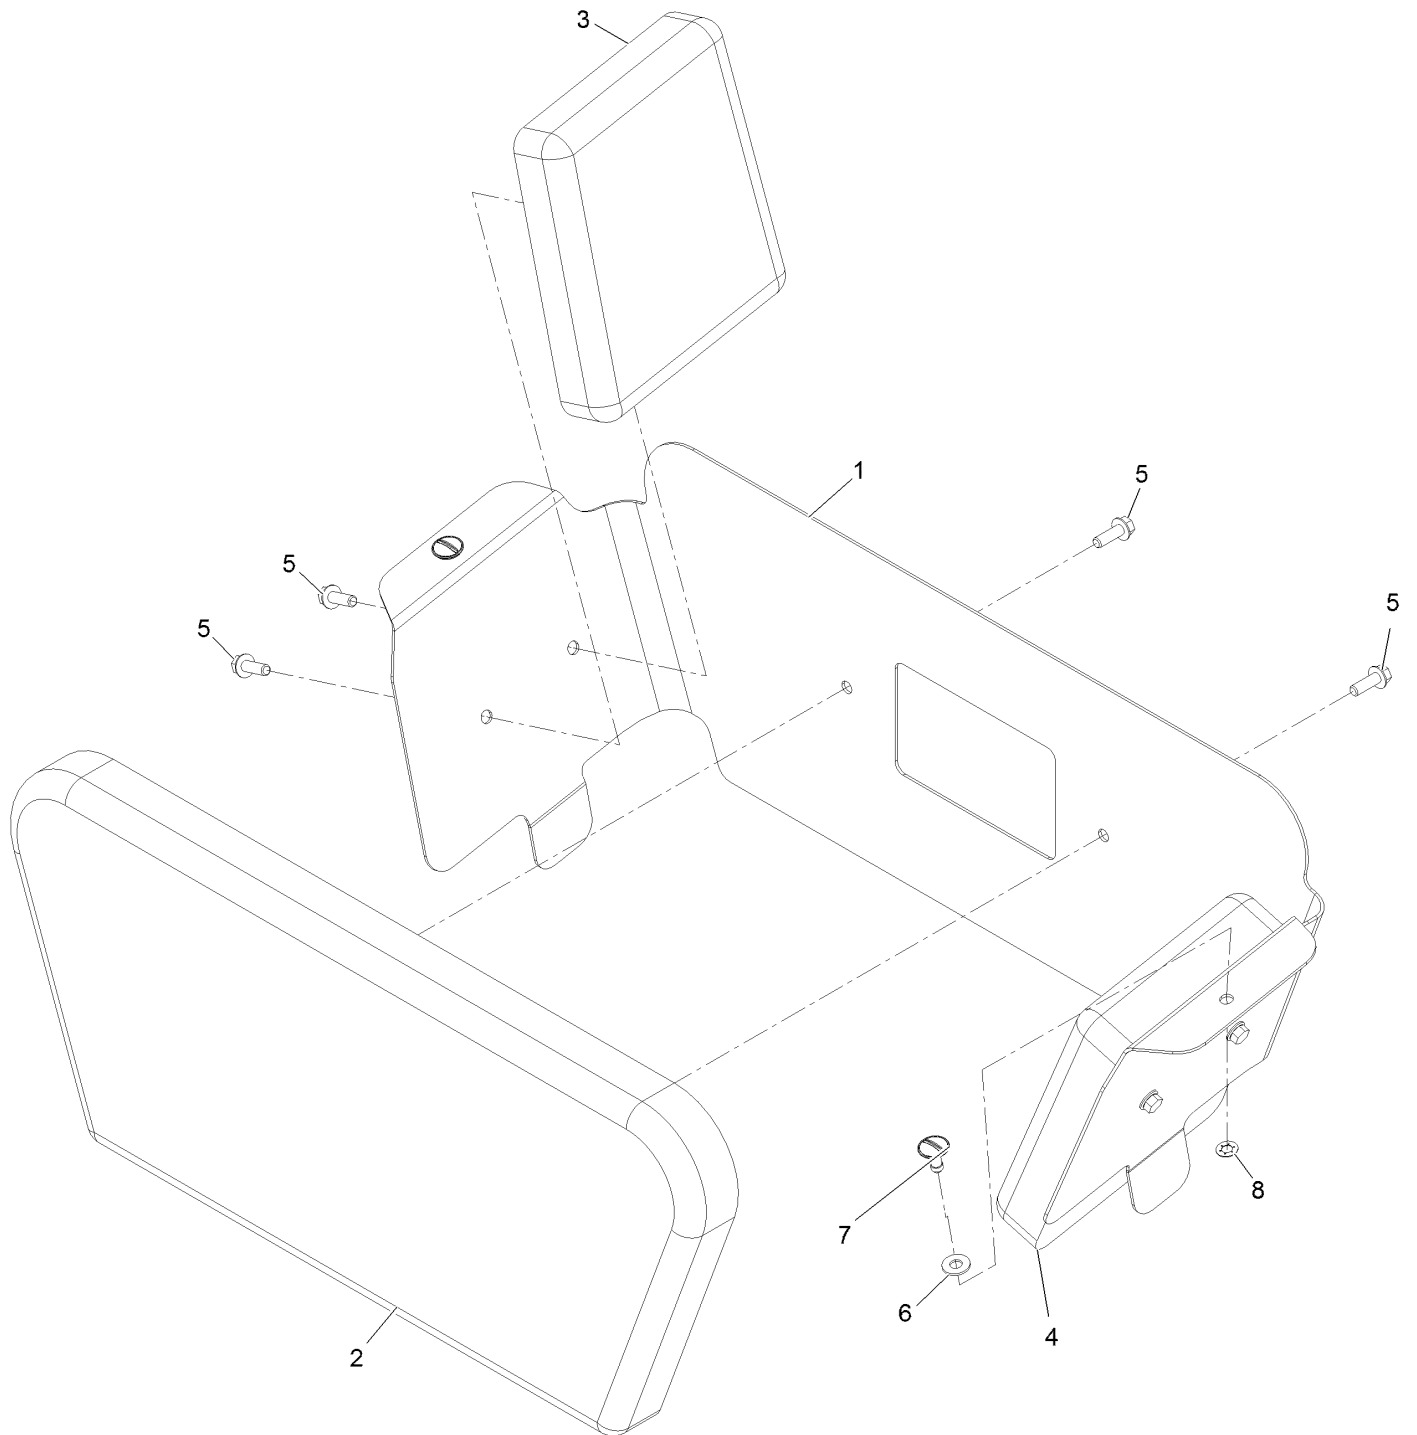

Knee Pad Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1244-03	1	Bracket-Pad, Knee	6	360-0140	2	Washer-Flat
2	142-2751	1	Pad-Knee, Center	7	119-1728	2	Stud-1/4 Turn
3	126-1250	1	Pad-Knee, LH Side	8	119-1729	2	Retainer-Stud
4	126-2773	1	Pad-Knee, RH Side				
5	117-8304	6	Screw-Hex Flange 1/4-20 X 3/4				

Steering Assembly

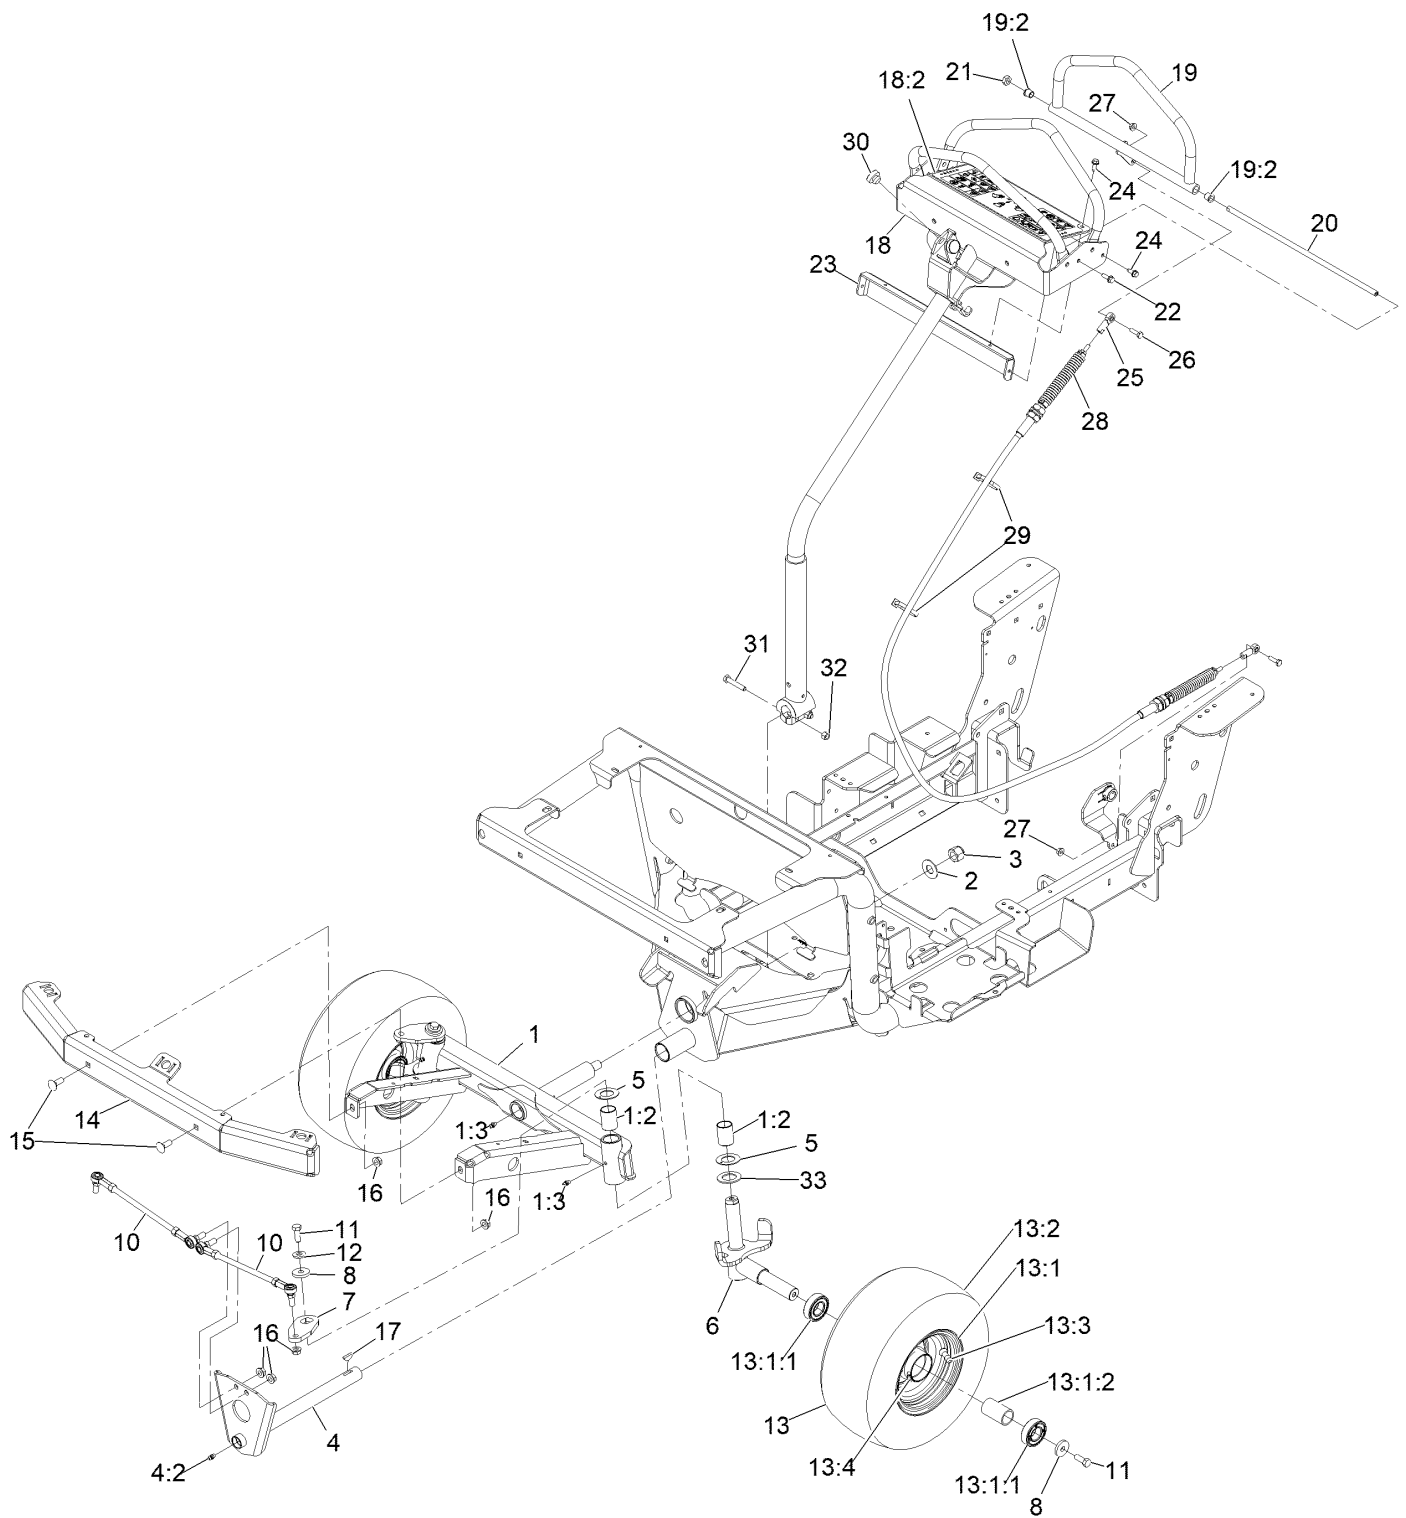


Steering Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7045	1	Front Axle ASM	15	126-0980	2	Bolt-Carriage 3/8-16 X 1 SS
1:2	126-7048	4	Bearing-Sleeve	16	135-2882	6	Nut-HF
1:3	126-1375	3	Zerk-Grease	17	3257-7	1	Key-Woodruff
2	126-0656	1	Washer-Flat	18	135-3155	1	Motion Handle ASM
3	126-3841	1	Nut-Hex Nyloc 5/8-11 SS	18:2	135-2844	1	Decal-Warning
4	135-3156	1	Steering Shaft ASM	19	142-2735	1	Motion Handle ASM
4:2	126-1375	1	Zerk-Grease	19:2	103-9928	2	Bearing
5	126-7044	4	Washer-Thrust	20	126-0496	1	Shaft-Pivot, Speed Control
6	126-6733	2	Front Axle ASM	21	116-4198	1	Spacer-Shaft, Drive Lever
7	126-7069	2	Arm-Steering	22	117-8304	2	Screw-Hex Flange 1/4-20 X 3/4
8	126-3875	4	Washer	23	126-1604-03	1	Panel-Rear, Steering
10	126-7185	2	Steering Linkage ASM	24	32144-10	4	Screw-HWH 1/4-20 X .62
11	135-1711	4	Screw-HH	25	2411-41	2	Rod End-Ball Joint
12	98-5975	2	Washer-Spring Disc 3/8	26	126-0498	2	Screw-HH 1/4-20 X 7/8 SS
13	142-2736	2	Wheel And Tire ASM	27	135-2880	2	Nut-HF
13:1		1	Wheel ASM ●	28	126-2169	1	Cable-Motion
13:1:1	116-0720	2	Bearing-Ball	29	3290-378	2	Tie-Cable
13:1:2	126-7260	1	Spacer	30	104-1412	2	Bumper-Rubber
13:2	126-1509	1	Tire	31	3210-9	2	Screw-HH
13:3	232-27	1	Stem-Valve	32	32152-5	2	Nut-Hex 5/16-24
13:4	302-62	1	Fitting-Grease	33	126-7050	2	Spacer-Relief
14	116-9789	1	Bumper-Front				

● Not serviced separately

Steering Linkage Assembly No. 126-7185

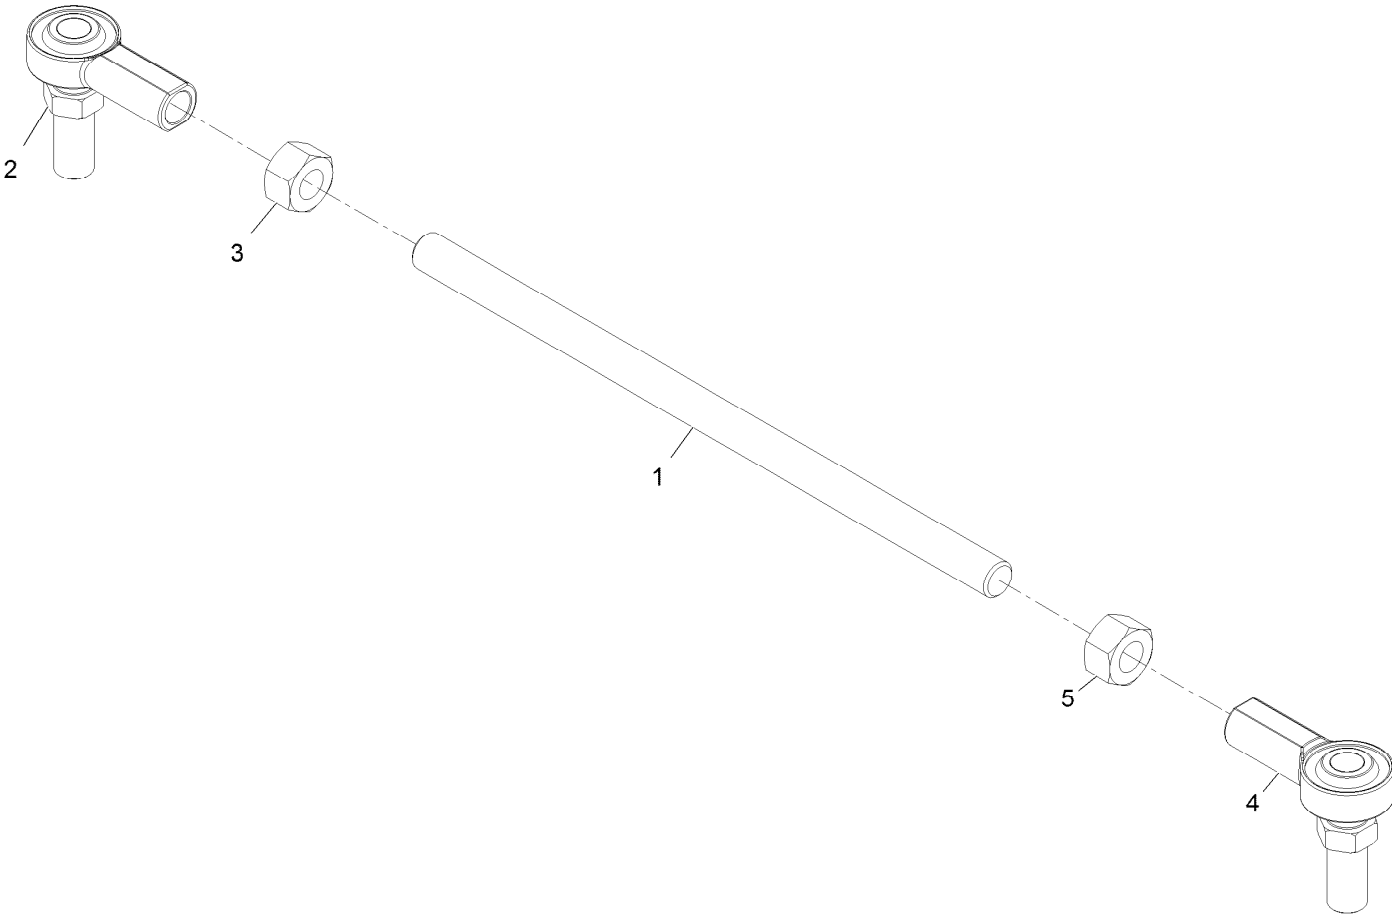


Steering Linkage Assembly No. 126-7185 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7183	1	Rod-Linkage, Steering
2	126-7181	1	Rod-End, RH
3	126-0687	1	Nut-Hex

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	126-7182	1	Rod-End, LH
5	126-0688	1	Nut-Hex, LH

Spray System Assembly

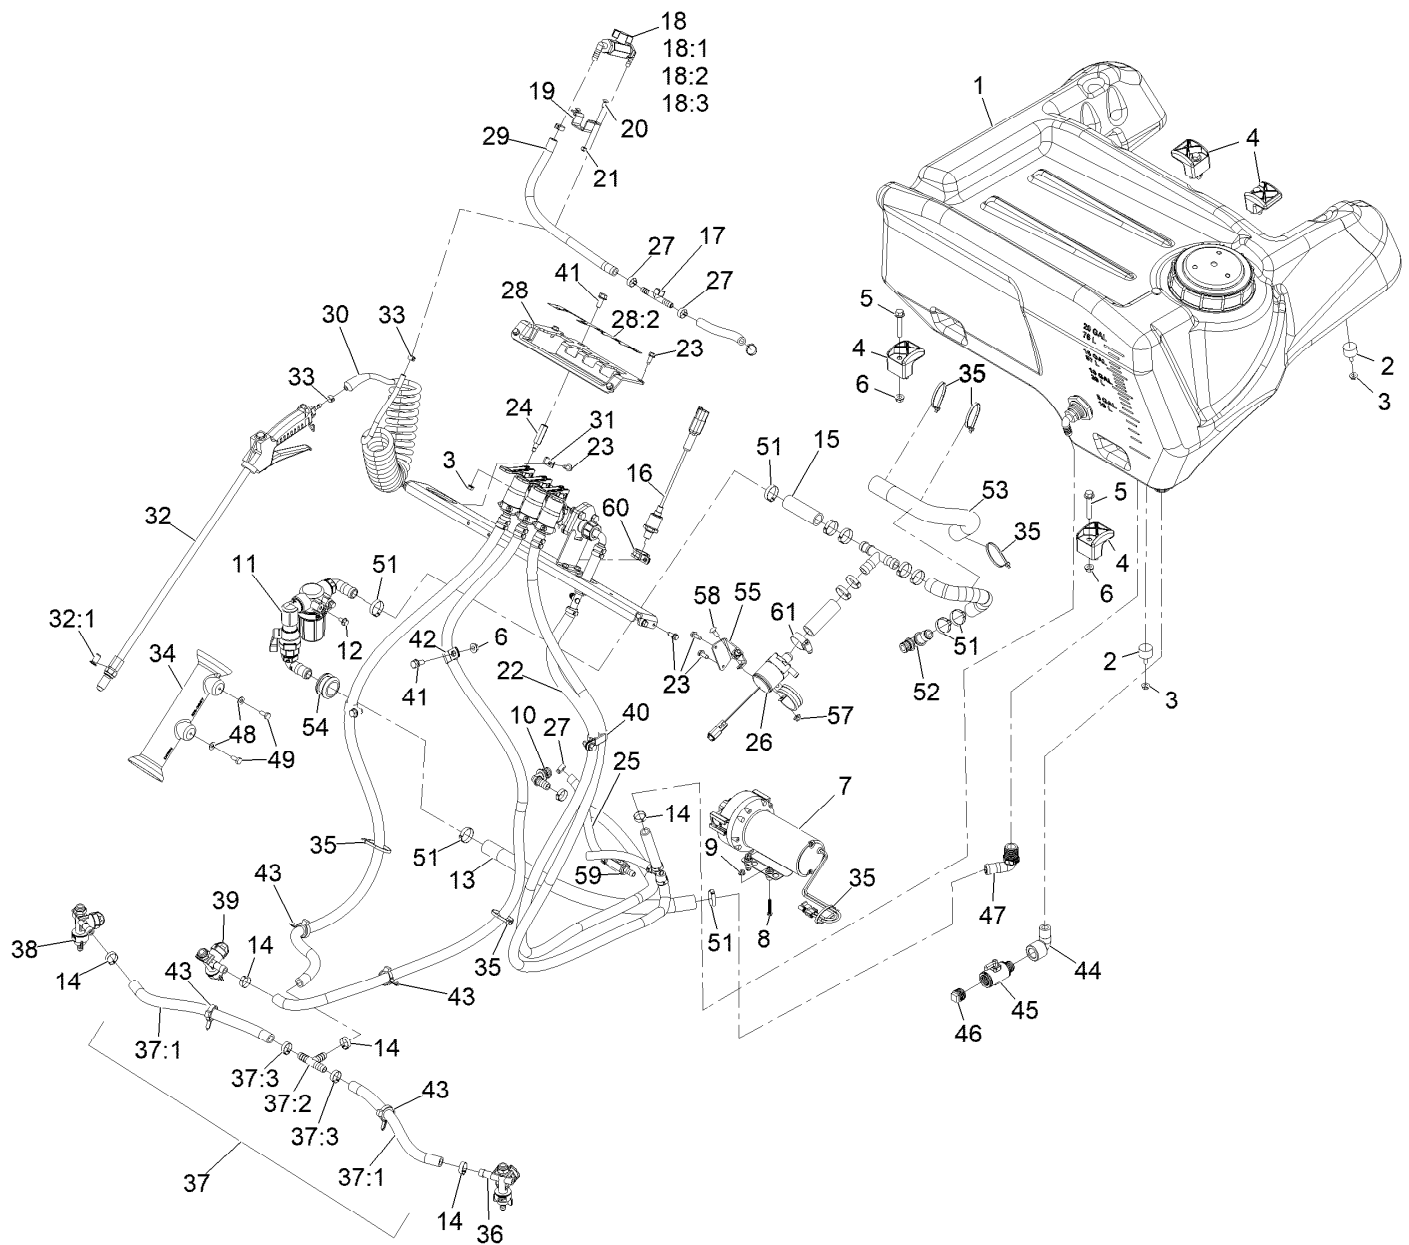


Spray System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-2730	1	Tank-Sprayer	30	142-5821	1	Hose-Coiled, 04X15Ft
2	1-523420	4	Bumper	31	2412-89	1	Clamp-R
3	135-2880	5	Nut-HF	32	126-8000	1	Spray Wand ASM
4	107-4543	4	Clamp	32:1	126-3943	1	Strainer-Nozzle, 50M 5PSI
5	126-2711	4	Screw-HHF 5/16-18 X 2				Check
			Serrated SS	33	126-2707	2	Clamp
6	135-2881	7	Nut-HF	34	126-3987	1	Holder-Wand
7	142-2301	1	Pump-Diaphragm, 3.8 GPM	35	3290-378	5	Tie-Cable
8	692501	4	Screw-SHWH	36	126-3667	1	Left Nozzle Sub ASM
9	126-2645	4	Nut-HF	37	126-2252	1	Hose ASM
10	126-0961	1	Fitting-Elbow, Barbed	37:1	126-2264	2	Hose-Water
11	126-4358	1	Strainer ASM	37:2	126-0968	1	Fitting-Tee
12	126-2713	2	Screw-HHF	37:3	142-3662	2	Clamp Oetiker 0.716"
13	126-4422	1	Hose-Water				Closed 0.826" Open
14	142-3662	8	Clamp Oetiker 0.716"	38	126-3669	1	Right Nozzle Sub ASM
			Closed 0.826" Open	39	126-3668	1	Center Nozzle Sub ASM
15	142-2192	1	ASM-, 3/4 Pvc Reinforced	40	120-1959	1	Clamp
			Water Hose	41	126-2712	4	Screw-HHF 5/16-18 X 3/4
16	142-4495	1	Transducer-Pressure				Serrated SS
17	126-2348	1	Fitting-Tee	42	1-633396	2	Clip-Loom 5/8
18		1	Wand Control ASM ●	43	105-1853	4	Clamp-Hose
18:1	126-0242	1	Valve-Ball	44	108-3573	1	Elbow-90 DEG
18:2	126-4992	1	Fitting-Elbow-90	45	126-1494	1	Microvalve
18:3	126-4993	1	Fitting-Elbow-90	46	363-3125	1	Plug
19	126-0239-03	1	Bracket-Valve	47	119-0490	1	Elbow-Hosebarb
20	1-807513	2	Bolt-Carriage #10-24 X 1/2	48	360-0140	2	Washer-Flat
21	3296-2	2	Nut-Nyloc #10-24	49	126-1290	2	Screw-HH 1/4-20 X 5/8 SS
22		1	Manifold-Valve, Control	51	126-4779	6	Clamp
			ASM ●	52	126-4420	1	Fitting-Elbow
23	32144-10	11	Screw-HWH 1/4-20 X .62	53	126-5065	1	Sleeve-Corrugated, Split
24	135-6461	1	Spacer, Manifold Mount	54	126-7410	1	Grommet
25	142-2213	1	Hose-Water	55	135-7913-03	1	Brkt-Recir Pump
26	135-7843	1	Pump-Centrifugal	57	104-7201	2	Nut-Nyloc 1/4-20 Flg
27	126-3749	5	Clamp	58	3229-11	2	Bolt-Carriage 1/4-20 X 5/8
28	126-4180	1	Cover-Controls	59	142-2180	1	Valve-3/8 Check
28:2	135-7256	1	Decal-Lever Control	60	132-7590	1	R-Clamp
29	126-5847	1	Hose-Water, 3/8 Pvc Red	61	2412-129	1	Clamp-Hose

● Not serviced separately


Sprayer Tank Assembly

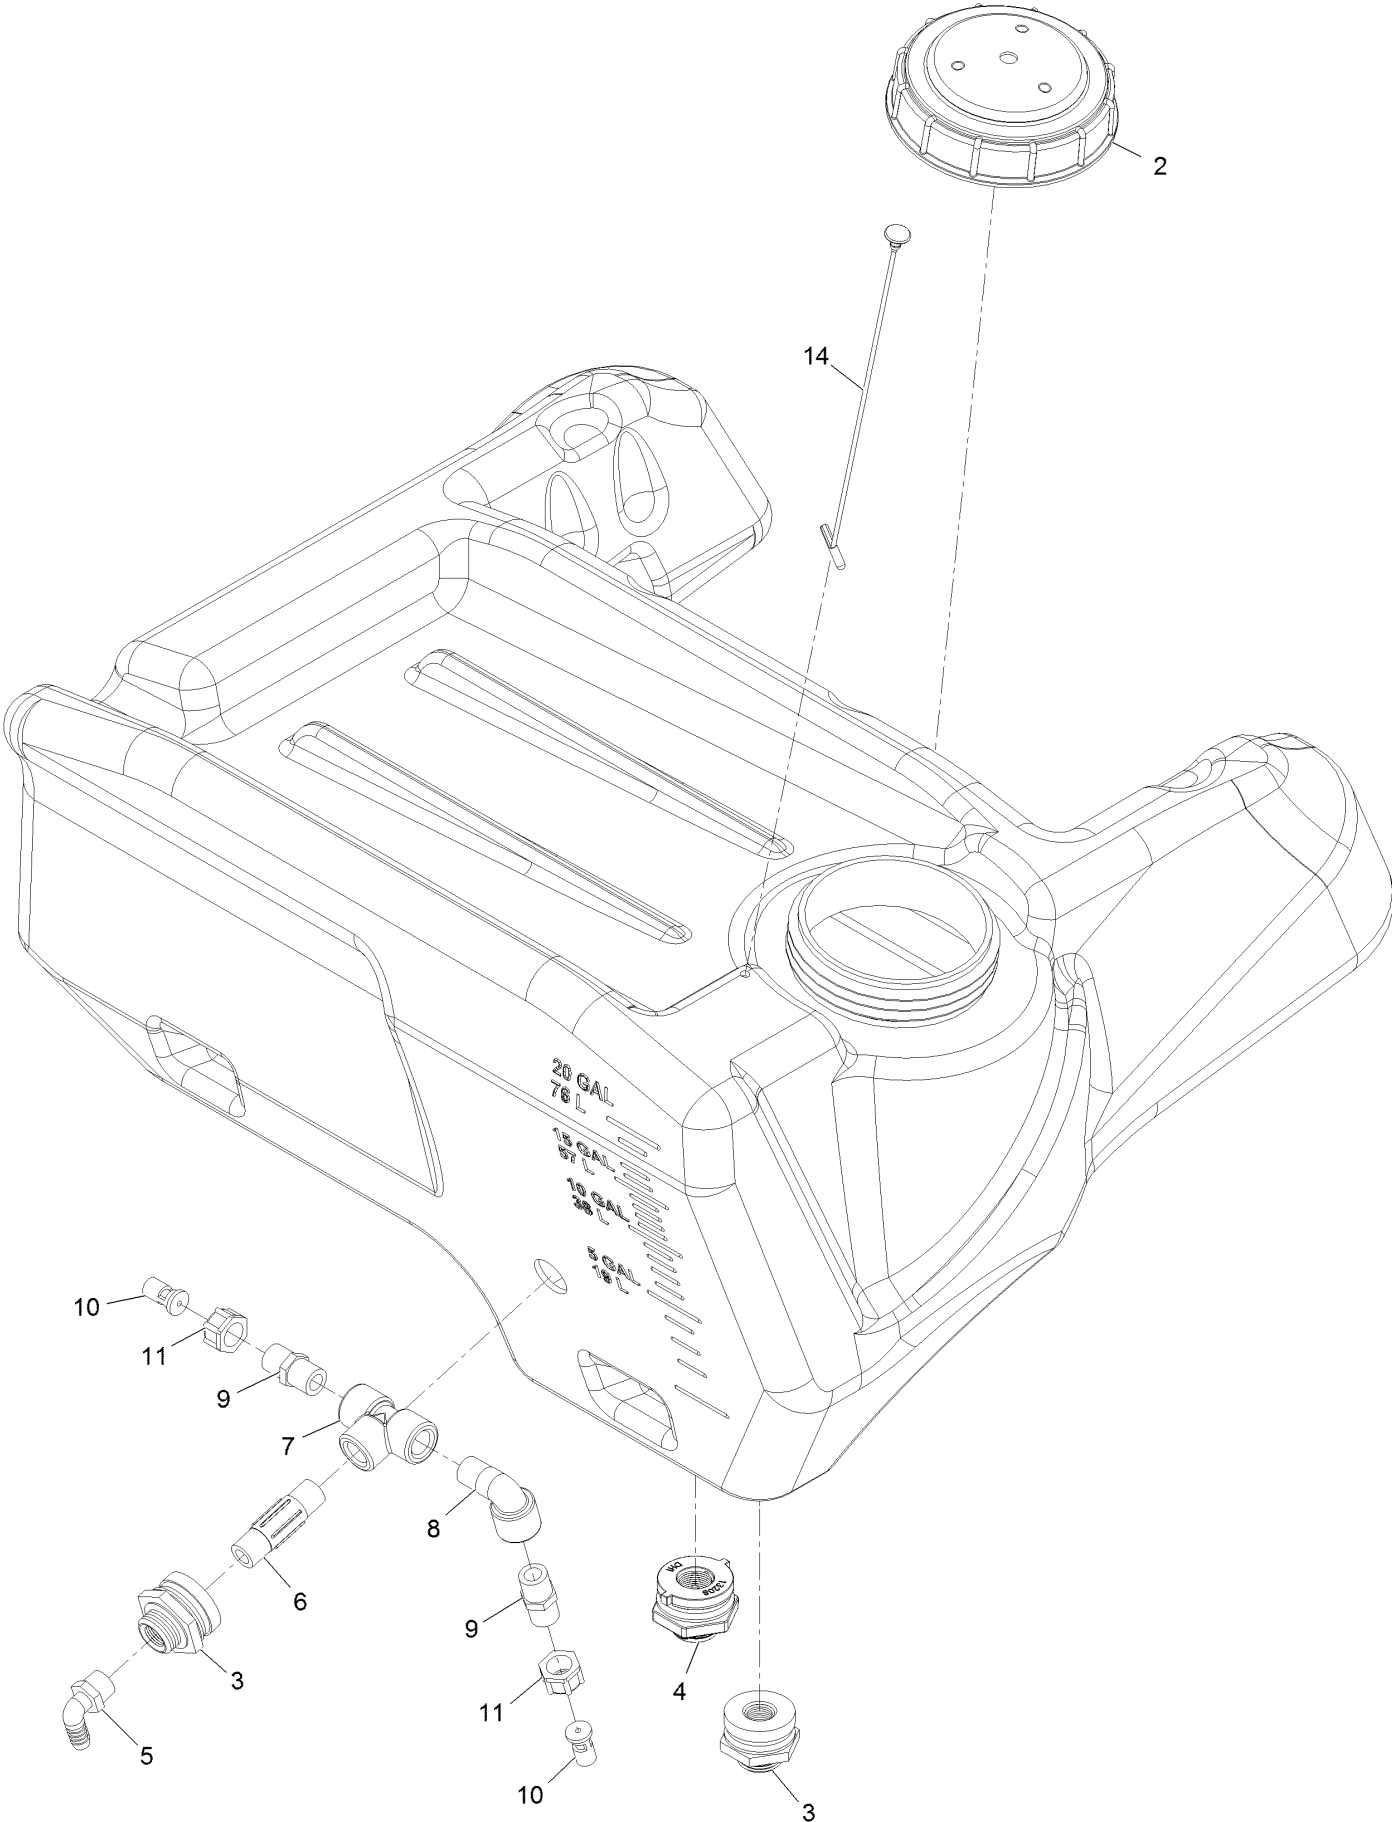

Sprayer Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	126-0285	1	Cap-Water, 5 Inch Vent	8	108-3573	1	Elbow-90 DEG
3	126-0400	2	Fitting-Bulkhead	9	108-3574	2	Nipple-Short
4	126-4393	1	Fitting-Bulkhead	10	100-6705	2	Nozzle-Agitation
5	42046	1	Elbow-90 DEG	11	99-0766	2	Nut
6	94-7103	1	Nipple	14	126-3381	1	Lanyard-Cap, Self
7	94-7100	1	Tee				Anchoring (12 Inch)


Strainer Assembly

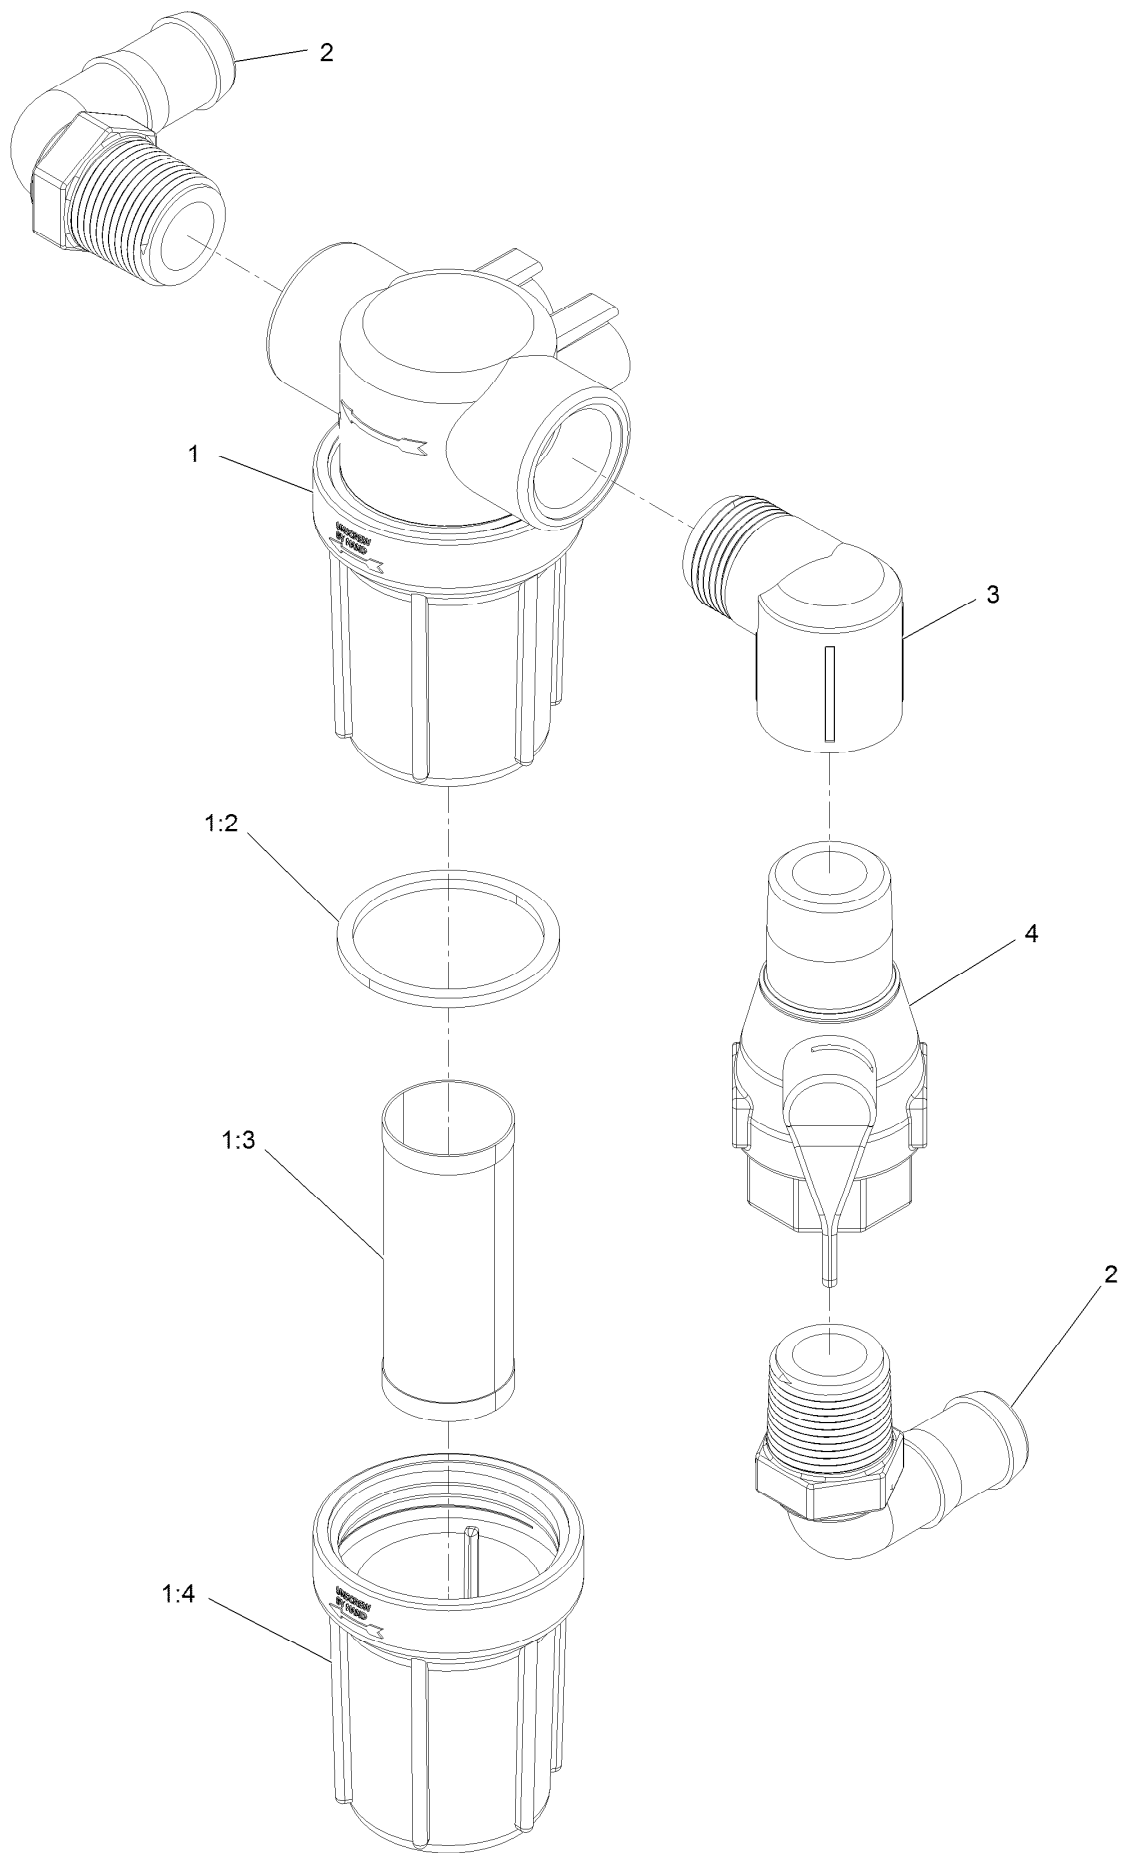

Strainer Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-4374	1	Strainer-Line	1:4	126-7195	1	Bowl-Strainer
1:2	126-2272	1	Gasket-Head, Line Strainer	2	119-0490	2	Elbow-Hosebarb
1:3	126-2273	1	Screen-Strainer, 30 Mesh SS	3	102-4272	1	Elbow
				4	126-4451	1	Valve-Ball

Control Valve Manifold and Hose Assembly

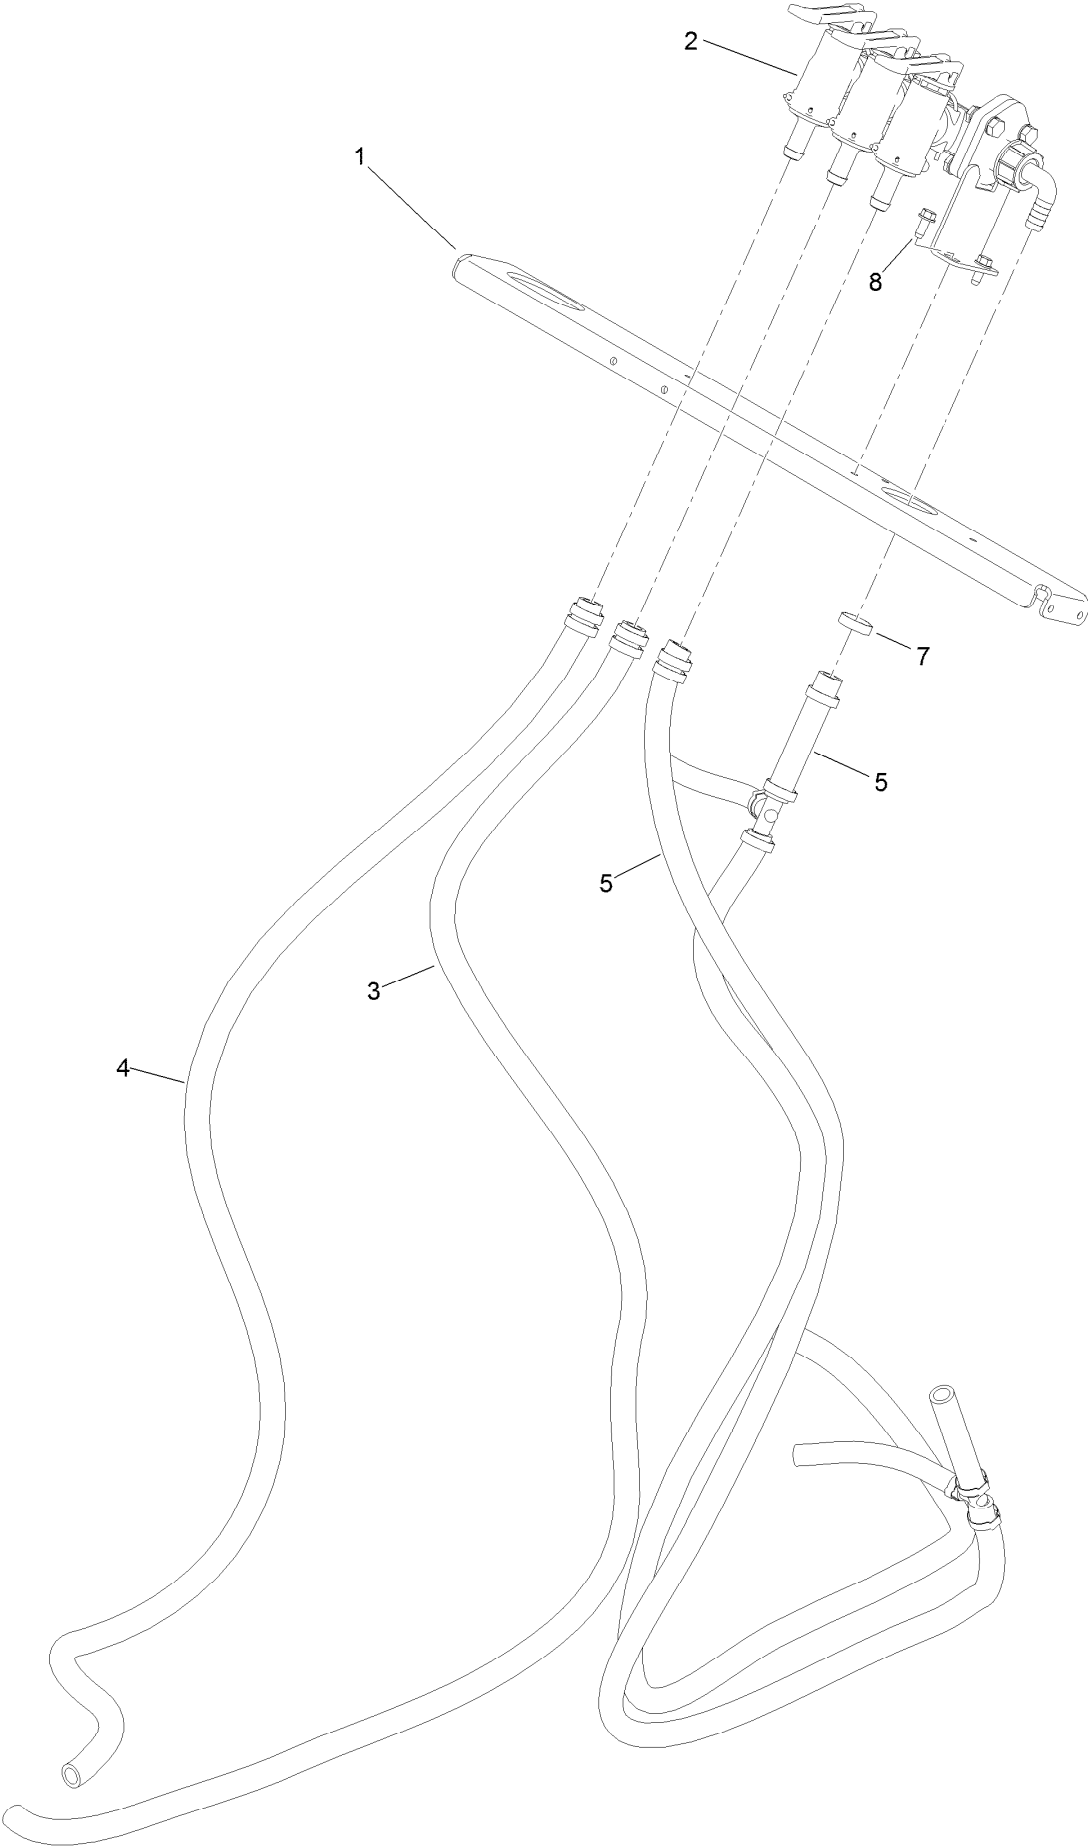


Control Valve Manifold and Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-6360-03	1	Crossmember-Column
2	135-6362	1	Manifold-Valve, Control
3	126-2261	1	Hose-Water
4	126-2263	1	Hose-Water

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	142-3560	2	Hose ASM
7	142-3662	8	Clamp Oetiker 0.716" Closed 0.826" Open
8	32144-10	2	Screw-HWH 1/4-20 X .62

Control Valve Manifold Assembly No. 135-6362

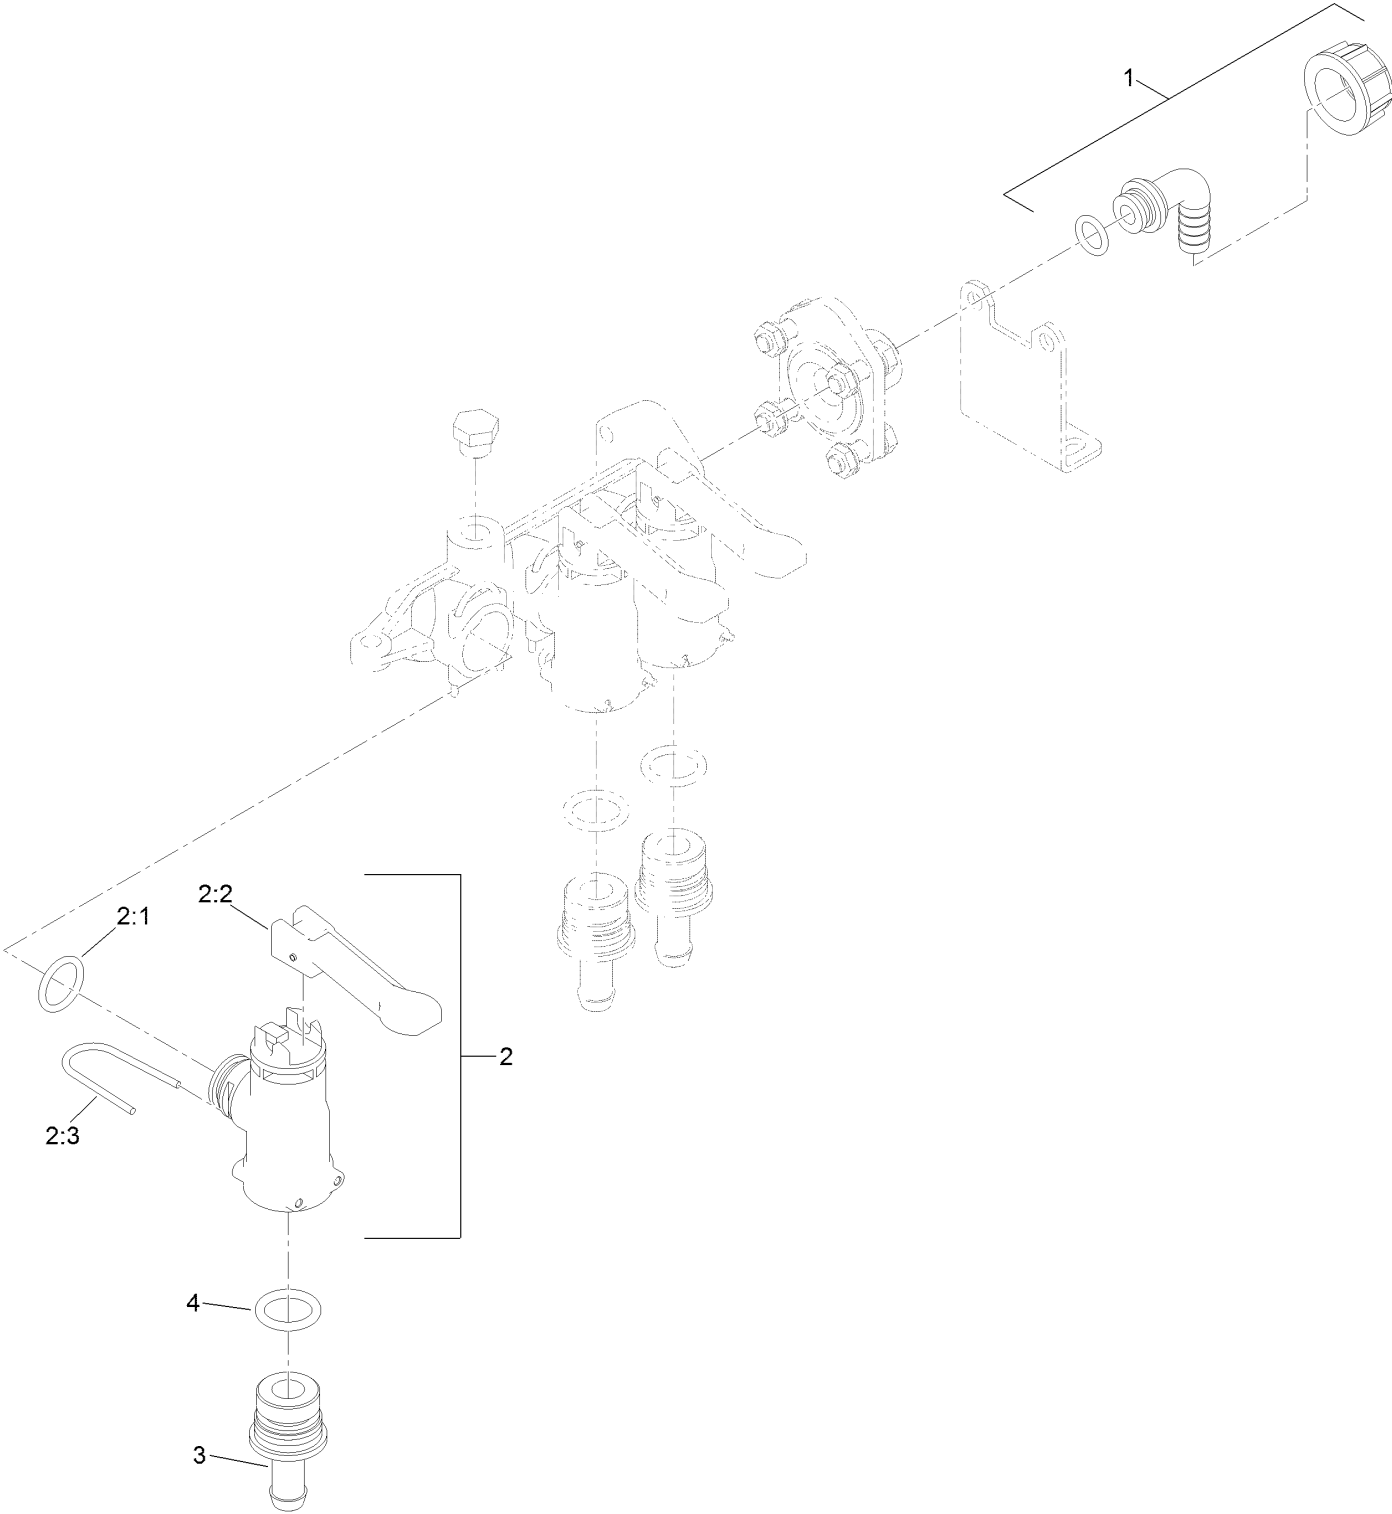


Control Valve Manifold Assembly No. 135-6362 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-6464	1	Flynut Assembly
2	126-7641	1	Valve Assembly W/ O-Ring
2:1	126-6328	1	O-Ring Kit, Valve Inlet
2:2	126-6319	1	Lever And Pin Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2:3	126-6332	1	Wireform Retainer Kit
3	126-6321	1	Hose Barb
4	126-6327	1	O-Ring Kit, Valve Outlet Barb

Left Nozzle Assembly No. 126-3667

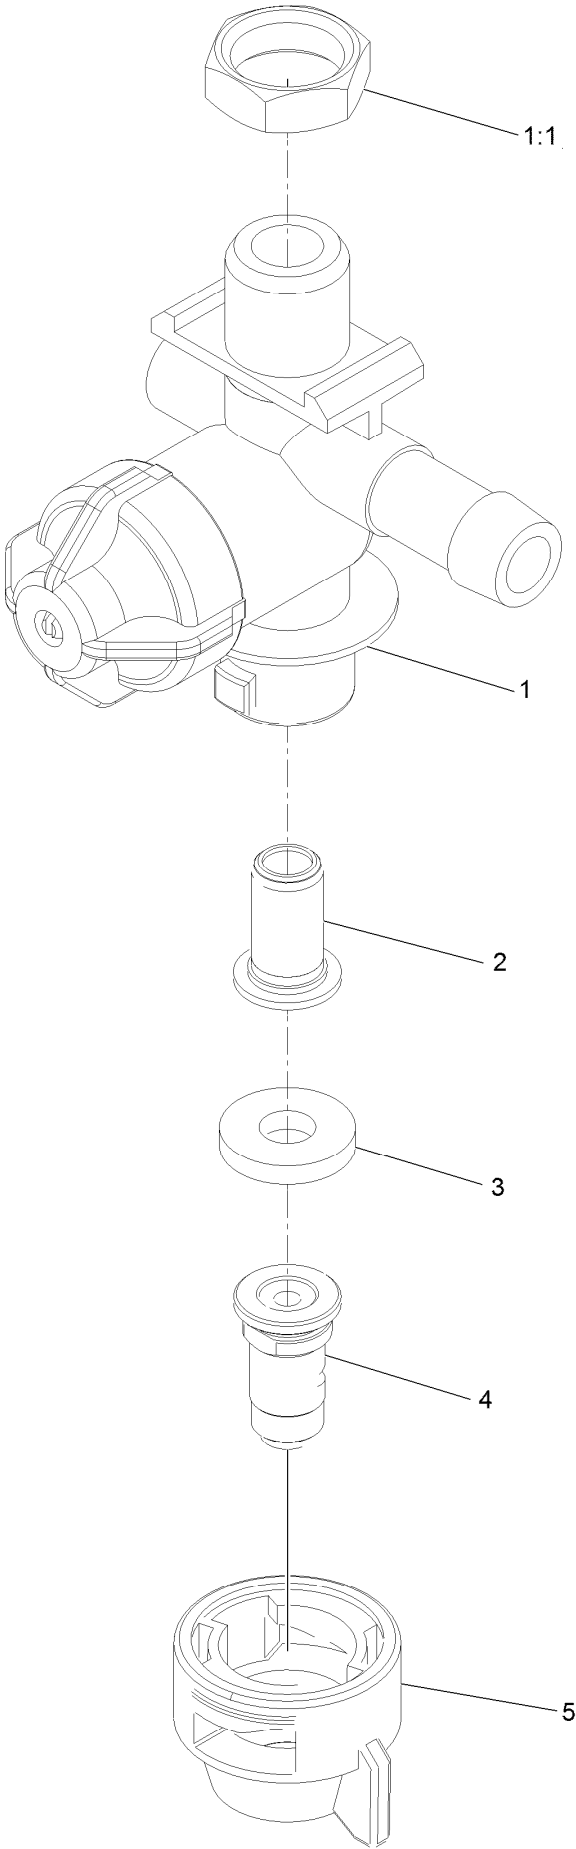


Left Nozzle Assembly No. 126-3667 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9790	1	LH Nozzle Body ASM	5	116-9796	1	Cap-Nozzle
1:1	126-2801	1	Nut-Nylon	99	126-7172	1	Nozzle-Spray, Blue ●■
2	126-1212	1	Strainer-Tip	99	126-7171	1	Nozzle-Spray, Brown ●■
3	116-9797	1	Gasket-Seal	99	126-7170	1	Nozzle-Spray, Gray ●■
4	116-9798	1	Nozzle-Spray, White	99	126-2566	1	Nozzle-Spray, Red ●■

● Not illustrated

■ Sold separately

Right Nozzle Assembly No. 126-3669

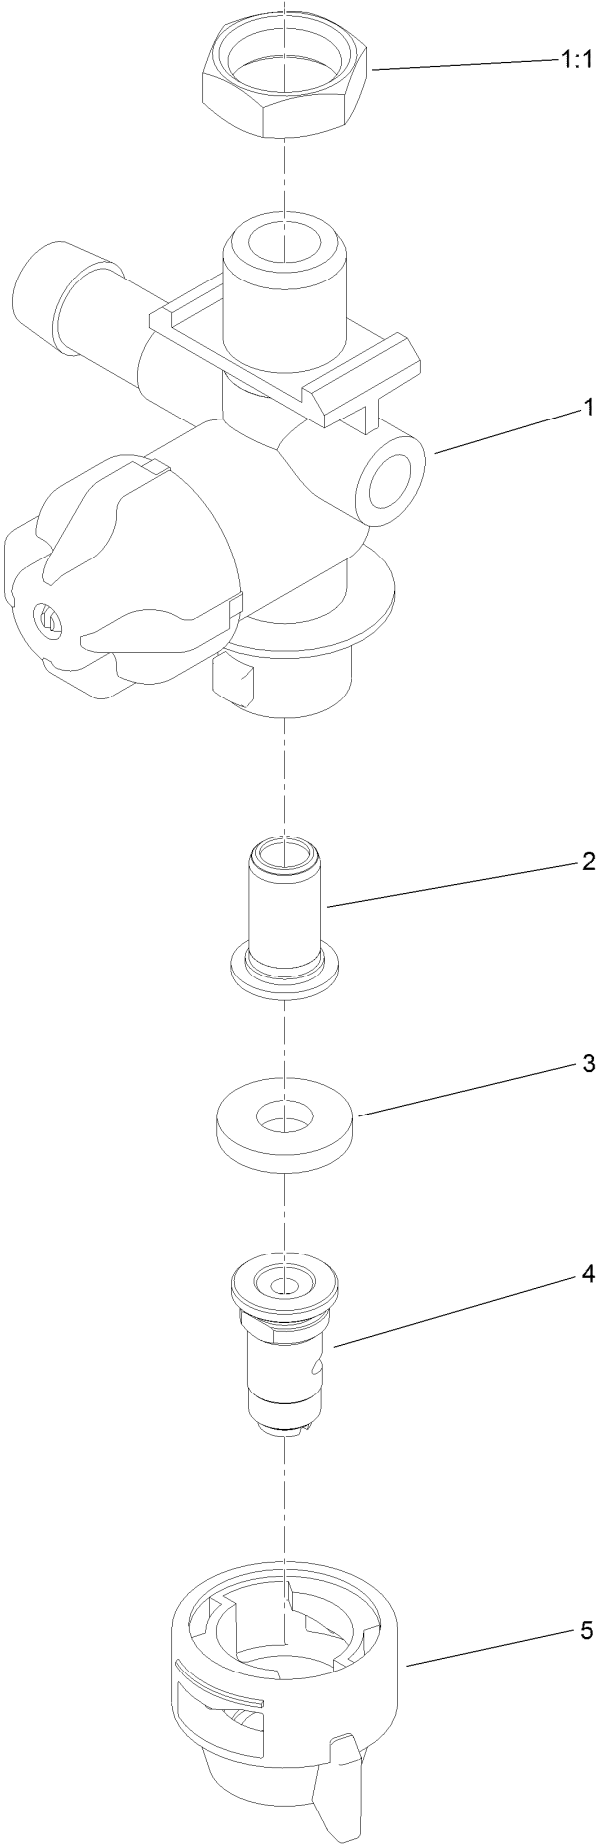


Right Nozzle Assembly No. 126-3669 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	116-9798	1	Nozzle-Spray, White

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	116-9796	1	Cap-Nozzle
99	126-7172	1	Nozzle-Spray, Blue ●
99	126-7171	1	Nozzle-Spray, Brown ●
99	126-7170	1	Nozzle-Spray, Gray ●
99	126-2566	1	Nozzle-Spray, Red ●

● Not illustrated

Center Nozzle Assembly No. 126-3668

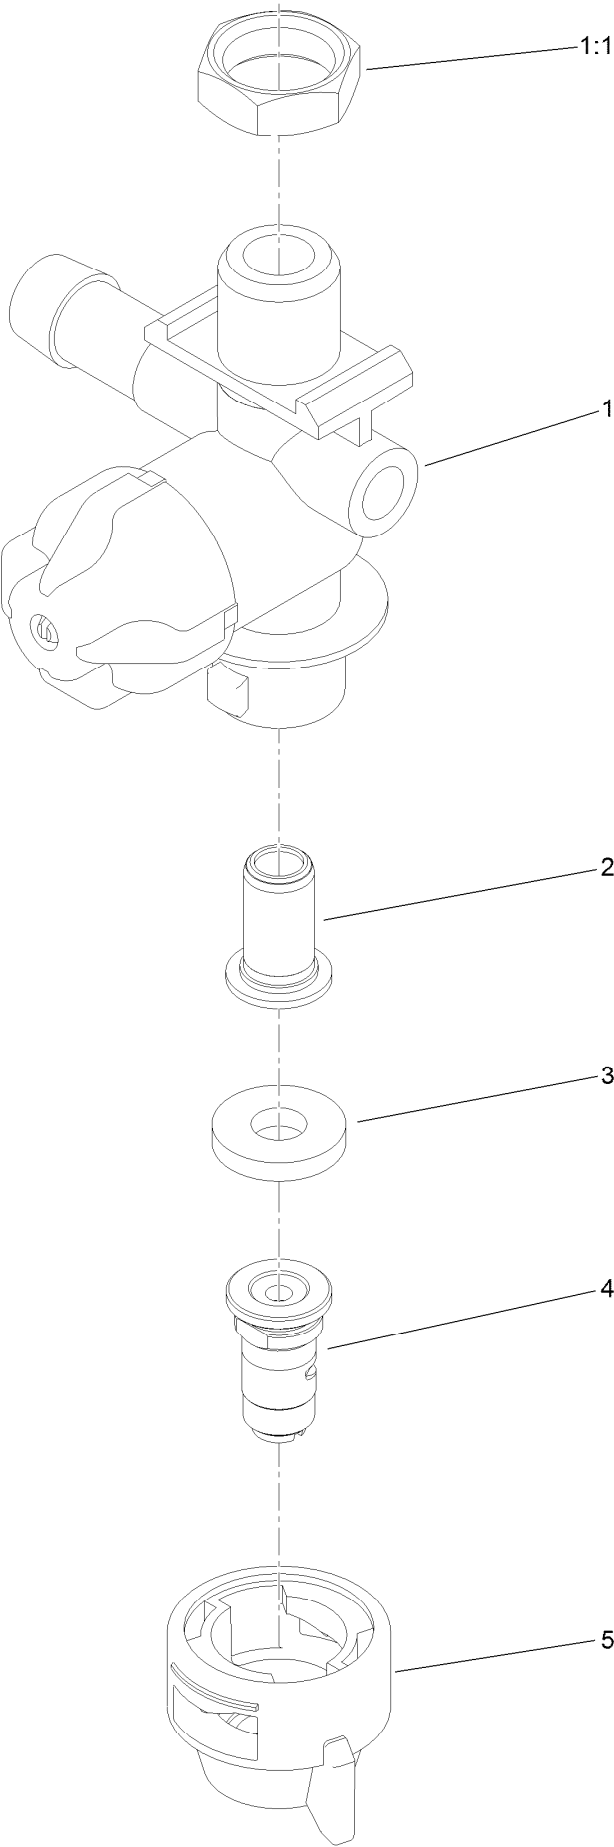

Center Nozzle Assembly No. 126-3668 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	126-2566	1	Nozzle-Spray, Red

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	116-9796	1	Cap-Nozzle
99	126-7170	1	Nozzle-Spray, Gray ●■
99	116-9798	1	Nozzle-Spray, White ●■
99	126-7171	1	Nozzle-Spray, Brown ●■
99	126-7172	1	Nozzle-Spray, Blue ●■

● Not illustrated

■ Sold separately

Spreader Assembly

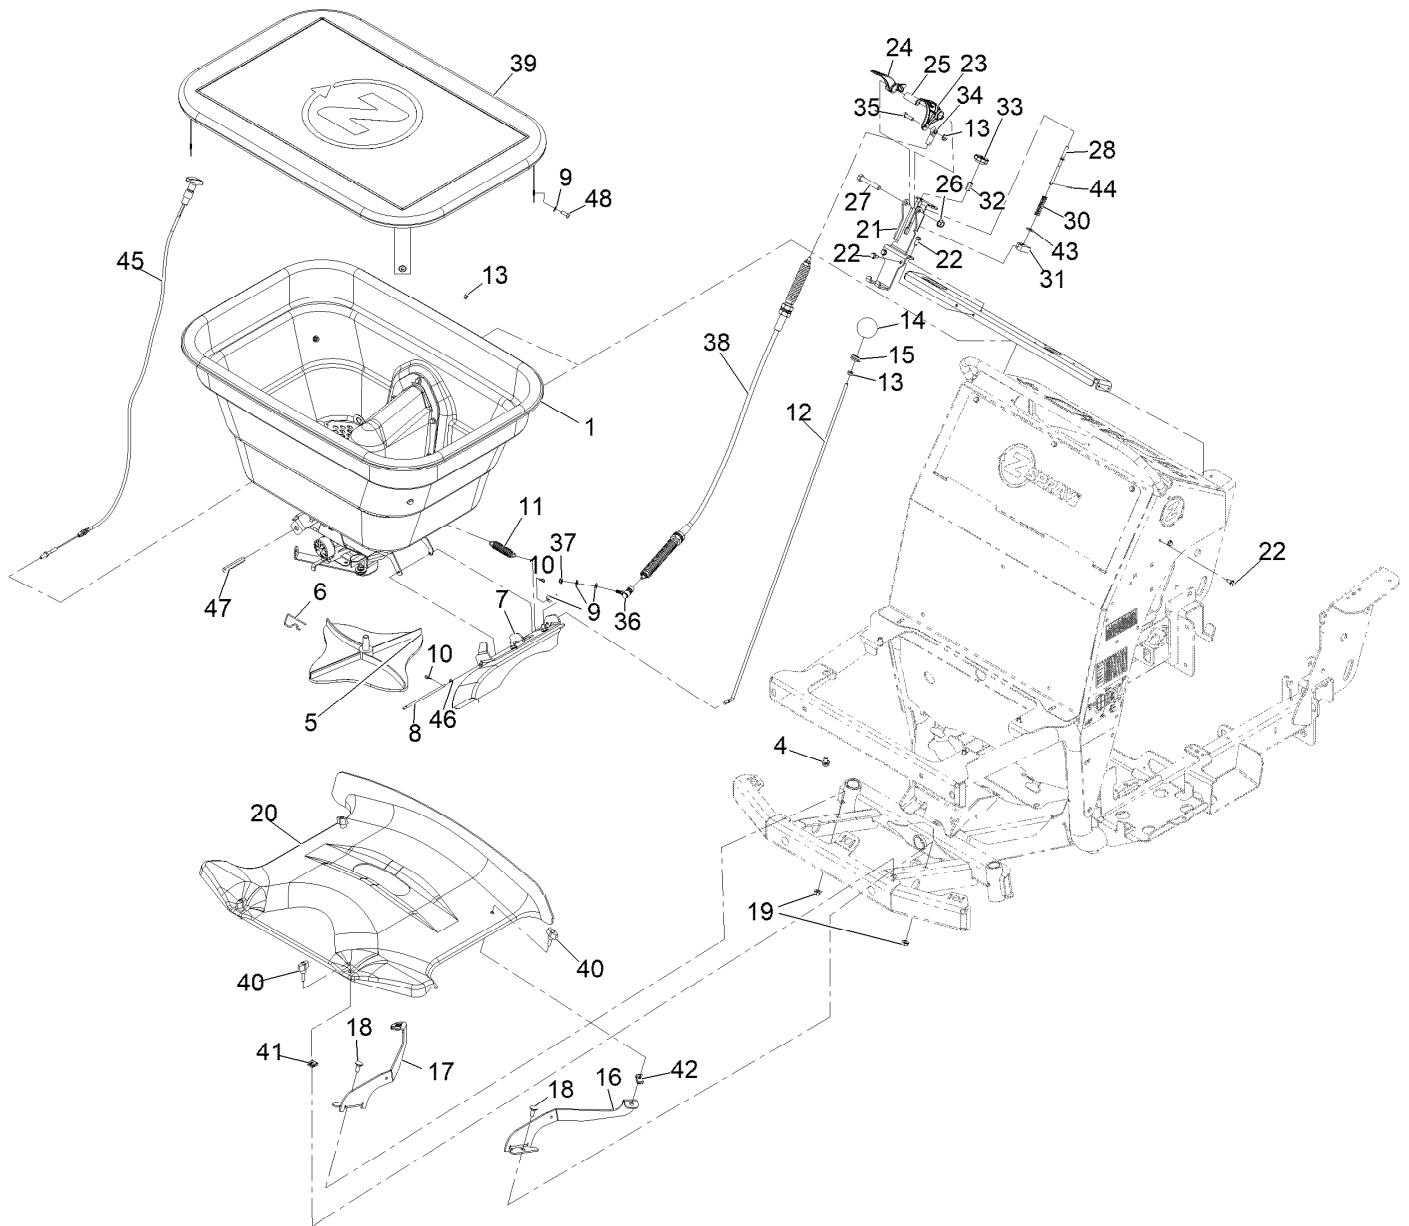


Spreader Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Spreader Hopper ASM ●	25	126-3984	1	Spacer
4	142-4255	4	Screw-HHF	26	135-2882	1	Nut-HF
5	142-3506	1	Spinner-Spreader	27	323-11	1	Screw-HH 3/8-16 X 2 1/4
6	142-3541	1	Clip-Spinner	28	126-3929	1	Link-Adjust, Narrow
7		1	Side Deflector ASM ●	30	125-0547	1	Spring-Compression, Bail
8	135-2558	1	Pin-Deflector	31	126-3147	1	Stop-Spread, Narrow
9	360-0140	9	Washer-Flat	32	126-4891	1	Nut-Coupler
10	126-1631	2	Pin-Cotter, Hair	33	126-3905	1	Knob
11	126-2127	1	Spring-Extension	34	2411-41	1	Rod End-Ball Joint
12	126-2190	1	Rod-Control, Deflector	35	126-0498	1	Screw-HH 1/4-20 X 7/8 SS
13	135-2880	6	Nut-HF	36	126-2005	1	Ball-Joint
14	121-1877	1	Knob-Rate, Flow	37	126-2725	1	Nut-Hex, NI
15	1-633630	1	Grommet	38	126-1783	1	Cable
16	126-2145	1	Bracket-Cover, Front (LH)	39	142-2732	1	Cover-Hopper, Clear Vinyl Window
17	126-2146	1	Bracket-Cover, Front (RH)				
18	126-0695	2	Screw-Carriage 5/16-18 X 3/4 SS	40	126-5846	4	Knob-T
19	135-2881	2	Nut-HF	41	126-3740	2	Nut-Retainer, U Style
20	126-2063	1	Cover-Front, Spreader/Sprayer	42	126-3739	2	Nut-Retainer
21	126-3133	1	Mount-Handle	43	3256-78	1	Washer
22	32144-10	3	Screw-HWH 1/4-20 X .62	44	3272-5	1	Pin-Cotter 3/32 X 1/2
23	126-3947	1	Lever-Spread, Wide	45	126-4150	1	Cable-Control, Turn Lock
24	126-3948	1	Lever-Spread, Narrow	46	126-0759	1	Washer-Flat
				47	126-4655	1	Post-Hex, Diffuser Guide
				48	126-1290	4	Screw-HH 1/4-20 X 5/8 SS

● Not serviced separately

Spreader Hopper Assembly

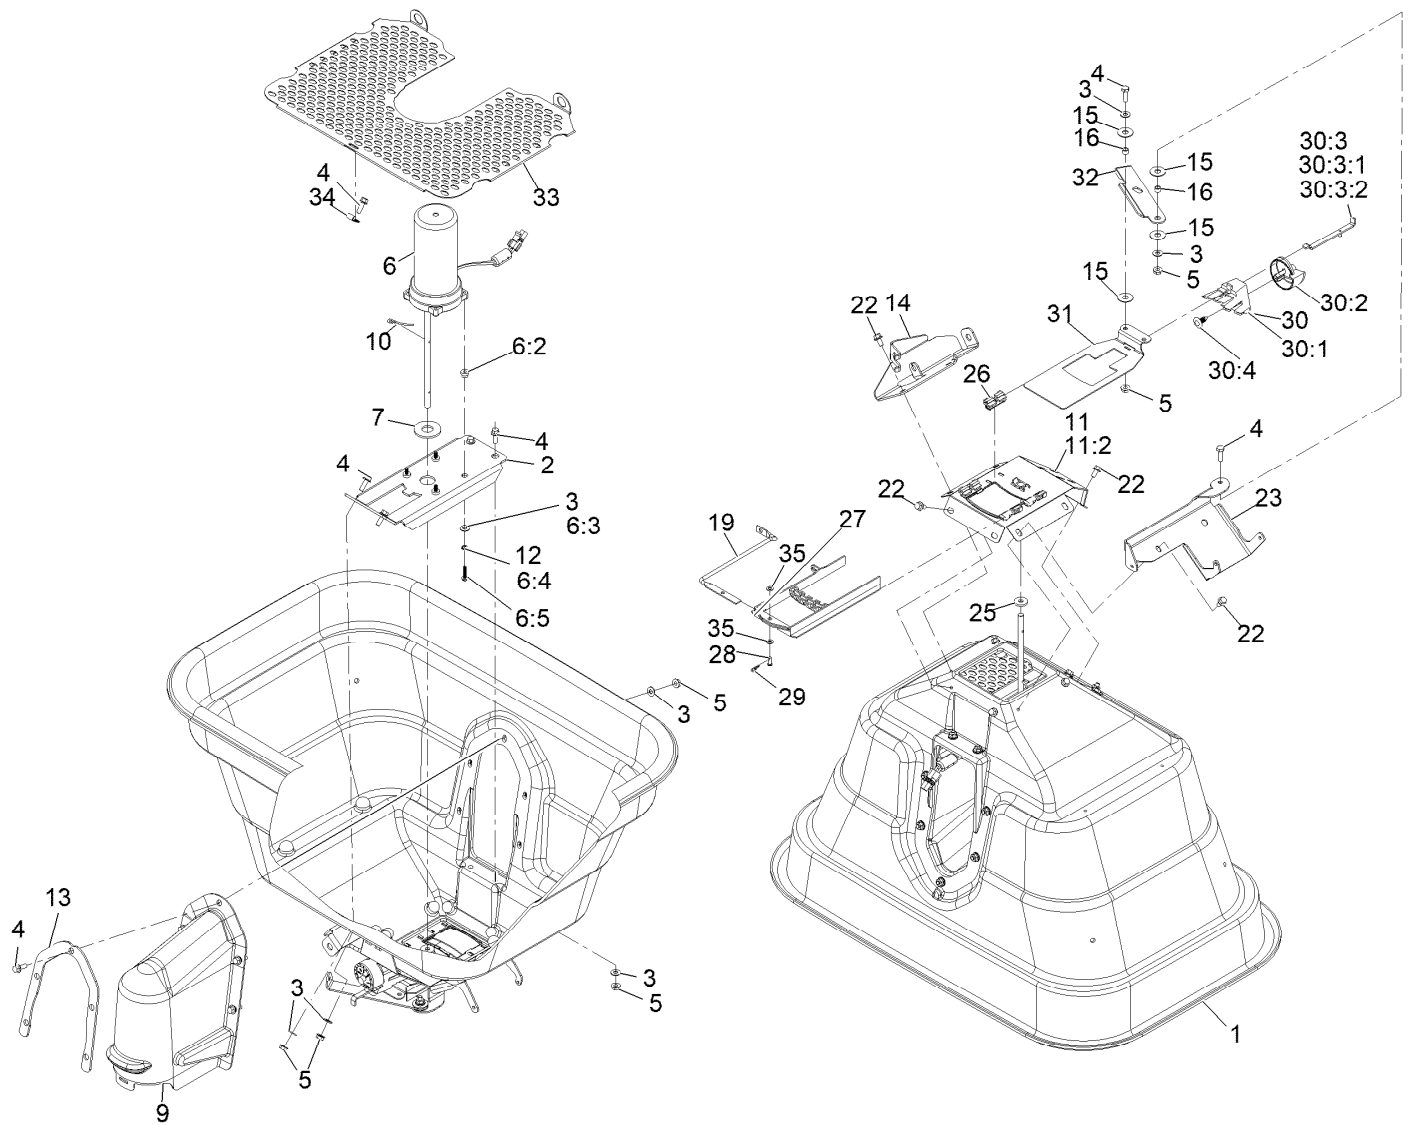


Spreader Hopper Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-2734	1	Hopper-Spreader, 175 Lb	22	135-6280	8	Screw-HHF 1/4-20 X 1/2
2	126-4245	1	Bracket-Mount, Motor				Serrated SS
3	360-0140	16	Washer-Flat	23	142-3602	1	Bracket-Lever, Hopper Gate
4	126-0498	2	Screw-HH 1/4-20 X 7/8 SS	25	142-3665	1	Washer-Felt
5	135-2880	12	Nut-HF	26	142-3316	4	Guide-Rate, Gate
6	126-6231	1	Spreader Motor ASM	27	142-3406	1	Diffuser
6:2	135-3989	4	Spacer-Flanged	28	126-3729	1	Pin-Clevis
6:3	360-0140	4	Washer-Flat	29	126-1631	1	Pin-Cotter, Hair
6:4	363-8641	4	Washer-Lock, Int	30	142-3821	1	Rate Dial ASM
6:5	739001	4	Screw-SHWH 10-32 X 7/8	30:1	142-3319	1	Mount-Dial
7	83-2400	1	Spacer	30:2	142-3359	1	Dial
9	126-1348	1	Cover-Motor	30:3		1	Rate Gate Link ASM ●
10	142-3666	1	Wire-Agitator	30:3:1	126-0987	1	Link-Gate, Rate
11	142-4040	1	ASM-Mulch Plate W/ Bearing	30:3:2	126-4196	1	Screw-Shoulder, Slotted
11:2	142-4042	1	Hopper Bottom Bearing	30:4	88-1080	1	Footpad Fastener
12	363-8641	4	Washer-Lock, Int	31	142-4342	1	Rate Gate
13	126-6334	1	Flange-Cover, Motor	32	126-4112	1	Lever-Gate
14	126-4650	1	Bracket-Hopper, Gate Controls	33	126-3143	1	Screen-Hopper, Large Hole
15	93-1633	4	Washer	33	126-3240	1	Screen-Hopper, Medium Hole
16	126-3684	2	Spacer	33	126-3242	1	Screen-Hopper, Small Hole
19	126-1646	1	Rod-Control, Diffuser	34	126-1624	1	Clamp-Loop
				35	126-0759	2	Washer-Flat

● Not serviced separately


Side Deflector Assembly

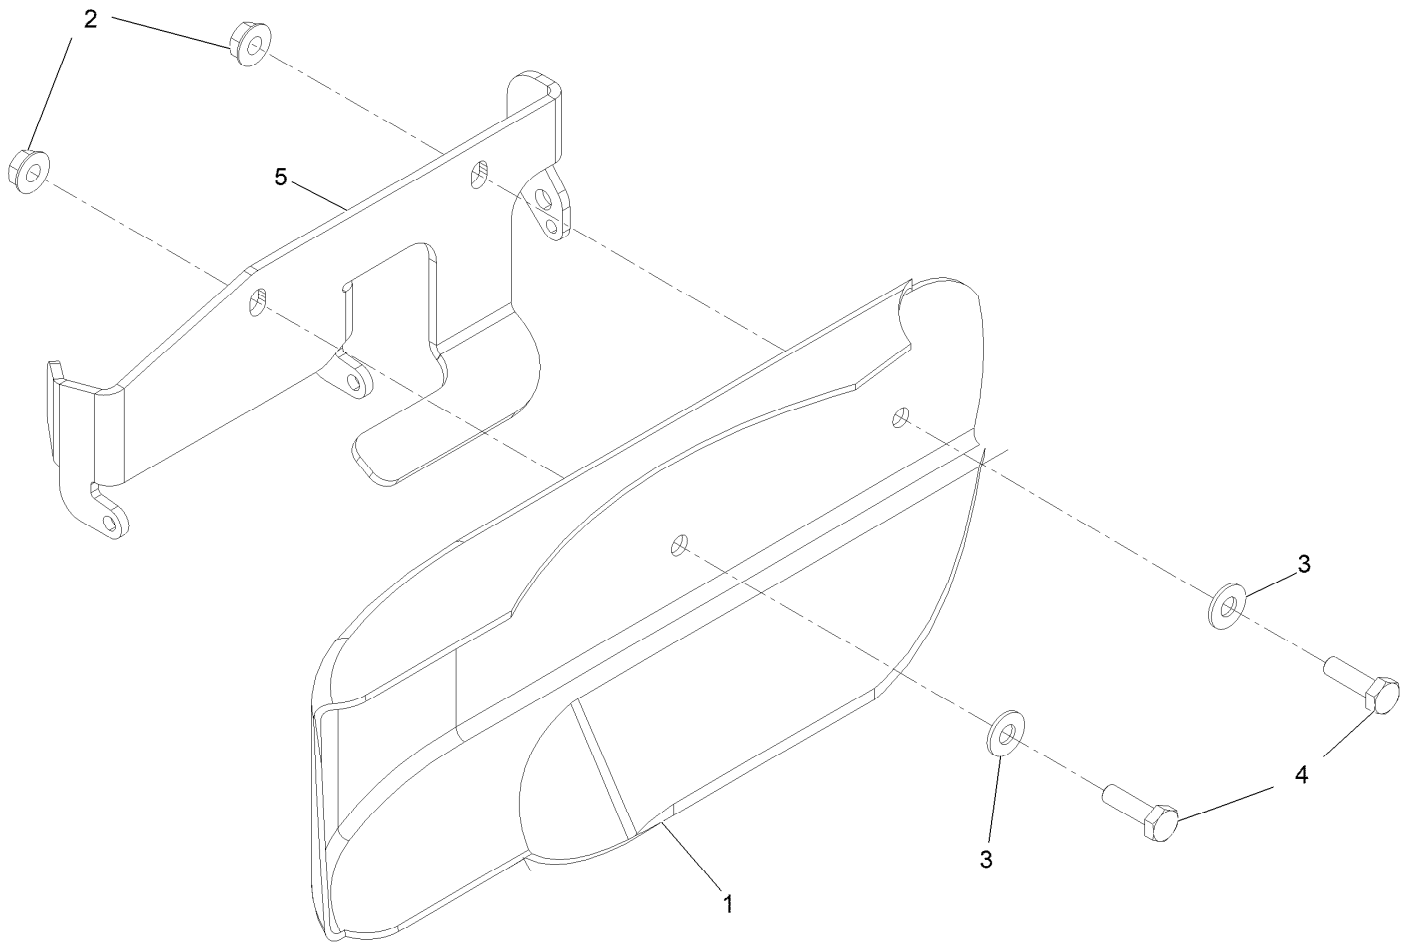

Side Deflector Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-3619	1	Deflector-Side	4	126-0498	2	Screw-HH 1/4-20 X 7/8 SS
2	135-2501	1	Bracket-Deflector, Side	5	135-2880	2	Nut-HF
3	360-0140	2	Washer-Flat				


Engine Assembly

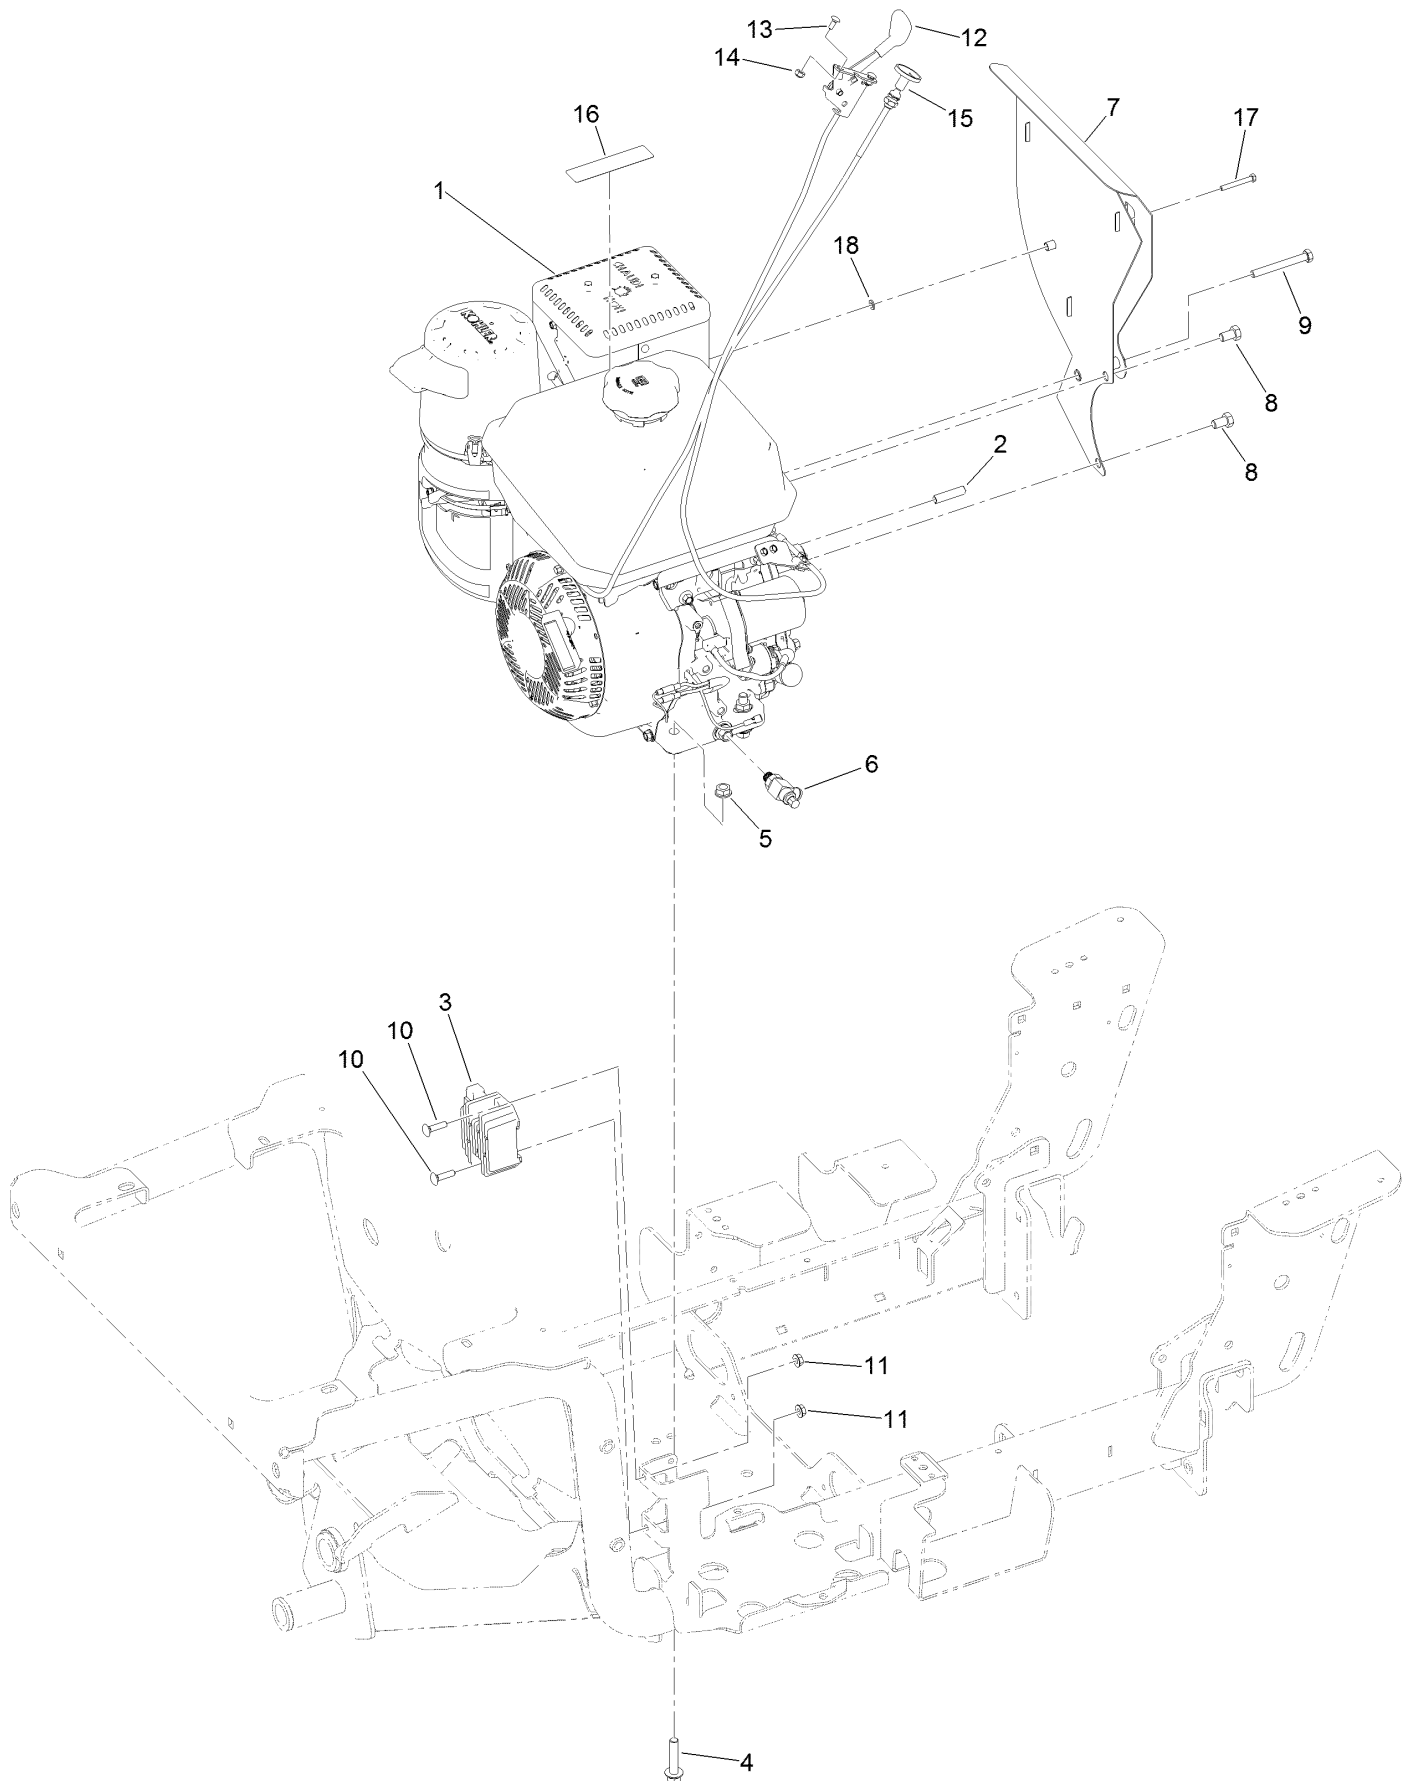

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1359	1	Engine-Kohler, Ch395	11	135-2880	2	Nut-HF
2	135-3980	1	Key-Square, 7Mm	12	135-3149	1	Control-Throttle
3	135-7026	1	Regulator-Trombetta, 18A	13	1-807513	2	Bolt-CARR
4	126-2710	4	Screw-HHF	14	3296-2	2	Nut-Lock, NI
5	135-2882	4	Nut-HF	15	135-3150	1	Cable-Choke, Push/Pull
6	126-9978	1	Valve-Drain, Oil	16	133-8062	1	Decal-Arrestor, Spark
7	126-2225	1	Heat Shield ASM	17	135-4328	1	Bolt-M5X0.8Mm X 40 Mm Long
8	115-8486	2	Screw-HH	18	126-0759	1	Washer-Flat
9	120-1177	1	Screw-HH				
10	126-1455	2	Screw-CARR				

Ground Drive Assembly

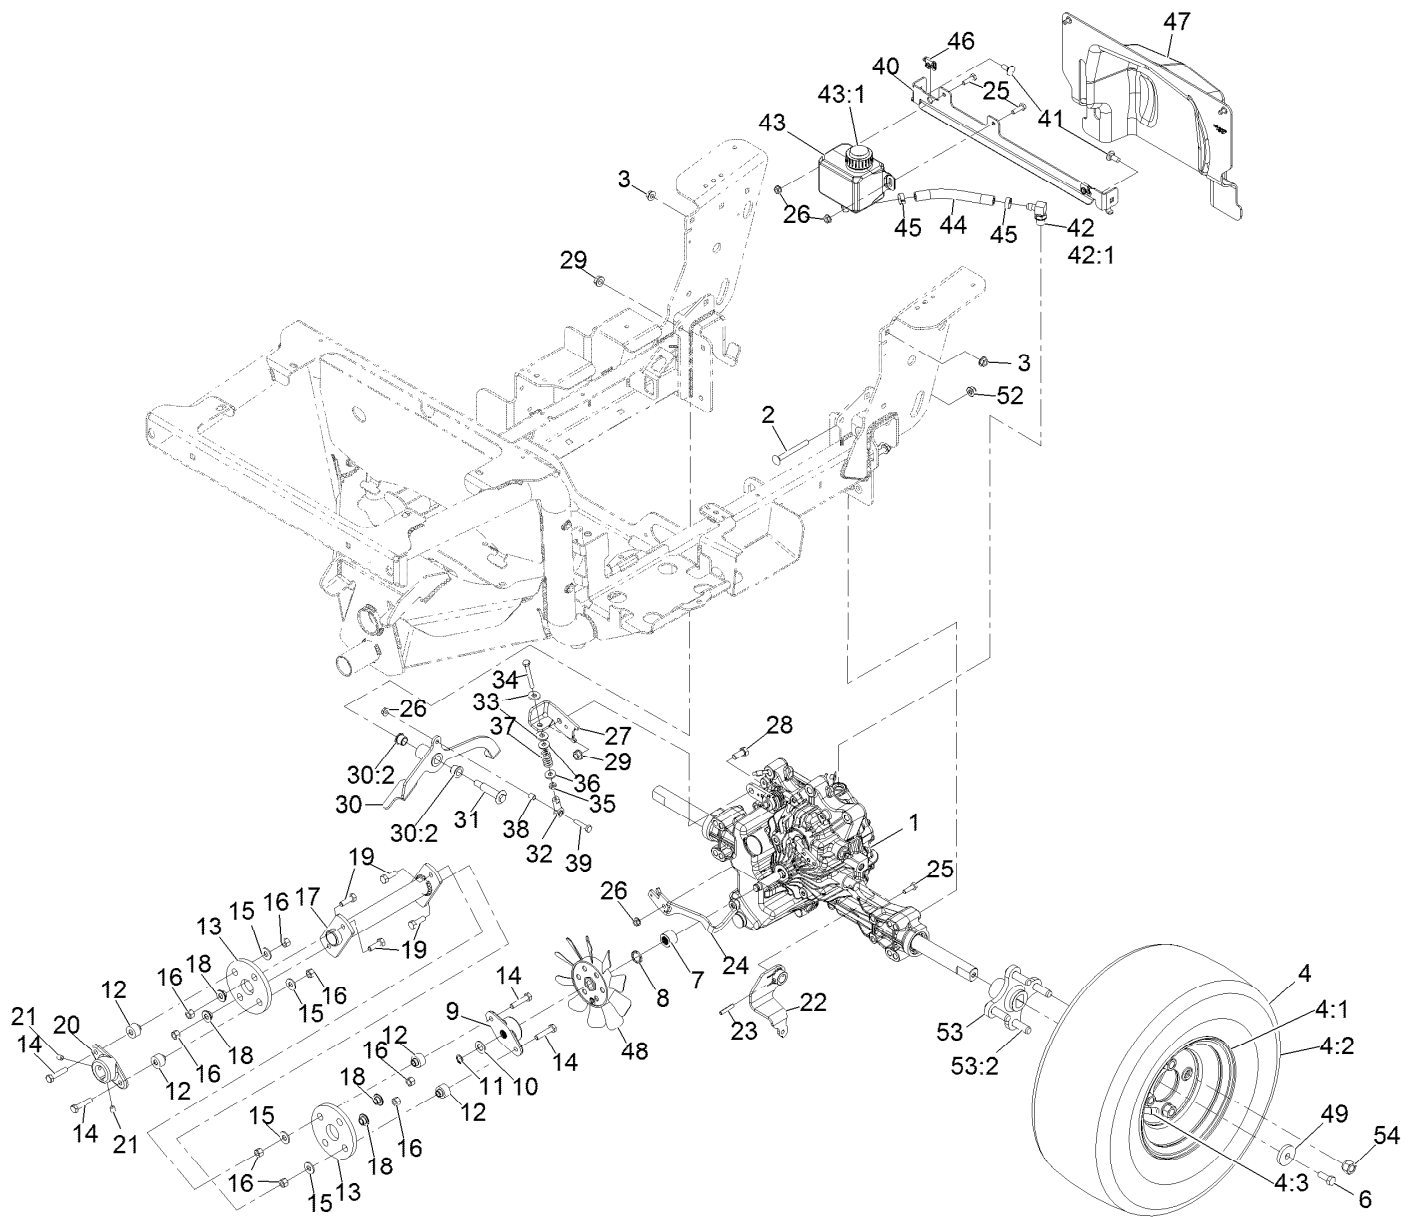


Ground Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-2814	1	Transaxle	27	126-3937-03	1	Arm-Brake
1:99	126-9688	1	Kit-Seal ●	28	126-0520	1	Screw-HH 3/8-16 X 7/8 SS
1:99	135-3175	1	Kit-Transmission Seal ●	29	135-2882	2	Nut-HF
1:99	142-4793	1	Plug-Bore 20 ●	30	126-0433	1	Brake Lever ASM
2	3230-26	4	Screw-CARR	30:2	116-4279	2	Bearing-Flange
3	135-2881	2	Nut-HF	31	92-1057	1	Bolt-Shoulder
4	142-2738	2	Wheel And Tire ASM(18X7.5-8) Black	32	2411-41	1	Rod End-Ball Joint
4:1	119-8907	1	Tire-4 Ply	33	1-303334	2	Washer-Spring Disc 5/16
4:2	142-2739	1	Wheel, 8 X 5.375	34	126-4009	1	Screw-HH
4:3	232-27	1	Stem-Valve	35	3220-1	1	Nut-Jam 1/4-28
6	135-1711	2	Screw-HH	36	3256-78	2	Washer
7	126-2983	1	Spacer-Shaft, Input	37	1-323245	1	Spring-Compression
8	3290-317	1	Washer-Spring	38	612503	1	Spacer
9	116-9787	1	Hub-Shaft, Transaxle	39	321-8	1	Screw-HH 1/4-20 X 1 1/4
10	605256	1	Spacer	40	126-4423-03	1	Bracket-Mount, Tank
11	32151-61	1	Ring-Retaining	41	126-0695	2	Screw-Carriage 5/16-18 X 3/4 SS
12	27-6590	4	Spacer-Coupling, Rubber	42	126-2927	1	Fitting-90 DEG
13	115-4523	2	Coupling-Rubber	42:1	237-42	1	O-Ring
14	3210-8	4	Screw-HH 5/16-24 X 1 1/2	43	126-2578	1	Tank ASM
15	3256-3	4	Washer-5/16 Std	43:1	126-2579	1	Cap-Tank
16	32152-5	8	Nut-Hex 5/16-24	44	126-2842	1	Hose-Expansion
17	135-5223-03	1	Shaft-Drive	45	126-3749	2	Clamp
18	125-9249	4	Spacer-Coupler, Rubber	46	119-1730	2	Receptacle-Clip, Mini
19	3210-5	4	Screw-HH	47	126-1462	1	Transaxle Cover ASM
20	116-9788	1	Hub-Shaft, Engine	48	126-2980	1	Fan-7 Inch
21	3246-18	2	Setscrew-5/16-18 X 3/8	49	1-543610	2	Washer
22	126-6243-03	1	Arm-Motion	52	104-8300	4	Nut-Nyloc 5/16-18 Flg
23	126-4295	1	Pin-Spiral	53	126-9884	2	Wheel Hub ASM
24	126-2811-03	1	Arm-Release	53:2	10-6830	4	Stud-Type, Drive
25	126-0498	3	Screw-HH 1/4-20 X 7/8 SS	54	242-50	4	Nut-Lug 1/2-20
26	135-2880	4	Nut-HF				

● Not illustrated

Transaxle Cover Assembly No. 126-1462

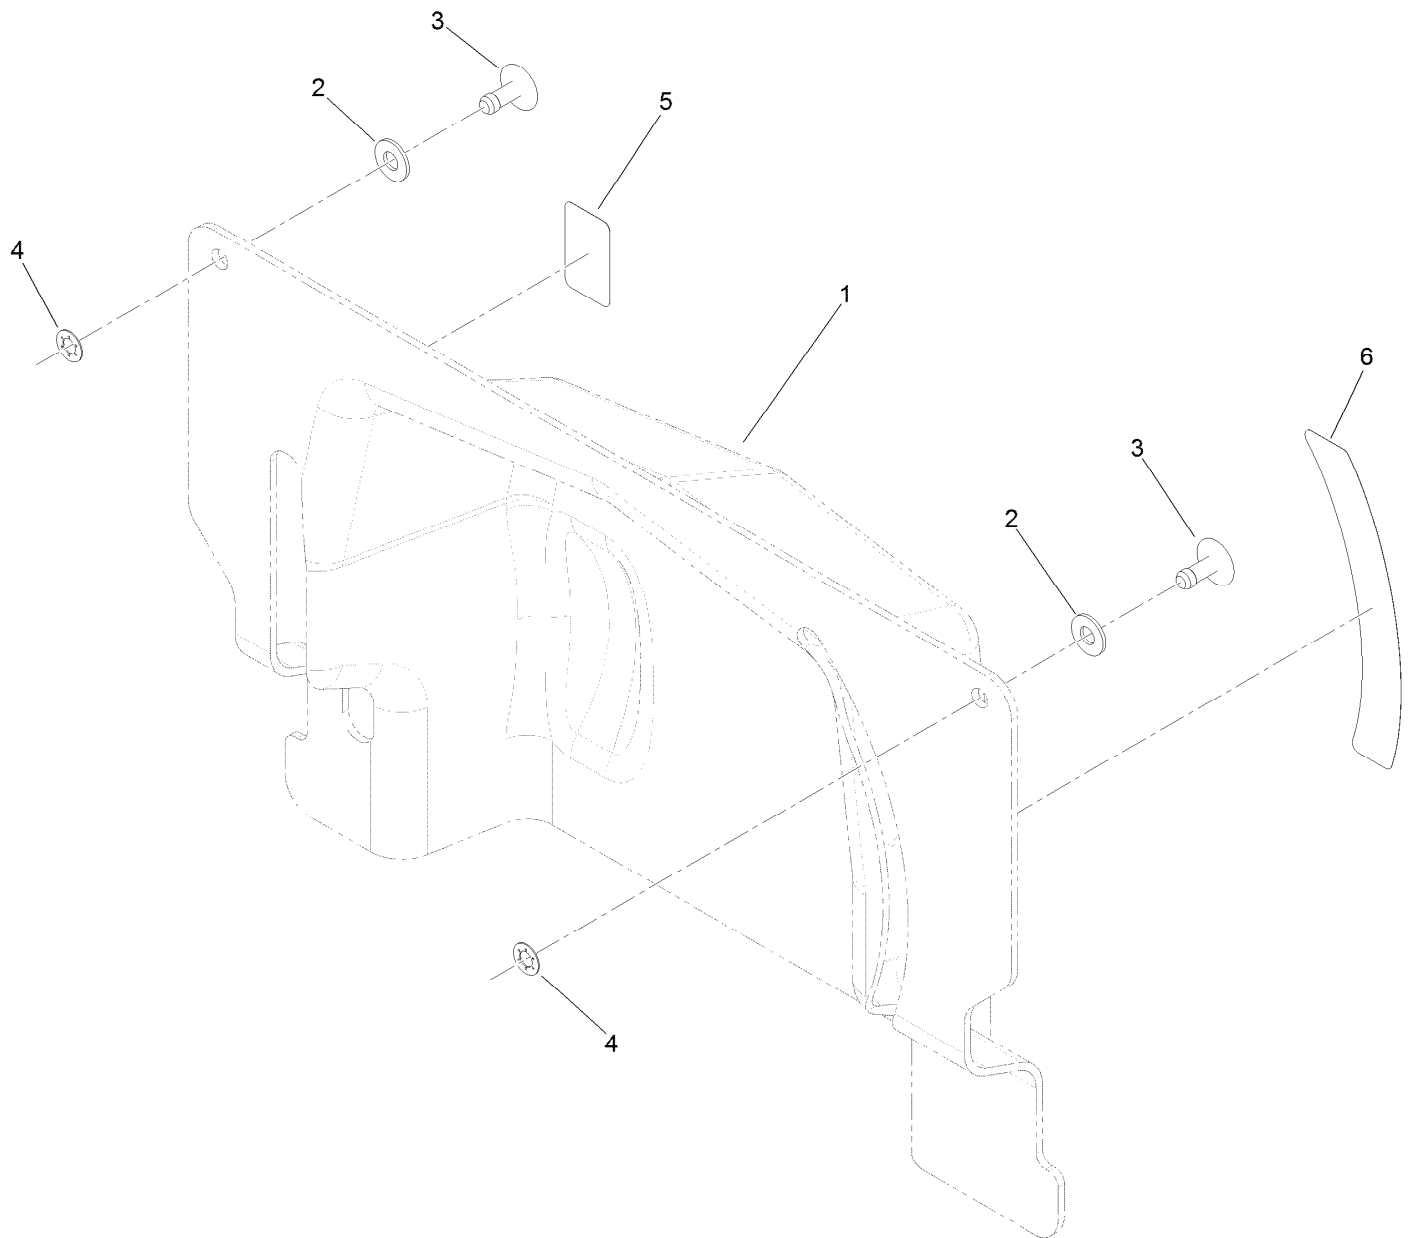


Transaxle Cover Assembly No. 126-1462 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Cover-Transaxle ●
2	360-0140	2	Washer-Flat
3	119-1728	2	Stud-1/4 Turn

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	119-1729	2	Retainer-Stud
5	126-2620	1	Decal-Brake, Park
6	126-2621	1	Decal-Release, Drive

● Not serviced separately

Electrical Assembly

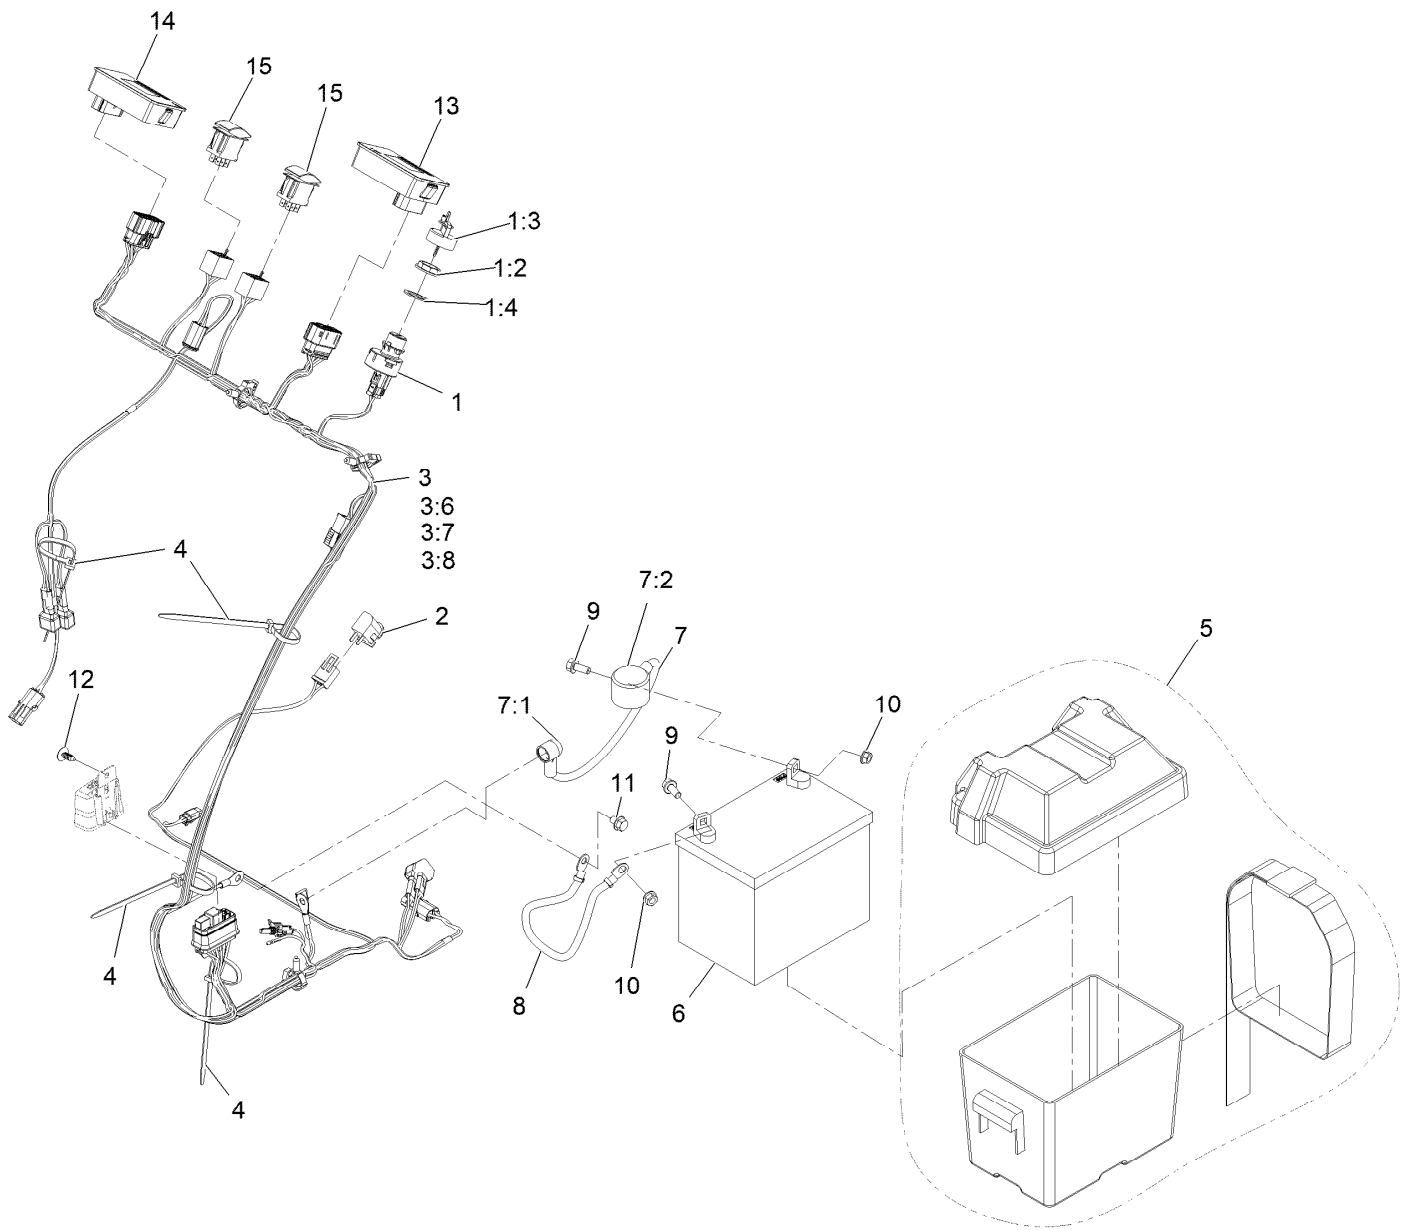

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-6285	1	Ignition Switch ASM	7:1	1-543393	1	Insulator-Solenoid
1:2	108-8660	1	Nut-Mounting	7:2	109-2407	1	Insulator-Battery
1:3	106-5270	1	Ignition Key Set	8	114-9715	1	Cable-Battery, Negative
1:4	108-8659	1	Washer-Backup	9	126-2712	2	Screw-HHF 5/16-18 X 3/4 Serrated SS
2	82-2190	1	Switch	10	135-2881	2	Nut-HF
3	135-6127	1	Harness-Wire	11	68-9410	1	Screw-HHF
3:6	121-8868	2	Fuse-Mini Blade, 20 Amp	12	117-2382	1	Plug-Plastic
3:7	126-3991	1	Relay-Micro	13	135-6674	1	Hour Meter ASM
3:8	135-5221	1	Relay-Coil, NC, Mp280	14	135-6675	1	Hour Meter ASM
4	3290-378	4	Tie-Cable	15	100-1535	2	Switch-Rocker, (On)-Off-(On)
5	126-1424	1	Battery Box				
6		1	Battery ●				
7	135-4669	1	Positive Battery Cable ASM				

● Not serviced separately

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____



Z Turf Equipment is part of the Exmark® family of products.
©2021 Exmark Mfg. Co., Inc. All Rights Reserved. Printed in the USA.
415 Industrial Row • Beatrice, NE 68310 • (402) 223-6375 • Fax (402) 223-5489

www.zturfequipment.com

