

LAWN-BOY®

GoldPro Series™ Walk-Behind Mower Model No. 10525-9900001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	3	Gear Case Assembly No. 92–7869	7
Engine & Blade Assembly	4	Engine Assembly No. 98–1396	8
Rear Axle Assembly	5	Short Block Assembly No. 95–7636	10
Handle And Controls Assembly	6	Carburetor Assembly No. 98–7042	11


Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Bagging Kit	Model No. 89817	Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800	Leaf Shredder Kit	Model No. 89860

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

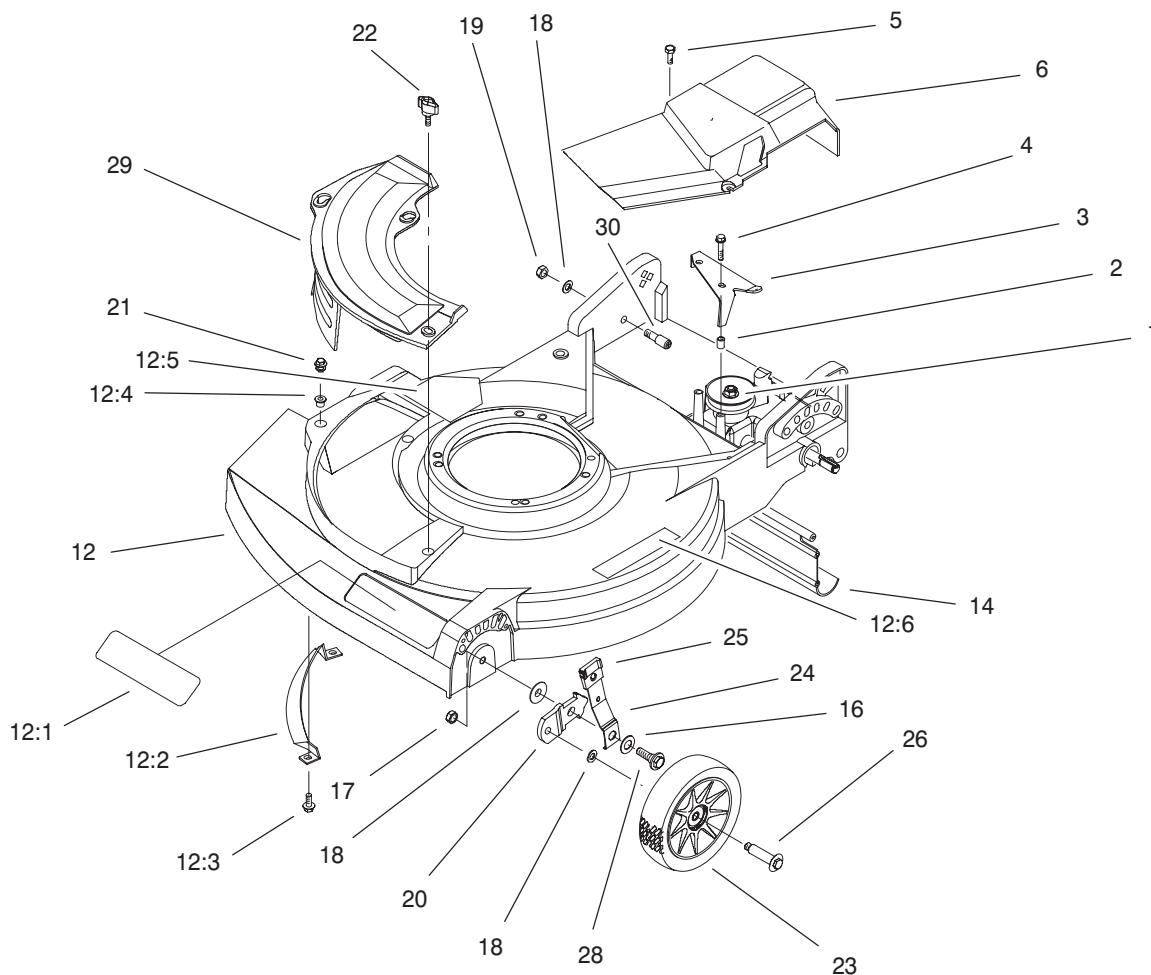


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	92-7869	1	Gear Case ASM
2	46-5551	2	Spacer
3	92-7699-03	1	Bracket-Actuator
4	92-7748	2	Screw-HWH
5	12-5450	2	Screw
6	98-4493	1	Cover-Drive
12	99-1566	1	Housing
12:1	95-7421	1	Decal-Deck
12:2	608175	1	Toe Bar
12:3	46-6811	2	Screw-HWH
12:4	94-1610	3	Grommet-Plastic
12:5	43-8480	1	Decal-Danger
12:6	93-7250	1	Decal-Warning
14	92-7736	1	Shield-Trailing
16	3290-413	2	Washer-Spring
17	3296-39	2	Nut-Lock
18	40-1940	6	Washer
19	610358	2	Nut-Lock
20	95-7403-03	2	Bracket-Wheel Height Adjustment
21	614677	2	Screw-Sems
22	98-8332	1	Knob
23	684776	2	Wheel & Tire ASM
24	92-1006	2	Spring Arm ASM-Front
25	92-1008	4	Knob-Lever, Height Adjustment

Ref. No.	Part No.	Qty.	Description
26	92-1099	2	Bolt-Shoulder
28	92-4856	2	Bolt-Shoulder
29	92-8630	1	Plate-Mulch
30	92-9673	2	Screw-Torx
*99	95-7052	1	Plate-Cover
*99	614249	1	Tie Strap


* Not illustrated

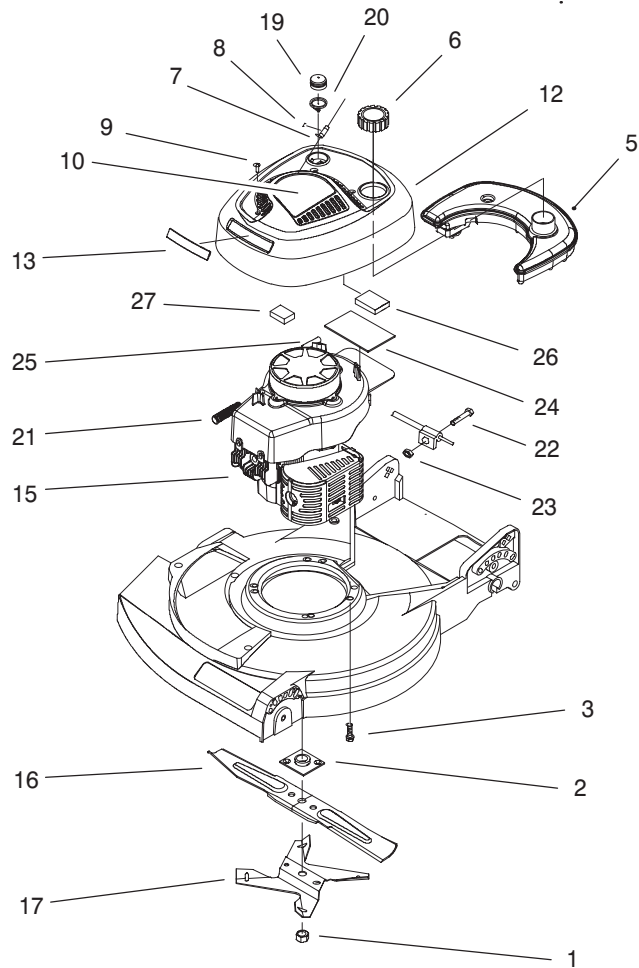

Sheet No.:3

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	603164	1	Nut-Blade				
2	677525	1	Plate & Collar ASM				
3	98-4480	3	Screw-Sems				
5	95-1897	1	Tank				
6	98-8344	1	Cap ASM-Fuel & Oil				
7	47-2480	1	Stop-Rope				
8		1	Staple (Obtain Locally)				
9	95-7621	3	Screw-Pan Sems				
10	95-7420	1	Decal-Recoil				
12	98-7032	1	Shroud & Recoil Cover ASM				
13	92-8615	1	Applique-Shroud				
15		1	Engine ASM				
16	612543	1	Blade				
17	99-6351-03	1	Fan-Mulching				
19	66-7460	1	Bulb-Primer				
20	44-2750	1	Body-Primer				
21	93-4306	1	Spring-Compression				
22	314576	1	Screw-Throttle Cable				
23	306531	1	Nut-Throttle Cable				
24	98-1386	1	Pad-Foam				
25	612782	1	Fuel Line				
26	99-1521	1	Strip-Foam				
27	99-1522	2	Strip-Foam				

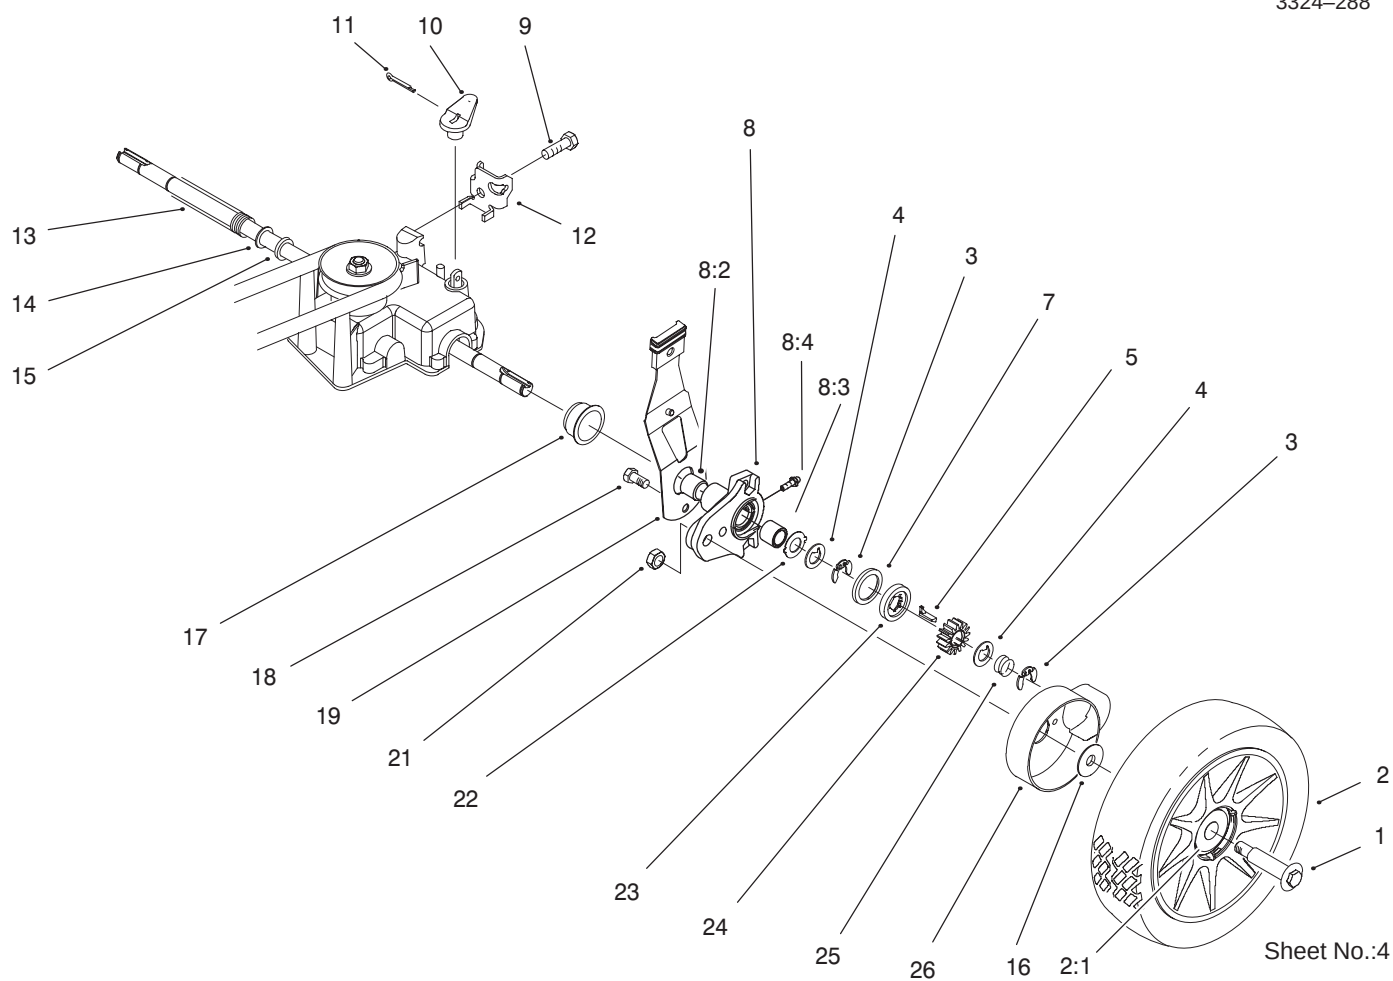


Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	Wheel & Tire ASM
2:1	27-6250	2	Bushing
3	65-2720	4	Ring-Retaining
4	65-4740	4	Washer-Thrust
5	66-6050	1	Key-Rocking LH
*6	66-6040	1	Key-Locking RH
7	65-4710	2	Ring-Friction
8	92-7746	2	Arm ASM-Rear Height Adjustment
8:2	70-9760	2	Bushing
8:3	47-2900	2	Bushing
8:4	302-56	2	Fitting-Grease
9	32144-70	1	Screw-HH
10	60-8821	1	Lever-Shift
11	3272-10	1	Pin-Cotter
12	82-8780	1	Retainer-Cable
13	24-7920	1	Cover-Drive Shaft
14	303259	1	Washer
15	605255	1	Washer-Flat
16	614426	2	Washer-Stepped
17	92-6535	2	Cap-End
18	32144-85	2	Screw-HH
19	92-6540	1	Rear Spring Arm ASM-LH
*20	92-6539	1	Rear Spring Arm

Ref. No.	Part No.	Qty.	Description
21	610358	2	ASM-RH
22	65-4730	2	Nut-Lock
23	65-4760	2	Washer-Arm, Pivot
24	65-4750	2	Washer
25	65-4720	2	Gear-Pinion
26	94-1609	2	Spring-Compression
		2	Cover-Wheel

* Not illustrated

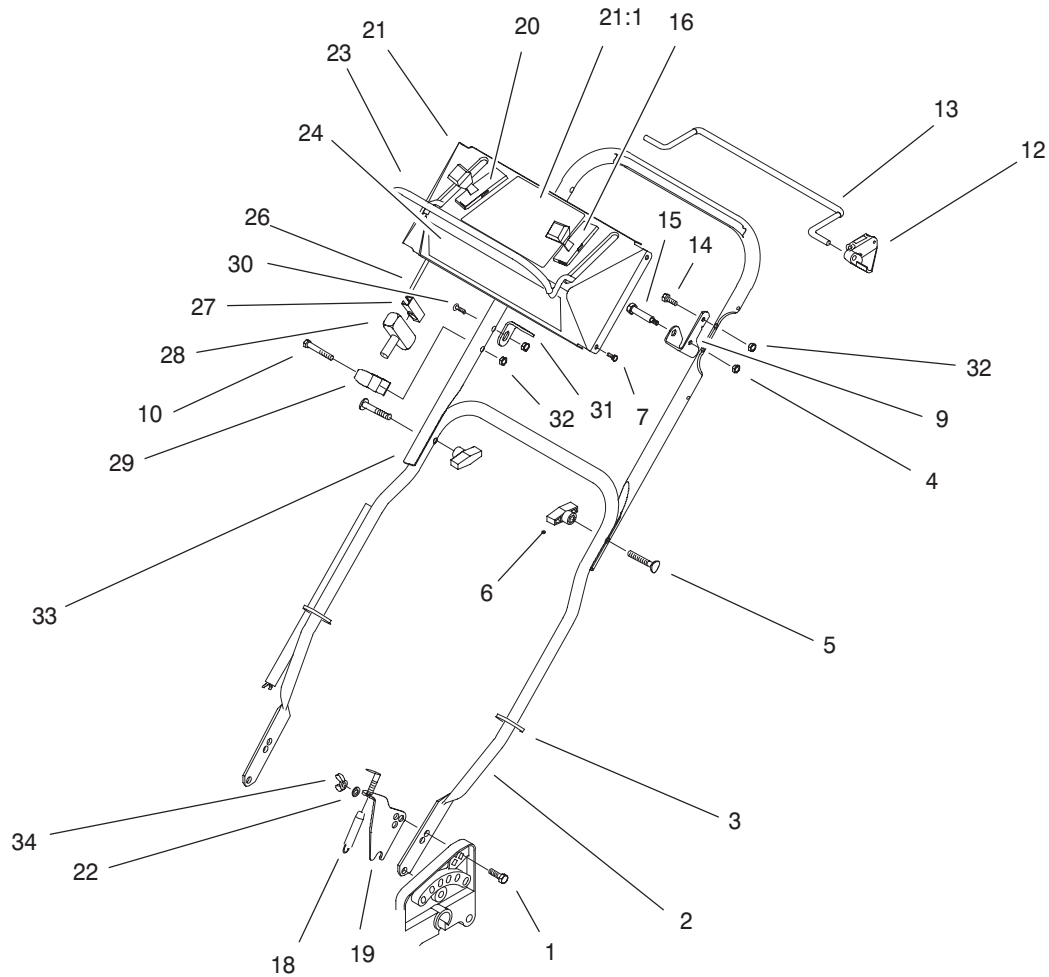


Sheet No.:5

Handle And Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	3230-29	2	Bolt-CARR
2	92-6537-05	1	Handle-Lower
3	614249	2	Tie Strap
4	3296-56	1	Nut-Lock
5	614697	2	Screw-Handle
6	98-7134	2	Knob
7	92-9665	4	Screw
9	92-1094	1	Bracket-Stop, Bail
10	321-51	1	Bolt-HH
12	92-5412	1	Stop-Pivot
13	92-1001-03	1	Bail-Control
14	321-4	1	Screw-HH
15	613050	1	Bolt
16	95-7410	1	Control ASM-Throttle
18	92-6518	1	Cable-Traction
19	92-7899-03	1	Bracket-Traction
			Cable
20	92-8926	1	Cable-Ground Speed
21	99-1563	1	Control Panel ASM
21:1	98-4469	1	Decal-Control Panel
22	3253-33	2	Washer-Lock
23	92-1093	1	Bail-Engine Control
24	98-1565	1	Decal-Panel
26	95-7411	1	Brake Cable ASM
27	612824	1	Starter-Clip
28	612825	1	Handle-Start


Ref. No.	Part No.	Qty.	Description
29	93-7383	1	Guide-Rope
30	92-2268	1	Screw-Handle
31	92-2928	1	Bracket-Anchor, Cable
32	3296-73	3	Nut-Lock
33	92-1092-05	1	Handle-Upper
34	32103-29	2	Nut-Wing

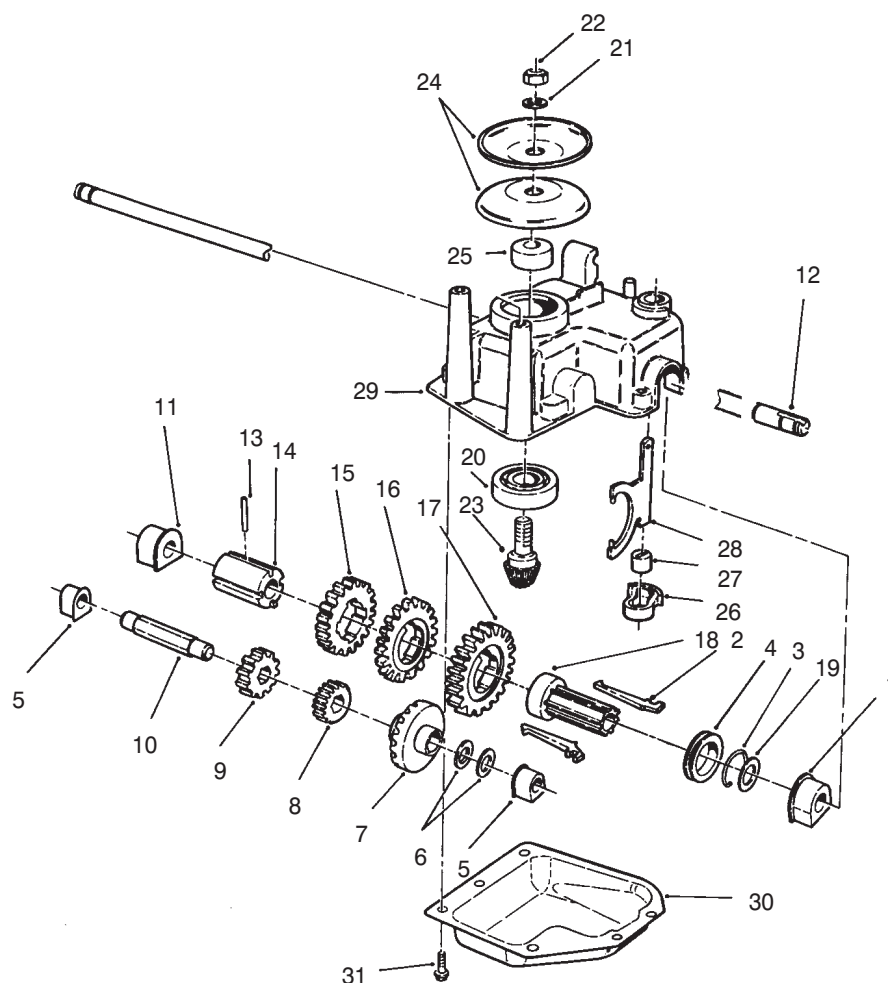

Sheet No.:300

Gear Case Assembly No. 92-7869

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	60-8770	1	Bushing-Output Shaft	27	29-9570	1	Bushing-Yoke
2	76-0760	2	Key-Shift	28	60-8870	1	Yoke-Shift
3	65-5250	1	Clip-Spring	29	60-8710	1	Gearcase-Upper
4	76-0770	1	Collar-Shift	30	60-8730	1	Cover-Gearcase
5	60-8750	2	Bushing	31	49-2040	6	Screw-HH
6	36-4791	2	Washer-Thrust				
7	55-3760	1	Pinion-15T				
8	55-3780	1	Pinion-20T				
9	55-3800	1	Pinion-25T				
10	60-8800	1	Shaft-Intermediate				
11	60-8850	1	Bushing-Output				
12	65-4770	1	Shaft-Output				
13	3285-19	1	Pin-Spirol				
14	60-8790	1	Sleeve-Gear				
15	55-3810	1	Gear-39T				
16	55-3790	1	Gear-44T				
17	55-3770	1	Gear-49T				
18	76-0780	1	Sleeve-Shift Key				
19	36-4780	1	Washer-Thrust				
20	38-7820	1	Bearing-Ball				
21	3256-24	1	Washer-Flat				
22	3296-5	1	Nut-Lock				
23	95-1731	1	Pinion-Bevel				
24	60-8840	2	Pulley-Half				
25	95-5550	1	Spacer-Pulley				
26	60-8810	1	Retainer-Shift-Fork				

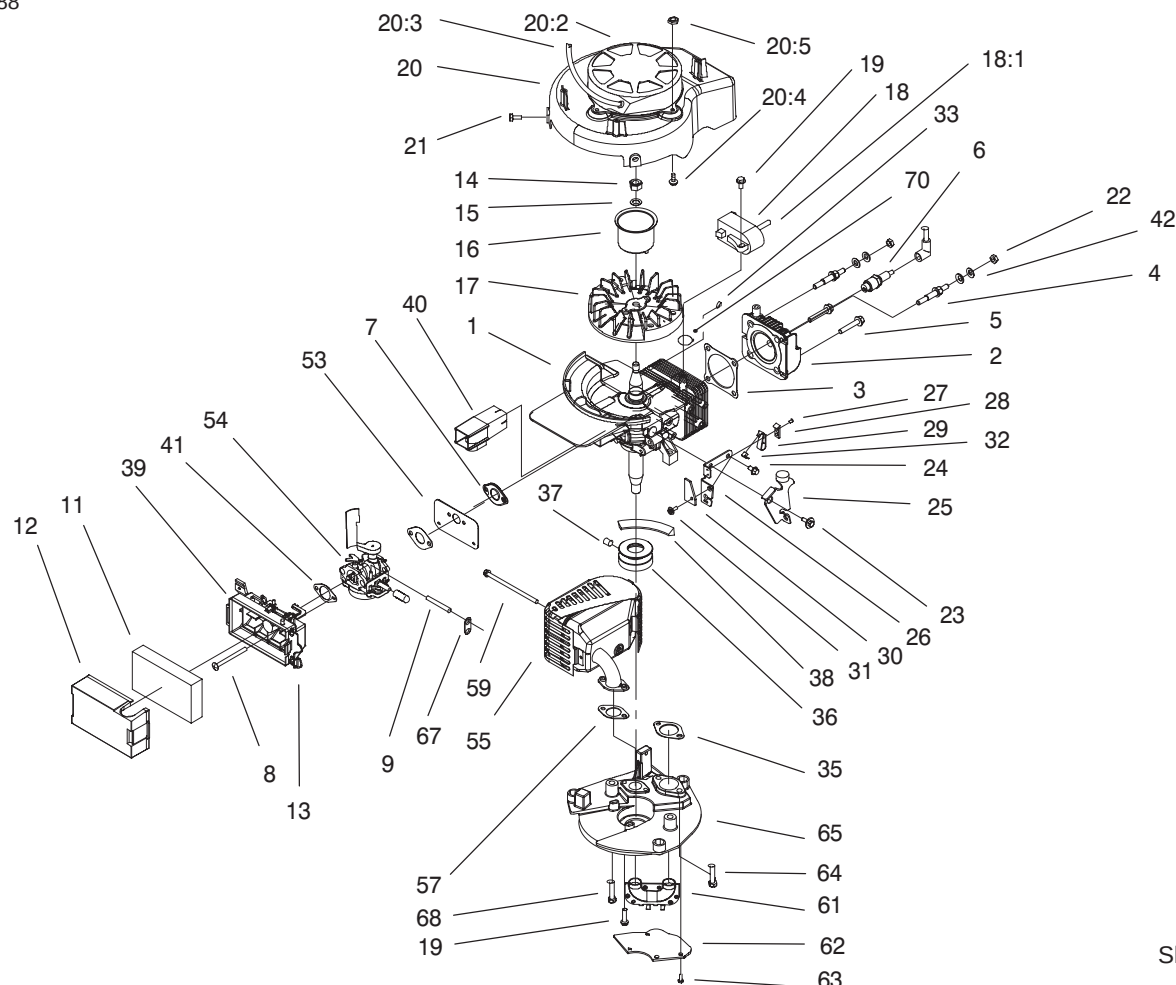


Sheet No.:2

Engine Assembly No. 98-1396

Ref. No.	Part No.	Qty.	Description
1	95-7636	1	Short Block ASM
2	94-5776	1	Head-Cylinder
3	94-5778	1	Gasket-Head
4	94-5779	2	Stud
5	94-5780	2	Bolt - Head
6	50-1170	1	Plug-Spark
7	94-5795	2	Gasket-Intake
8	612507	2	Screw
9	95-1861	1	Hose-Primer
11	95-5574	1	Filter-Air
12	95-5577	1	Cover-Air Filter
13	610383	1	Retainer-Filter Cover
14	130743	1	Nut
15	316959	1	Washer-Lock
16	95-1786	1	Cup-Starter
17	95-1866	1	Flywheel
18	92-1152	1	Module-Ignition
18:1	681678	1	Clip-High Tension Lead
*18:2	684698	1	Lead-High Tension
19	613208	4	Screw
20	95-1868	1	Shroud-Recoil
20:2	99-6713	1	Recoil And Decal ASM
20:3	613773	1	Rope
20:4	3290-321	4	Screw-HWH
20:5	3296-2	4	Nut-Lock

Ref. No.	Part No.	Qty.	Description
21	700094	2	Screw-HH
22	146501	2	Nut
23	95-1870	1	Screw-Shoulder
24	95-1871	1	Screw-HWH
25	93-4312	1	Brake Plate ASM
26	84-7820	1	Plate-Brake
27	3290-459	2	Rivet-Plastic
28	92-2925	1	Strap-Insulation
29	60-9010	1	Strap-Ground
30	100-2929	1	Stop-Ground Strap
31	12-5450	1	Screw
32	98-7037	1	Lead Wire-Brake Switch
33	607199	1	Key
35	95-1778	1	Gasket-Exhaust
36	95-1878	1	Pulley
37	104-0214	1	Screw-Set, Cone Point
38	92-1043	1	V Belt
39	95-5588	1	Air Base ASM
40	95-5578	1	Tunnel-Inlet
41	95-7613	1	Gasket-Filter
42	3290-456	4	Washer-Belleville
*51	609790	1	Sealer-Loctite 50cc
53	98-1388	1	Shield-Carburetor


* Not illustrated

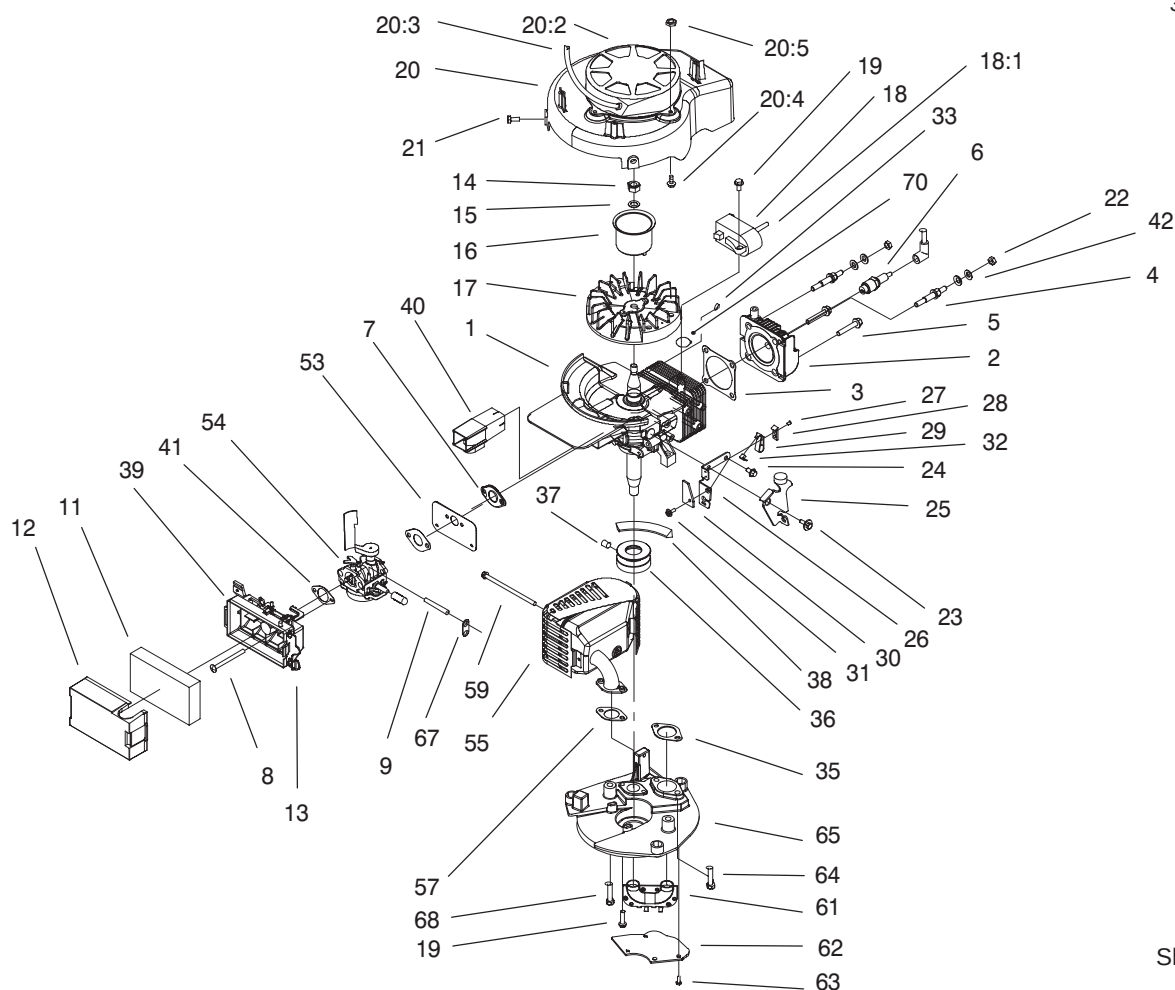

Sheet No.:2

Engine Assembly No. 98-1396 (Continued)

Ref. No.	Part No.	Qty.	Description
54	98-7042	1	Carburetor ASM With Gaskets
55	100-9514	1	Muffler And Guard ASM
57	98-1392	1	Gasket
59	611228	1	Bolt-Console
61	98-1557	1	Pipe-Transfer
62	98-1591	1	Cover-Muffler
63	700822	4	Screw-HH
64	322-17	2	Screw-HH
65	98-1383	1	Plate-Mounting
67	95-7615	1	Hose-Retainer
68	613233	2	Screw
70	317893	1	Strap-Tie

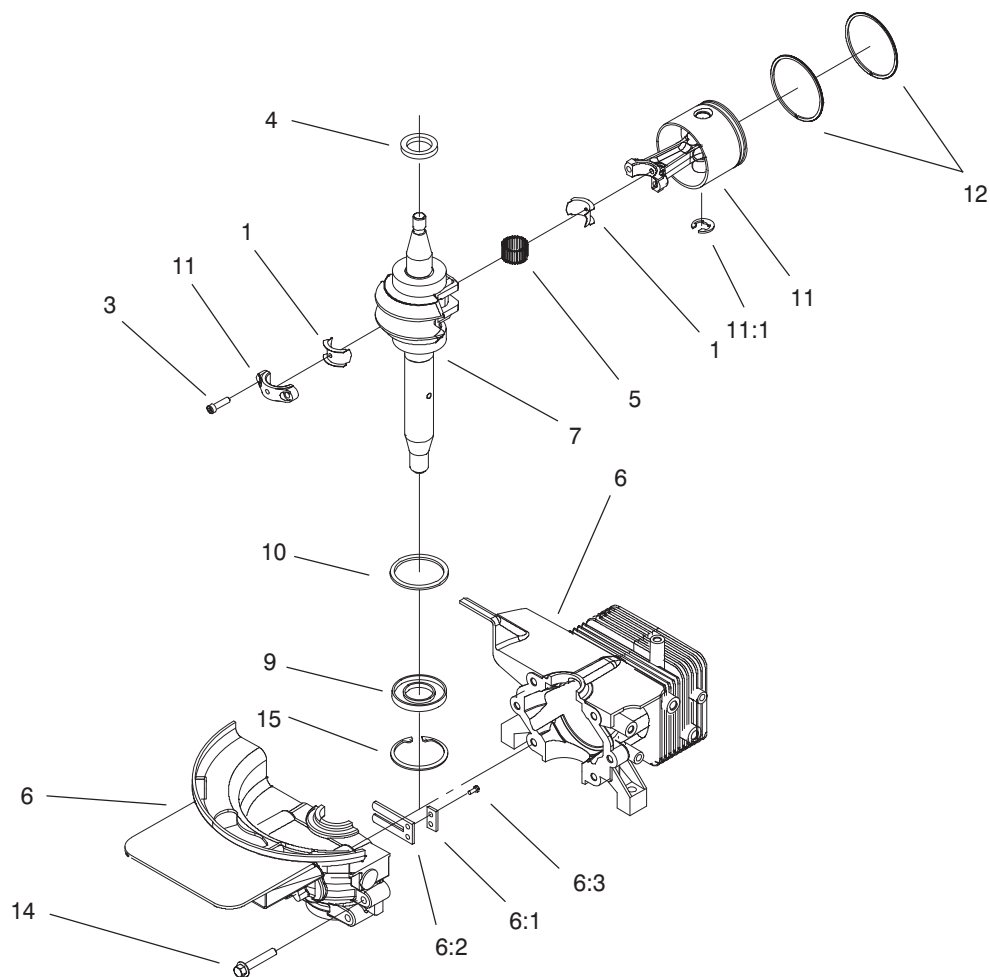

Sheet No.:


C-2958

Short Block Assembly No. 95-7636

Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner ASM
*2	609790	1	Sealer–Loctite 50cc
*2	610372	1	Sealer–Loctite 6cc
3	611393	2	Screw–HSH
4	611396	1	Seal–Oil
5	683911	1	Bearing–Needle
6	95–7631	1	Cylinder And Crankcase ASM
6:1	602587	1	Plate–Backup, Reed
6:2	602588	1	Reed–Carburetor
6:3	612872	2	Screw–HH
7	99–2920	1	Crankshaft And Bearing ASM
9	94–5764	1	Seal–Oil
10	94–5765	1	Ring–Retaining
11	95–7629	1	Connecting Rod ASM
11:1	303712	2	Ring – Retaining
*11:5	100–2916	1	Piston And Rings ASM
12	100–2917	1	Ring Set
14	94–5781	6	Screw
15	98–7046	1	Ring – Retaining

Ref. No.	Part No.	Qty.	Description

* Not illustrated

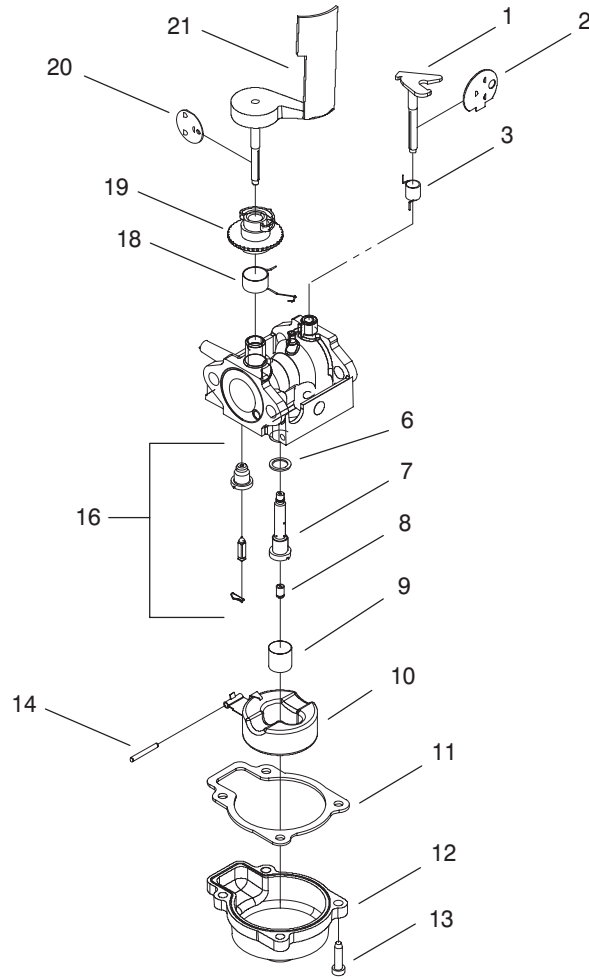

Sheet No.:A2

Carburetor Assembly No. 98-7042

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc-Choke				
3	95-5583	1	Spring-Choke				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Jet-Main				
9	94-5787	1	Filter-Fuel				
10	95-1899	1	Float & Arm ASM				
11	98-1362	1	Gasket				
12	92-9691	1	Chamber-Float				
13	608850	4	Screw-HH				
14	92-6389	1	Pin-Straight				
16	92-9697	1	Val/Seat-Float				
18	98-7011	1	Spring-Throttle				
19	610834	1	Collar-Adjust, Airvane				
20	98-7047	1	Disc-Throttle				
21	92-6376	1	Air Vane & Shaft				

LAWN-BOY®