



Count on it.

Parts Catalog

Reelmaster® 4000-D 2 Wheel Drive

Model No. 03706—Serial No. 260000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Foot Rest and Traction Pedal Assembly	5
Floor Plate Assembly	7
Steering Tower Assembly	8
Steering Control Assembly No. 92-9220	9
Steering Tower Electrical Assembly	10
Center Console Assembly	11
Control Panel Assembly	12
Parking Brake, Throttle and Oil Filter Assembly	13
Valve Control Assembly	15
Valve Motor Spool Assembly No. 63-4800	17
Control Valve Assembly No. 93-1432	18
Priority Flow Control Valve Assembly No. 58-5490	19
Seat Platform and Filler Cap Assembly	20
Deluxe Seat Assembly No. 110-0838	21
Front and Rear Canopy Assembly	22
Radiator, Oil Cooler and Air Cleaner Assembly	24
Air Cleaner Assembly No. 100-2597	26
Fuel Filter Assembly No. 104-5218	27
Fuel Tank and Lower Body Assembly	28
Front Carrier Assembly	29
Front Reel Shut-Off Assembly	30
Reel Shut-Off Valve Assembly No. 58-5460	31
Front Lift Arm and A-Frame Assembly	32
Reel Motor Assembly No. 93-1412	33
Hydraulic Cylinder Assembly No. 104-5225	34
Rear Lift Arm and Shut-Off Assembly	35
Front Wheel and Motor Assembly	37
Piston Motor Assembly No. 58-5430	38
Drive Gear Assembly No. 108-1434-03	39
Engine Installation Assembly	40
Engine Attachment Assembly	41
Hydraulic Pump Assembly	42
Variable Piston Pump Assembly No. 99-6495	43
Variable Piston Pump Assembly No. 99-6494	44
Pump Assembly No. 86-6000-01	45
Hydraulic Circuit - Steering and Traction Assembly	46
Hydraulic Circuit - Lift Arm Assembly	47
Hydraulic Circuit - Cutting Unit Assembly	48
Steering Axle Assembly	49
Hydraulic Cylinder Assembly No. 77-4800	51
Frame and Muffler Assembly	52
Electrical System Diagram and Relay Assembly	54
Crankcase Assembly	56
Oil Pan and Dipstick Assembly	57
Cylinder Head Assembly	58
Gear Case Assembly	59
Head Cover Assembly	60
Main Bearing Assembly	61
Camshaft and Idle Gear Shaft Assembly	62
Piston and Crankshaft Assembly	63
Flywheel Assembly	64
Fuel Camshaft and Governor Shaft Assembly	65
Engine Stop Lever Assembly	66
Injection Pump Assembly	67

Contents (continued)

Governor Assembly 68

Speed Control Plate Assembly. 69

Nozzle Holder and Glow Plug Assembly 70

Alternator and Pulley Assembly 71

Alternator (Component Part) Assembly 72

Starter Assembly 73

Starter (Component Part) Assembly No. 98-7734 74

Oil Switch and Plug Assembly 75

Water Flange and Thermostat Assembly 76

Water Pump Assembly 77

 
Valve and Rocker Assembly 78

Inlet Manifold Assembly 79

Exhaust Manifold Assembly 80

Gasket Kit Assembly 81


Attachments and Accessories 82

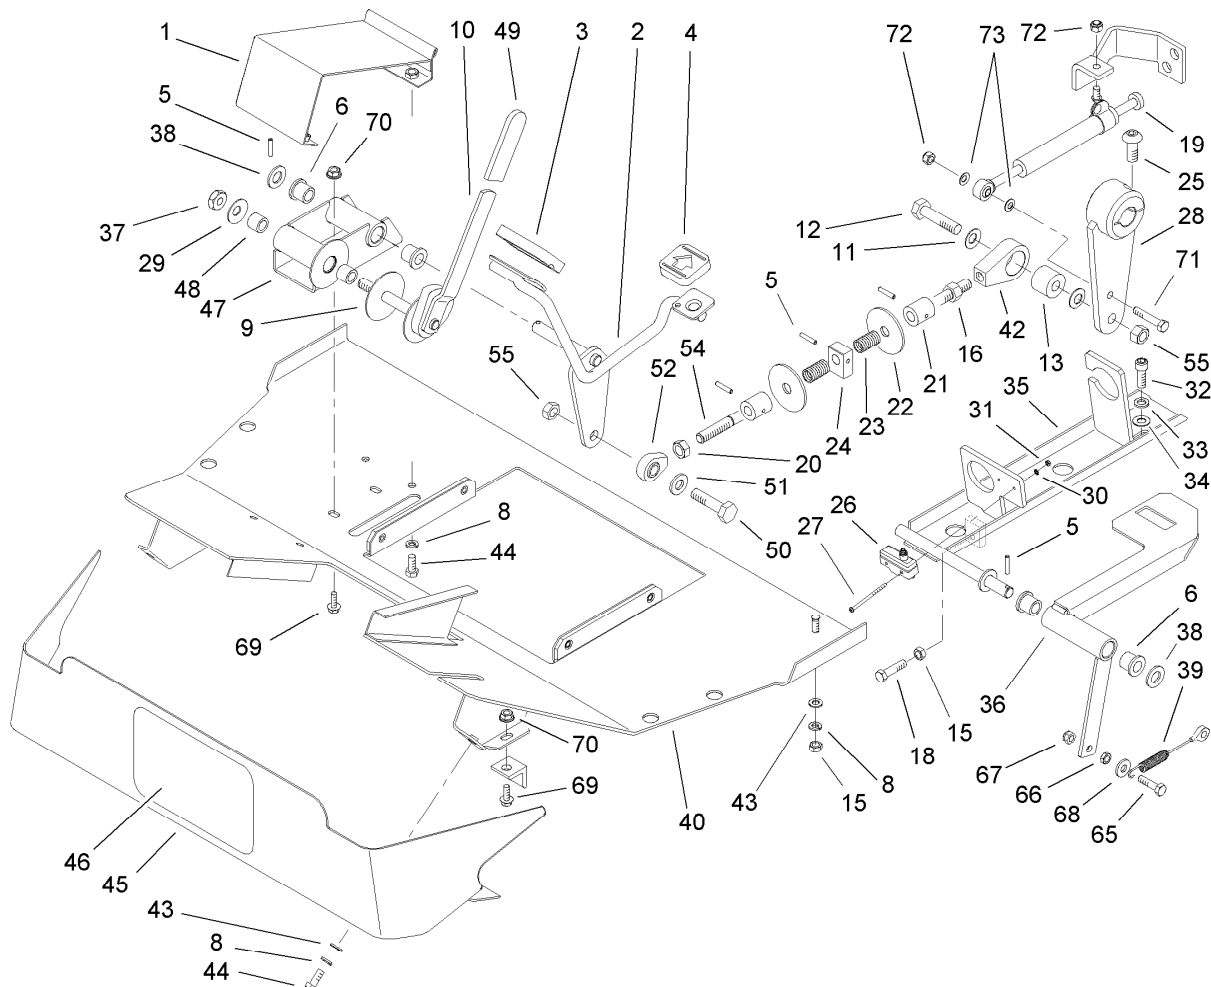

Foot Rest and Traction Pedal Assembly

Ref.	Part Number	Qty.	Description
1	58-9580-03	1	Rest-Foot
2	60-0640-01	1	Pedal-Traction
3	74-9100	1	Pad-Pedal, Forward
4	74-9110	1	Pad-Pedal, Reverse
5	60-2110	5	Pin
6	48-6790	4	Bearing
8	42-9850	10	Washer-Lock, Spring
9	3-2858	1	Disc-Friction
10	60-1130	1	Lever
11	3290-483	3	Washer-Conical
12	325-9	1	Screw-HH
13	47-7030	1	Bushing-Rubber
15	33014-00	5	Nut-Hex
16	3217-9	1	Nut-HH
18	48-7740	2	Screw
19	48-7100	1	Damper-Steering
20	3219-5	1	Nut-Hex
21	58-4310	2	Collar-Pinned
22	58-5100	2	Washer-Traction
23	60-5700	2	Spring
24	58-9010	1	Tab-Clamp
25	3274-89	1	Screw-HSH
26	29-6163	1	Switch-Micro
27	3249-11	2	Screw-Machine
28	98-1209-03	1	Lever-Pump
29	60-6990	1	Washer
30	3255-24	2	Washer-Lock / EXT
31	3217-29	2	Nut-Hex


Ref.	Part Number	Qty.	Description
32	3274-7	2	Screw-HSH
33	3253-5	2	Washer-Lock
34	3256-24	2	Washer-Flat
35	60-0730-01	1	Bracket-Lock, Neutral
36	92-9228-03	1	Lever
37	3296-19	1	Nut-Hex
38	60-6740	3	Washer
39	92-9221	1	Cable ASM
40	92-4730-03	1	Plate-Floor
42	60-0760	1	Clevis-Rod, Traction
43	33094-00	6	Washer-Plain
44	33114-020	7	Screw-HH
45	58-0400-01	1	Shroud
46	62-7400	1	Decal
47	60-0600-03	1	Bracket-Pivot
48	60-1110	2	Bushing
49	3-7877	1	Grip-Handle
50	325-7	1	Screw-HH
51	3256-26	1	Washer-Flat
52	2411-44	1	End-Rod
54	76-3430	1	Rod-Traction
55	3296-25	2	Nut-Lock, NI
65	322-6	1	Screw-HH
66	3218-2	1	Nut-Jam
67	3296-29	1	Nut-Lock, NI
68	3256-3	1	Washer-Flat
69	3234-5	4	Screw-HHF
70	32128-20	4	Nut-HF

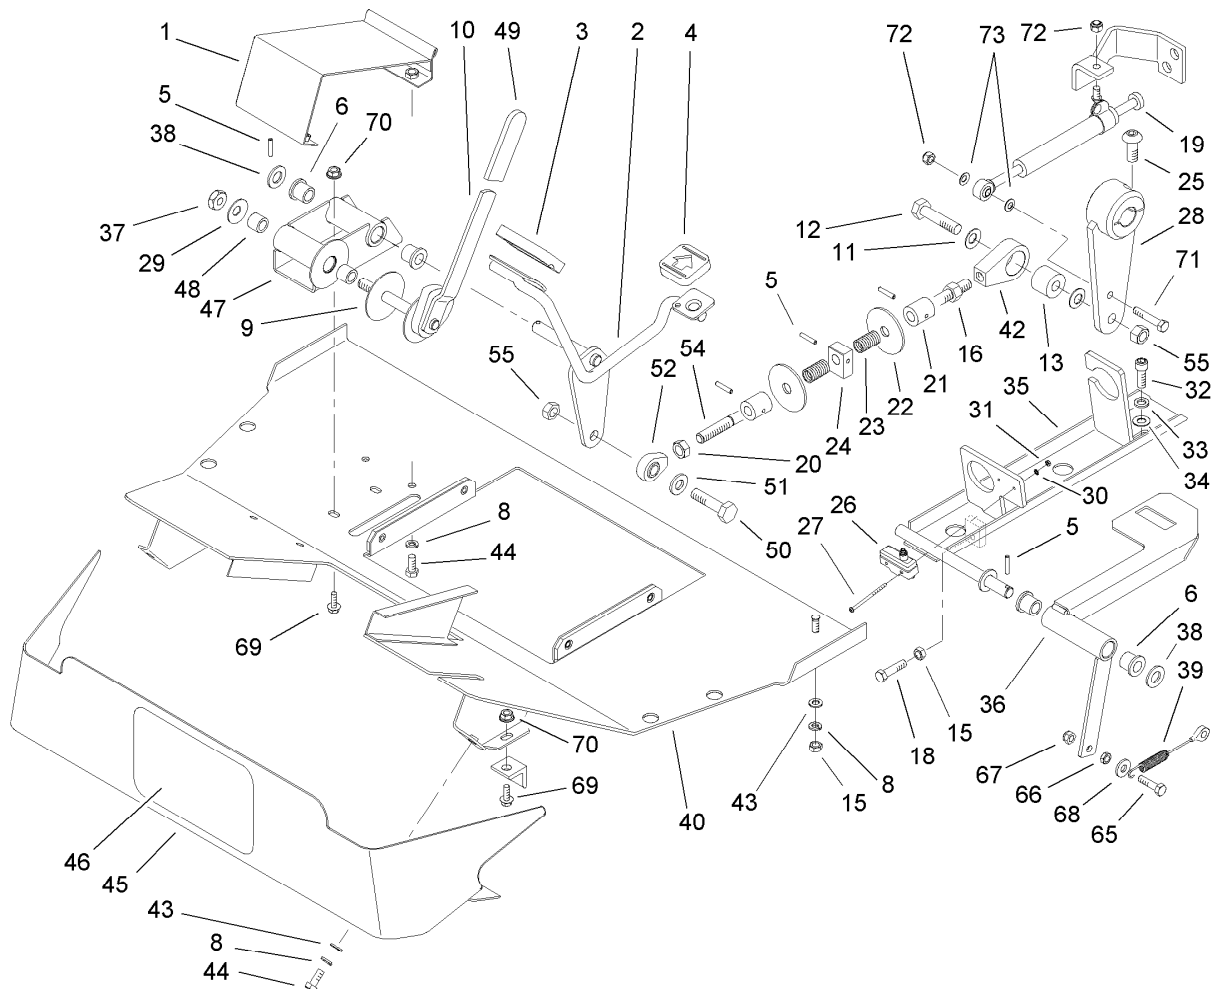 

Foot Rest and Traction Pedal Assembly (continued)


Ref.	Part Number	Qty.	Description
71	33114-045	1	Screw-HH

Ref.	Part Number	Qty.	Description
72	33024-00	2	Nut-Lock, NI
73	3290-482	2	Washer-Belleville

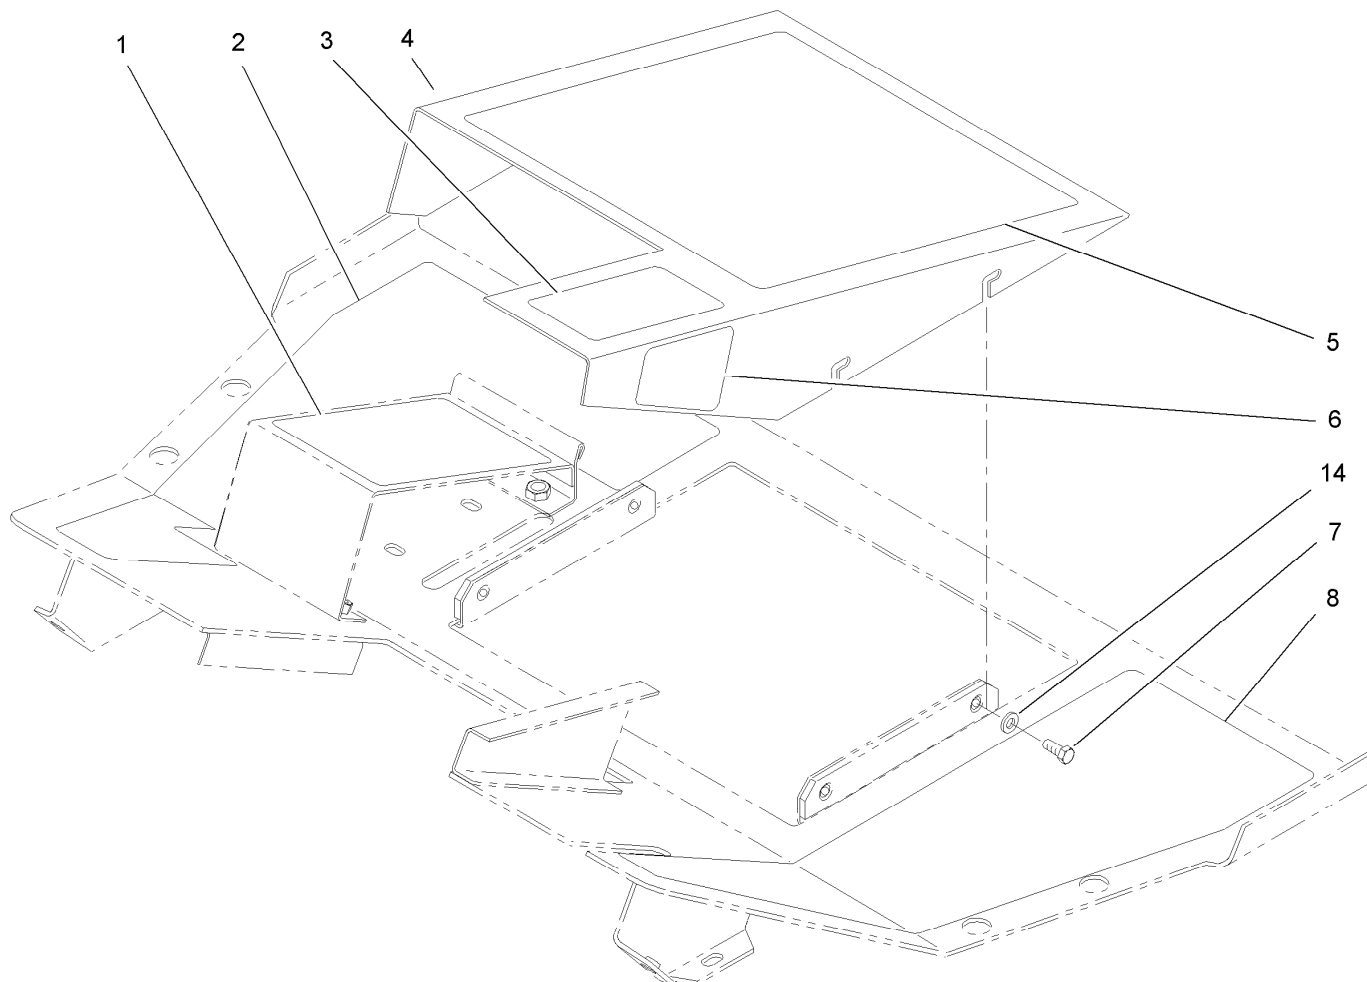 

Floor Plate Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	59-7280	1	Pad-Pedal, Traction
2	58-6510	1	Pad-Footrest, RH
3	62-6440	1	Pad-Foot
4	58-7390-03	1	Footrest
5	58-6630	1	Pad-Floor, Center
6	93-9409	1	Decal-Latch
7	33113-016	3	Screw-HH
8	58-6620	1	Pad-Footrest, LH
14	3256-16	3	Washer-Flat

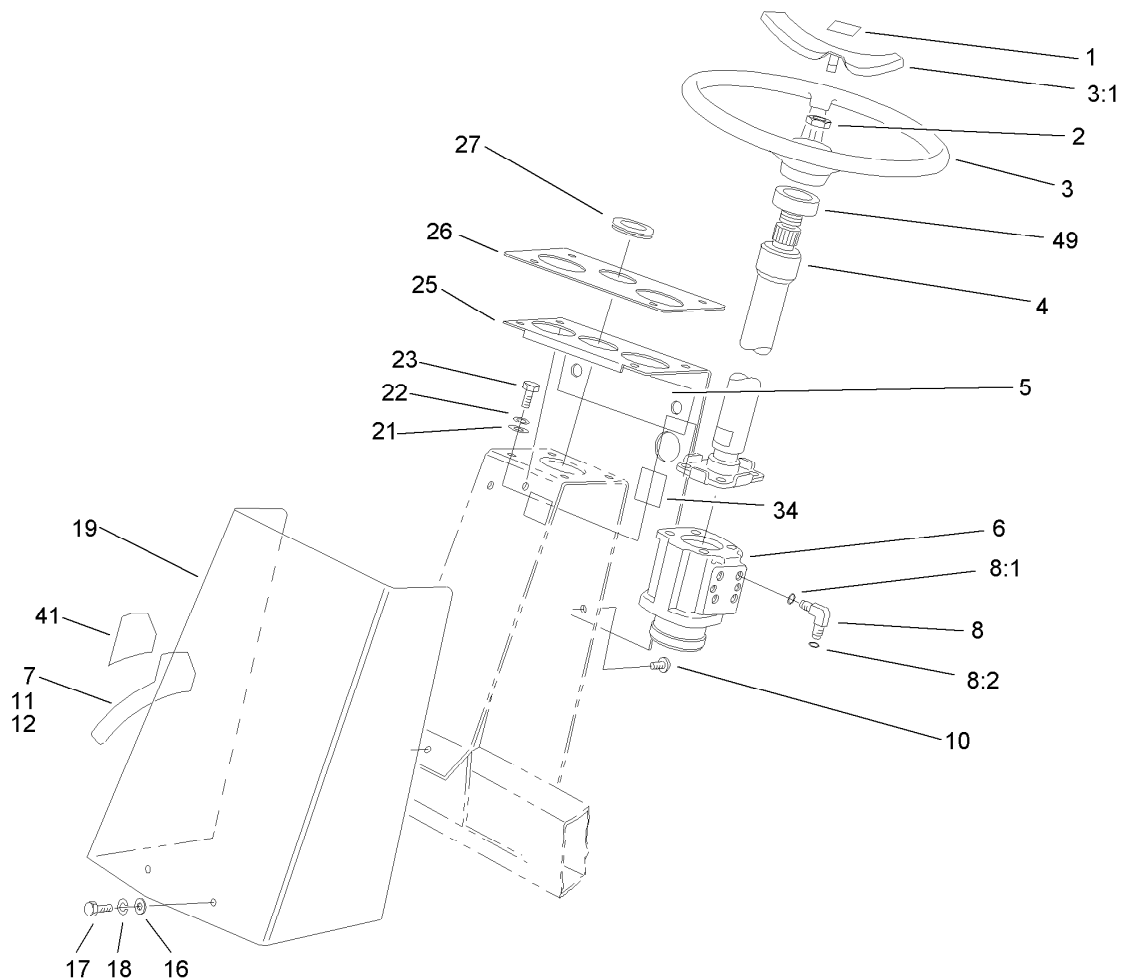 

Steering Tower Assembly

Ref.	Part Number	Qty.	Description
1	98-1459	1	Decal
2	94-9952	1	Nut-Hex
3	98-1471	1	Wheel-Steering
3:1	98-1468	1	Cover-Wheel, Steering
4	98-3808	1	Column-Steering
5	93-9399	1	Decal-Noise
6	92-9220	1	Steering Control ASM
7	93-9397	1	Decal-Speed, Ground
8	340-18	4	Fitting-HYD, 90 DEG
8:1	237-79	1	O-Ring
8:2	237-22	1	O-Ring
10	60-3260	1	Screw-PPH
11	63-4330	1	Decal-Overlay, 5 Blade
12	63-4340	1	Decal-Overlay, 11 Blade

Ref.	Part Number	Qty.	Description
16	33093-00	2	Washer-Flat
17	33113-012	2	Screw-HH
18	43-5930	2	Washer-Lock, Spring
19	58-0500-01	1	Cover-Valve, Steering
21	3256-24	4	Washer-Flat
22	3253-5	4	Washer-Lock
23	323-8	4	Screw-HH
25	82-9310-03	1	Panel-Display
26	107-1817	1	Decal-Panel, Display
27	60-0790	1	Grommet
34	105-4674	1	Decal-Noise
41	93-9427	1	Decal-Clip, 5 Blade
49	21-9260	1	Cover-Dust

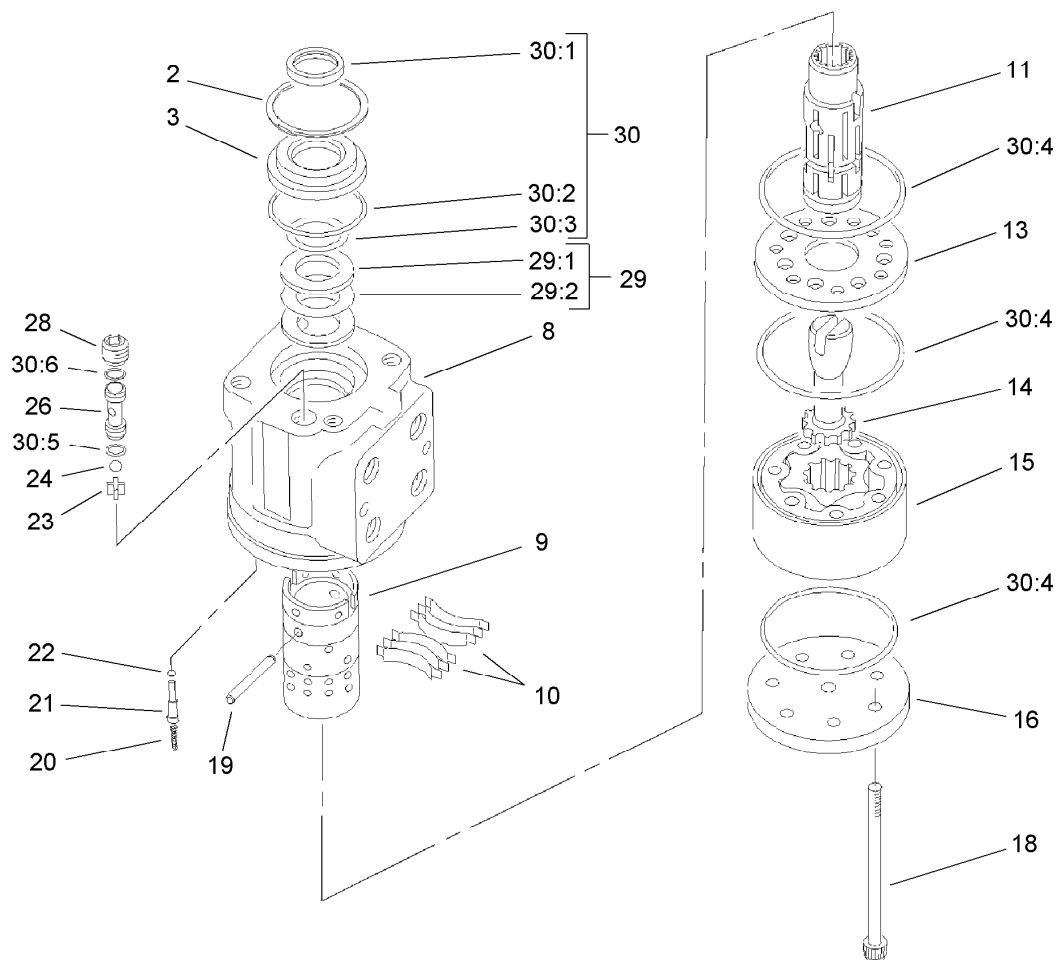 


Steering Control Assembly No. 92-9220

Ref.	Part Number	Qty.	Description
2	52-9230	1	Ring-Retaining
3	52-9240	1	Bushing
8		1	Housing ●
9		1	Sleeve-Control ●
10	59-6820	1	Centering Spring Kit
11		1	Spool-Control ●
13	92-9732	1	Plate-Wear
14	59-6860	1	Drive
15	59-6870	1	Gerotor
16	92-9730	1	Cap-End
18	92-9733	7	Screw-Cap
19	59-6830	1	Centering Pin Kit
20	74-3090	2	Spring-Anti-Cav
21	92-9737	2	Plug-Retainer
22	74-3140	2	Ball-Check, Anti-Cav


Ref.	Part Number	Qty.	Description
23	52-9290	1	Retainer-Checkball
24	52-9280	1	Checkball
26	52-9270	1	Seat-Checkball
28	52-9260	1	Screw-Set
29	52-9250	1	Bearing Kit
29:1	59-6730	2	Race
29:2	59-6740	1	Bearing
30	92-9749	1	Seal Kit
30:1		1	Seal-Dust ●
30:2		1	Seal-Dust ●
30:3		1	Seal-Dust ●
30:4		3	Seal-Dust ●
30:5		1	Seal-Dust ●
30:6		1	Seal-Dust ●

 ● Not serviced separately

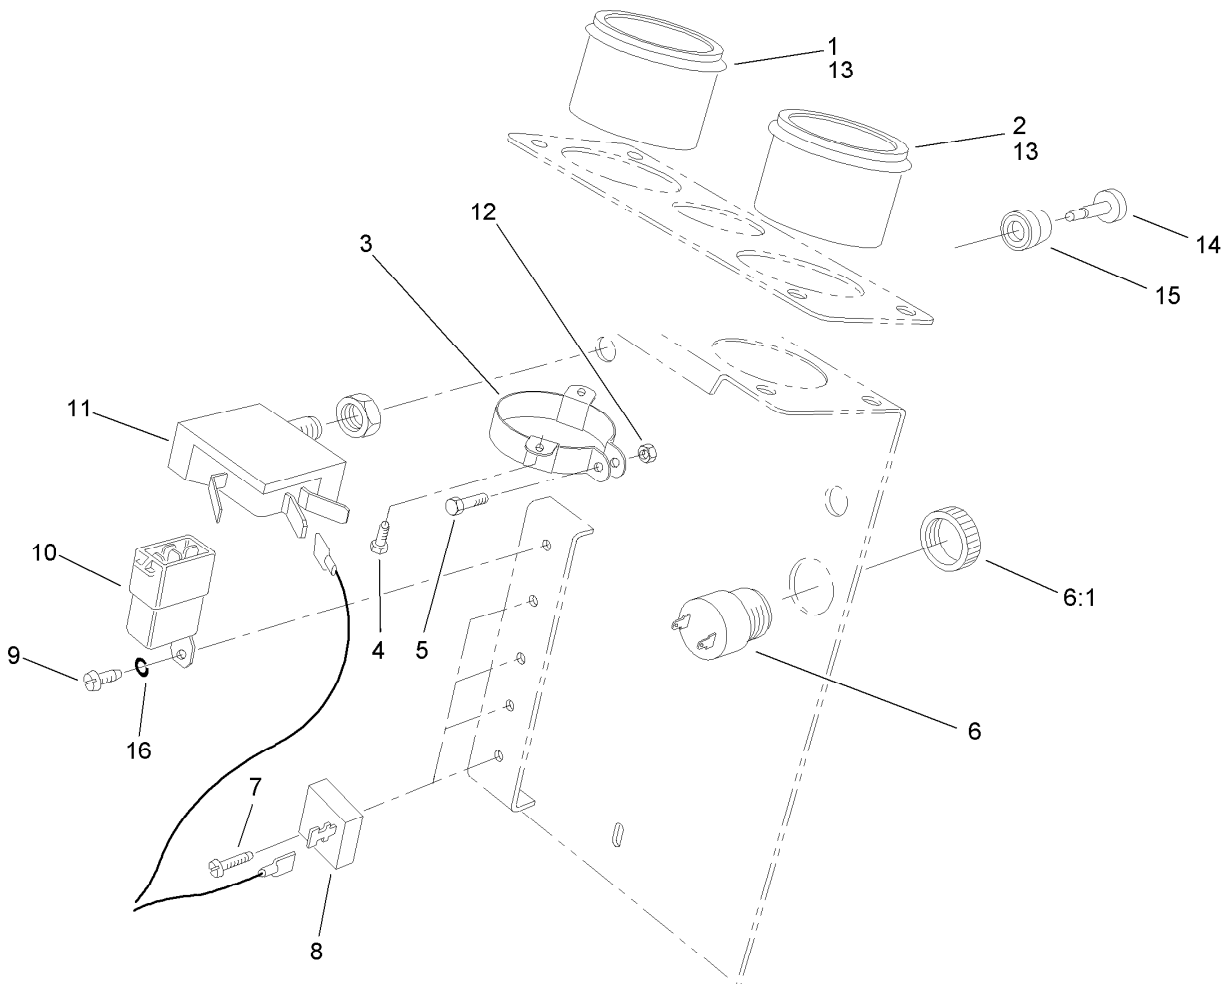

Steering Tower Electrical Assembly


Ref.	Part Number	Qty.	Description
1	93-1434	1	Gauge-Cluster, Warning
2	93-1435	1	Gauge-Cluster, Warning
3	69-4780	2	Clamp-Gauge
4	32144-19	4	Screw-SHWH
5	32105-12	2	Screw
6	80-9330	1	Audio Alarm ASM
6:1	104-5107	1	Nut-Plastic, Knurled
7	3251-4	4	Screw-SRH
8	37-7600	4	Rectifier-Bridge
9	3251-1	1	Screw-PPH
10	70-1480	1	Relay
11	43-6290	2	Switch
12	3296-2	2	Nut-Lock, NI
13	219-17	8	Bulb
14	43-6280	2	Button-Push
15	43-6420	2	Bezel
16	3253-2	1	Washer-Lock

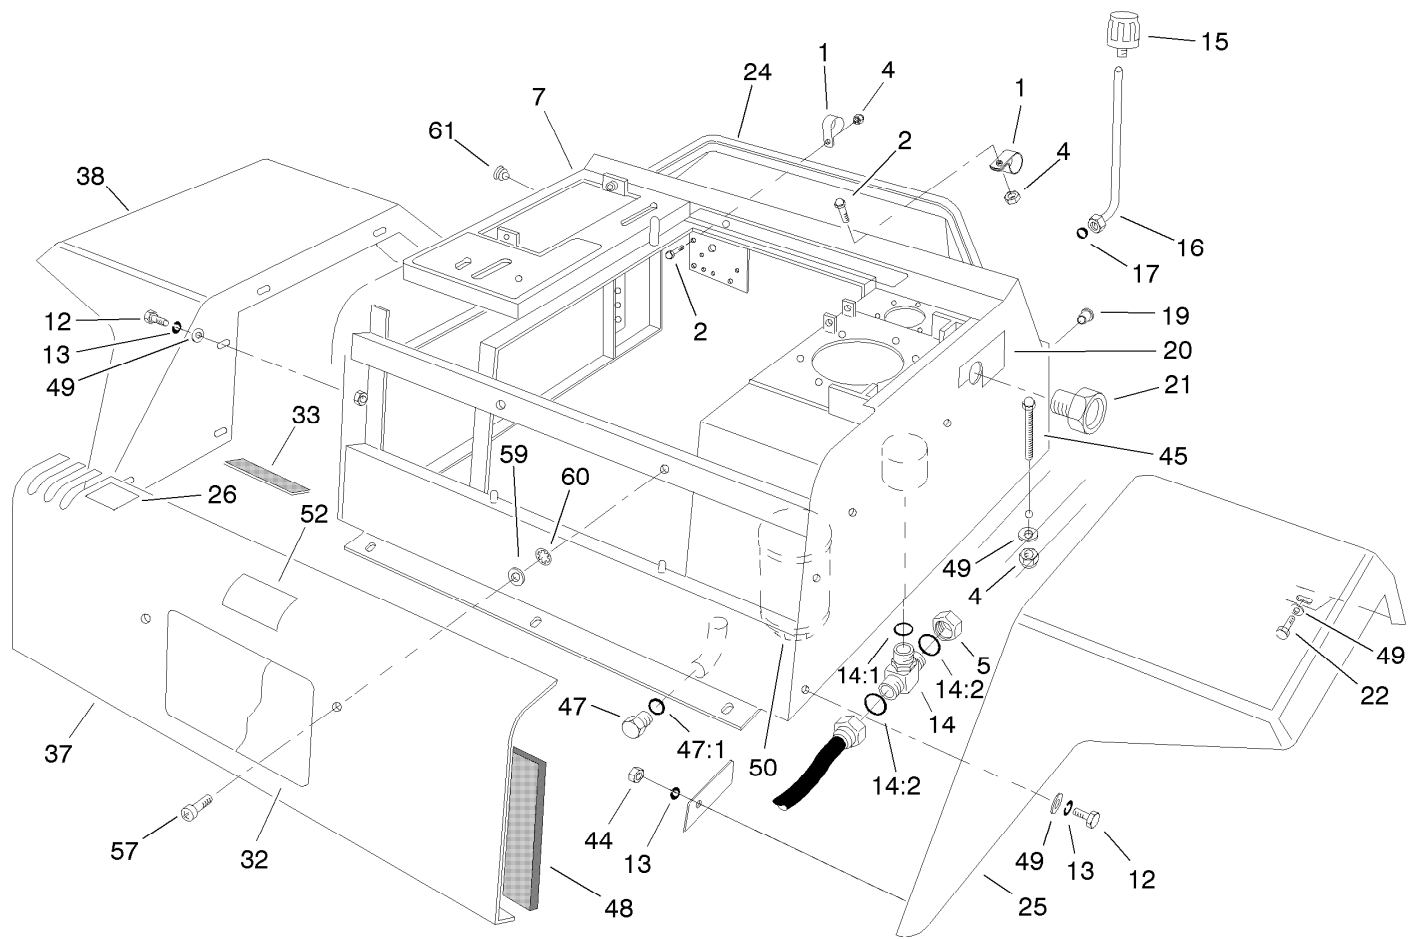 

Center Console Assembly

Ref.	Part Number	Qty.	Description
1	2412-106	2	Clamp-R
2	321-5	2	Screw-HH
4	3296-42	4	Nut-Lock, NI
5	340-117	1	Cap
7	92-9273-03	1	Console-Center
12	33113-016	10	Screw-HH
13	43-5930	10	Washer-Lock, Spring
14	92-4799	1	Fitting-Tee, HYD
14:1	237-79	1	O-Ring
14:2	237-22	2	O-Ring
15	68-6150	1	Breather
16	98-3844	1	Breather Tube ASM
17	237-65	1	O-Ring
19	32148-6	4	Nut-Clinch
20	93-9406	1	Decal-Glass, Sight
21	58-5940	1	Plug-Gage, Sight
22	48-6900	4	Screw
24	92-5682	1	Strip-Sealing
25	58-0980-01	1	Mudguard-LH

Ref.	Part Number	Qty.	Description
26	93-9407	1	Decal-Lever, Lift
32	104-5204	1	Decal-Hillside (Ce)
32	104-5203	1	Decal-Hillside (Ansi)
33	68-7840	1	Strip-Sealing
37	58-1750-03	1	Panel-Access
38	92-4746-01	1	Mudguard-RH
44	48-7890	2	Nut-Hex
45	321-24	2	Screw-HH
47	58-9160	1	Plug-Drain
47:1	237-80	1	O-Ring
48	68-7810	1	Panel-Lining
49	3256-22	16	Washer-Flat
50	48-7120	1	Element-Suction
52	93-9425	1	Decal-Danger
57	3250-36	2	Screw-PPH
59	3256-3	2	Washer-Flat
60	32151-72	2	Ring-Retaining
61	92-6059	5	Plug-Button

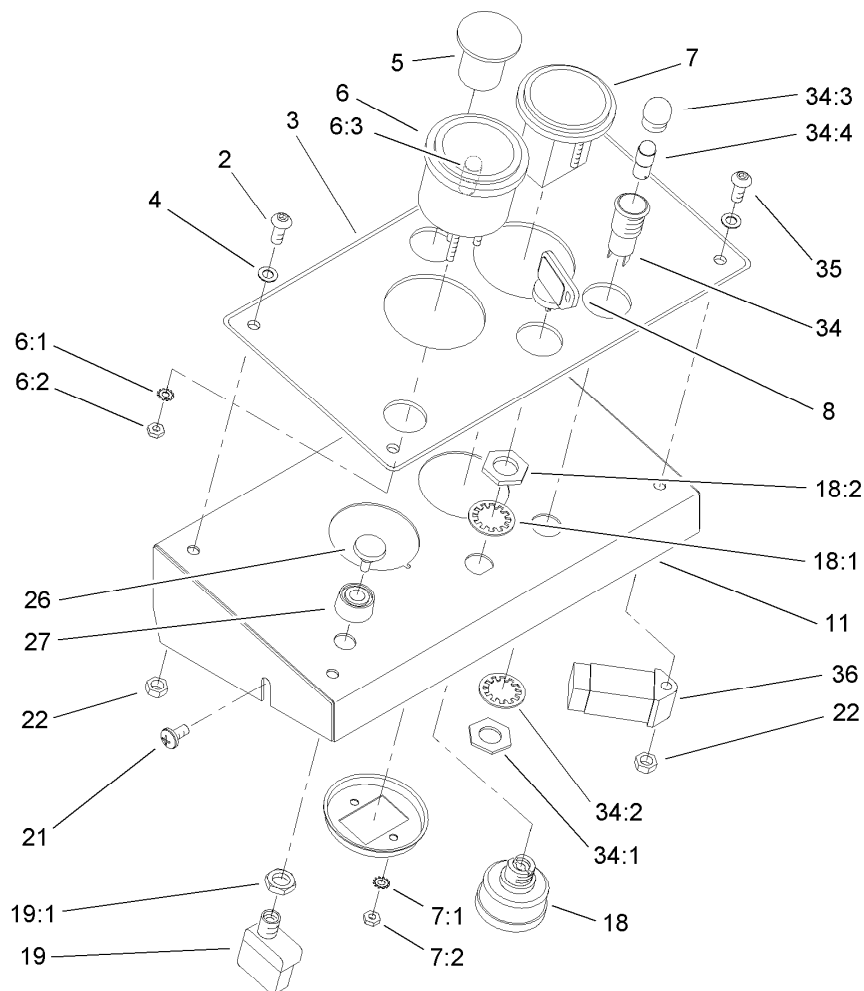 


Control Panel Assembly

Ref.	Part Number	Qty.	Description
2	3274-31	3	Screw-HSBH
3	107-1819	1	Decal-Plate, Face
4	3256-60	4	Washer-Flat
5	2410-64	1	Plug-Button
6	98-9339	1	Gauge-Fuel
6:1	3254-1	3	Washer-Lock, Int
6:2	3217-27	3	Nut-Hex
6:3	105-9265	1	Bulb And Lamp ASM
7	66-2950	1	Gauge-Hourmeter
7:1	3255-20	2	Washer-Lock
7:2	3217-25	2	Nut-Hex
8	63-8360	1	Key-Ignition
11	98-3829-03	1	Panel-Instrument
18	88-9830	1	Key Switch ASM
18:1	3254-5	1	Washer-Lock


Ref.	Part Number	Qty.	Description
18:2	218-461	1	Nut-HH
19	72-9760	1	Switch
19:1	218-498	1	Nut-Lock
21	60-2170	2	Screw
22	3296-42	4	Nut-Lock, NI
26	43-6280	1	Button-Push
27	43-6420	1	Bezel
34	44-2210	1	Light-Indicator, Red
34:1	218-535	1	Nut-Hex
34:2	218-536	1	Washer-Lock
34:3	218-533	1	Lens
34:4		1	Bulb ●
35	3274-65	1	Screw-HSBH
36	98-7611	1	Controller-Glow

 ● Not serviced separately

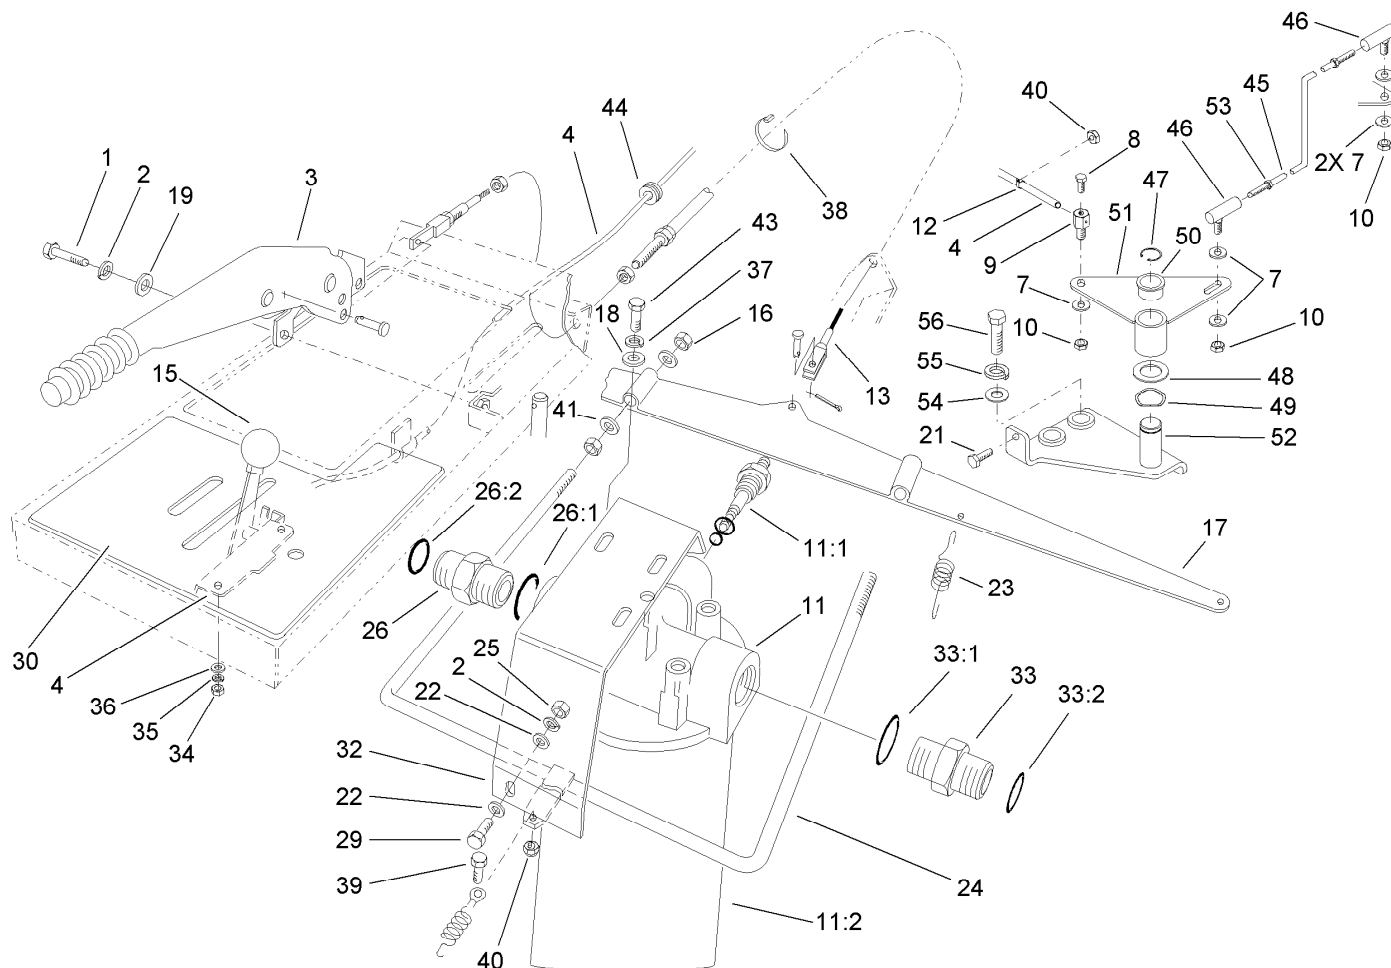


Parking Brake, Throttle and Oil Filter Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	33114-016	2	Screw-HH	29	322-6	2	Screw-HH
2	42-9850	4	Washer-Lock, Spring	30	107-1818	1	Decal-Panel, Side Control
3	53-6070	1	Lever-Brake	32	84-6470-03	1	Bracket-Filter
4	59-7240	1	Control-Throttle	33	340-10	1	Adapter
7	3256-22	5	Washer-Flat	33:1	237-123	1	O-Ring
8	25-8640	1	Screw-HH	33:2	340-64	1	O-Ring
9	93-0021	1	Swivel-Cable, Throttle	34	48-7880	2	Nut-Hex
10	3296-13	3	Nut-Lock, NI	35	48-8000	2	Washer-Lock
11	86-6090	1	HYD Oil Filter ASM	36	52-6430	2	Washer
11:1	86-6100	1	Switch-Indicator, Electrical	37	3253-5	3	Washer-Lock
11:2	86-6110	1	Filter-Hydraulic	38	3290-378	1	Tie-Cable
12	2412-31	1	Clamp-Boden	39	11-9030	1	Screw-Shoulder
13	92-9222	1	Cable-Handbrake	40	3296-42	2	Nut-Lock, NI
15	233-25	1	Knob-Control	41	3256-23	4	Washer-Plain
16	3217-6	4	Nut-Hex	43	323-5	3	Screw-HH
17	58-2170-03	1	Bar-Linkage, Brake	44	60-2370	1	Grommet
18	3256-3	3	Washer-Flat	45	98-1261	1	Rod-Throttle
19	33094-00	2	Washer-Plain	46	98-3845	2	Joint-Ball, Rod End
21	321-4	1	Screw-HH	47	936125	1	Ring-Snap, External
22	3256-23	4	Washer-Plain	48	67-9410	1	Washer
23	60-2140	2	Spring	49	98-3846	1	Washer-Wave
24	92-9225	1	Yoke	50	256-252	2	Bearing-Flange
25	3217-6	2	Nut-Hex	51	98-1257-03	1	Lever-Throttle
26	340-80	1	Fitting-STR	52	98-1256-03	1	Plate-Throttle
26:1	237-123	1	O-Ring	53	3220-1	2	Nut-Jam
26:2	340-65	1	O-Ring	54	3256-24	2	Washer-Flat

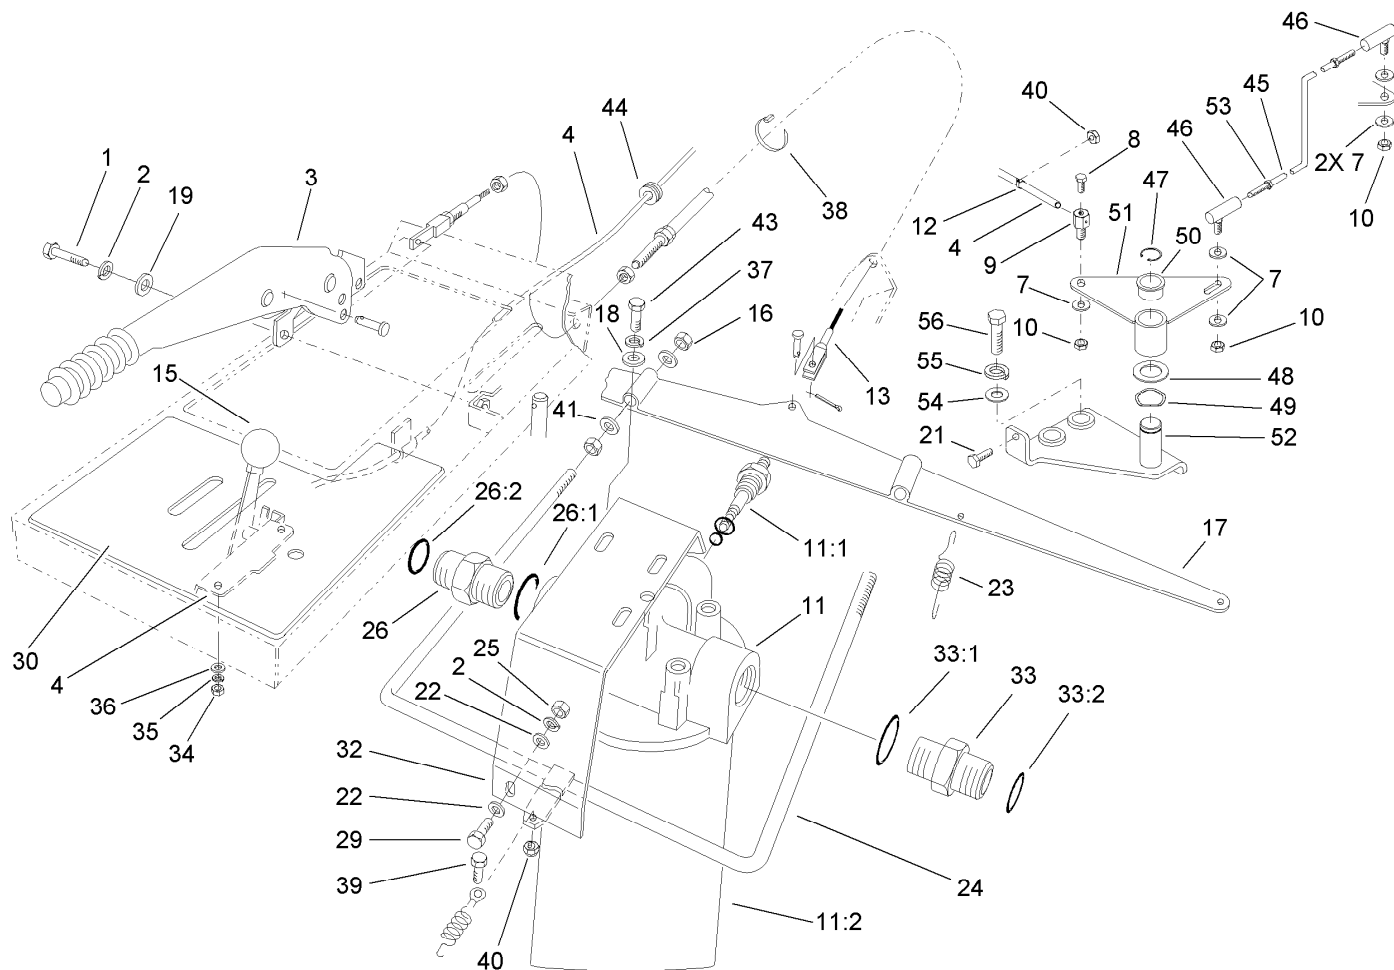 

Parking Brake, Throttle and Oil Filter Assembly (continued)


Ref.	Part Number	Qty.	Description
55	48-9590	2	Washer-Lock
56	56-2140	2	Screw-HH

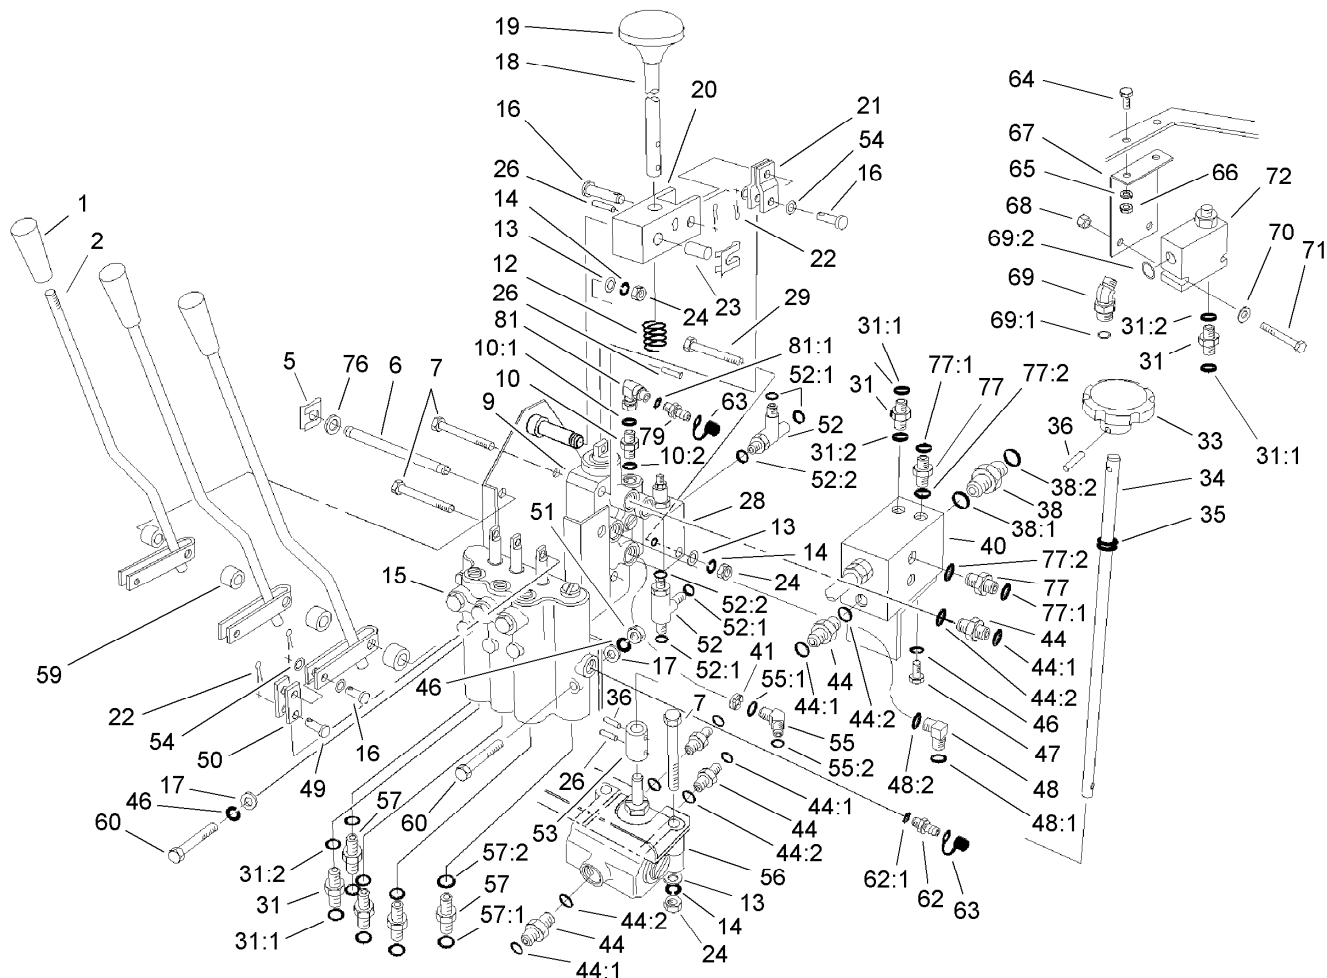 

Valve Control Assembly

Ref.	Part Number	Qty.	Description
1	233-39	3	Knob-Control
2	74-3190	3	Lever-Lift
5	60-5690	3	Clip
6	58-1520	1	Pin
7	322-12	4	Screw-HH
9	63-4800	1	Motor-Spool, Valve
10	340-88	1	Fitting-Straight
10:1	237-22	1	O-Ring
10:2	237-78	1	O-Ring
12	58-7190	1	Spring
13	3256-23	5	Washer-Plain
14	3253-4	5	Washer-Lock
15	93-1432	1	3 Spool Valve ASM
16	58-3830	5	Pin-Clevis
17	33093-00	2	Washer-Flat
18	58-4450	1	Lever
19	233-10	1	Knob-Lever
20	58-4460	1	Clevis
21	58-1570	2	Link
22	3272-1	8	Pin-Cotter
23	60-0550	1	Bushing
24	3217-6	5	Nut-Hex
26	32121-118	3	Pin-Roll
28	58-5520	1	Valve-Relief, Adjustable
29	322-9	1	Screw-HH
31	340-2	5	Fitting-Straight
31:1	237-22	1	O-Ring
31:2	237-42	1	O-Ring


Ref.	Part Number	Qty.	Description
33	59-7130	1	Knob-Control, Speed
34	58-1510	1	Shaft
35	59-7910	1	Grommet
36	60-2110	2	Pin
38	340-80	1	Fitting-STR
38:1	237-123	1	O-Ring
38:2	340-65	1	O-Ring
40	58-2150	1	Block-Manifold
41	66-5410	1	Orifice
44	340-7	6	Fitting-Straight
44:1	237-65	1	O-Ring
44:2	237-80	1	O-Ring
46	43-5930	4	Washer-Lock, Spring
47	33113-016	2	Screw-HH
48	340-17	2	Fitting-Elbow, 90 DEG
48:1	237-65	1	O-Ring
48:2	237-80	1	O-Ring
49	58-3810	3	Pin-Clevis
50	58-1560	6	Link
51	48-7890	1	Nut-Hex
52	340-86	2	Fitting-Tee
52:1	237-22	2	O-Ring
52:2	237-42	1	O-Ring
53	93-7768	1	Coupling
54	52-6430	8	Washer
55	66-5860	1	Fitting-Elbow, 45 DEG
55:1	237-80	1	O-Ring

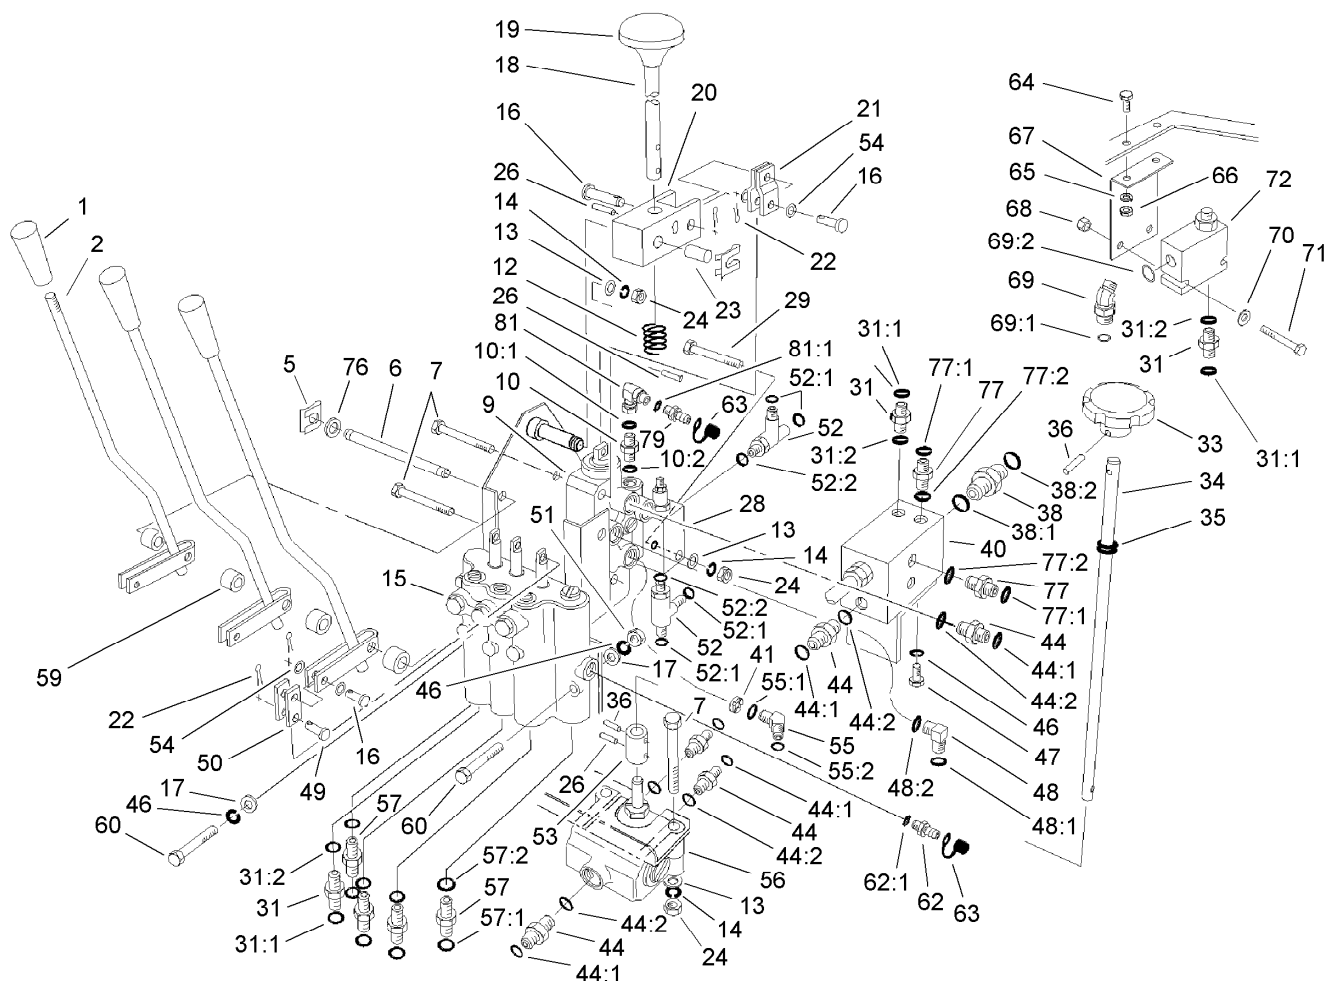 

Valve Control Assembly (continued)

Ref.	Part Number	Qty.	Description
55:2	237-65	1	O-Ring
56	58-5490	1	Valve-Control, Flow
57	340-3	2	Fitting-Straight
57:1	237-22	1	O-Ring
57:2	237-79	1	O-Ring
59	58-1540	4	Spacer-Nylon
60	33113-050	2	Screw-HH
62	59-7410	1	Fitting-Diagnostic
62:1	237-42	1	O-Ring
63	353-947	3	Cap-Dust, Rubber
64	321-3	2	Screw-HH
65	3253-3	2	Washer-Lock
66	3217-5	2	Nut-Hex
67	63-4690-03	1	Bracket-Valve


Ref.	Part Number	Qty.	Description
68	3296-8	2	Nut-Hex
69	340-87	1	Fitting-Elbow, 45 DEG
69:1	237-22	1	O-Ring
69:2	237-42	1	O-Ring
70	3256-22	2	Washer-Flat
71	321-11	2	Screw-HH
72	63-4700	1	Valve-Flow, Regulator
76	3256-24	2	Washer-Flat
77	92-9258	3	Adapter-Check
77:1	237-22	1	O-Ring
77:2	237-42	1	O-Ring
79	86-5480	2	Nipple-Test
81	340-159	1	Elbow-90
81:1	237-22	2	O-Ring

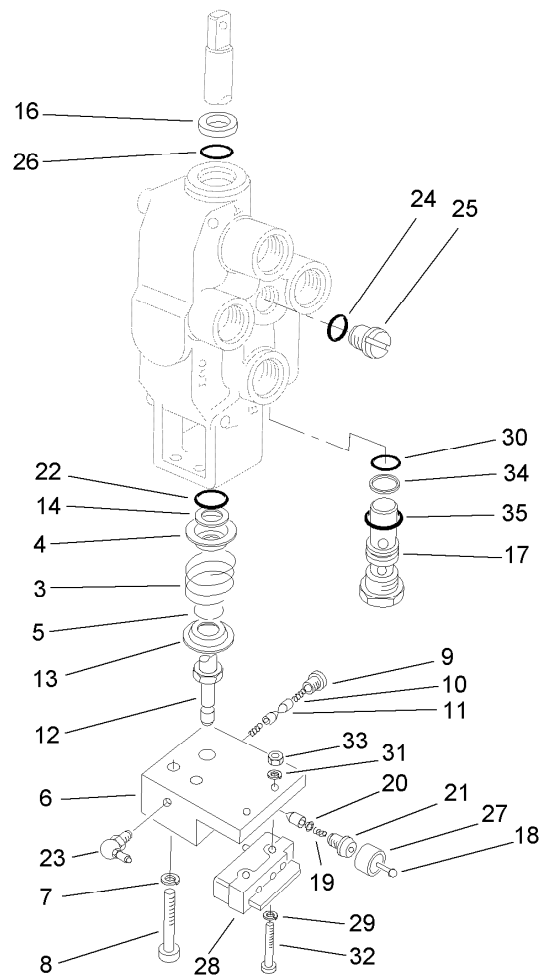 

Valve Motor Spool Assembly No. 63-4800

Ref.	Part Number	Qty.	Description
3	59-8040	1	Spring
4	59-8080	1	Washer
5	59-8170	1	Washer
6	63-4820	1	Block-Detent
7	59-8070	2	Lockwasher
8	63-4830	2	Capscrew
9	59-8060	1	Plug
10	59-8050	2	Spring
11	59-8150	3	Pawl
12	63-4840	1	Screw-Detent
13	59-8100	1	Washer
14	59-8180	1	Washer
16	59-8190	1	Wiper
17	63-4780	1	Valve
18	63-4850	1	Plunger
19	63-4510	1	Spring

Ref.	Part Number	Qty.	Description
20	63-4860	1	Circlip
21	59-8230	1	Plug
22	59-7780	1	Ring
23	302-66	1	Fitting-Grease
24	59-8140	1	Ring
25	59-8160	1	Plug
26	59-8120	1	Ring
27	66-5420	1	Sleeve
28	60-4550	1	Switch-Micro
29	3256-13	2	Washer
30	63-4440	1	O-Ring
31	3253-19	2	Washer-Lock
32	66-5430	2	Screw
33	66-5440	2	Nut-Hex
34	59-7860	1	Washer
35	42-1220	1	O-Ring

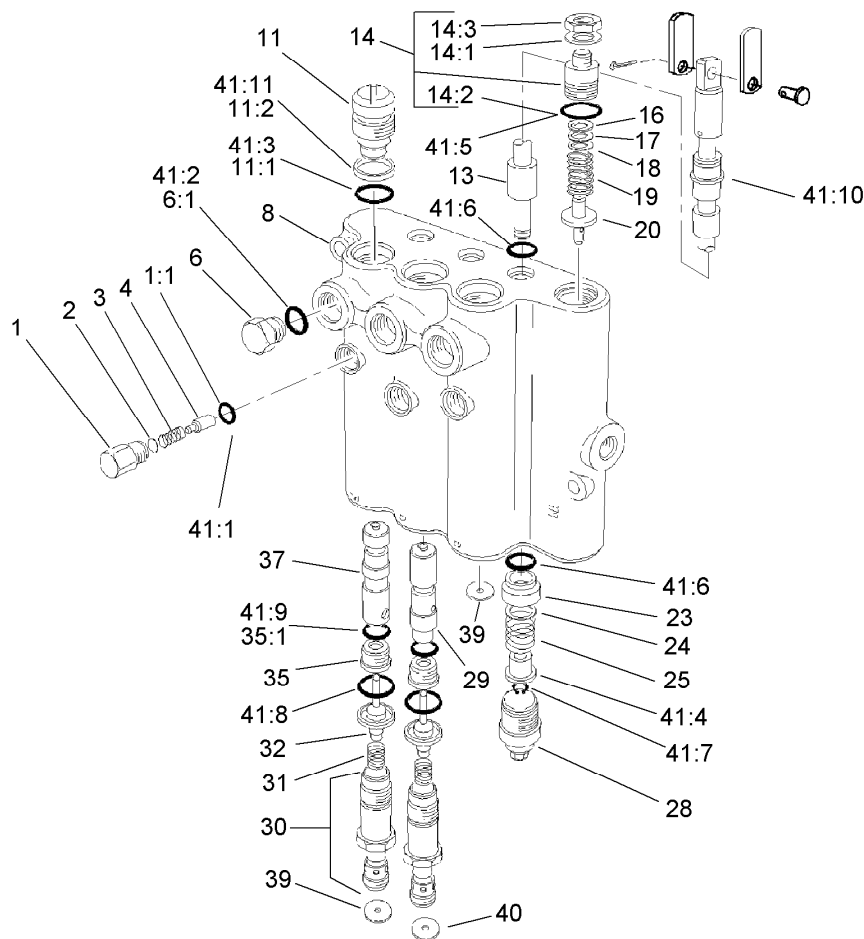 


Control Valve Assembly No. 93-1432

Ref.	Part Number	Qty.	Description
1	58-6780	3	Plug
1:1	58-6790	1	O-Ring
2	60-6450	1	Disc
3	58-6760	3	Spring
4	58-6770	3	Plunger
6	353-508	3	Plug-HH
6:1	237-42	1	O-Ring
8		1	Body ■
11	58-6350	3	Plug
11:1	60-5720	1	O-Ring
11:2	58-6370	1	Washer
13		3	Spool ■
14	69-1830	1	Plug ASM
14:1		1	Washer ■
14:2	58-6750	1	O-Ring
14:3		1	Nut-Lock ■
16	58-6470	1	Washer
17	58-6480	1	Washer
18	58-6490	1	Washer
19	84-6450	1	Spring
20	58-6440	1	Poppet
23	58-6400	3	Bushing
24	58-6700	3	Washer

Ref.	Part Number	Qty.	Description
25	58-6730	3	Spring
28	58-6420	3	Cap
29	84-6430	1	Plunger
30	58-6380	3	Plug
31	58-6410	3	Spring
32	60-6440	3	Eyelet
35	58-6330	3	Seat
35:1	58-6340	1	O-Ring
37	84-6420	2	Plunger
39	84-6400	2	Disc-Orifice
40	84-6401	1	Disc-Orifice
41	60-3780	1	Seal Kit ●
41:1	58-6790	3	O-Ring
41:2	58-6720	3	O-Ring
41:3	60-5720	6	O-Ring
41:4	58-6310	6	Spacer
41:5	58-6750	1	O-Ring
41:6	58-6450	6	O-Ring
41:7	58-6460	3	Ring-Retaining
41:8	58-6290	3	Poppet
41:9	58-6340	3	O-Ring
41:10	58-6320	3	Wiper
41:11	58-6370	1	Washer

● Not illustrated

 ■ Not serviced separately

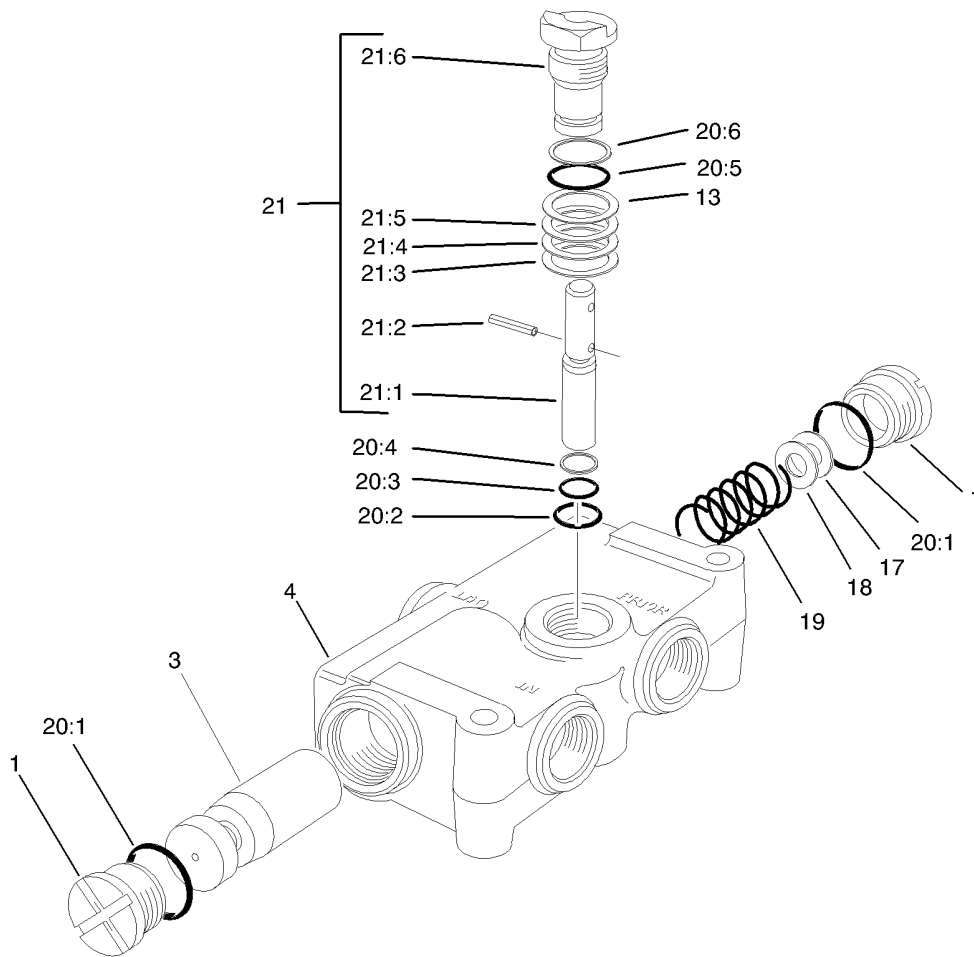


Priority Flow Control Valve Assembly No. 58-5490

Ref.	Part Number	Qty.	Description
1	59-7600	2	Plug
3		1	Spool ■
4		1	Body ■
13	59-7720	1	Washer
17	59-7750	1	Washer
18	59-7760	1	Washer
19	59-7770	1	Spring
20	63-4520	1	Seal Kit ●
20:1	59-7610	2	Ring
20:2	59-7640	1	Ring
20:3	59-7650	1	Ring
20:4	60-5950	1	Washer
20:5	59-7780	1	Ring
20:6	58-6370	1	Washer
21	94-8265	1	Plug-Metering
21:1		1	Stem-Metering ■
21:2		1	Pin-Groove ■
21:3		1	Shim ■
21:4		1	Shim ■
21:5		1	Shim ■
21:6		1	Plug-Metering ■

● Not illustrated

 
■ Not serviced separately

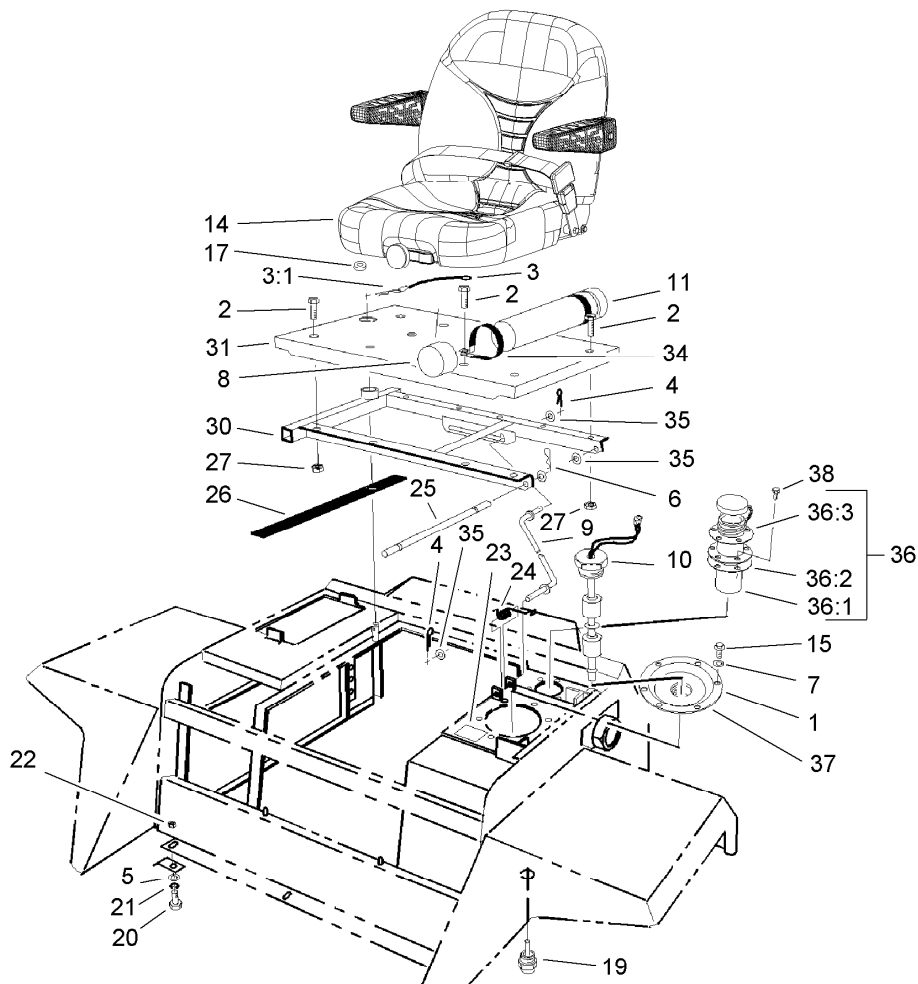

Seat Platform and Filler Cap Assembly

Ref.	Part Number	Qty.	Description
1	92-9200	1	Cover
2	3234-5	6	Screw-HHF
3	60-2160	1	R-Clip ASM
3:1	3290-355	1	Pin-Hair
4	3272-11	2	Pin-Cotter
5	3256-24	2	Washer-Flat
6	3290-250	2	Pin-Cotter
7	3253-15	6	Washer-Lock
8	104-7048	1	Cap-Housing
9	58-1650	1	Rod-Seat
10	82-9340	1	Level Switch ASM
11	104-7050	1	Tube-Manual
14	110-0838	1	Deluxe Seat ASM
15	46-0670	6	Screw-PPH
17	26-4840	4	Spacer-Pin, Mounting
19	60-5580	1	Switch-Temperature
20	323-7	2	Screw-HH


Ref.	Part Number	Qty.	Description
21	3253-21	2	Washer-Lock
22	32128-21	2	Nut-HF Lock
23	93-6686	1	Decal-Oil, HYD
24	60-0050	1	Spring-Tray, Seat
25	58-1640	1	Pin-Pivot, Seat
26	68-7850	1	Strip-Sealing
27	32128-20	10	Nut-HF
30	58-1580-03	1	Frame-Seat
31	58-9830-03	1	Plate-Seat
34	2412-133	2	Clamp-R
35	3256-24	4	Washer-Flat
36	71-4040	1	HYD Filler ASM
36:1	62-2610	1	Strainer-Cap, Filler
36:2	353-963	2	Gasket
36:3	353-961	1	Flange
37	58-6820	1	Gasket
38	32144-107	6	Screw

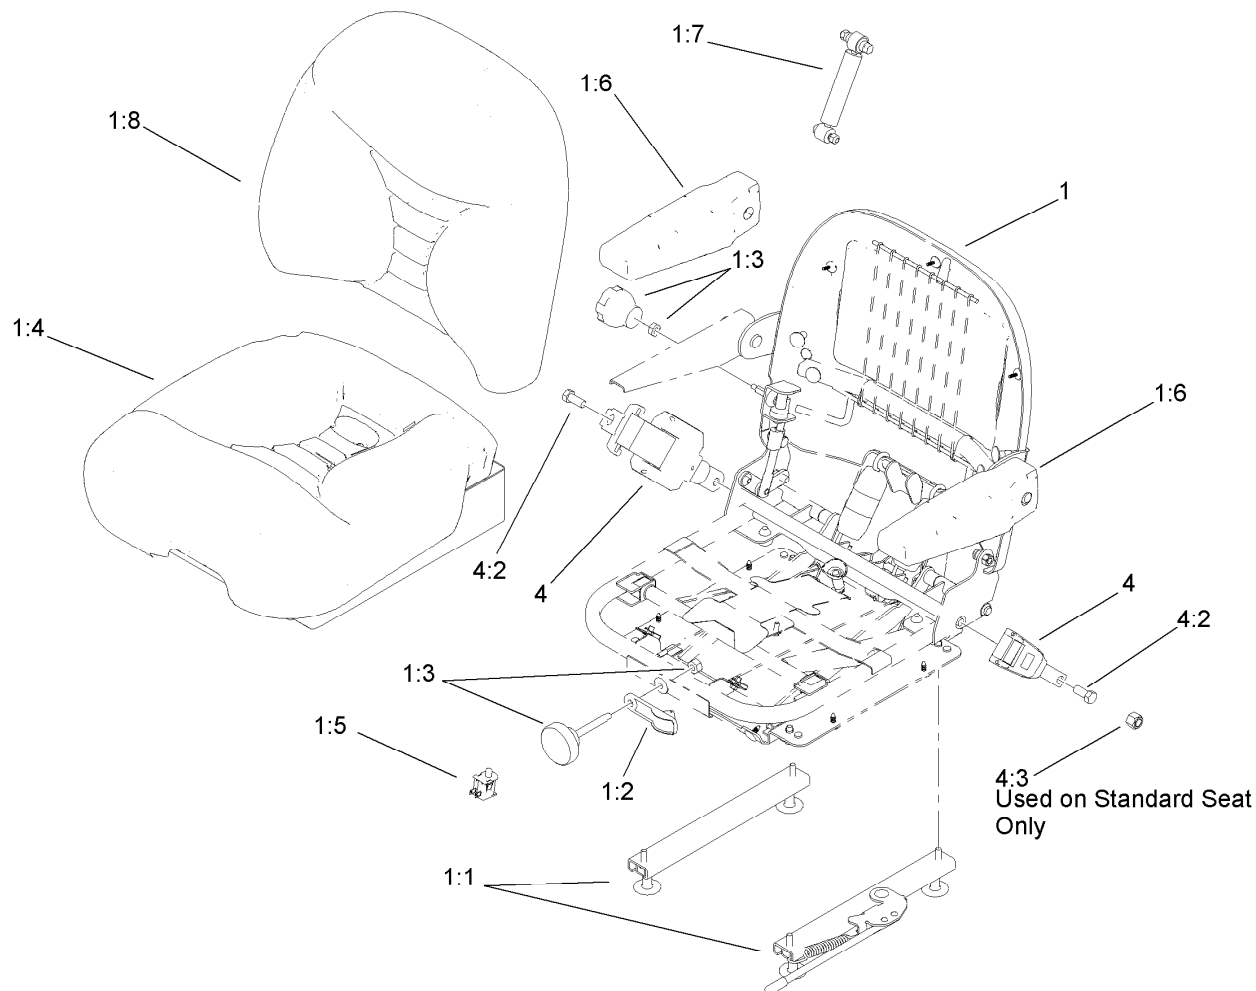 

Deluxe Seat Assembly No. 110-0838

Ref.	Part Number	Qty.	Description
1		1	Seat ASM ●
1:1	107-1880	1	Seat Track Kit
1:2	107-1885	1	Weight Indicator Kit
1:3	107-1881	1	Knob Kit
1:4	107-1883	1	Bottom Cushion Kit
1:5	107-1886	1	Switch Kit
1:6	107-1887	1	Pad-Armrest
1:7	107-1884	1	Shock Absorber Kit
1:8	107-1882	1	Back Cushion Kit
4	110-0883	1	Retractable Seatbelt Kit
4:2	3212-4	2	Screw-HH
4:3	3296-7	2	Nut-Lock

 
● Not serviced separately

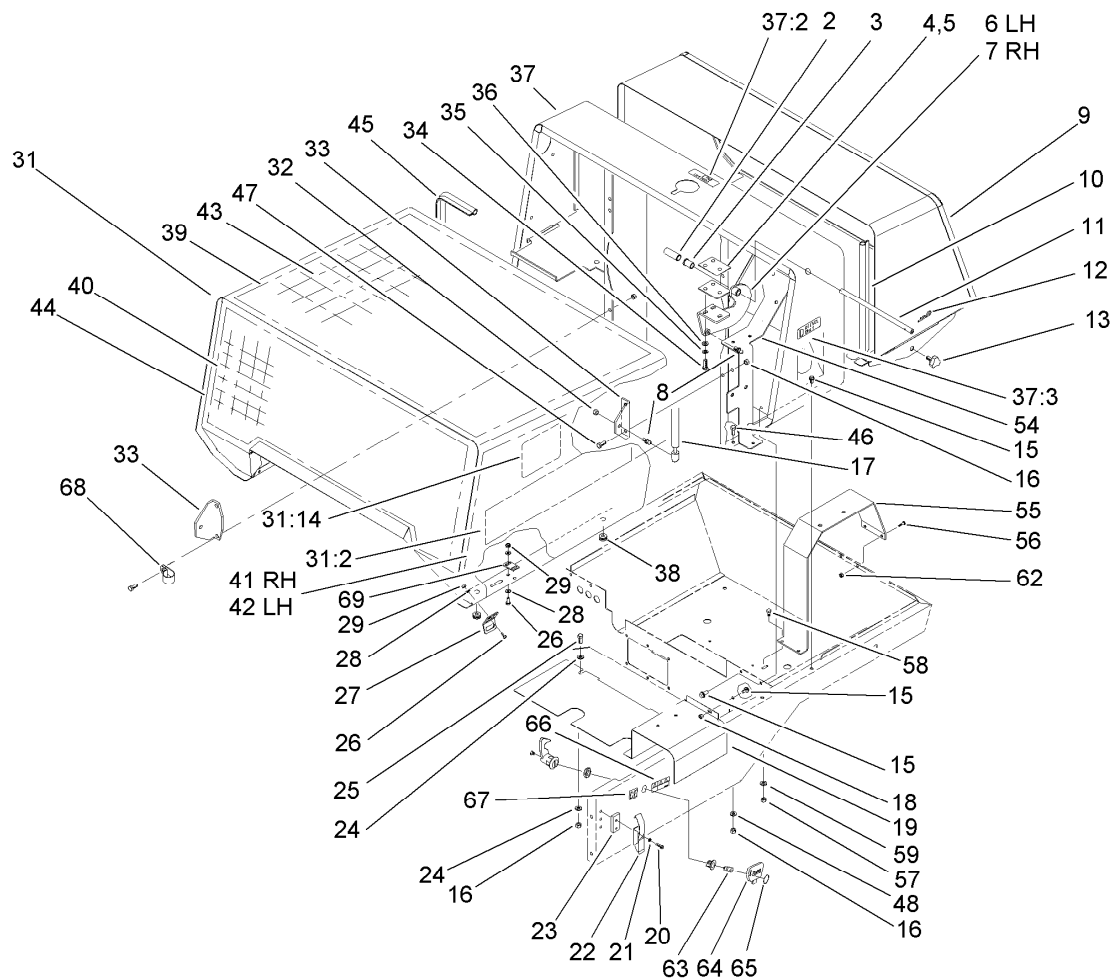

Front and Rear Canopy Assembly

Ref.	Part Number	Qty.	Description
2	92-5655	2	Tube-Canopy
3	58-3930	2	Bushing-Oilite
4	58-5330	2	Spacer-Hinge, Canopy
5	58-5350	2	Spacer-Hinge, Canopy
6	58-1970-01	1	Plate-Hinge, Left
7	58-1980-01	1	Plate-Hinge, Right
8	86-6130	4	Ball-Stud
9	92-6086	1	Rear Screen ASM
10	92-5253	1	Strip-Sealing
11	58-3910	2	Pin-Hinge, Canopy
12	3290-355	2	Pin-Hair
13	77-3620	2	Knob-Retainer
15	3234-13	9	Screw-HHF
16	3296-29	9	Nut-Lock, NI
17	88-6760	2	Spring-Gas
18	3296-56	1	Nut-Lock, NI
19	105-3330-03	1	Baffle-Body, Lower
20	3250-25	4	Screw-PPH
21	3253-2	4	Washer-Lock
22	58-5380	2	Latch-Draw
23	58-7070-03	2	Spacer-Latch, RH
24	3256-23	2	Washer-Plain
25	322-3	1	Screw-HH
26	3250-31	10	Screw-PPH
27	68-6040	2	Bracket
28	3256-51	12	Washer-Flat
29	3296-27	10	Nut-Lock, NI
31	106-7074	1	Canopy-Front


Ref.	Part Number	Qty.	Description
31:2	106-7060	2	Decal
31:14	66-6140	2	Decal
32	48-9510	2	Nut
33	92-5652-03	2	Bracket
34	33114-025	6	Screw-HH
35	42-9850	6	Washer-Lock, Spring
36	33094-00	6	Washer-Plain
37	105-3325	1	Center Canopy ASM
37:2	93-9404	1	Decal-Only, Coolant
37:3	93-6680	1	Decal-Diesel
38	237-141	4	Grommet-Rubber
39	92-5678	1	Foam-Hood, Top
40	92-5679	1	Foam-Hood, Front
41	92-5680	1	Foam-Hood, RH
42	92-5681	1	Foam-Hood, LH
43	92-5672-03	1	Support-Foam, Canopy
44	92-5673-03	1	Support-Foam, Front
45	92-6060	1	Strip-Sealing
46	322-5	4	Screw-HH
47	322-4	4	Screw-HH
48	3256-3	4	Washer-Flat
54	104-5230-03	1	Bracket-Fuel
55	94-8226-03	1	Bracket-Cleaner, Air
56	32122-42	2	Screw
57	3296-42	2	Nut-Lock, NI
58	321-3	2	Screw-HH
59	3256-22	2	Washer-Flat
62	3296-56	2	Nut-Lock, NI

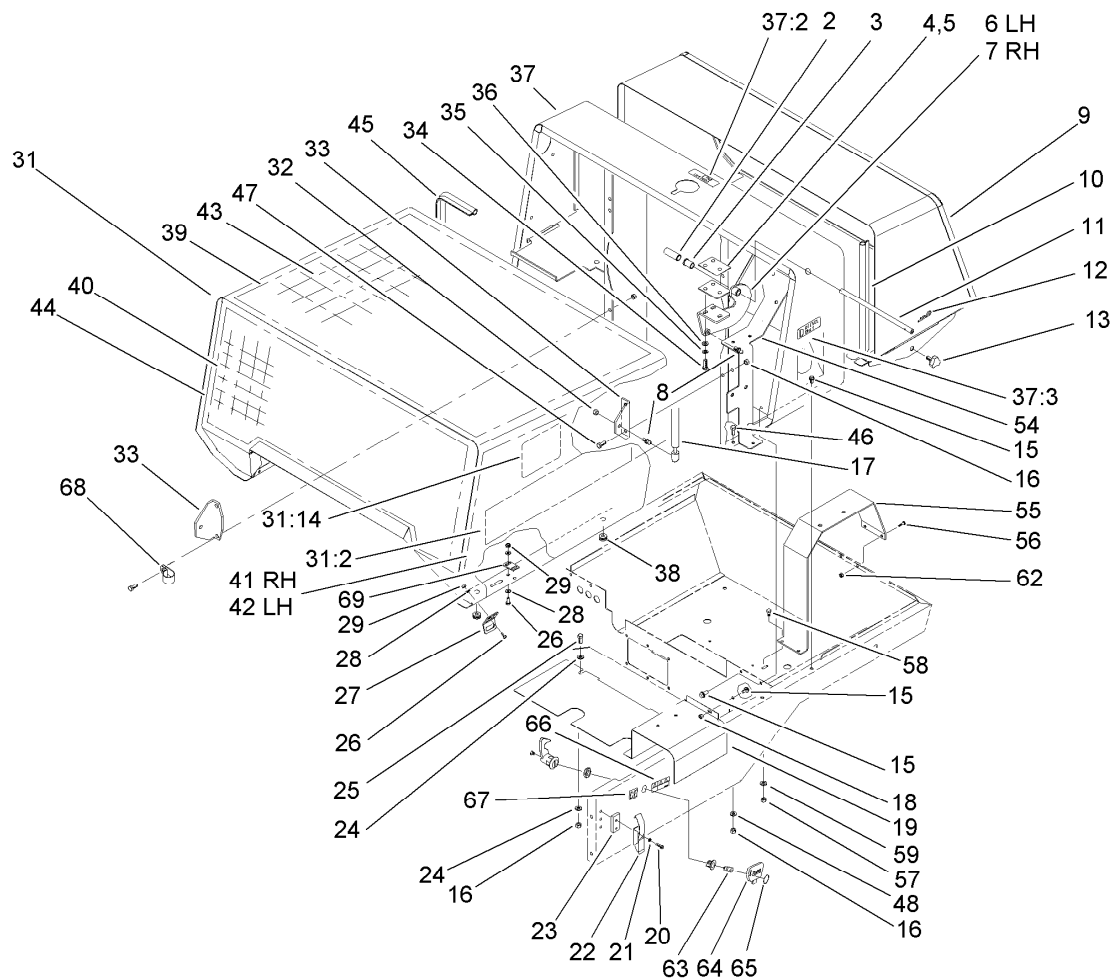 

Front and Rear Canopy Assembly (continued)

Ref.	Part Number	Qty.	Description
63	98-5398	1	Latch
64	99-8970	1	Key-Latch, Hood
65	98-9321	1	Ring-Key
66	100-6574	1	Decal-Warning


Ref.	Part Number	Qty.	Description
67	93-7252	1	Decal
68	2412-109	1	Clip-J
69	105-9270	1	Plate-Strike

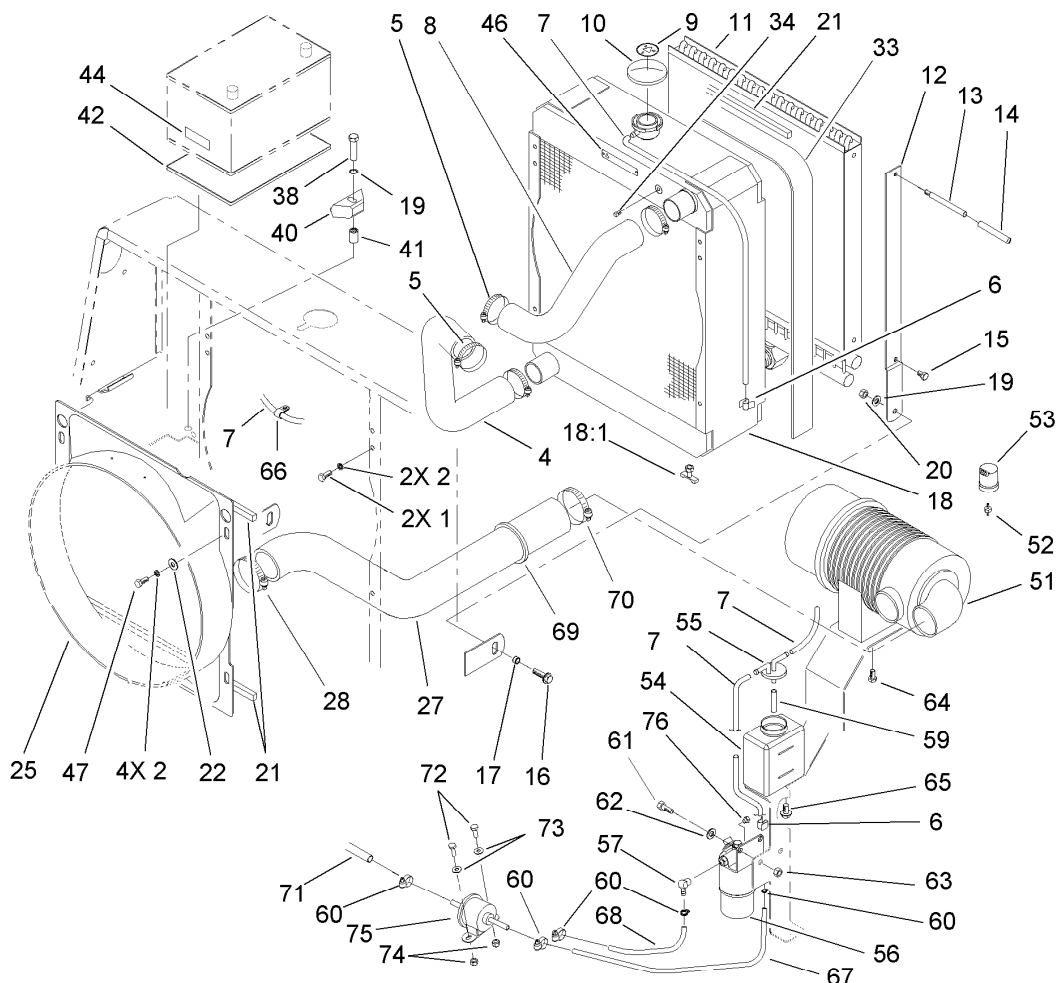 

Radiator, Oil Cooler and Air Cleaner Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	322-3	2	Screw-HH	22	99-2900	4	Washer-Flat
2	3253-4	6	Washer-Lock	25	98-1250	1	Shroud-Fan
4	98-1215	1	Hose-Lower, Radiator	27	98-1234	1	Hose-Intake
5	2412-92	4	Clamp-Hose	28	2412-42	1	Clamp-Hose
6	104-5232	4	Clip-Wire	33	92-6062	1	Foam-Seal, Radiator
7	98-7895	2	Tube	34	281-2	1	Plug-Pipe, SQH
8	98-1214	1	Hose-Radiator, Upper	38	323-9	1	Screw-HH
9	59-8440	1	Decal-Pressure Warning, Radiator	40	66-2490	1	Retainer-Battery
10	58-5420	1	Cap-Pressure	41	32148-9	1	Nut-Clinch
11	58-5540	1	Cooler-Oil	42	93-1420	1	Tray-Battery
11:1	340-65	2	O-Ring ●	44	93-6668	1	Decal-Battery
12	92-4753-03	2	Strap-Cooler, Oil	46	93-6681	1	Decal-Warning, Fan
13	75-7790	2	Handle	47	322-4	4	Screw-HH
14	47-2550	2	Grip-Handle, Bag	51	100-2597	1	Air Filter ASM
15	48-7680	2	Screw-HH	52	94-1416	1	Adapter-Indicator
16	3234-11	2	Screw-HHF	53	69-1940	1	Indicator-Electrical
17	76-2290	2	Spacer	54	93-2049	1	Tank-Overflow
18	92-4729	1	Radiator ASM	55	93-2048	1	Cap-Tank, Overflow
18:1	304-46	1	Draincock	56	104-5218	1	Water / Fuel Separator Filter ASM
19	3256-24	3	Washer-Flat	57	353-781	2	Fitting-HYD, 90
20	3296-39	2	Nut-Lock, NI	59	108-3283	1	Hose-Fuel
21	68-7575	3	Strip-Sealing	60	2412-108	5	Clamp-Worm

 
● Not illustrated

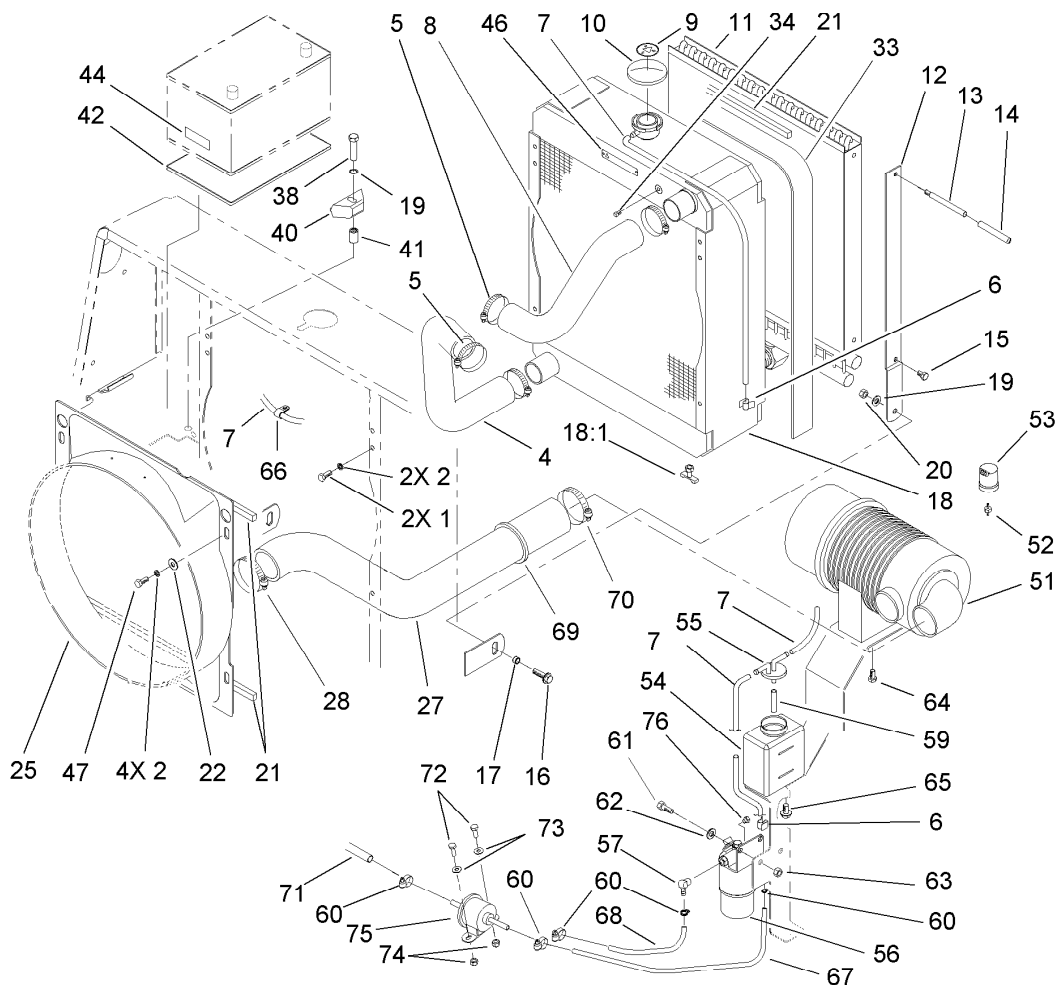

Radiator, Oil Cooler and Air Cleaner Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
61	322-5	2	Screw-HH	69	98-7896	1	Trim-Lok
62	3256-23	2	Washer-Plain	70	2412-125	1	Clamp-Hose
63	3296-29	2	Nut-Lock, NI	71	110-4114	1	Hose-Fuel
64	33104-016	2	Screw-HHF	72	321-4	2	Screw-HH
65	33114-016	2	Screw-HH	73	3256-1	2	Washer-Flat
66	92-6064	1	Clamp-R	74	3296-42	2	Nut-Lock, NI
67	110-4110	1	Hose-LP	75	104-5215	1	Pump-Fuel, Electric
68	110-3257	1	Hose-Fuel	76	281-13	2	Plug-Pipe

 ● Not illustrated

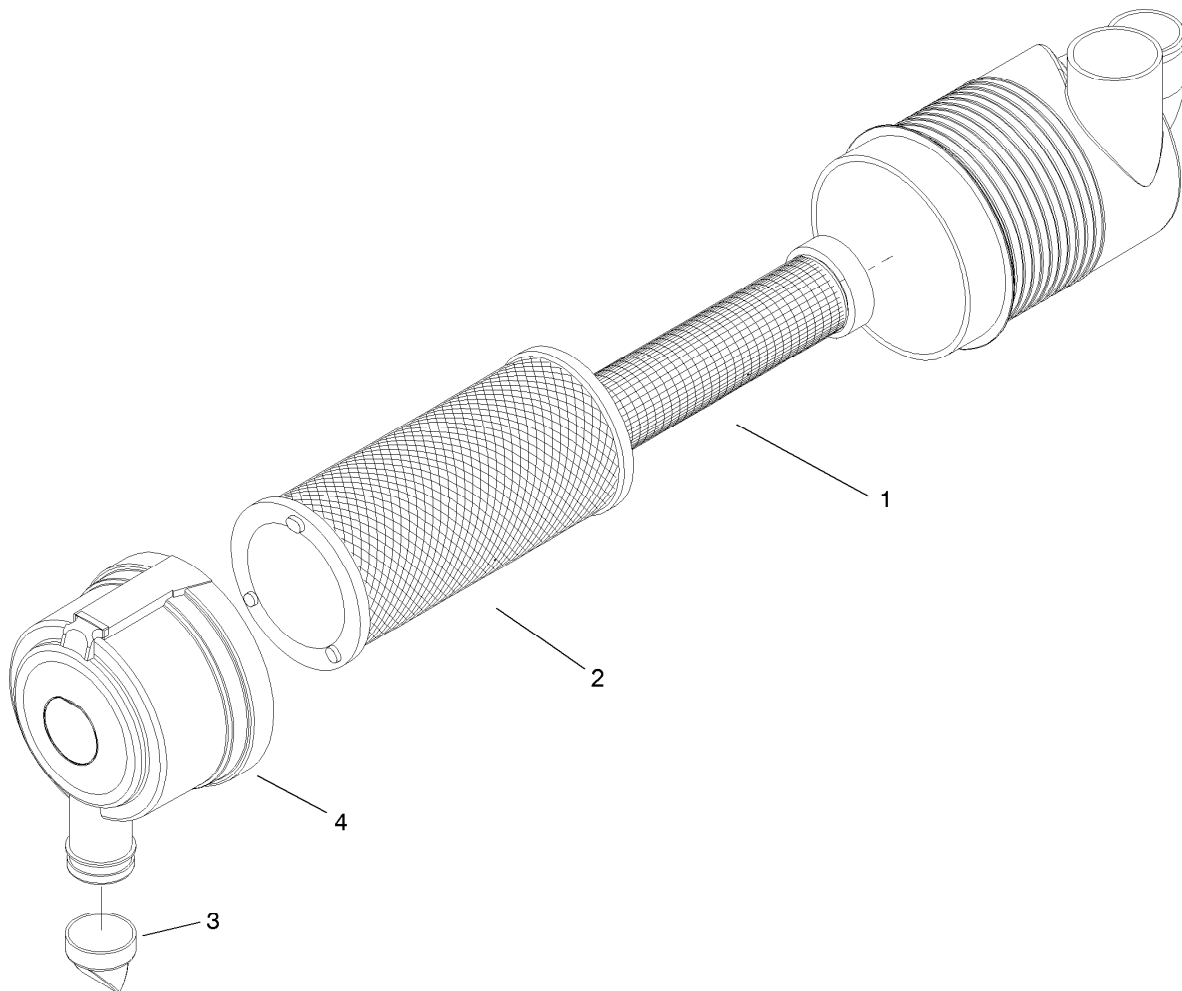


Air Cleaner Assembly No. 100-2597

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-3812	1	Filter-Air
2	108-3813	1	Element-Safety, Air Cleaner
3	87-9400	1	Valve-Vacuator
4	108-1448	1	Cover ASM

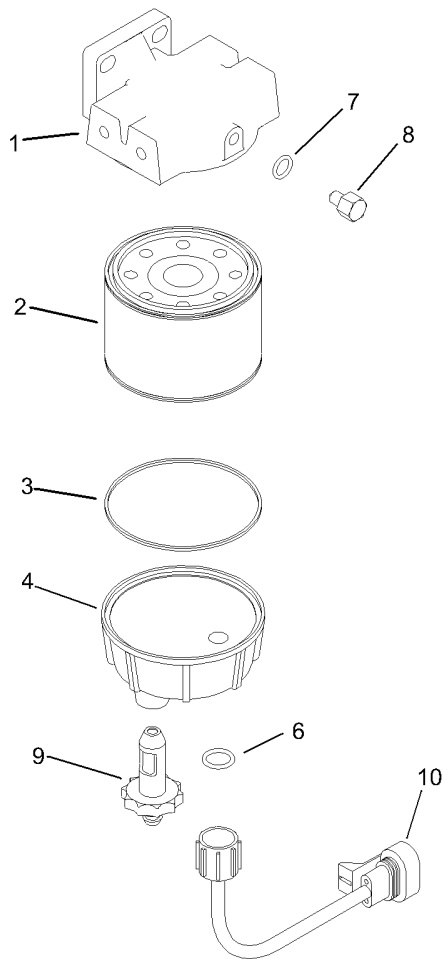 

Fuel Filter Assembly No. 104-5218


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	98-9772	1	Head-Filter
2	98-9764	1	Element
3	98-9774	1	O-Ring
4	98-9775	1	Base-Filter
6	237-42	1	O-Ring
7	237-78	1	O-Ring
8	98-9776	1	Plug-Head, Filter
9	98-9777	1	Drain Valve ASM
10	110-0048	1	Water Sensor ASM

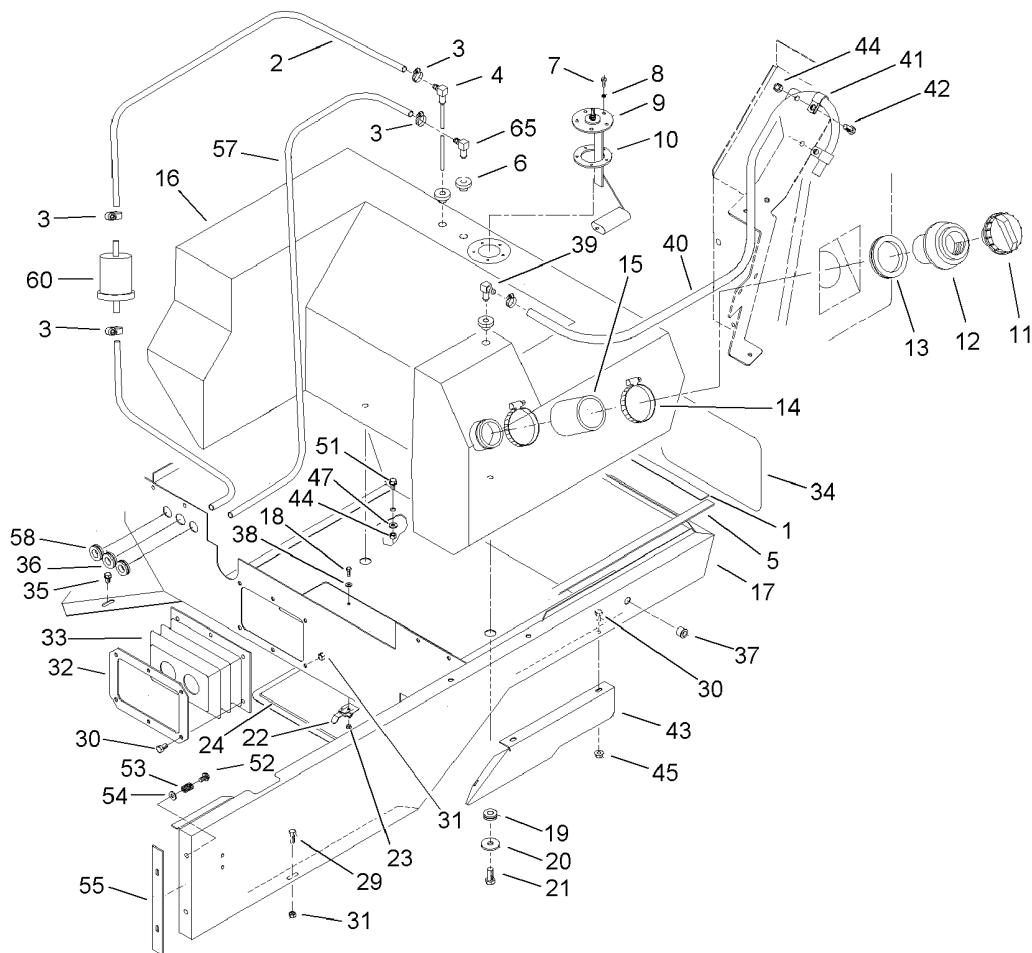 

Fuel Tank and Lower Body Assembly


Ref.	Part Number	Qty.	Description
1	92-5671	1	Strip-Sealing
2	108-3283	1	Hose-Fuel
3	2412-108	6	Clamp-Worm
4	92-9266	1	Standpipe
5	92-5670	2	Strip-Sealing
6	46-6560	3	Bushing
7	32122-24	5	Screw-PTH
8	3253-15	5	Washer-Lock
9	92-9267	1	Sender-Fuel
10	62-7650	1	Gasket
11	93-3102	1	Cap-Fuel
12	92-5674	1	Neck-Fill, Fuel
13	92-5675	1	Grommet
14	2412-42	2	Clamp-Hose
15	92-9272	1	Hose-Fill, Fuel
16	93-1402	1	Tank-Fuel
17	104-5266-03	1	Body-Lower
18	32144-1	4	Screw-Taptite
19	240-11	2	Bushing-Flange
20	63-8410	2	Washer
21	323-5	2	Screw-HH
22	52-9590	4	Latch-Screen
23	3296-12	4	Nut-Lock, NI
24	92-5654-03	1	Panel-Out, Clean
29	3234-4	1	Screw-HHF
30	321-2	9	Screw-HH

Ref.	Part Number	Qty.	Description
31	3296-56	7	Nut-Lock, NI
32	92-5653-03	1	Ring-Clamp
33	92-5269	1	Bellows
34	92-1242	1	Decal
35	3234-13	2	Screw-HHF
36	240-9	2	Grommet
37	32148-9	2	Nut-Clinch
38	3256-51	4	Washer-Flat
39	46-6550	1	Fitting-Elbow, 90 DEG
40	110-4112	1	Hose-Fuel
41	92-6064	2	Clamp-R
42	322-3	2	Screw-HH
43	92-6069-03	1	Shield-Exhaust
44	3296-29	4	Nut-Lock, NI
45	32128-33	3	Nut-HF
47	3256-23	2	Washer-Plain
51	3234-17	2	Screw-HHF
52	94-8270	4	Bolt-Shoulder
53	63-4220	4	Spring-Compression
54	3256-78	4	Washer-Flat
55	94-8258	2	Strip-Seal
57	110-5688	1	Hose-Fuel
58	60-4350	1	Grommet
60	98-7612	1	Filter-Fuel
65	104-5228	1	Fitting-Elbow, 90 DEG

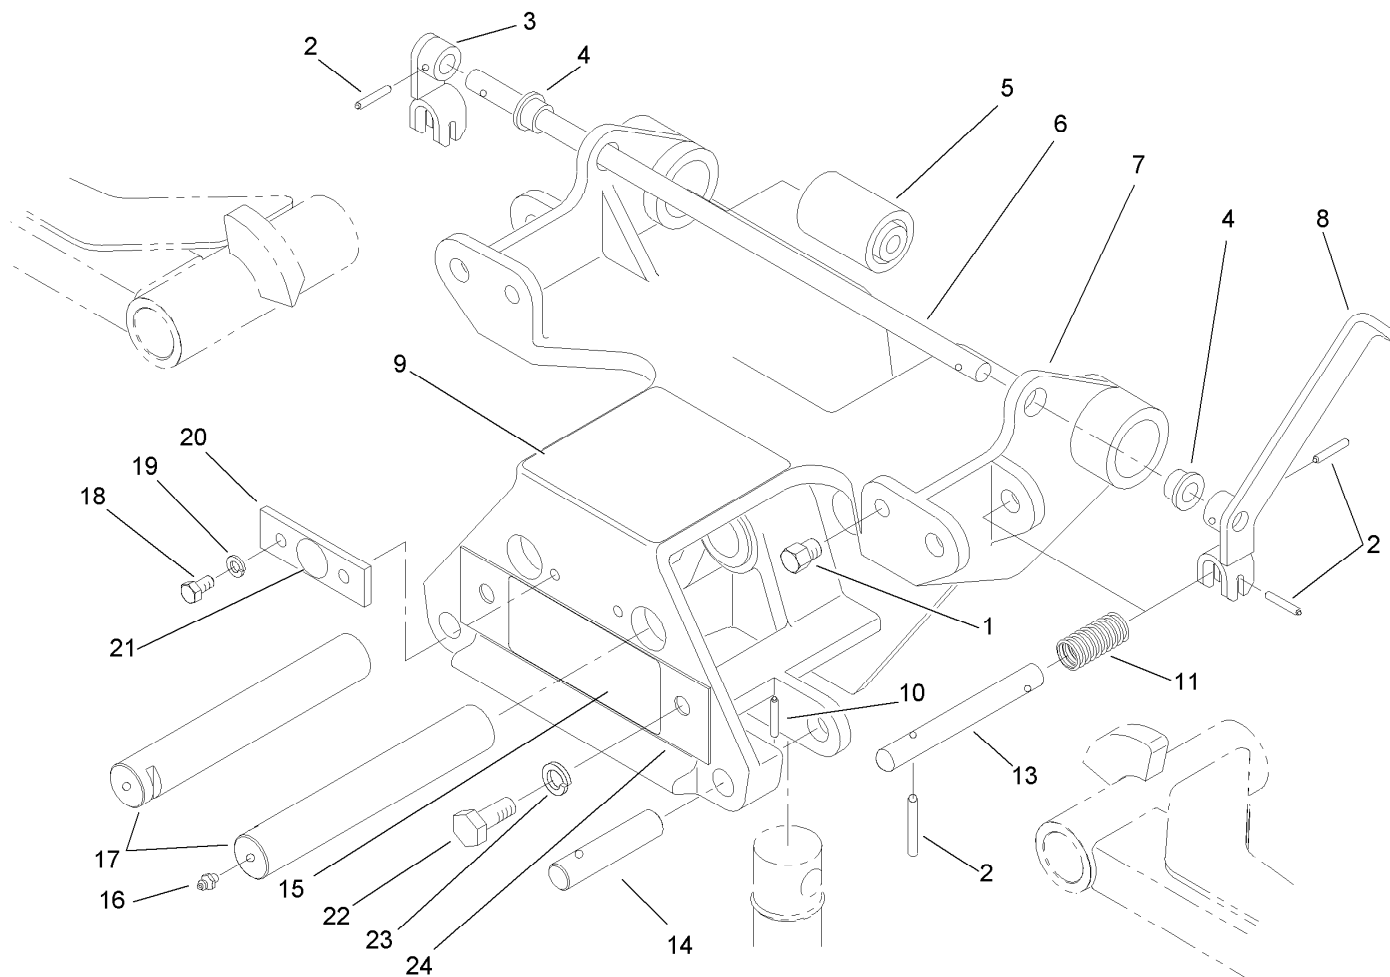 


Front Carrier Assembly

Ref.	Part Number	Qty.	Description
1	82-9250	2	Stud-Threaded
2	60-2000	6	Pin
3	60-1750-03	1	Lever-Latching, RH
4	60-1990	2	Bushing
5	47-7010	2	Bushing-Rubber
6	60-1820	1	Shaft-Pivot, Latch
7	74-2920-03	1	Carrier-Front
8	60-1780-03	1	Lever-Latching, LH
9	82-9370	1	Pad-Step, Front
10	32121-84	2	Pin-Spiral
11	60-0670	2	Spring
13	82-9360	2	Rod-Latch
14	58-2720	2	Pin
15	93-9400	1	Decal-Danger
16	302-5	2	Fitting-Grease
17	60-0090	2	Pin-Pivot
18	322-2	2	Screw-HH
19	3253-4	2	Washer-Lock
20	60-0190	1	Strip
21	58-6520	1	Decal-Grease
22	325-2	2	Screw-HH
23	3253-7	2	Washer-Lock
24	84-6480	1	Plate-Decal

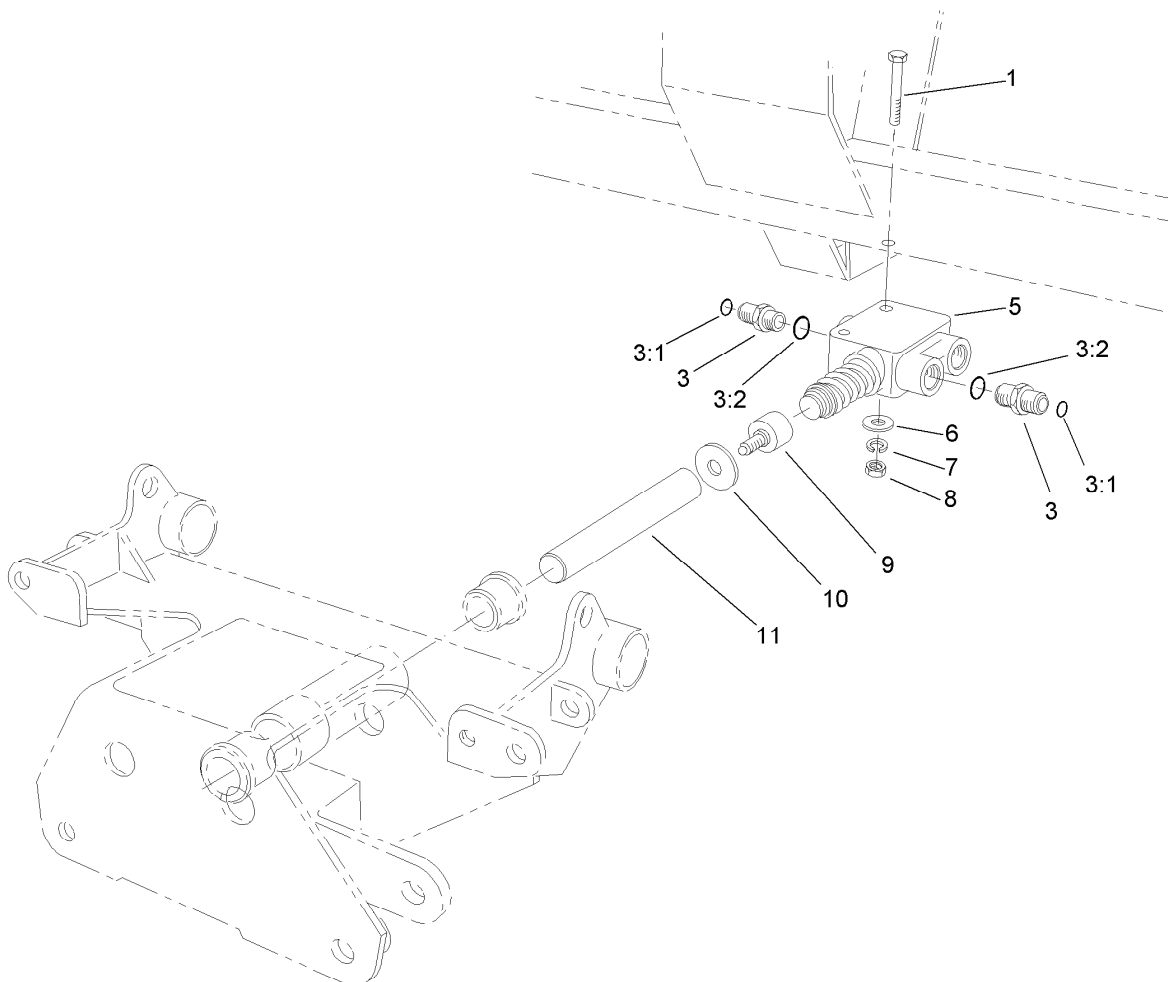 

Front Reel Shut-Off Assembly


Ref.	Part Number	Qty.	Description
1	322-12	2	Screw-HH
3	340-7	3	Fitting-Straight
3:1	237-65	1	O-Ring
3:2	237-80	1	O-Ring
5	58-5460	1	Valve-Selector
6	3256-23	2	Washer-Plain
7	3253-4	2	Washer-Lock
8	3217-6	2	Nut-Hex
9	59-7140	1	Bushing-Rubber
10	3256-68	3	Washer-Flat
11	60-0300	1	Rod-Push

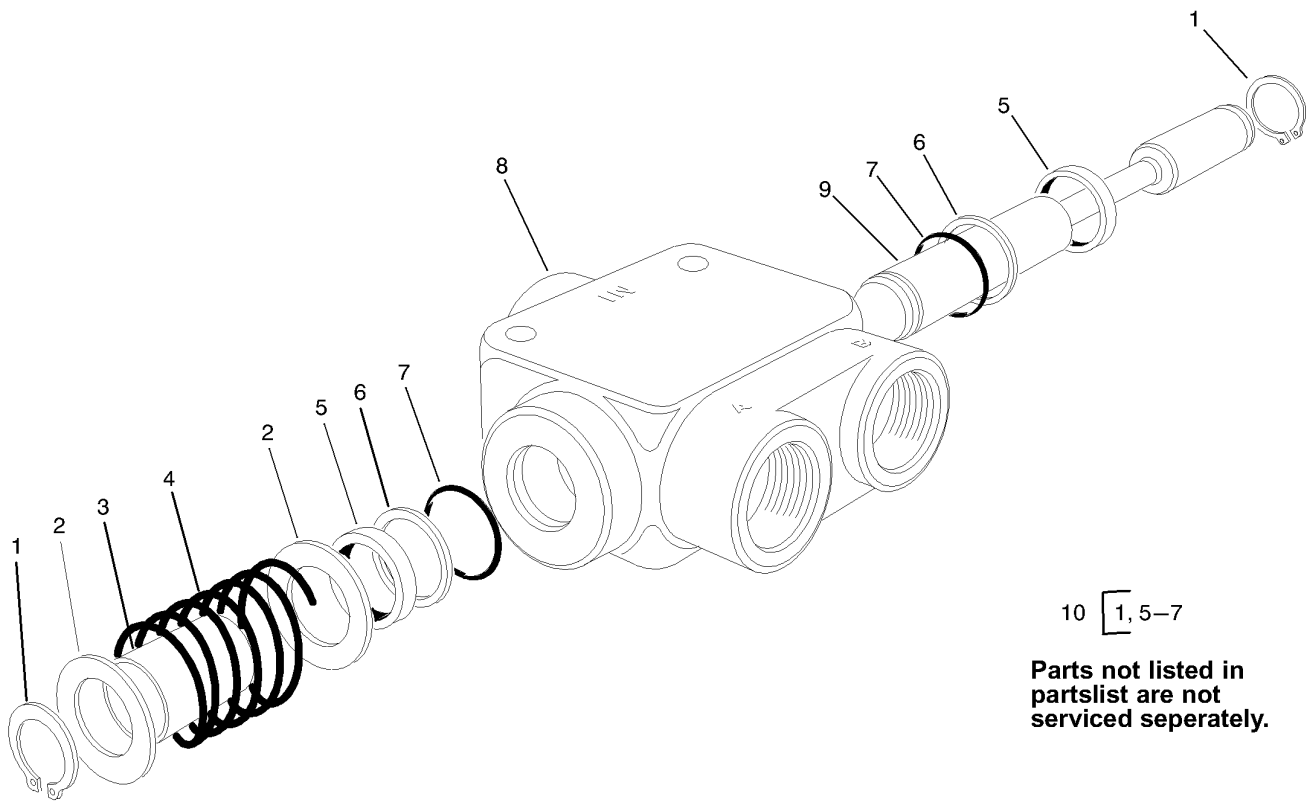 

Reel Shut-Off Valve Assembly No. 58-5460

Ref.	Part Number	Qty.	Description
2	59-7820	2	Washer
3		1	Spacer ●
4	59-7840	1	Spring
8		1	Body ●
9		1	Spool ●
10	59-7890	1	Seal Repair Kit

 
● Not serviced separately

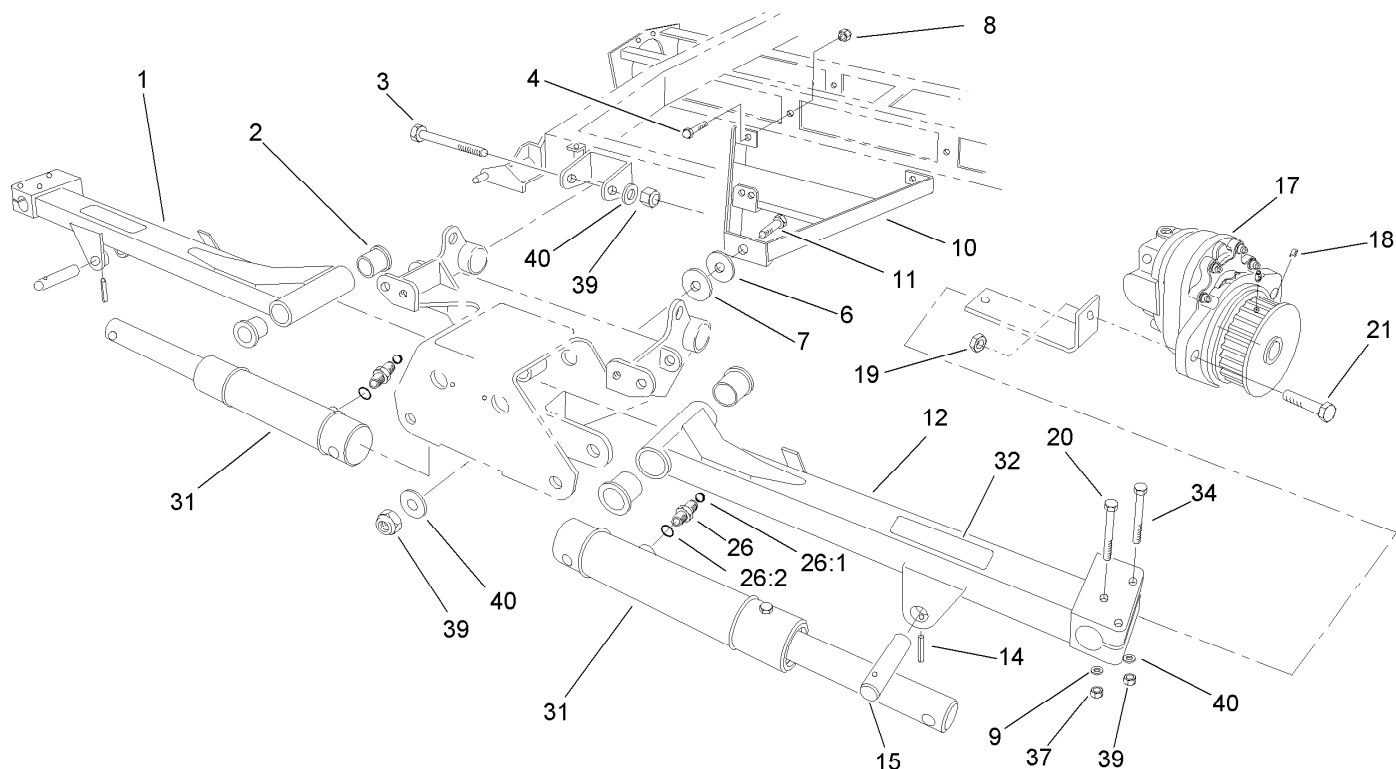

Front Lift Arm and A-Frame Assembly

Ref.	Part Number	Qty.	Description
1	92-9291-01	1	Arm-Lift, No. 3
2	68-6480	4	Bushing-Flange
3	325-17	2	Screw-HH
4	323-7	2	Screw-HH
6	52-6180	3	Spacer
7	60-3250	1	Washer
8	3290-357	2	Nut-HHF, Whiz
9	3256-56	2	Washer-Flat
10	92-9246-03	1	A-Frame
11	325-7	1	Screw-HH
12	92-9290-01	1	Arm-Lift, No. 2
14	60-1280	2	Pin
15	58-4380	2	Pin
17	93-1412	2	HYD Motor ASM

Ref.	Part Number	Qty.	Description
18	3246-17	4	Setscrew-HSH
19	3296-48	2	Nut-Hex
20	323-14	2	Screw-HH
21	324-6	2	Screw-HH
26	340-87	2	Fitting-Elbow, 45 DEG
26:1	237-22	1	O-Ring
26:2	237-42	1	O-Ring
31	104-5225	2	Cylinder-HYD
32	93-7331	2	Decal-Warning
34	325-34	4	Screw-HH
37	3296-39	2	Nut-Lock, NI
39	3296-23	7	Nut-Lock, NI
40	3256-26	7	Washer-Flat

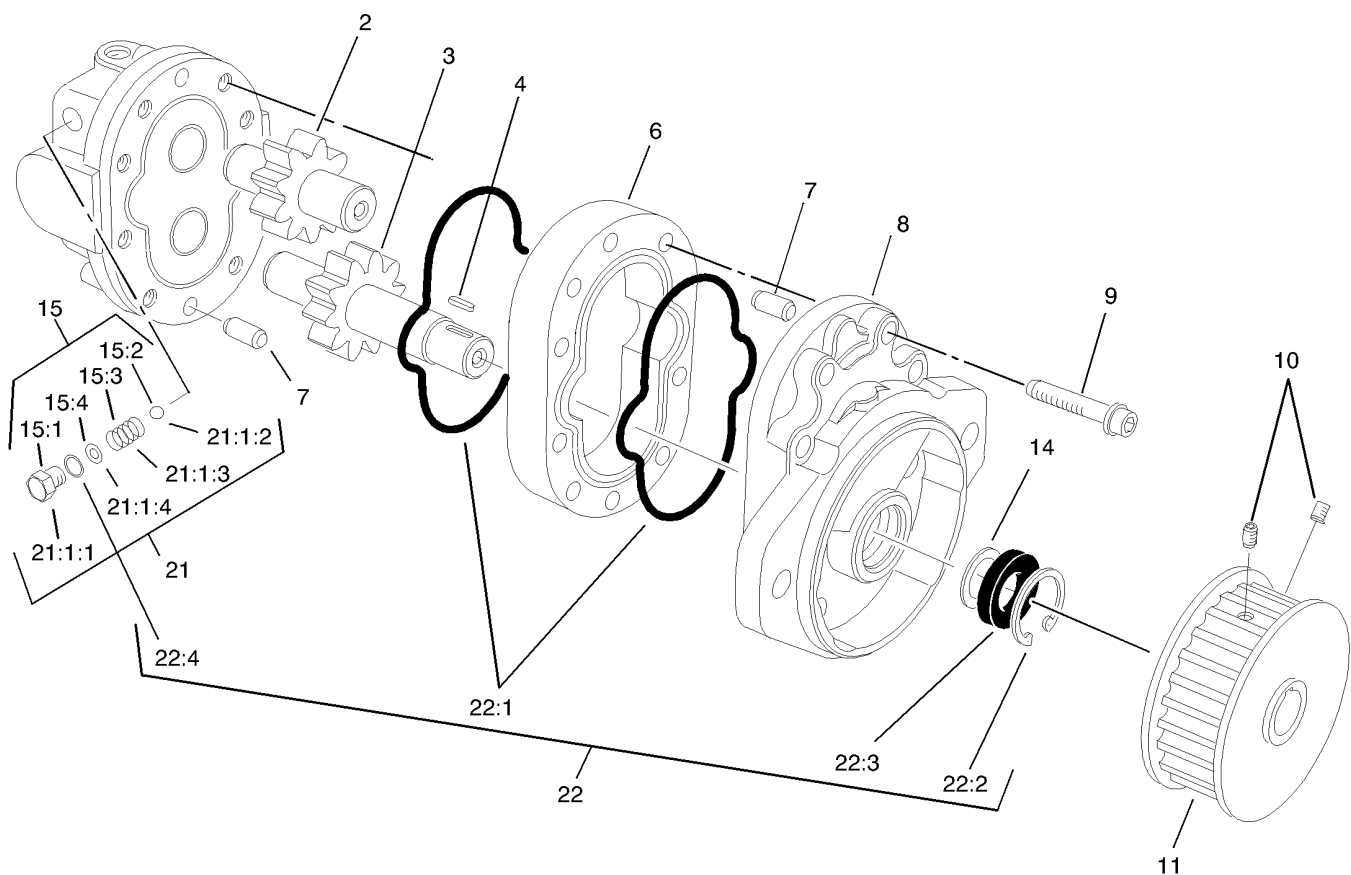 


Reel Motor Assembly No. 93-1412

Ref.	Part Number	Qty.	Description
2	66-5750	1	Idler Gear ASM
3	66-5760	1	Drive Gear ASM
4	47-2380	1	Key-Square
6	66-5740	1	Body ASM
7	42-2010	2	Pin-Dowel
8	66-5730	1	Front Plate ASM
9	66-5770	8	Capscrew
10	3246-17	2	Setscrew-HSH
11	47-7150	1	Pulley-Drive
14	60-5890	1	Washer
15	92-9260	2	Relief Valve Kit
15:1		2	Plug ●
15:2		2	Ball ●

Ref.	Part Number	Qty.	Description
15:3		2	Spring ●
15:4		2	Shim ●
21	92-9259	1	Backplate ASM
21:1:1		2	Plug ●
21:1:2		2	Ball ●
21:1:3		2	Spring ●
21:1:4		2	Shim ●
22	93-1413	1	Seal Kit
22:1	59-8420	2	Ring
22:2	59-8320	1	Ring-Retaining
22:3	66-5710	1	Seal-Shaft
22:4		2	Seal-Dust ●

 
● Not serviced separately

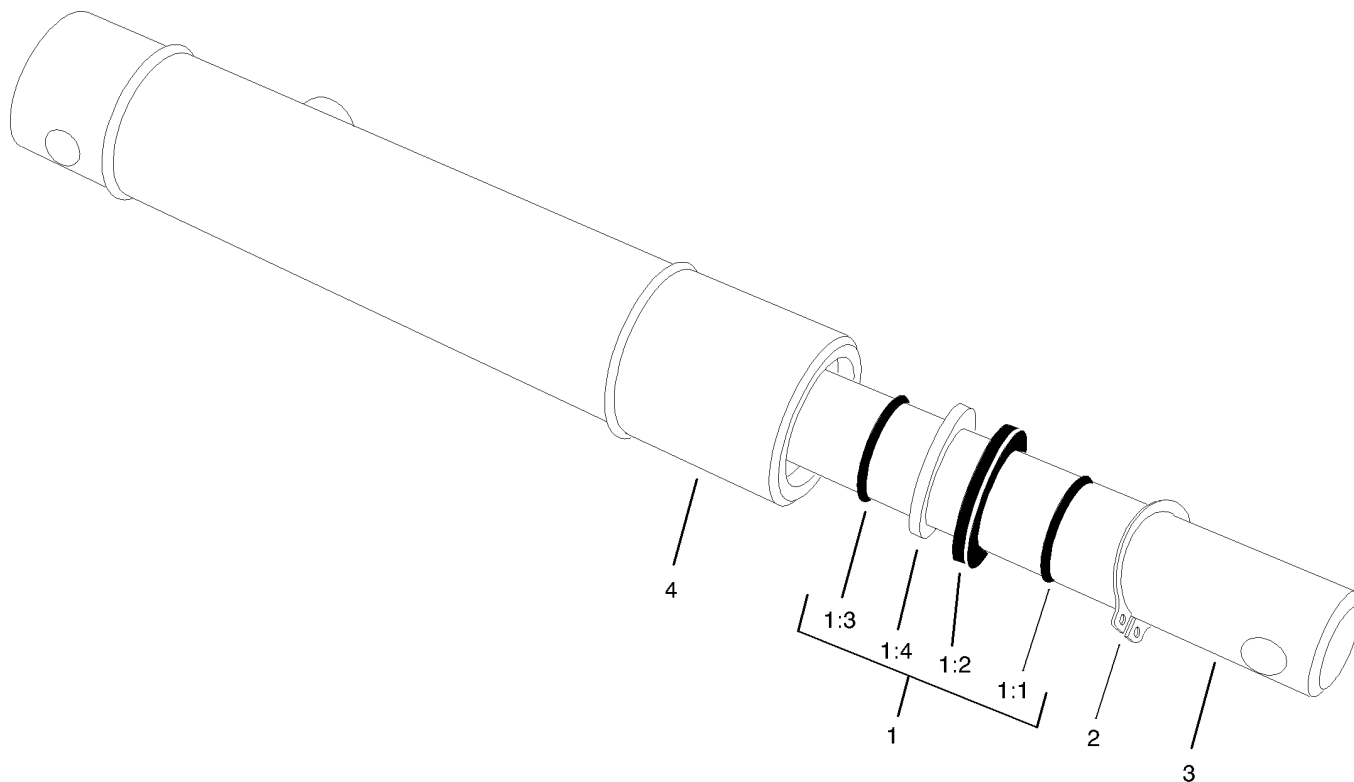

Hydraulic Cylinder Assembly No. 104-5225

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-5227	1	Repair Kit
1:1		1	Seal-Dust ●
1:2		1	Backup ●
1:3		1	Seal-Rod ●
1:4		1	Seal-Dust ●
2	76-0050	1	Ring-Retaining
3		1	Rod ●
4		1	Barrel ●

 
● Not serviced separately

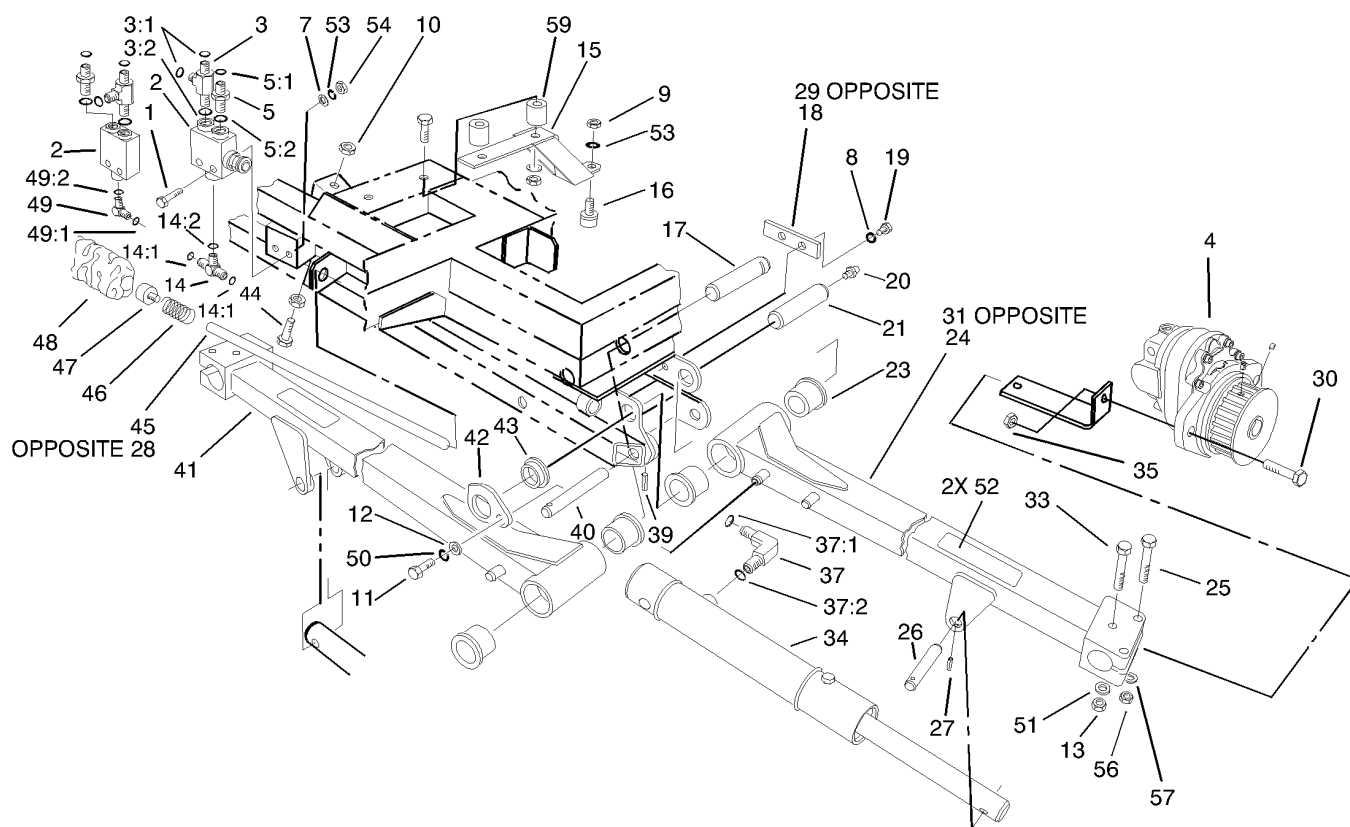

Rear Lift Arm and Shut-Off Assembly

Ref.	Part Number	Qty.	Description
1	322-12	4	Screw-HH
2	58-5460	2	Valve-Selector
3	340-22	2	Fitting-Tee
3:1	237-65	2	O-Ring
3:2	237-80	1	O-Ring
4	93-1412	3	HYD Motor ASM
5	340-7	2	Fitting-Straight
5:1	237-65	1	O-Ring
5:2	237-80	1	O-Ring
7	3256-23	4	Washer-Plain
8	42-9850	4	Washer-Lock, Spring
9	33014-00	2	Nut-Hex
10	48-9530	2	Nut
11	323-6	2	Screw-HH
12	3256-3	2	Washer-Flat
13	3296-39	3	Nut-Lock, NI
14	340-93	1	Tee-Adapter
14:1	237-65	2	O-Ring
14:2	237-80	1	O-Ring
15	105-9271-01	2	Bracket-Bumper
16	48-3280	2	Stop-Bump
17	60-0090	1	Pin-Pivot
18	60-0190	1	Strip
19	33114-016	4	Screw-HH
20	302-5	3	Fitting-Grease
21	60-0100	2	Pin-Pivot
23	68-6480	6	Bushing-Flange
24	92-9296-01	1	Arm-Lift, No. 4


Ref.	Part Number	Qty.	Description
25	325-34	6	Screw-HH
26	58-4380	3	Pin
27	60-1280	3	Pin
28	60-1350	1	Rod-Push
29	60-1640	1	Strip
30	324-6	3	Screw-HH
31	92-9297-01	1	Arm-Lift, No. 5
33	323-14	3	Screw-HH
34	104-5225	3	Cylinder-HYD
35	3296-48	3	Nut-Hex
37	340-77	3	Fitting-Elbow, 90 DEG
37:1	237-22	1	O-Ring
37:2	237-42	1	O-Ring
39	32121-84	3	Pin-Spiral
40	58-2720	3	Pin
41	92-9289-01	1	Arm-Lift, No. 1
42	58-9210	2	Cam
43	60-0080	2	Bushing
44	53-5940	1	Screw
45	60-1340	1	Rod-Push
46	58-3570	2	Spring
47	59-7140	2	Bushing-Rubber
48	58-9630	2	Sleeve
49	340-17	1	Fitting-Elbow, 90 DEG
49:1	237-65	1	O-Ring
49:2	237-80	1	O-Ring
50	3253-5	2	Washer-Lock
51	3256-56	3	Washer-Flat

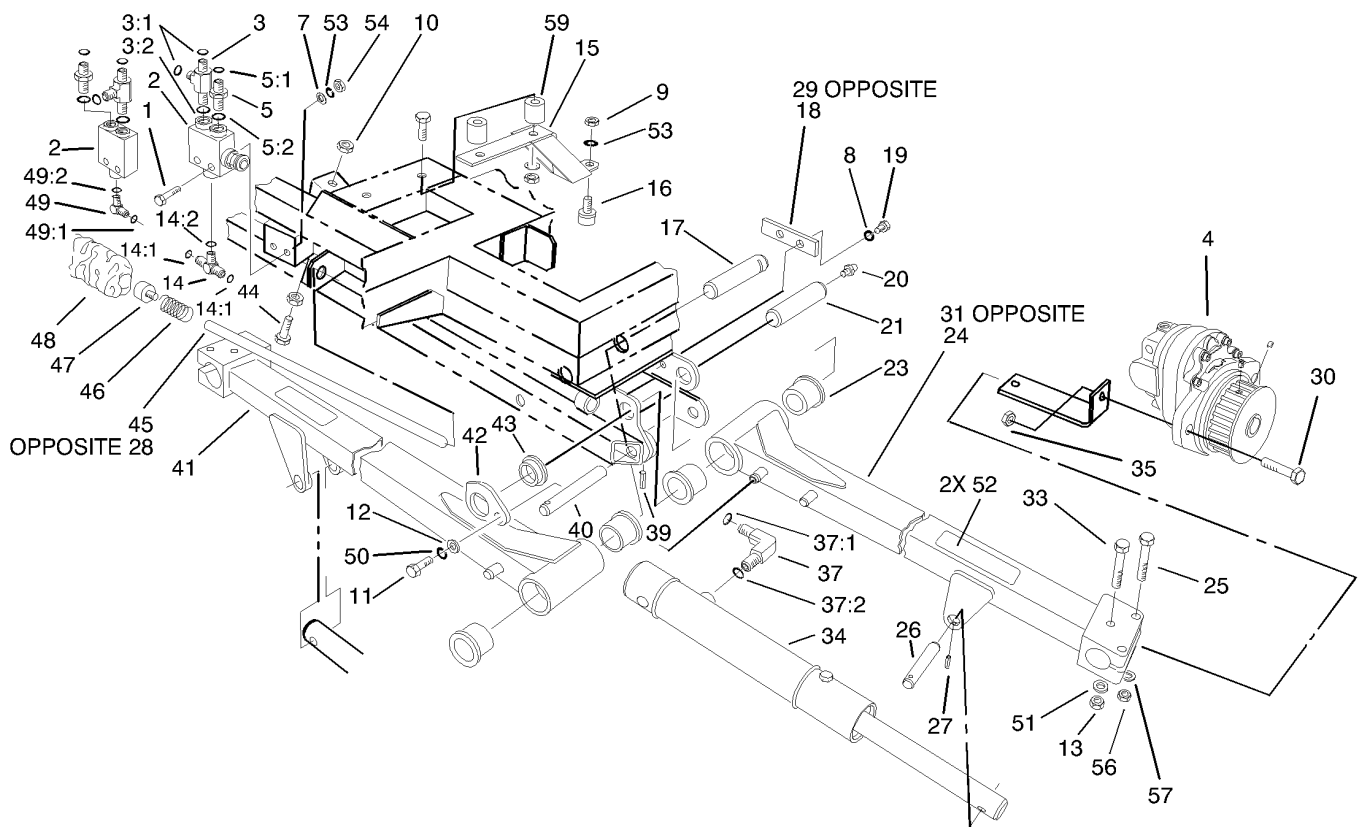 

Rear Lift Arm and Shut-Off Assembly (continued)

Ref.	Part Number	Qty.	Description
52	93-7331	3	Decal-Warning
53	3253-4	6	Washer-Lock
54	3217-6	4	Nut-Hex


Ref.	Part Number	Qty.	Description
56	3296-23	6	Nut-Lock, NI
57	3256-26	6	Washer-Flat
59	80-7590	4	Spacer

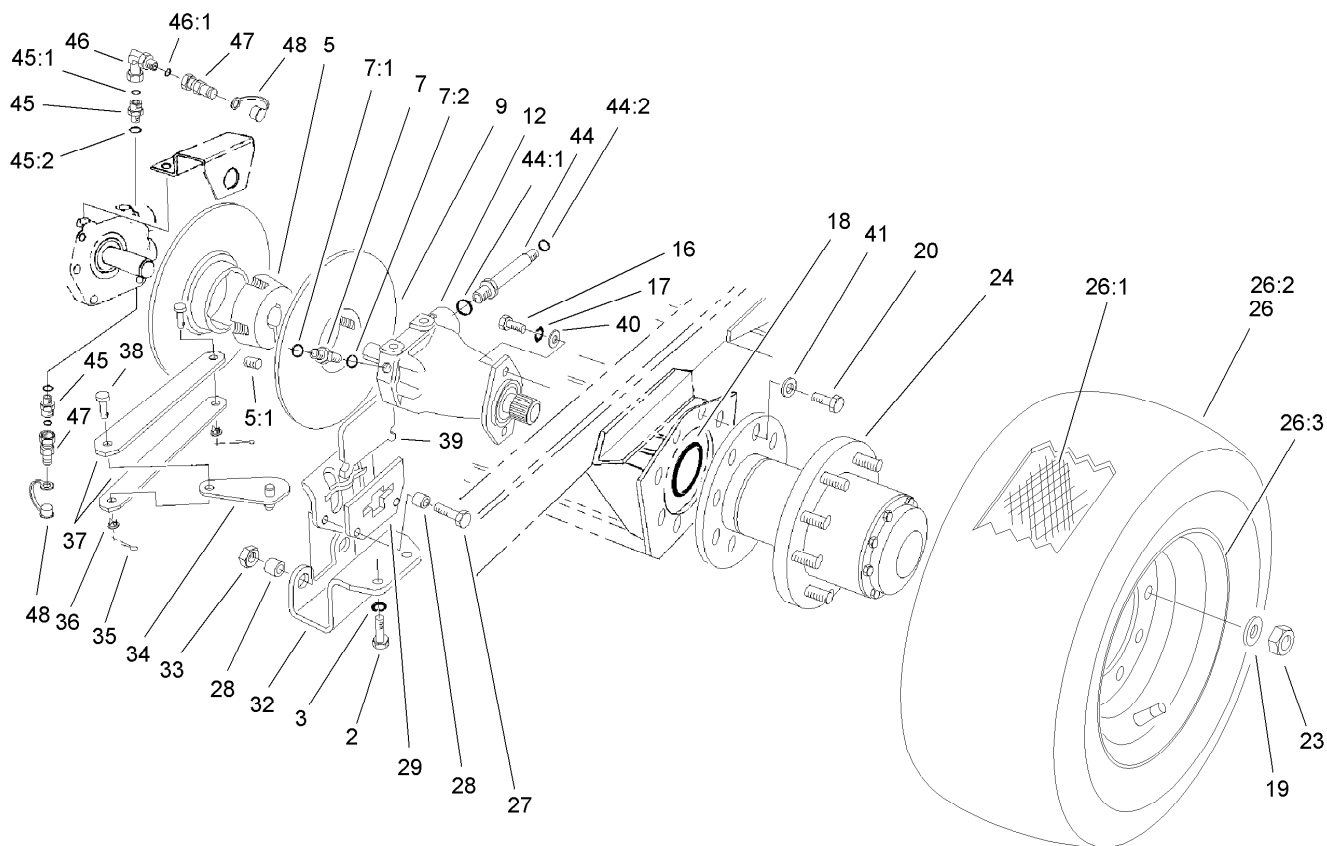 

Front Wheel and Motor Assembly

Ref.	Part Number	Qty.	Description
2	322-3	4	Screw-HH
3	3253-4	4	Washer-Lock
5	23-1840	2	Bushing-Taperlock
5:1	60-6620	2	Screw-Set
7	340-2	2	Fitting-Straight
7:1	237-22	1	O-Ring
7:2	237-42	1	O-Ring
9	58-0070	2	Disc Brake ASM
12	58-5430	2	Piston Motor ASM
16	323-18	4	Screw-HH
17	3253-5	4	Washer-Lock
18	353-949	2	O-Ring
19	3253-7	18	Washer-Lock
20	327-3	16	Screw-HH
23	3219-5	18	Nut-Hex
24	108-1434-03	2	Planetary Gear Drive ASM
26	66-5660	2	Wheel And Tire ASM
26:1	58-5620	1	Tube
26:2	63-4480	1	Tire
26:3	58-5610	1	Rim
27	323-20	4	Screw-HH
28	58-3780	8	Tube-Space


Ref.	Part Number	Qty.	Description
29	29-1060	2	Bracket-Secondary
32	58-0110-03	2	Bracket-Caliper, Brake
33	3296-39	4	Nut-Lock, NI
34	29-1070	2	Lever ASM
35	3272-6	4	Pin-Cotter
36	60-1740	4	Nut
37	58-2300	4	Link-Brake
38	283-67	4	Pin-Clevis
39	29-1080	4	Stator ASM
40	3256-3	4	Washer-Flat
41	3253-8	16	Washer-Lock
44	92-6058	4	Fitting-STR
44:1	237-81	1	O-Ring
44:2	237-58	1	O-Ring
45	98-1282	2	Adapter-HYD, Straight
45:1	237-22	1	O-Ring
45:2	237-118	1	O-Ring
46	340-159	1	Elbow-90
46:1	237-22	2	O-Ring
47	86-5480	2	Nipple-Test
48	353-947	2	Cap-Dust, Rubber

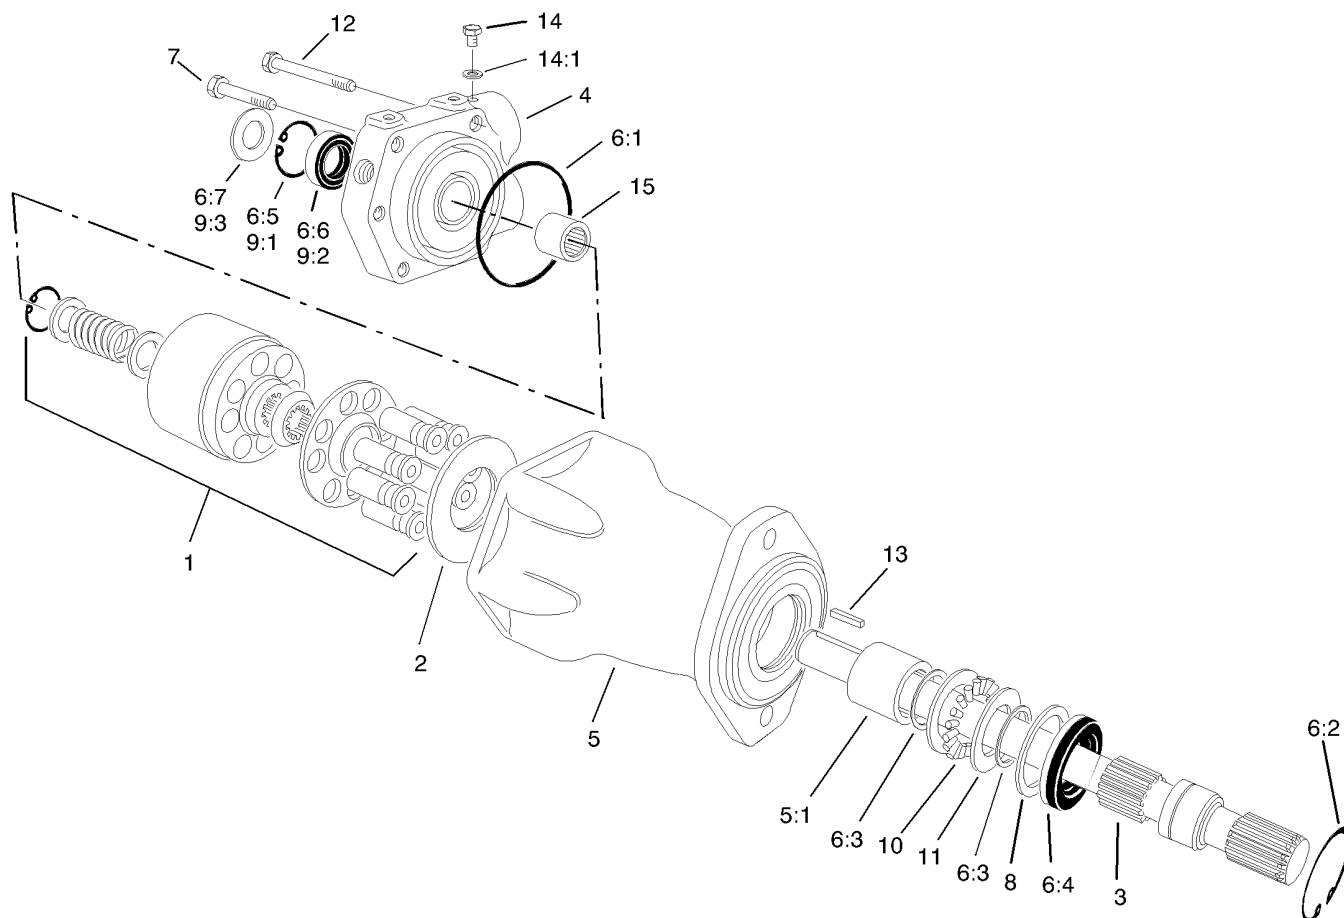 

Piston Motor Assembly No. 58-5430

Ref.	Part Number	Qty.	Description
1	59-8340	1	Rotating Kit
2	59-8350	1	Camplate
3	59-8360	1	Shaft
4	59-8270	1	Plate
5	59-8300	1	Housing
5:1	94-6363	1	Bearing
6	59-8390	1	Seal Kit
6:1	59-8260	1	Ring
6:2	32151-13	1	Ring-Retaining
6:3	32151-29	2	Ring-Retaining
6:4	59-8370	1	Seal
6:5	59-8320	1	Ring-Retaining
6:6	49-2640	1	Seal-Shaft
6:7	84-6440	1	Shield-Grass


Ref.	Part Number	Qty.	Description
7	59-8290	3	Capscrew
8	33-3720	1	Washer
9	66-5840	1	Seal Kit
9:1	59-8320	1	Ring-Retaining
9:2	49-2640	1	Seal-Shaft
9:3	84-6440	1	Shield-Grass
10	252-66	1	Bearing-Thrust
11	252-71	1	Washer-Thrust
12	59-8280	3	Capscrew
13	59-8380	1	Key
14	353-948	2	Fitting-Plug
14:1	237-118	1	O-Ring
15	94-6368	1	Bearing

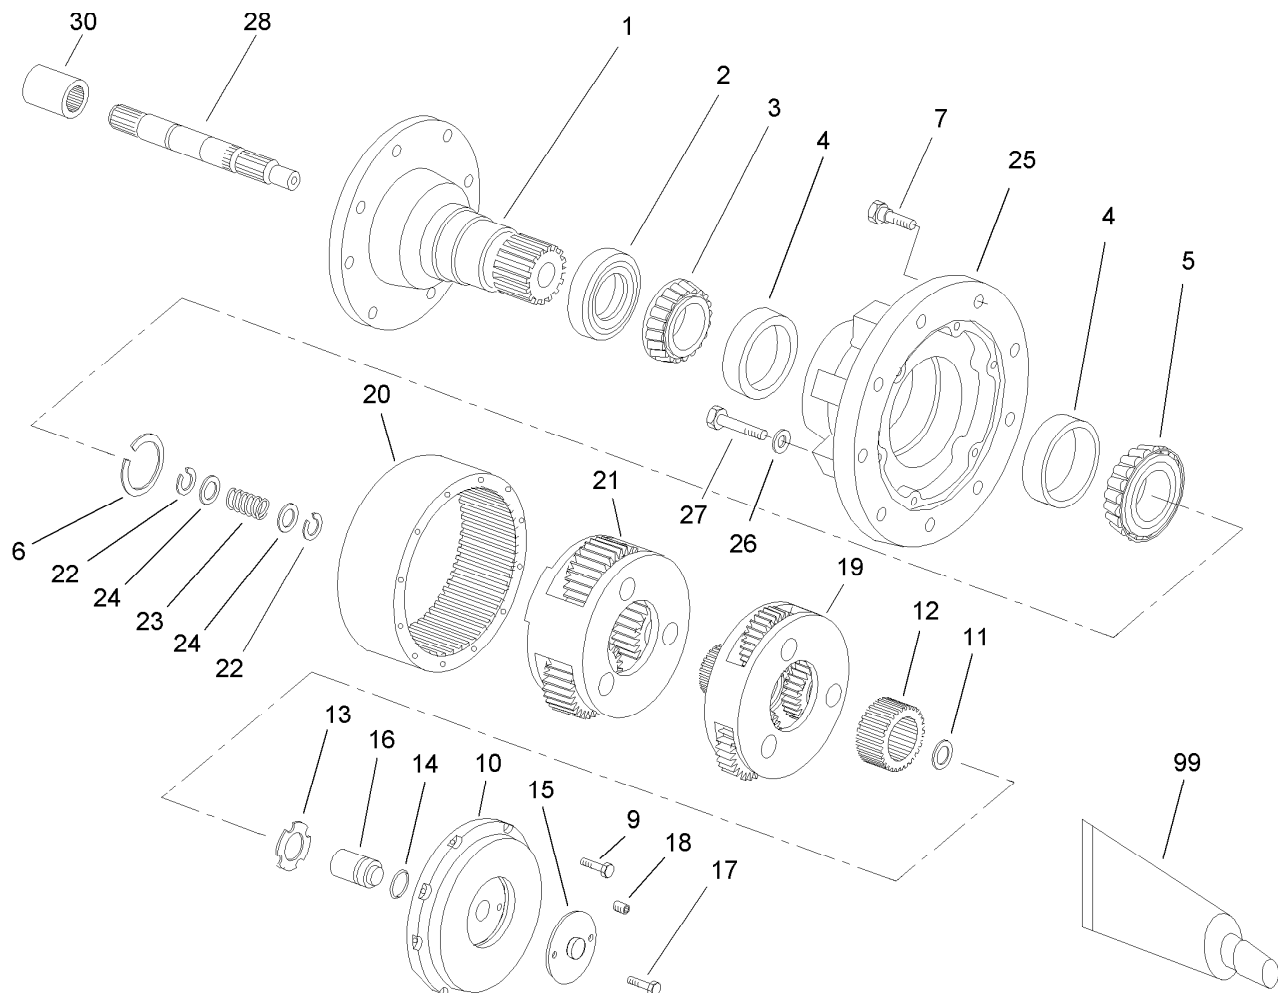 

Drive Gear Assembly No. 108-1434-03

Ref.	Part Number	Qty.	Description
1	60-3820	1	Spindle
2	60-3830	1	Seal
3	60-3880	1	Cone
4	60-3850	1	Cup
5	60-3840	1	Cone
6	62-6450	1	Retaining Ring Kit
7	107-4341	9	Bolt-Wheel
9	98-8270	8	Bolt
10	107-4345	1	Cover
11	108-1445	1	Ring-Retaining
12	62-6430	1	Gear
13	60-3990	1	Washer
14	107-4346	1	O-Ring
15	60-4060	1	Cover
16	107-4347	1	Plunger




Ref.	Part Number	Qty.	Description
17	322-1	2	Screw-HH
18	60-4040	1	Plug
19	108-1443	1	Primary Carrier ASM
20	60-3900	1	Gear
21	108-1444	1	Secondary Carrier ASM
22	82-8700	2	Ring
23	60-3950	1	Spring
24	60-3940	2	Washer
25	107-4342	1	Hub
26	60-3910	12	Washer
27	60-3890	12	Bolt
28	107-4340	1	Shaft-Input
30	60-3800	1	Coupling
99	62-6460	1	Sealant-R

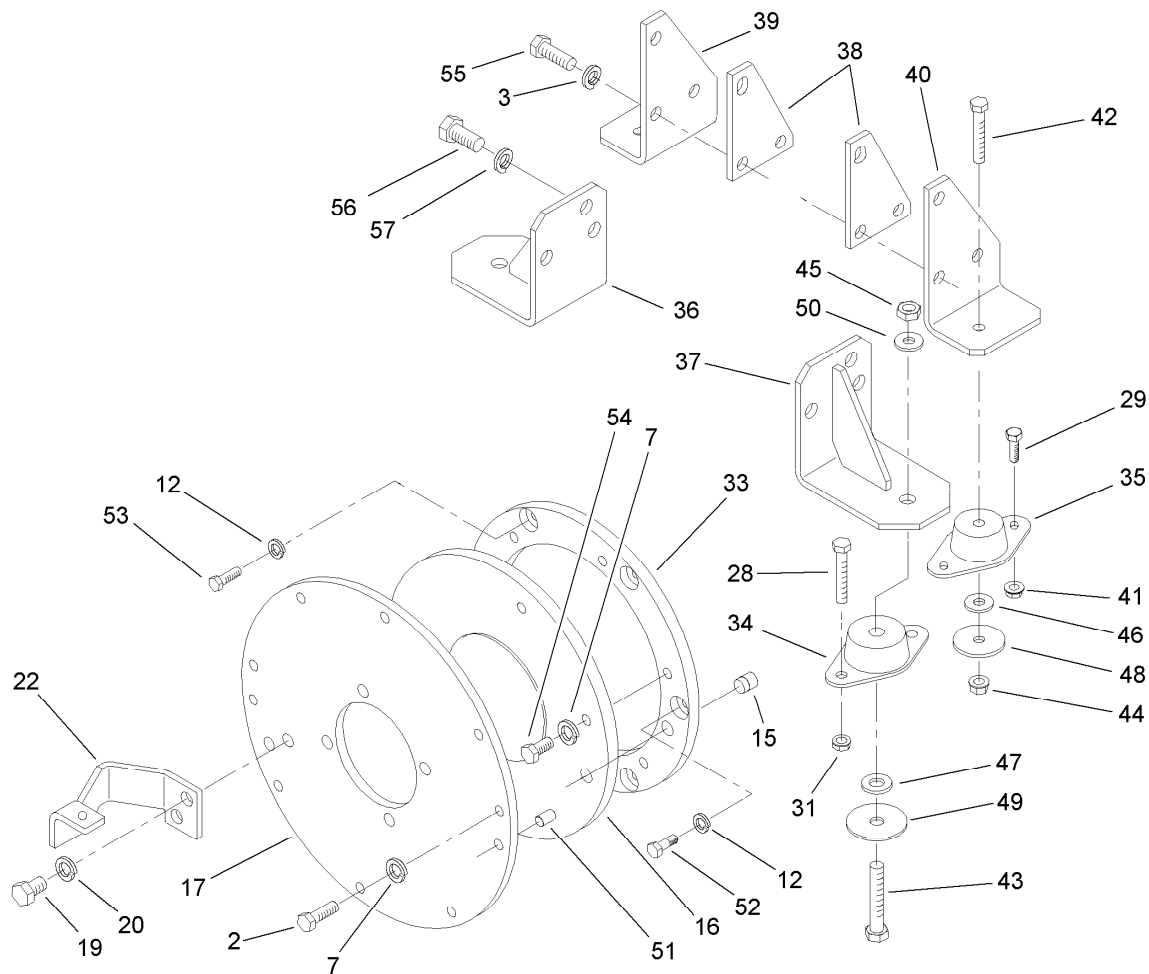 

Engine Installation Assembly

Ref.	Part Number	Qty.	Description
2	43-0090	8	Screw-HH
3	48-8070	6	Washer-Lock
7	48-9590	14	Washer-Lock
12	42-9850	6	Washer-Lock, Spring
15	58-3590	2	Dowel
16	92-1753	1	Coupling-Spring
17	98-1211-03	1	Plate-Adapter, Pump
19	3213-20	2	Screw-HH
20	3253-7	2	Washer-Lock
22	98-7066-03	1	Bracket-Damper
28	323-11	4	Screw-HH
29	322-5	4	Screw-HH
31	32128-21	4	Nut-HF Lock
33	100-5633	1	Spacer-Coupling
34	98-3024	2	Mount-Engine
35	83-1030	2	Mount-Engine
36	98-1207-03	1	Bracket-Front, LH
37	98-1206-03	1	Bracket-Front, RH
38	98-1200-03	2	Spacer


Ref.	Part Number	Qty.	Description
39	98-1204-03	1	Bracket-Engine, LH Rear
40	98-1205-03	1	Bracket-Engine, RH Rear
41	32128-20	4	Nut-HF
42	323-11	2	Screw-HH
43	33116-070	2	Screw-HH
44	32128-43	2	Nut-Flange
45	48-9530	2	Nut
46	80-6990	2	Washer-Hardened
47	3256-26	2	Washer-Flat
48	63-7400	2	Washer-Rebound
49	87-5100	2	Washer-Snubbing
50	43-5940	2	Washer-Lock, Spring
51	98-1212	2	Pin-Plate, Pump
52	100-5634	2	Bolt-Shoulder
53	33114-020	4	Screw-HH
54	70-8470	6	Screw-HH
55	43-3180	6	Screw-HH
56	43-3210	6	Screw-HH
57	43-5950	6	Washer-Lock, Spring

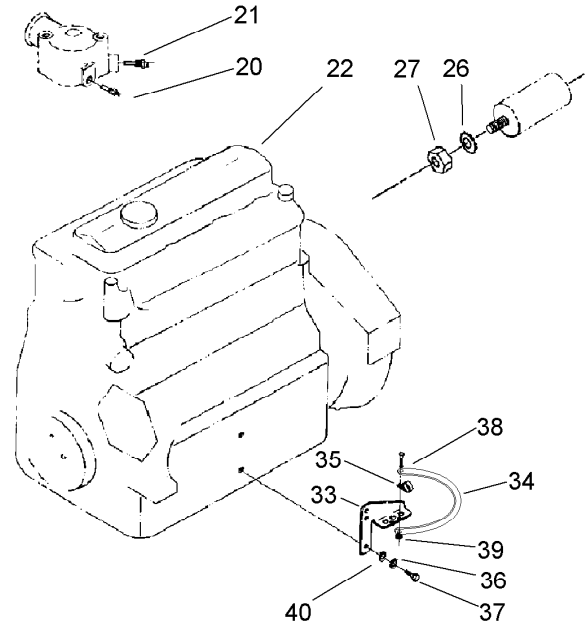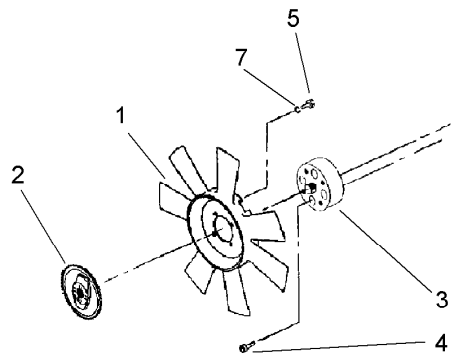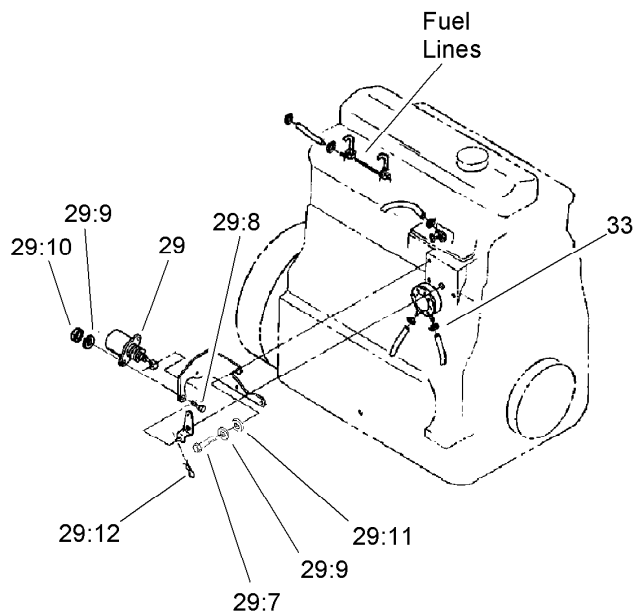   

Engine Attachment Assembly

Ref.	Part Number	Qty.	Description
1	104-5269	1	Fan
2	93-1430	1	Drive-Fan
3	98-1242	1	Adapter-Fan
4	52-6290	4	Screw-HSH
5	322-2	8	Screw-HH
7	3253-4	8	Washer-Lock
20	98-3824	1	Switch-Temp
21	98-3825	1	Switch-Temp
22	108-4410	1	Engine-Kubota
26	3255-8	1	Washer-Lock
27	33014-00	1	Nut-Hex
29	98-3817	1	Solenoid Kit
29:7	33113-025	3	Screw-HH

Ref.	Part Number	Qty.	Description
29:8	33113-016	2	Screw-HH
29:9	48-8020	5	Washer-Spring
29:10	33013-00	2	Nut-Hex
29:11	33093-00	3	Washer-Flat
29:12	3272-2	1	Pin-Cotter
33	98-1293-03	1	Bracket-Line
34	98-3883	2	Clamp-Wire
35	3256-61	4	Washer-Flat
36	43-5940	2	Washer-Lock, Spring
37	42-9250	2	Bolt
38	32105-13	2	Screw-HWH
39	3296-2	2	Nut-Lock, NI
40	3256-26	2	Washer-Flat

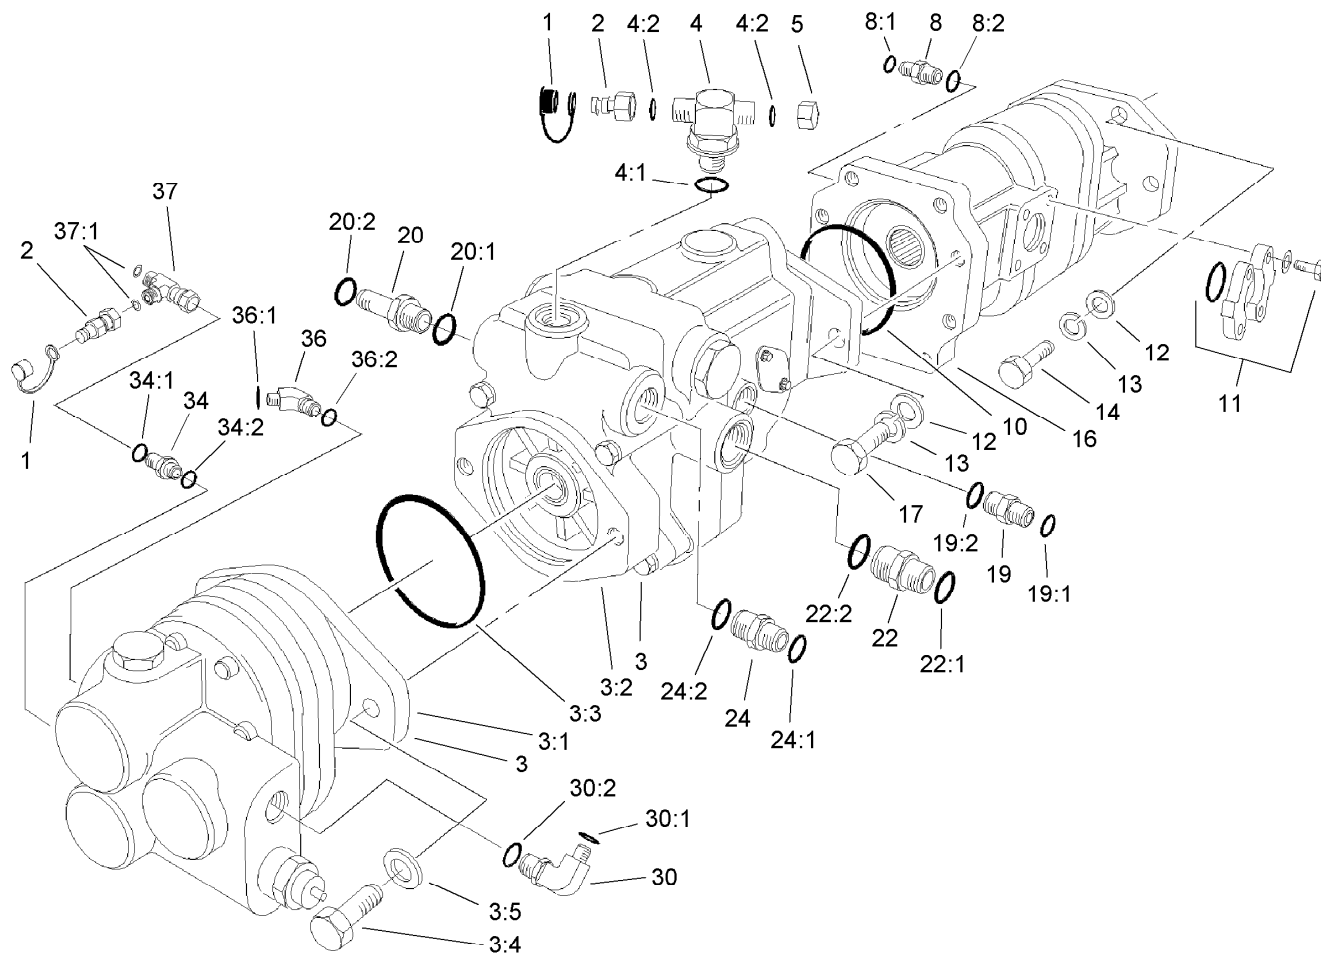 


Hydraulic Pump Assembly

Ref.	Part Number	Qty.	Description
1	353-947	2	Cap-Dust, Rubber
2	86-5480	2	Nipple-Test
3		1	Tandem Pump ASM ●
3:1	99-6495	1	Gear Pump ASM
3:2	99-6494	1	Variable Piston Pump ASM
3:3	60-3520	1	O-Ring
3:4	60-3530	2	Bolt
3:5	60-3540	2	Washer
4	92-4799	1	Fitting-Tee, HYD
4:1	237-79	1	O-Ring
4:2	237-22	2	O-Ring
5	340-117	1	Cap
8	340-8	1	Fitting-Straight
8:1	237-65	1	O-Ring
8:2	237-81	1	O-Ring
10	59-8550	1	O Ring
11	340-62	1	Flange Kit
12	87-7270	6	Washer-Thrust
13	3253-7	6	Washer-Lock
14	3213-2	4	Screw-HH
16	86-6000-01	1	Pump
17	325-5	2	Screw-HH
19	340-2	1	Fitting-Straight

Ref.	Part Number	Qty.	Description
19:1	237-22	1	O-Ring
19:2	237-42	1	O-Ring
20	92-6058	1	Fitting-STR
20:1	237-81	1	O-Ring
20:2	237-58	1	O-Ring
22	340-9	1	Fitting-STR
22:1	237-58	1	O-Ring
22:2	237-81	1	O-Ring
24	340-4	1	Fitting-Straight
24:1	237-30	1	O-Ring
24:2	237-79	1	O-Ring
30	340-15	1	Fitting-Elbow 90
30:1	237-58	1	O-Ring
30:2	237-146	1	O-Ring
34	340-3	1	Fitting-Straight
34:1	237-22	1	O-Ring
34:2	237-79	1	O-Ring
36	340-89	1	Fitting-HYD, 45 DEG
36:1	237-30	1	O-Ring
36:2	237-80	1	O-Ring
37	340-115	1	Fitting-Tee
37:1	237-22	2	O-Ring

 ● Not serviced separately

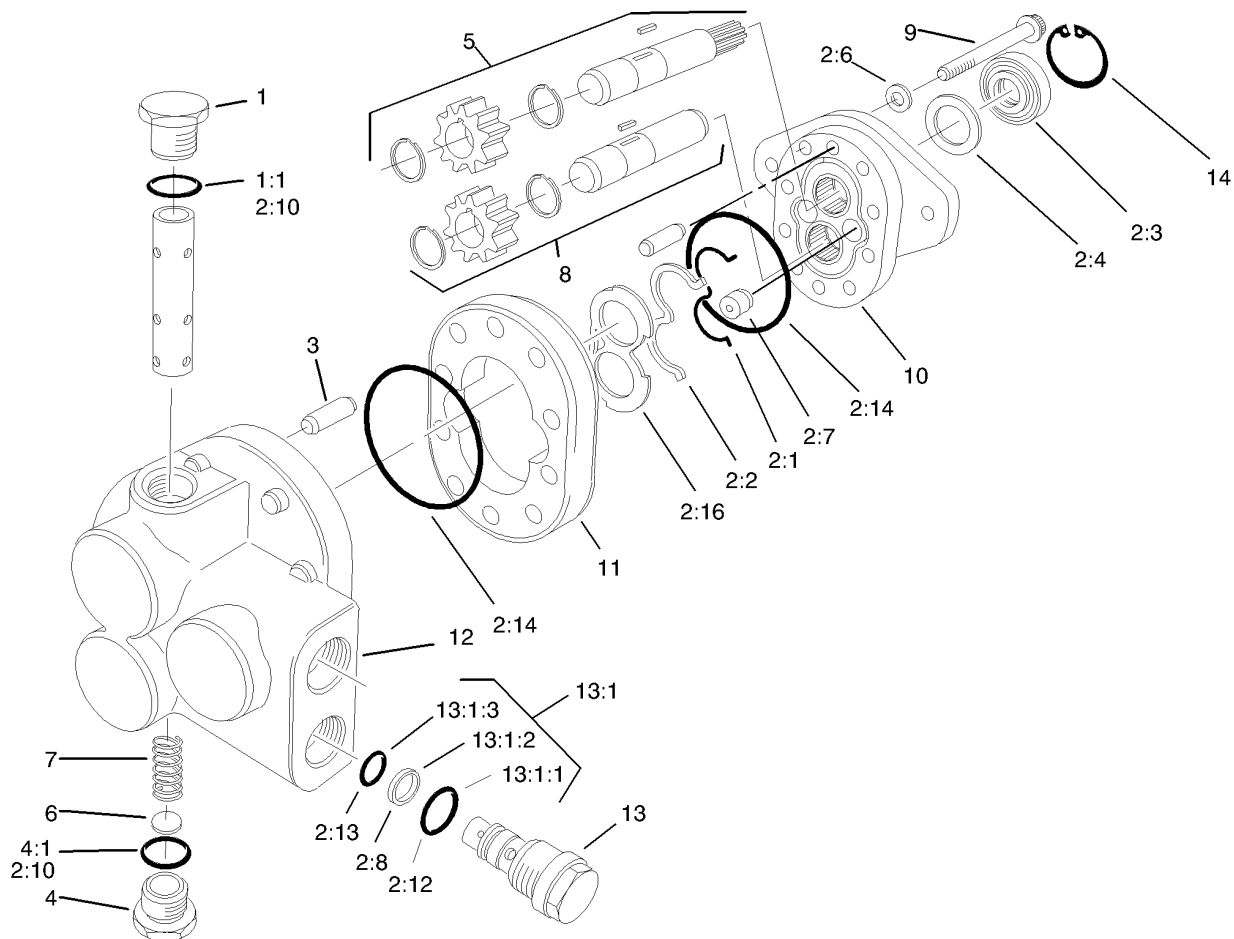


Variable Piston Pump Assembly No. 99-6495

Ref.	Part Number	Qty.	Description
1	60-5860	1	Plug
1:1	60-5720	1	O-Ring
2	95-2109	1	Seal Kit
2:1		1	Seal-Shaft ●
2:2		1	Seal-Dust ●
2:3		1	Seal-Dust ●
2:4		1	Seal-Dust ●
2:5		1	Seal-Dust ●
2:6		1	Seal-Dust ●
2:7		1	Seal-Dust ●
2:8		1	Washer ●
2:9		1	Ring-Retaining ●
2:10		1	Seal-Dust ●
2:11		1	Washer-Back Up ●
2:12		1	Washer-Back Up ●
2:13		1	O-Ring, Molded ●
2:14		1	Washer-Sealing ●
2:15		1	Seal-Pressure Balance ●
2:16		1	Gasket-Back Up ●

Ref.	Part Number	Qty.	Description
2:17		1	Plug ●
2:18		1	Plate-Wear ●
3	60-5760	1	Pin
4	60-5710	1	Plug
4:1	60-5720	1	O-Ring
5	99-8591	1	Drive Gear ASM
6	60-5730	1	Disc
7	60-5820	1	Spring
8	99-8592	1	Idler Gear ASM
9	42-3140	8	Capscrew
10	95-4362	1	Plate-Front
11	99-8589	1	Body ASM
12	99-8590	1	Plate-Back
13	92-9253	1	Valve-Relief
13:1	92-9257	1	Seal Kit
13:1:1	92-9255	1	O-Ring
13:1:2	92-9256	1	Washer-Backup
13:1:3	92-9254	1	O-Ring
14	99-8593	1	Ring-Retaining

 
● Not serviced separately

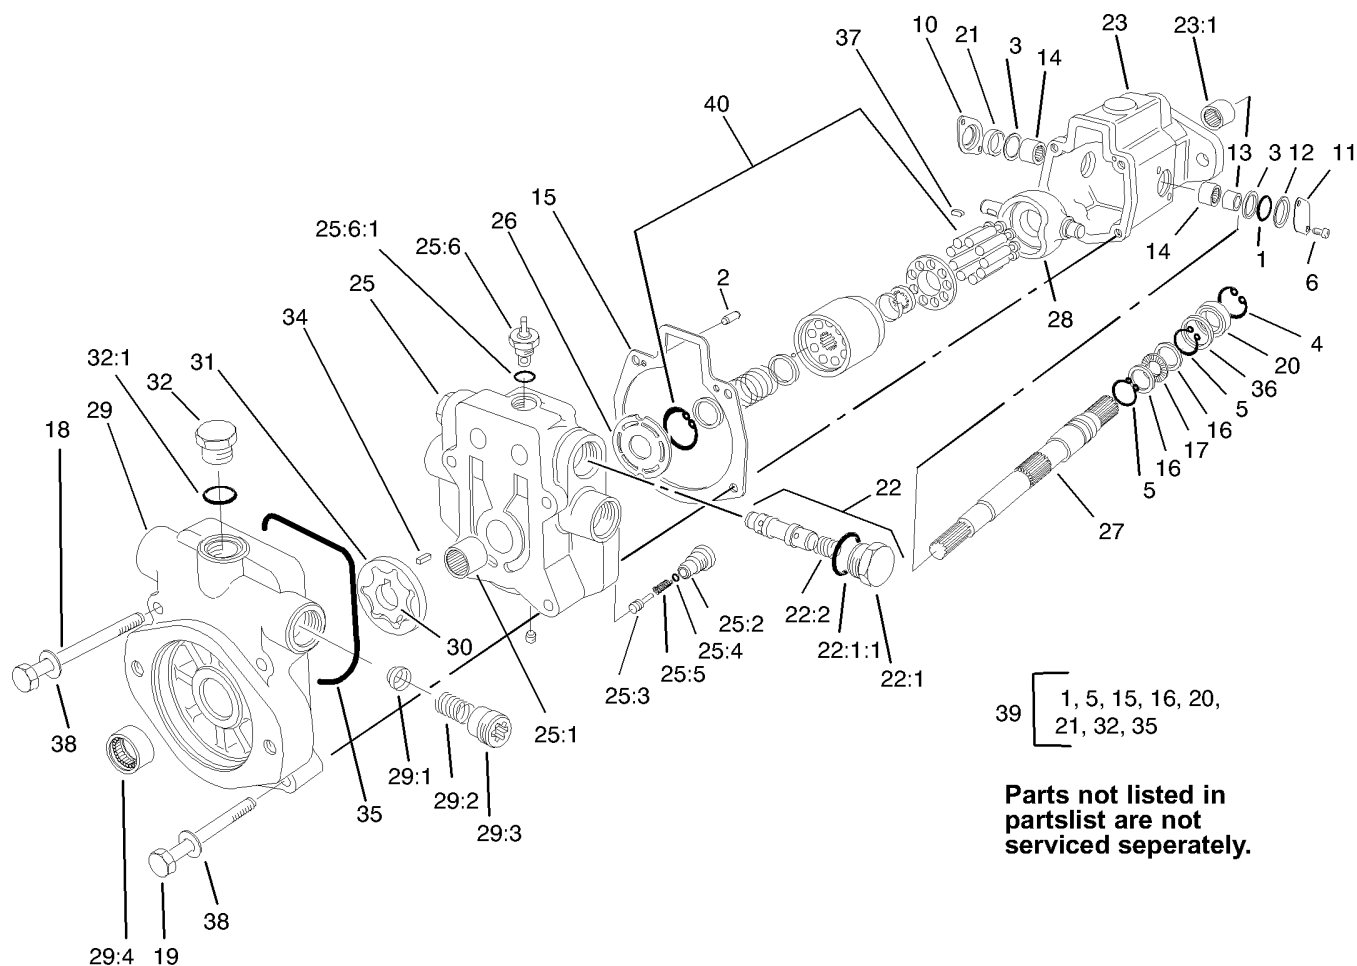

Variable Piston Pump Assembly No. 99-6494


Ref.	Part Number	Qty.	Description
1	60-6190	1	O-Ring
2	95-6050	2	Pin-Dowel
3	60-6250	2	Washer
4	60-6260	1	Ring
5	60-6270	2	Ring
6	60-6330	4	Screw
10	60-6120	1	Cover-Seal
11	60-6010	1	Cover-Trunnion
12	99-8702	1	O-Ring Cover
13	60-5990	1	Race
14	60-6110	2	Bearing
15	60-6130	1	Gasket
16	60-6160	2	Race
17	76-6960	1	Bearing-Thrust
18	60-6230	2	Screw-HH
19	60-6220	2	Screw-HH
20	60-6300	1	Seal
21	42-2720	1	Seal-External
22	68-6460	2	Relief Valve Kit
22:1	70-1240	1	Plug ASM
22:1:1	60-5980	1	O-Ring
22:2	99-8700	1	Spring
23	99-8703	1	Housing ASM
23:1	63-4390	1	Bearing-Needle
25	99-8705	1	Backplate ASM
25:1	60-6050	1	Bearing

Ref.	Part Number	Qty.	Description
25:2	60-6060	1	Cartridge
25:3	60-6070	1	Poppet
25:4	60-6080	1	Ring
25:5	60-6090	1	Spring
25:6	39-2080	1	Tow Valve ASM
25:6:1	60-6290	1	O-Ring
26	99-8704	1	Plate-Valve
27	60-6140	1	Shaft
28	60-6020	1	Camplate
29	60-6200	1	Adapter
29:1	33-4990	1	Poppet
29:2	39-2140	1	Spring
29:3	39-2130	1	Retainer-Spring
29:4	60-6150	1	Bearing
30	99-8706	1	Gerotor-Inner
31	99-8707	1	Gerotor-Outer
32	60-6280	1	Plug
32:1	60-6290	1	O-Ring
34	60-6320	1	Key
35	99-8708	1	O-Ring
36	60-6240	1	Washer
37	60-6310	1	Key
38	3256-73	4	Washer-Flat
39	95-6056	1	Seal Kit
40	99-8701	1	Rotating Kit

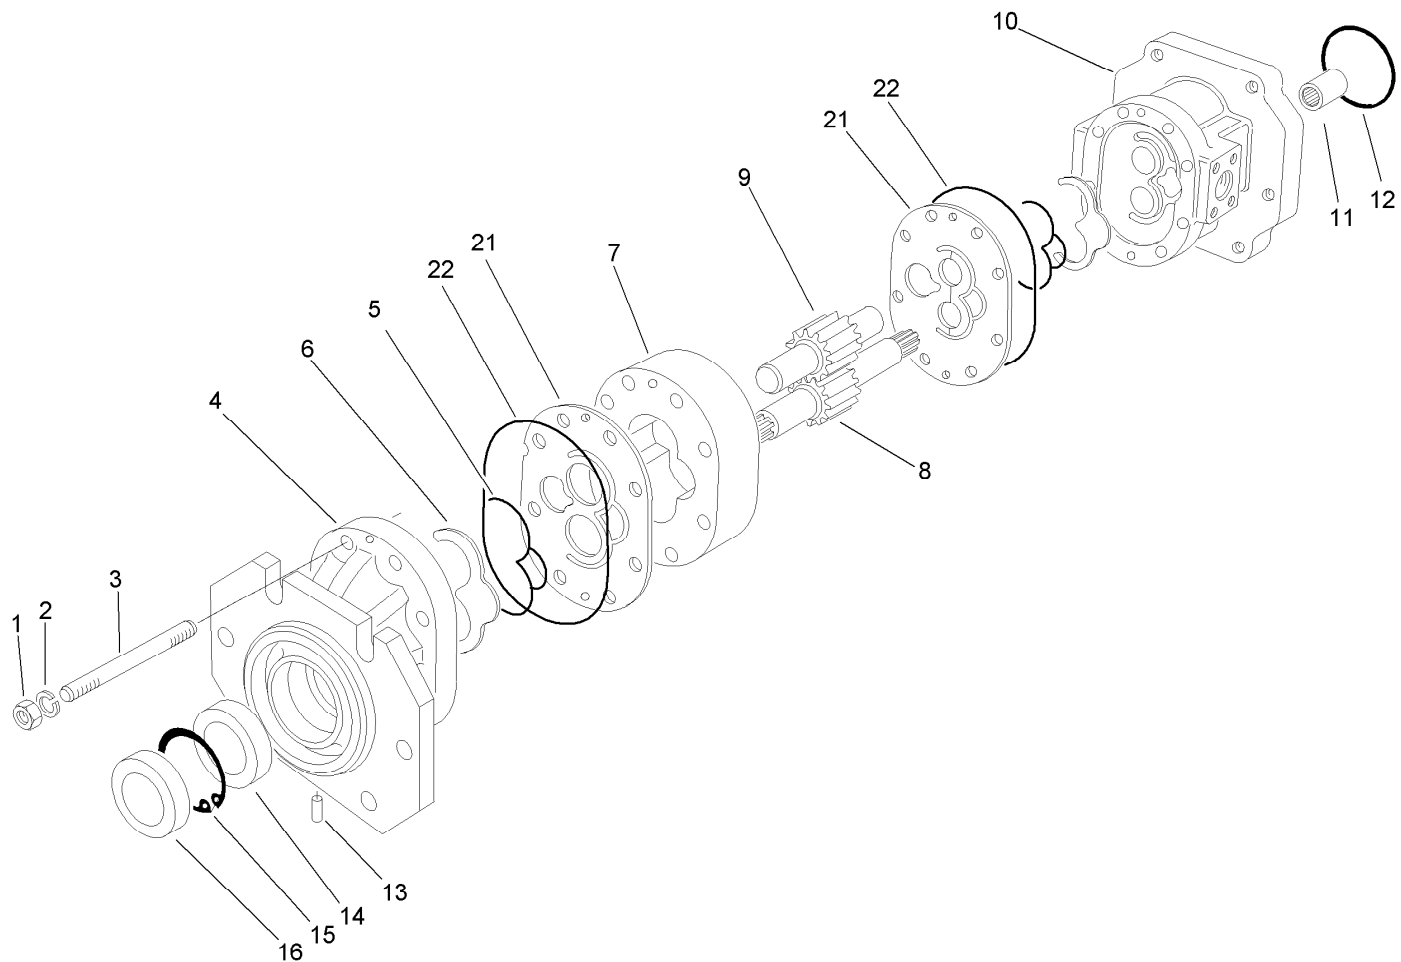 


Pump Assembly No. 86-6000-01

Ref.	Part Number	Qty.	Description
1	59-7580	8	Nut
2	59-7590	8	Washer-Lock
3	59-7970	8	Stud
4	86-6010	1	Cover-Front
5	59-7990	2	Seal
6	59-8470	2	Retainer
7	86-6020	1	Section-Center
8	59-8500	1	Gear
9	59-8600	1	Gear
10	86-6030	1	Section-Port, Rear
11	59-8540	1	Coupling
12	86-6040	1	O-Ring
13	86-6050	1	Plug
14	59-8570	1	Seal
15	59-8580	1	Ring-Retaining
16	59-8590	1	Seal
21	86-6070	2	Plate-Rear
22	86-6080	2	O-Ring

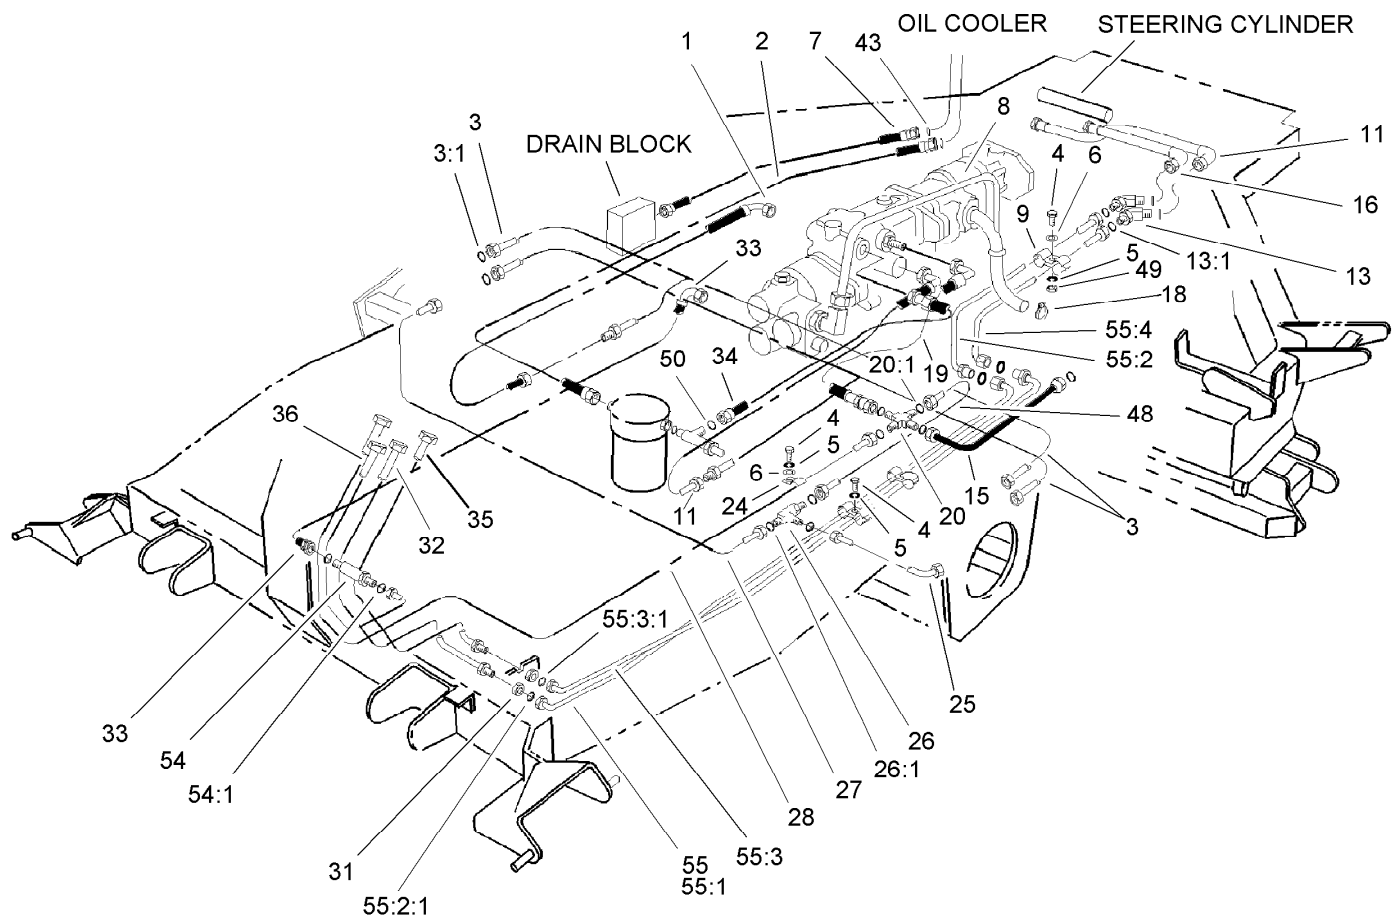 

Hydraulic Circuit - Steering and Traction Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	58-5860	2	Hose ASM	28	74-2820	1	Tube ASM
2	75-8200	1	Hose-Filter / Cooler	31	340-70	6	Nut-Lock
3	92-9202	2	Tube-Traction	32	74-2780	1	Tube ASM
3:1	237-58	1	O-Ring	33	58-5720	1	Hose ASM
4	33113-025	5	Screw-HH	34	58-5870	1	Hose ASM
5	43-5930	5	Washer-Lock, Spring	35	74-2810	1	Tube ASM
6	33093-00	7	Washer-Flat	36	74-2790	1	Tube ASM
7	75-8210	1	Hose-Manifold / Cooler	43	340-65	2	O-Ring
8	60-1900	1	Tube	48	58-4710	1	Tube-Steel
9	58-3880	4	Clamp-Double	49	48-7890	2	Nut-Hex
11	98-7415	1	Hose-HYD	50	237-30	1	O-Ring
13	340-69	2	Elbow-Bulkhead, 45 DEG	54	340-71	1	Fitting-Straight, Bulkhead
13:1	237-22	2	O-Ring	54:1	237-22	2	O-Ring
15	92-5694	1	Hose-Hydraulic	55	105-3333	1	HYD Tube Kit
16	98-7414	1	Hose-HYD	55:1	105-3318	1	Tube-HYD, LH Front Steering
18	2412-92	2	Clamp-Hose	55:2	105-3319	1	Tube-HYD, LH Rear Steering
19	60-1250	1	Hose-Drain	55:2:1	237-22	1	O-Ring
20	340-23	1	Cross-Union	55:3	105-3320	1	Tube-HYD, RH Front Steering
20:1	237-22	4	O-Ring	55:3:1	237-22	1	O-Ring
24	60-1360	1	Clamp-Single	55:4	105-3321	1	Tube-HYD, RH Rear Steering
25	58-4790	1	Tube-Steel				
26	340-68	1	Fitting-Tee, Bulkhead				
26:1	237-22	3	O-Ring				
27	58-4860	1	Tube-Steel				

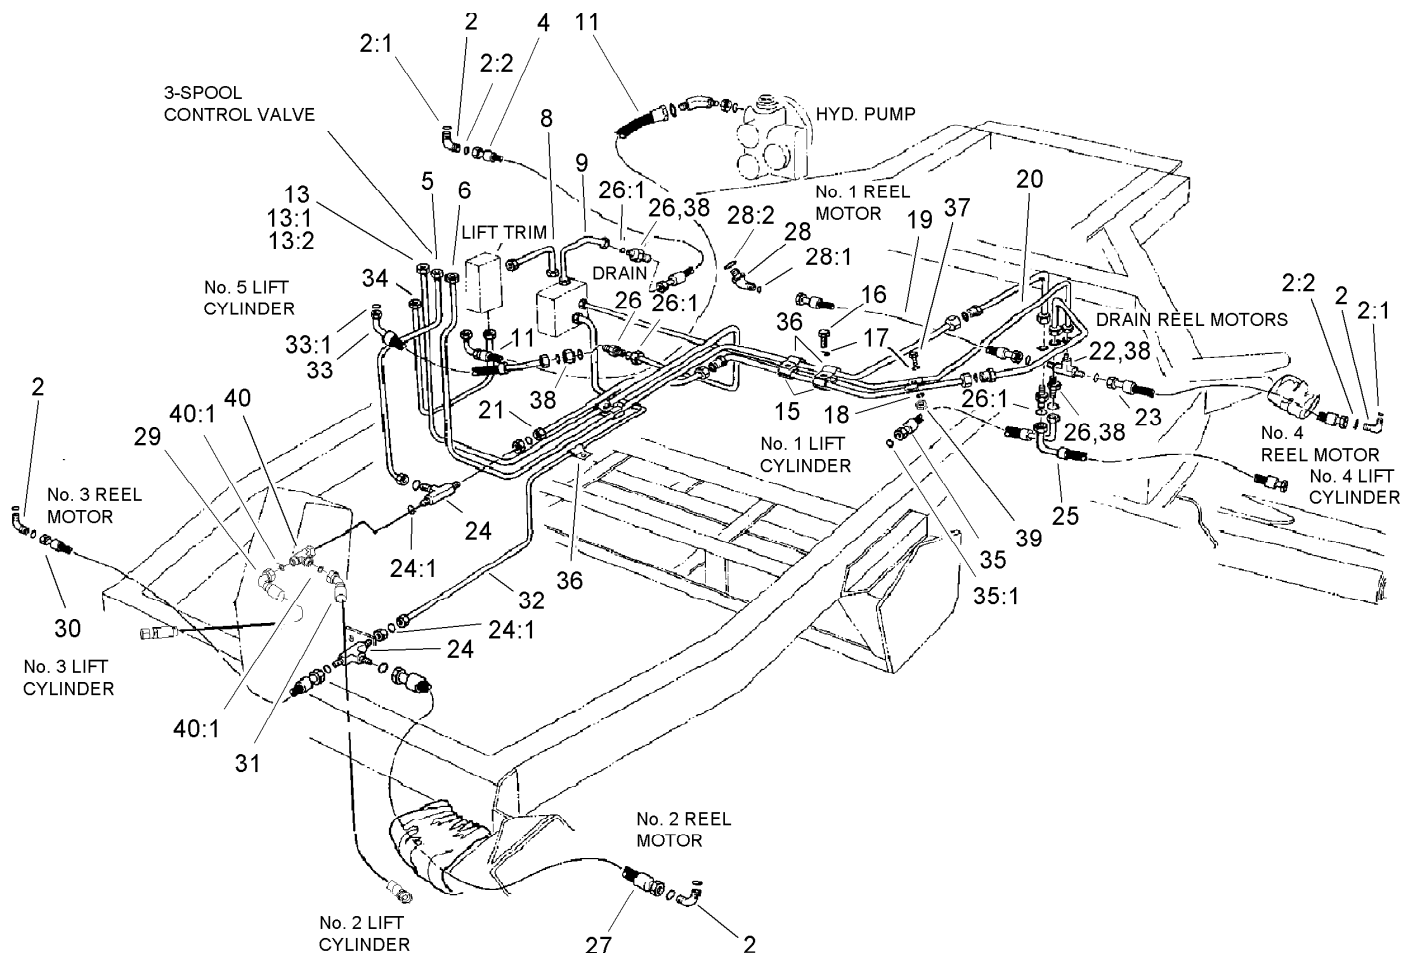 


Hydraulic Circuit - Lift Arm Assembly

Ref.	Part Number	Qty.	Description
2	340-77	4	Fitting-Elbow, 90 DEG
2:1	237-22	1	O-Ring
2:2	237-42	1	O-Ring
4	98-7413	1	Hose ASM
5	58-4750	1	Tube-Steel
6	93-1404	1	Tube-Steel
8	63-4680	1	90 DEG Tube ASM
9	58-4780	1	Tube-Steel
11	58-5710	1	Hose ASM
13	68-6370	1	HYD Tube Kit
13:1	68-6380	1	Tube ASM
13:2	68-6390	1	Tube ASM
15	58-3880	5	Clamp-Double
16	33113-050	2	Screw-HH
17	43-5930	6	Washer-Lock, Spring
18	33093-00	8	Washer-Flat
19	98-7408	1	Hose ASM
20	58-4850	1	Tube-Steel
21	68-6270	1	HYD Tube Kit
21:1	68-6280	1	Tube ASM ●
21:2	68-6290	1	Tube ASM ●
21:3	68-6300	1	Tube ASM ●
22	60-2180	1	Adaptor
23	98-7406	1	Hose ASM


Ref.	Part Number	Qty.	Description
24	340-68	2	Fitting-Tee, Bulkhead
24:1	237-22	3	O-Ring
25	98-7411	1	HYD Hose ASM
26	340-71	4	Fitting-Straight, Bulkhead
26:1	237-22	2	O-Ring
27	98-7410	1	Hose ASM
28	340-87	1	Fitting-Elbow, 45 DEG
28:1	237-22	1	O-Ring
28:2	237-42	1	O-Ring
29	105-9280	1	Hose ASM
30	98-7407	1	Hose ASM
31	106-9204	1	Hose ASM
32	58-4880	1	Tube-Steel
33	98-7412	1	Hose ASM
33:1	237-22	1	O-Ring
34	58-4870	1	Tube-Steel
35	98-7405	1	Hose ASM
35:1	237-22	1	O-Ring
36	60-1360	3	Clamp-Single
37	33113-025	4	Screw-HH
38	340-70	7	Nut-Lock
39	48-7890	3	Nut-Hex
40	340-115	1	Fitting-Tee
40:1	237-22	2	O-Ring

 ● Not illustrated

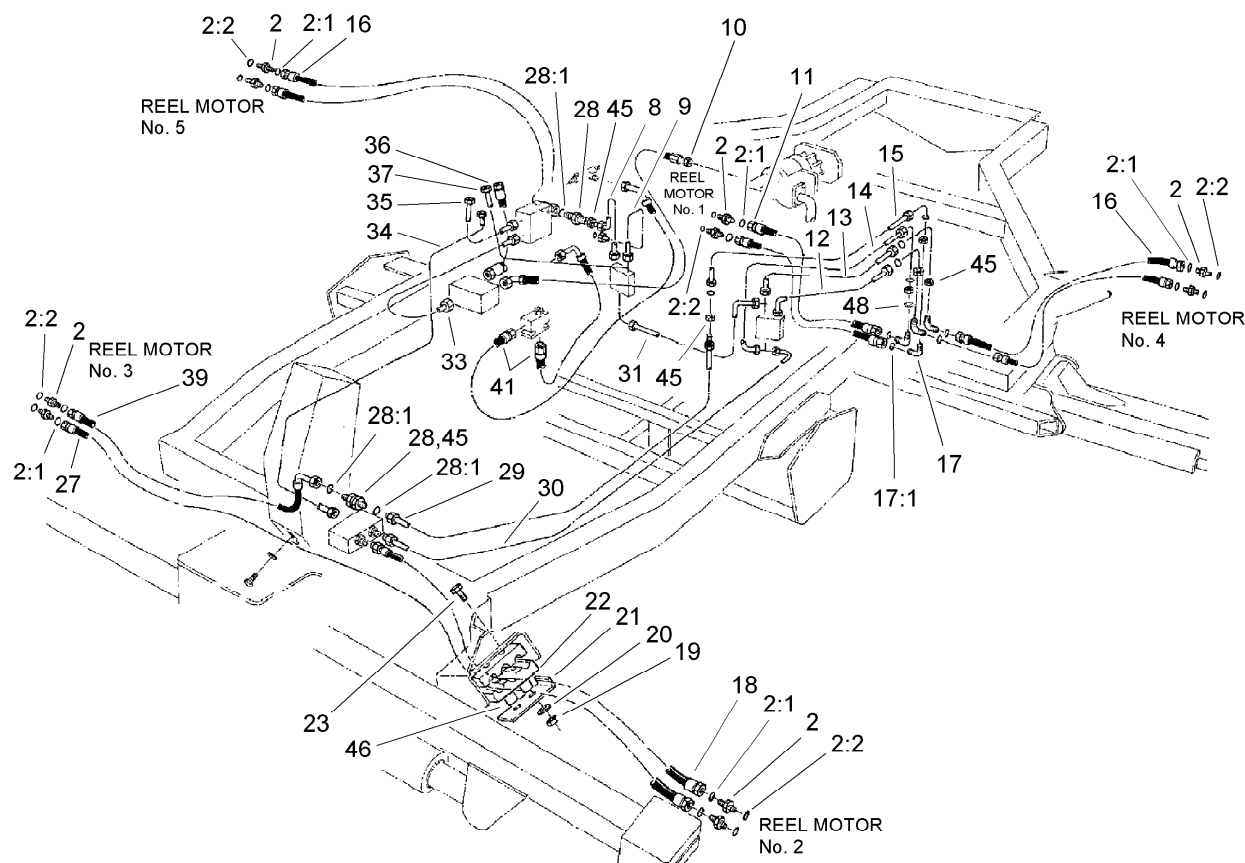

Hydraulic Circuit - Cutting Unit Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
2	340-8	10	Fitting-Straight	23	321-14	4	Screw-HH
2:1	237-65	1	O-Ring	27	98-7401	1	Hose ASM
2:2	237-81	1	O-Ring	28	340-76	3	Fitting-Bulkhead Union, Straight
8	58-4960	1	Tube-Steel	28:1	237-65	2	O-Ring
9	58-4970	1	Tube-Steel	29	58-4990	1	Tube-Steel
10	58-5730	1	Hose ASM	30	58-5070	1	Tube-Steel
11	98-7404	2	Hose ASM	31	58-4950	1	Tube-Steel
12	58-5060	1	Tube-Steel	33	58-5050	1	Tube-Steel
13	58-5000	1	Tube-Steel	34	58-5030	1	Tube-Steel
14	58-5020	1	Tube-Steel	35	58-4980	1	Tube-Steel
15	58-5040	1	Tube-Steel	36	60-3340	1	Hose ASM
16	98-7403	4	Hose ASM	37	63-4710	1	Tube ASM
17	340-72	4	Fitting-Bulkhead, 90 DEG	39	98-7402	1	Hose ASM
17:1	237-65	2	O-Ring	41	60-1250	2	Hose-Drain
18	98-7400	1	Hose ASM	45	340-74	8	Nut-Lock, Bulkhead
19	3296-8	4	Nut-Hex	46	74-2730	4	Tube
20	3256-16	4	Washer-Flat	48	3254-21	2	Washer-Lock/Int
21	74-2750-03	2	Retainer				
22	74-2710	4	Clamp-Hose				

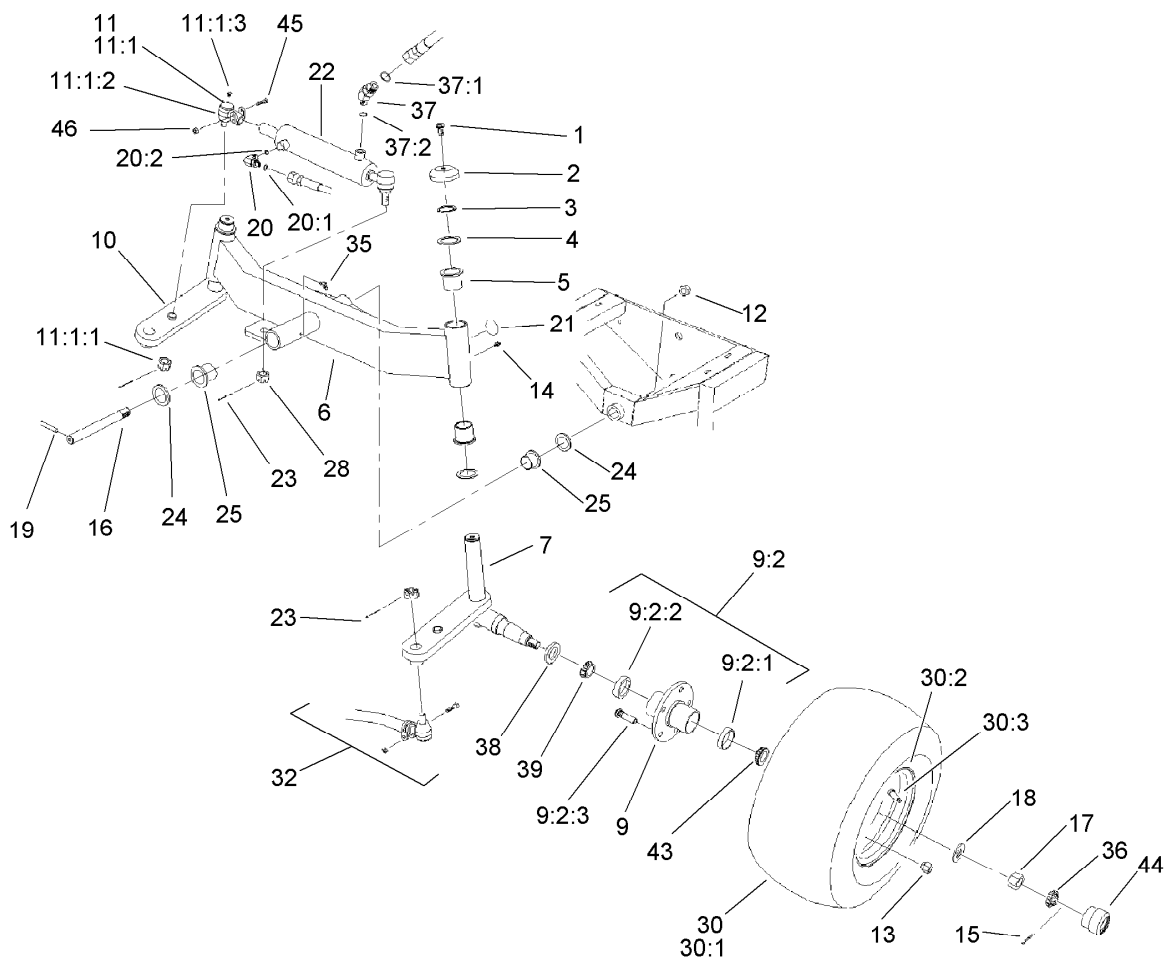 


Steering Axle Assembly

Ref.	Part Number	Qty.	Description
1	3234-12	2	Screw-HHF
2	69-8890	2	Cap-Spindle
3	32151-10	2	Ring-Retaining
4	256-304	4	Washer-Thrust
5	69-6470	4	Bushing-Caster
6	82-9850-03	1	Axle-Rear
7	93-0311-03	1	Spindle-Wheel, LH
9	69-2960-03	2	Hub ASM
9:2		1	Hub ASM ●
9:2:1	254-107	1	Cup-Bearing, Tapered
9:2:2	254-72	1	Bearing-Cup, Tapered
9:2:3	69-2990	5	Stud-Wheel
10	93-0310-03	1	Spindle-Wheel, RH
11	106-6895-03	1	Ball Joint ASM
11:1		1	Joint-Ball ●
11:1:1	32136-13	1	Nut-SHH
11:1:2	106-6896	1	Seal
11:1:3	302-5	1	Fitting-Grease
12	3296-49	1	Nut-Lock, NI
13	23-7270	10	Nut-Lug
14	302-5	2	Fitting-Grease
15	3272-13	2	Pin-Cotter
16	82-9210	1	Shaft-Pivot
17	3220-7	2	Nut-Jam
18	93-0309	2	Washer-Tab

Ref.	Part Number	Qty.	Description
19	60-3670	1	Pin
20	340-97	1	Fitting-Elbow, 90 DEG
20:1	237-22	1	O-Ring
20:2	237-78	1	O-Ring
21	58-6520	2	Decal-Grease
22	77-4800	1	Cylinder-HYD
23	3272-12	4	Pin-Cotter
24	48-6660	2	Washer
25	48-6640	2	Bearing
28	32136-13	2	Nut-SHH
30	69-9870	2	Wide Wheel And 6-Ply Tire ASM
30:1	69-9880	1	Tire (23X10.5-12) 6-Ply
30:2	217-116	1	Wheel
30:3	232-27	1	Stem-Valve
32	82-9260-03	1	Tie Rod ASM
35	302-11	1	Fitting-Lube, 45 DEG
36	93-0307	2	Nut-Lock, Retainer
37	340-54	1	Elbow-45 DEG
37:1	237-22	1	O-Ring
37:2	237-78	1	O-Ring
38	69-2980	2	Seal
39	254-106	2	Cone-Bearing, Tapered
43	254-92	2	Cone-Bearing, Outer
44	69-2970	2	Cap-Hub

 
● Not serviced separately

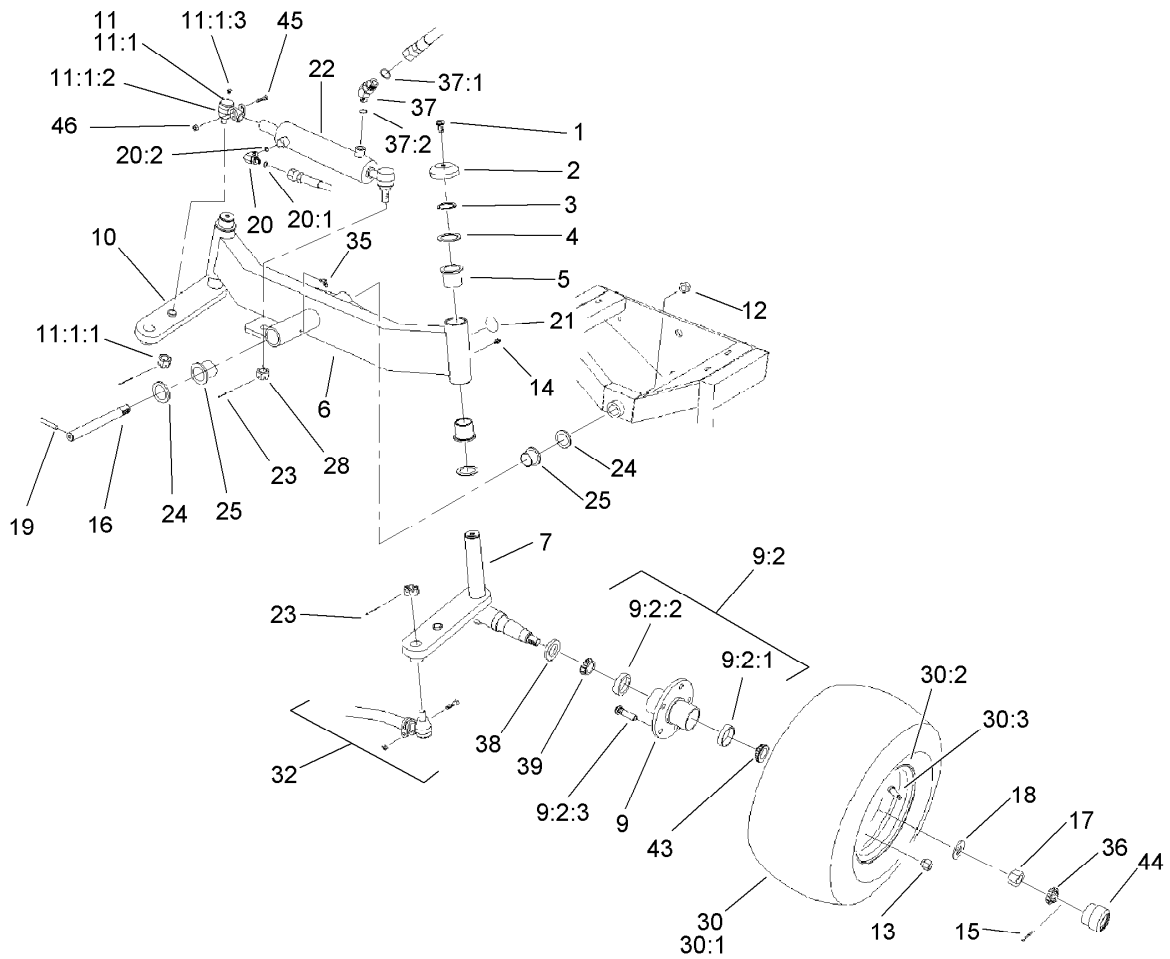

Steering Axle Assembly (continued)

Ref.	Part Number	Qty.	Description
45	3210-7	1	Screw-HH
46	32152-5	1	Nut-Hex

 
● Not serviced separately

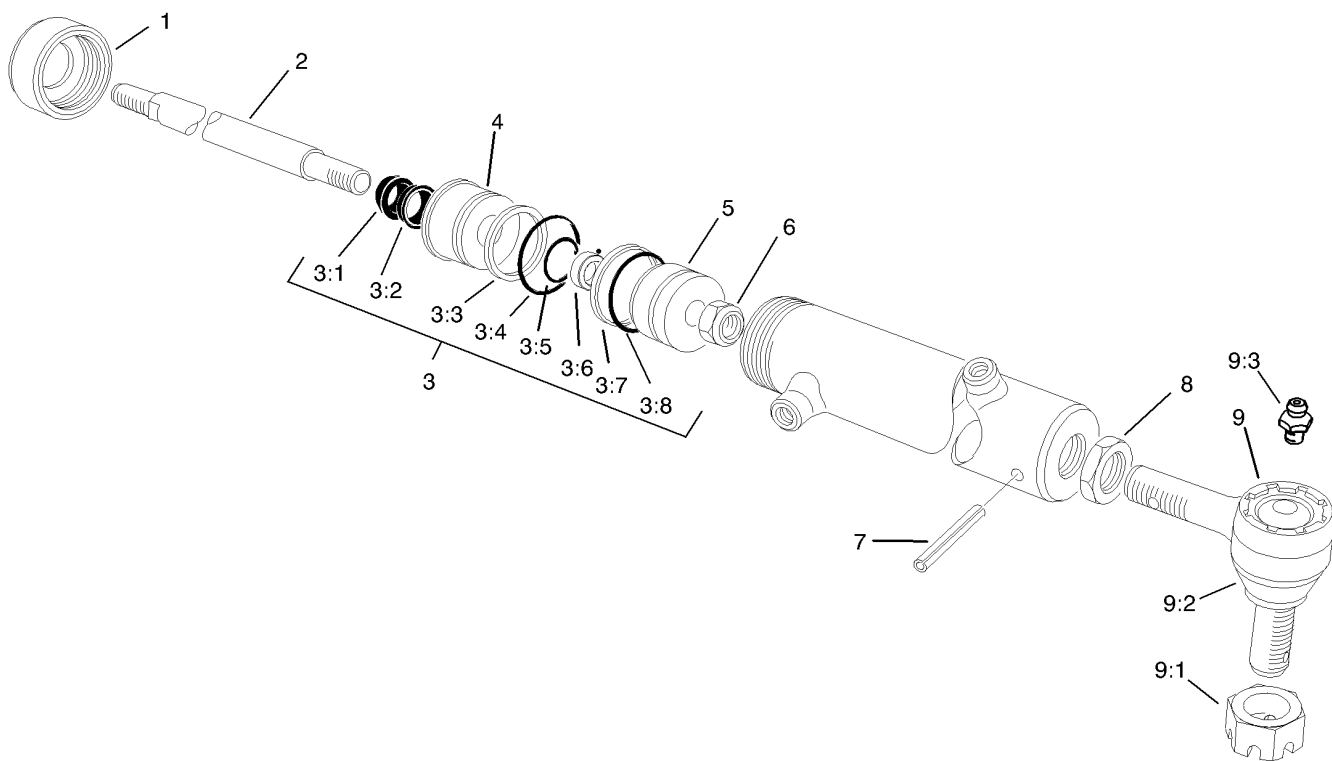

Hydraulic Cylinder Assembly No. 77-4800

Ref.	Part Number	Qty.	Description
1		1	Cap ●
2		1	Rod ●
3	82-5800	1	Seal Kit
3:1		1	Wiper-Rod ●
3:2		1	U-Cup ●
3:3		1	Washer-Backup ●
3:4		1	Seal-Dust ●
3:5		1	Seal-Dust ●
3:6		1	Spacer ●
3:7		1	Servon ●
3:8		1	Seal-Dust ●
4		1	Head ●
5		1	Piston ●
6		1	Nut ●
7	32121-44	1	Pin-Roll
8	82-5740	1	Nut-Jam
9	82-5730	1	Tie Rod End ASM
9:1	105-7941	1	Nut-Hex, Slotted
9:2	105-7835	1	Seal
9:3	302-5	1	Fitting-Grease

 
● Not serviced separately

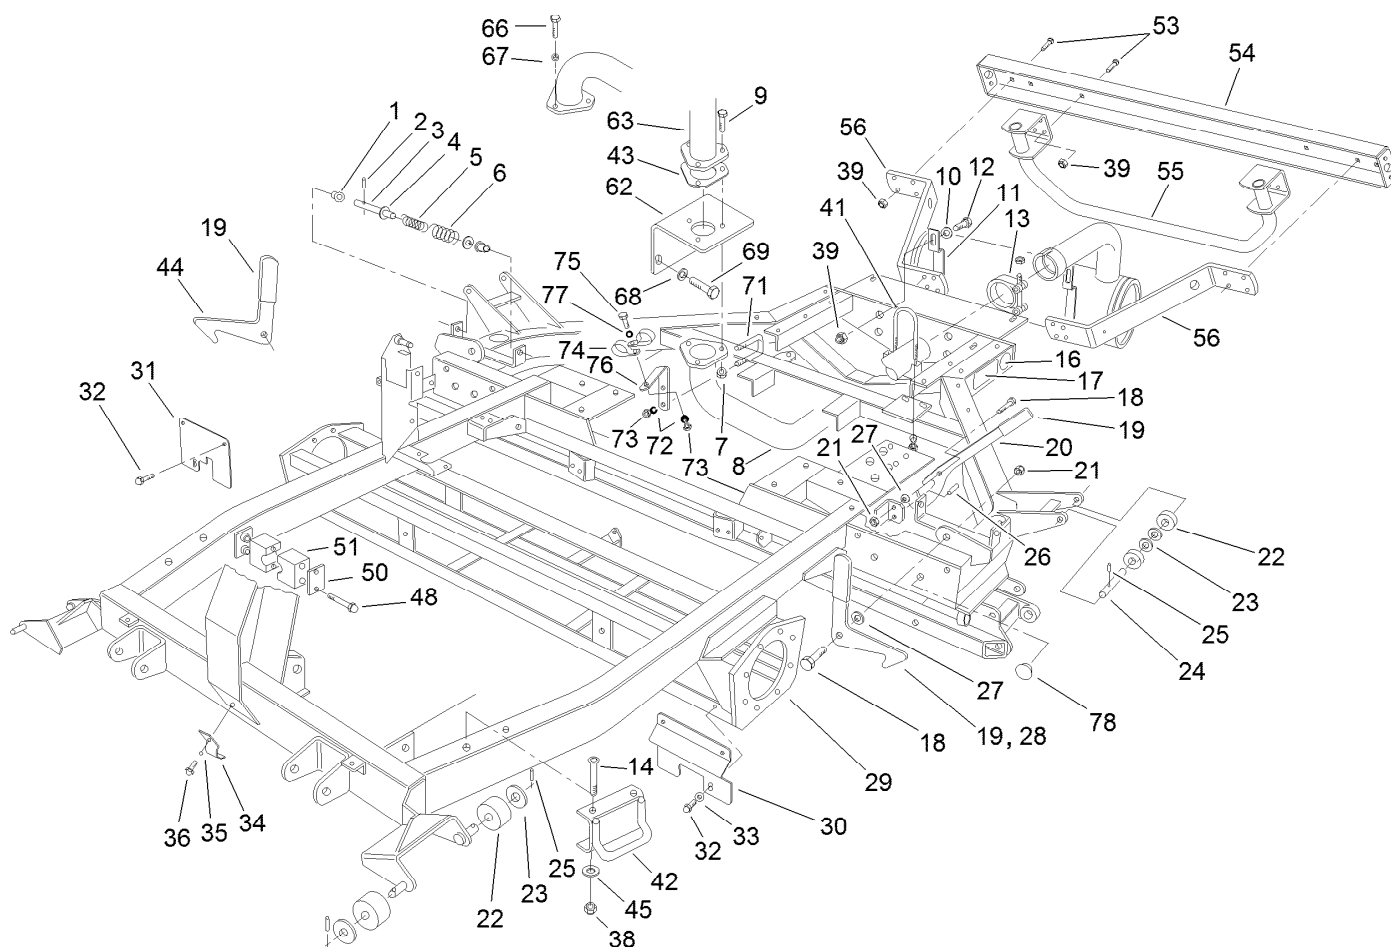

Frame and Muffler Assembly

Ref.	Part Number	Qty.	Description
1	58-2800	4	Bushing
2	60-3720	2	Pin-Roll
3	58-2810	2	Rod
4	3256-7	4	Washer-Flat
5	48-6780	2	Spring-Compression
6	60-1240	2	Spring
7	3296-29	3	Nut-Lock, NI
8	98-1230-03	1	Tube-Lower
9	322-7	3	Screw-HH
10	3256-24	4	Washer-Flat
11	74-2850	1	Silencer ASM
12	323-9	4	Screw-HH
13	2412-132	1	Clamp
14	3289-25	4	Screw-SFH
16	58-6520	3	Decal-Grease
17	93-9405	2	Decal-Pressure, Air
18	33116-030	3	Screw-HH
19	48-7081	3	Grip-Plastic
20	86-6570-03	1	Latch
21	51-2070	3	Nut
22	82-4910	8	Roller

Ref.	Part Number	Qty.	Description
23	51-2060	8	Washer
24	60-0160	2	Pin
25	60-2110	8	Pin
26	48-8830	1	Pin-Expansion
27	48-8850	3	Spring-Disc
28	86-6590-03	1	Latch-LH
29	94-8268-01	1	Frame ASM
30	60-4190-03	1	Shield-Grass, LH
31	60-4200-03	1	Shield-Grass, RH
32	48-6900	6	Screw
33	33093-00	2	Washer-Flat
34	60-2080	1	Clamp-Hose
35	42-9850	1	Washer-Lock, Spring
36	48-7680	1	Screw-HH
38	3296-23	4	Nut-Lock, NI
39	3296-39	16	Nut-Lock, NI
41	76-3560	1	Clamp
42	92-4768-03	2	Tiedown ASM
43	98-7817	3	Gasket-Muffler
44	86-6580-03	1	Latch-RH
45	3256-26	4	Washer-Flat


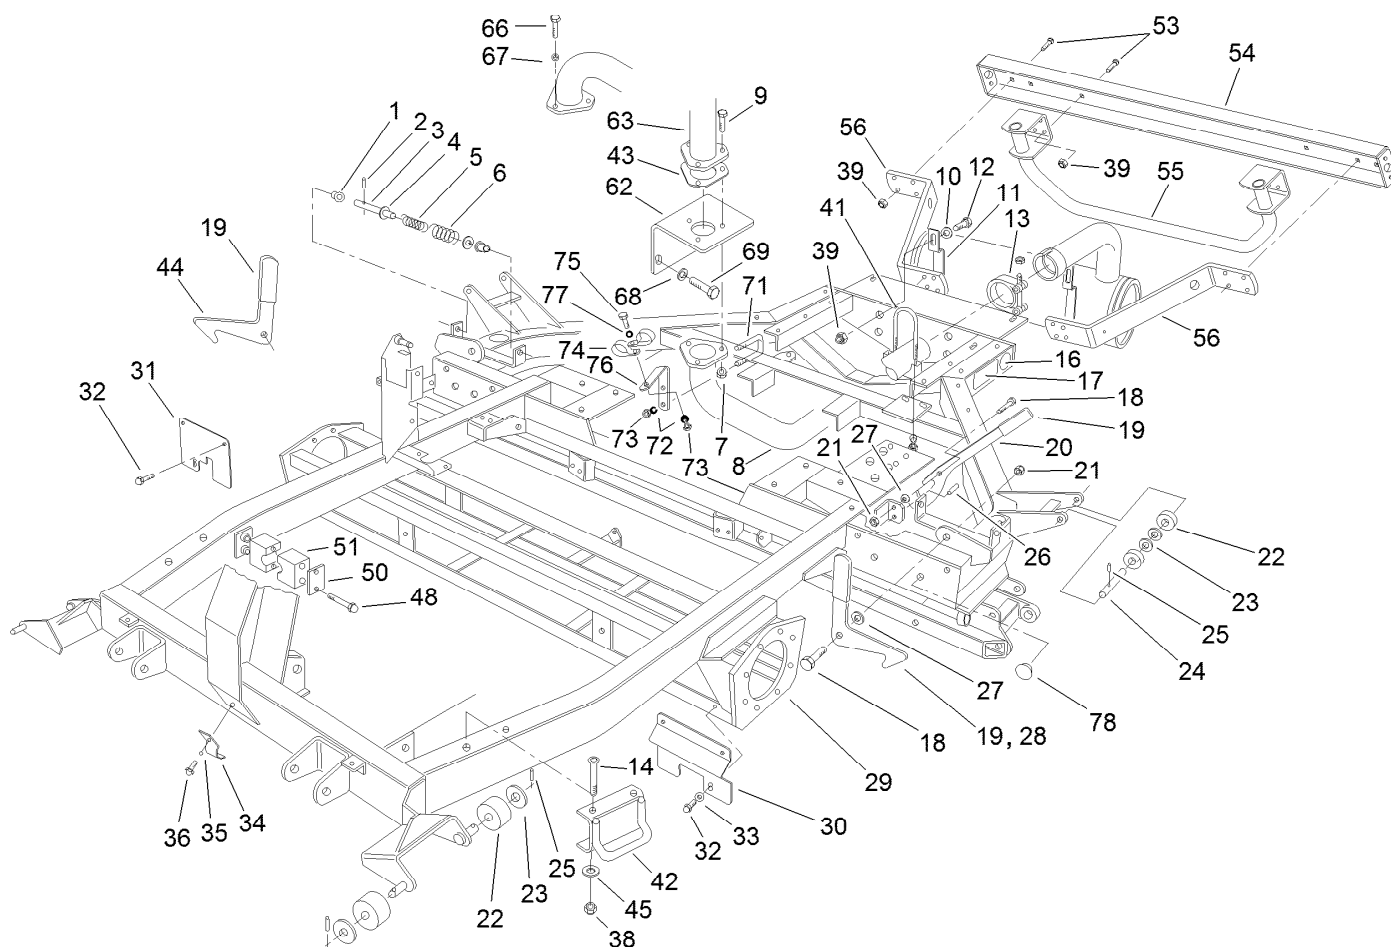 


Frame and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
48	321-9	2	Screw-HH
50	82-2980	1	Plate-Cover
51	82-2990	2	Clamp-Half
53	3231-25	12	Bolt-CARR
54	92-6052-03	1	Bumper-Rear
55	92-6050-03	1	Guard ASM
56	92-6051-03	2	Bracket-Bumper
62	98-1246-03	1	Bracket-Exhaust
63	98-1231-03	1	Tube-Upper
66	33114-025	3	Screw-HH
67	42-9850	3	Washer-Lock, Spring

Ref.	Part Number	Qty.	Description
68	43-5940	2	Washer-Lock, Spring
69	42-9250	2	Bolt
71	92-5692	1	U-Bolt
72	3253-4	3	Washer-Lock
73	3217-6	3	Nut-Hex
74	2412-107	2	Clamp-R
75	322-45	1	Screw-HH
76	99-8741-01	1	Bracket-Support, Hose
77	3256-23	1	Washer-Plain
78	92-6059	12	Plug-Button

  
Electrical System Diagram and Relay Assembly

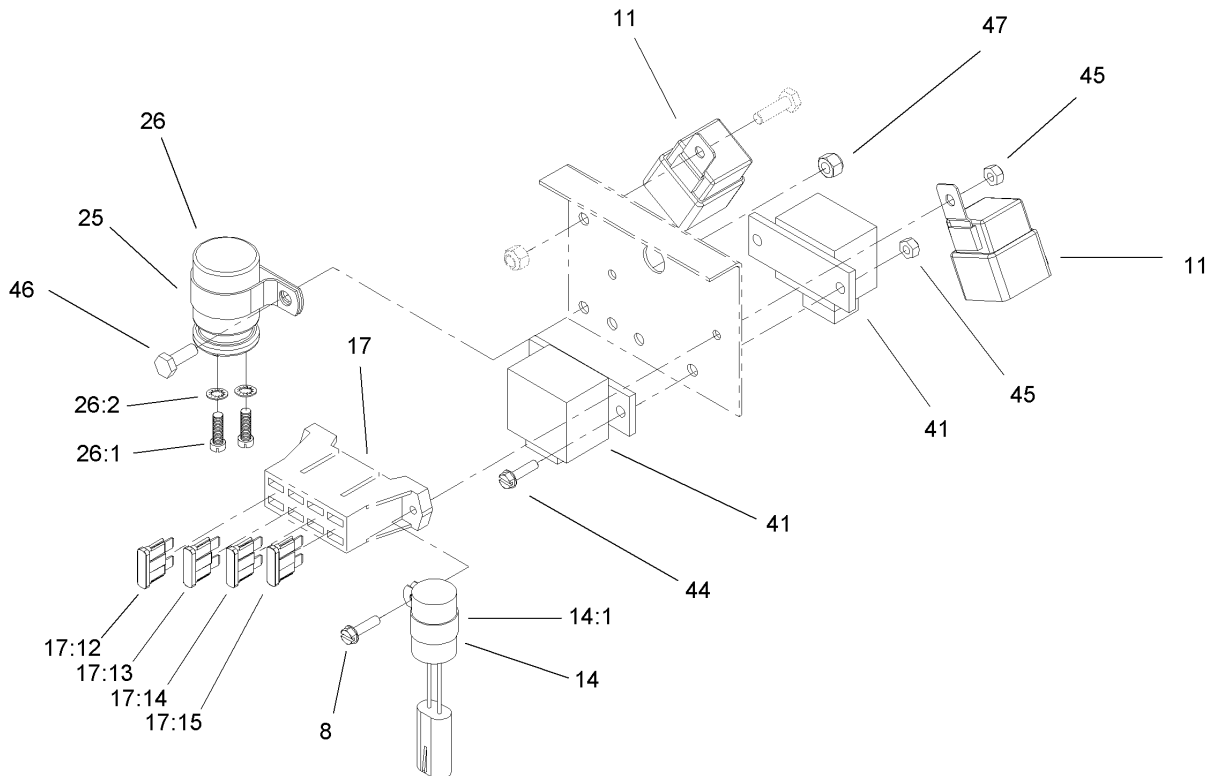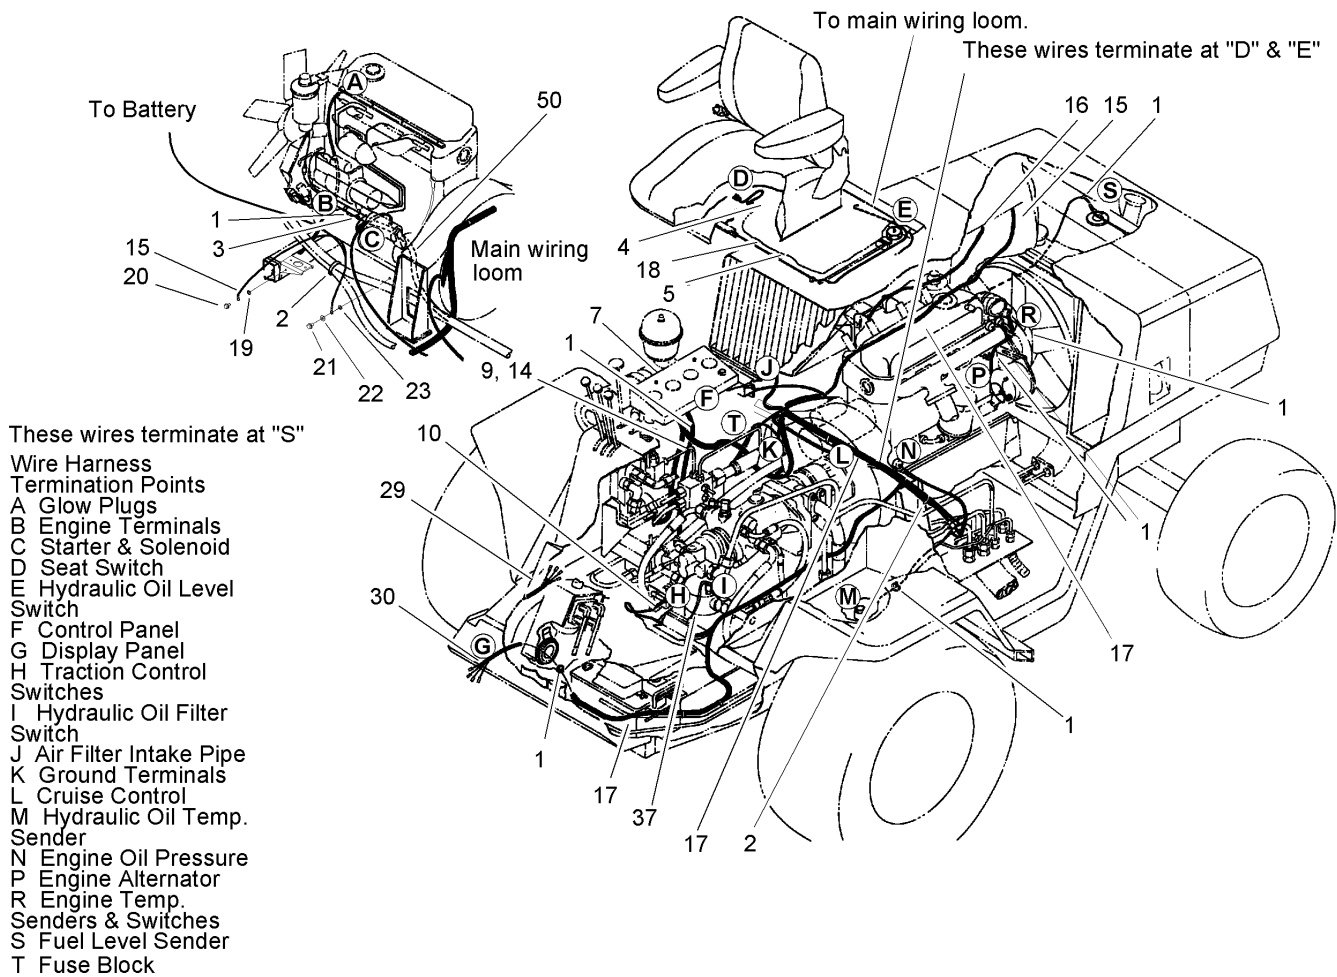

Electrical System Diagram and Relay Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3290-378	21	Tie-Cable	17:15	114241	1	Fuse-Blade, 7.5 Amp
2	3290-379	5	Tie-Cable	18	108-6052	1	Harness-Wire, Seat
3	2412-109	1	Clip-J	19	3255-8	1	Washer-Lock
4	237-100	1	Grommet	20	32144-14	1	Screw-HWHTF
5	104-5232	4	Clip-Wire	21	42-9250	1	Bolt
7	105-9279	1	Harness-Wire, Control Panel	22	48-8070	1	Washer-Lock
8	32105-12	1	Screw	23	3255-2	1	Washer-Lock, EXT
9	82-9790	1	Harness	25	2412-74	1	R-Clamp
10	104-5205	1	Harness-Wire, Micro Switch	26	37-2690	1	Capacitor
11	99-7430	2	Relay-Mini	26:1	3252-18	2	Screw
14	83-2280	1	Timer-Delay	26:2	3254-1	2	Washer-Lock, Int
14:1	98-4604	1	R-Clamp	29	82-9230	2	Harness
15	106-7053	1	Cable-Battery, Negative	30	98-3819	1	Harness-Wire, Light Cluster
16	104-0086	1	Cable-Battery, Positive	37	86-5990	1	Harness-Filter
17	108-1442	1	Harness-Wire	41	66-8800	2	Relay
17:11	100-4918	1	Diode ●	44	32105-13	3	Screw-HWH
17:12	99-6124	1	Fuse-40 Amp	45	3296-2	4	Nut-Lock, NI
17:13	109101	1	Fuse-Blade, 20 Amp	46	321-4	1	Screw-HH
17:14	110928	1	Fuse-Blade, 5 Amp	47	3296-42	1	Nut-Lock, NI
				50	99-3441	1	Harness-Wire, Fusible Link

 
● Not illustrated

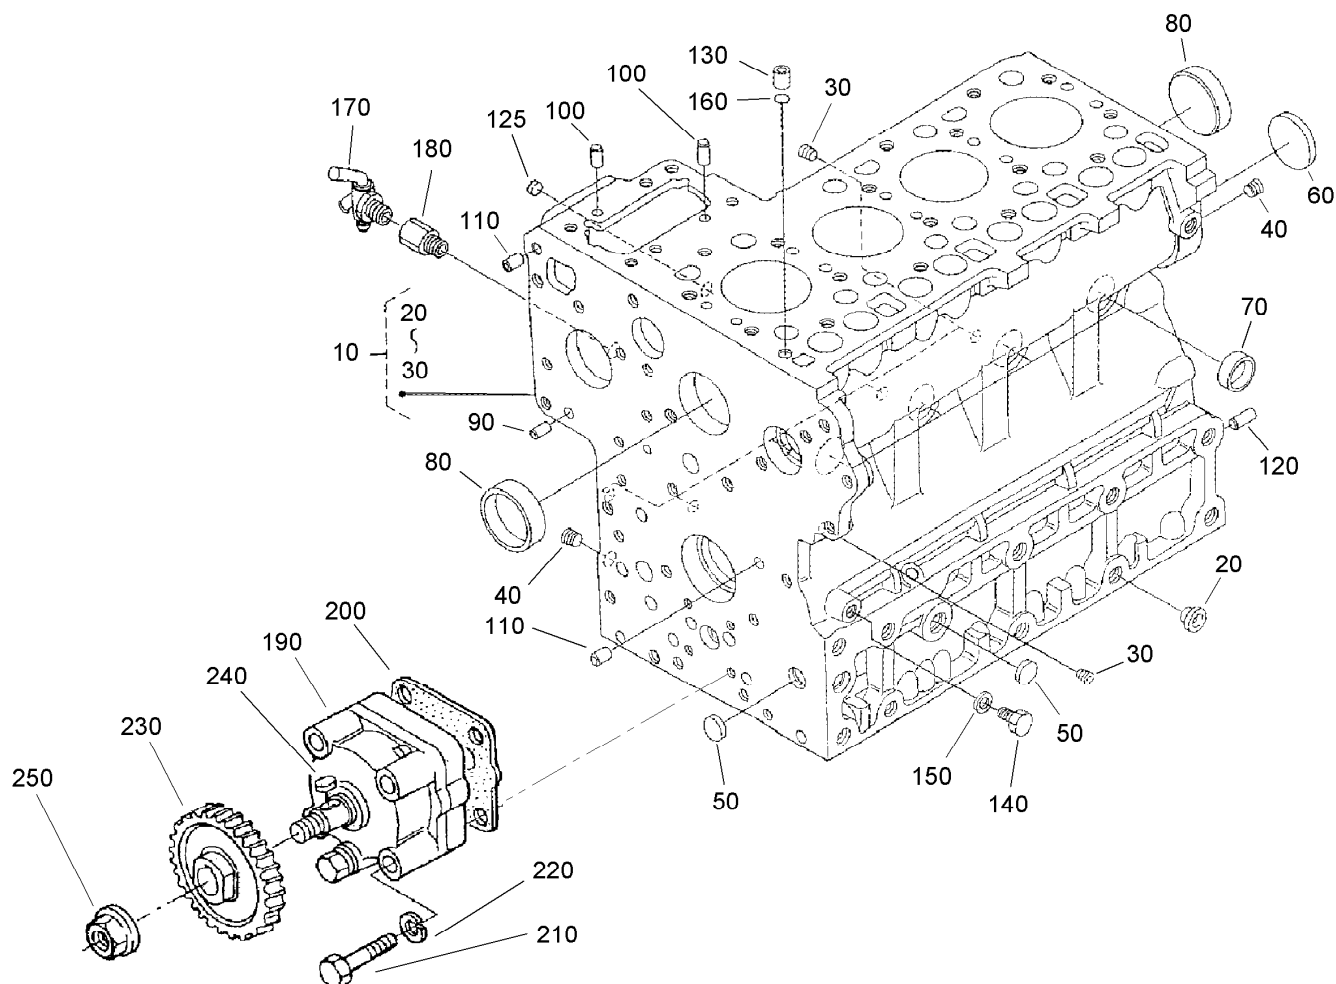

Crankcase Assembly

Ref.	Part Number	Qty.	Description
10	108-4413	1	Crankcase ASM
20	98-7486	2	Plug
30	98-7487	6	Plug
40	98-7488	2	Plug
50	98-7489	3	Plug
60	98-9668	1	Plug-Expansion
70	98-7500	6	Cap-Sealing
80	98-7501	2	Cap-Sealing
90	98-7502	2	Pin-Straight
100	98-7503	2	Pin-Straight
110	98-7504	2	Pin-Straight
120	98-7505	1	Pin-Straight
125	105-2883	1	Cap-Sealing


Ref.	Part Number	Qty.	Description
130	98-7506	1	Pin-Pipe
140	110-0012	1	Plug
150	98-7428	1	Gasket
160	98-7509	1	O-Ring
170	98-7510	1	Cock-Drain
180	98-7511	1	Joint-Cock, Drain
190	98-7512	1	Oil Pump ASM
200	98-7513	1	Gasket-Pump, Oil
210	98-7514	4	Bolt
220	98-7515	4	Washer-Spring
230	98-7516	1	Gear-Drive, Oil Pump
240	98-7517	1	Key-Feather
250	98-7518	1	Nut-Flange

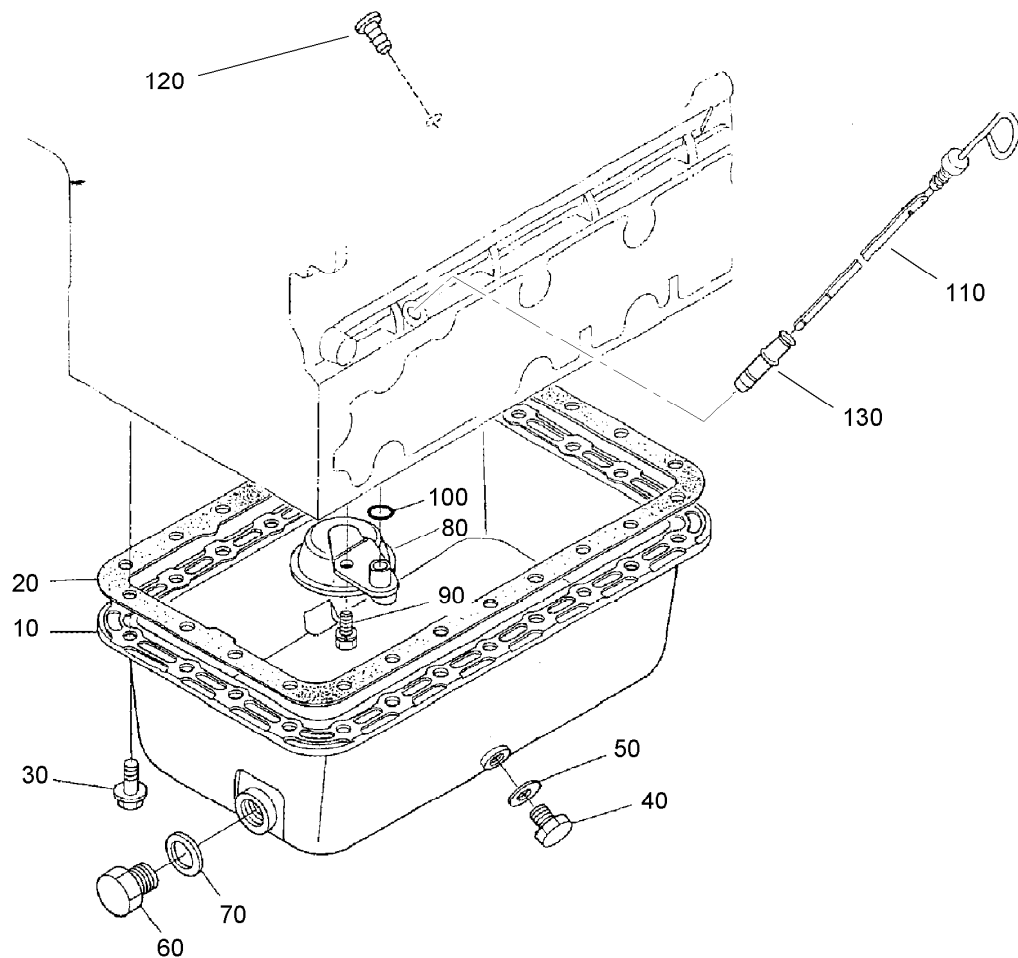 

17236-012-11


Oil Pan and Dipstick Assembly

Ref.	Part Number	Qty.	Description
10	98-7520	1	Pan-Oil
20	108-7053	1	Gasket-Pan, Oil
30	98-7522	24	Bolt-Flange
40	98-9386	1	Plug
50	98-7524	1	Gasket
60	98-7529	1	Plug-Drain
70	98-7528	1	O Ring-Copper
80	98-7525	1	Filter-Oil
90	98-7526	1	Bolt
100	108-7054	1	O-Ring
110	105-4579	1	Gauge-Oil
120	100-9169	1	*obs* Plug-Gauge, Oil
130	105-4580	1	Guide-Gauge, Oil

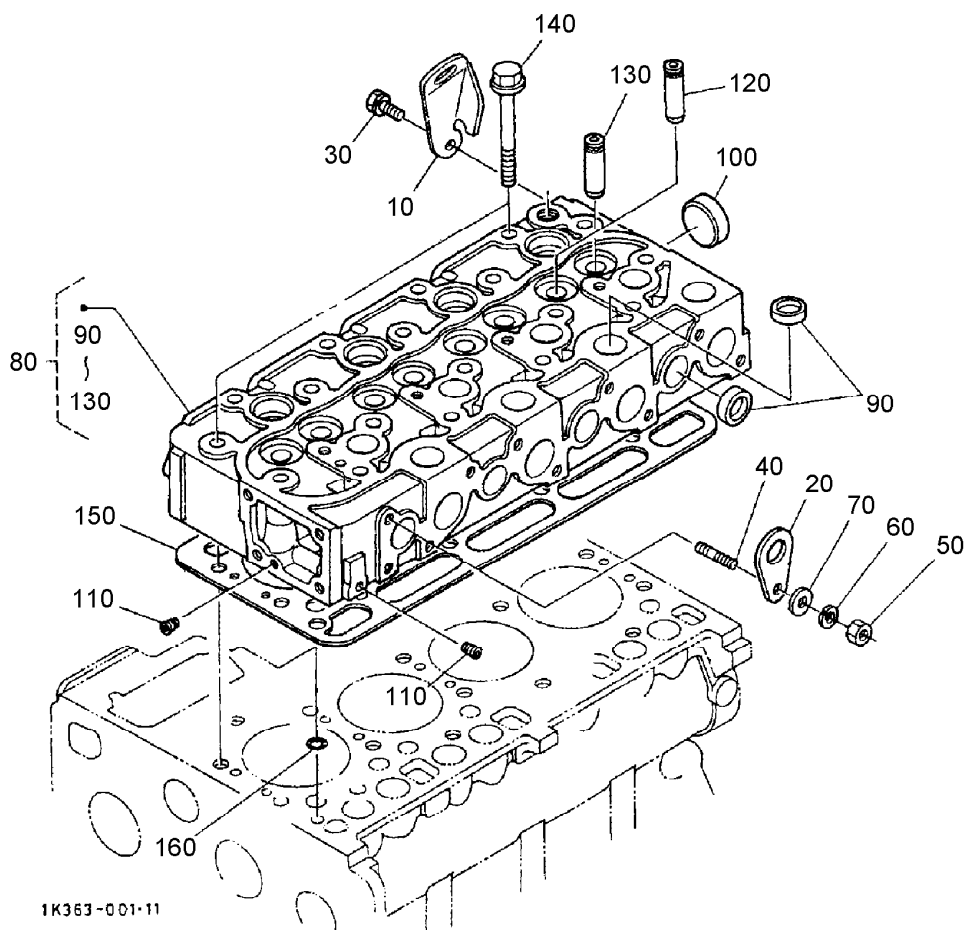 

Cylinder Head Assembly


Ref.	Part Number	Qty.	Description
10	98-7530	1	Hook-Engine
20	98-7531	1	Hook-Engine
30	98-7526	1	Bolt
40	98-7533	1	*obs* Stud
50	98-7534	1	Nut
60	98-7535	1	Washer-Spring
70	98-7536	1	Washer-Plain
80	108-4414	1	Cylinder Head ASM
90	98-7538	12	Cap-Sealing
100	98-7539	1	Cap-Sealing
110	98-7540	2	Plug
120	98-7541	4	Guide-Valve, Intake
130	98-7542	4	Guide-Valve, Exhaust
140	98-7543	18	Bolt-Head, Cylinder
150	98-7544	1	Gasket-Head, Cylinder
160	98-7509	1	O-Ring

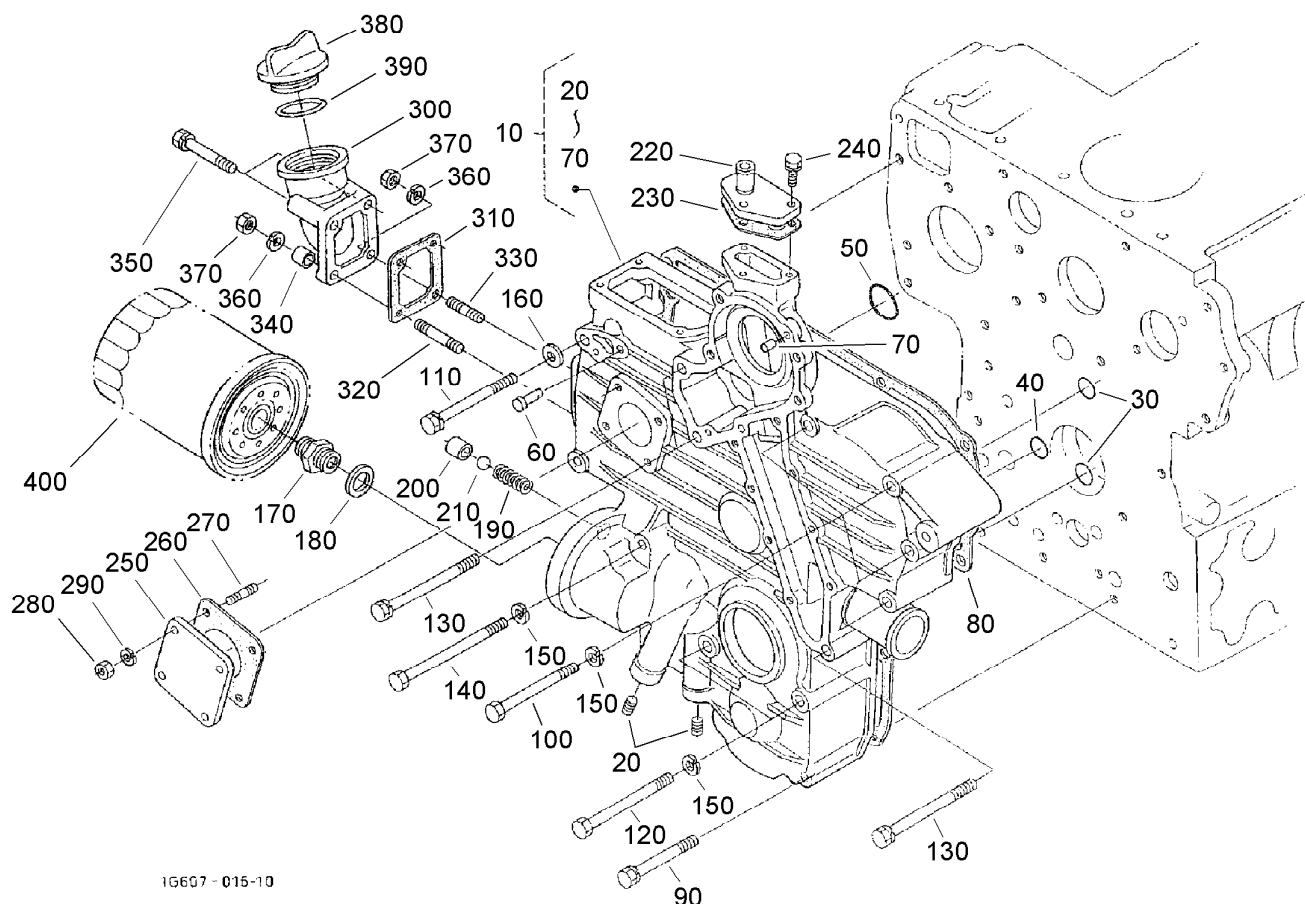 

Gear Case Assembly

Ref.	Part Number	Qty.	Description
10	100-9161	1	Gearcase ASM
20	107-0108	2	Plug
30	107-0104	2	O-Ring
40	107-0105	1	O-Ring
50	107-0106	1	O-Ring
60	98-7550	1	Pin-Spring, Start
70	98-7504	2	Pin-Straight
80	98-7552	1	Packing-Case, Gear
90	98-7553	2	Bolt
100	98-7554	5	Bolt
110	98-7555	1	Bolt
120	98-7556	2	Bolt
130	98-7557	3	Bolt
140	98-7558	2	Bolt
150	98-7535	9	Washer-Spring
160	98-7536	1	Washer-Plain
170	98-7561	1	Joint-Pipe
180	108-4419	1	Collar-Valve Seat
190	98-7563	1	Spring
200	98-7564	1	Seat-Valve


Ref.	Part Number	Qty.	Description
210	98-7565	1	Ball
220	98-7566	1	Flange-Return, Water
230	98-7567	1	Gasket
240	98-7568	1	Bolt
250	98-7569	1	Cover
260	98-7570	1	Gasket-Meter, Hour
270	98-7571	4	Stud
280	98-7572	4	Nut
290	98-7699	4	Washer-Spring
300	100-9162	1	Flange-Filter, Oil
310	100-9163	1	Gasket
320	98-7571	1	Stud
330	100-9164	1	Stud
340	100-9165	1	Collar
350	107-9073	2	Bolt
360	98-7699	2	Washer-Spring
370	98-7572	2	Nut
380	98-7429	1	Plug-Filter, Oil
390	108-7064	1	O-Ring
400	104-5169	1	Filter-Oil

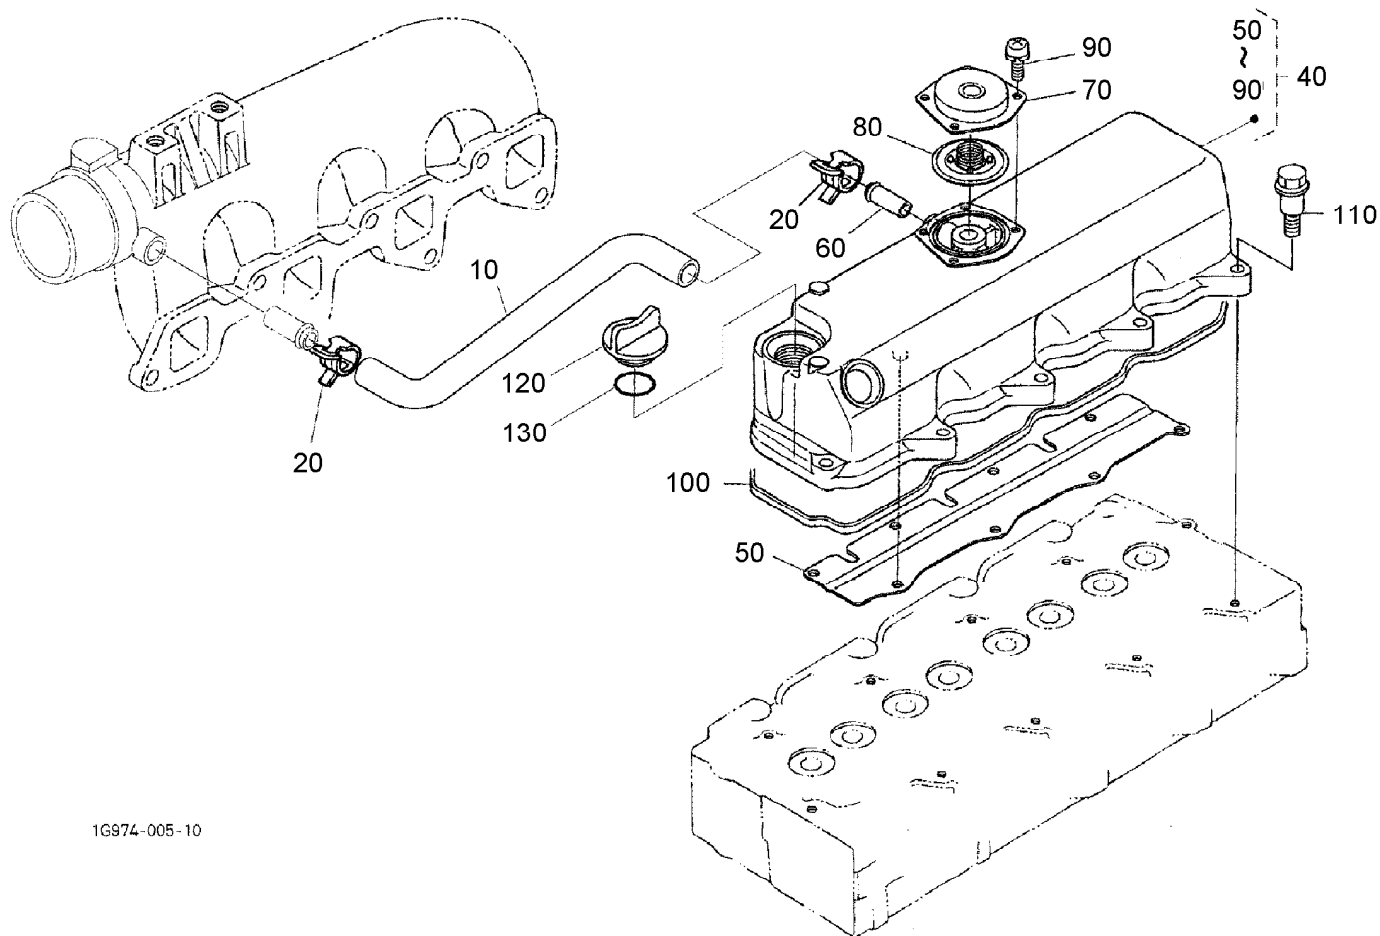 

1G974-005-10

Head Cover Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	108-4415	1	Tube-Breather
20	105-2879	2	Clamp-Hose
40	108-4416	1	Cylinder Head Cover ASM
50	108-7059	2	Shield-Breather
60	98-7766	1	Pipe-Return, Water
70	108-2862	1	Cover-Breather
80	108-2861	1	Breather Valve ASM
90	98-9364	4	Screw (With Washer)
100	108-7062	1	Gasket-Cover, Head
110	108-7063	10	Bolt
120	98-7429	1	Plug-Filter, Oil
130	108-7064	1	O-Ring

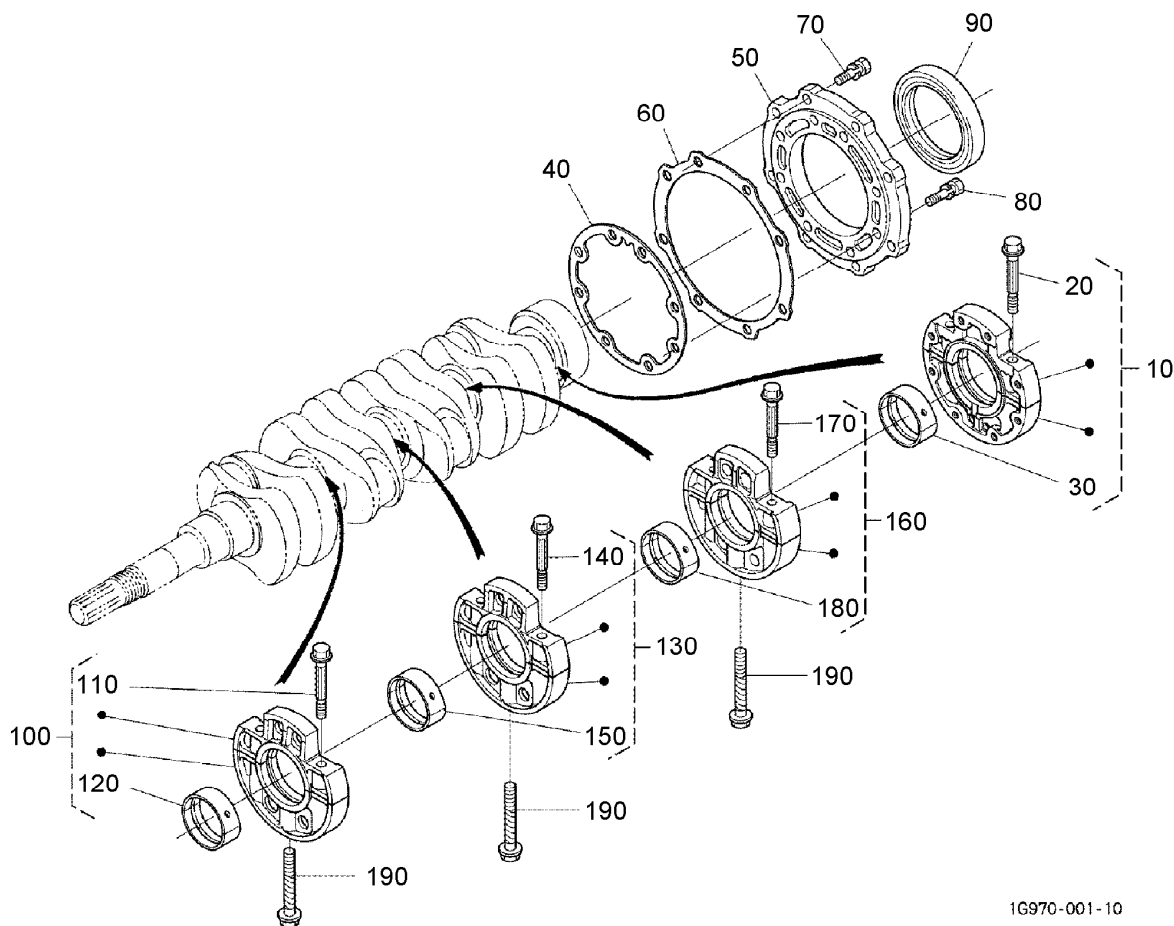 


1G970-001-10

Main Bearing Assembly


Ref.	Part Number	Qty.	Description
10	108-4417	1	Wheel Bearing Case ASM
20	108-7066	8	Bolt-Case, Bearing
30	108-7067	1	Metal-Crankshaft (STD)
30	108-7068	1	Metal-Crankshaft (-0.20Mm)
30	108-7069	1	Metal-Crankshaft (-0.40Mm)
40	108-7070	1	Gasket-Case, Bearing
50	108-7071	1	Cover-Case, Bearing
60	98-7437	1	Gasket-Case Cover, Bearing
70	98-7438	8	Bolt
80	98-7439	8	Bolt
90	108-7072	1	Seal-Oil
100	110-0013	1	Main Bearing Case ASM
110	108-7066	2	Bolt-Case, Bearing

Ref.	Part Number	Qty.	Description
120	108-7067	1	Metal-Crankshaft (STD)
120	108-7068	1	Metal-Crankshaft (-0.20Mm)
120	108-7069	1	Metal-Crankshaft (-0.40Mm)
130	110-0014	1	Main Bearing Case ASM
140	108-7066	2	Bolt-Case, Bearing
150	108-7067	1	Metal-Crankshaft (STD)
150	108-7068	1	Metal-Crankshaft (-0.20Mm)
150	108-7069	1	Metal-Crankshaft (-0.40Mm)
160	110-0015	1	Main Bearing Case ASM
170	108-7066	2	Bolt-Case, Bearing
180	108-7067	1	Metal-Crankshaft (STD)
180	108-7068	1	Metal-Crankshaft (-0.20Mm)
180	108-7069	1	Metal-Crankshaft (-0.40Mm)
190	98-7444	3	Bolt-Case, Bearing

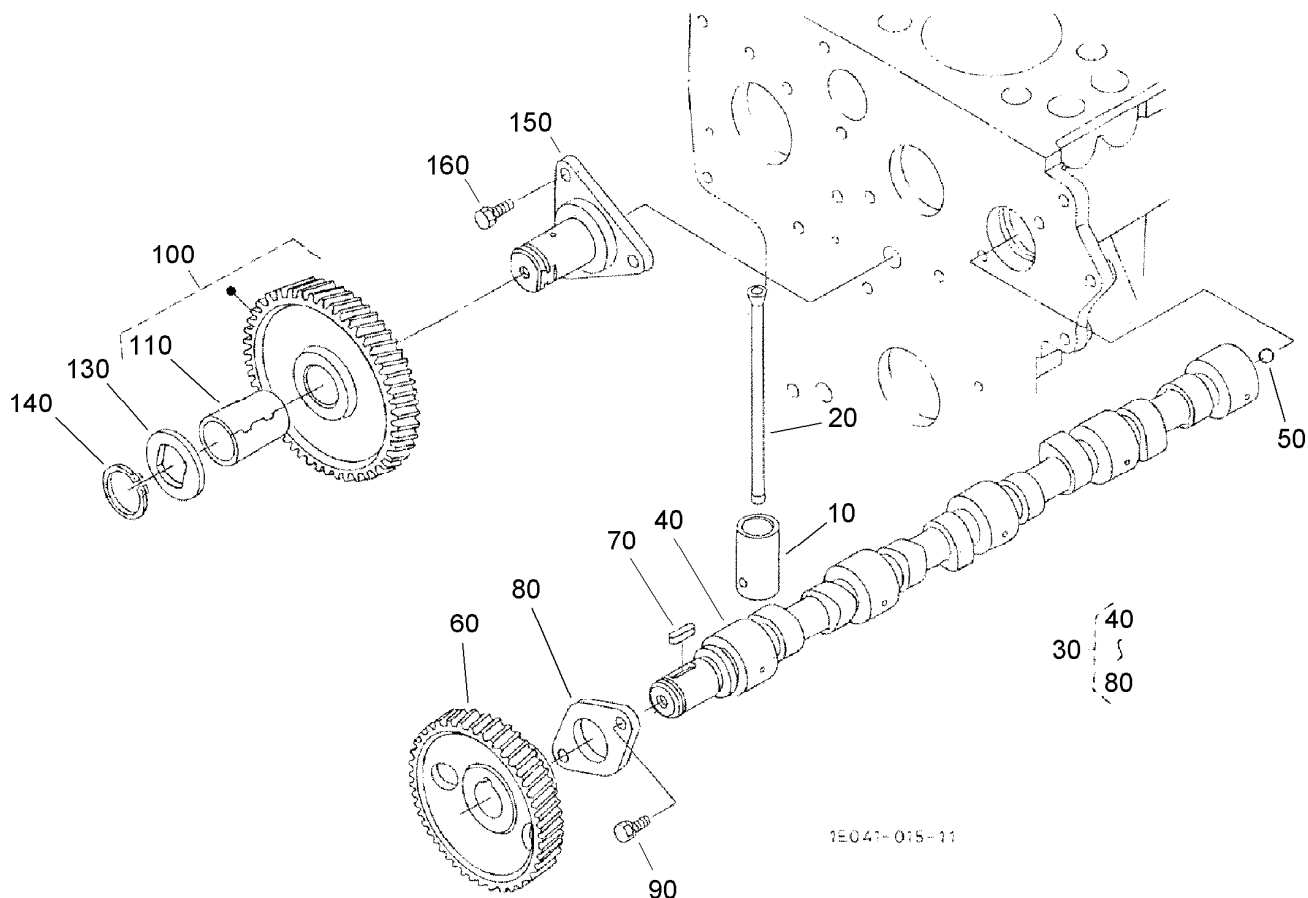 

Camshaft and Idle Gear Shaft Assembly


Ref.	Part Number	Qty.	Description
10	98-7445	8	Tappet
20	98-7446	8	Rod-Push
30	98-7447	1	Camshaft ASM
40	98-7448	1	Camshaft
50	98-7473	1	Ball
60	98-7450	1	Gear-Camshaft
70	98-7451	1	Key-Feather
80	98-7452	1	Stopper-Camshaft
90	98-7453	2	Bolt
100	107-0109	1	Gear-Idler
110	98-7455	1	Bushing-Gear, Idler
130	107-0111	1	Collar
140	107-0112	1	Circlip-External
150	107-0113	1	Shaft-Gear, Idler
160	98-7453	3	Bolt

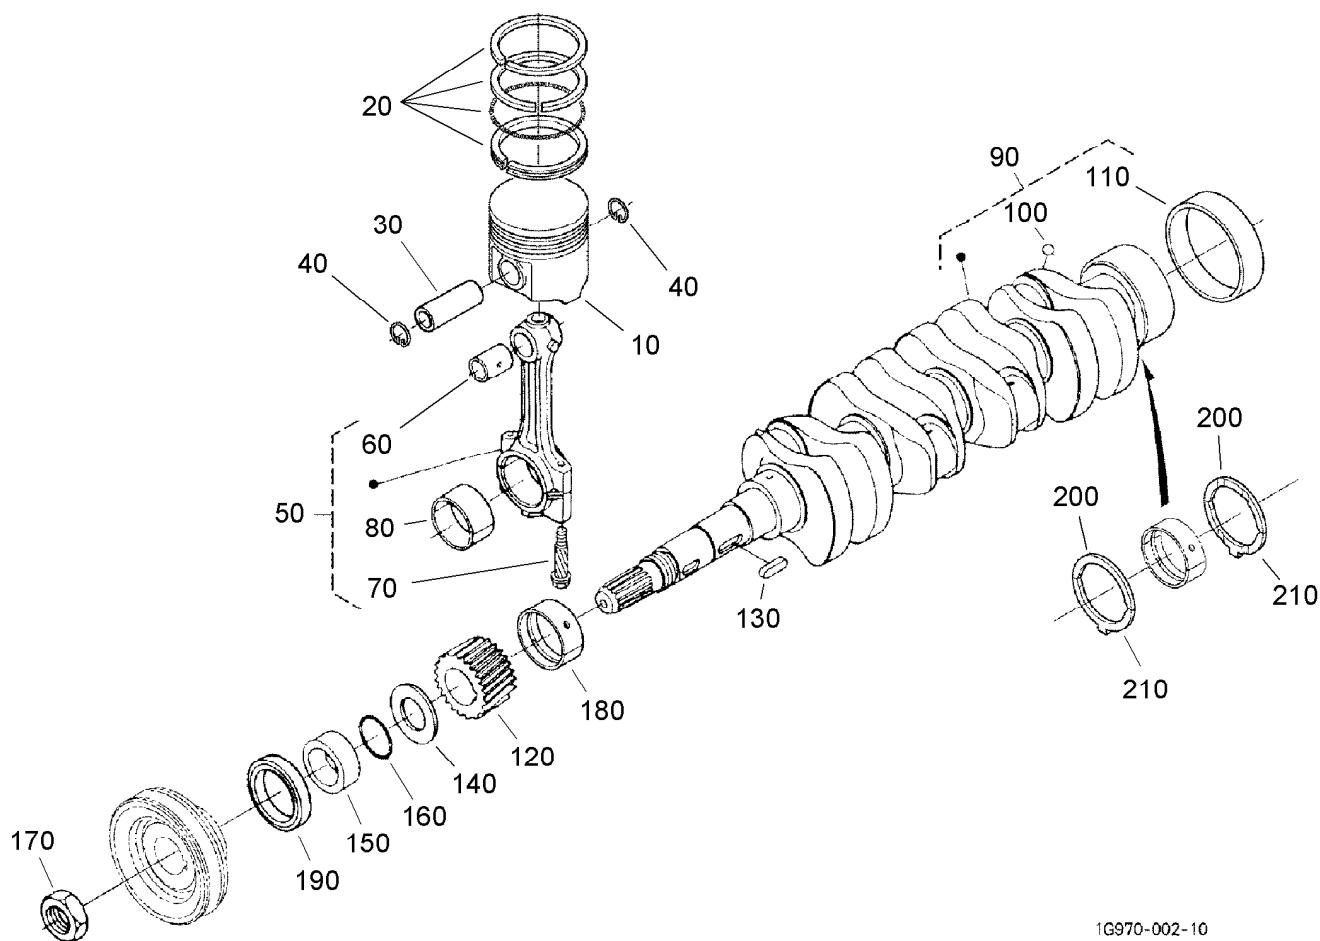 

Piston and Crankshaft Assembly

Ref.	Part Number	Qty.	Description
10	98-7461	4	Piston
10	98-7460	4	Piston** Obs** See 115-4112
20	98-7462	4	Piston Ring ASM
20	98-7463	4	Piston Ring ASM
30	98-7464	4	Pin-Piston
40	98-7465	8	Clip-Pin, Piston
50	98-7466	4	Connecting Rod ASM
60	98-7467	4	Bushing-Pin, Piston
70	98-7468	8	Bolt-Rod, Connecting
80	98-7469	4	Metal-Crankpin (STD)
80	98-7470	4	Metal-Crankpin (-0.20Mm)
80	98-7471	4	Metal-Crankpin (-0.40Mm)
90	98-7472	1	Crankshaft-Complete
100	98-7473	4	Ball
110	98-7474	1	Sleeve-Crankshaft


Ref.	Part Number	Qty.	Description
120	98-7475	1	Gear-Crankshaft
130	98-7451	1	Key-Feather
140	98-7476	1	Slinger-Oil
150	98-7477	1	Collar-Crankshaft
160	98-7478	1	O-Ring
170	98-7479	1	Nut-Crankshaft
180	108-7077	1	Metal-Crankshaft (-0.40Mm)
180	108-7076	1	Metal-Crankshaft (-0.20Mm)
180	108-7075	1	Metal-Crankshaft (STD)
190	98-7480	1	Seal-Oil
200	108-7080	2	Metal-Side (+0.40Mm)
200	108-7079	2	Metal-Side (+0.20Mm)
200	108-7078	2	Metal-Side (STD)
210	108-7083	2	Metal-Side (+0.40Mm)
210	108-7082	2	Metal-Side (+0.20Mm)
210	108-7081	2	Metal-Side (STD)

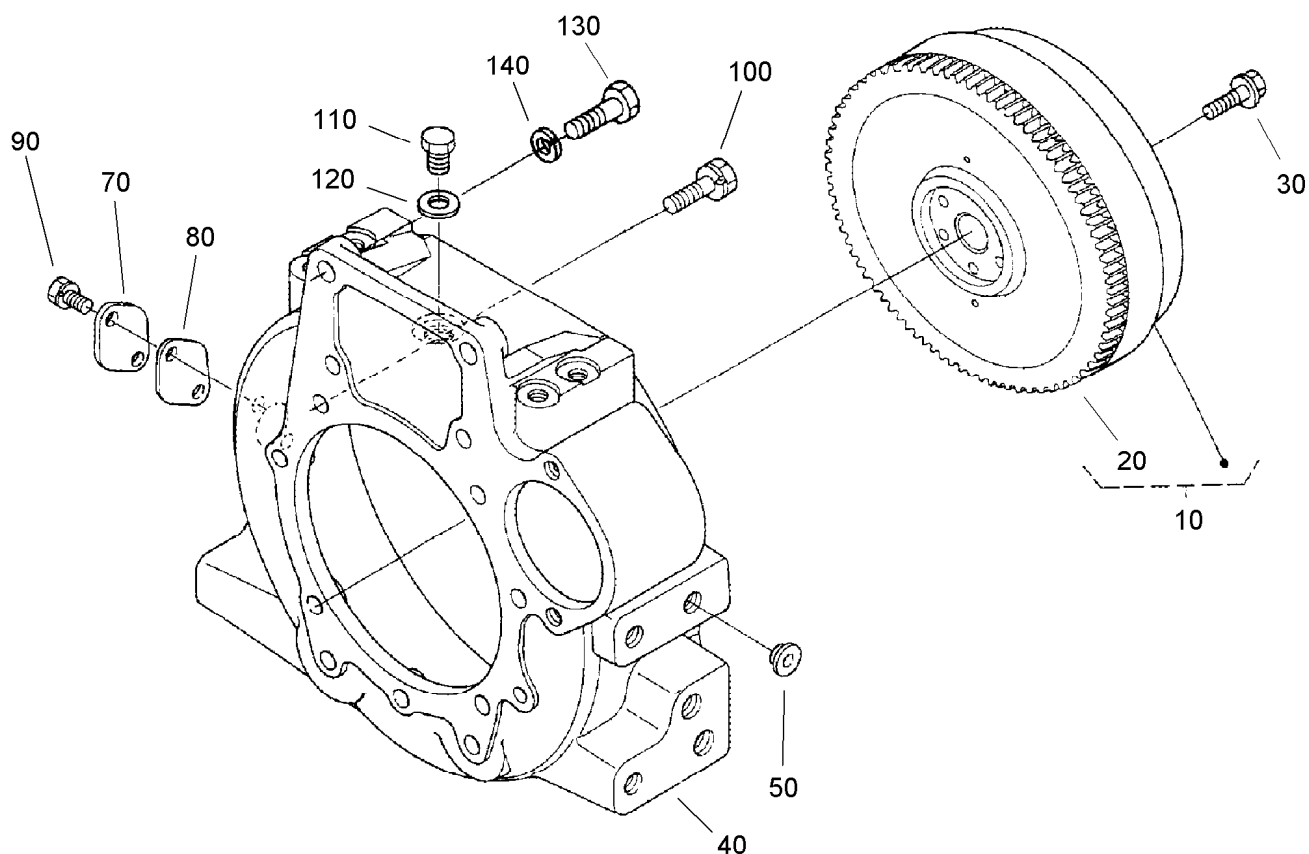 

1G299-090-21

Flywheel Assembly


Ref.	Part Number	Qty.	Description
10	98-7532	1	Flywheel
20	98-7560	1	Gear-Ring
30	98-7573	6	Bolt-Flywheel
40	98-7559	1	Housing-Flywheel
50	100-9189	2	Plug
70	98-7883	1	Cover
80	98-7886	1	Gasket
90	98-7526	2	Bolt
100	98-7885	11	Bolt
110	98-7546	1	Plug
120	100-9194	1	Washer-Plain
130	107-0114	2	Bolt
140	107-0118	2	Washer-Spring

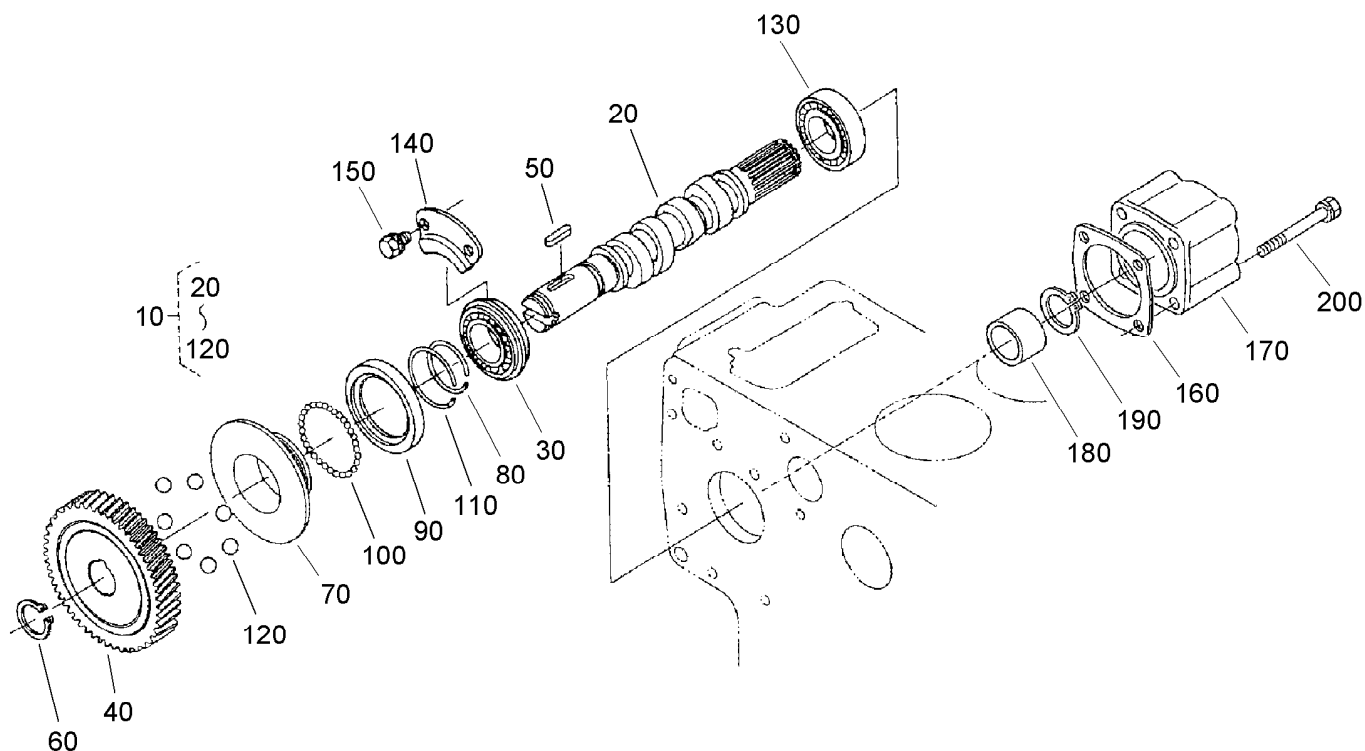 

1G610-006-10

Fuel Camshaft and Governor Shaft Assembly


Ref.	Part Number	Qty.	Description
10	98-7551	1	Fuel Camshaft ASM
20	98-7508	1	Camshaft-Fuel
30	98-7595	1	Bearing-Ball
40	98-7574	1	Gear-Pump, Injection
50	98-7575	1	Key-Feather
60	98-7576	1	Circlip-External
70	98-7577	1	Sleeve-Governor
80	98-7578	1	Circlip-Sleeve, Governor
90	98-7579	1	Case-Ball, Governor
100	98-7580	39	Ball
110	98-7581	1	Circlip
120	98-7582	7	Ball
130	108-7084	1	Bearing-Ball
140	98-7584	1	Stopper
150	100-9195	2	Bolt
160	98-7588	1	Gasket
170	98-7586	1	Cover-Fuel, Camshaft
180	98-7587	1	Collar
190	98-7589	1	Circlip-External
200	98-7590	4	Bolt

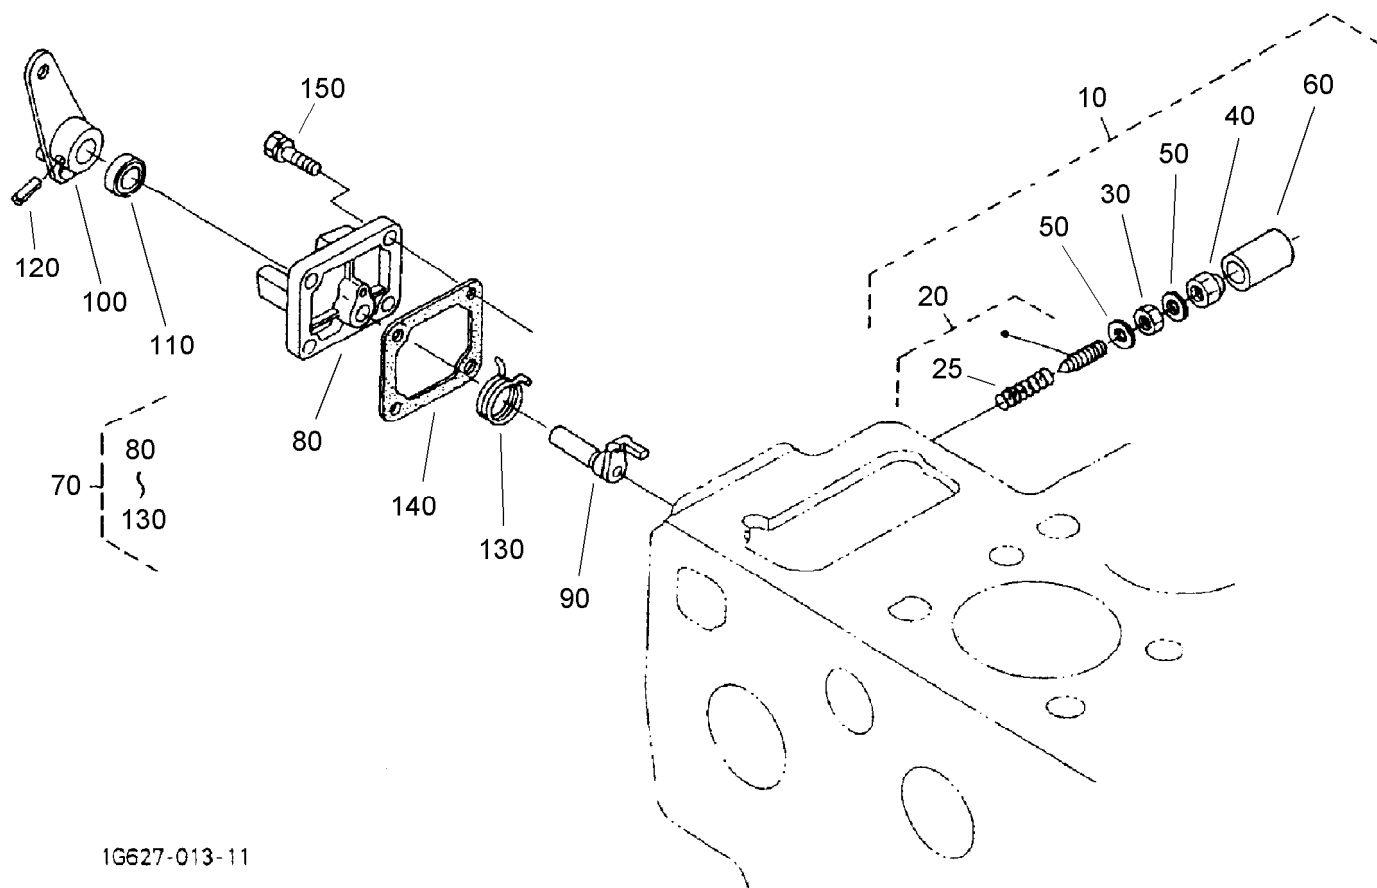 

1G627-013-11

Engine Stop Lever Assembly


Ref.	Part Number	Qty.	Description
10	98-7591	1	Idle Appartus ASM
20	98-7592	1	Adjusting Bolt ASM
25	110-0016	1	Spring
30	98-7593	1	Nut
40	98-7594	1	Nut-Cap
50	98-7428	2	Gasket
60	98-7596	1	Cap
70	100-9198	1	Engine Stop Lever ASM
80	98-7598	1	Cover-Pump, Injection
90	100-9200	1	Shaft-Lever
100	98-7600	1	Lever-Stop, Engine
110	98-7601	1	Seal-Oil
120	98-7602	1	Pin-Spring
130	98-7603	1	Spring-Return
140	98-7604	1	Gasket-Cover, Pump
150	98-7605	4	Bolt

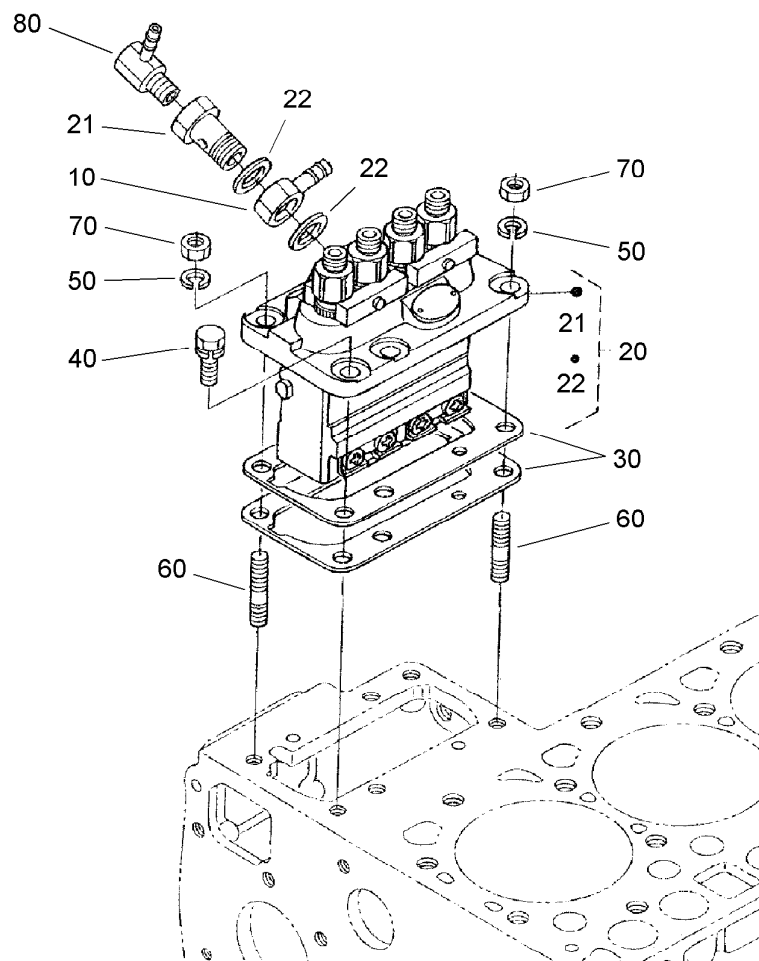 

1G970-015-10


Injection Pump Assembly

Ref.	Part Number	Qty.	Description
10	98-7617	1	Joint
20	108-4418	1	Injection Pump ASM
21	98-7635	1	Screw
22	98-7636	2	Gasket
30	98-7607	1	Shim-Pump, Injection (0.200Mm)
30	98-7608	1	Shim
30	98-7609	1	Shim-Pump, Injection
40	98-7610	4	Bolt
50	98-7535	2	Washer-Spring
60	100-1558	2	Stud-Manifold, Exhaust
70	98-7534	2	Nut
80	107-4300	1	Orifice ASM

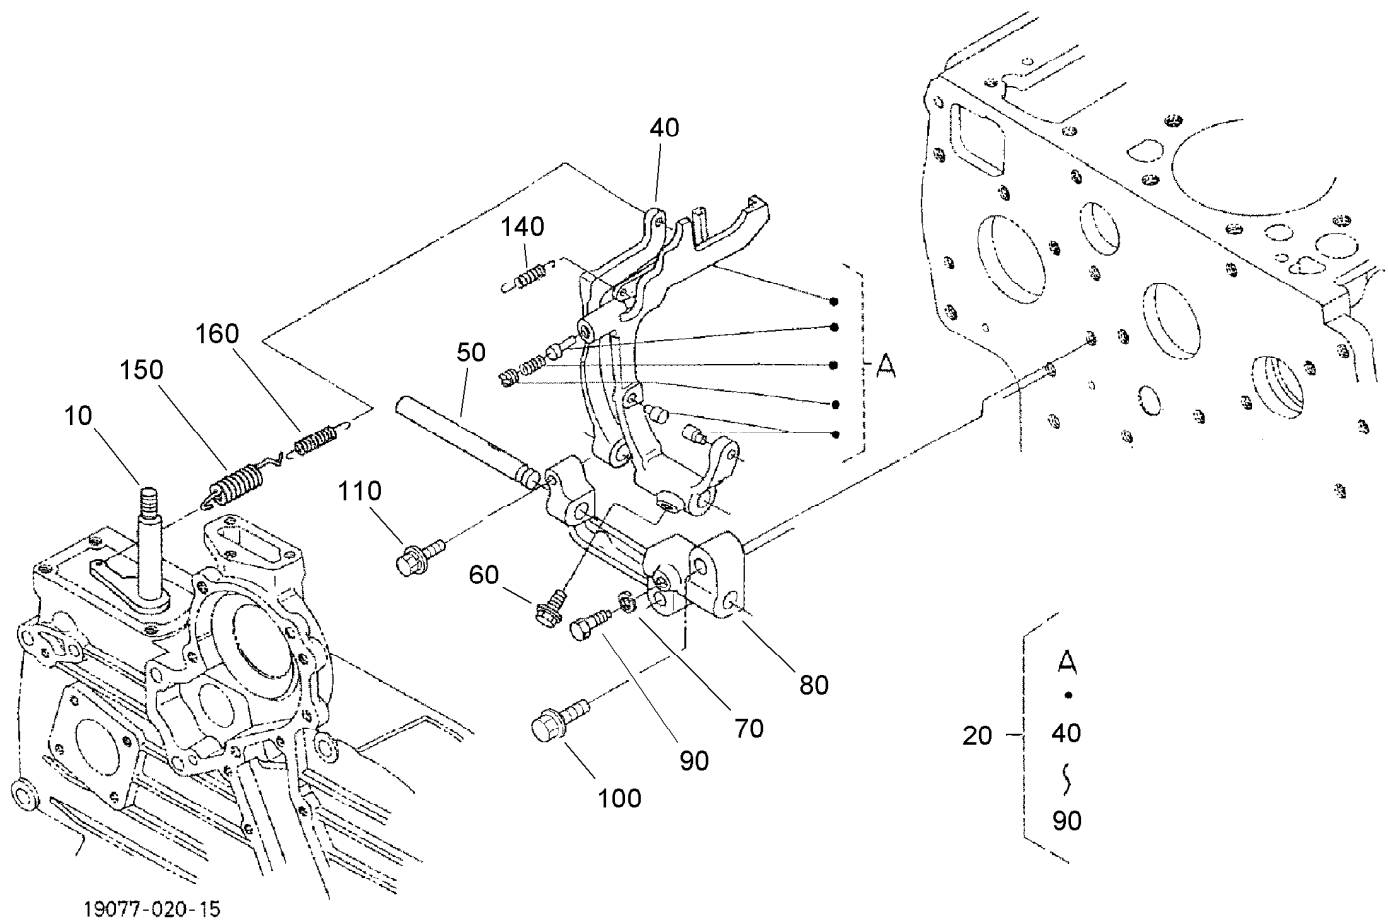 


Governor Assembly

Ref.	Part Number	Qty.	Description
10	98-7638	1	Lever-Governor
20	110-0017	1	Fork Lever ASM
40	100-9206	1	Lever-Fork
50	107-0120	1	Shaft-Lever, Fork
60	107-0116	1	Bolt-Flange
70	98-7699	1	Washer-Spring
80	98-7643	1	Holder-Lever, Fork
90	98-7644	1	Bolt
100	108-7085	2	Bolt-Flange
110	108-7086	1	Bolt
140	100-9207	1	Spring-Start
150	98-7650	1	Spring-Governor
160	98-7651	1	Spring-Governor

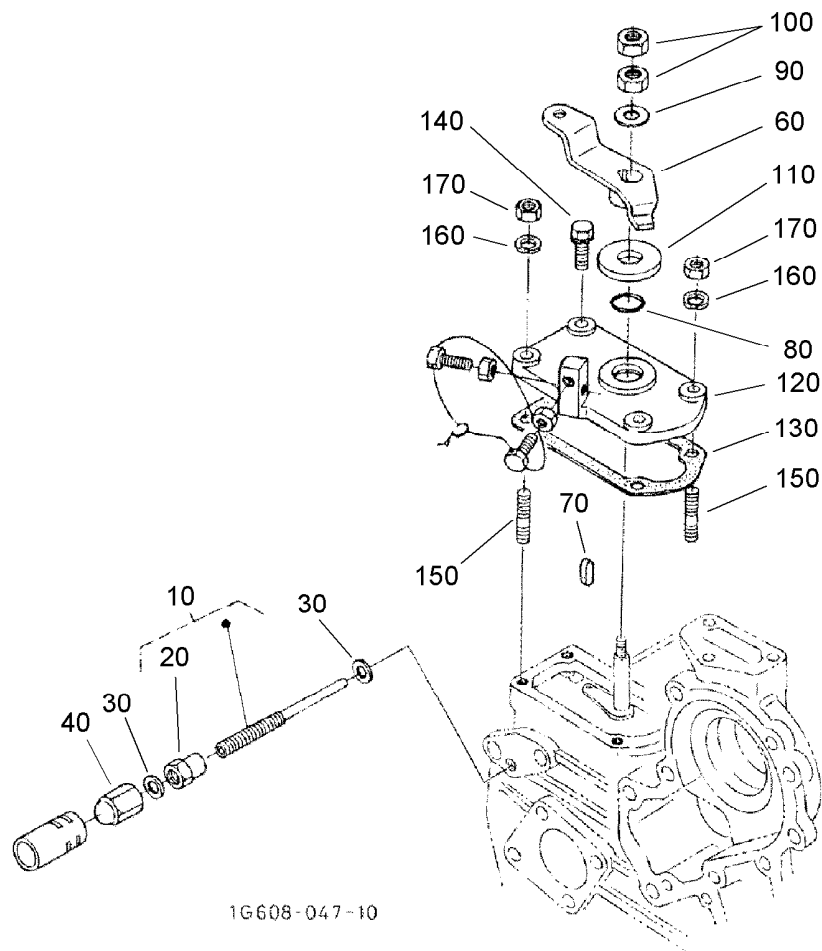 


Speed Control Plate Assembly

Ref.	Part Number	Qty.	Description
10	107-0132	1	Adjustable Bolt ASM
20	98-7653	1	Nut
30	98-7654	2	Gasket
40	98-7655	1	Nut-Cap
60	98-7657	1	Lever-Control, Speed
70	98-7658	1	Key-Feather
80	98-7659	1	O-Ring
90	98-7660	1	Washer-Plain
100	98-7661	2	Nut
110	98-7662	1	Collar
120	98-7663	1	Plate-Control, Speed
130	98-7664	1	Gasket
140	98-7568	2	Bolt
150	98-7571	2	Stud
160	98-7699	2	Washer-Spring
170	98-7572	2	Nut

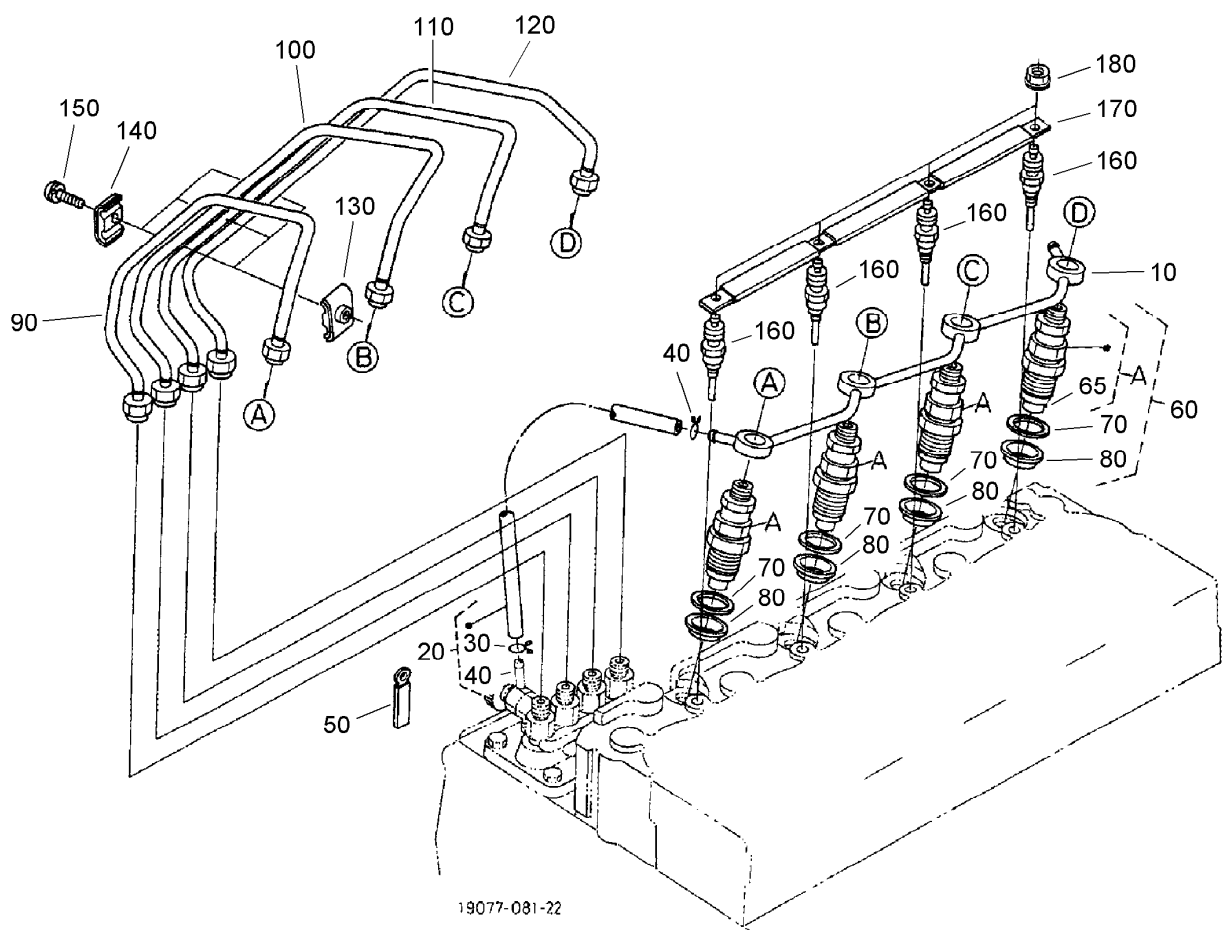 

Nozzle Holder and Glow Plug Assembly


Ref.	Part Number	Qty.	Description
10	100-9213	1	Overflow Pipe ASM
20	98-7670	1	Overflow Pipe ASM
30	98-7671	1	Clip-Pipe
40	98-7672	1	Clip-Pipe
50	98-7673	1	Clamp-Cord
60	98-7687	4	Nozzle Holder Kit
65	98-7675	4	Piece-Nozzle
70	98-7676	4	Gasket
80	98-7677	4	Seal-Heat
90	98-7678	1	Pipe-Injection
100	98-7679	1	Pipe-Injection
110	98-7680	1	Pipe-Injection
120	98-7681	1	Pipe-Injection
130	98-7682	3	Clamp-Pipe
140	98-7683	3	Clamp-Pipe
150	98-7684	3	Screw (W/Washer)
160	98-7685	4	Plug-Glow
170	98-7686	1	Cord-Plug, Glow
180	99-8377	4	Nut-Flange

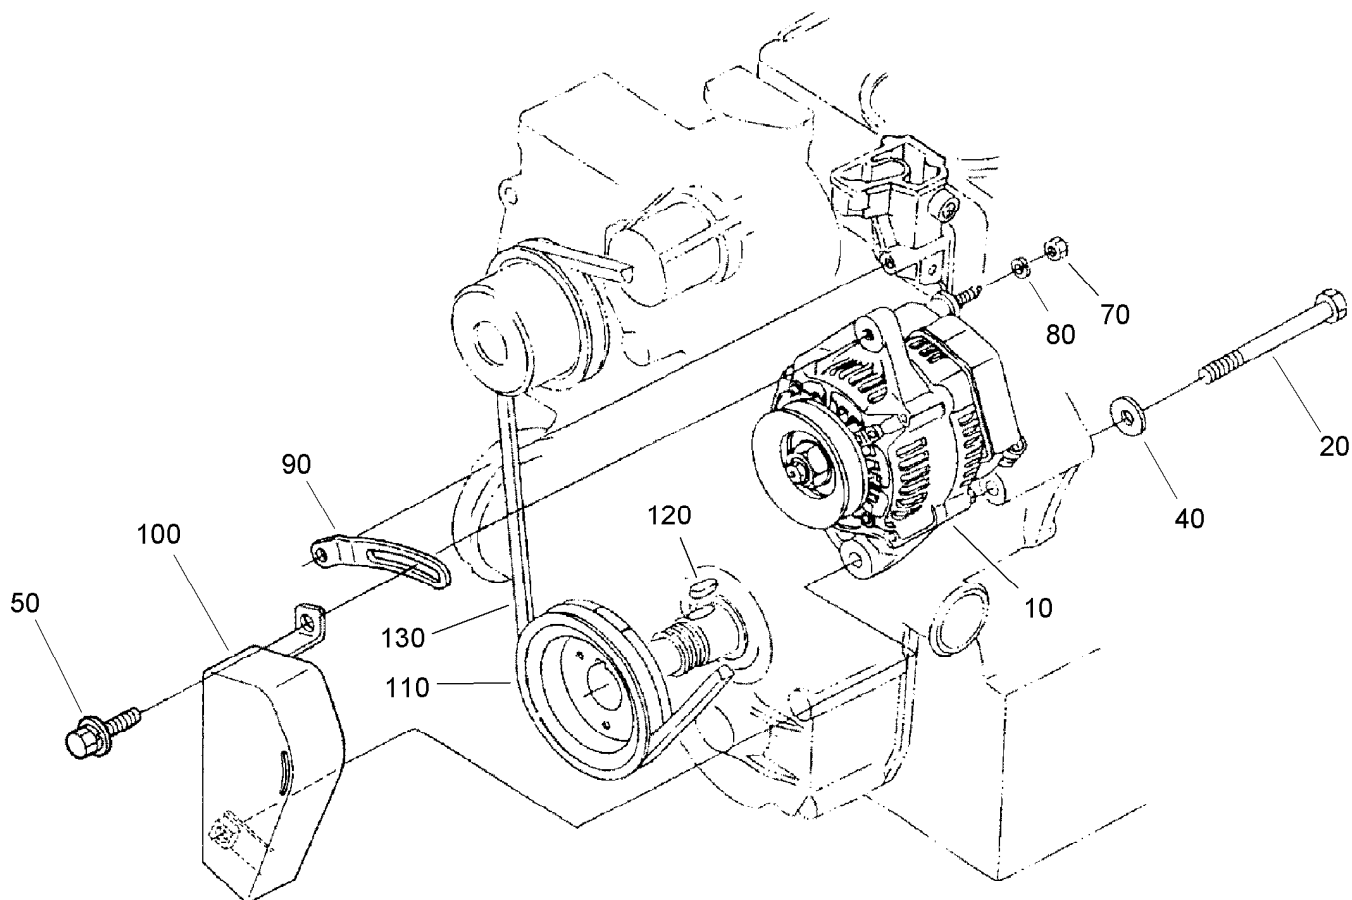 

1G975-021-10

Alternator and Pulley Assembly


Ref.	Part Number	Qty.	Description
10	98-7693	1	Alternator ASM
20	98-7695	1	Bolt
40	98-9366	1	Washer-Plain
50	108-7088	1	Bolt
70	98-7572	1	Nut
80	98-7699	1	Washer-Spring
90	98-7694	1	Bracket-Alternator
100	98-7701	1	Cover-Belt
110	98-7703	1	Pulley-Drive, Fan
120	98-7451	1	Key-Feather
130	98-7705	1	V-Belt

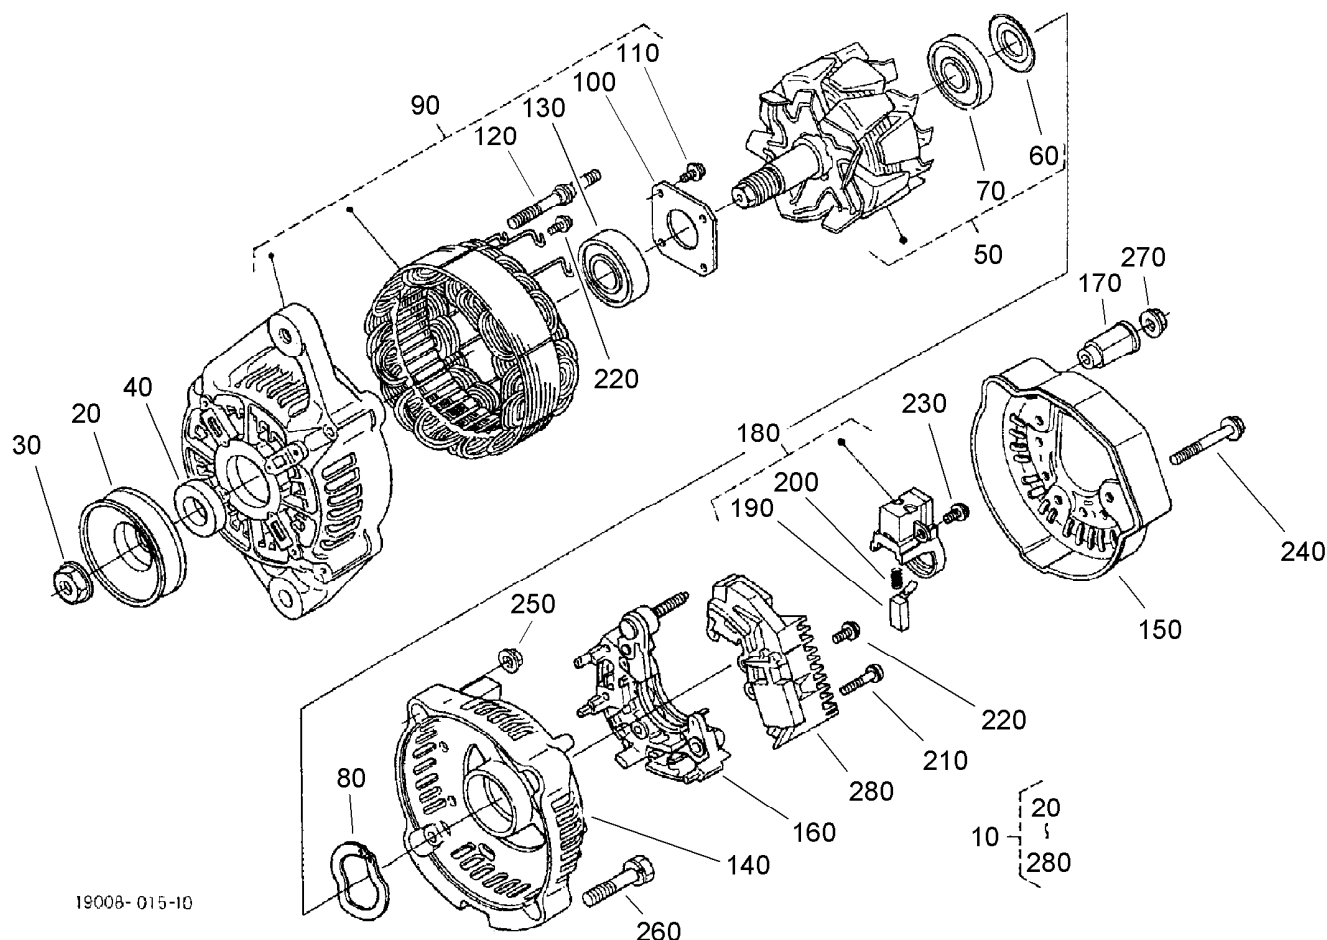 

Alternator (Component Part) Assembly

Ref.	Part Number	Qty.	Description
10	98-7693	1	Alternator ASM
20	98-7707	1	Pulley-Alternator
30	98-7708	1	Nut
40	98-7709	1	Collar
50	107-0136	1	Rotor ASM
60	98-7711	1	Cover-Bearing
70	107-0137	1	Bearing-Ball
80	98-7713	1	Washer-Thrust
90	107-0139	1	Drive End Frame ASM
100	98-7715	1	Plate-Retainer
110	98-7716	4	Screw-Head, Round
120	98-7717	2	Bolt-Through
130	98-7718	1	Bearing-Ball
140	98-7719	1	Frame-End


Ref.	Part Number	Qty.	Description
150	107-0140	1	Cover-End
160	98-9476	1	Rectifier ASM
170	98-7722	1	Bushing-Insulation
180	107-0141	1	Brush Holder ASM
190	98-7724	2	Brush
200	98-7725	2	Spring-Brush
210	98-7726	2	Screw-Head, Round
220	98-7727	6	Screw-Head, Round
230	98-7728	1	Screw-Head, Round
240	98-7729	3	Bolt
250	98-7730	2	Nut
260	98-7731	2	Bolt
270	98-7732	1	Nut
280	107-9088	1	Regulator ASM

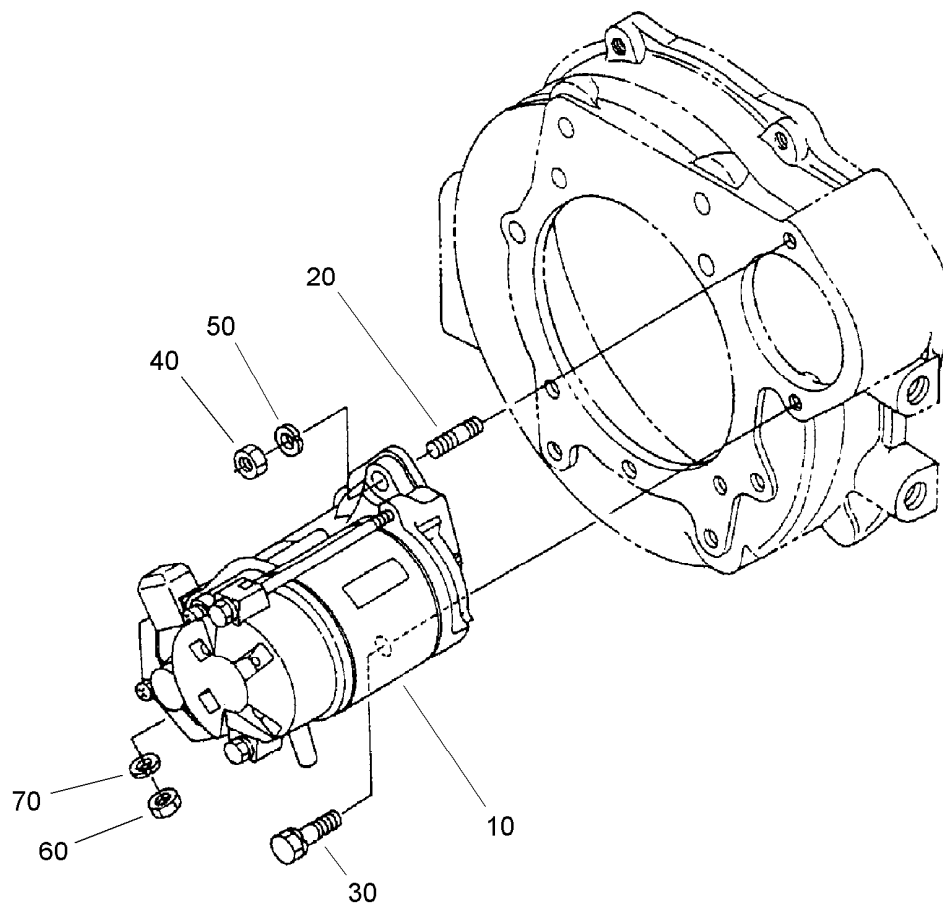 

17484-005-10

Starter Assembly


Ref.	Part Number	Qty.	Description
10	98-7734	1	Starter ASM
20	98-7735	1	Stud
30	98-7736	1	Bolt
40	98-7737	1	Nut
50	98-7738	1	Washer-Spring
60	98-7739	1	Nut
70	98-7535	1	Washer-Spring

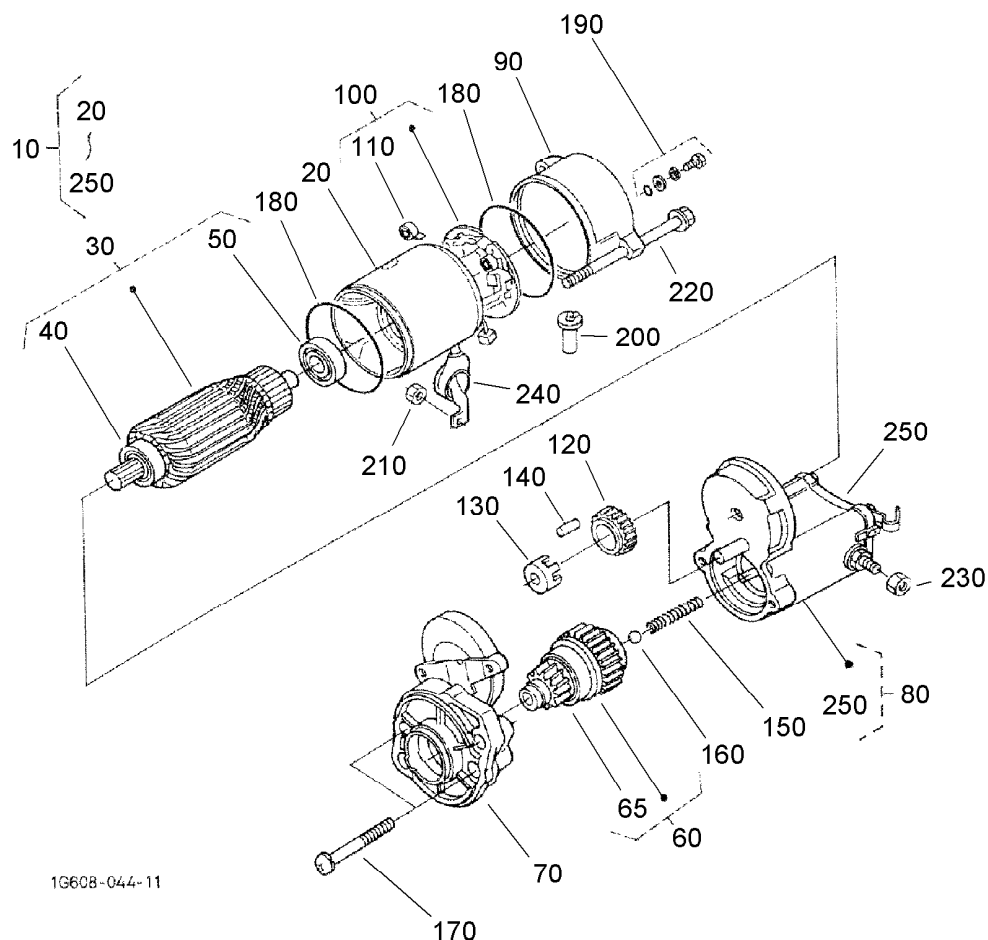 

Starter (Component Part) Assembly No. 98-7734

Ref.	Part Number	Qty.	Description
10	98-7734	1	Starter ASM
20	98-7741	1	Yoke ASM
30	98-7742	1	Armature ASM
40	98-7744	1	Bearing
50	98-7743	1	Bearing
60	98-7745	1	Clutch-Running, Over
65	105-2887	1	Pinion-Bevel
70	98-7746	1	Frame-End, Drive
80	110-0019	1	Magnetic Switch ASM
90	98-7748	1	Frame-End
100	98-7749	1	Brush Holder ASM
110	98-7750	4	Spring-Brush
120	98-7751	1	Gear


Ref.	Part Number	Qty.	Description
130	98-7752	1	Retainer
140	98-7753	5	Roller
150	98-7754	1	Spring
160	98-7755	1	Ball
170	98-7756	2	Bolt
180	98-7757	2	O-Ring
190	98-7758	2	Bolt ASM
200	98-7759	1	Pipe-Drain
210	98-7760	1	Nut-Hex
220	100-9240	2	Bolt
230	99-8376	1	Nut-Hex
240	110-0020	1	Cover-Terminal
250	105-2866	1	O-Ring

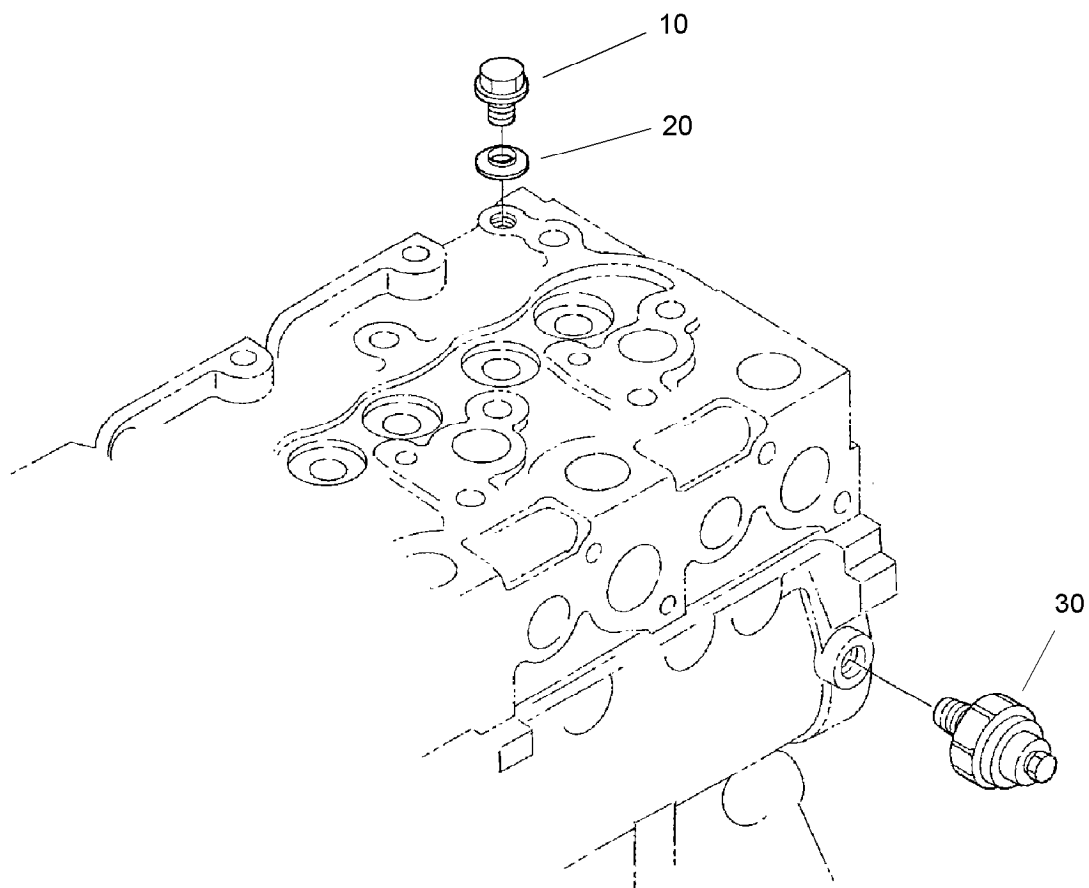 

17290-018-10

Oil Switch and Plug Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	98-7762	1	Plug
20	98-7763	1	Washer-W/Rubber
30	98-7764	1	Switch-Oil

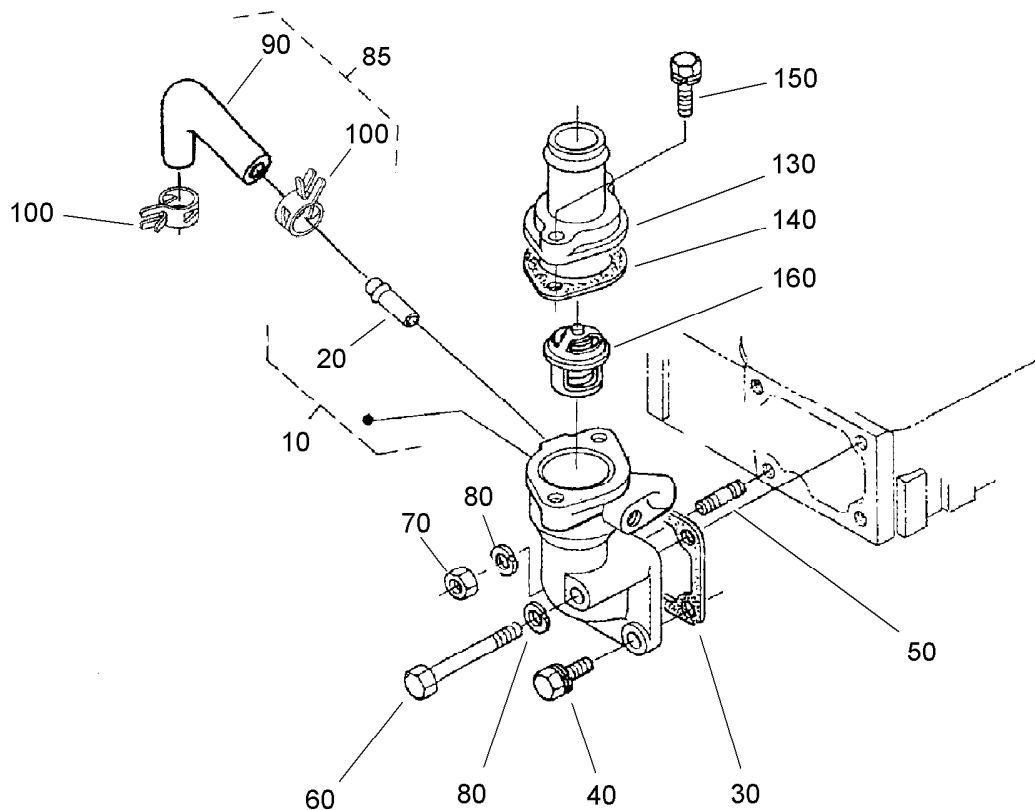 

1K363-007-12

Water Flange and Thermostat Assembly


Ref.	Part Number	Qty.	Description
10	98-7765	1	Water Flange ASM
20	98-7766	1	Pipe-Return, Water
30	105-2876	1	Gasket-Flange, Water
40	98-9359	2	Bolt
50	98-7533	1	*obs* Stud
60	98-7554	1	Bolt
70	98-7534	1	Nut
80	98-7535	2	Washer-Spring
85	110-0021	1	Pipe ASM
90	110-0022	2	Pipe-Return, Water
100	105-2879	2	Clamp-Hose
130	98-7775	1	Cover-Thermostat
140	105-3748	1	Gasket-Thermostat
150	98-7777	2	Bolt
160	98-7778	1	Thermostat ASM

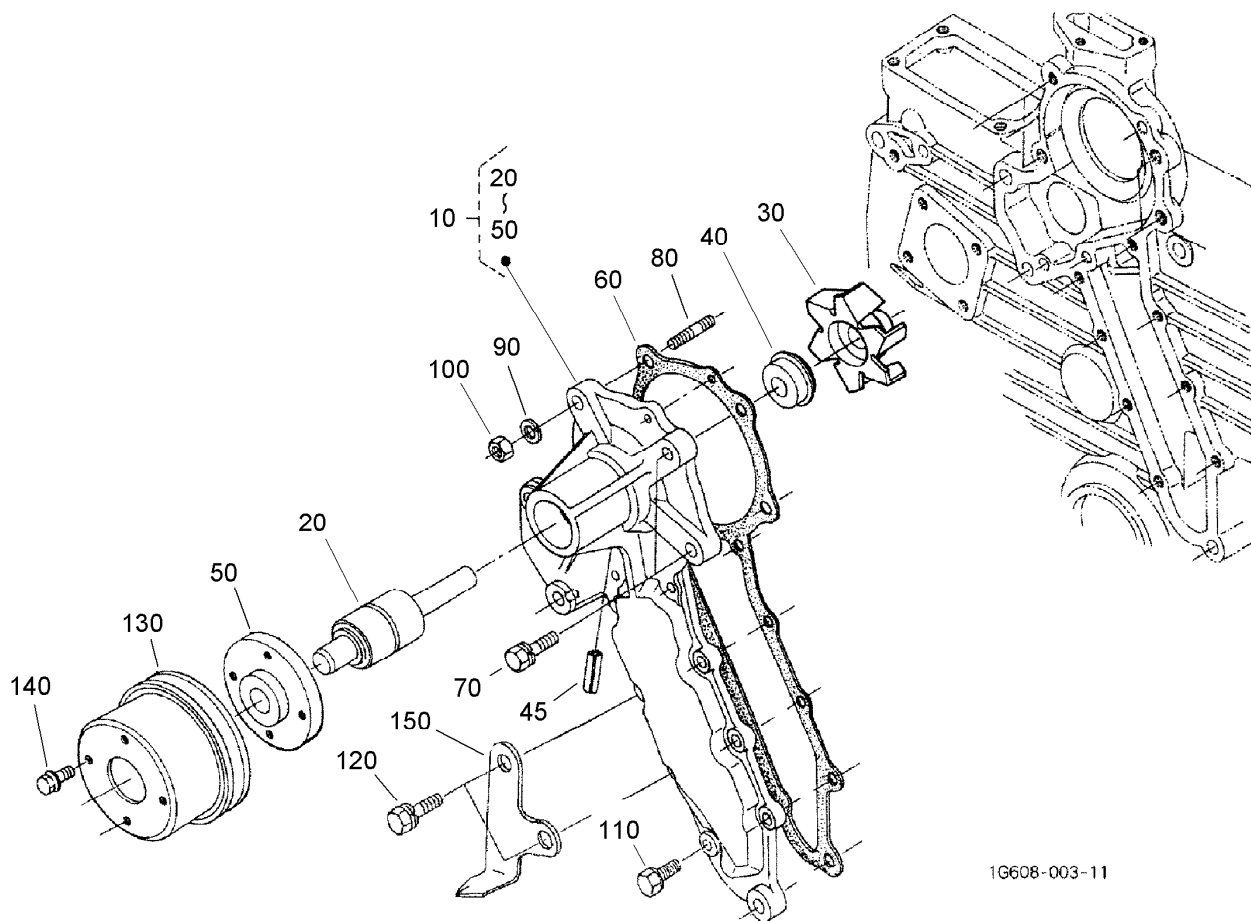 

1G608-003-11

Water Pump Assembly


Ref.	Part Number	Qty.	Description
10	98-7779	1	Water Pump ASM
20	98-7780	1	Bearing-Ball
30	107-0130	1	Impeller-Pump, Water
40	98-7782	1	Mechanical Seal ASM
45	107-0131	1	Pin-Spring
50	108-7089	1	Flange-Shaft, Water Pump
60	98-7784	1	Gasket-Pump, Water
70	98-7439	2	Bolt
80	108-7090	2	Stud
90	98-7535	2	Washer-Spring
100	98-7534	2	Nut
110	98-7605	8	Bolt
120	98-7568	2	Bolt
130	98-7702	1	Pulley-Fan
140	107-4317	4	Bolt-Flange
150	100-9246	1	Indicator-Timing

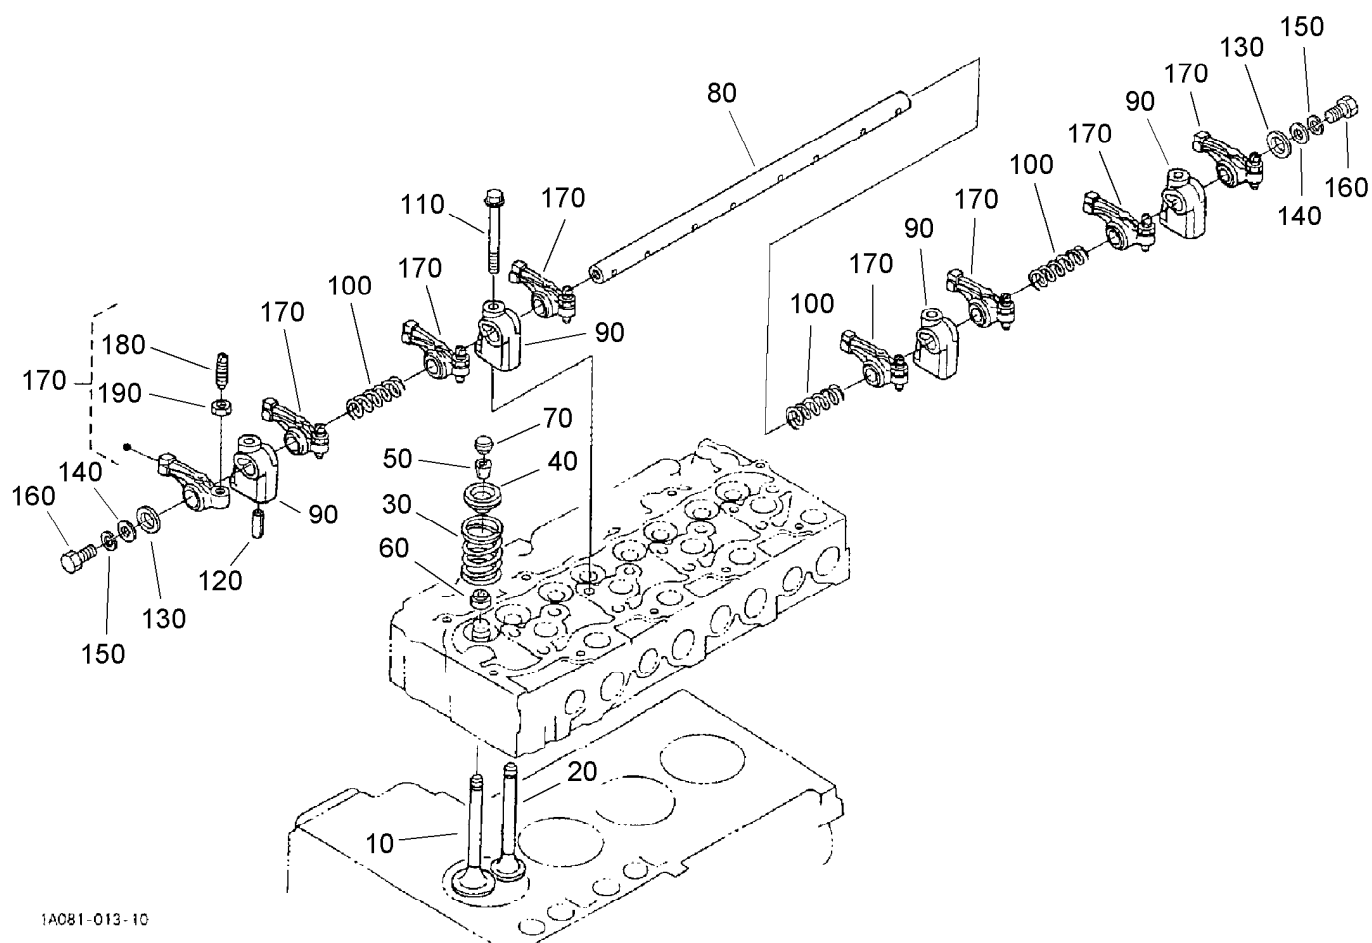 

1A081-013-10

Valve and Rocker Assembly


Ref.	Part Number	Qty.	Description
10	98-7791	4	Valve-Inlet
20	98-7792	4	Valve-Exhaust
30	98-7793	8	Spring-Valve
40	98-7794	8	Retainer-Spring, Valve
50	98-7795	8	Collet-Spring, Valve
60	98-7796	8	Seal-Stem, Valve
70	98-7797	8	Cap-Valve
80	107-0134	1	Shaft-Arm, Rocker
90	98-7800	4	Bracket-Arm, Rocker
100	98-7807	3	Spring-Arm, Rocker
110	108-7091	4	Bolt-Flange
120	98-7805	1	Pin-Spring
130	98-7806	2	Washer
140	98-7660	2	Washer-Plain
150	98-7535	2	Washer-Spring
160	98-7884	2	Bolt
170	98-7809	8	Rocker Arm ASM
180	98-7810	8	Screw-Adjusting
190	98-7811	8	Nut

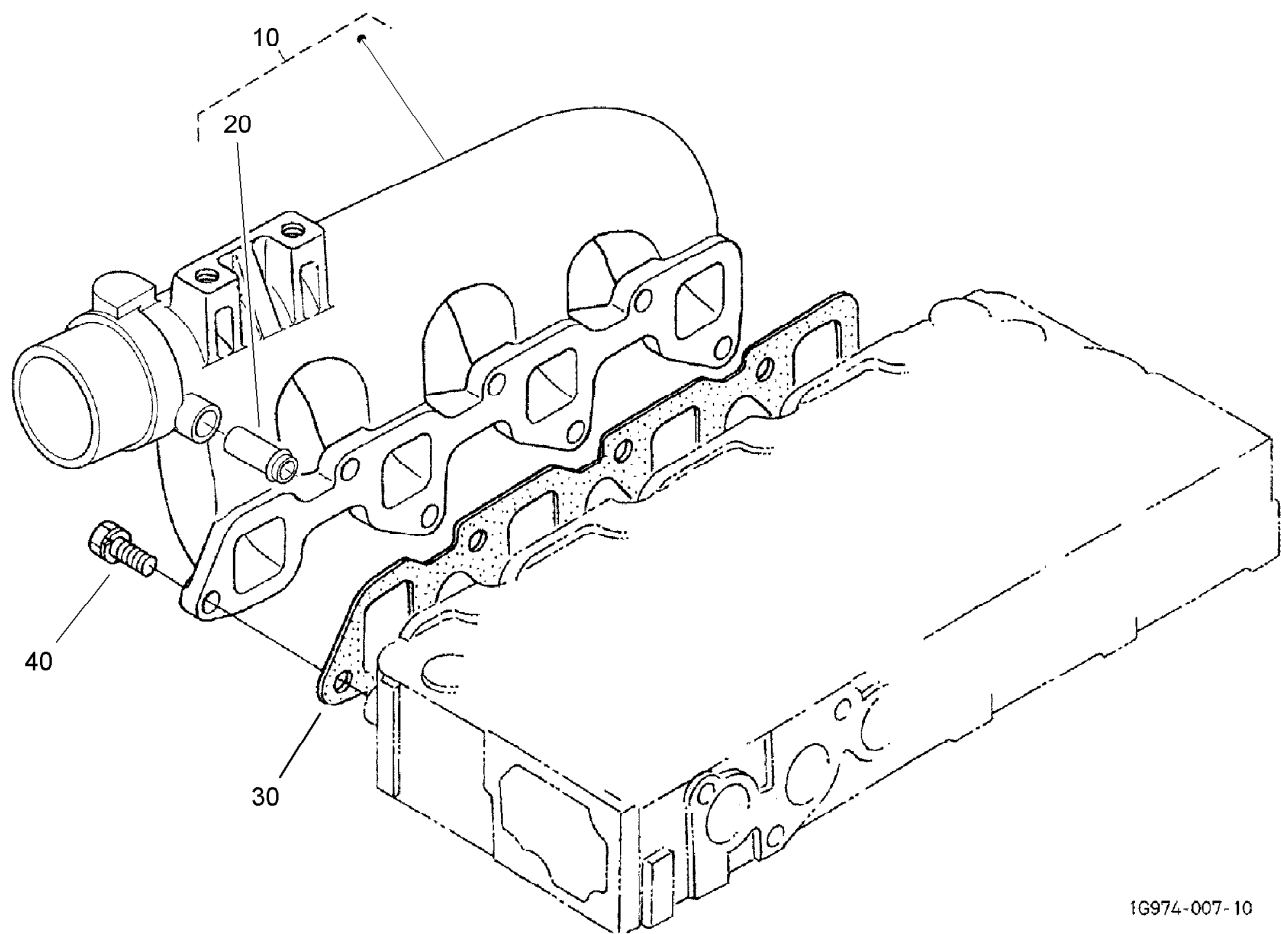 

1G974-007-10



Inlet Manifold Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	110-0023	1	Inlet Manifold ASM
20	98-7766	1	Pipe-Return, Water
30	100-9284	1	Gasket-Manifold, Intake
40	98-7610	7	Bolt

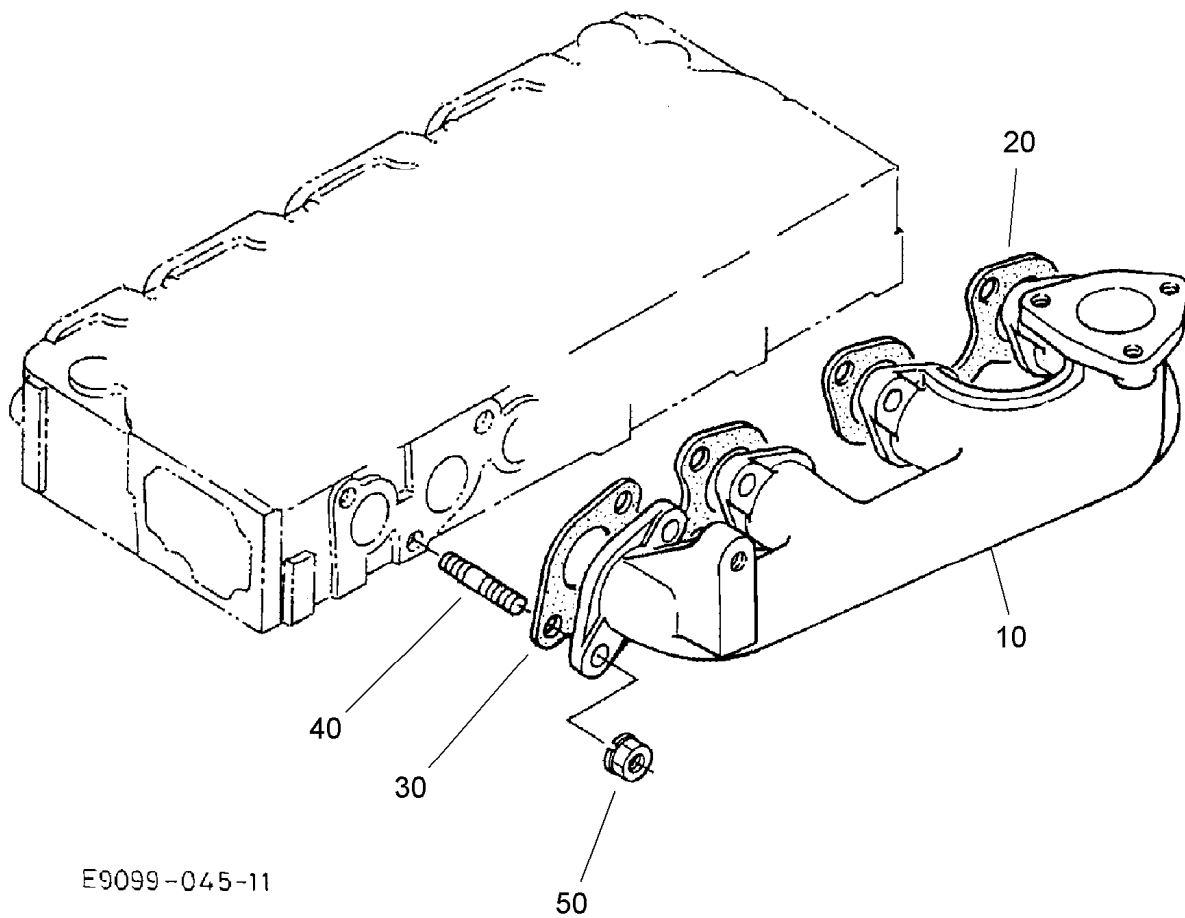 

Exhaust Manifold Assembly

Ref.	Part Number	Qty.	Description
10	98-7815	1	Manifold-Exhaust
20	98-7802	1	Gasket
30	98-7803	1	Gasket
40	100-1558	8	Stud-Manifold, Exhaust
50	100-9288	8	Nut

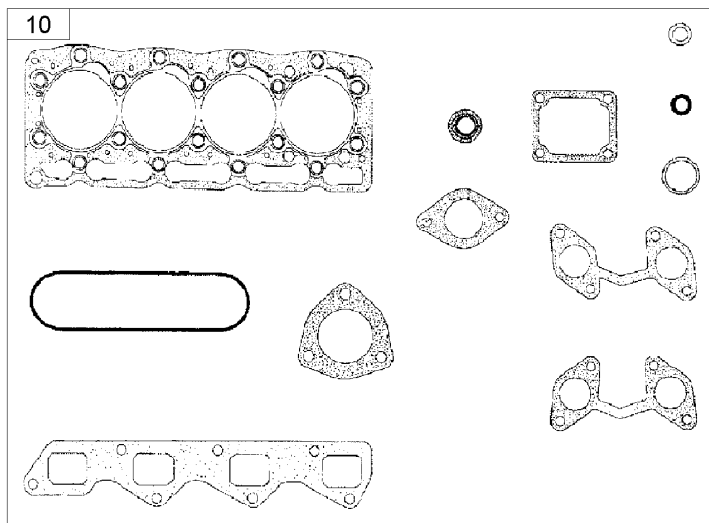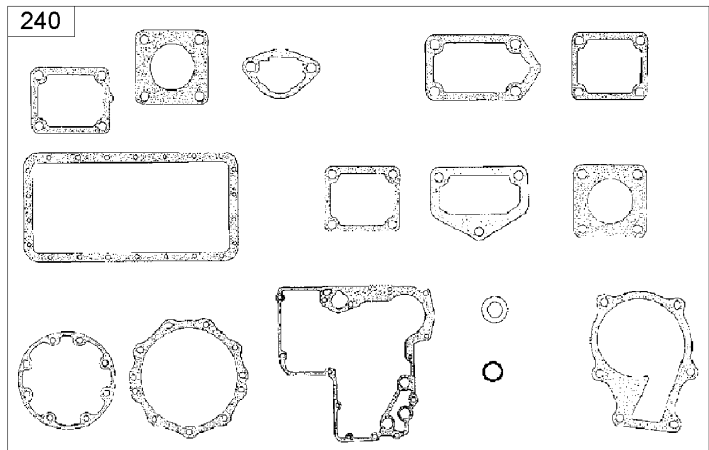  

Gasket Kit Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	98-7887	1	Upper Gasket Kit
240	110-0025	1	Lower Gasket Kit

Attachments and Accessories

For 03706 Reelmaster 4000-D 2 Wheel Drive

Product Name	Model/Part
7-Blade Reel Mower (LH)	03723
7-Blade Reel Mower (RH and Center)	03724
11-Blade Reel Mower (LH).....	03725
11-Blade Reel Mower (RH and Center).....	03726
Dethatcher (LH)	03730
Dethatcher (RH and Center)	03732
Wiehle Roller Kit	03740
Full Roller Kit	03742
Side Skid Kit	03744
5-Blade Reel Mower (LH)	03752
5-Blade Reel Mower (RH and Center)	03753
Cutting Unit Floatation Kit	03760
Fixed Head Kit	03762
Two-Piece Hydraulic Tube Replacement Kit	105-3333
Rear Roller Scraper Kit for Cutting Units	59-6090
Front Roller Scraper Kit	62-6220
Muffler-Exhaust	74-2900
Roll-Over Protection System Kit	92-9286

Notes:



Count on it.