



Reelmaster[®] 5500-D 4WD

Model No. 03551—20000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Frame And Body Assembly	4	Rear Axle Assembly No. 98-3925 (Continued)	
Steering Tower Assembly	6	Bevel Gear Case Assembly	54
Steering Valve Assembly No. 99-8959	8	Rear Axle Assembly No. 98-3925 (Continued)	
Traction And Brake Pedal Assembly	9	Bevel Gear Shaft Assembly	55
Seat Frame And Throttle Assembly	10	Rear Axle Assembly No. 98-3925 (Continued)	
Seat And Suspension Assembly	11	Axle Case Assembly	56
Seat Suspension Assembly No. 75-3000	12	Rear Axle Assembly No. 98-3925 (Continued)	
Control Console Assembly	13	Axle Case Assembly	57
Diagnostic-ACE Display Assembly	15	4WD Shaft Assembly	58
Hydraulic Filter And Reservoir Assembly	16	Driveshaft Assembly No. 99-6976	59
Fuel Tank Assembly	17	ROPS Assembly	60
Fuel Filter Assembly No. 99-8351	18	Axle Assembly No. 99-6981-03	61
Front Axle Assembly	19	Brake Assembly	63
Transmission Assembly	20	Special Tools	64
Transmission Assembly No. 75-0012	21	Gauge Bar and Backlapping Brush Assembly	65
Traction Control Assembly	23	Hydraulic Schematic	66
Gear Pump Installation Assembly	24	Electrical Schematic	67
Engine Installation Assembly	25	Electrical Schematic - Turfdefender	68
Muffler And Pump Drive Assembly	26	Crankcase Assembly	69
Engine Components Assembly	27	Oil Pan Assembly	70
Air Cleaner Assembly No. 98-4517	28	Cylinder Assembly	71
Water/Fuel Separator Assembly No. 98-9305	29	Gear Case Assembly	72
Fan Drive Assembly	30	Filter, Oil Cooler & Pipe Assembly	73
Radiator Assembly	31	Head Cover Assembly	74
Oil Cooler / Radiator Assembly	32	Dipstick Assembly	75
Hood Assembly	33	Main Bearing Case Assembly	76
Lift Block Assembly	34	Camshaft Assembly	77
Hydraulic Manifold Assembly No. 99-6979	35	Piston & Crankshaft Assembly	78
Mow Block Assembly	36	Flywheel Assembly	80
Hydraulic Manifold Assembly No. 99-6978	37	Fuel Camshaft Assembly	81
Rear Hydraulic Manifold Assembly	38	Engine Stop Lever Assembly	82
Reel Motor And Hose Assembly	39	Stop Solenoid & Fuel Pump Assembly	83
Reel Motor No. 98-9999	40	Injection Pump Assembly	84
Front Lift Circuit Assembly	41	Injection Pump Assembly No. 98-9643	85
Hydraulic Cylinder Assembly No. 99-6986	42	Governor Assembly	86
Hydraulic Cylinder Assembly No. 99-6987	43	Speed Control Plate Assembly	87
Front Lift Arm Assembly	44	Nozzle Holder & Glow Plug Assembly	88
Rear Lift Cylinder Assembly	45	Nozzle Holder Assembly No. 98-9468	89
Hydraulic Cylinder Assembly No. 98-3945	46	Alternator & Pulley Assembly	90
Rear Lift Arm Assembly	47	Alternator Assembly	91
Rear Axle Support	48	Starter Mount Assembly	92
4WD Rear Axle Assembly	49	Starter Assembly No. 98-9705	93
Hydraulic Cylinder No. 98-8163	50	Water Flange & Thermostat Assembly	94
Rear Axle Assembly No. 98-3925		Water Pump Assembly	95
Bevel Pinion Shaft Assembly	51	Valve & Rocker Arm Assembly	96
Rear Axle Assembly No. 98-3925 (Continued)		Exhaust Manifold & Gasket Assembly	97
Differential Assembly	52	Turbo Charger Assembly	98
Rear Axle Assembly No. 98-3925 (Continued)			
Axle Support Assembly	53		

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	LH	left hand
ASM	assembly	NI	nylon insert
CARR	carriage	INC	incorporated
DEG	degrees	LH	left hand
FH	flat head	NI	nylon insert
GA	gauge	PPH	Phillips pan head
HF	hex flange	PTH	Phillips truss head
HH	hex head	PTO	power take off
HHF	hex head flange	RH	right hand
HLH	hex lag head	SFH	slotted fillister head
HJ	hex jam	SHH	slotted hex head
HOC	height-of-cut	SQH	square head
HS	hex socket	SHWH	slotted hex washer head
HSBH	hex socket button head	SPH	slotted pan head
HSFH	hex socket flat head	SRH	slotted round head
HSH	hex socket head	STD	standard
HWH	hex washer head	TAP	self tapping
HWHTF	hex washer head thread forming	TTH	Torx truss head
INC	incorporated	WH	wing head

PROTOTYPE

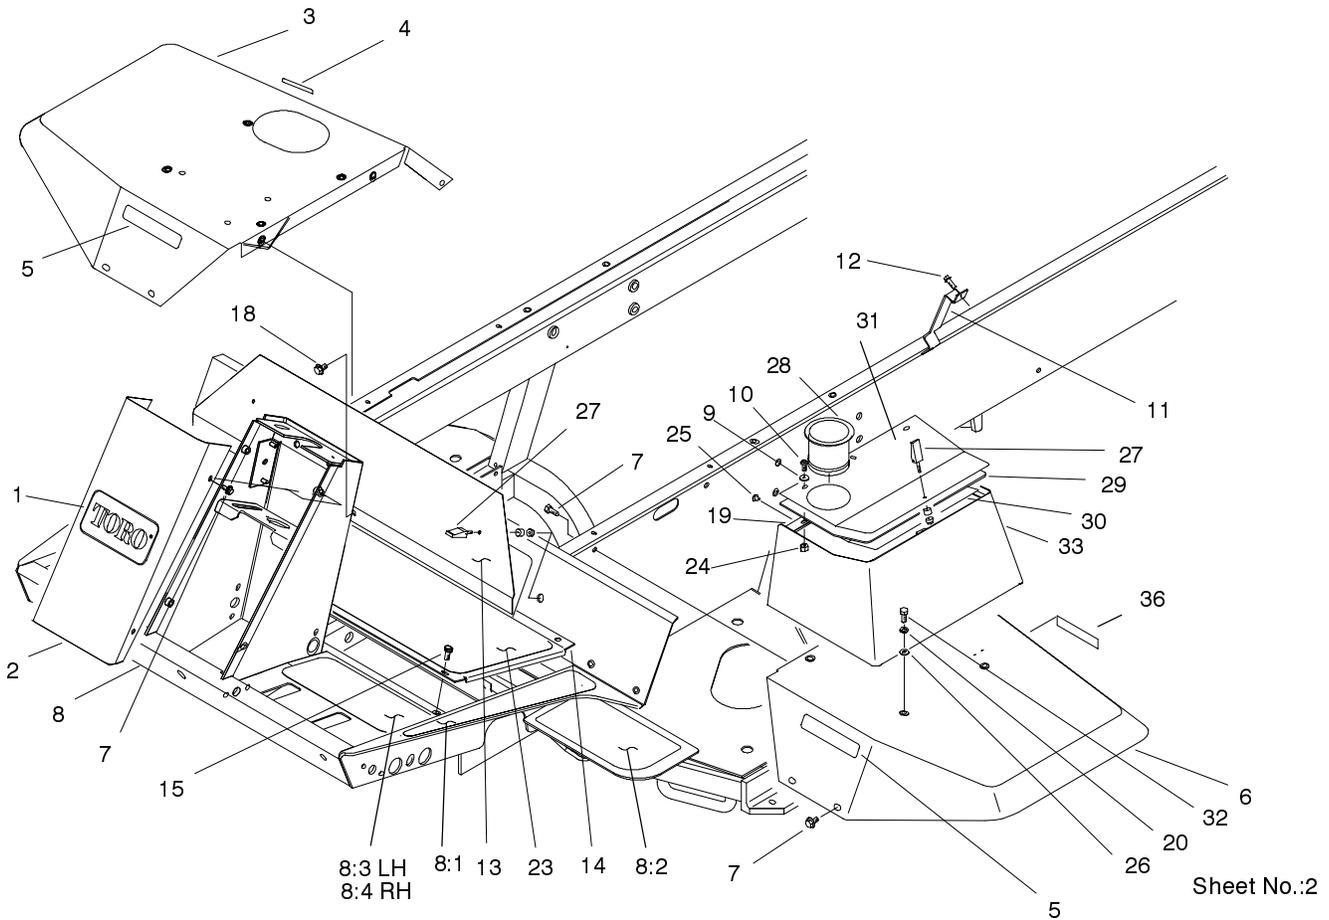


Sheet No.:2

Frame And Body Assembly

Ref. No.	Part No.	Qty.	Description
1	62-5550	1	Decal
2	93-7996-01	1	Cover - Tower
3	93-7579	1	Fender-RH
4	93-6686	1	Decal-Oil, Hydraulic
5	93-6689	2	Decal - No Riders
6	75-3860	1	Fender-LH
7	3234-14	14	Screw-HHF
8	104-1425	1	Frame
8:1	93-7592	2	Tread Foot Rest - LH
8:2	104-0048	1	Tread-Step
8:3	75-0620	1	Tread-Foot, LH
8:4	75-0610	1	Tread-Foot, RH
9	3256-1	3	Washer-Flat
10	3258-166	3	Screw
11	98-4572	1	Bracket-Clamp, Hose
12	32144-14	2	Screw-HWH
13	75-1390-01	1	Cover-Access, Front
14	75-1410-01	1	Plate-Access, Floor
15	3234-7	1	Screw-HHF
15	75-6840	4	Knob - Knurled
18	3234-5	1	Screw-HHF
19	75-5780	1	Hinge-Steel
20	3256-3	4	Washer-Flat
23	75-0630	1	Tread-Foot, Center
24	32128-33	3	Nut-HF
25	93-8744	3	Pop - Rivet

Ref. No.	Part No.	Qty.	Description
26	52-2900	4	Washer
27	74-5950	3	Latch-Swell
28	94-1410	1	Holder-Can, Beverage
29	93-9180-03	1	Cover-Tool Box
30	104-1400	1	Decal - Service Instructions, Danish
30	104-1401	1	Decal - Service Instructions, Dutch
30	104-1402	1	Decal - Service Instructions, Finnish
30	104-1405	1	Decal - Service Instructions, Italian
30	104-1404	1	Decal - Service Instructions, German
30	104-1403	1	Decal - Service Instructions, French
30	104-0081	1	Decal-Service Instructions
30	104-1408	1	Decal - Service Instructions, Portuguese
30	104-1407	1	Decal - Service Instructions, Norwegian
30	104-1406	1	Decal - Service Instructions, Japanese

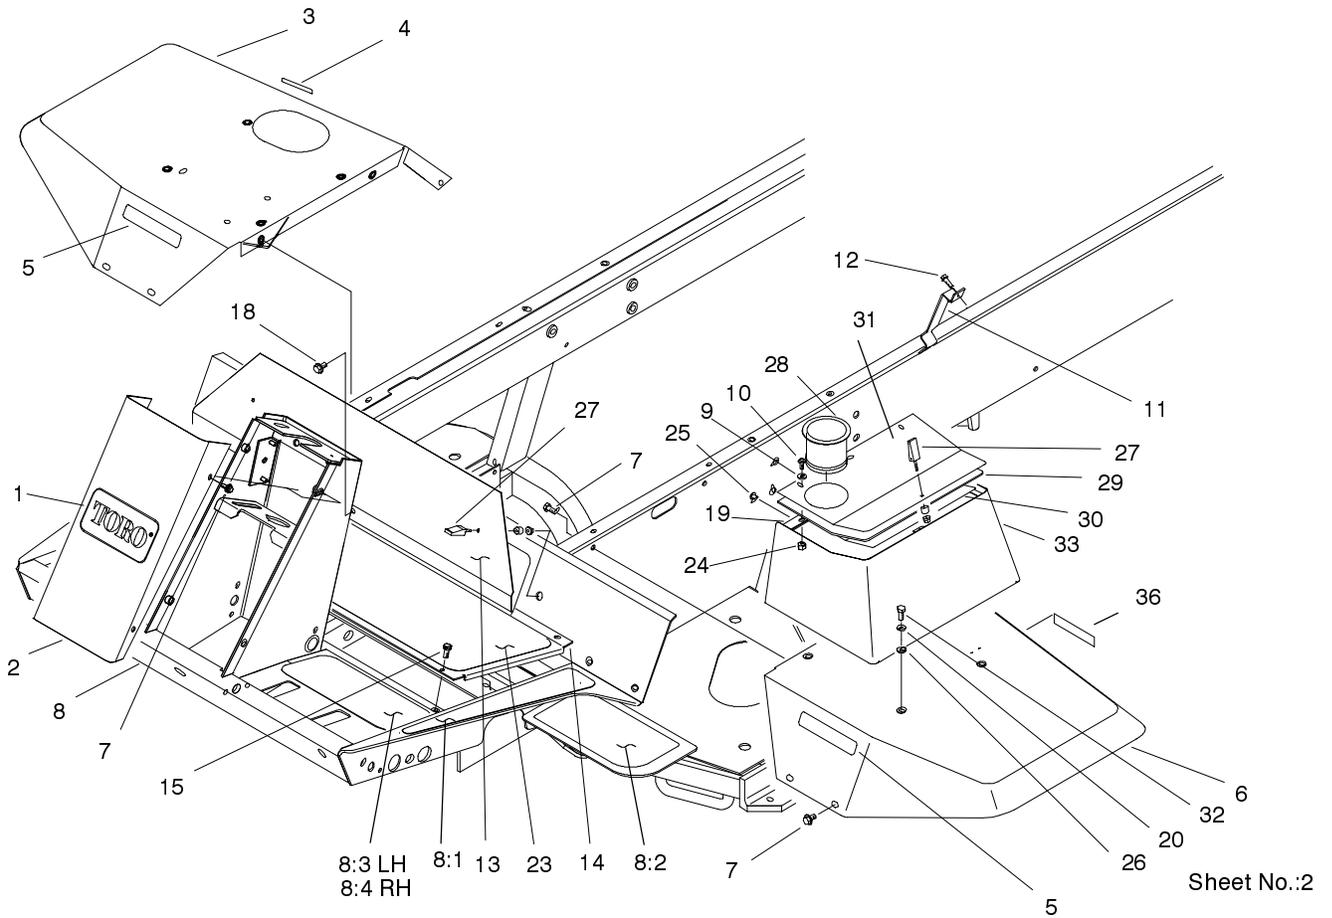


Frame And Body Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
30	104-1409	1	Decal - , Service Instructions, Spanish
30	104-1410	1	Decal - Service Instructions, Swedish
30	104-1434	1	Decal - Service Blank
31	93-1262	1	Decal-Hillside
32	322-3	4	Screw-HH
33	75-5810-03	1	Box-Tool
36	93-6680	1	Decal - Diesel Only

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

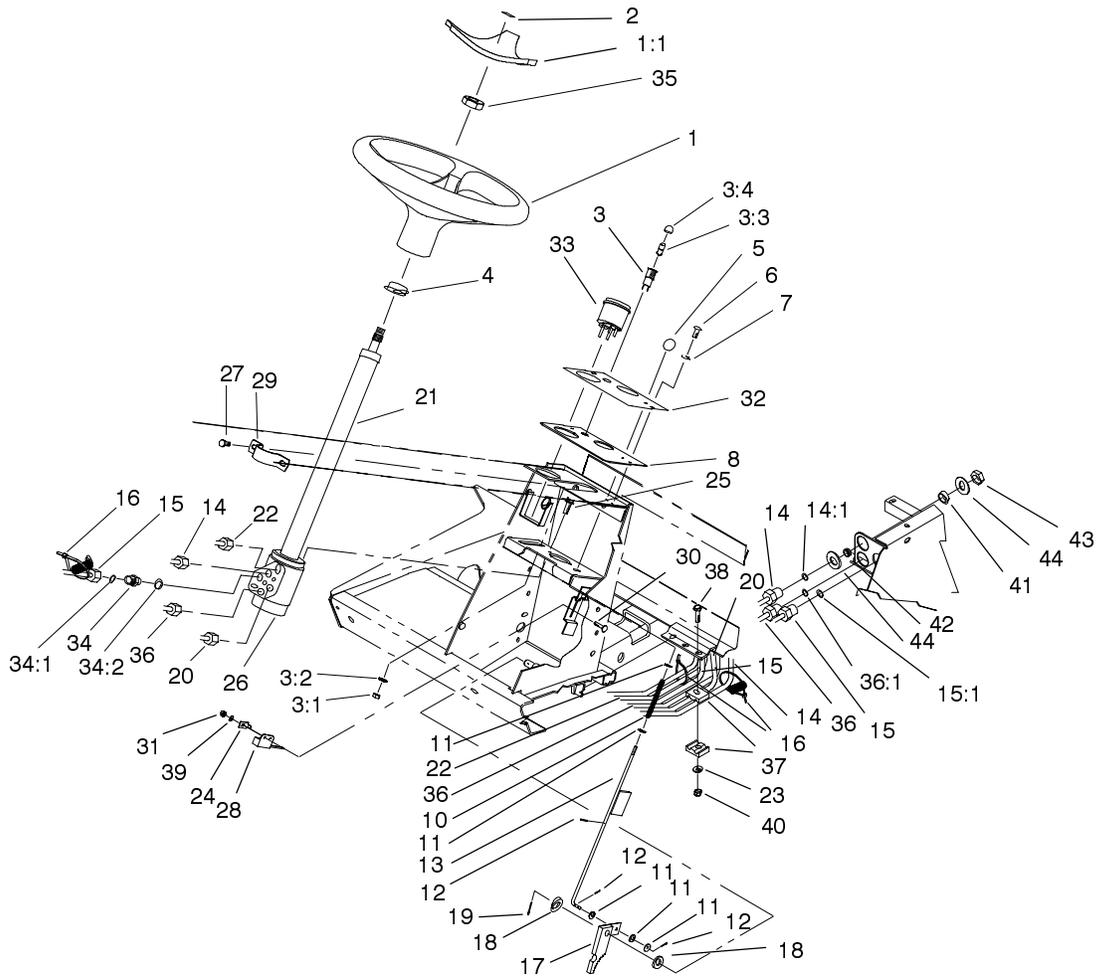


Sheet No.:3

Steering Tower Assembly

Ref. No.	Part No.	Qty.	Description
1	98-1471	1	Wheel - Steering 14"
1:1	98-1468	1	Cover - Wheel, Steering
2	98-1459	1	Decal-Toro
3	44-2210	1	Light-Indicator, Red
3:1	218-535	1	Nut-Hex
3:2	218-536	1	Washer-Lock
3:3	93-7480	1	Led-Miniature Bayonet
3:4	218-533	1	Lens
4	21-9260	1	Cover-Dust
5	233-17	1	Knob
6	87-6620	2	Screw-Special
7	3256-1	2	Washer-Flat
8	93-7998-03	1	Plate - Instrument
10	95-1821-03	1	Spring - Compression
11	3256-22	5	Washer-Flat
12	3272-5	3	Pin-Cotter
13	104-0096	1	Rod ASM
14	98-3912	1	Tube ASM
14:1	237-22	1	O-Ring
15	98-3910	1	Tube ASM
15:1	237-22	1	O-Ring
16	3290-378	3	Tie-Cable
17	63-7900-03	1	Rack
18	3256-26	2	Washer-Flat

Ref. No.	Part No.	Qty.	Description
19	3272-10	1	Pin-Cotter
20	98-3908	1	Tube ASM
21	94-9951	1	Column - Steering
22	98-3909	1	Tube ASM
23	3256-23	3	Washer-Flat
24	100-4872	1	Plate-Switch, Neutral
25	33103-020	3	Screw-HHF
26	99-8959	1	Control - Steering
27	32144-11	2	Screw-TAP
28	104-1414	1	Sensor-Ferrous Proximity (Nc)
29	75-2810	1	Bracket-Column, Steering
30	104-1450	1	Bolt-CARR
31	3296-2	1	Nut-Lock
32	93-1263	1	Decal-Tower
33	85-4420	1	Speedometer
34	340-2	5	Adapter
34:1	237-22	1	O-Ring
34:2	237-42	1	O-Ring
35	94-9952	1	Nut - Hex
36	98-3911	1	Tube ASM
36:1	237-22	1	O-Ring
37	56-7973	6	Clamp-Tube
38	322-7	3	Screw-HH

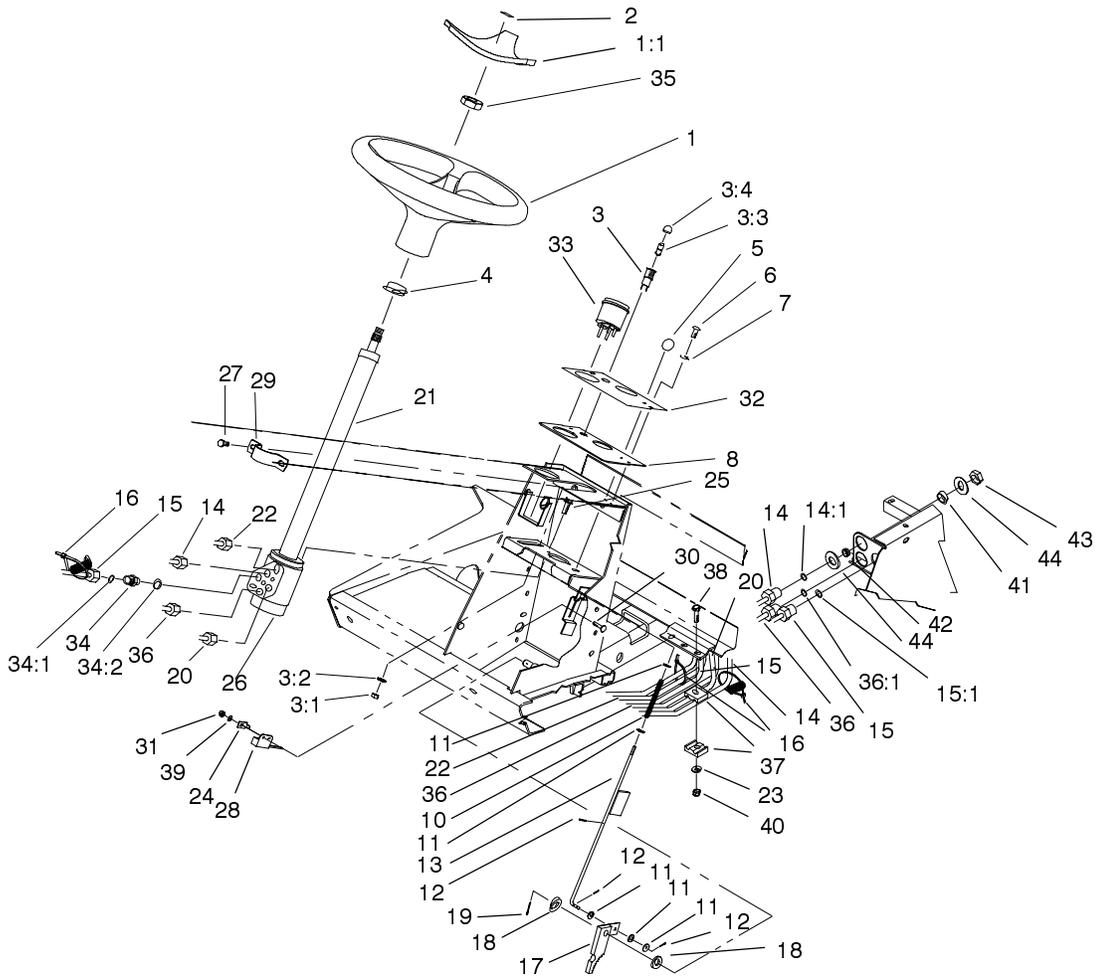


Sheet No.:3

Steering Tower Assembly (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
39	3256-14	1	Washer-Flat				
40	3296-29	3	Nut-Lock, NI				
41	69-8970	3	Spacer				
42	240-4	3	Rubber Grommet				
43	340-70	3	Locknut-Bulkhead				
44	69-8940	6	Washer				

PROTOTYPE

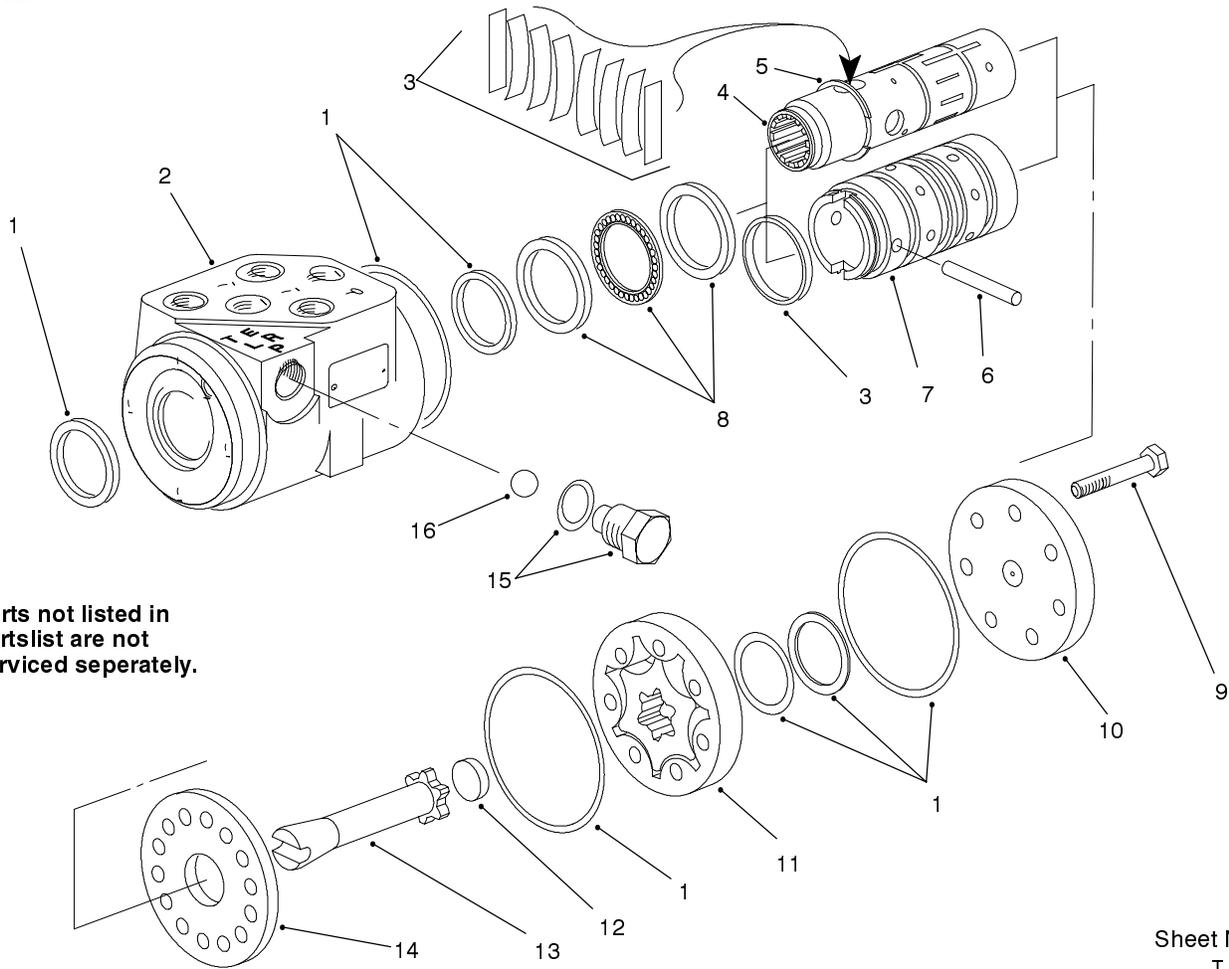


Sheet No.:A1
T-3216

Steering Valve Assembly No. 99-8959

Ref. No.	Part No.	Qty.	Description
1	94-4099	1	Kit - Seal
3	94-4095	1	Kit - Spring, Centering
5	94-4098	1	Ring - Retaining
6	94-4094	1	Pin
8	94-4096	1	Kit - Bearing
9	94-4088	7	Screw - Cap
10	94-4089	1	Cap - End
11	94-4090	1	Gerotor
12	94-4091	1	Spacer
13	94-4093	1	Drive
14	94-4092	1	Plate - Wear
15	94-4097	1	Plug ASM
16	94-4100	1	Ball


Ref. No.	Part No.	Qty.	Description
<p style="font-size: 48px; opacity: 0.5; font-weight: normal;">PROTOTYPE</p>			

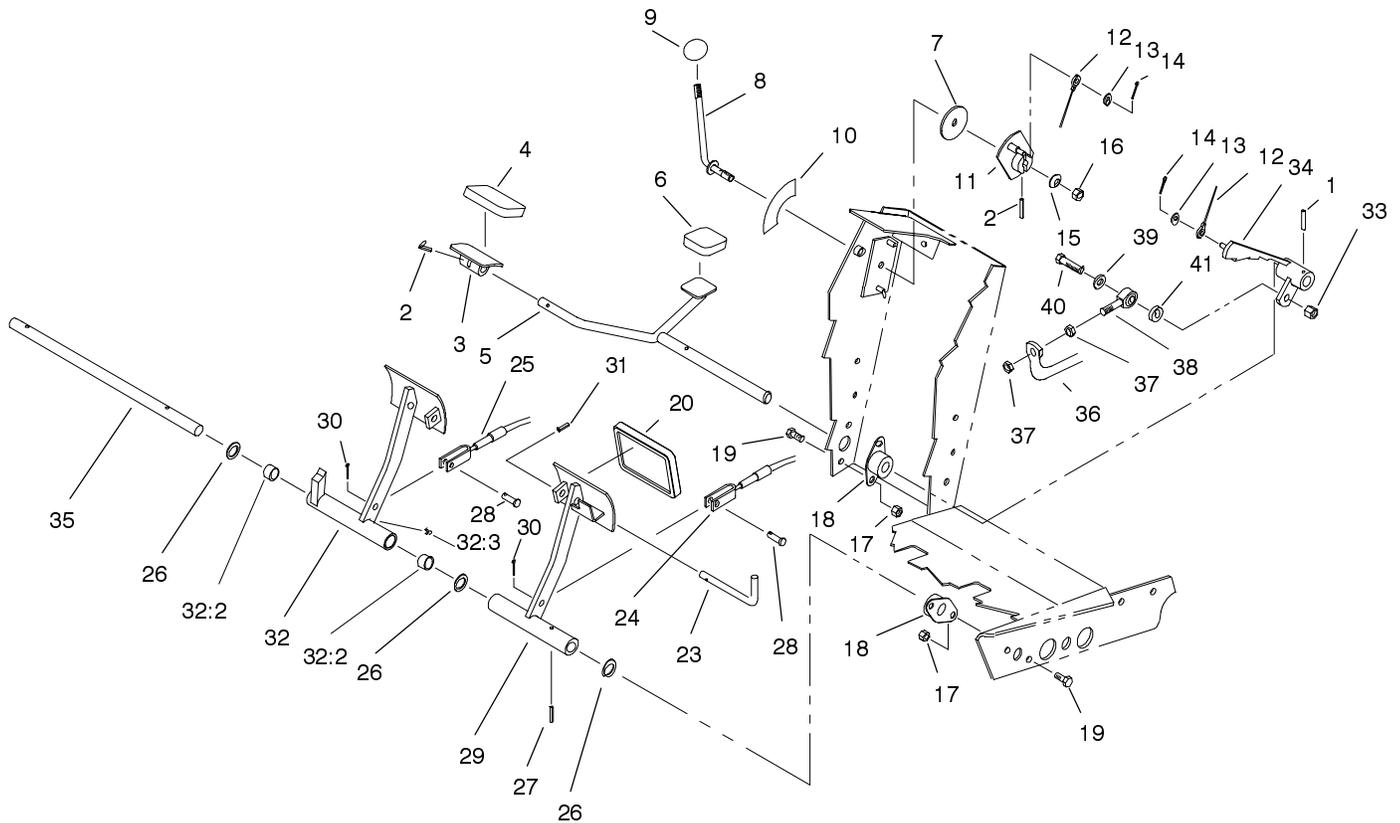

Sheet No.:4

Traction And Brake Pedal Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	32121-6	1	Pin-Roll	28	283-58	2	Pin-Clevis
2	32121-45	2	Pin-Spring	29	75-1440-03	1	Pedal-Brake, LH
3	49-6440-03	1	Pedal-Forward	30	3272-10	2	Pin-Cotter
4	74-9100	1	Pad-Pedal, Forward	31	32121-50	1	Pin-Spring
5	75-2970	1	Pedal-Traction	32	75-1430	1	Pedal-Brake, RH
6	74-9110	1	Pad-Pedal, Reverse	32:2	256-42	2	Bushing
7	75-6550	1	Disc-Friction	32:3	302-5	1	Fitting - Lube
8	75-6490	1	Lever	33	3296-39	1	Nut-Lock, NI
9	233-42	1	Knob	34	75-3270-03	1	Hub-Pivot, Traction
10	93-6699	1	Decal - Fast/Slow	35	75-1470	1	Pin-Pivot, Brake
11	75-6510	1	Bracket-Lever	36	75-2170-03	1	Tube-Control, Pump
12	75-6580	1	Cable - Pedal	37	3220-3	2	Nut-Jam
13	3256-22	2	Washer-Flat	38	2411-36	1	Bearing-End, Rod
14	3272-2	2	Pin-Cotter	39	3256-24	1	Washer-Flat
15	3290-461	1	Washer-Spring	40	323-9	1	Screw-HH
16	3296-59	1	Nut-Lock, NI	41	5-0652	1	Washer
17	3296-29	8	Nut-Lock, NI				
18	256-236	4	Bearing-Mount, Flange				
19	322-3	8	Screw-HH				
20	93-8742	2	Footpad - Brake				
23	63-7880	1	Pin-Latch, Brake				
24	63-7733	1	LH Brake Cable ASM				
25	63-7732	1	RH Brake Cable ASM				
26	3256-69	3	Washer-Flat				
27	32121-16	1	Pin-Spring				

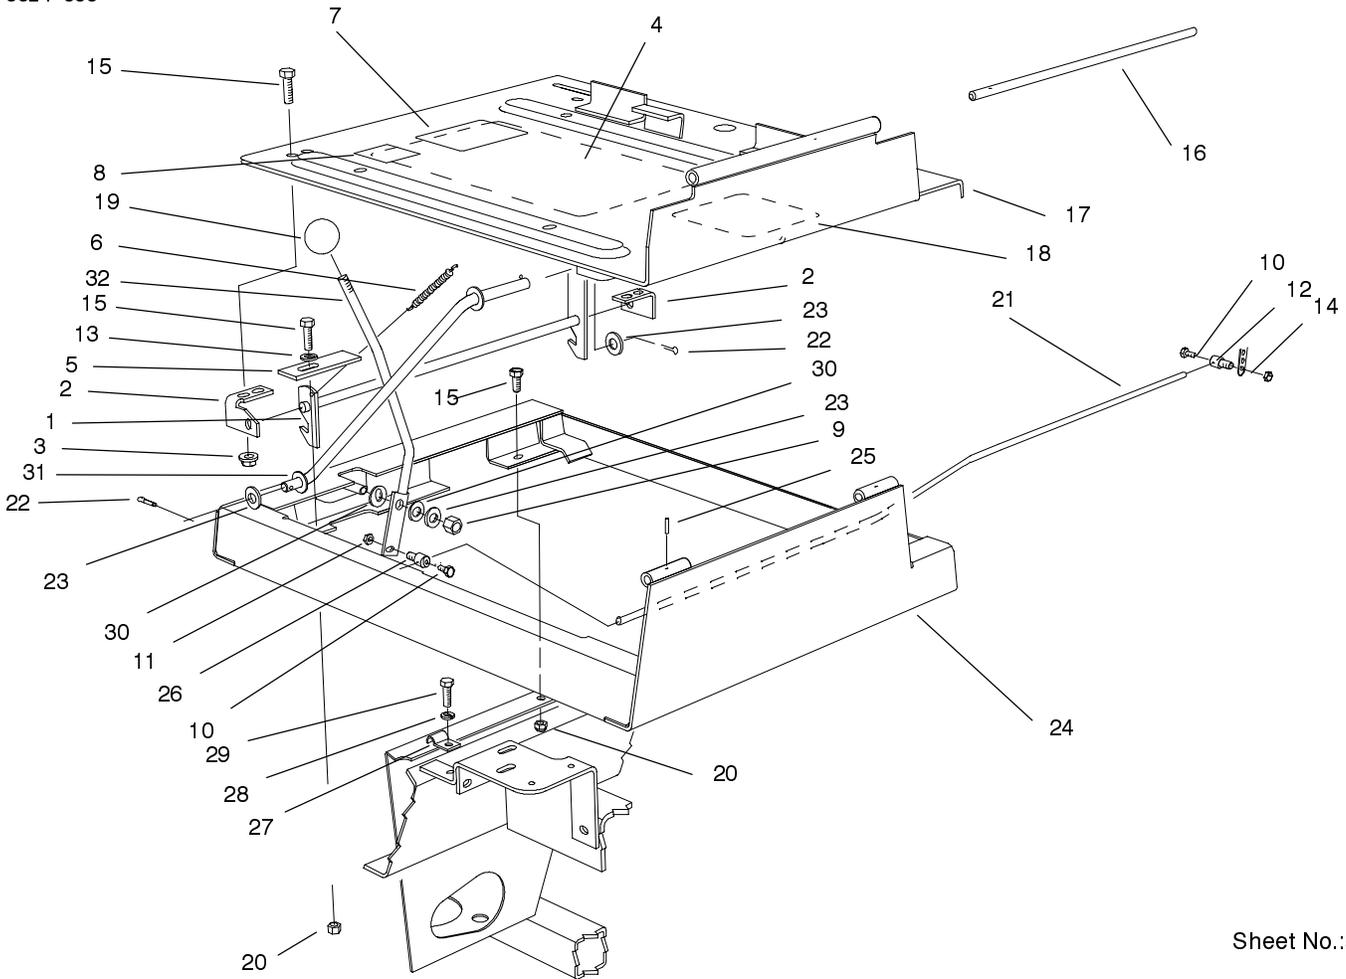


Sheet No.:5

Seat Frame And Throttle Assembly

Ref. No.	Part No.	Qty.	Description
1	98-2354-03	1	Latch-Seat
2	98-2353	2	Bracket-Latch, Seat
3	32128-25	4	Nut-Flange
4	104-0082	1	Decal - Clip / Solenoid Instructions
5	98-9302	1	Plate-Stop, Idler
6	66-4190-03	1	Spring-Idler, Clutch
7	92-5524	1	Decal-Rating, Noise
8	63-9920	1	Decal-Level, Noise
9	3296-39	1	Nut-Lock, NI
10	25-8640	2	Screw-Machine, HH
11	3296-3	1	Nut-Lock NI
12	98-9311	1	Swivel - Throttle
13	3256-23	1	Washer-Flat
14	3296-20	1	Nut-Lock NI
15	322-3	8	Screw-HH
16	75-3400	1	Shaft-Pivot, Seat
17	98-2350-03	1	Plate-Seat
18	93-8060	1	Decal - Reels
19	233-42	1	Knob
20	3296-29	4	Nut-Lock, NI
21	98-3926	1	Cable-Throttle
22	3272-10	2	Pin-Cotter
23	3256-24	3	Washer-Flat
24	98-2352-03	1	Frame-Seat
25	32121-38	1	Pin-Roll

Ref. No.	Part No.	Qty.	Description
26	93-0021	1	Swivel-Cable, Throttle
27	3-6657	1	Clip-Skid
28	3253-3	1	Washer-Lock/Sp
29	321-4	1	Screw-HH
30	66-2920	2	Washer-Friction, Throttle
31	75-3680-03	1	Rod-Seat
32	75-3430-03	1	Lever-Throttle

PROTOTYPE

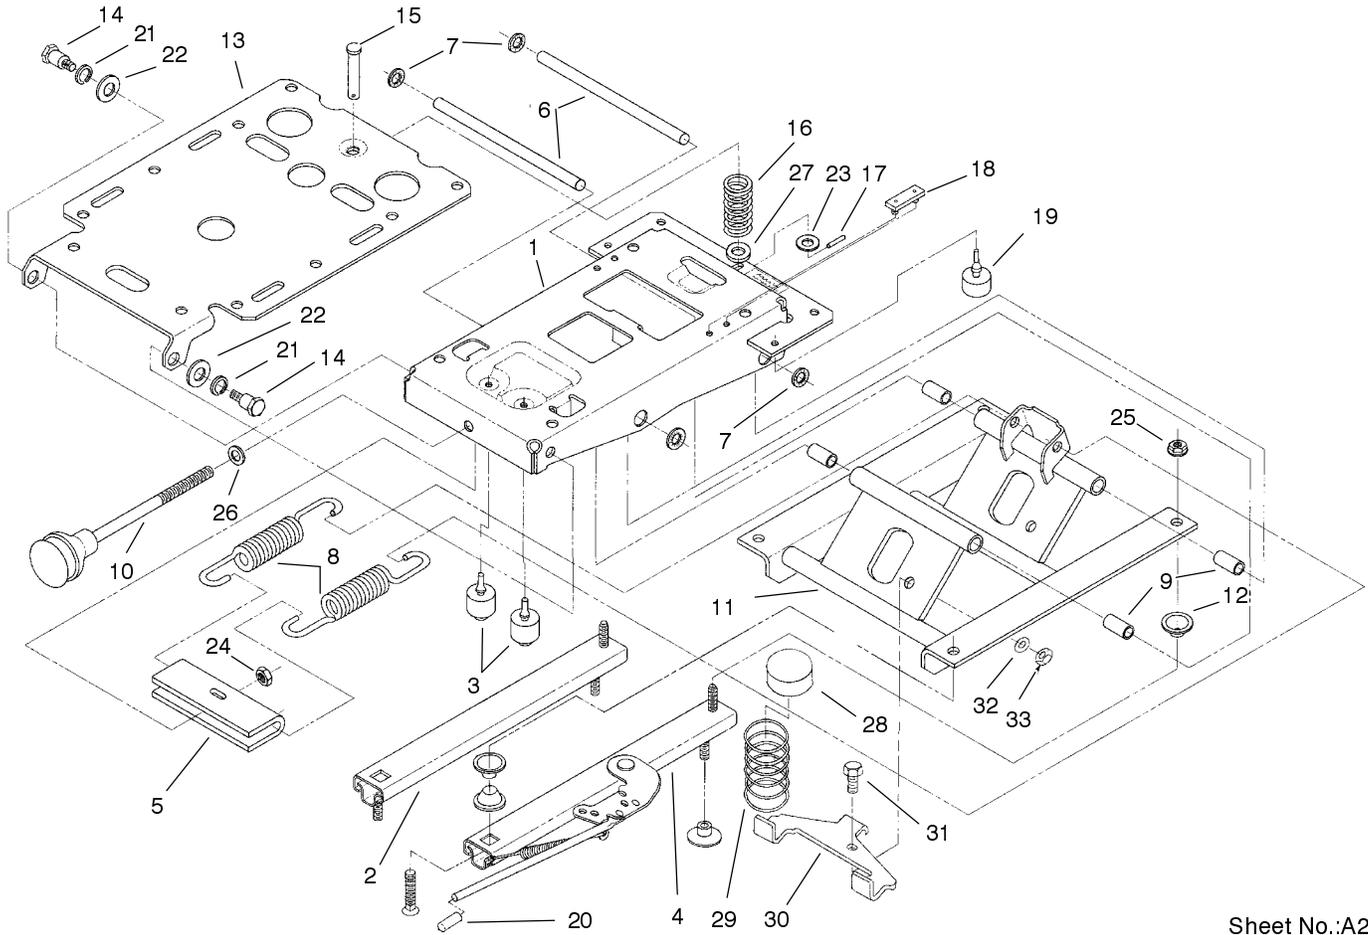


Seat Suspension Assembly No. 75-3000

Ref. No.	Part No.	Qty.	Description
1	75-3480	1	Frame-Upper
2	66-8530	1	Adjuster
3	66-8520	2	Bumper-Downstop
4	82-9060	1	Adjuster w/Handle
5	77-2870	1	Hanger-Spring
6	76-1910	2	Shaft-Pivot
7	66-8560	4	Nut-Push
8	76-1940	2	Spring-Extension
9	76-1920	4	Bearing-Sleeve
10	76-1930	1	Knob-Adjuster, Tension
11	66-8610	1	Frame-Lower
12	66-9290	6	Spacer-Suspension
13	75-3580	1	Plate-Seat
14	75-3510	2	Bolt
15	80-4860	1	Pin - Clevis
16	75-3530	1	Spring
17	75-3540	1	Pin-Roll
18	75-3550	2	Bumper
19	76-2940	2	Bumper
20	75-3570	1	Tip
21	3253-6	2	Washer-Lock/Sp
22	3256-26	2	Washer-Flat
23	3256-24	1	Washer-Flat
24	3296-44	1	Nut-Lock NI
25	32128-26	4	Nut-Flange

Ref. No.	Part No.	Qty.	Description
26	3256-46	1	Washer-Flat
27	3256-5	1	Washer-Flat
28	93-3164	2	Cap
29	93-3163	2	Spring
30	93-3165	1	Bracket
31	322-6	1	Screw-HH
32	3253-33	1	Washer-Lock
33	3217-6	1	Nut-Hex

PROTOTYPE

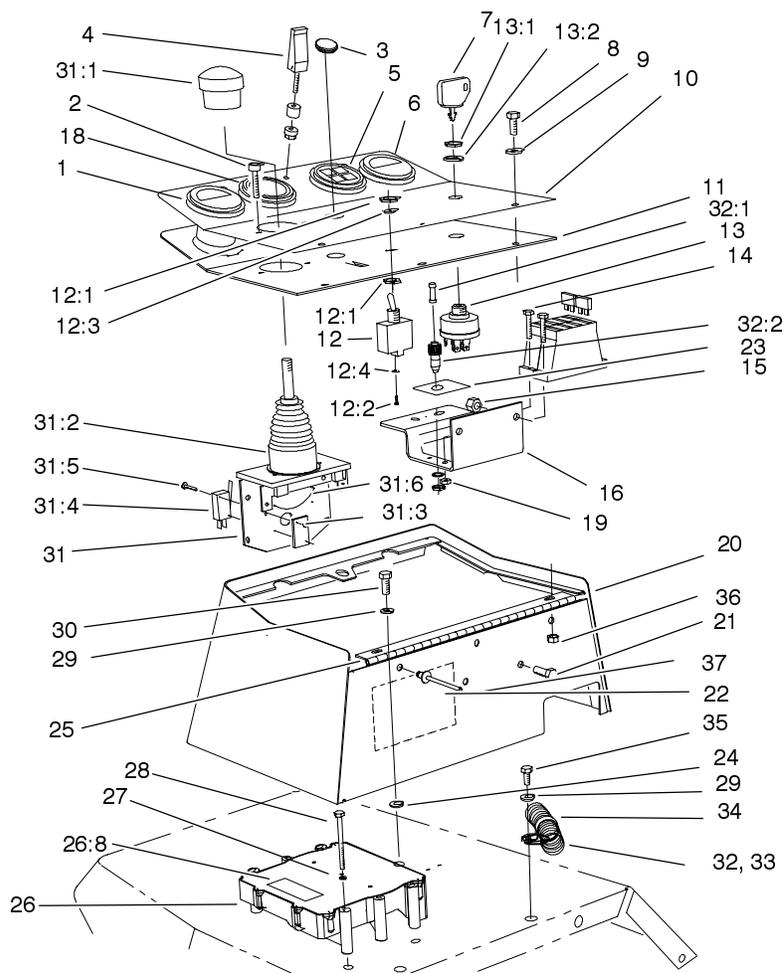


Sheet No.:7

Control Console Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9339	1	Gauge - Fuel	*18:2	3217-25	2	Nut-Hex
2	3273-26	2	Screw-HSH	19	3296-2	4	Nut-Lock
3	99-1087	1	Plug-Hole, Dash	20	75-5740-03	1	Box-Control
4	74-5950	1	Latch-Swell	21	321-39	2	Screw-HH
5	98-9306	1	Light - Warning	22	94-6767	1	Decal - Fuses
6	98-9308	1	Gauge - Temperature	23	98-9334	1	Decal - Controller
7	63-8360	1	Key-Ignition	24	52-2900	3	Washer
8	3258-166	3	Screw	25	75-5780	1	Hinge-Steel
9	3256-1	3	Washer-Flat	26	92-5720	1	Controller-Electronic
10	99-8961	1	Panel-Control	26:8	93-8053	1	Decal
11	75-6270-03	1	Cover-Box, Control	27	3253-3	2	Washer-Lock/Sp
12	99-8352	1	Switch - Backlap	28	321-15	2	Screw-HH
12:1	218-498	2	Locknut-Hex	29	3256-3	3	Washer-Flat
12:2	218-588	3	Screw	30	322-3	2	Screw-HH
12:3	218-589	1	Washer	31	98-2195	1	Joystick
12:4	3253-19	3	Washer-Lock/Sp	31:1	3290-489	1	Knob
13	27-2360	1	Switch-Key	31:2	3290-488	1	Boot
13:1	218-446	1	Nut-Hex	31:3	3290-354	2	Nut-Speed
13:2	218-447	1	Washer-Lock	31:4	218-590	2	Switch
14	32105-13	4	Screw-Shh	31:5	3290-93	4	Screw-Pan Hd
15	3296-42	2	Nut-Lock	*31:6	93-3625	1	Spring - Return
16	93-7587	1	Bracket-Fuse Block/Panel	32	98-3946	1	Harness-Wire
18	66-2950	1	Gauge-Hourmeter	32:1	219-19	1	Lamp-Incandescent, reen
*18:1	3255-20	2	Washer-Lock, Ext. Tooth	32:2	85-4491	1	Light-Indicator
				33	94-6343	1	Decal-I.d., Wire


* Not illustrated

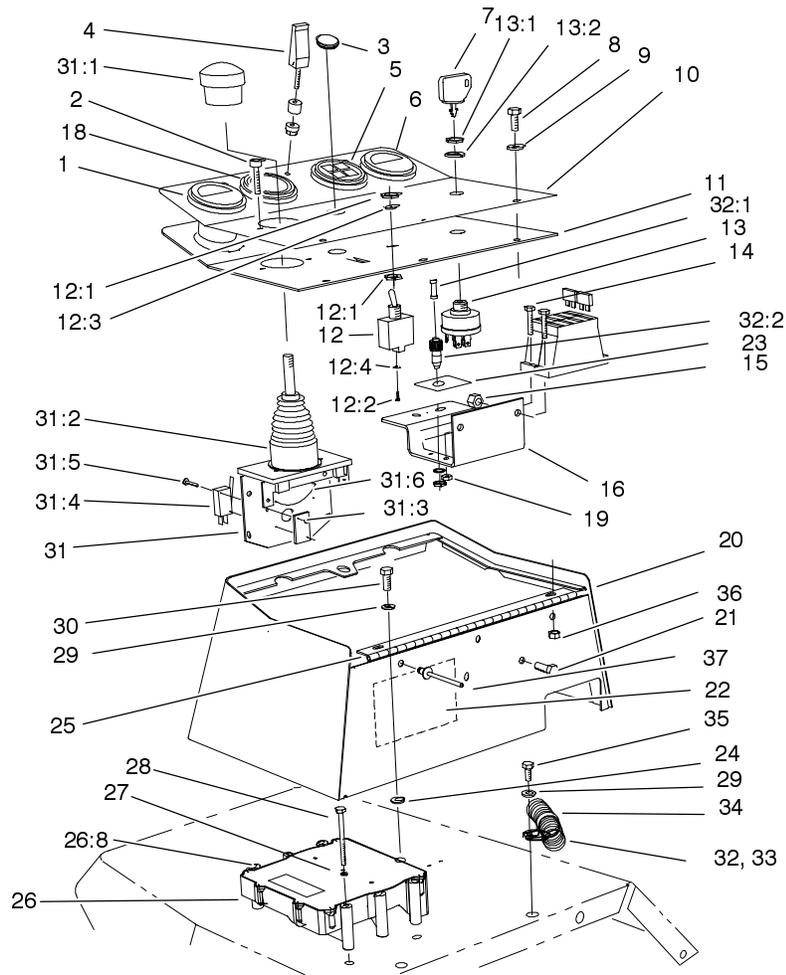

Sheet No.:7

Control Console Assembly (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
34	2412-126	1	R-Clamp				
35	322-5	1	Screw-HH				
36	32128-33	3	Nut-HF				
37	93-8744	3	Pop - Rivet				
PROTOTYPE							

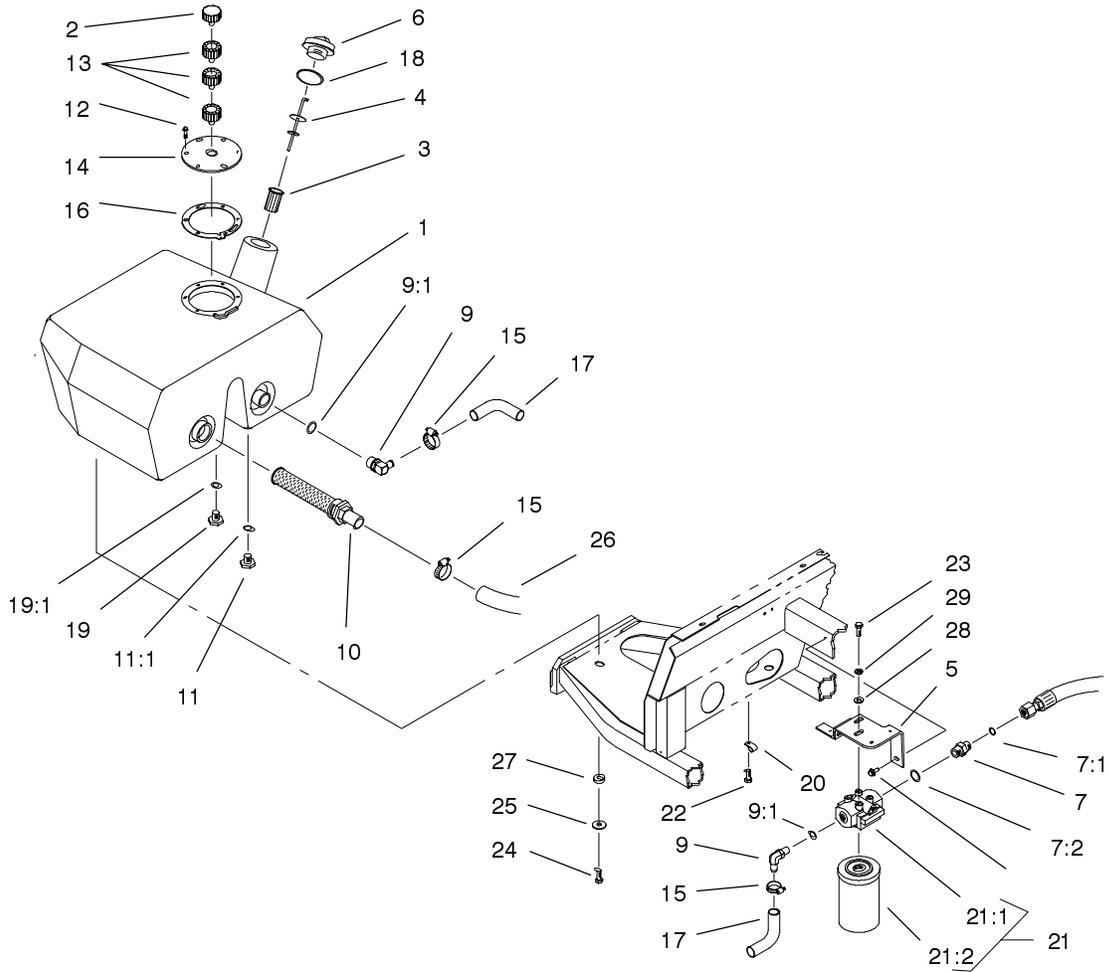


Sheet No.:8

Hydraulic Filter And Reservoir Assembly

Ref. No.	Part No.	Qty.	Description
1	104-0085	1	Tank - Oil
2	68-6150	1	Breather-Air
3	61-2790	1	Filter-Screen
4	94-9411	1	Dipstick
5	98-3917-01	1	Bracket-Filter
6	93-7498	1	Plug-Plastic
7	340-91	1	Adapter
7:1	237-58	1	O-Ring
7:2	237-146	1	O-Ring
8	32144-14	2	Screw-HWH
9	23-8910	2	Stem-Barb, 90°
9:1	237-146	1	O-Ring
10	104-1433	1	Strainer-Suction
11	353-508	1	Plug-O-Ring
11:1	237-42	1	O-Ring
12	33104-020	6	Screw-HHF
13	92-8020	3	Adapter - Breather
14	93-7588	1	Cover - Tank
15	2412-34	3	Clamp-Hose
16	93-7499	1	Gasket
17	98-3931	2	Hose-Formed
18	237-101	1	O-Ring
19	353-550	1	Plug-Hydraulic
19:1	237-79	1	O-Ring
20	2412-93	2	R-Clamp
21		1	Filter Assembly-Oil


Ref. No.	Part No.	Qty.	Description
21:1	104-0080	1	Filter Head ASM
21:2	94-2621	1	Filter Element
22	32144-10	2	Screw-HWH
23	323-4	2	Screw-HH
24	33105-025	3	Screw-HHF
25	63-8410	3	Washer
26	75-6870	1	Hose-Inlet, Pump
27	240-11	3	Grommet-Mount, Tank
28	3256-24	2	Washer-Flat
29	3253-21	2	Washer-Lock

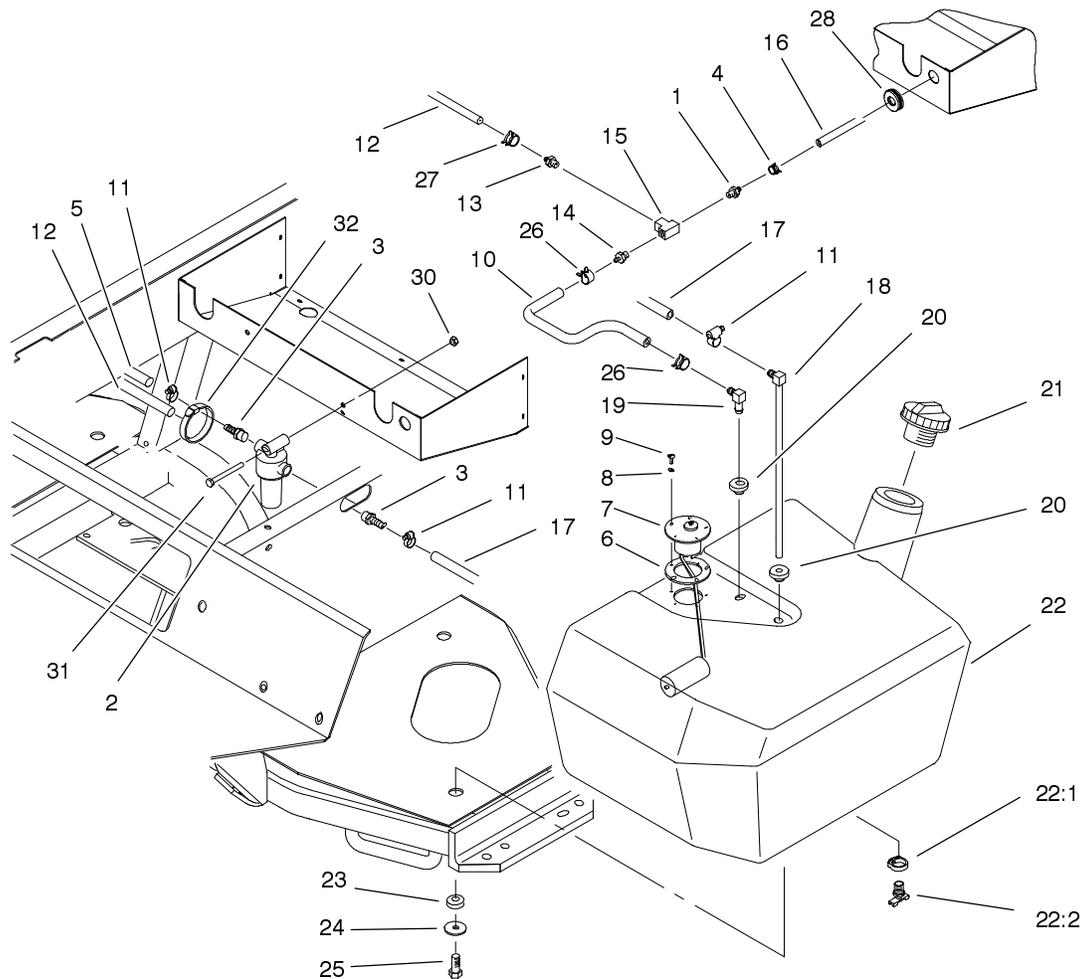

Sheet No.:9

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	304-73	1	Connector-Hose	23	240-11	3	Grommet-Mount, Tank
2	99-8351	1	Filter - Fuel, Inline	24	63-8410	3	Washer
3	353-783	2	Fitting-Pump	25	33105-025	3	Screw-HHF
4	2412-98	1	Clamp	26	92-2379	2	Clamp-Hose
5	104-0078	1	Hose-Fuel	27	2412-146	2	Clamp-Hose
6	62-7650	1	Gasket	28	240-9	1	Grommet
7	63-7640	1	Sender-Fuel	30	3296-42	1	Nut-Lock
8	3253-15	5	Washer-Lock/Sp	31	321-11	1	Screw-HH
9	32122-24	5	Screw-Pth	32	3290-378	1	Tie-Cable
10	93-2042	1	Hose - Fuel				
11	2412-108	4	Clamp-Worm				
12	104-0077	1	Hose-Fuel				
13	354-22	1	Fitting-Barb				
14	354-21	1	Fitting-Barb				
15	354-20	1	Fitting-Tee				
16	98-9338	1	Hose - Fuel				
17	104-0076	1	Hose-Fuel				
18	66-8121	1	Standpipe				
19	46-6550	1	Elbow-Connector, 90 DEG				
20	46-6560	2	Bushing				
21	93-3102	1	Cap-Fuel				
22	104-0084	1	Tank - Fuel				
22:1	2412-36	1	Clamp-Hose				
22:2	304-46	1	Draincock				

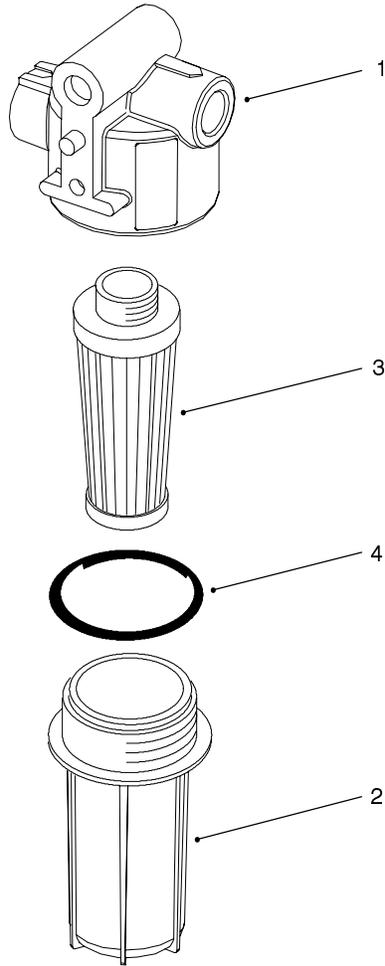

2 — [2 & 4]

4 — [3 & 4]


Sheet No.:A3
T-3100

Fuel Filter Assembly No. 99-8351

Ref. No.	Part No.	Qty.	Description
1	99-8356	1	Kit - Head, w/Label
2	99-8357	1	Kit-Bowel, w/O-Ring
3	99-8358	1	Kit-Element, w/O-Ring
4	99-8359	1	O-Ring Replacement

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

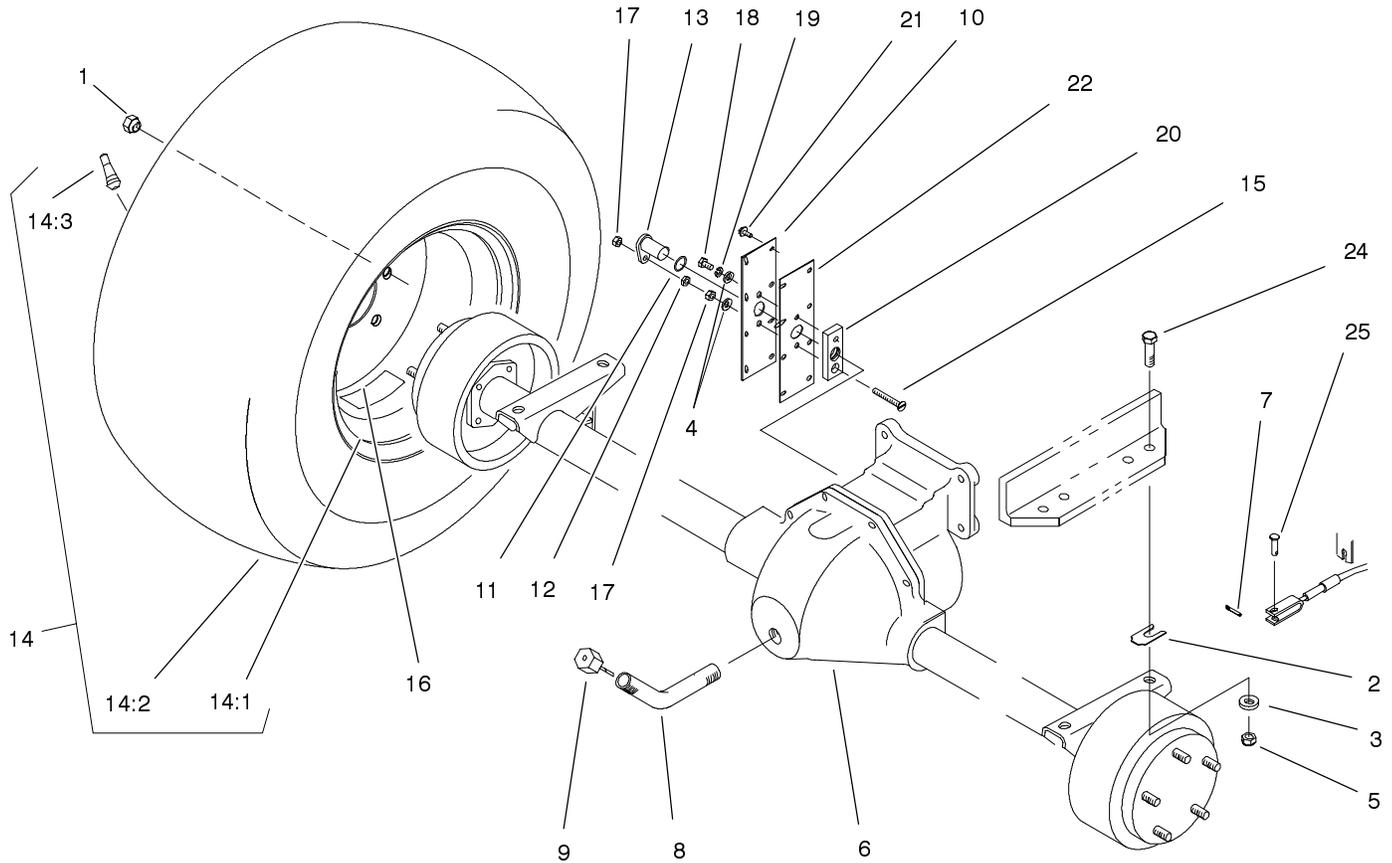


Sheet No.:10

Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	23-7270	10	Nut-Wheel
2	42-6080	5	Shim-Axle
3	66-6480	4	Washer
4	3256-22	2	Washer-Flat
5	3296-48	4	Nut-Lock NI
6	99-6981-03	1	Drive Axle
7	3272-10	2	Pin-Cotter
8	75-6850	1	Tube-Fill, Oil
9	27-3710	1	Dipstick
10	85-4330	1	Cover-Gear
11	237-181	1	O-Ring
12	3218-1	1	Nut-Jam
13	85-4350	1	Sensor - Geartooth
14		2	Wheel And Tire ASM
14:1	99-6984	1	Wheel ASM
14:2	98-2373	1	Tire
14:3	232-27	1	Stem-Valve
15	32108-9	1	Screw-FH
16	76-8730	2	Decal-Torque, Wheel
17	3296-56	2	Nut-Lock, NI
18	321-2	1	Screw-HH
19	3253-3	1	Washer-Lock/Sp
20	85-4340	1	Plate-Sensor Mounting
21	32144-112	8	Screw-Forming, Thread

Ref. No.	Part No.	Qty.	Description
22	92-5797	1	Gasket - Axle
24	324-7	4	Screw-HH
25	283-58	2	Pin-Clevis

PROTOTYPE

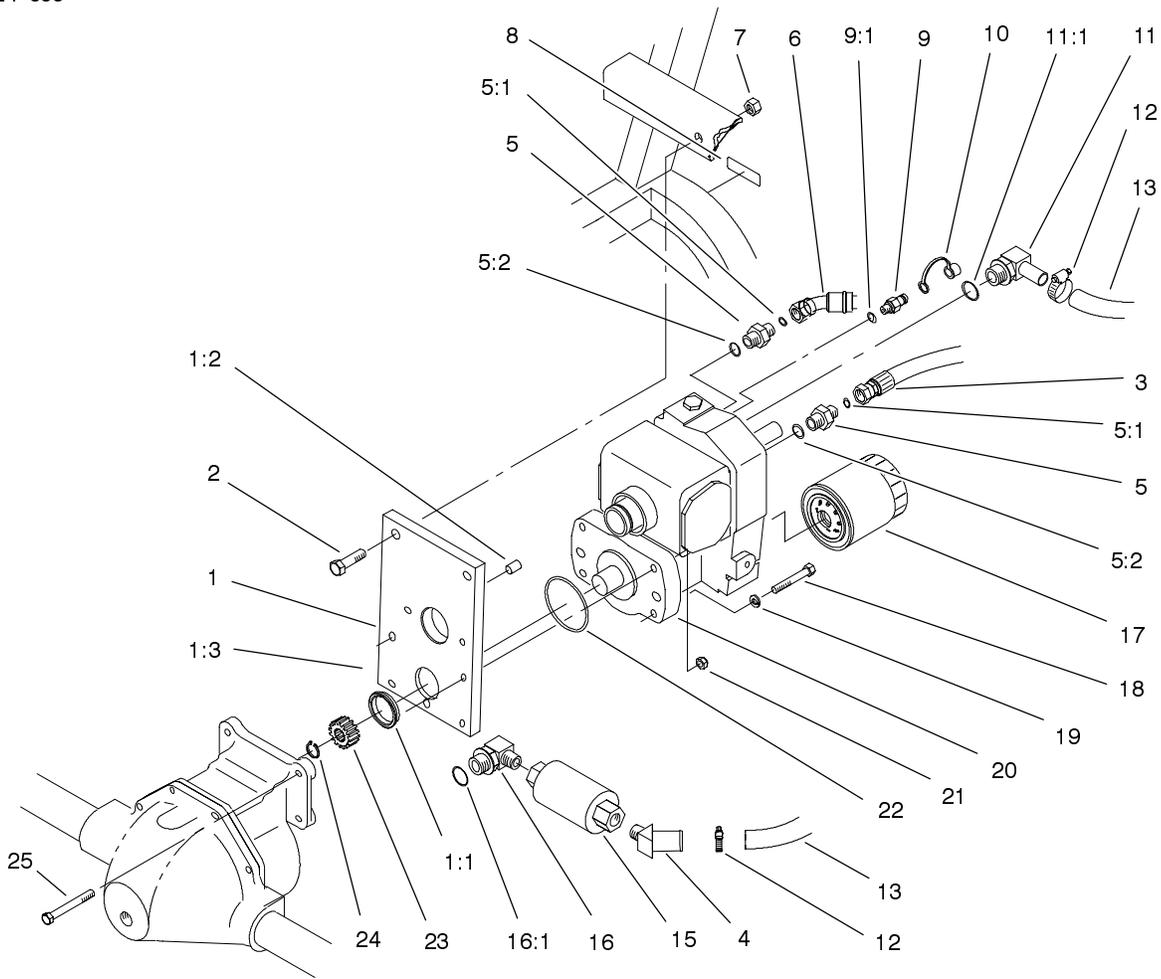


Sheet No.:11

Transmission Assembly

Ref. No.	Part No.	Qty.	Description
1	92-4846	1	Transmission Support ASM
1:1	75-3110	1	Transmission Collar
1:2	92-4808	1	Sleeve-Transmission
1:3	92-4809	1	Transmission Support
2	325-7	2	Screw-HH
3	104-0073	1	Hose ASM-Hydraulic
4	354-72	1	Fitting
5	340-3	2	Adapter
5:1	237-22	1	O-Ring
5:2	237-79	1	O-Ring
6	104-0072	1	Hose ASM-Hydraulic
7	3296-23	2	Nut-Lock, NI
8	93-6691	1	Decal-Bolt, Eccentric
9	354-77	1	Fitting-Quick
9:1	237-78	1	O-Ring
10	354-79	1	Cap - Fitting, Yellow
11	75-4720	1	Fitting-Line, Suction
11:1	237-81	1	O-Ring
12	2412-129	2	Clamp-Hose
13	75-6350	1	Hose
15	75-6340-03	1	Filter
16	354-75	1	Fitting
16:1	237-81	1	O-Ring
17	75-1330	1	Element-Filter
18	323-12	2	Screw-HH

Ref. No.	Part No.	Qty.	Description
19	3253-21	2	Washer-Lock
20	75-0012	1	Transmission
21	3296-39	2	Nut-Lock, NI
22	237-161	1	O-Ring
23	86-7220	1	Gear-Pinion
24	32151-62	1	Ring-Retaining
25	323-20	2	Screw-HH

PROTOTYPE

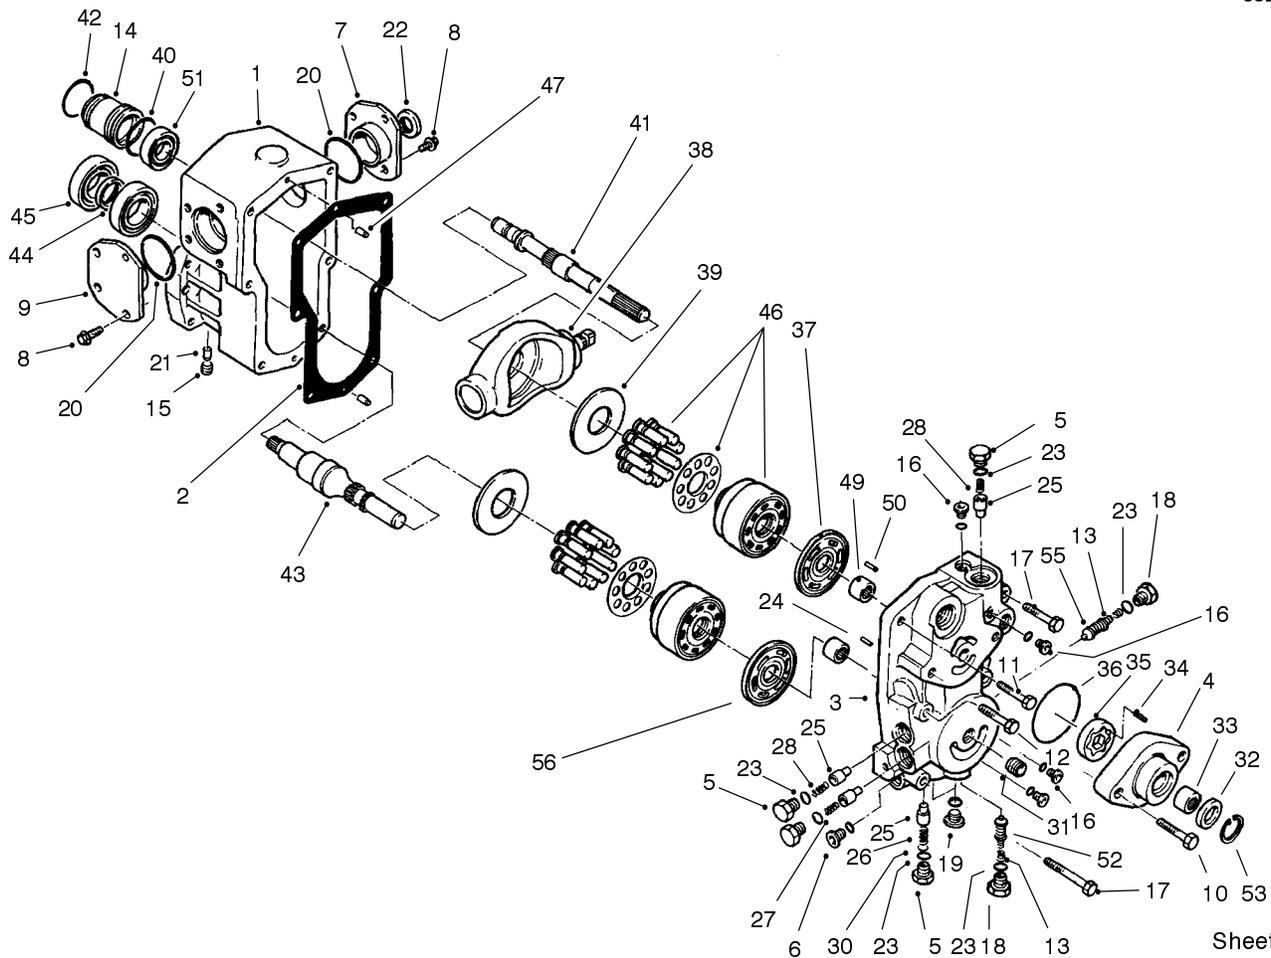


Sheet No.:A4

T-1006

Transmission Assembly No. 75-0012

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	75-0020	1	Housing	24	75-0250	1	Spring
2	75-0030	1	Gasket-Housing	25	75-0260	4	Valve - Relief
3	75-0040	1	Section-Center	26	75-0270	1	Spring
4	83-4780	1	Housing-Pump, Charge	27	75-0280	1	Spring
5	75-0060	4	Plug	28	75-0290	2	Spring
6	75-0070	1	Plug	30	75-0310	1	Shim
7	86-7520	1	RH Trunnion Cover ASM	31	75-0320	1	Nipple
8	75-0090	8	Capscrew-HH	32	75-0330	1	Seal-Lip
9	86-7530	1	LH Trunnion Cover ASM	33	75-0340	1	Bearing-Needle
10	75-0110	2	Capscrew-HH	34	75-0350	1	Pin
11	75-0120	1	Capscrew-HH	35	75-0360	1	Gerotor
12	75-0130	3	Capscrew-HH	36	75-0370	1	O-Ring
13	75-0140	1	Spring-Conical	37	75-0380	1	Plate-Valve
14	75-0150	1	Guide-Seal	38	75-0390	1	Plate-Swash
15	75-0160	1	Plug-Pipe	39	75-0400	2	Plate-Thrust
16	75-0170	4	Plug-Thread, Straight	40	75-0410	1	O-Ring
17	75-0180	2	Capscrew-HH	41	86-7540	1	Shaft-Pump
18	75-0190	2	Plug-Special	42	75-0430	1	Ring-Retaining
19	75-0200	2	Plug-Thread, Straight	43	75-0440	1	Shaft-Motor
20	75-0210	2	O-Ring	44	75-0450	1	Collar
21	75-0220	2	Pin	45	75-0460	2	Bearing-Ball
22	75-0230	1	Seal-Lip	46	75-0470	2	Kit-Block, Cylinder
23	75-0240	6	O-Ring	47	75-0480	2	Pin
				49	75-0500	2	Bearing-Needle
				50	75-0510	1	Pin
				51	75-0520	1	Bearing-Ball

3324-883

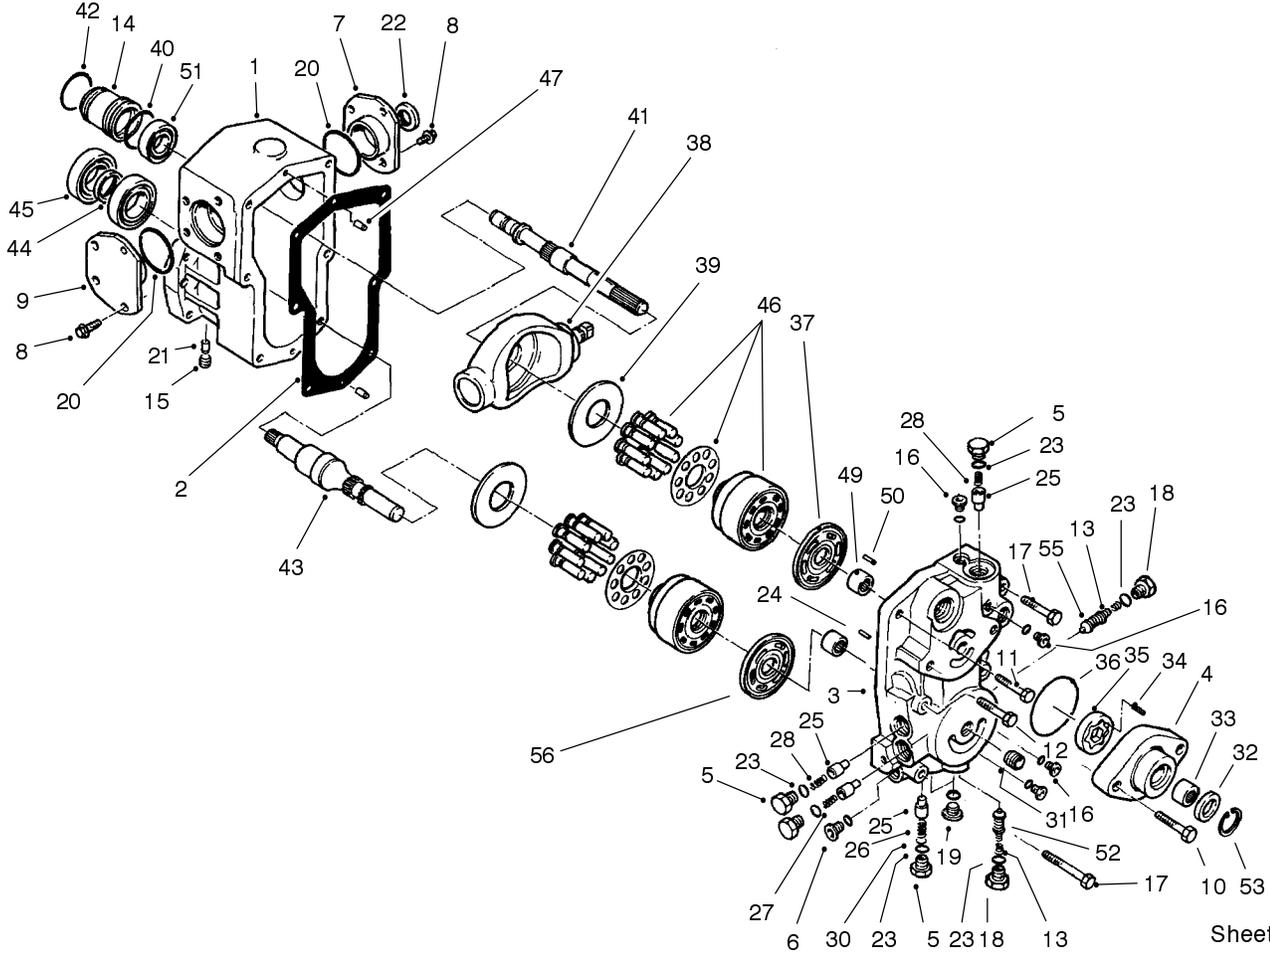


Sheet No.:A4
T-1006

Transmission Assembly No. 75-0012 (Continued)

Ref. No.	Part No.	Qty.	Description
52	75-6930	1	Valve-Screw
53	32120-74	1	Snap-Ring
55	93-0097	1	Valve-Screw
56	93-0083	1	Plate-Valve

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

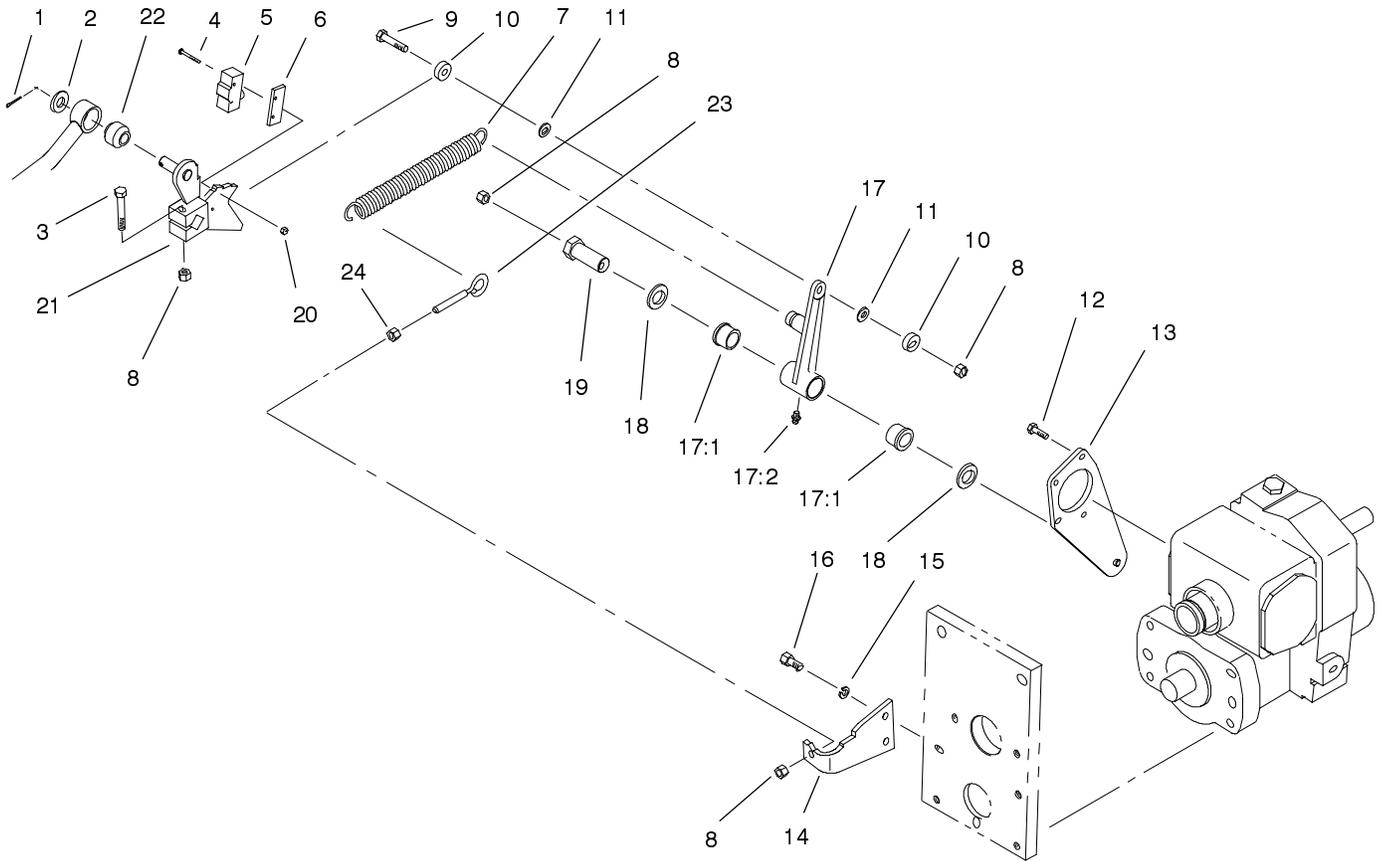


Sheet No.:12

Traction Control Assembly

Ref. No.	Part No.	Qty.	Description
1	3272-10	1	Pin-Cotter
2	3256-26	1	Washer-Flat
3	322-10	1	Screw-HH
4	32105-21	2	Screw-HH
5	29-6162	1	Switch-Micro
6	75-4130	1	Plate-Switch
7	76-9430-03	1	Spring-Ext.
8	3296-29	4	Nut-Lock, NI
9	322-7	1	Screw-HH
10	251-307	2	Bearing-Ball
11	75-5470	2	Spacer-Bearing
12	32144-22	4	Screw
13	75-4080-03	1	Plate-Traction
14	85-9900-03	1	Plate-Anchor, Spring
15	3253-4	2	Washer
16	322-3	2	Screw-HH
17	92-2581	1	Neutral Switch Arm ASM
17:1	256-113	2	Bushing-Flange
17:2	302-5	1	Fitting - Lube
18	3-6498	2	Washer-Thrust
19	76-8640	1	Stud - Traction
20	3296-9	2	Nut-Lock NI
21	75-4100-03	1	Control-Pump
22	23-2270	1	Bushing-Rubber

Ref. No.	Part No.	Qty.	Description
23	85-9910	1	Eyebolt
24	3217-6	1	Nut-Hex

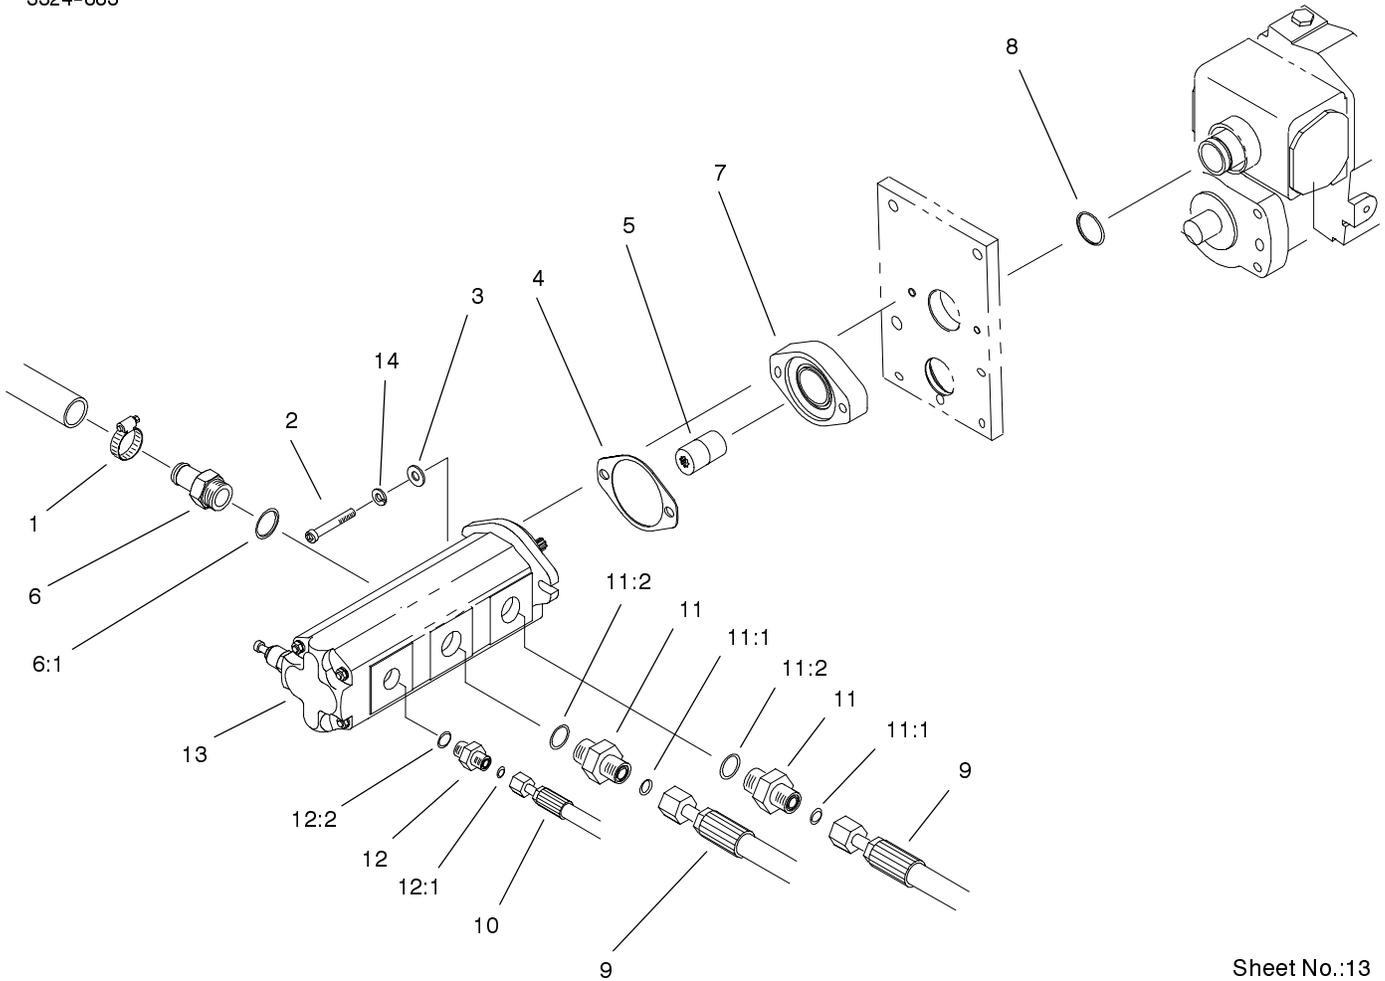


Sheet No.:13

Gear Pump Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	2412-34	1	Clamp-Hose
2	92-4037	2	Capscrew-HSH
3	3256-24	2	Washer-Flat
4	93-3604	1	Gasket
5	93-1396	1	Coupler
6	354-78	1	Connector-Hose
6:1	237-146	1	O-Ring
7	75-4400-03	1	Adaptor
8	237-163	1	O-Ring
9	104-0050	2	Hose ASM-Hyd
10	104-0051	1	Hose ASM-Hyd
11	340-7	2	Adapter
11:1	237-65	1	O-Ring
11:2	237-80	1	O-Ring
12	340-2	1	Adapter
12:1	237-22	1	O-Ring
12:2	237-42	1	O-Ring
13	99-6933	1	Gear Pump
14	3253-5	2	Washer-Lock/Sp

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

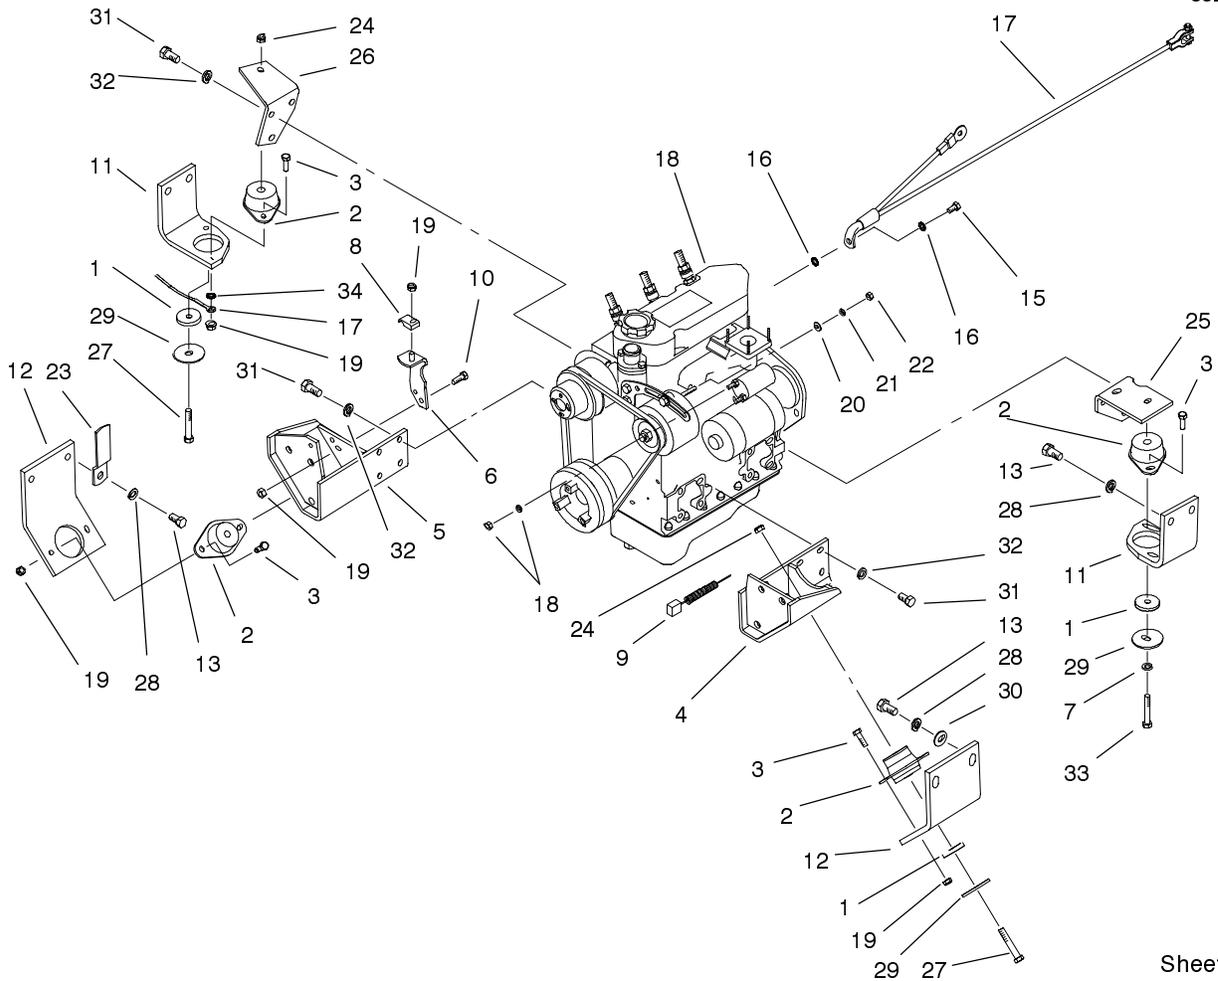


Sheet No.:14

Engine Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	83-1050	4	Spacer
2	83-1030	4	Mount-Engine
3	322-5	8	Screw-HH
4	98-4539-03	1	Bracket-Eng Mt, LH
5	98-4543-03	1	Bracket-Eng Mt, RH
6	98-9749	1	Plate - Throttle
7	3253-21	1	Washer-Lock
8	3-6657	1	Clip-Skid
9	99-3441	1	Harness - Wire
10	322-4	2	Screw-HH
11	98-4513-03	2	Brkt - Engine, Rear
12	93-0095-03	2	Bracket-Engine, Front
13	3213-2	8	Screw-HH
15	98-9322	1	Bolt-HH, Metric
16	3255-9	2	Washer-Lock/Ext
17	98-4598	1	Cable-Battery, Negative
18	57-6390	1	Jam Nut
18	42-9850	1	Washer-Lock, Spring
18	104-0095	1	Engine-Kubota
19	3296-29	11	Nut-Lock, NI
20	3256-78	1	Washer-Flat
21	43-5930	1	Washer-Spring
22	48-7890	1	Nut
23	98-4594	1	Clamp - Retainer
24	32128-36	3	Nut-HF

Ref. No.	Part No.	Qty.	Description
25	98-4515-03	1	Bracket-Rear Engine, LH
26	98-4514-03	1	Bracket-Rear Engine, RH
27	323-12	3	Screw-HH
28	3253-7	8	Washer-Lock/Sp
29	87-5100	4	Washer - Snubbing
30	3256-40	4	Washer-Flat
31	43-0090	14	Bolt/Washer
32	42-9600	14	Lockwasher-Spring, Mid
33	323-10	1	Screw-HH
34	3255-8	1	Washer-Lock/Ext

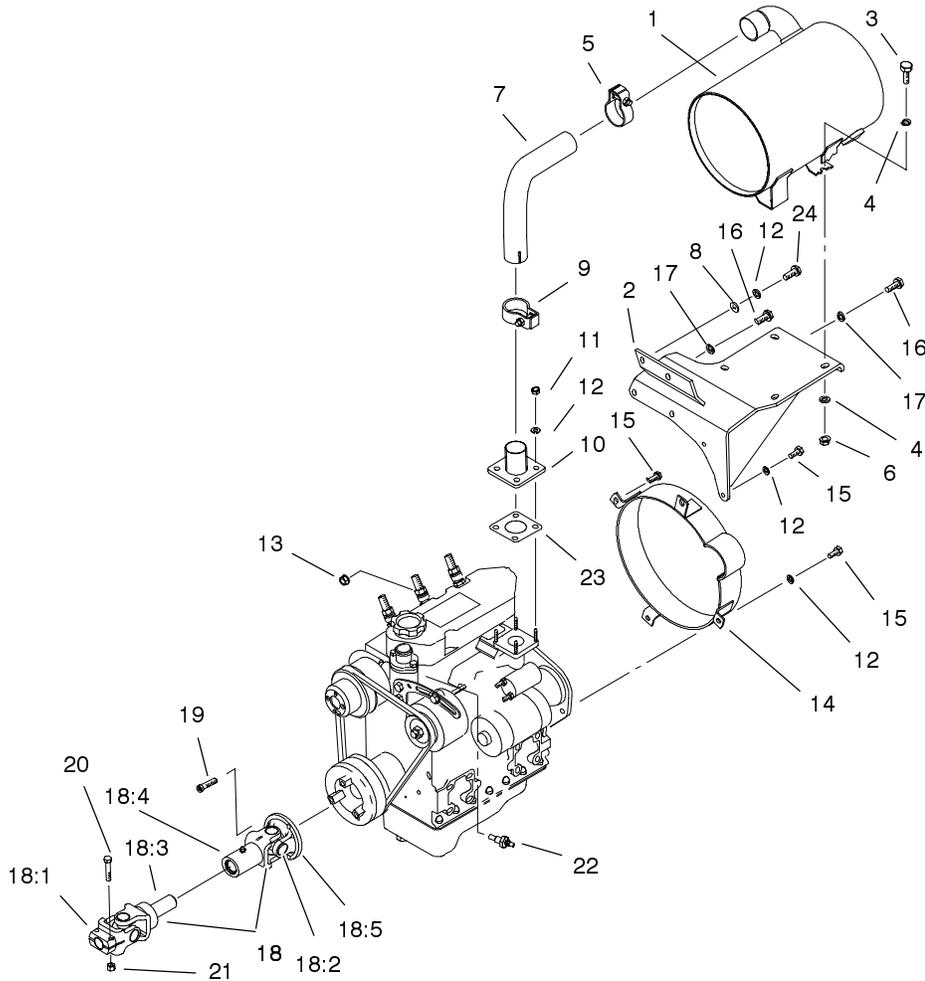


Sheet No.:15

Muffler And Pump Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	104-1430	1	Muffler-Exhaust
2	98-4555-03	1	Bracket-Muffler
3	323-7	4	Screw-HH
4	3256-4	8	Washer-Flat
5	98-9310	1	Clamp - Muffler
6	3296-39	4	Nut-Lock, NI
7	98-4524	1	Tube - Exhaust 31 HP
8	33094-00	2	Washer-Flat
9	98-9309	1	Clamp - Muffler
10	98-4527	1	Pipe-Exhaust, Engine
11	33014-00	4	Nut-Hex
12	42-9850	10	Washer-Lock, Spring
13	33024-00	1	Nut-Lock, NI
14	98-4564-03	1	Guard - Flywheel,
15	33114-025	5	Screw-HH
16	43-0090	2	Bolt/Washer
17	42-9600	2	Lockwasher-Spring, Mid
18	99-6977	1	Driveshaft ASM
18:1	98-9768	1	Yoke
18:2	98-9766	2	Kit - Universal Joint
18:3	98-9765	1	Yoke & Shaft
18:4	94-7379	1	Tube - Slip Yoke
18:5	104-1230	1	Yoke
19	98-9322	3	Bolt-HH, Metric

Ref. No.	Part No.	Qty.	Description
20	322-9	2	Screw-HH
21	3296-29	2	Nut-Lock, NI
22	98-9346	1	Sender - Temperature
23	99-8343	1	Gasket - Muffler
24	33114-020	2	Screw-HH

PROTOTYPE

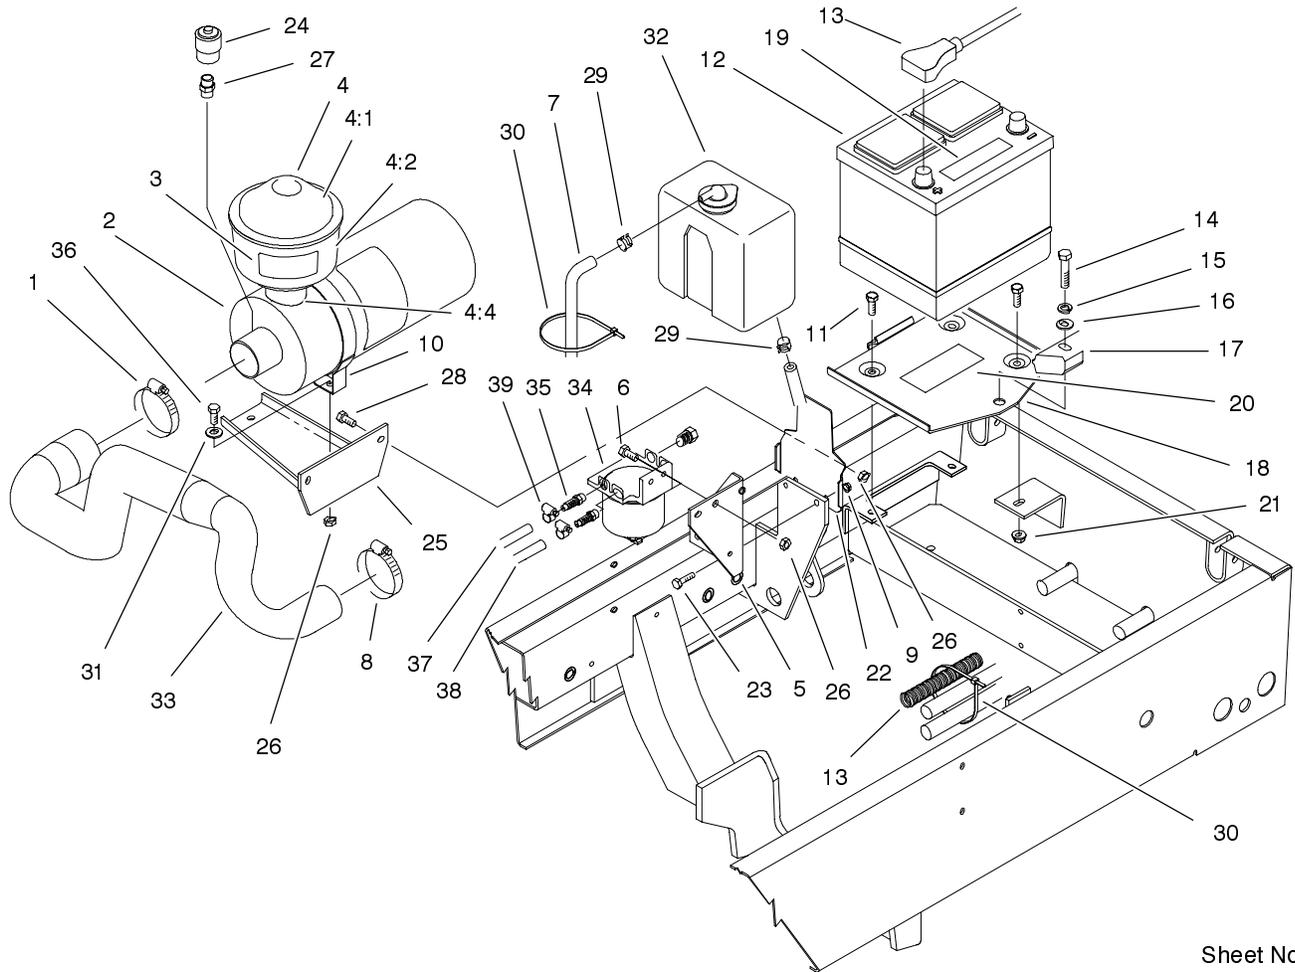


Sheet No.:16

Engine Components Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	2412-42	1	Clamp-Hose	22	98-4576-03	1	Bracket-Reservoir, Water
2	98-4517	1	Air Cleaner ASM	23	321-5	2	Screw-HH
3	93-6692	1	Decal-Fluid, Starting	24	93-9164	1	Indicator - Mini
4	48-7430	1	Precleaner	25	98-4518-03	1	Bracket-Cleaner, Air
4:1	33-1260	1	Cover ASM	26	3296-29	6	Nut-Lock, NI
4:2	33-1270	1	Bowl-Clear	27	94-1416	1	Indicator Adapter ASM
*4:3	62-6300	1	Sleeve ASM	28	322-5	2	Screw-HH
4:4	94-6873	1	Clamp	29	92-2379	2	Clamp-Hose
5	98-4578-03	1	Bracket-Filter, Fuel	30	3290-378	2	Tie-Cable
6	3234-29	2	Screw-HHF	31	3256-23	2	Washer-Flat
7	63-7630	1	Fuel Hose	32	98-9323	1	Bottle-Overflow, Water
8	2412-92	1	Clamp-Hose	33	98-4509	1	Hose - Air Cleaner
9	32128-33	2	Nut-HF	34	98-9305	1	Filter-Water/Fuel
10	98-4525	1	Bracket-Cleaner, Air	35	353-783	2	Fitting-Pump
11	322-4	3	Screw-HH	36	322-6	2	Screw-HH
12	66-2750	1	Battery	37	71-3381	1	Hose-Fuel
13	104-0086	1	Cable - Battery, Positive	38	95-4275	1	Hose - Fuel
14	323-9	1	Screw-HH	39	2412-108	4	Clamp-Worm
15	3253-21	1	Washer-Lock				
16	3256-24	1	Washer-Flat				
17	66-2490	1	Retainer-Battery				
18	94-7343	1	Base-Battery, ASM				
19	93-6668	1	Decal - Battery				
20	93-7276	1	Decal - Danger				
21	32128-20	1	Nut-HF				

* Not illustrated

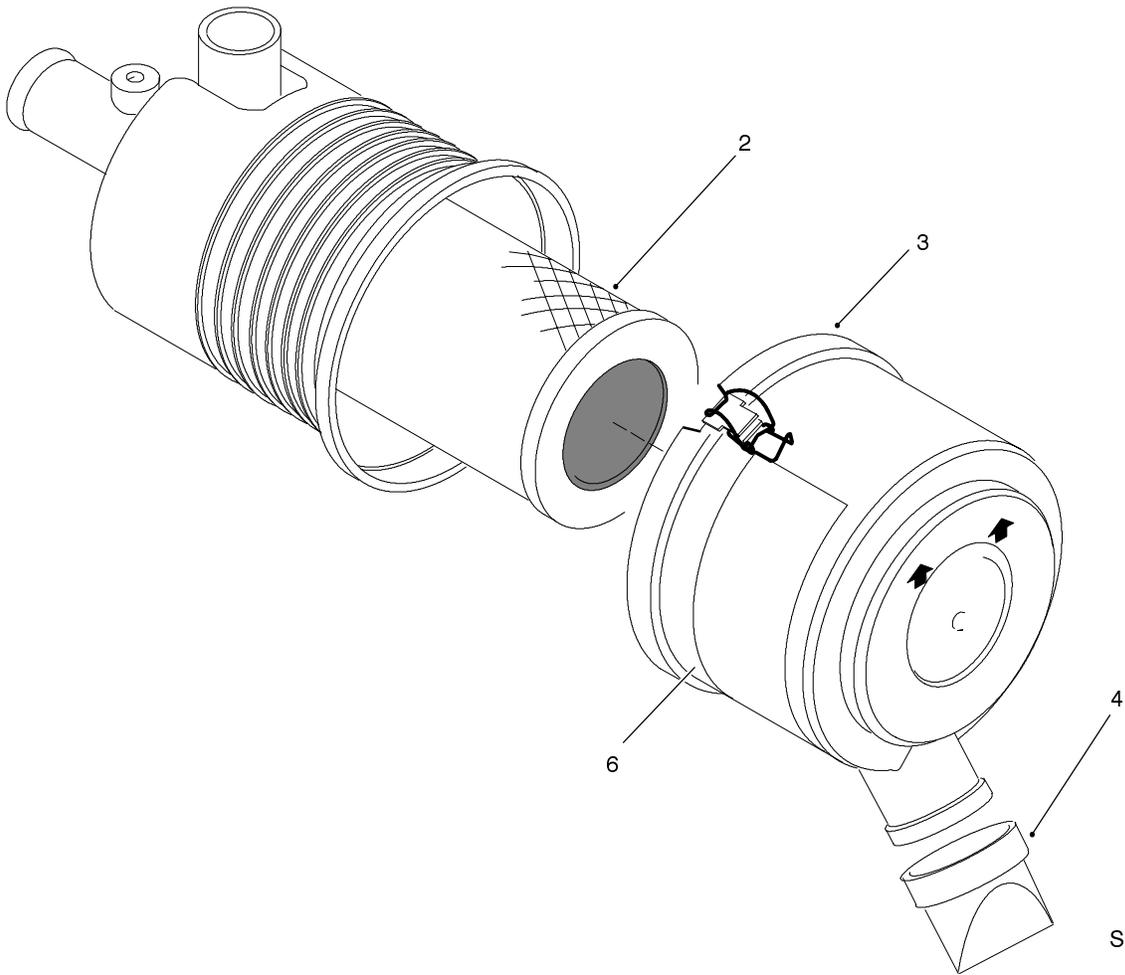


Sheet No.:A5
T-2903

Air Cleaner Assembly No. 98-4517

Ref. No.	Part No.	Qty.	Description
2	98-9763	1	Element ASM
3	98-9771	1	Cover ASM
4	94-1414	1	Valve - Vacuator
6	98-9788	1	Decal - Instruction

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

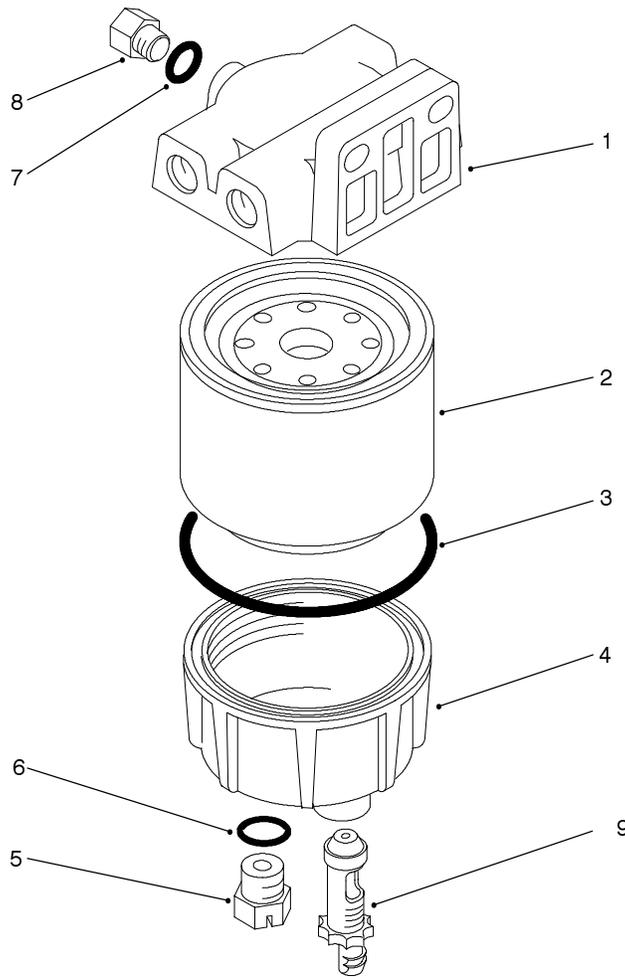


Sheet No.:A6
T-3330

Water/Fuel Separator Assembly No. 98-9305

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9772	1	Head - Filter				
2	98-9764	1	Element-On, Spin				
3	98-9774	1	O-Ring-Base, Filter				
4	98-9775	1	Base - Filter				
5	98-9773	1	Plug - Base, Filter				
6	237-42	1	O-Ring				
7	237-78	1	O-Ring				
8	98-9776	1	Plug-Filter, Head				
9	98-9777	1	Drain Valve ASM				

PROTOTYPE

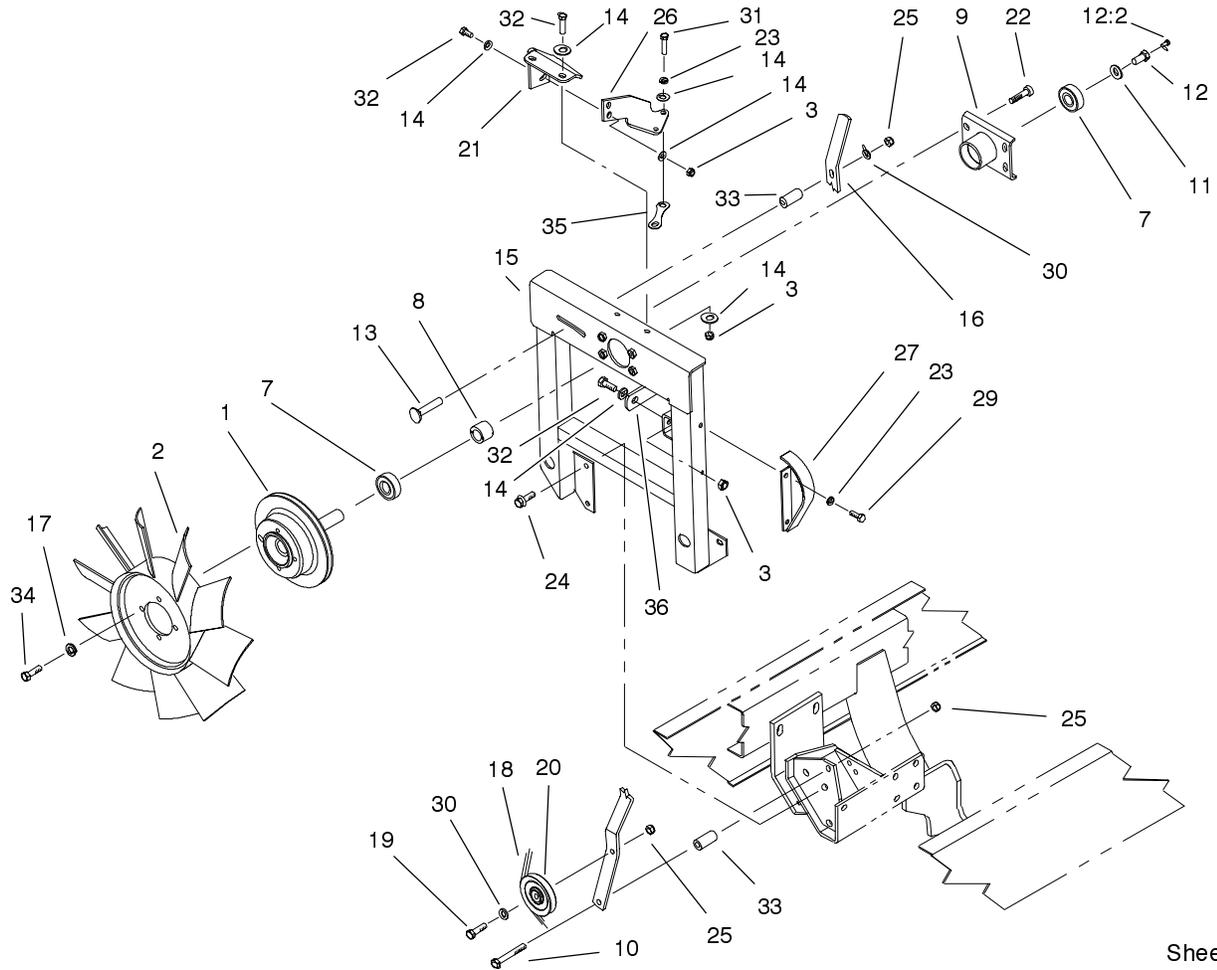


Sheet No.:17

Fan Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	104-0000-03	1	Pulley
2	99-6937	1	Fan
3	3296-29	5	Nut-Lock, NI
7	251-318	2	Bearing
8	104-0001	1	Spacer
9	104-0017-03	1	Hub ASM
10	323-12	1	Screw-HH
11	63-8410	1	Washer
12	11-0160	1	Roller Shaft Screw ASM
12:2	302-5	1	Fitting - Lube
13	3231-31	1	Screw-CARR
14	3256-23	11	Washer-Flat
15	104-1440-03	1	Support-Fan
16	104-0006-03	1	Lever - Fan Idler
17	3253-4	4	Washer
18	98-3921	1	Belt
19	323-8	1	Screw-HH
20	63-8140	1	Pulley-Idler
21	104-1447	1	Bracket-Fan, Support
22	3274-12	4	Screw-HSH
23	42-9850	4	Washer-Lock, Spring
24	3234-29	6	Screw-HHF
25	3296-59	3	Nut-Lock, NI
26	104-1481-03	1	Bracket - Mount, Fan
27	98-4561-03	1	Shield-Alternator


Ref. No.	Part No.	Qty.	Description
29	32144-14	2	Screw-HWH
30	3256-24	2	Washer-Flat
31	33114-020	2	Screw-HH
32	322-4	5	Screw-HH
33	104-0007	2	Spacer
34	322-3	4	Screw-HH
35	104-1482	1	Plate-Washer
36	98-4547	1	Plate-Mount

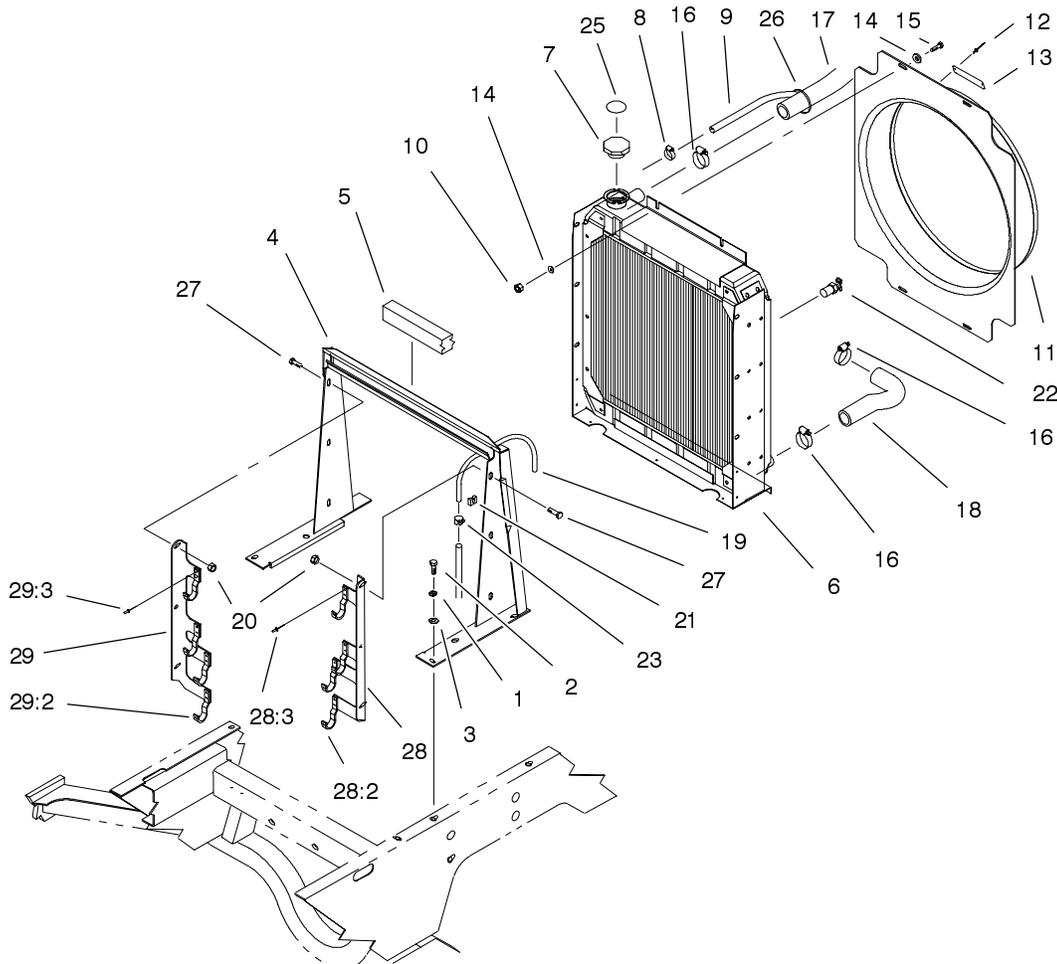

Sheet No.:18

Radiator Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3253-4	4	Washer	28	99-6991	1	LH Cooler Mount ASM
2	322-5	4	Screw-HH	28:2	75-0930	4	Hook - Cooler Mount
3	3256-23	4	Washer-Flat	28:3	3269-15	8	Rivet
4	99-6970-03	1	Support-Radiator	29	99-6994	1	RH Cooler Mount ASM
5	104-1418	1	Strip-Foam, Radiator	29:2	75-0930	4	Hook - Cooler Mount
6	99-6936	1	Radiator	29:3	3269-15	8	Rivet
7	66-3240	1	Cap-Radiator				
8	92-2379	1	Clamp-Hose				
9	104-0079	1	Hose				
10	3296-42	4	Nut-Lock				
11	99-6939	1	Shroud-Fan				
12	3290-271	2	Rivet-Pop				
13	98-9335	1	Plate-Warning, Fan				
14	3256-22	8	Washer-Flat				
15	321-4	4	Screw-HH				
16	2412-34	4	Clamp-Hose				
17	104-0013	1	Hose-Radiator, Upper				
18	104-0014	1	Hose-Radiator, Lower				
19	66-3180	1	Tube-Vent				
20	32128-20	6	Nut-HF				
21	2412-103	1	Clamp				
22	304-46	1	Draincock				
23	2412-98	1	Clamp				
25	93-7840	1	Decal-Cap, Radiator				
26	3290-379	1	Tie-Cable				
27	3234-5	6	Screw-HHF				

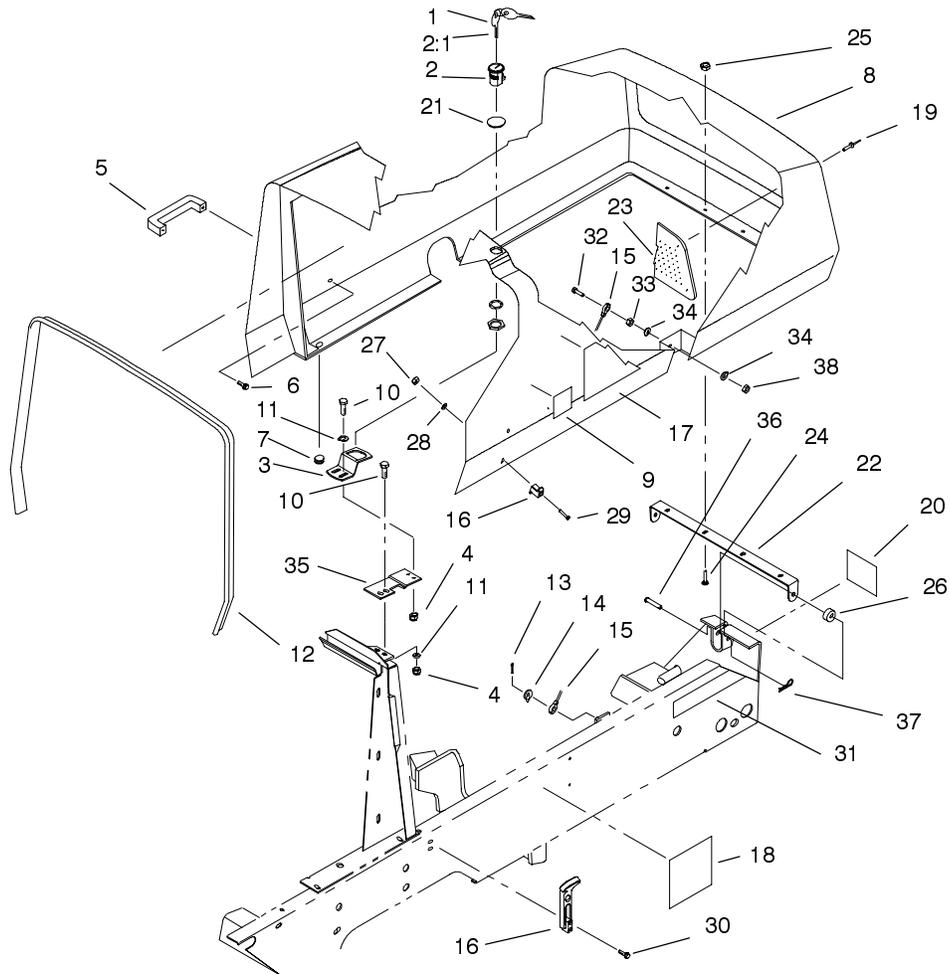

Sheet No.:20

Hood Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9321	1	Ring-Key	26	104-1429	2	Spacer - Plastic
2	98-9315	1	Latch - Locking	27	3296-12	2	Nut-Lock
2:1	99-8350	2	Key - Latch, Locking	28	3256-51	2	Washer-Flat
3	98-9316	1	Latch - Hood	29	104-1452	2	Screw-PPH
4	3296-16	4	Nut-Lock, NI	30	104-1451	4	Screw-TAP, PPH
5	65-5100	2	Handle-Door	31	72-3560	1	Decal
6	46-8091	4	Screw-HWH	32	329-7	1	Screw-HH
7	104-1412	2	Grommet - Bumper	33	3220-1	1	Nut-Jam
8	98-3940	1	Hood ASM	34	3256-67	2	Washer-Flat
9	93-7252	1	Decal-International	35	104-1439	1	Plate-Latch
10	321-4	4	Screw-HH	36	94-3829	2	Pin-Clevis
11	3256-1	4	Washer-Flat	37	3290-250	2	Pin-Hair Cotter
12	104-1419	1	Strip-Bulb	38	32128-47	1	Nut-HF
13	3272-4	1	Pin-Cotter				
14	3256-23	1	Washer-Flat				
15	75-0570	1	Cable - Hood				
16	104-0010	2	Latch - Draw, Flexible				
17	99-6988	2	Decal				
18	104-0049	2	Cover - Side Rail				
19	104-1417	10	Rivet-Plastic				
20	62-7400	1	Decal-Toro				
21	104-1453	1	Grommet				
22	104-0042-03	1	Strap - Hinge				
23	104-0043-03	1	Screen - Rear				
24	3229-3	4	Screw-CARR				
25	32128-33	4	Nut-HF				

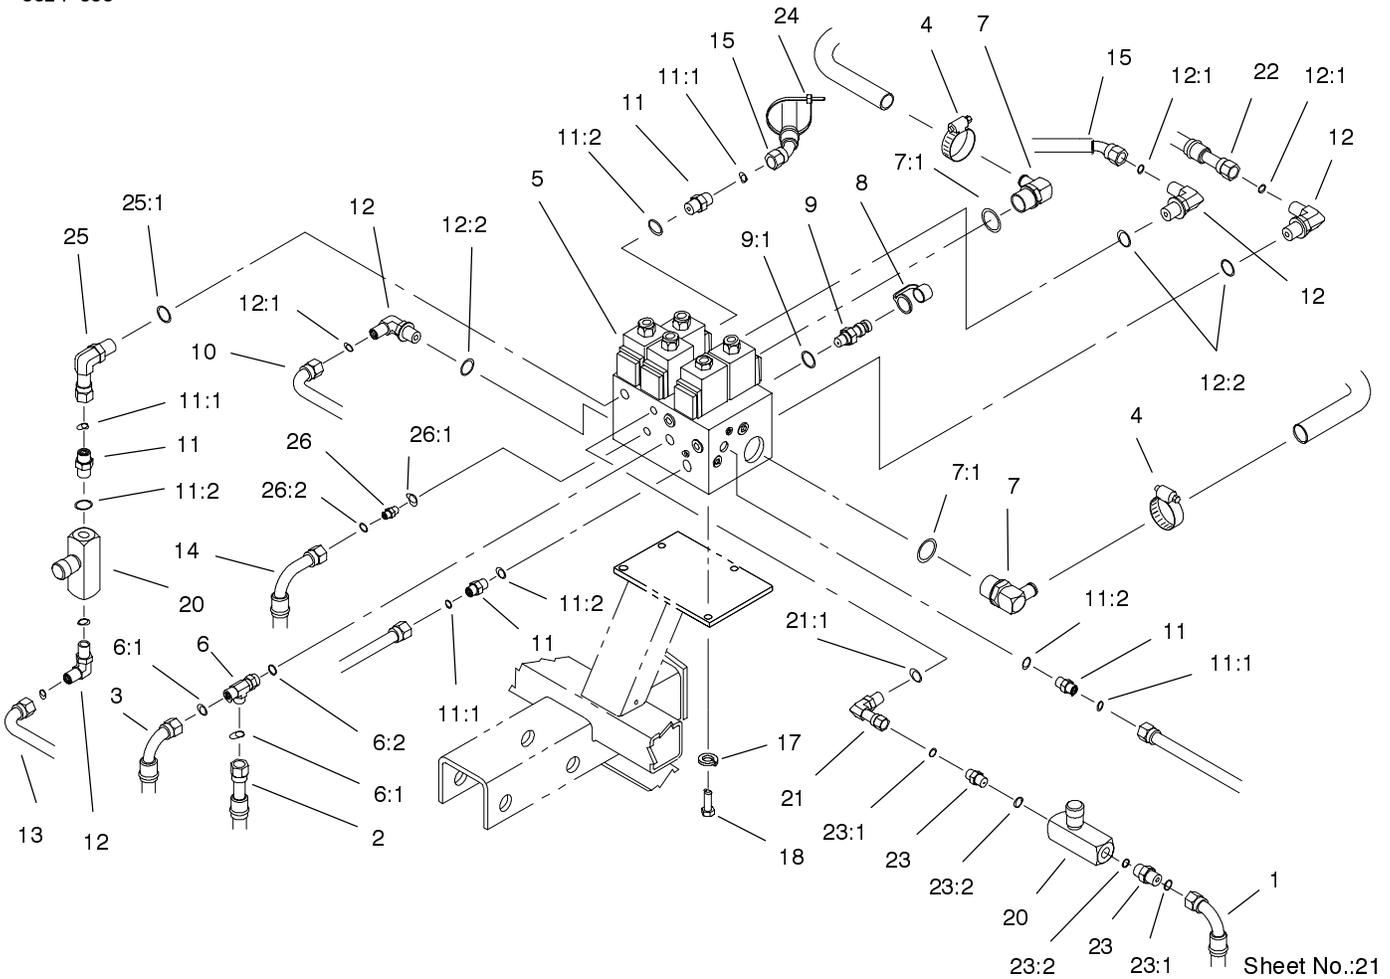


Sheet No.:21

Lift Block Assembly

Ref. No.	Part No.	Qty.	Description
1	104-0061	1	Hose ASM-Hyd
2	104-0060	1	Hose ASM-Hyd
3	104-0059	1	Hose ASM-Hyd
4	2412-34	2	Clamp-Hose
5	99-6979	1	Manifold Block - Lift
6	340-86	1	Fitting-Tee
6:1	237-22	2	O-Ring
6:2	237-42	1	O-Ring
7	23-8910	2	Stem-Barb, 90°
7:1	237-146	1	O-Ring
8	354-79	1	Cap - Fitting, Yellow
9	59-7410	1	Diag. Nipple Tip
9:1	237-42	1	O-Ring
10	98-3907	1	Tube ASM
11	340-2	4	Adapter
11:1	237-22	1	O-Ring
11:2	237-42	1	O-Ring
12	340-77	4	Fitting-Hyd., 90°
12:1	237-22	1	O-Ring
12:2	237-42	1	O-Ring
13	104-0093	1	Tube-ASM
14	104-0062	1	Hose ASM-Hyd
15	104-0055	2	Hose ASM-Hyd
17	3253-4	3	Washer
18	322-3	3	Screw-HH
20	98-9742	2	Valve-Control, Flow

Ref. No.	Part No.	Qty.	Description
21	340-143	1	Elbow - 90° Swivel
21:1	237-78	1	O-Ring
22	104-0054	1	Hose ASM-Hyd
23	340-1	2	Adapter
23:1	237-35	1	O-Ring
23:2	237-42	1	O-Ring
24	3290-379	1	Tie-Cable
25	340-110	1	Elbow-Swivel, 90 DEG Straight
25:1	237-42	1	O-Ring
26	340-92	1	Fitting
26:1	237-78	1	O-Ring
26:2	237-21	1	O-Ring

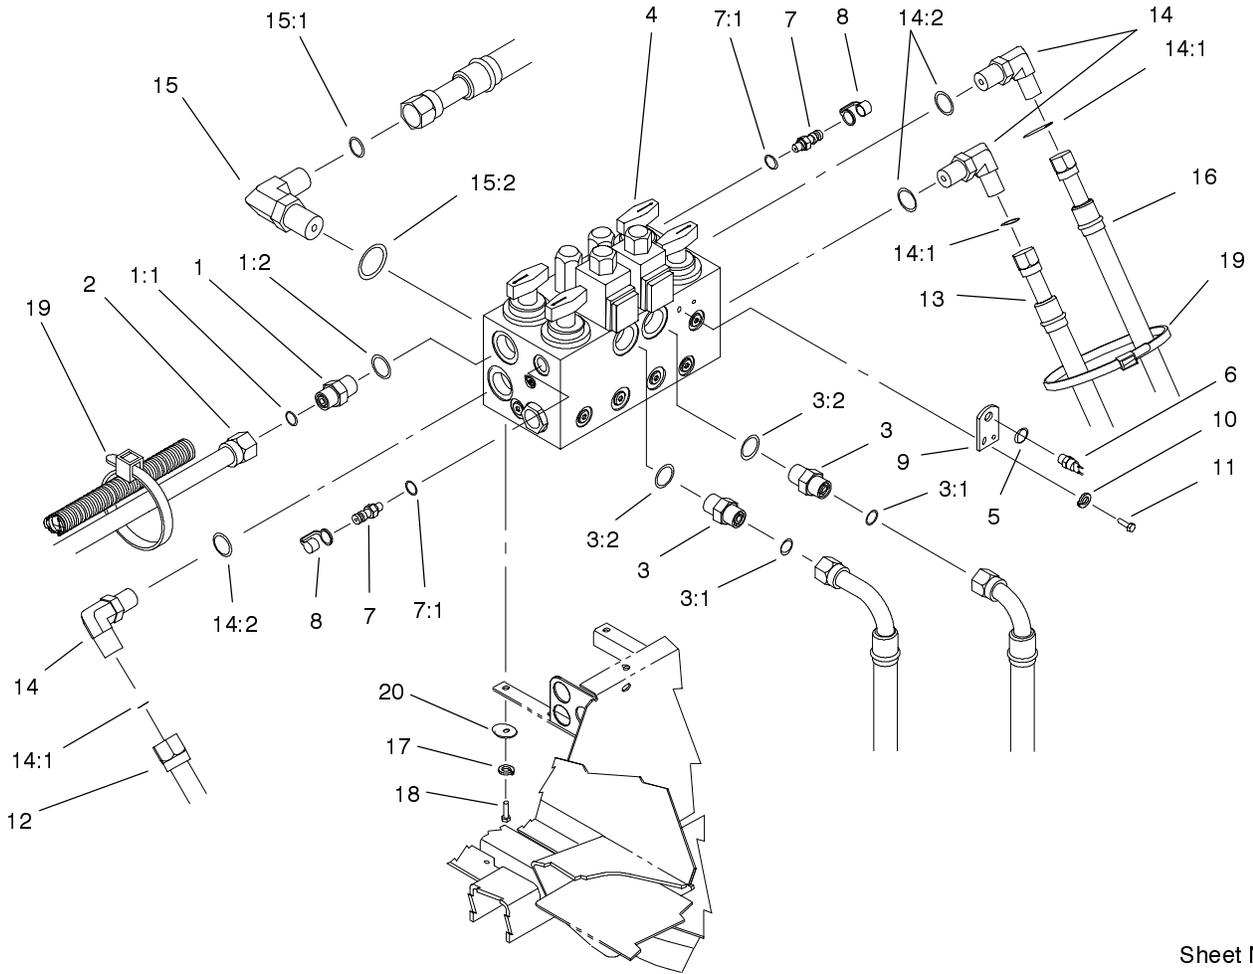


Sheet No.:22

Mow Block Assembly

Ref. No.	Part No.	Qty.	Description
1	340-6	1	Fitting-Straight
1:1	237-30	1	O-Ring
1:2	237-80	1	O-Ring
2	98-3905	1	Tube ASM
3	340-7	2	Adapter
3:1	237-65	1	O-Ring
3:2	237-80	1	O-Ring
4	99-6978	1	Manifold Block - Mow
5	3256-76	2	Washer-Flat
6	72-4320	2	Switch
7	354-77	2	Fitting-Quick
7:1	237-78	1	O-Ring
8	354-79	2	Cap - Fitting, Yellow
9	98-8199	2	Bracket - Switch
10	3253-3	4	Washer-Lock/Sp
11	329-3	4	Screw-HH
12	98-3906	1	Tube ASM
13	104-0065	1	Hose ASM-Hyd
14	340-105	3	Fitting-Hyd., 90°
14:1	237-80	1	O-Ring
14:2	237-30	1	O-Ring
15	340-142	1	Elbow-90°
15:1	237-58	1	O-Ring
15:2	237-81	1	O-Ring
16	104-0066	1	Hose ASM-Hyd
17	3253-4	4	Washer

Ref. No.	Part No.	Qty.	Description
18	322-3	4	Screw-HH
19	3290-378	2	Tie-Cable
20	3256-23	4	Washer-Flat


PROTOTYPE

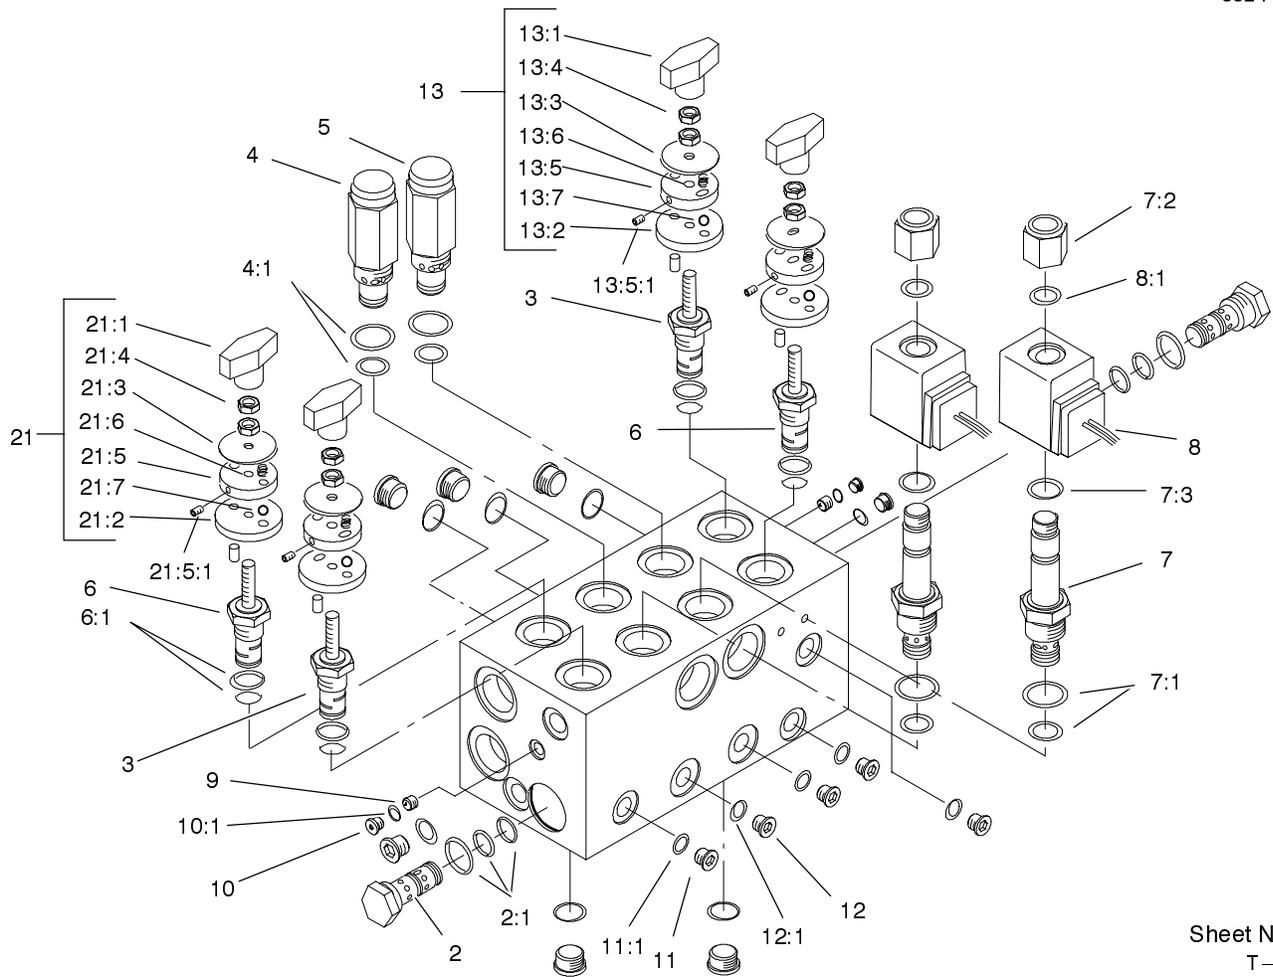

Sheet No.:A8
T-3575

Hydraulic Manifold Assembly No. 99-6978

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	69-4120	2	Cartridge-Logic	13:5	94-5023	1	Plate - Detent
2:1	69-4240	1	Kit-Seal	13:5:1	3245-36	1	Screw - HSH
3	94-8175	2	Control-Flow, Rotary	13:6	94-5027	2	Spring
4	94-3655	1	Valve-Relief	13:7	255-13	2	Ball-Steel, Stainless
4:1	75-2080	1	Kit-Seal	21	94-6378	2	Kit-Detent
5	104-1200	1	Cartridge Relief Valve	21:1	94-5020	1	Knob ASM
6	94-3657	2	Spool ASM	21:2	94-5021	1	Plate - Locating
6:1	94-3661	2	Kit-Seal, 4-Way	21:4	3218-1	2	Nut-Jam
7	93-7494	2	Cartridge	21:5	94-5023	1	Plate - Detent
7:1	75-2080	1	Kit-Seal	21:5:1	3245-36	1	Screw - HSH
7:2	69-4300	1	Nut	21:6	94-5027	2	Spring
7:3	94-5438	1	Seal-Solenoid	21:7	255-13	2	Ball-Steel, Stainless
8	83-2010	2	Coil - Valve				
8:1	94-5438	1	Seal-Solenoid				
9	95-5999	2	Plug-Orifice				
10	353-991	4	Plug-Hex, Hollow				
10:1	237-156	1	O-Ring				
11	353-990	8	Plug				
11:1	237-78	1	O-Ring				
12	353-989	4	Plug-Hex, Hollow				
12:1	237-42	1	O-Ring				
13	94-3660	2	Kit-Detent				
13:1	94-5020	1	Knob ASM				
13:2	94-5025	1	Plate - Locating				
13:3	94-5026	1	Plate-Indicator				
13:4	3218-1	2	Nut-Jam				

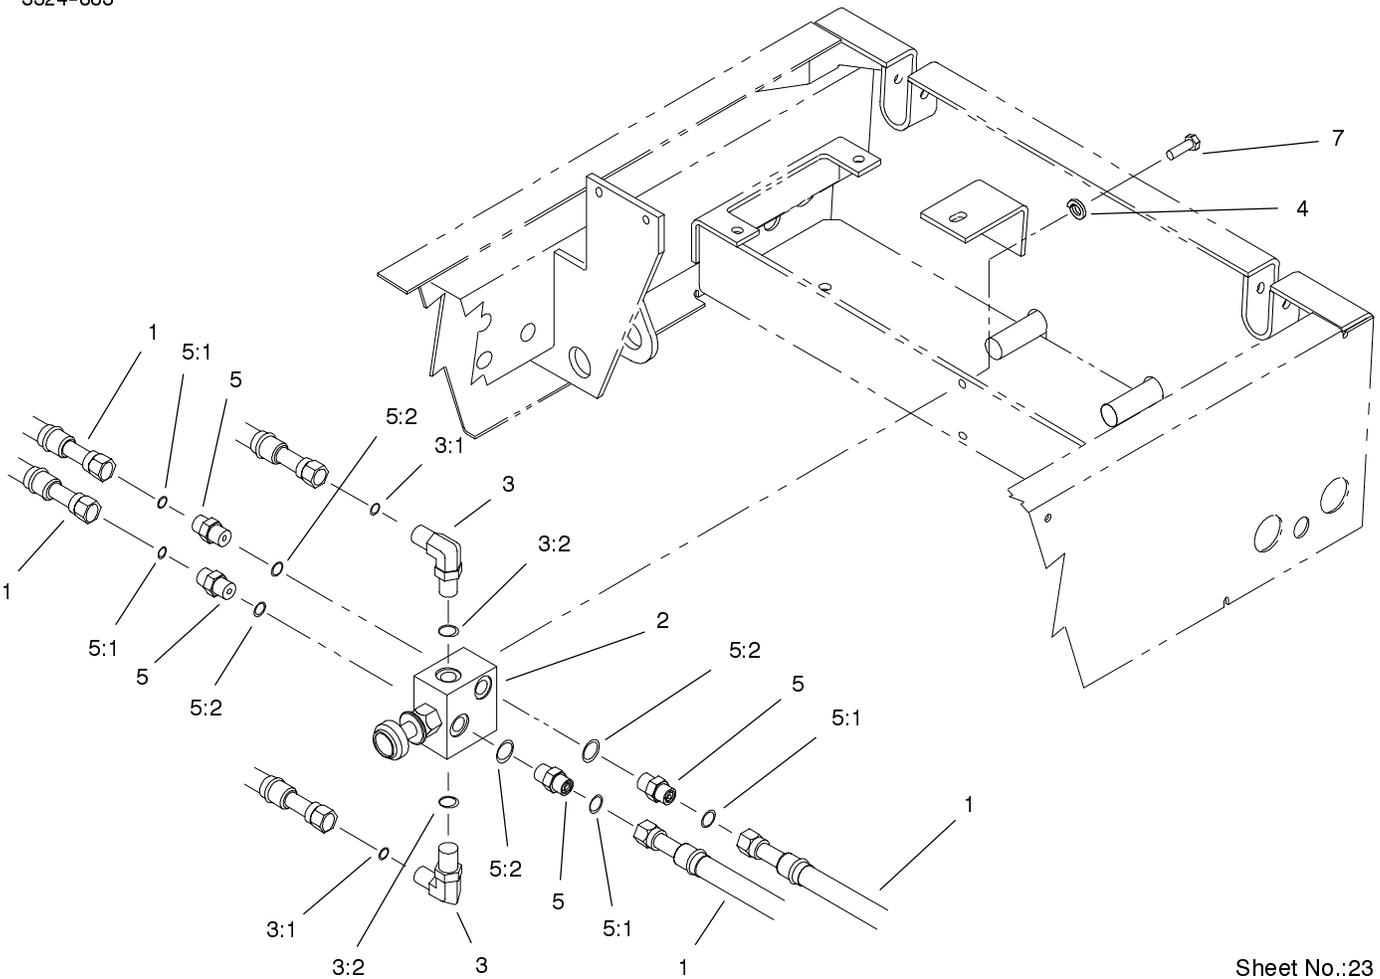

Sheet No.:23


Rear Hydraulic Manifold Assembly

Ref. No.	Part No.	Qty.	Description
1	104-0052	4	Hose ASM-Hyd
2	98-3919	1	Flow Control
*2:1	104-0003	1	Cartridge Kit
*2:1:1	104-0004	1	Cartridge Seal Kit
*2:1:2	104-0005	1	Cartridge Knob Kit
3	340-77	2	Fitting-Hyd., 90°
3:1	237-22	1	O-Ring
3:2	237-42	1	O-Ring
4	3253-3	2	Washer-Lock/Sp
5	340-2	4	Adapter
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
7	321-4	2	Screw-HH

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

* Not illustrated

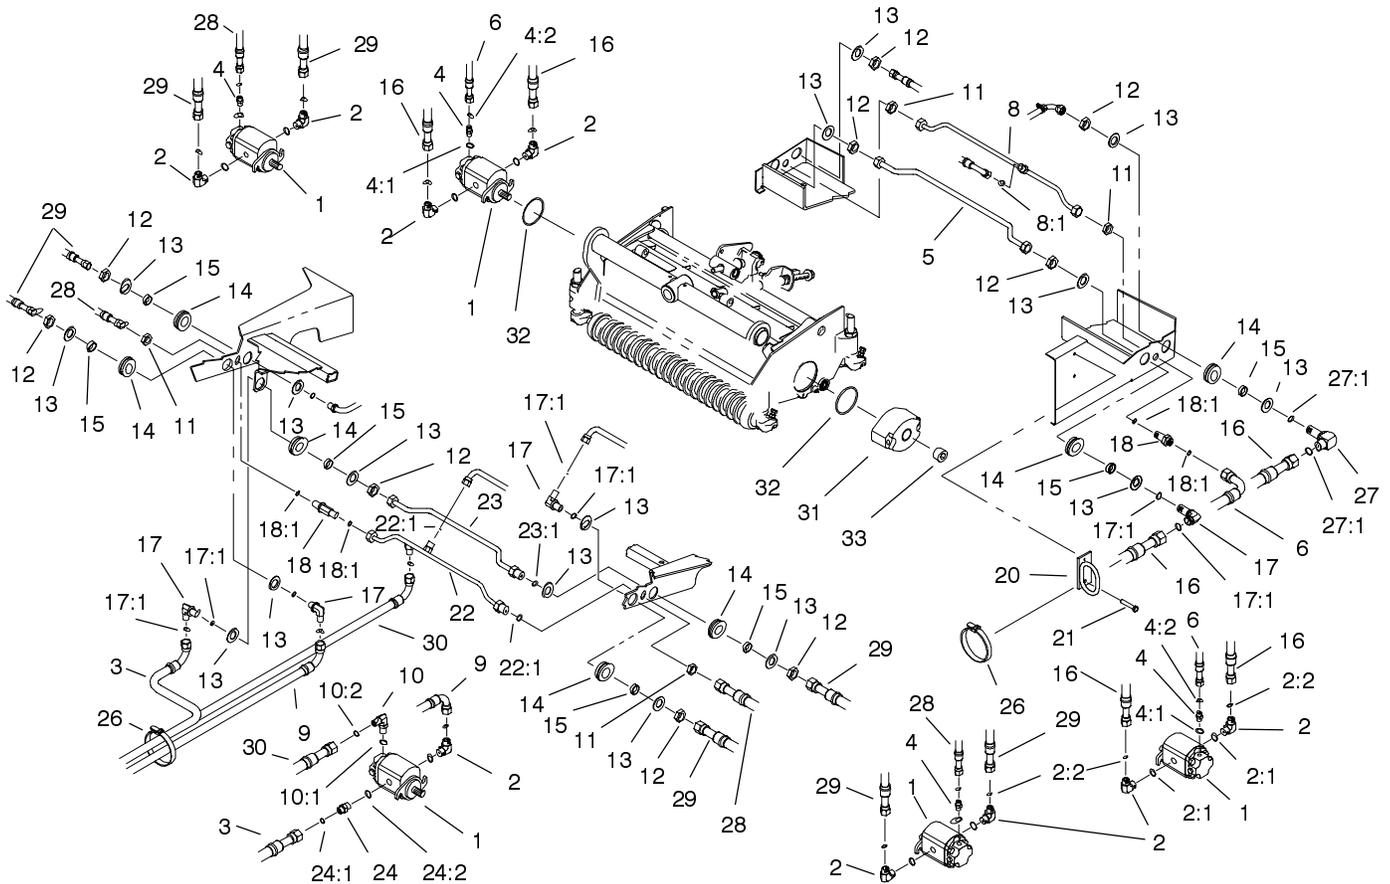


Sheet No.:24

Reel Motor And Hose Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9999	5	Hydraulic Motor
2	340-98	9	Fitting-Hyd, 90°
2:1	237-79	2	O-Ring
2:2	237-30	2	O-Ring
3	104-0067	1	Hose ASM-Hyd
4	340-92	4	Fitting
4:1	237-78	1	O-Ring
4:2	237-21	1	O-Ring
5	94-4918	1	Tube ASM
6	104-0058	2	Hose ASM-Hyd
8	100-3714	1	Drain Tube ASM
8:1	237-21	1	O-Ring
9	104-0068	1	Hose ASM-Hyd
10	340-132	1	Elbow-90°
10:1	237-78	1	O-Ring
10:2	237-21	1	O-Ring
11	340-70	2	Locknut-Bulkhead
12	340-127	5	Nut-Bulkhead
13	69-8930	10	Washer
14	240-5	5	Grommet
15	69-8960	5	Spacer
16	104-0057	4	Hose ASM-Hyd
17	93-9151	5	Fitting-Hydraulic
17:1	237-30	4	O-Ring
18		3	Fitting-Straight, Bulkhead

Ref. No.	Part No.	Qty.	Description
18:1	237-22	4	O-Ring
20	104-0028	2	Hose Guide
21	32104-32	4	Screw-HH
22	104-0094	1	Tube-ASM
22:1	237-22	3	O-Ring
23	104-0092	1	Tube-ASM
23:1	237-30	1	O-Ring
24	340-4	1	Adapter
24:1	237-30	1	O-Ring
24:2	237-79	1	O-Ring
26	3290-379	6	Tie-Cable
27	100-3713	2	Fitting-Hyd, 90 Bulkhead
27:1	237-30	2	O-Ring
28	104-0063	2	Hose ASM-Hyd
29	104-0069	4	Hose ASM-Hyd
30	104-0064	1	Hose ASM-Hyd
31	94-4347-03	5	Weight - End
32	93-9783	10	O-Ring
33	93-8717	5	Plug-Pipe

3324-883

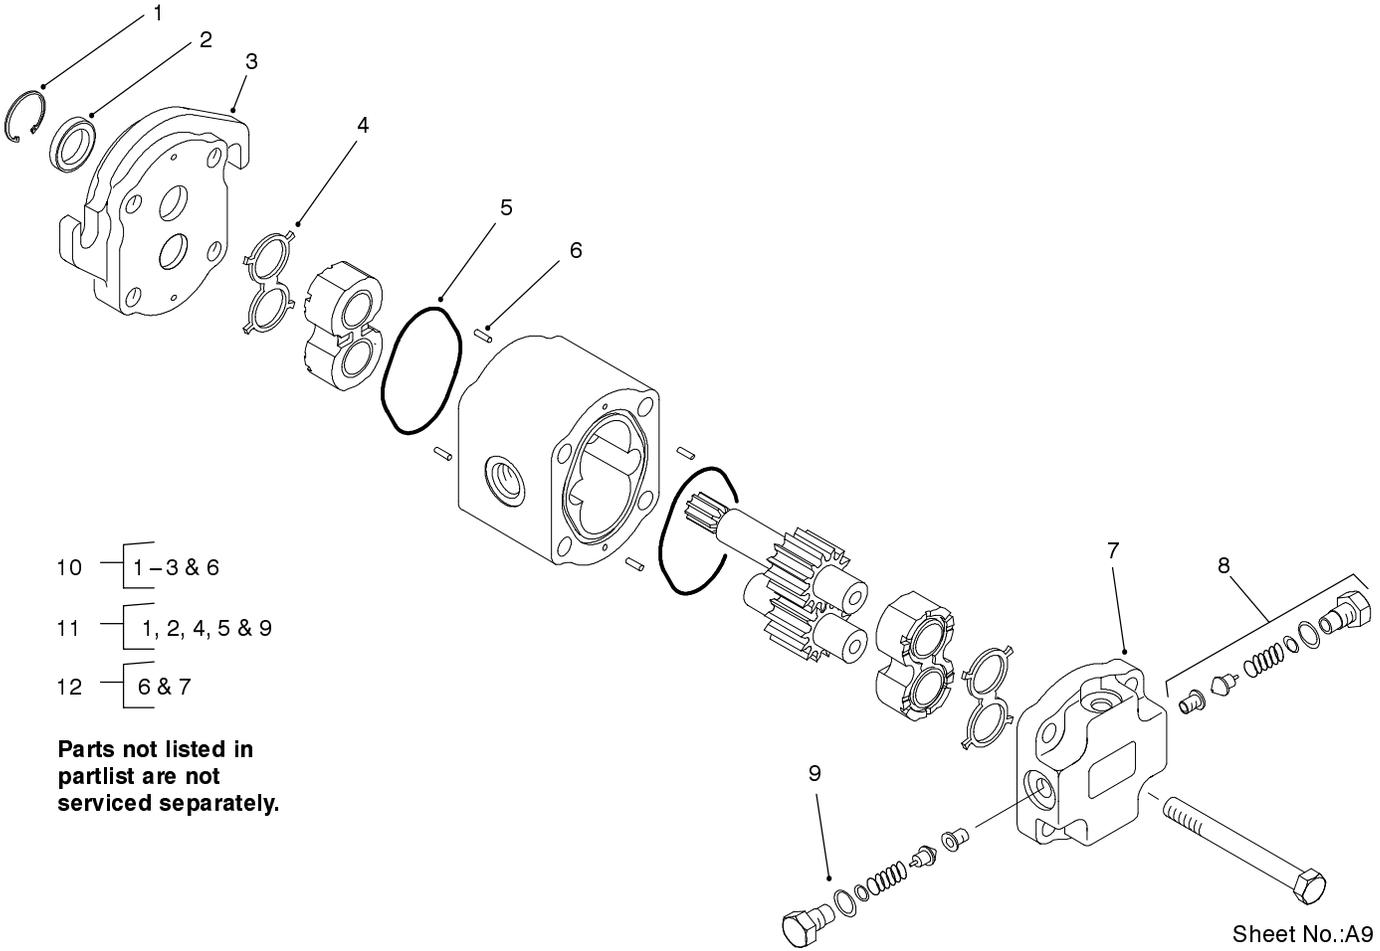


Sheet No.:A9
T-3503

Reel Motor No. 98-9999

Ref. No.	Part No.	Qty.	Description
10	93-9152	2	Flange Kit
11	98-9997	2	Seal Kit
12	93-9154	2	Valve Block Kit

Ref. No.	Part No.	Qty.	Description
<p style="font-size: 48px; opacity: 0.5; font-weight: normal;">PROTOTYPE</p>			

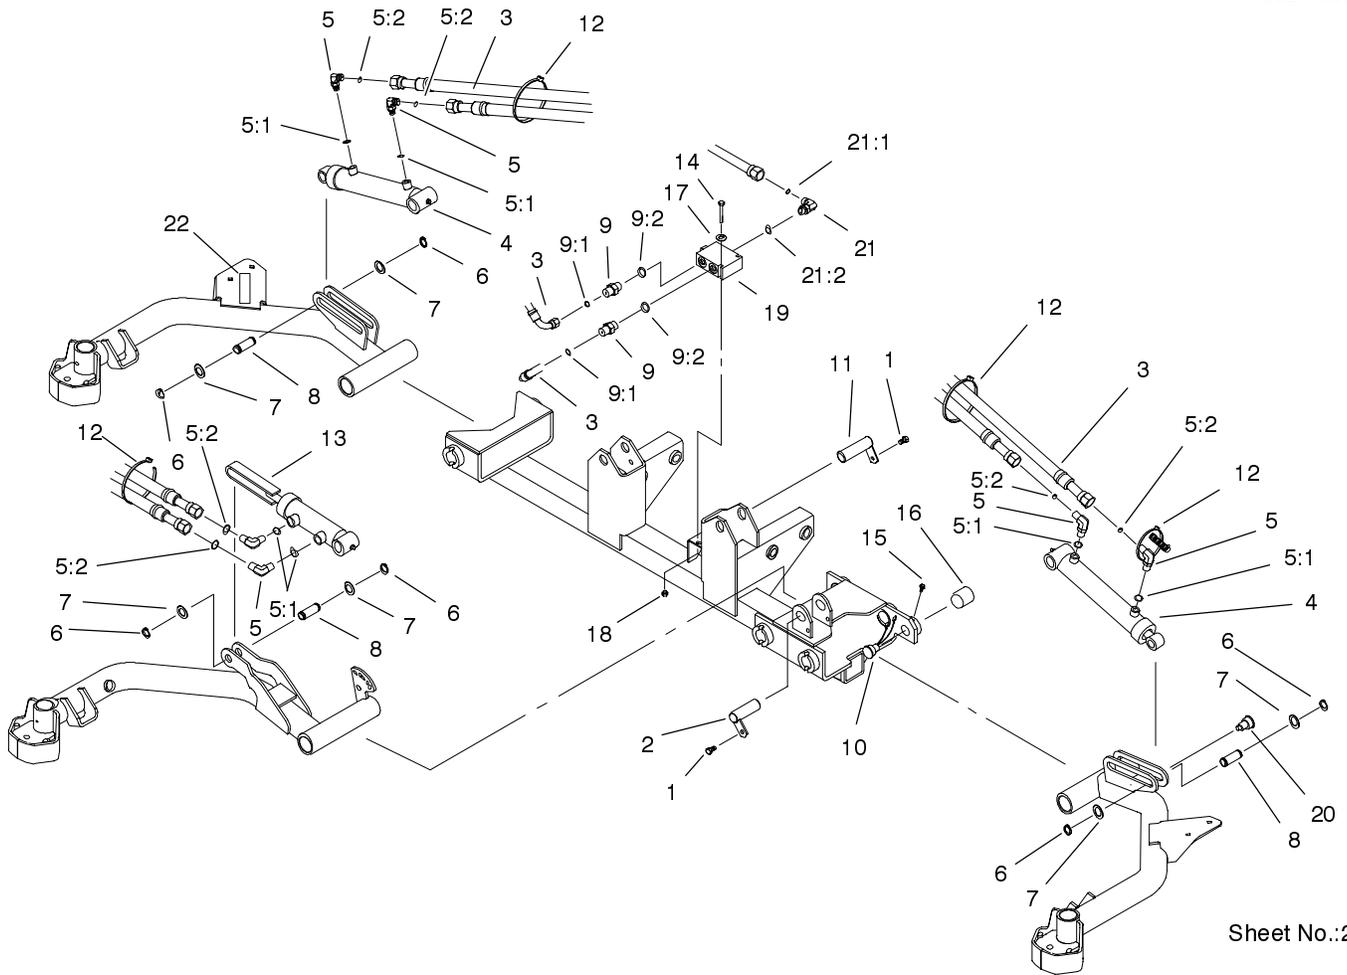


Sheet No.:25

Front Lift Circuit Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-14	3	Screw-HWH
2	83-6790	1	Pin-Cylinder
3	104-0059	2	Hose ASM-Hyd
4	99-6986	2	Cylinder-Hydraulic
5	340-132	6	Elbow-90°
5:1	237-78	2	O-Ring
5:2	237-21	2	O-Ring
6	32120-93	6	Ring-Retaining
7	3-6498	6	Washer-Thrust
8	104-0046	3	Pin - Cylinder Slide
9	340-2	2	Adapter
9:1	237-22	1	O-Ring
9:2	237-42	1	O-Ring
10	92-8002	1	Plug-Reed Switch, Magnet
11	83-6780	2	Cylinder Pin
12	3290-378	2	Tie-Cable
13	99-6987	1	Cylinder-Hyd
14	321-11	2	Screw-HH
15	32104-76	2	Screw-Slot, Acorn
16	75-6370	1	Cap - Sensor
17	3256-1	2	Washer-Flat
18	3296-42	2	Nut-Lock
19	99-6998	1	Divider-Flow
*19:1	99-5645	1	Body
*19:2	99-5646	1	Cartridge

Ref. No.	Part No.	Qty.	Description
*19:3	353-989	1	Plug-Hex, Hollow
*19:3:1	237-42	1	O-Ring
*19:4	99-5647	1	Seal Kit
20	92-8754	1	Plug-Reed Switch, Magnet
21	340-77	1	Fitting-Hyd., 90°
21:1	237-22	1	O-Ring
21:2	237-42	1	O-Ring
22	93-6687	1	Decal - No Step

* Not illustrated

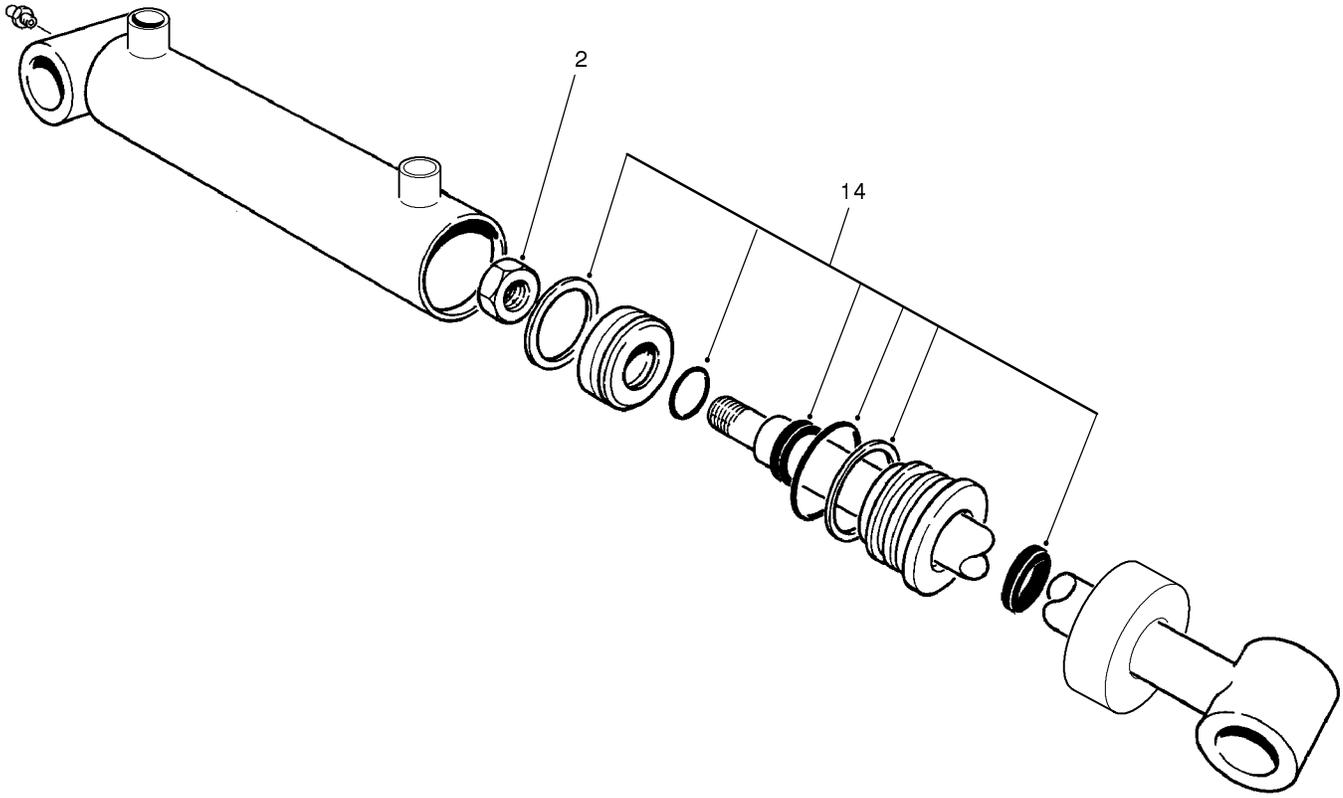


Sheet No.:B1
T-3383

Hydraulic Cylinder Assembly No. 99-6986

Ref. No.	Part No.	Qty.	Description
2	32152-10	1	Locknut-Deform, Top
14	100-8023	1	Kit-Repair, Seal

Ref. No.	Part No.	Qty.	Description
<p style="font-size: 48px; opacity: 0.5; font-weight: normal;">PROTOTYPE</p>			

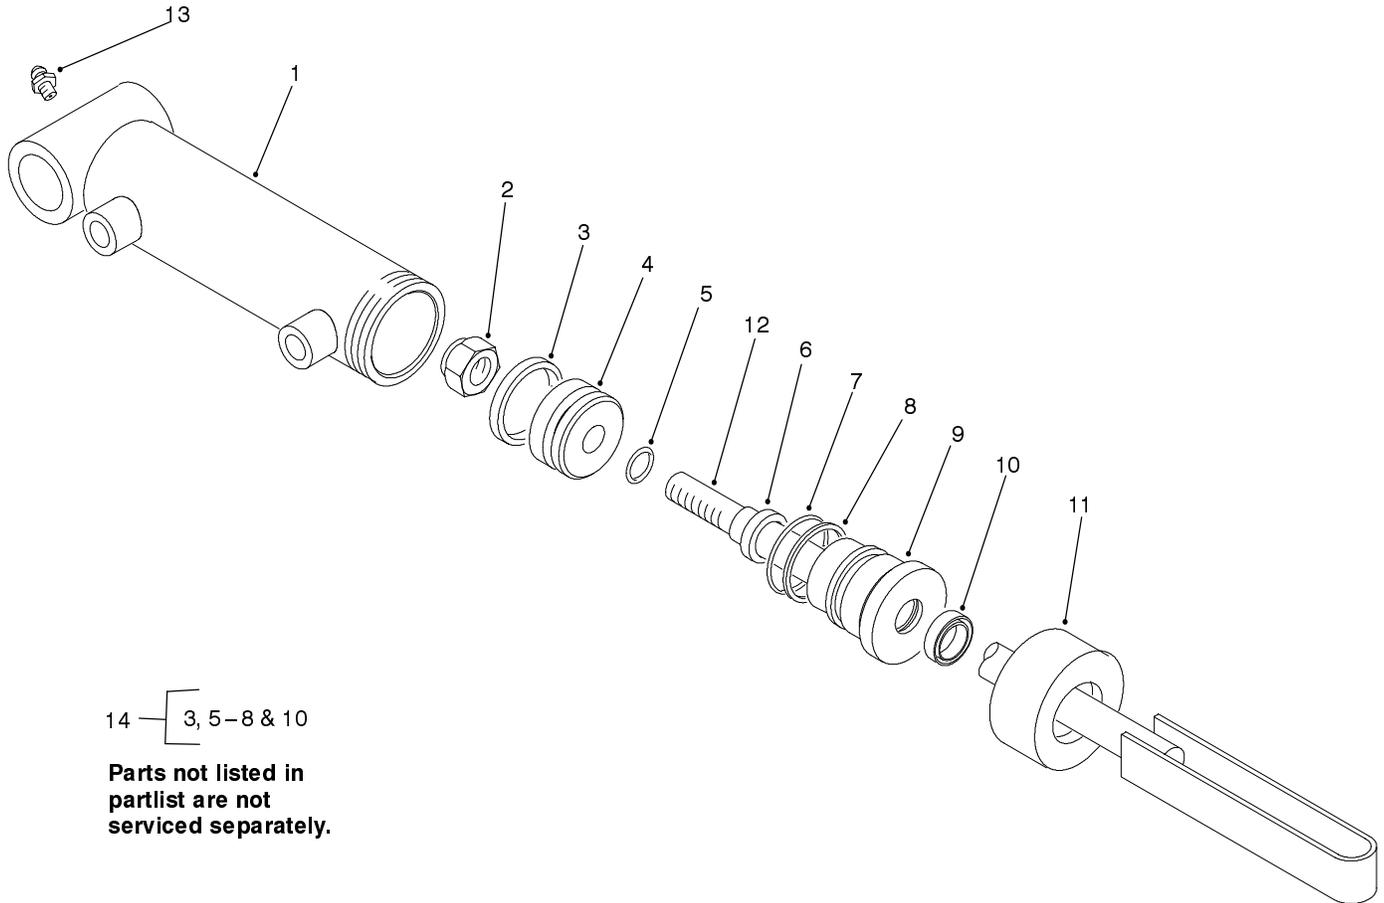

14 — [3, 5-8 & 10


Parts not listed in partlist are not serviced separately.

Sheet No.:B2
T-3501

Hydraulic Cylinder Assembly No. 99-6987

Ref. No.	Part No.	Qty.	Description
2	32152-10	1	Locknut-Deform, Top
14	100-8023	1	Kit-Repair, Seal


Ref. No.	Part No.	Qty.	Description
<p style="font-size: 48px; opacity: 0.5; font-weight: normal;">PROTOTYPE</p>			

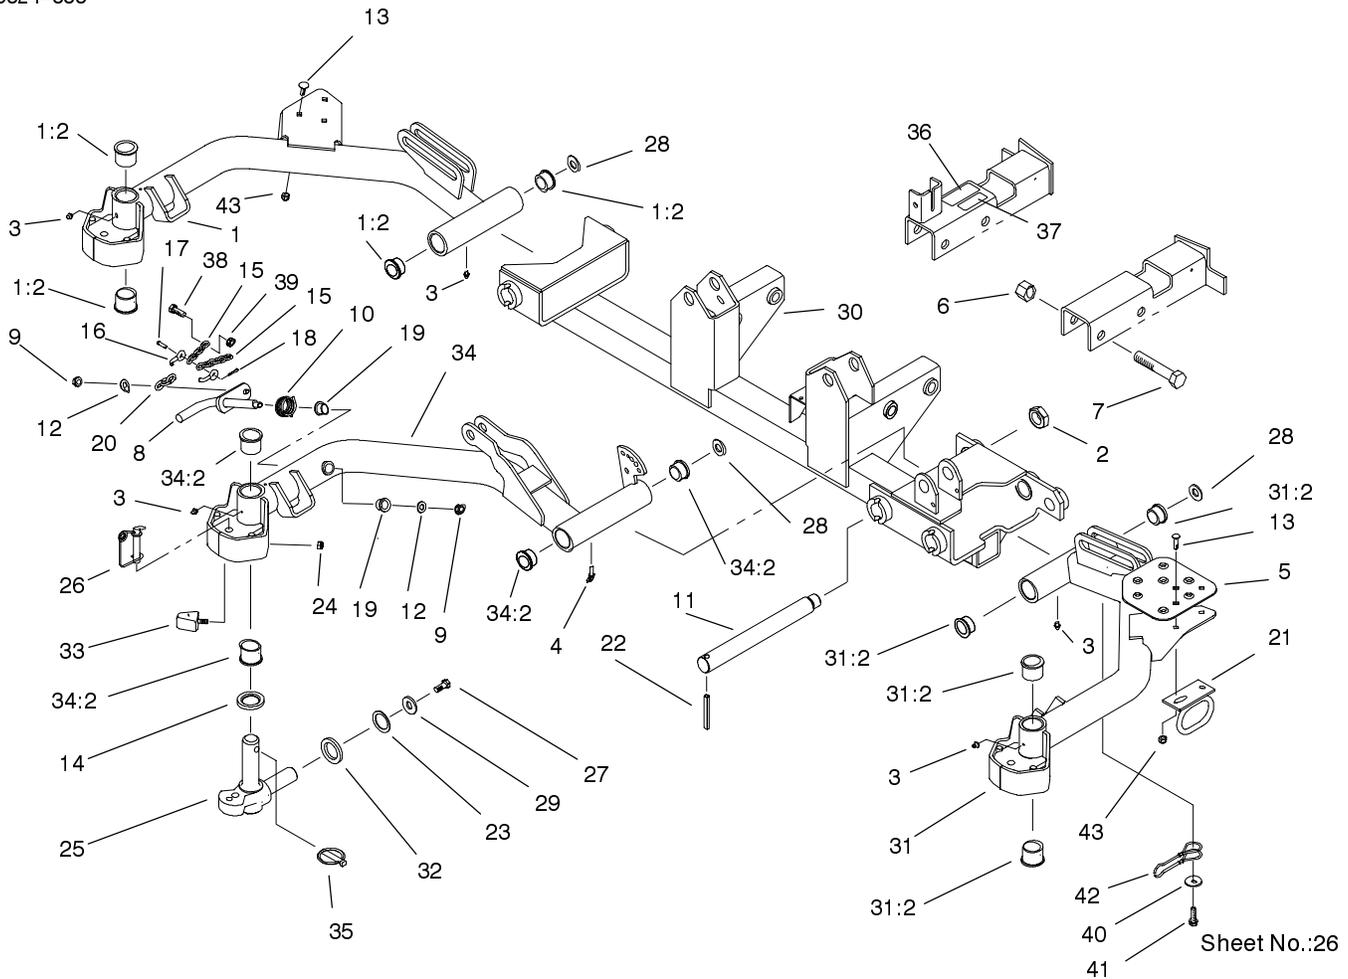

Front Lift Arm Assembly

Ref. No.	Part No.	Qty.	Description
1	99-6905-03	1	Arm ASM #5
1:2	104-0015	2	Bushing-Flange
2	3296-49	3	Nut-Lock NI
3	302-5	5	Fitting - Lube
4	302-60	1	Fitting-Lube
5	104-1438-03	1	Step-Perforated
6	3296-51	4	Nut-Lock NI
7	328-7	4	Screw-HH
8	99-6941-03	1	Pivot Rod ASM
9	3296-39	2	Nut-Lock, NI
10	98-3929	1	Spring-Torsion
11	95-7158	3	Pin - Pivot
12	3256-24	2	Washer-Flat
13	3230-1	5	Screw-CARR
14	94-8946	3	Washer
15	5-1096	2	Chain-Lift
16	282-4	1	Shackle
17	283-6	1	Pin-Clevis
18	3272-10	1	Pin-Cotter
19	256-287	2	Bushing
20	104-1413	1	Chain - Straight Link
21	104-0028	2	Hose Guide
22	32121-110	3	Pin-Roll, Slotted
23	3-6781	3	Washer-Thrust
24	3296-29	6	Nut-Lock, NI
25	98-1880-03	3	Knuckle-Pivot

Ref. No.	Part No.	Qty.	Description
26	99-5610	3	Pin
27	98-7993	3	Screw-HHF
28	76-2980	3	Washer-Thrust
29	3256-6	3	Washer-Flat
30	99-6913-03	1	Carrier Frame -
31	99-6904-03	1	Arm ASM #4
31:2	104-0015	2	Bushing-Flange
32	98-7974	3	Washer - Thrust
33	99-5605	6	Bumper ASM
34	99-6901-03	1	Arm ASM #1
34:2	104-0015	2	Bushing-Flange
35	283-71	3	Pin-Lynch
36	93-6693	1	Decal-Plate, Floor
37	93-6686	1	Decal-Oil, Hydraulic
38	323-6	1	Screw-HH
39	32128-21	1	Nut-HF
40	3256-57	2	Washer-Flat
41	32144-26	2	Screw-Washer HD
42	98-3936	2	Lanyard
43	3296-47	5	Nut-Lock, NI

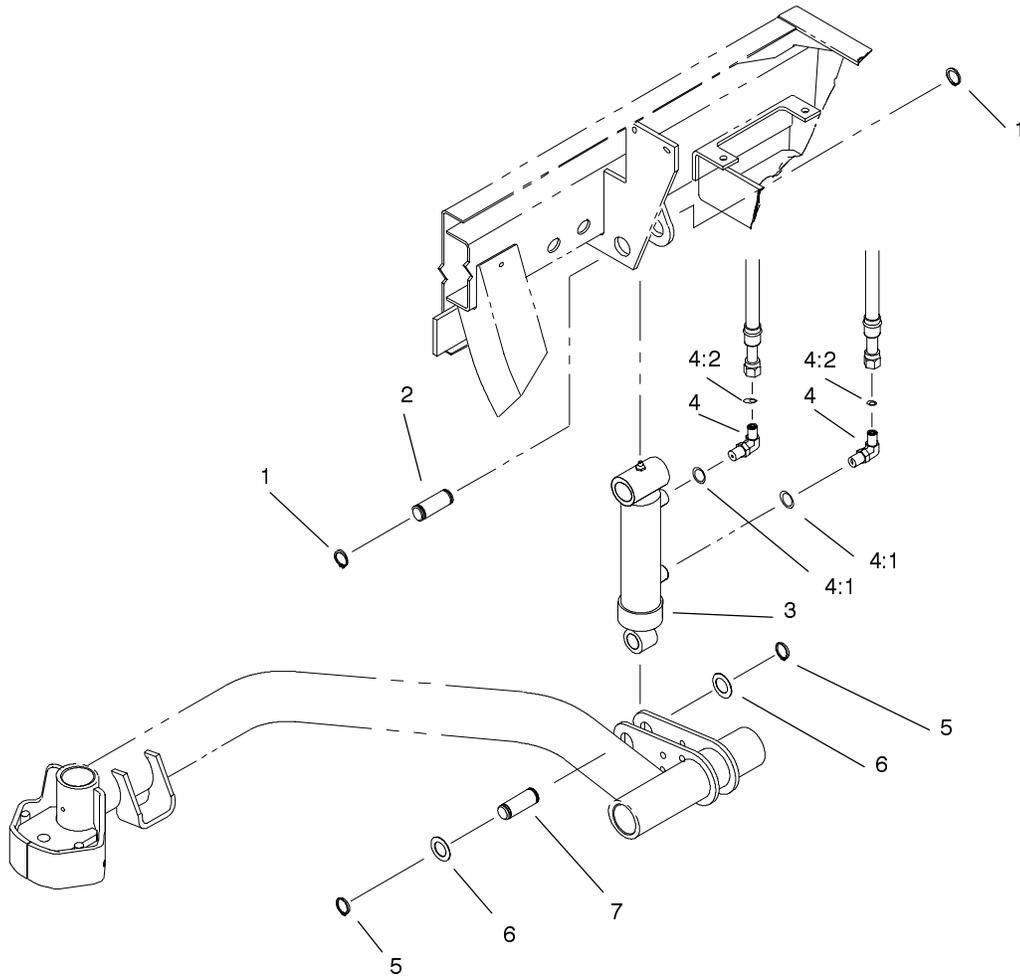


Sheet No.:27

Rear Lift Cylinder Assembly

Ref. No.	Part No.	Qty.	Description
1	32151-36	4	Ring-Retaining
2	75-5360	2	Pin-Cylinder
3	98-3945	2	Cylinder-Hyd
4	340-132	4	Elbow-90°
4:1	237-78	1	O-Ring
4:2	237-21	1	O-Ring
5	32120-93	4	Ring-Retaining
6	3-6498	4	Washer-Thrust
7	104-0046	2	Pin - Cylinder Slide

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

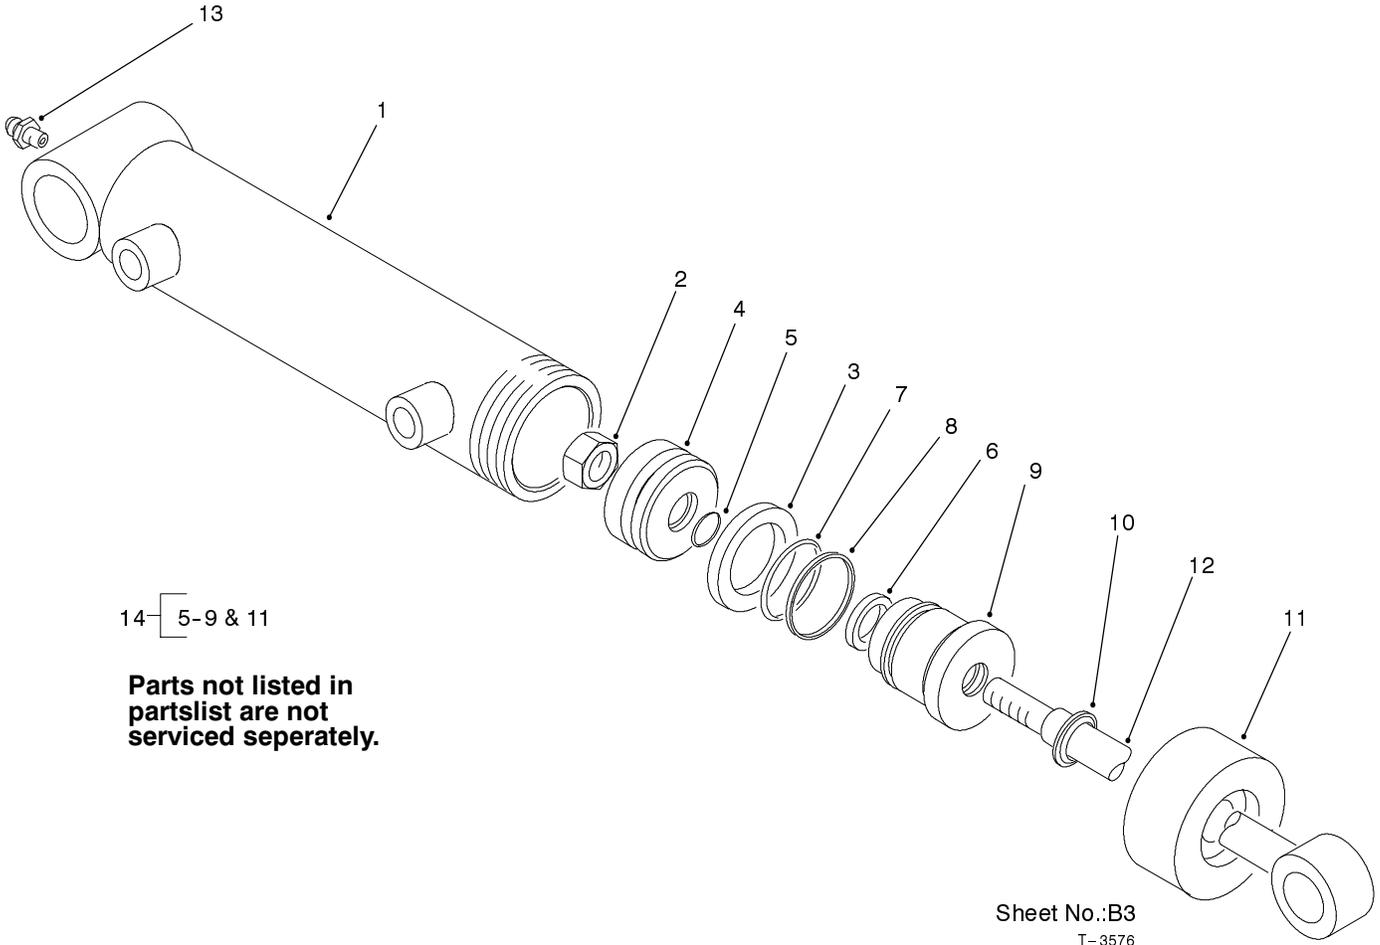


Sheet No.:B3
T-3576

Hydraulic Cylinder Assembly No. 98-3945

Ref. No.	Part No.	Qty.	Description
2	32152-10	1	Locknut-Deform, Top
14	100-8023	1	Kit-Repair, Seal

Ref. No.	Part No.	Qty.	Description
<p style="font-size: 48px; opacity: 0.5; font-weight: normal;">PROTOTYPE</p>			

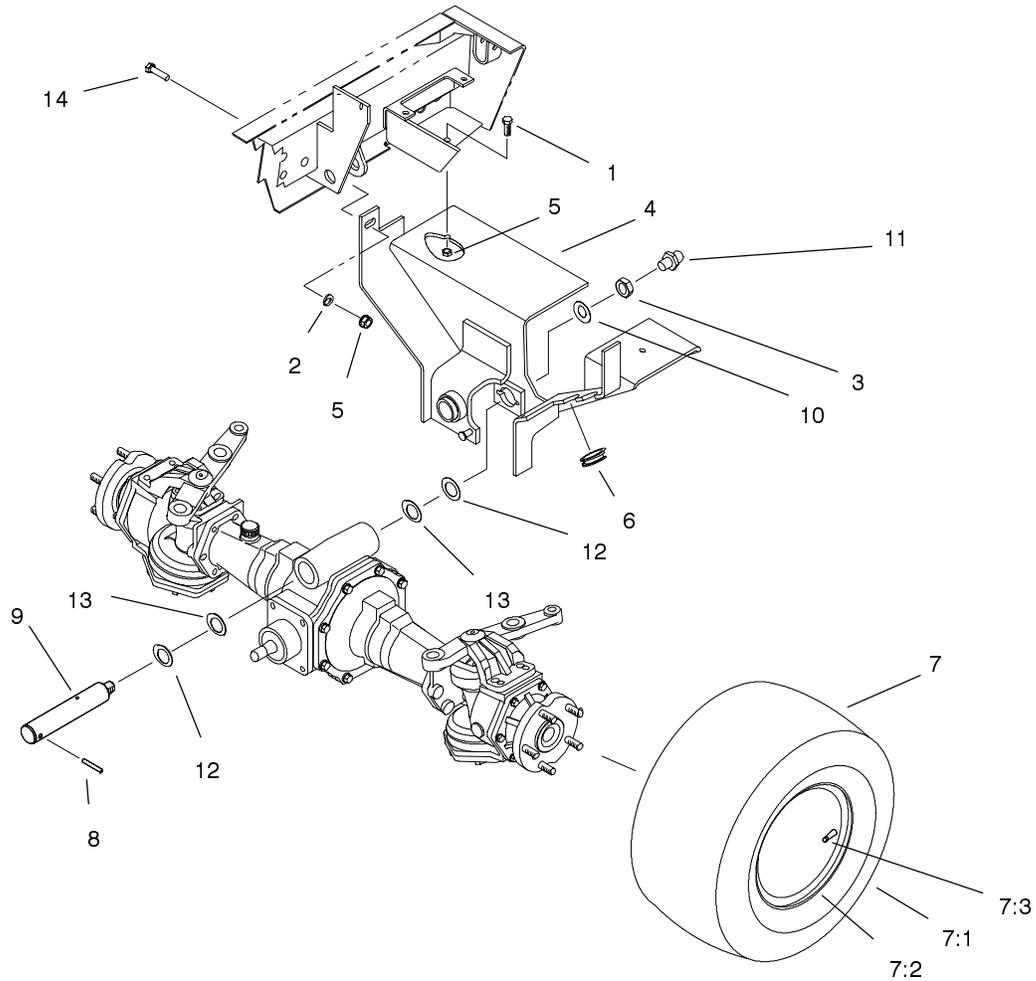


Sheet No.:30

Rear Axle Support

Ref. No.	Part No.	Qty.	Description
1	323-7	2	Screw-HH
2	3256-24	2	Washer-Flat
3	32146-20	1	Nut-Jam
4	99-6940-03	1	Axle Support ASM
5	3296-39	4	Nut-Lock, NI
6	237-165	2	Grommet
7		2	Tire & Wheel ASM
7:1	86-5910	1	Tire
7:2	100-2582	1	Rim
7:3	232-27	1	Stem-Valve
8	32121-32	1	Pin-Roll
9	98-8173-03	1	Pin-Pivot, Axle
10	71-4540	1	Thrust Washer
11	302-2	1	Fitting-Grease
12	99-8431	2	Washer-Thrust
13	99-8432	2	Washer-Thrust
14	323-13	2	Screw-HH

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

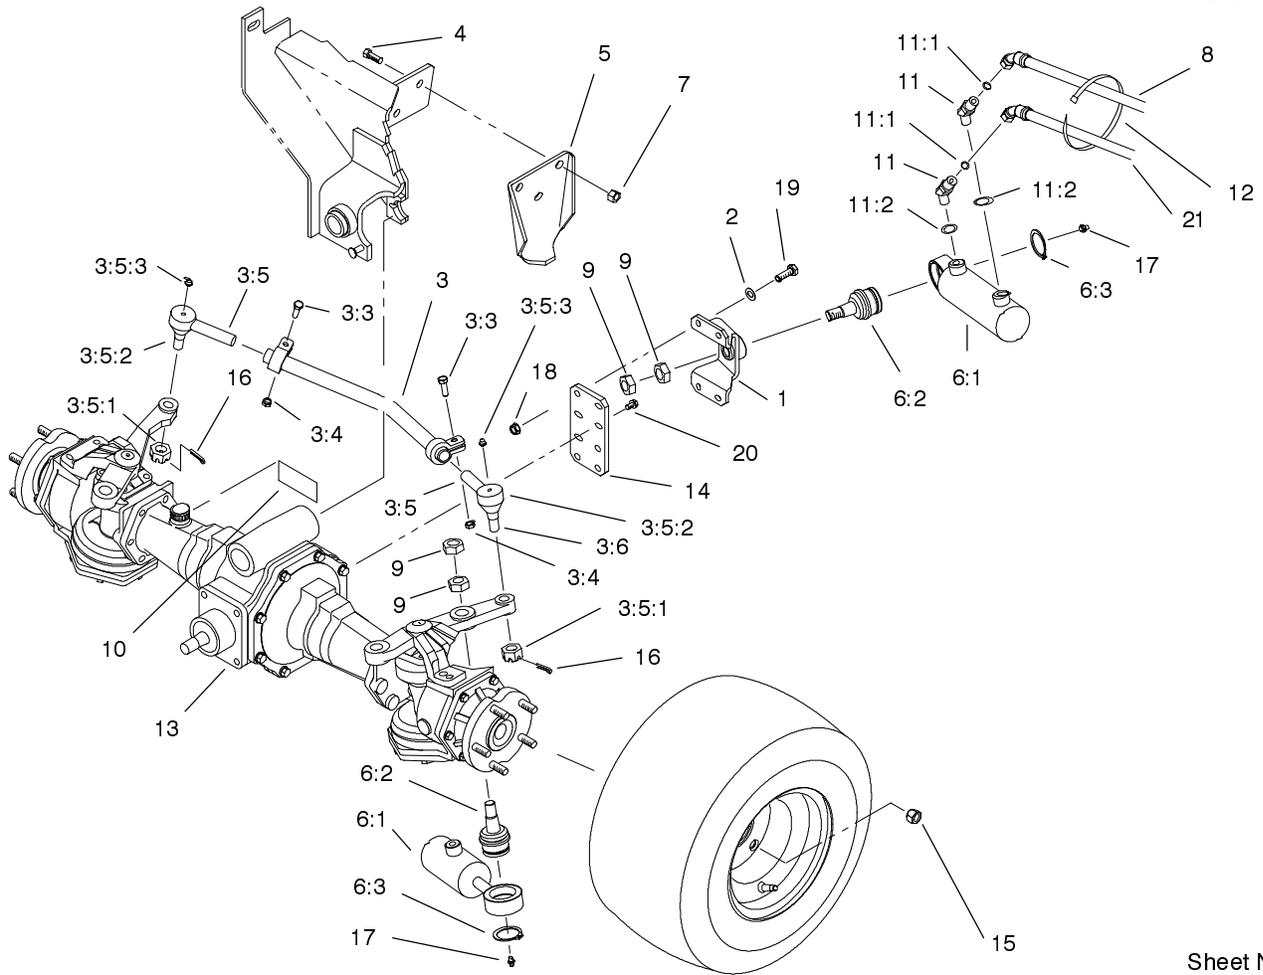


Sheet No.:32

4WD Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	98-3948-03	1	Mount-Cylinder
2	48-9220	4	Washer
3	98-3932	1	Tie Rod ASM
3:1	302-55	2	Zerk
3:2	32136-13	2	Nut-Hex, Slotted
3:3	323-9	2	Screw-HH
3:4	3296-39	2	Nut-Lock, NI
3:5	71-4740	2	End-Tie Rod, RH
3:5:1	32136-13	1	Nut-Hex, Slotted
3:5:2	71-4760	1	Seal
3:5:3	302-55	1	Zerk
3:6	71-4760	2	Seal
3:7	99-8996	1	Tube And Clamp Assembly
4	325-5	6	Screw-HH
5	99-6966-03	2	Stop Axle
6		1	Balljoint ASM
6:1	98-8163	1	Cylinder-Steering
6:2	92-5838	2	Joint-Ball
6:3	32151-104	2	Ring-Retaining, Ext
7	3296-23	6	Nut-Lock, NI
8	104-0070	1	Hose ASM-Hyd
9	3220-6	4	Nut-Jam
10	93-6697	1	Decal - Lube
11	340-103	2	Fitting
11:1	237-78	1	O-Ring

Ref. No.	Part No.	Qty.	Description
11:2	237-21	1	O-Ring
12	3290-378	1	Tie-Cable
13	98-3925	1	Drive Axle ASM
14	98-8198-03	1	Plate-Cyl. Brkt.
15	93-5268	10	Nut-Lug
16	3272-11	2	Pin-Cotter
17	302-5	2	Fitting - Lube
18	3296-39	4	Nut-Lock, NI
19	323-8	4	Screw-HH
20	95-8812	4	Screw-Hhc
21	104-0071	1	Hose ASM-Hyd

Parts not listed in parts list are not serviced separately.

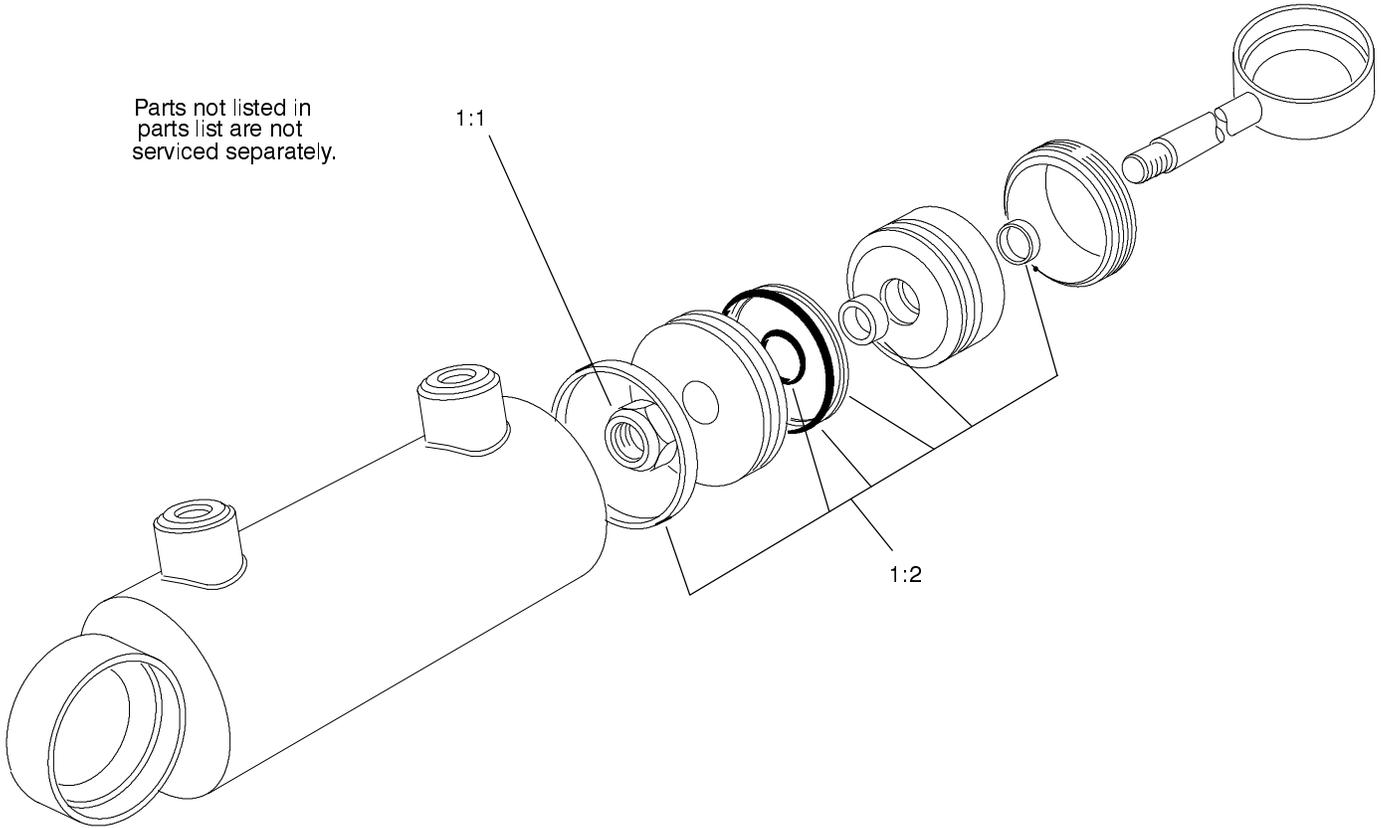


Sheet No.:B4
T-3513

Hydraulic Cylinder No. 98-8163

Ref. No.	Part No.	Qty.	Description
1:1	32152-10	1	Locknut-Deform, Top
1:2	100-8022	1	Seal Repair Kit

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

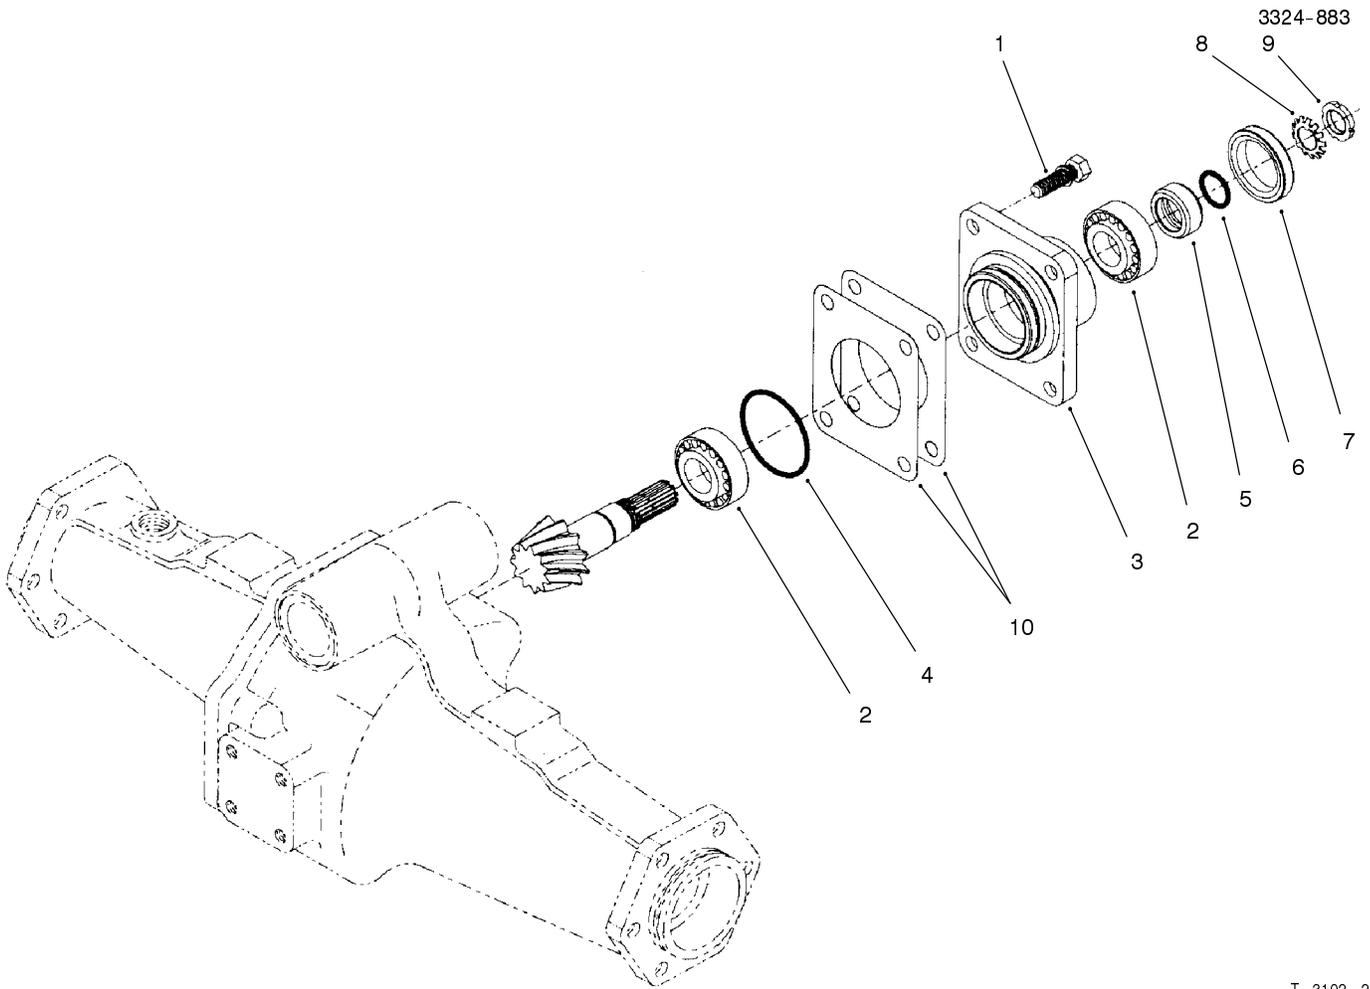


T-3102-2

Rear Axle Assembly No. 98-3925 Bevel Pinion Shaft Assembly

Ref. No.	Part No.	Qty.	Description
1	99-7575	4	Bolt
2	99-7570	2	Bearing-Taper Roller
3	95-7535	1	Case-Bearing
4	99-7571	1	O-Ring
5	99-7572	1	Collar-Oil Seal
6	99-7573	1	O-Ring
7	99-7574	1	Seal-Oil
8	99-7559	1	Washer-Lock
9	99-7560	1	Nut-Lock
10	99-7550	2	Shim-0.1
*	99-7551	2	Shim-0.2

Ref. No.	Part No.	Qty.	Description

* Not Illustrated

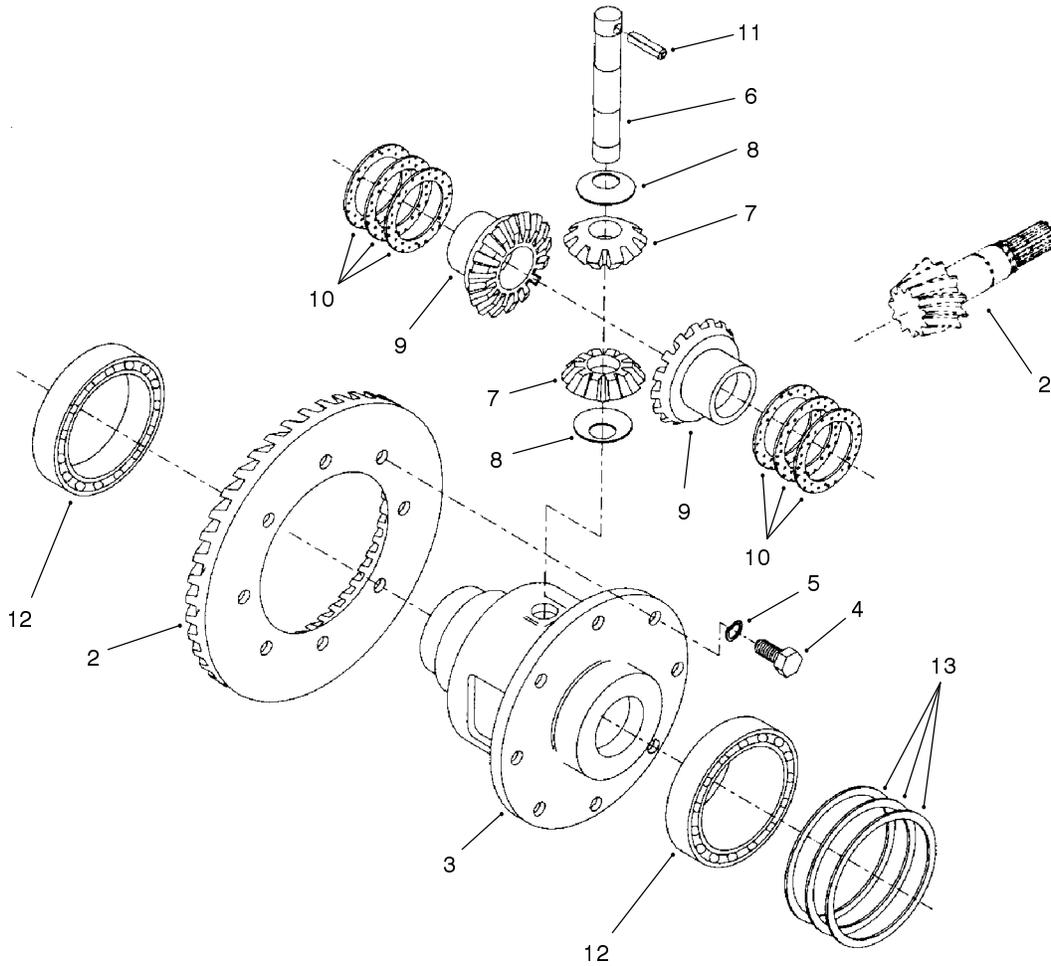


T-3103-2

Rear Axle Assembly No. 98-3925 (Continued) Differential Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-7503	1	Asm-Differential (Incl. Ref. #2-11)				
2	100-2555	1	Ring & Pinion Set				
3	95-7502	1	Case-Differential				
4	99-7576	8	Bolt				
5	99-7577	8	Washer-Spring				
6	99-7578	1	Shaft-Differential Pinion				
7	99-7579	2	Pinion-Differential				
8	99-7580	2	Washer-Differential Pinion				
9	99-7581	2	Gear-Differential, Side				
10	99-7582	2	Washer-Differential				
*	99-7583	2	Washer-Differential				
*	99-7584	2	Washer-Differential				
11	99-7588	1	Pin-Spring				
12	99-7562	2	Bearing-Ball				
13	99-7585	2	Shim-0.1				
*	99-7586	2	Shim-0.2				
*	99-7587	2	Shim-0.4				

PROTOTYPE

* Not Illustrated

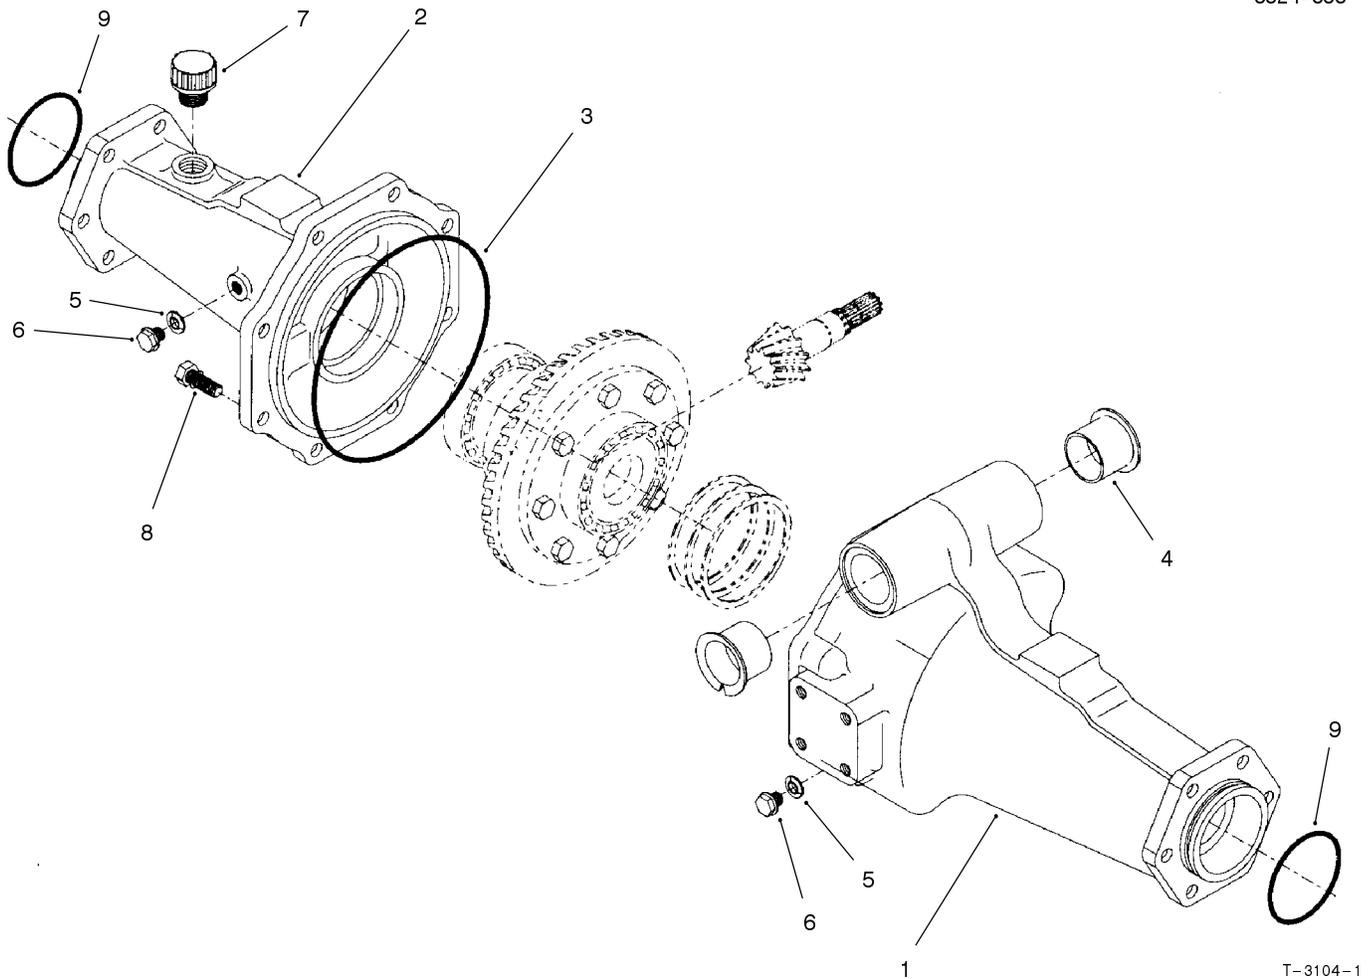


T-3104-1

Rear Axle Assembly No. 98-3925 (Continued) Axle Support Assembly

Ref. No.	Part No.	Qty.	Description
1	95-7508	1	Support #1-Axle
2	95-7506	1	Support #2-Axle
3	95-7507	1	O-Ring
4	95-7537	2	Bushing-Flange
5	99-7589	2	Plug
6	99-7590	2	Washer-Seal
7	99-7591	1	Asm-Oil Plug
8	99-7592	8	Bolt
9	99-7593	2	O-Ring

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

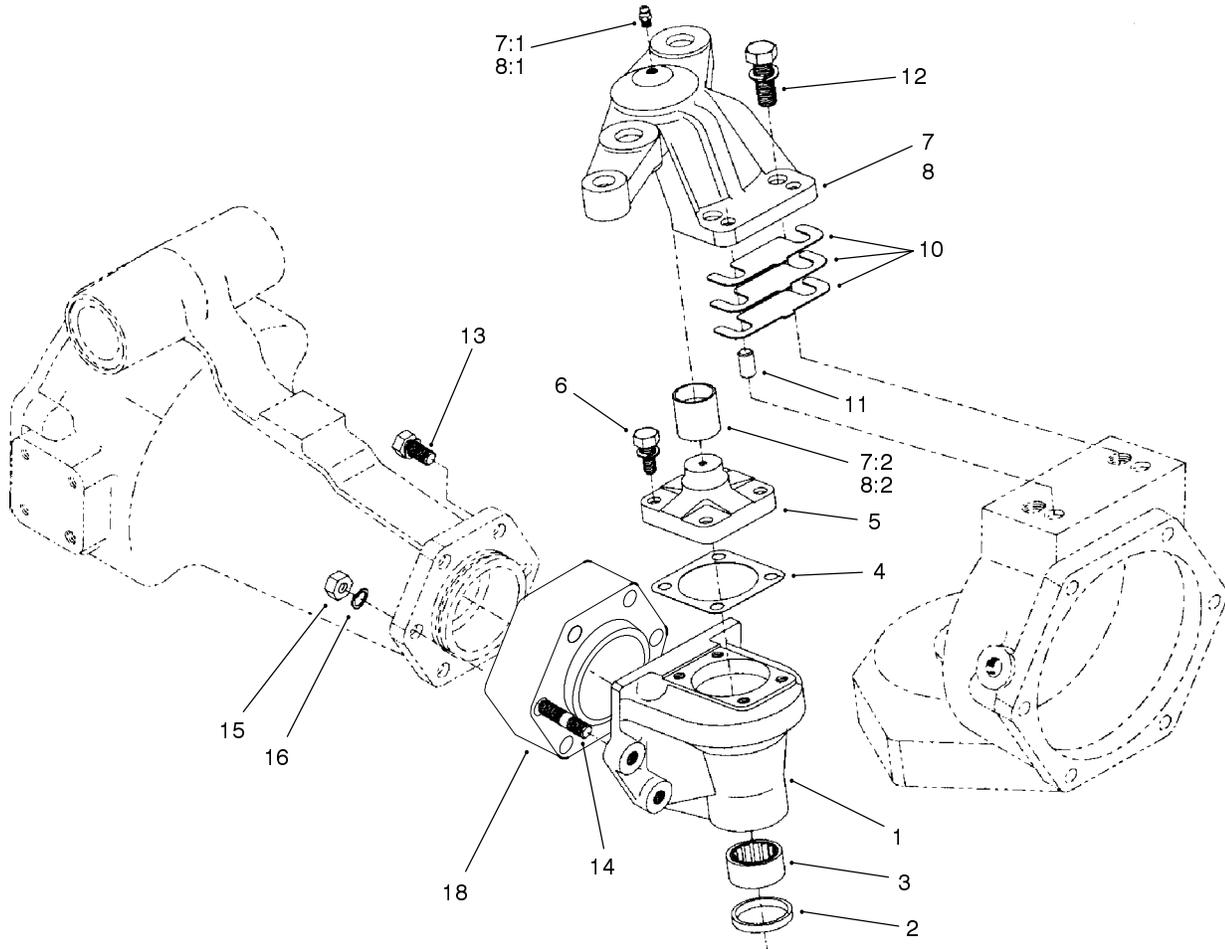


T-3385

Rear Axle Assembly No. 98-3925 (Continued) Bevel Gear Case Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-7539	2	Case-Bevel Gear				
2	99-7594	2	Seal-Oil				
3	99-7595	2	Bearing-Needle				
4	95-7511	2	Gasket				
5	95-7510	2	Pin-Knuckle				
6	99-7596	8	Bolt				
7	100-3746	1	Support-Axle Case, RH				
7:1	99-7528	2	Nipple-Grease				
7:2	99-7529	2	Bushing				
8	100-3748	1	Support-Axle Case, LH				
8:1	99-7528	2	Nipple-Grease				
8:2	99-7529	2	Bushing				
10	95-7547	2	Shim-0.1				
*	95-7548	2	Shim-0.2				
*	95-7549	2	Shim-0.3				
11	99-7597	4	Pin-Straight				
12	99-7598	4	Bolt				
13	100-3736	8	Bolt				
14	100-3737	4	Stud				
15	99-7526	4	Nut				
16	99-7527	4	Washer-Spring				
18	99-7565	2	Spacer				
*	Not Illustrated						

PROTOTYPE

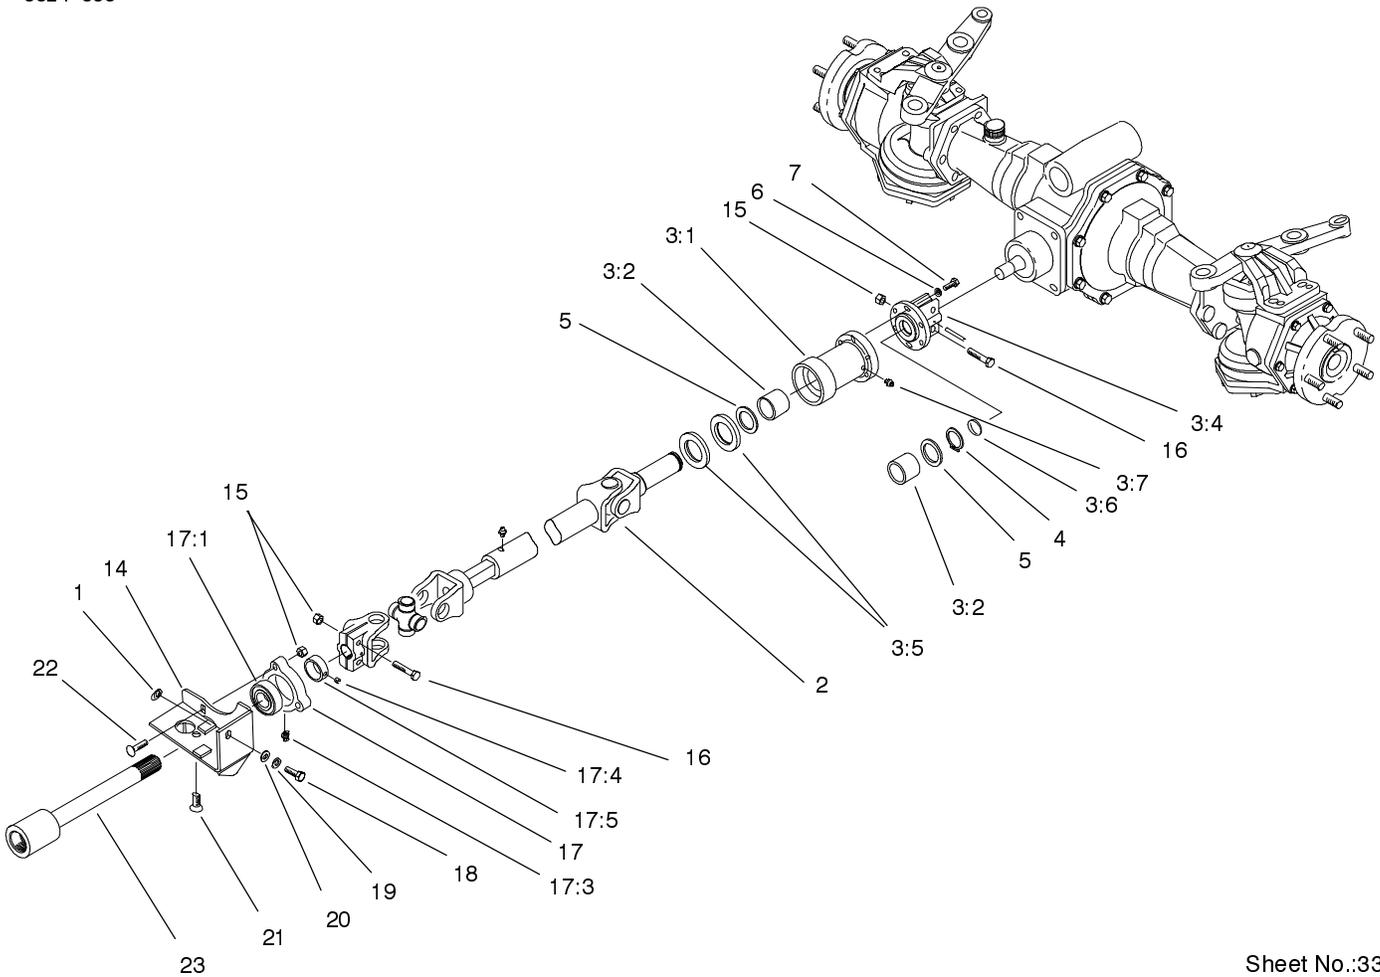


Sheet No.:33

4WD Shaft Assembly

Ref. No.	Part No.	Qty.	Description
1	83-7470	2	Shim
2	99-6976	1	Driveshaft
3	98-3933-03	1	Clutch Housing ASM
3:1	71-4570-03	1	Housing-Clutch, Roller
3:2	71-4580	2	Bearing
3:4	76-4690	1	Coupling-Axle
3:5	253-155	2	Seal-Oil
3:6	284-3	1	Plug
3:7	302-5	1	Fitting-Lube
4	32151-87	1	Ring-Retaining
5	71-4590	2	Washer-Thrust
6	3253-3	6	Washer-Lock/Sp
7	3274-8	6	Screw-HSH
14	83-4970-03	1	Bracket-Bearing
15	3296-29	7	Nut-Lock, NI
16	322-8	4	Screw-HH
17	76-2460	1	Bearing ASM
17:1	94-3405	1	Bearing-Ball
17:3	302-5	1	Fitting - Lube
17:4	3245-35	1	Screw-HS
17:5	251-77	1	Bearing-Lockcollar
18	48-9460	1	Capscrew-Hex
19	42-9850	1	Washer-Lock, Spring
20	48-8030	1	Washer
21	3274-34	1	Screw-HSFH

Ref. No.	Part No.	Qty.	Description
22	3230-3	3	Screw-CARR
23	83-4900-03	1	Shaft-Traction

PROTOTYPE

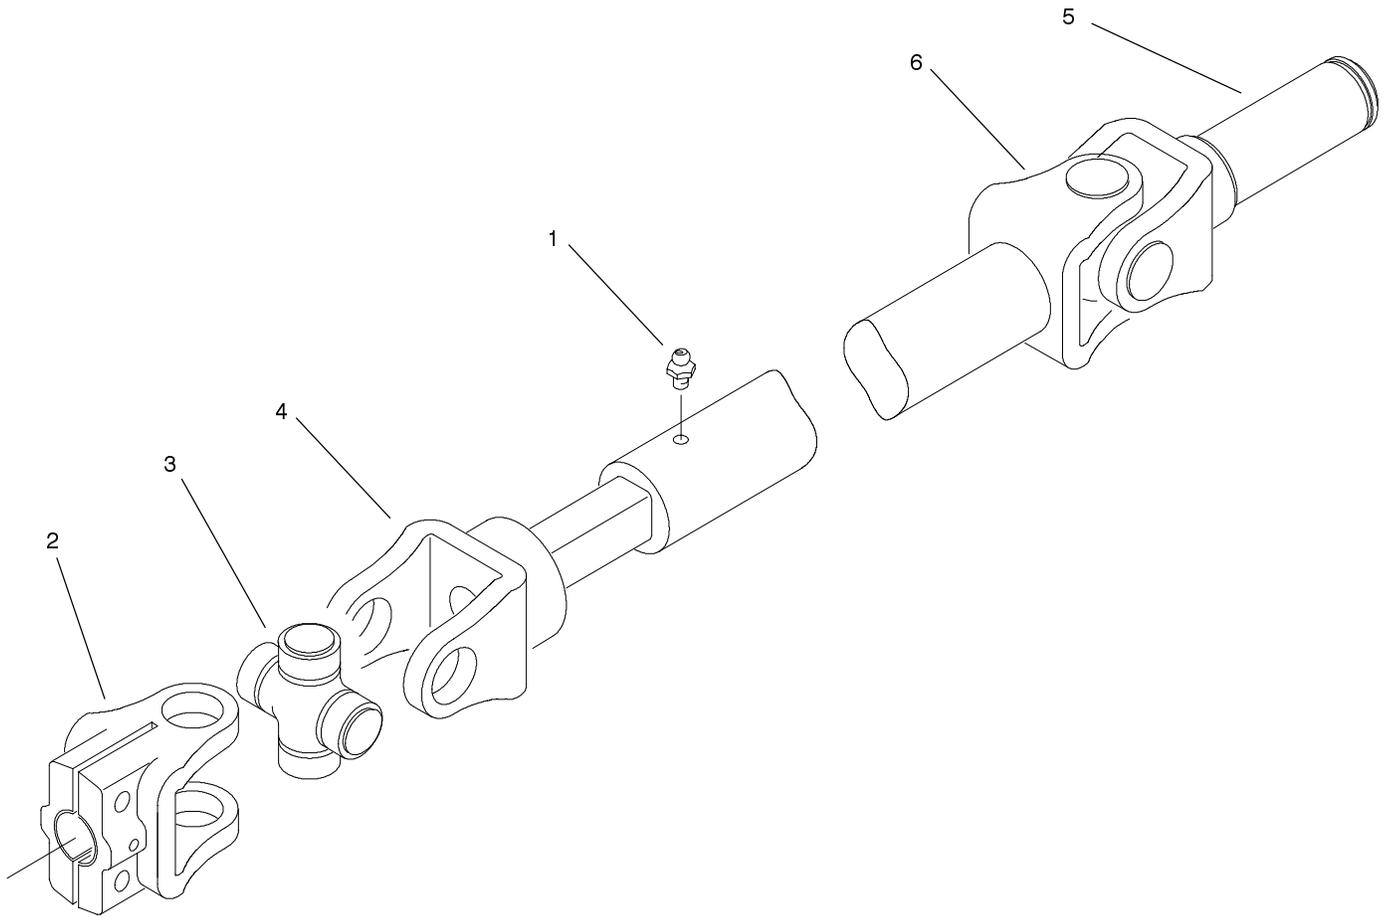


Sheet No.:B5
T-3441

Driveshaft Assembly No. 99-6976

Ref. No.	Part No.	Qty.	Description
1	302-58	1	Fitting-Grease
2	54-9090	1	Yoke-End
3	54-9180	2	Kit-U-Joint
4	104-1693	1	Shaft-Yoke, Slip
5	72-3440	1	Yoke - Shaft
6	83-5260	1	Tube-Yoke, Slip

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

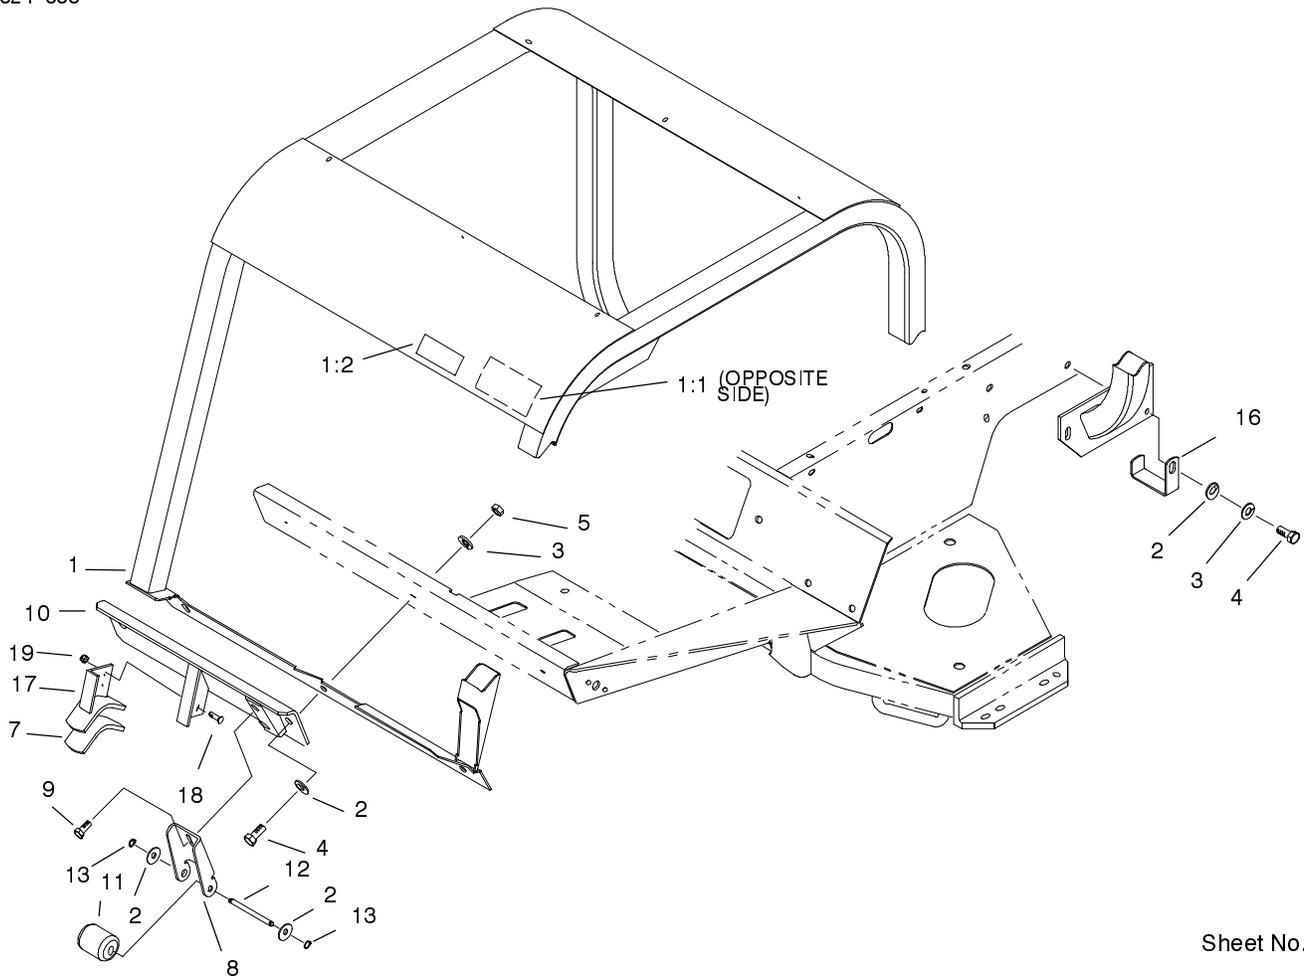


Sheet No.:35

ROPS Assembly

Ref. No.	Part No.	Qty.	Description
1	104-1248	1	Bar-Roll Assembly
1:1	93-8050	1	Decal-Roof, Rops
1:2	85-9980	1	Decal
2	3256-26	11	Washer-Flat
3	3253-7	9	Washer-Lock/Sp
4	325-5	9	Screw-HH
5	3217-9	3	Nut-Hex
7	104-1411	1	Guard-Stabilizer
8	99-6938-03	1	Bracket-Tipper
9	3234-1	2	Screw-HHF
10	98-3900-03	1	Stabilizer ASM
11	75-5390	1	Roller
12	75-5400	1	Pin - Roller
13	32151-61	2	Ring-Retaining
16	98-3928	2	Clamp-hose
17	104-1471	1	Saddle
18	3231-2	2	Screw-CARR
19	3296-39	2	Nut

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

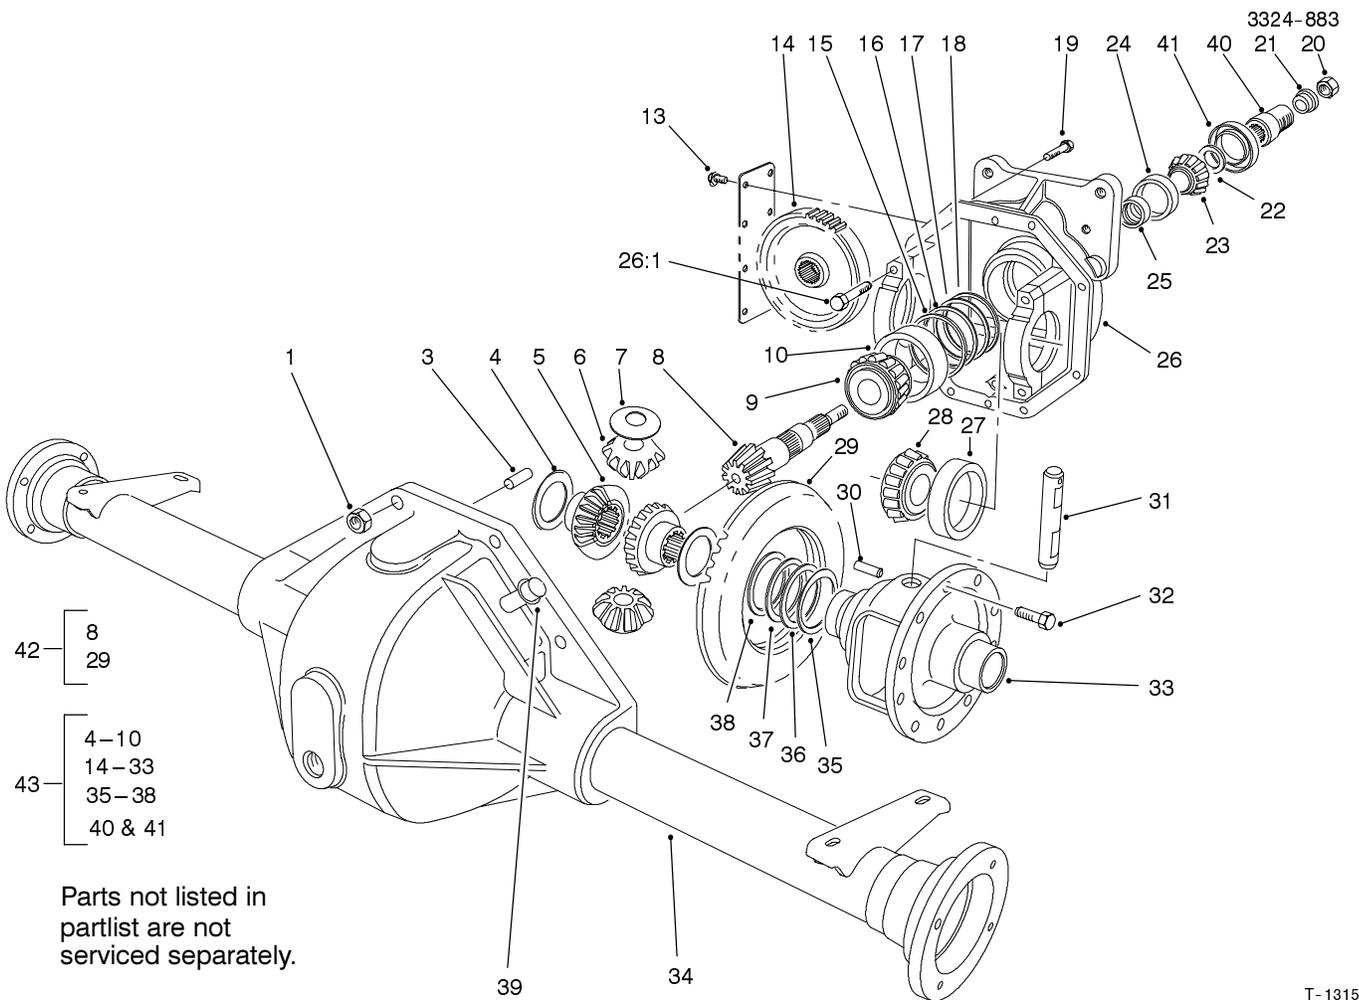


Axle Assembly No. 99-6981-03

T-1315

Ref. No.	Part No.	Qty.	Description
1	32144-5	8	Nut
3	21-8270	2	Pin-Dowel
4	21-7720	2	Washer-Thrust
5	24-8790	2	Gear-Bevel, Differential
6	21-7690	2	Gear-Pinion
7	21-7730	2	Washer-Thrust
9	43-6760	1	Cone-Bearing, Tapered
10	43-6750	1	Cup-Bearing, Tapered
13	32144-112	8	Screw-Forming, Thread
14	86-7230	1	Gear-Spur
15	43-6710	A/R	Diff. Adjust. Shim .003
16	43-6711	A/R	Diff. Adjust. Shim .005
17	43-6712	A/R	Diff. Adjust. Shim .010
18	43-6713	A/R	Diff. Adjust. Shim .030
19	3210-8	8	Screw-HH
20	71-4350	1	Nut
21	83-5130	1	Spacer-Pinion
22	72-3570	A/R	Shim .094-Diff. Adjust.
*	72-3571	A/R	Shim .096-Diff. Adjust.
*	72-3572	A/R	Shim .098-Diff. Adjust.
*	72-3573	A/R	Shim .100-Diff. Adjust.
*	72-3574	A/R	Shim .102-Diff. Adjust.
*	72-3575	A/R	Shim .104-Diff. Adjust.

Ref. No.	Part No.	Qty.	Description
*	72-3576	A/R	Shim .106-Diff. Adjust.
*	72-3577	A/R	Shim .108-Diff. Adjust.
*	72-3578	A/R	Shim .110-Diff. Adjust.
*	72-3580	A/R	Shim .112-Diff. Adjust.
*	72-3581	A/R	Shim .114-Diff. Adjust.
*	72-3582	A/R	Shim .116-Diff. Adjust.
*	72-3583	A/R	Shim .118-Diff. Adjust.
*	72-3584	A/R	Shim .120-Diff. Adjust.
*	72-3585	A/R	Shim .125-Diff. Adjust.
*	72-3586	A/R	Shim .127-Diff. Adjust.
*	72-3587	A/R	Shim .129-Diff. Adjust.
*	72-3588	A/R	Shim .131-Diff. Adjust.
*	72-3590	A/R	Shim .133-Diff. Adjust.
*	72-3591	A/R	Shim .135-Diff. Adjust.
*	72-3592	A/R	Shim .137-Diff. Adjust.
*	72-3593	A/R	Shim .139-Diff. Adjust.
*	72-3594	A/R	Shim .141-Diff. Adjust.
*	72-3595	A/R	Shim .143-Diff. Adjust.
*	72-3596	A/R	Shim .145-Diff. Adjust.
*	72-3597	A/R	Shim .147-Diff. Adjust.
*	72-3598	A/R	Shim .149-Diff. Adjust.
*	72-3600	A/R	Shim .151-Diff. Adjust.
23	254-91	1	Cone-Bearing
24	21-8390	1	Cup-Bearing
25	21-8020	1	Spacer-Pinion, Front

* Not Illustrated.

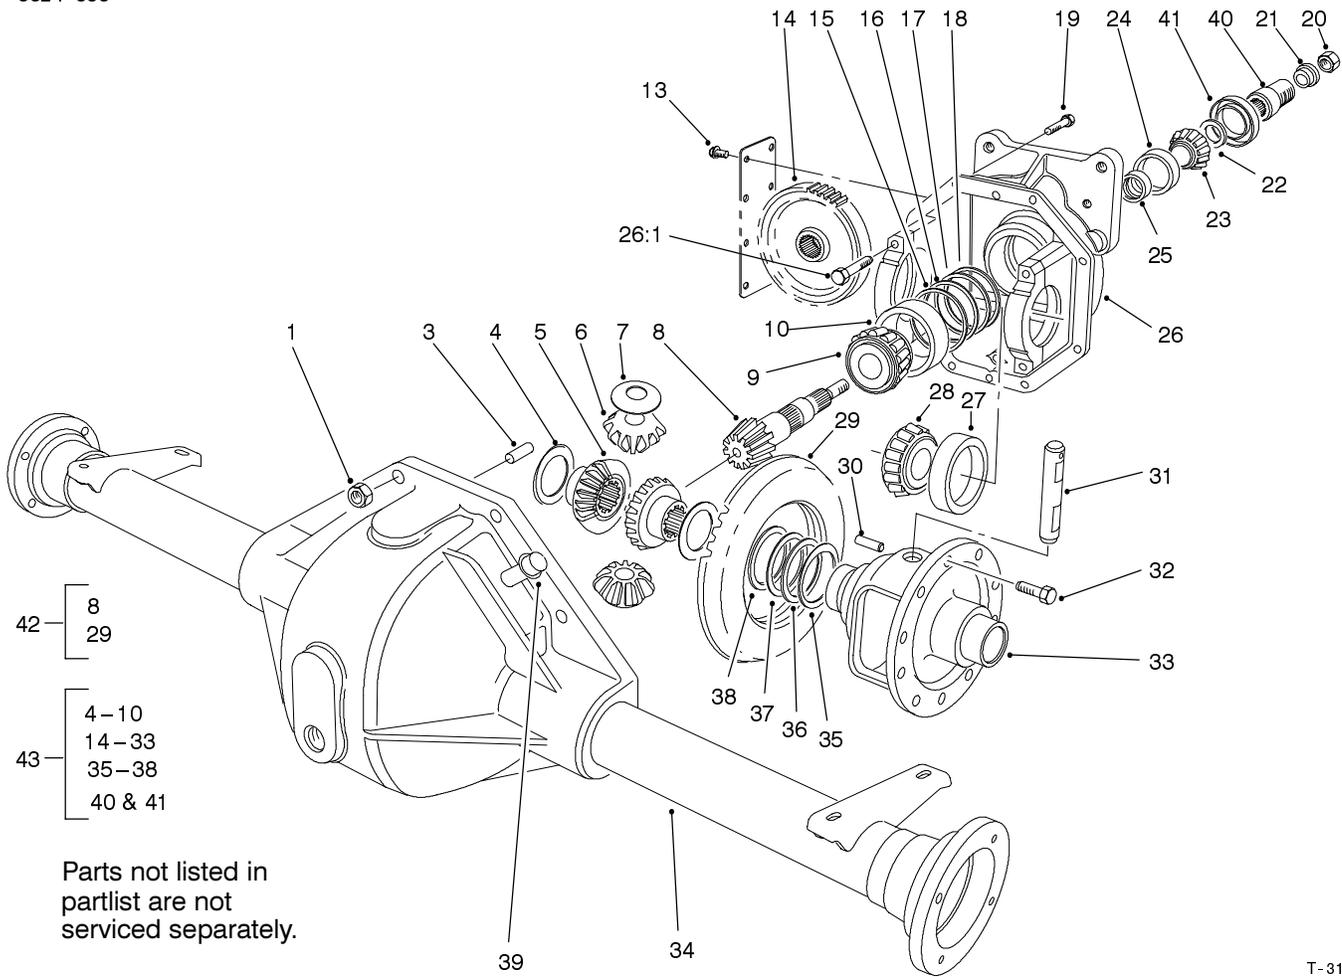

T-3115


Axle Assembly No. 99-6981-03 (Continued)

Ref. No.	Part No.	Qty.	Description
26	93-3619	1	Housing-Upper
26:1	92-1773	4	Screw-HH
27	254-66	2	Cup-Bearing, Tapered
28	254-65	2	Cone-Bearing, Tapered
30	21-7710	1	Pin-Roll
31	21-7700	1	Shaft-Mate, Pinion
32	21-7770	5	Screw-Gear, Drive
33	21-7670	1	Case-Differential
34	75-0721	1	Housing-Lower
35	21-8120	A/R	Diff. Adjust. Shim .030
36	21-8110	A/R	Diff. Adjust. Shim .010
37	21-8100	A/R	Diff. Adjust. Shim .005
38	21-8090	A/R	Diff. Adjust. Shim .003
39	72-9420	1	Vent Tube ASM
40	83-4910	1	Coupler-Pinion
41	71-4330	1	Seal
42	93-3618	1	Gear and Pinion ASM
43	93-3617	1	Differential ASM

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

* Not Illustrated.

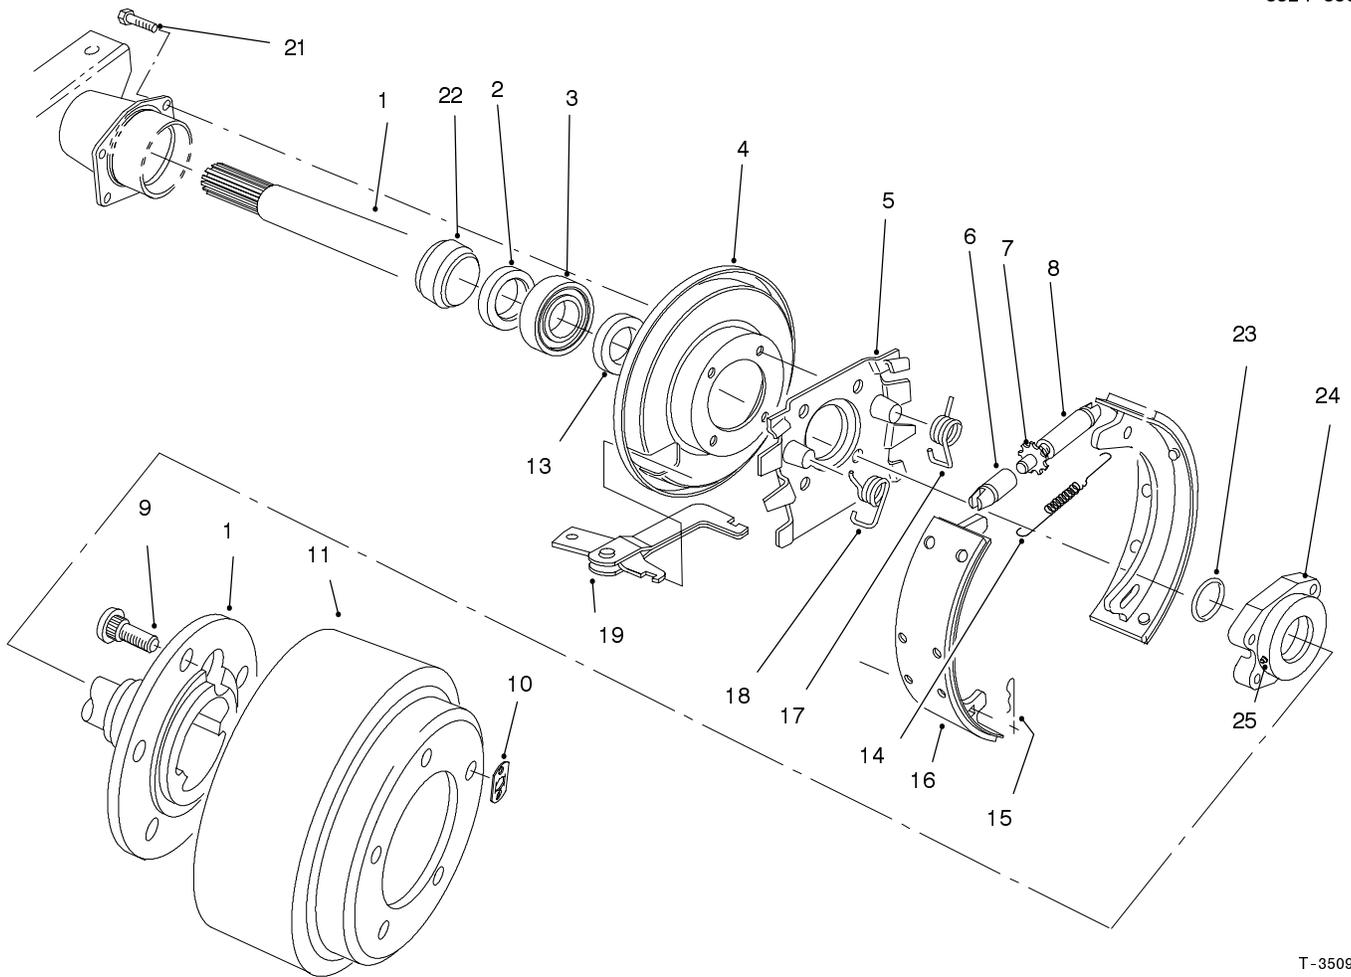

T-3509


Brake Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-3840	1	Shaft-Axle, Flanged LH	21	100-3846	8	Screw-HSH
*	100-3841	1	Shaft-Axle Flanged RH	22	100-3847	2	Retaining-Bearing
2	100-3842	2	Seal-Oil	23	100-3848	2	O-Ring
3	21-8180	2	Bearing	24	100-3849	2	Cap-Bearing
4	100-3843	2	Shield-Dust	25	100-3850	2	Zerk-Special
5	100-3844	2	Spider-Torque	*	84-8600	1	Set of Linked Brake Shoes
6	21-9390	2	Socket-Screw, Adjusting	*	92-8775	1	Kit-Gasket, Liquid
7	21-9370	2	Screw-Adjusting				
8	21-9380	2	Nut-Pivot				
9	242-34	10	Stud-Flange, Axle				
10	21-8360	2	Clip-Retaining				
11	28-0680	2	Drum-Brake				
13	100-3845	2	Seal-Grease				
14	21-9440	2	Spring-Screw, Adjusting				
15	21-9460	4	Retainer-Brake, Parking				
16	84-8590	4	Shoe and Lining ASM				
17	21-9420	2	Spring-Shoe Return, LH				
18	21-9430	2	Spring-Shoe Return, RH				
19	24-9180	2	Lever-Brake, Parking				

* Not Illustrated

Special Tools

AXLE TOOL NO. *TOR859920

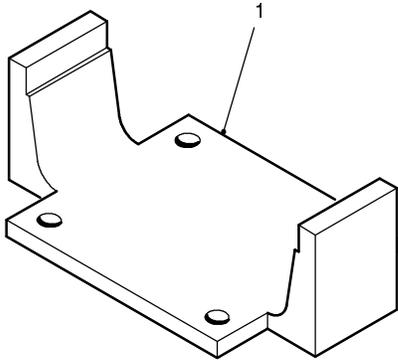


T-1325-1

Ref. No.	Part No.	Description	No. Used
1		Tool-Axle	1

PROTOTYPE

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
 (in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

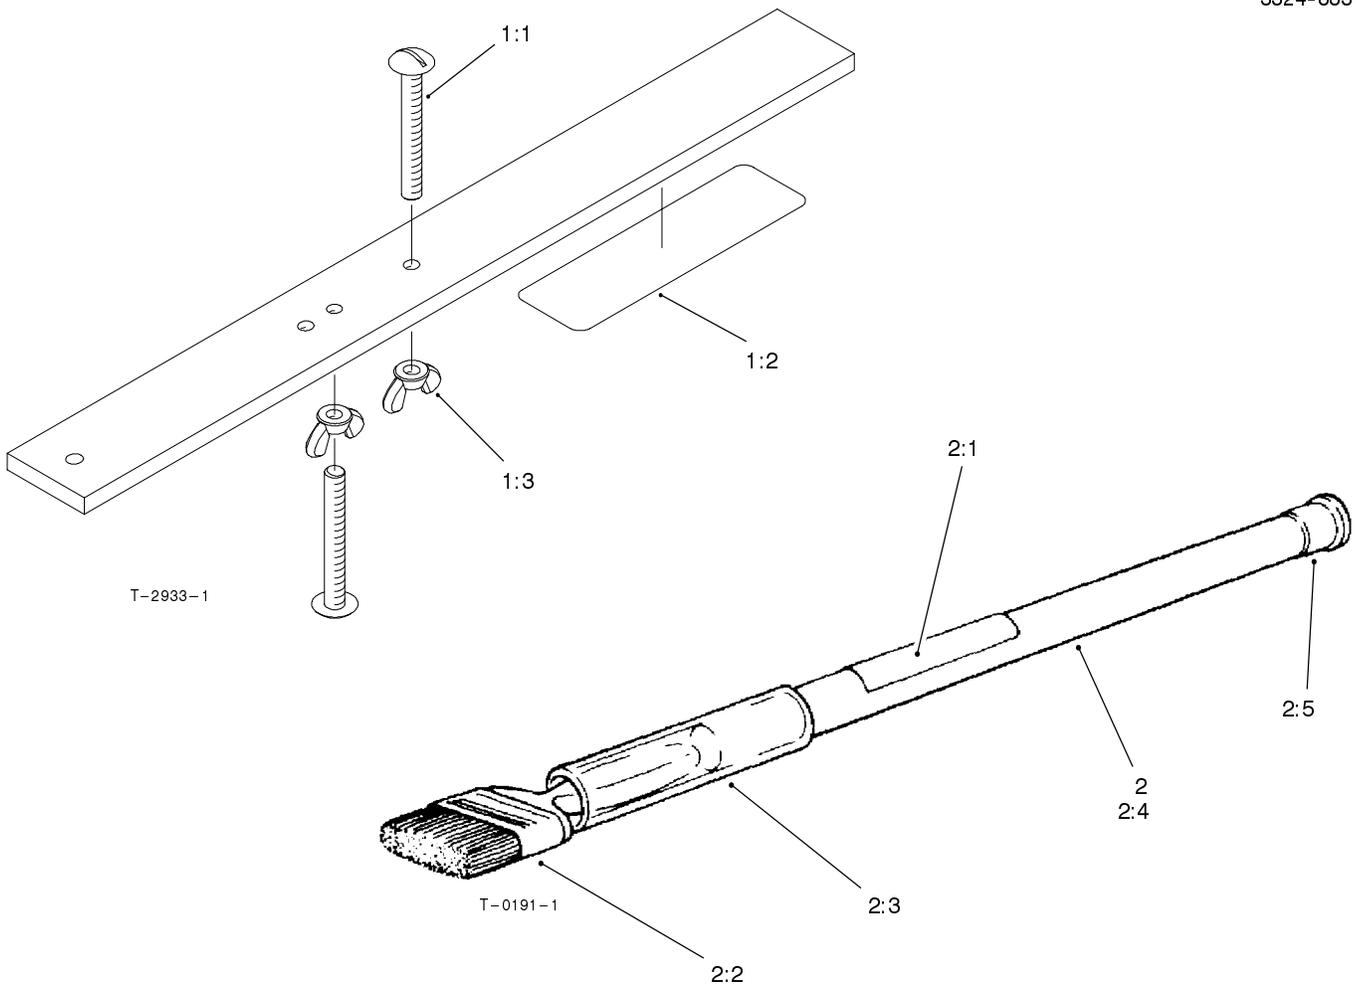

Gauge Bar and Backlapping Brush Assembly


Ref. No.	Part No.	Qty.	Description
1	98-1852	1	Gauge Bar ASM
1:1	32122-54	2	Screw
1:2	98-7976	1	Decal
1:3	32103-3	2	Nut-Wing
2	29-9100	1	Backlapping Brush ASM
2:1	12-9140	1	Decal
2:2	36-4310	1	Brush
2:3	29-9090	1	Hose-Handle
2:4	29-9080	1	Handle
2:5	2410-18	1	Plug

Ref. No.	Part No.	Qty.	Description


PROTOTYPE

Hydraulic Schematic


DISPLACEMENT, FLOW RATE AND PRESSURE CHART						
COMPONENT	DISPLACEMENT		PRESSURE		*FLOW RATE	
	in ³ /rev	cm ³ /rev	lbs/in ²	BARS	GPM	LPM
P1	.66	10.8			8.4	31.8
P2	.66	10.8			8.4	31.8
P3	.37	6			4.7	17.8
P4	1.5	25			19.1	72.3
P5	.58	9.5			7.4	28
M1	1.16	19				
M2	1.16	19				
M3	1.16	19				
M4	1.16	19				
M5	1.16	19				
M6	1.51	25				
V1	6.1	100				
R1			3000	207		
R2			3000	138		
R3			1450	100		
R4			3625	250		
R5			150	10		
R6			70	5		
R7			70	5		
R8			3625	250		
R9			1500	103		

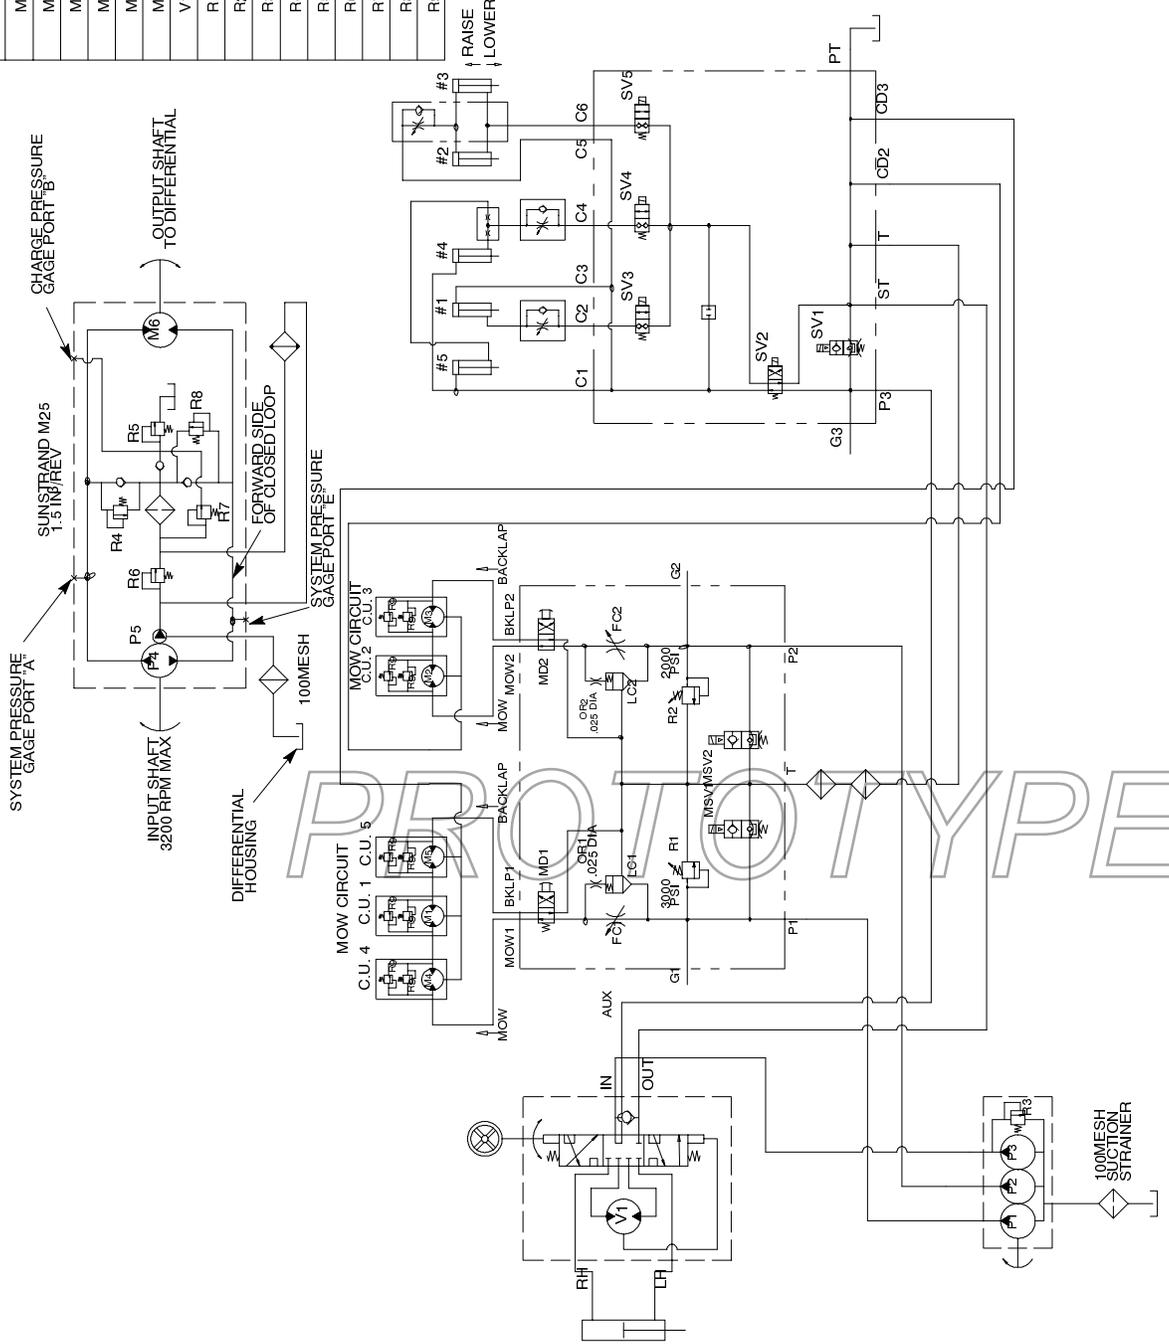


Electrical Schematic

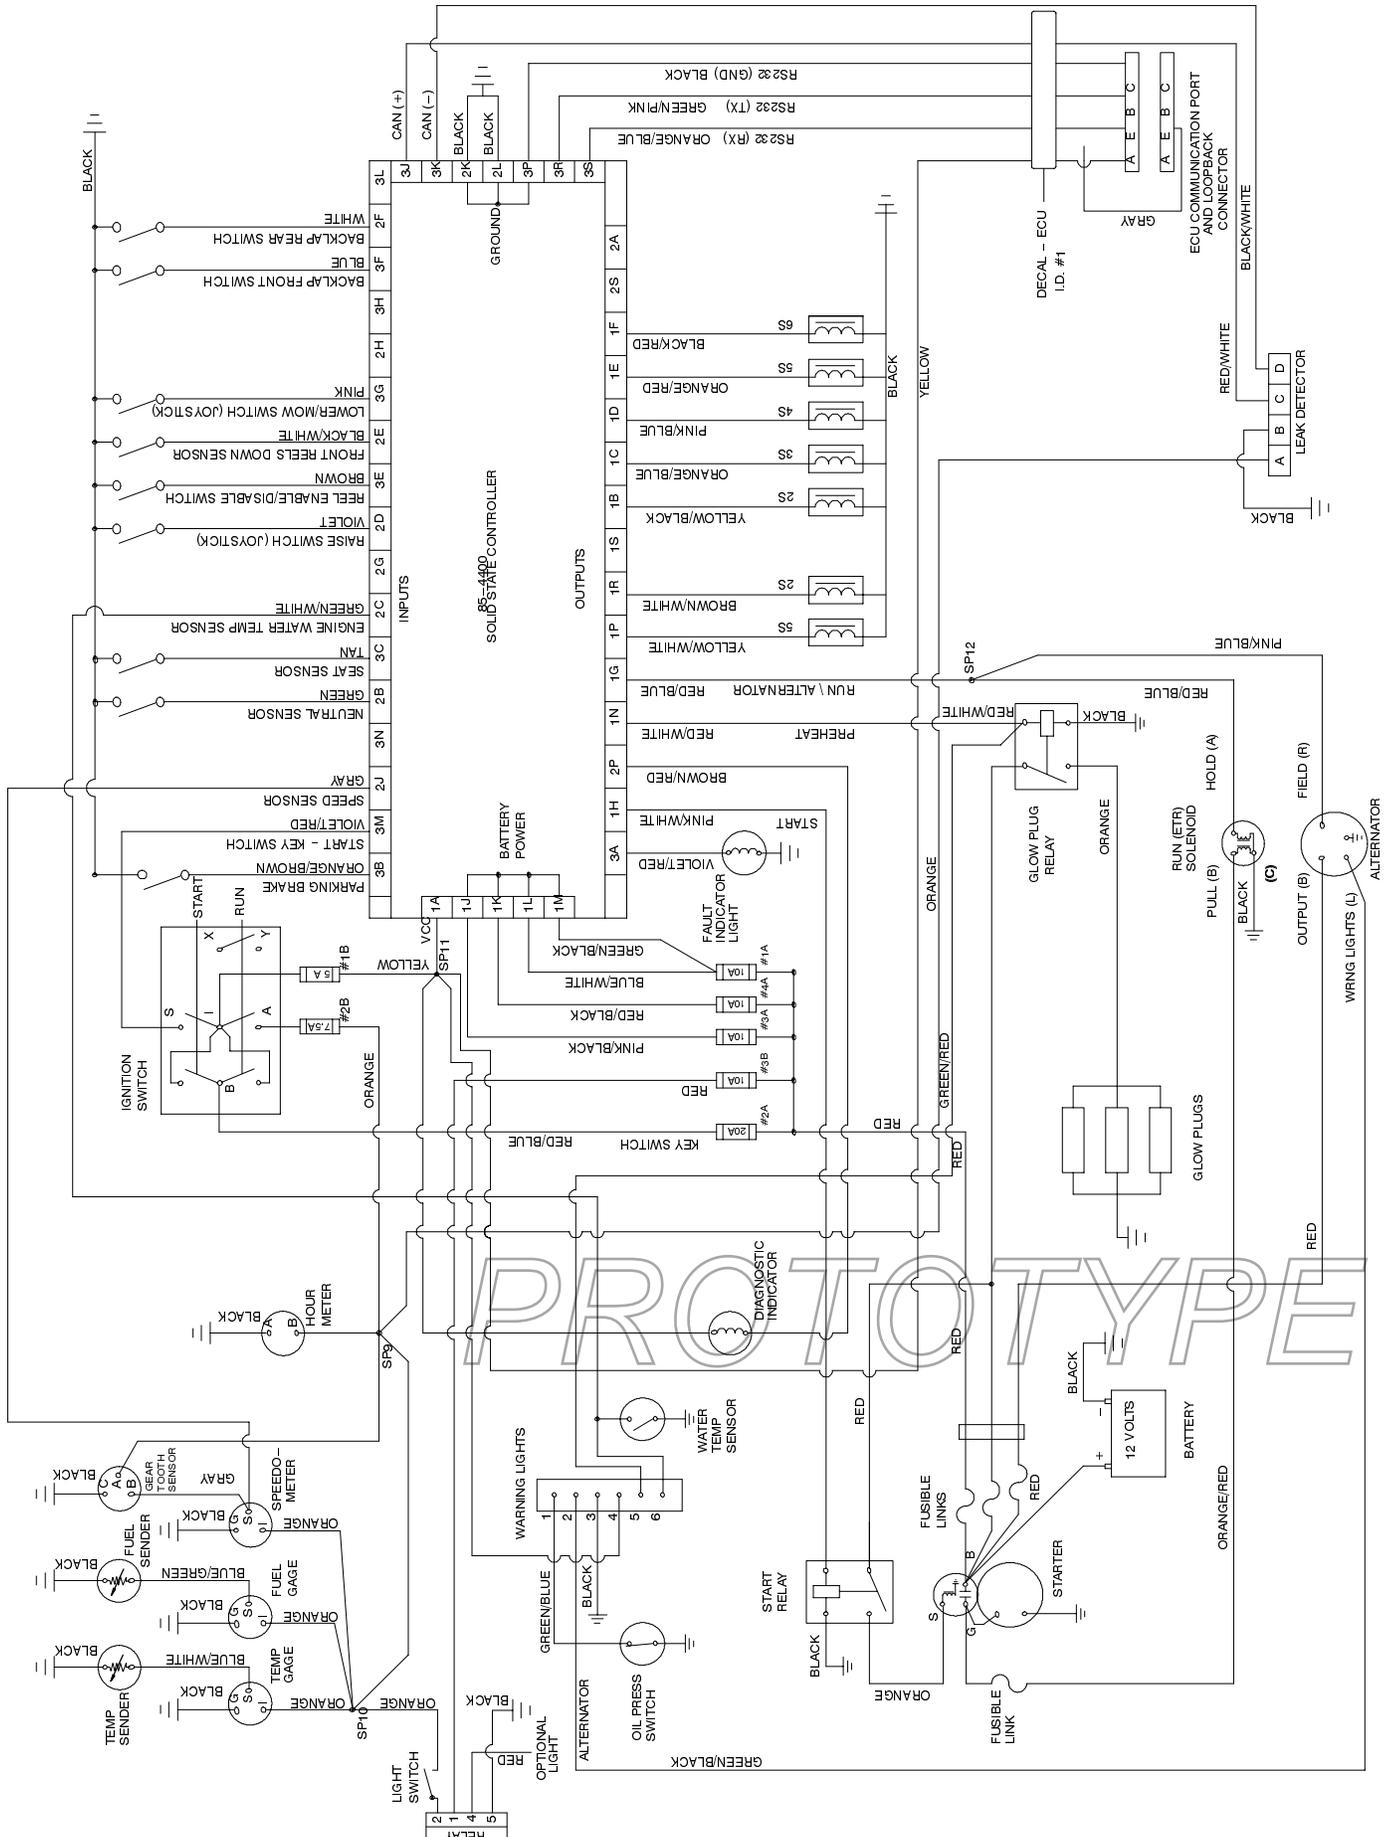

Electrical Schematic - Turfdefender

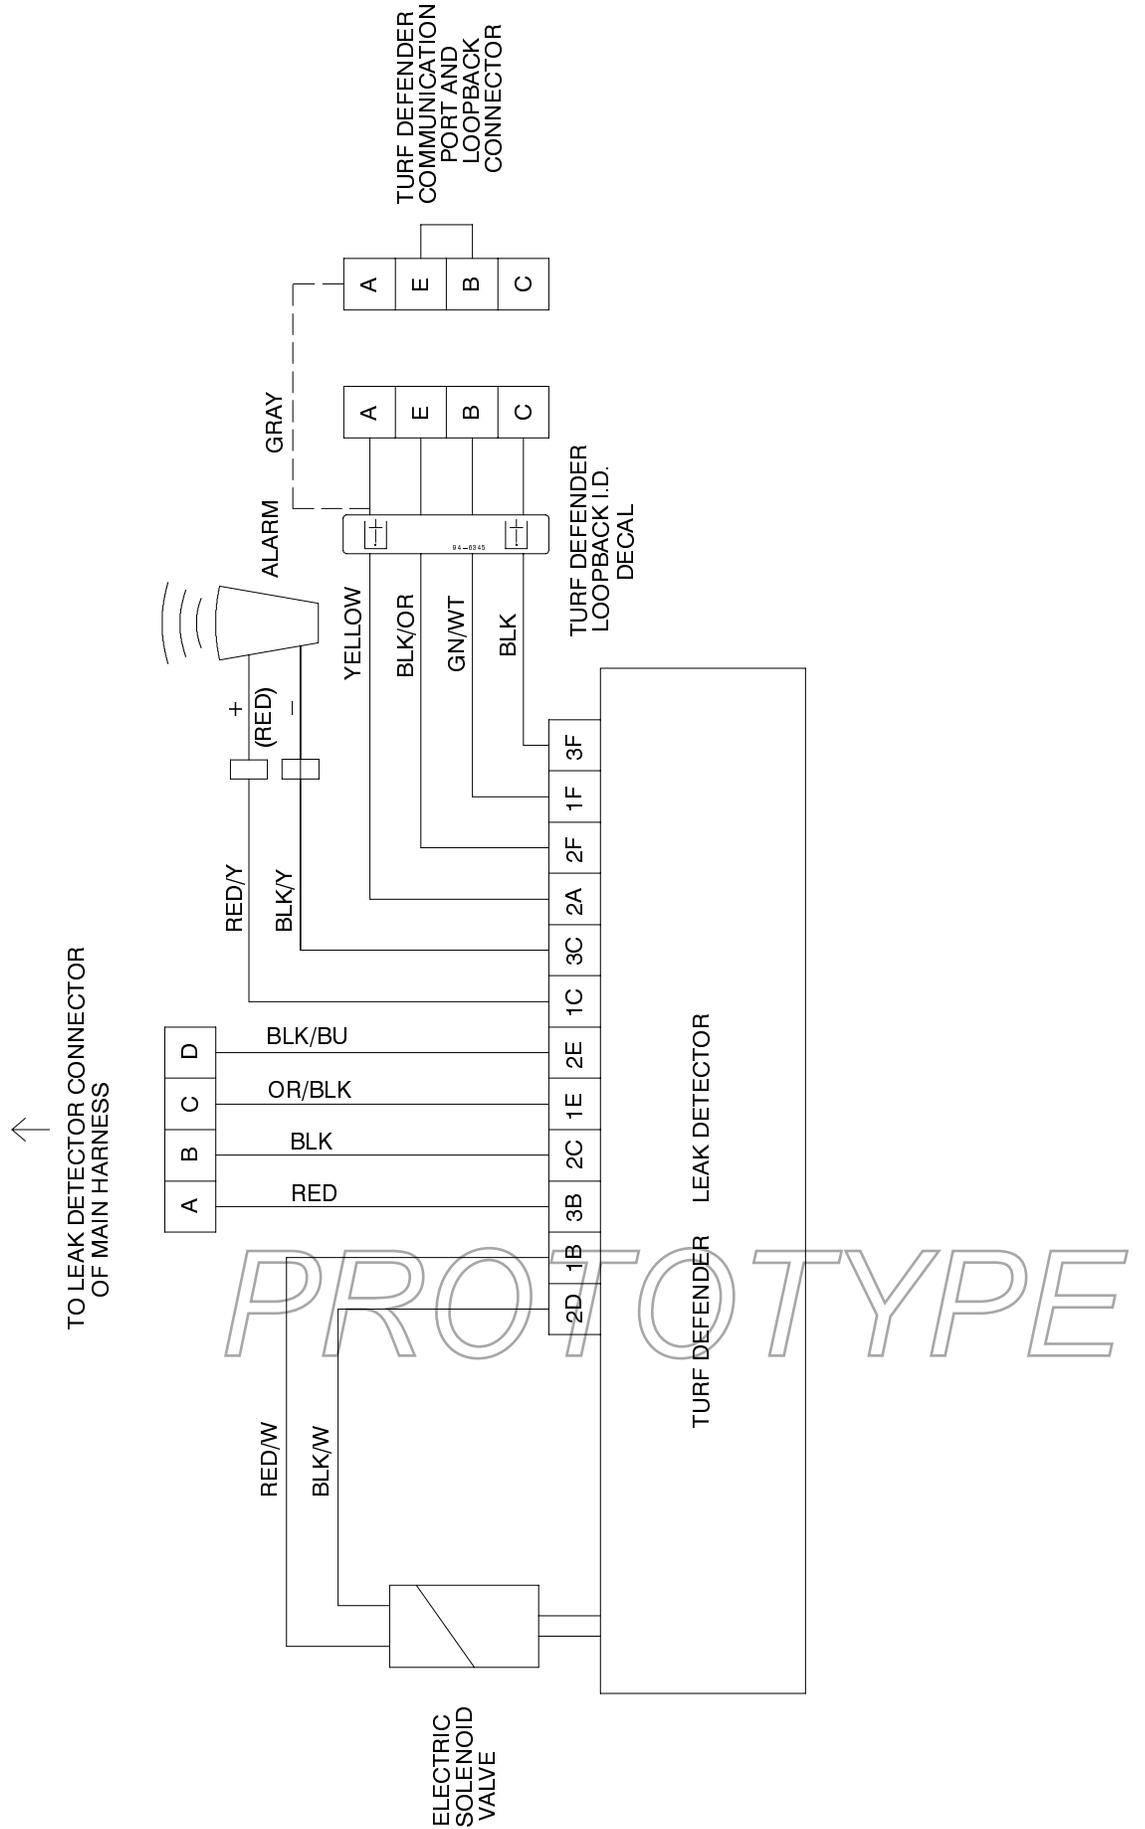

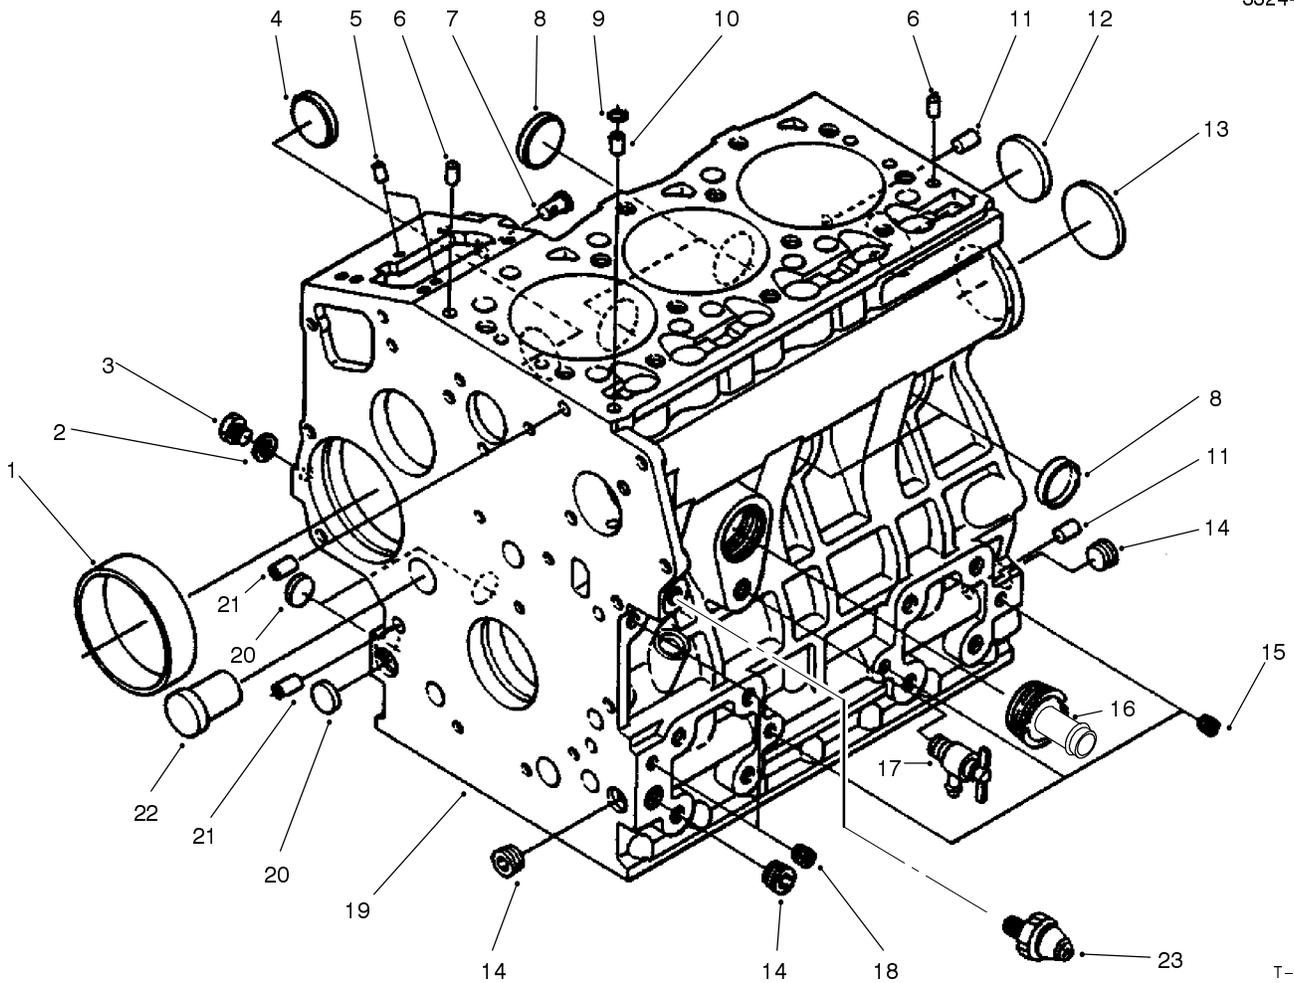


T-2906

Crankcase Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9656	1	Bushing-Governor, Gear
2	98-7428	1	Gasket
3	98-7507	1	Plug
4	98-9599	1	Plug
5	98-9375	2	Pin-Straight
6	98-9376	2	Pin-Straight
7	98-9630	1	Pin-Start Spring
8	98-9398	4	Cap-Sealing
9	98-7509	1	O-Ring
10	98-9539	1	Pin-Pipe
11	98-9377	2	Pin-Straight
12	98-7539	1	Cap-Sealing
13	98-9668	1	Plug
14	98-9597	3	Plug
15	98-7540	3	Plug
16	99-8347	1	Joint-Drain, Pipe
17	98-9436	1	Asm-Cock, Drain
18	98-7487	2	Plug
19	99-8300	1	Asm-Crankcase (Incl. Ref. #1-8, 10-16, 18 & 20-22)
20	98-9379	3	Plug
21	98-9387	2	Pin-Pipe


Ref. No.	Part No.	Qty.	Description
22	98-9675	1	Plug
23	98-9416	1	Switch

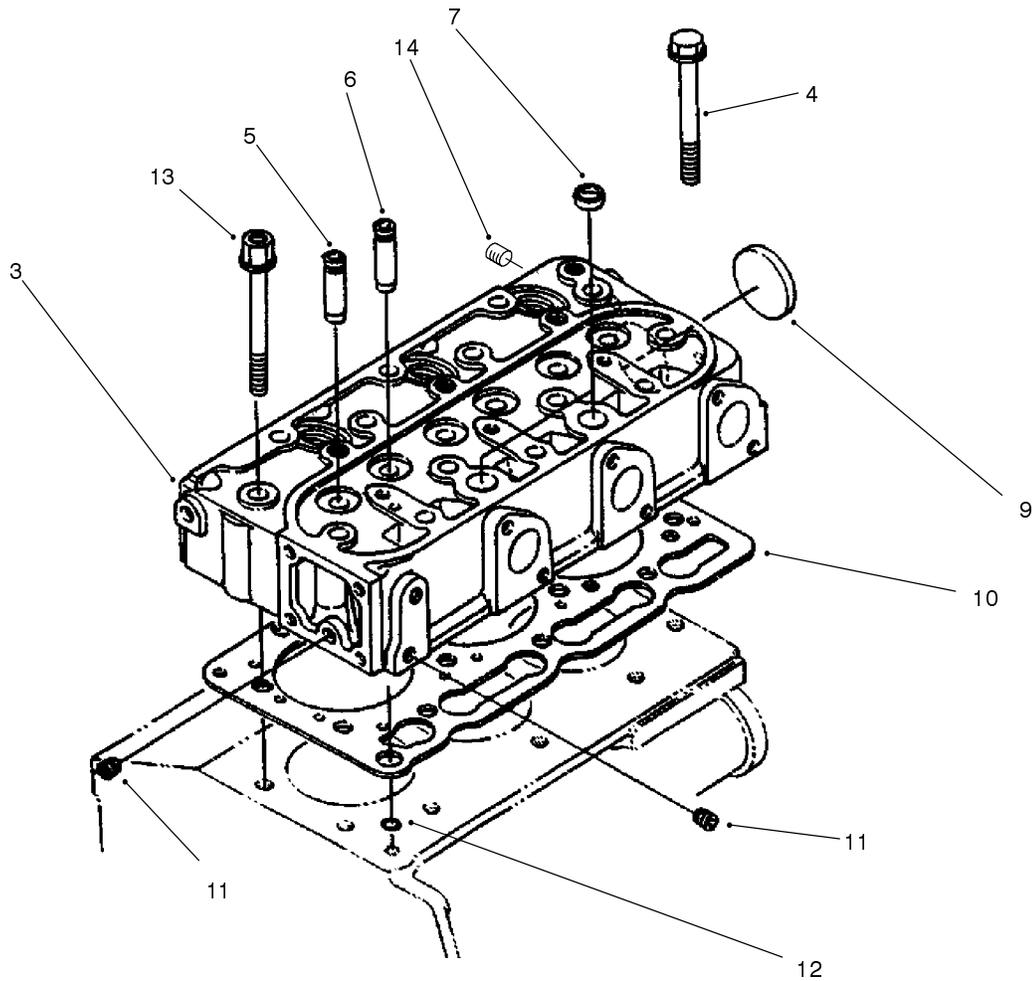

T-2908-1

Cylinder Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
3	99-8344	1	Asm-Cylinder Head (Incl. Ref. #5-7, 9,11 & 14)				
4	98-9479	12	Bolt-Cylinder Head				
5	98-9499	3	Guide-Inlet Valve				
6	98-9500	3	Guide-Exhaust Valve				
7	98-9389	2	Cap-Sealing				
9	98-9395	1	Cap-Sealing				
10	98-9613	1	Gasket-Cylinder Head				
11	98-7540	2	Plug				
12	98-7509	1	O-Ring				
13	98-9647	2	Bolt-Cylinder Head				
14	98-9444	1	Plug				

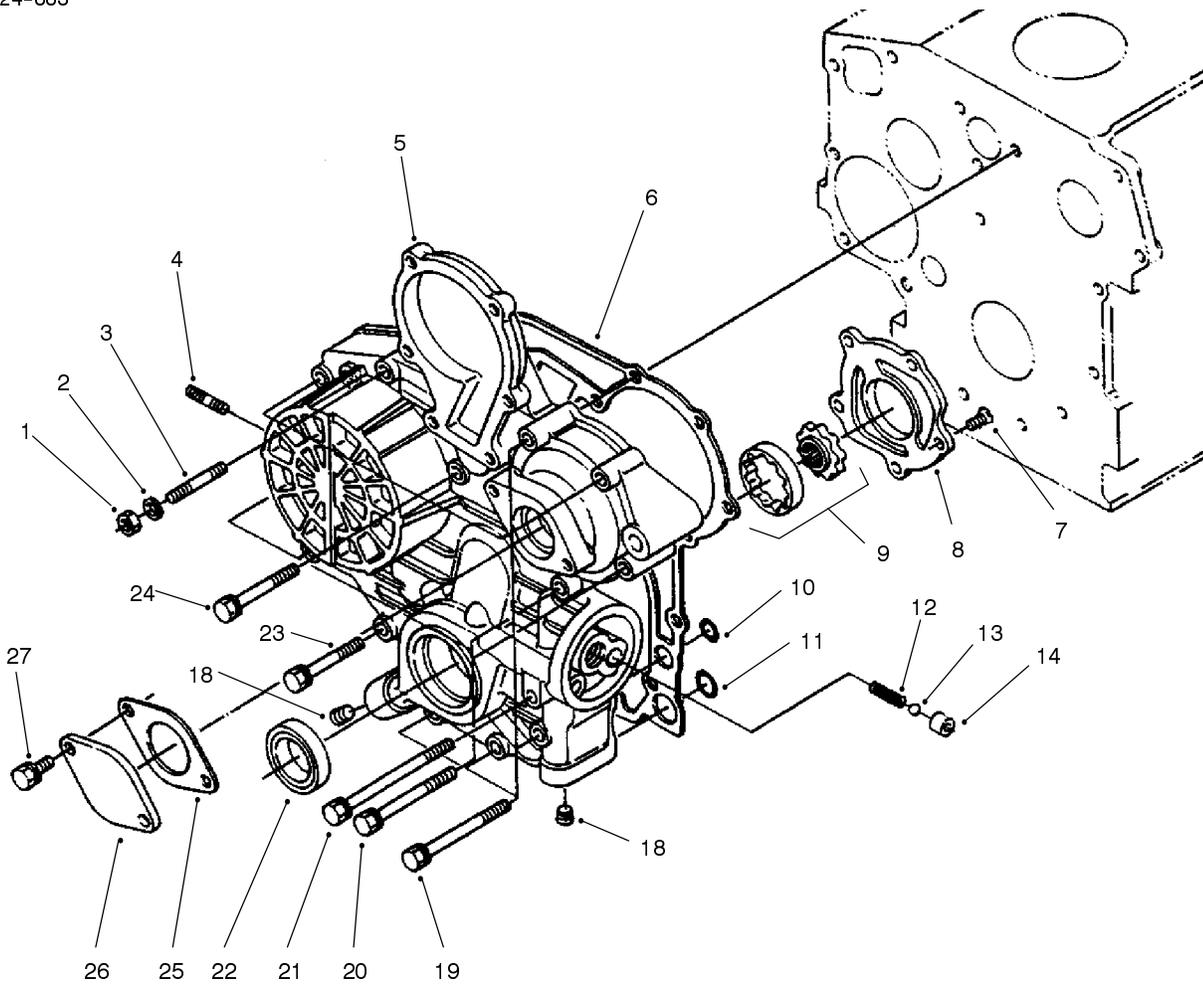


T-2909

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7572	1	Nut
2	98-9367	1	Washer-Lock
3	98-9363	1	Stud
4	98-9362	2	Stud
5	99-8381	1	Asm-Case, Gear (Incl. Ref. #7-9, 12-14 & 18)
6	98-9633	1	Gasket-Gear Case
7	98-9592	5	Screw
8	98-9541	1	Cover-Oil Pump
9	98-9540	1	Asm-Rotor, Oil Pump
10	98-9372	2	O-Ring
11	98-7547	2	O-Ring
12	98-9544	1	Spring
13	98-9380	1	Ball
14	98-9543	1	Seal-Valve
18	98-9598	2	Plug
19	98-9356	2	Bolt
20	98-9355	6	Bolt
21	98-9586	1	Bolt
22	98-9482	1	Seal-Oil
23	98-9437	1	Bolt
24	98-7496	3	Bolt
25	98-9684	1	Gasket-Gear Case


Ref. No.	Part No.	Qty.	Description
26	98-9641	1	Cover
27	98-7692	2	Bolt

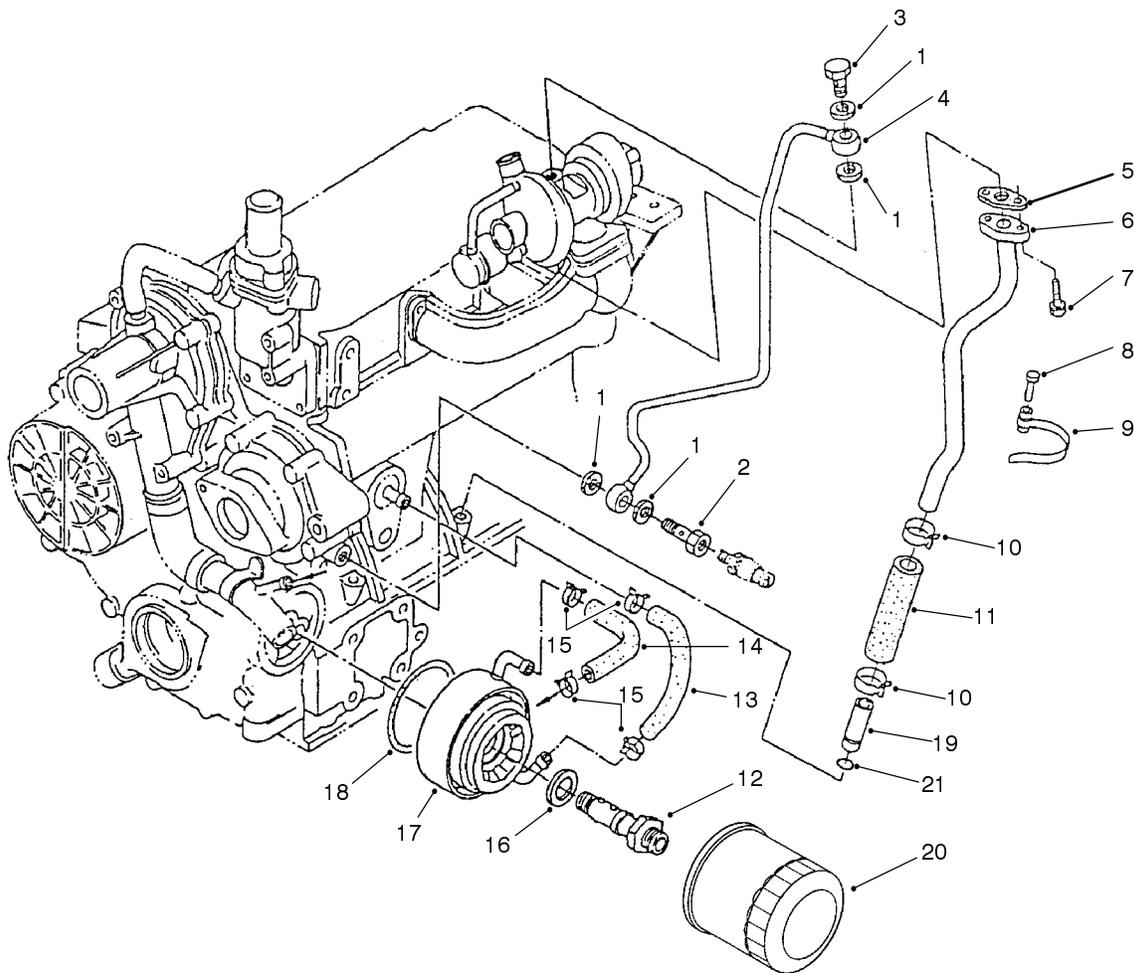

T-3079-1

Filter, Oil Cooler & Pipe Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-8346	4	Gasket				
2	98-9417	1	Bolt-Eye Joint				
3	98-9418	1	Bolt-Eye Joint				
4	98-9419	1	Pipe-Oil				
5	98-9435	1	Gasket				
6	98-9461	1	Pipe-Oil				
7	98-9587	2	Bolt				
8	98-9591	1	Pin-Band				
9	98-9601	1	Clamp-Pipe				
10	98-9714	2	Clamp-Hose				
11	98-9721	1	Pipe-Oil				
12	98-9723	1	Asm-Holder				
13	98-9724	1	Pipe-Cooler, Oil				
14	98-9578	1	Pipe-Return, Water				
15	98-9579	4	Band-Pipe				
16	98-9727	1	Collar				
17	98-9728	1	Asm-Cooler, Oil				
18	98-9729	1	O-Ring				
19	99-8383	1	Asm-Pipe, Oil (Incl. Ref. #21)				
20	99-8384	1	Asm-Cartridge, Oil				
21	98-9722	1	O-Ring				

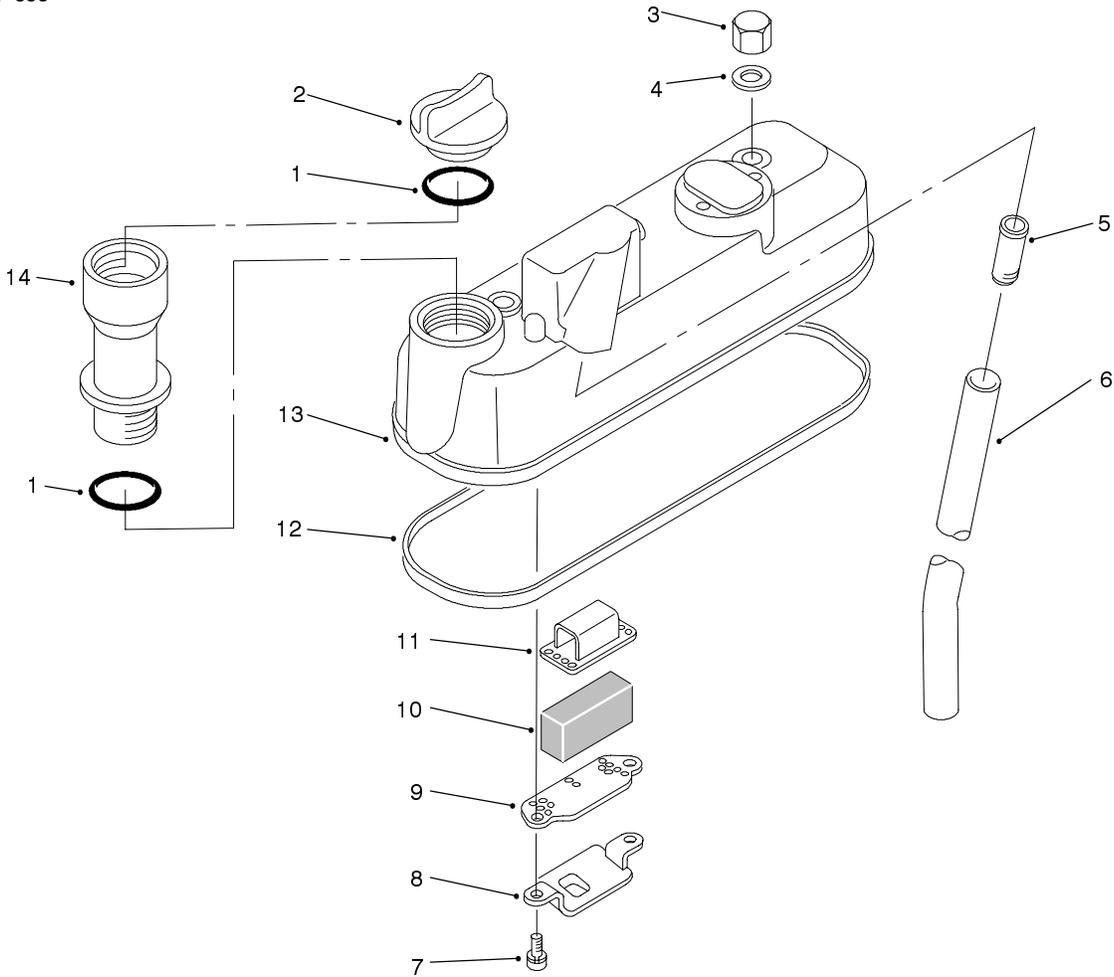


T-2910-1

Head Cover Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7430	2	O-Ring
2	98-9449	1	Plug-Oil Filler
3	98-9455	3	Nut-Cap
4	98-9454	3	Gasket
5	98-9492	1	Joint-Breather Pipe
6	98-9491	1	Pipe-Breather
7	98-9364	2	Screw w/washer
8	98-9490	1	Oil Shield-Breather
9	98-9488	1	Plate-Breather Element
10	98-9493	1	Element-Breather
11	98-9489	1	Plate-Breather Element
12	98-9615	1	Gasket-Head Cover
13	98-9614	1	Asm-Cover, Cylinder Head (Incl. Ref. #5 & 7-12)
14	99-8349	1	Extension-Fill, Oil

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

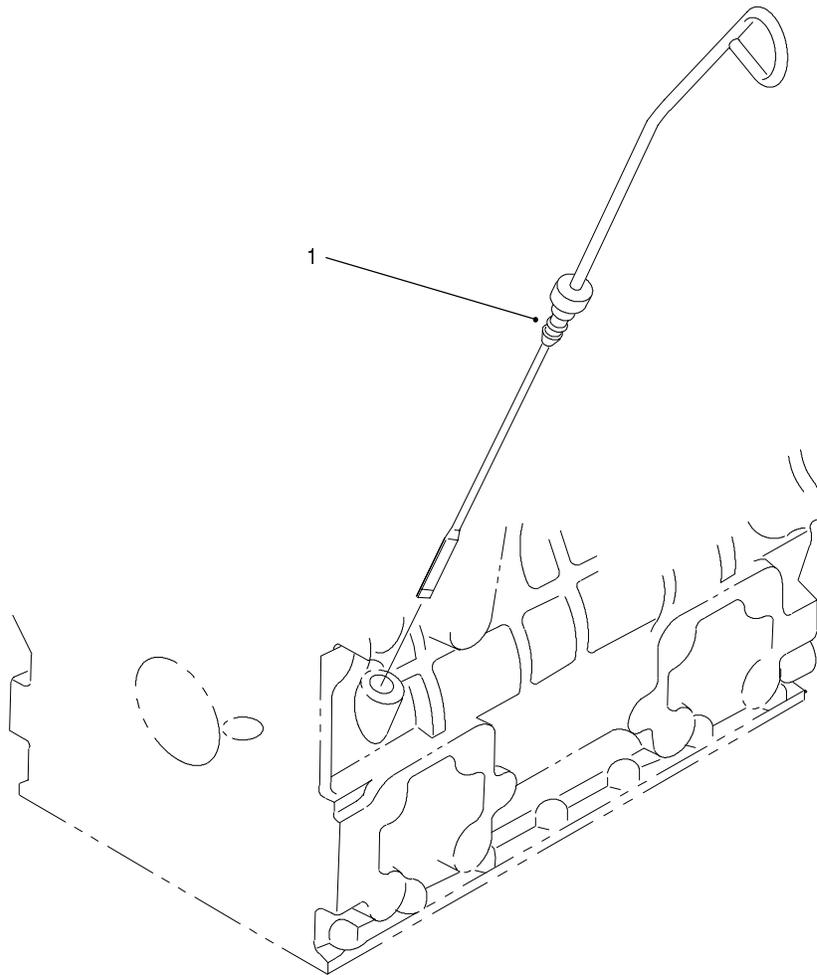


T-3094

Dipstick Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9627	1	Gauge-Oil				


PROTOTYPE

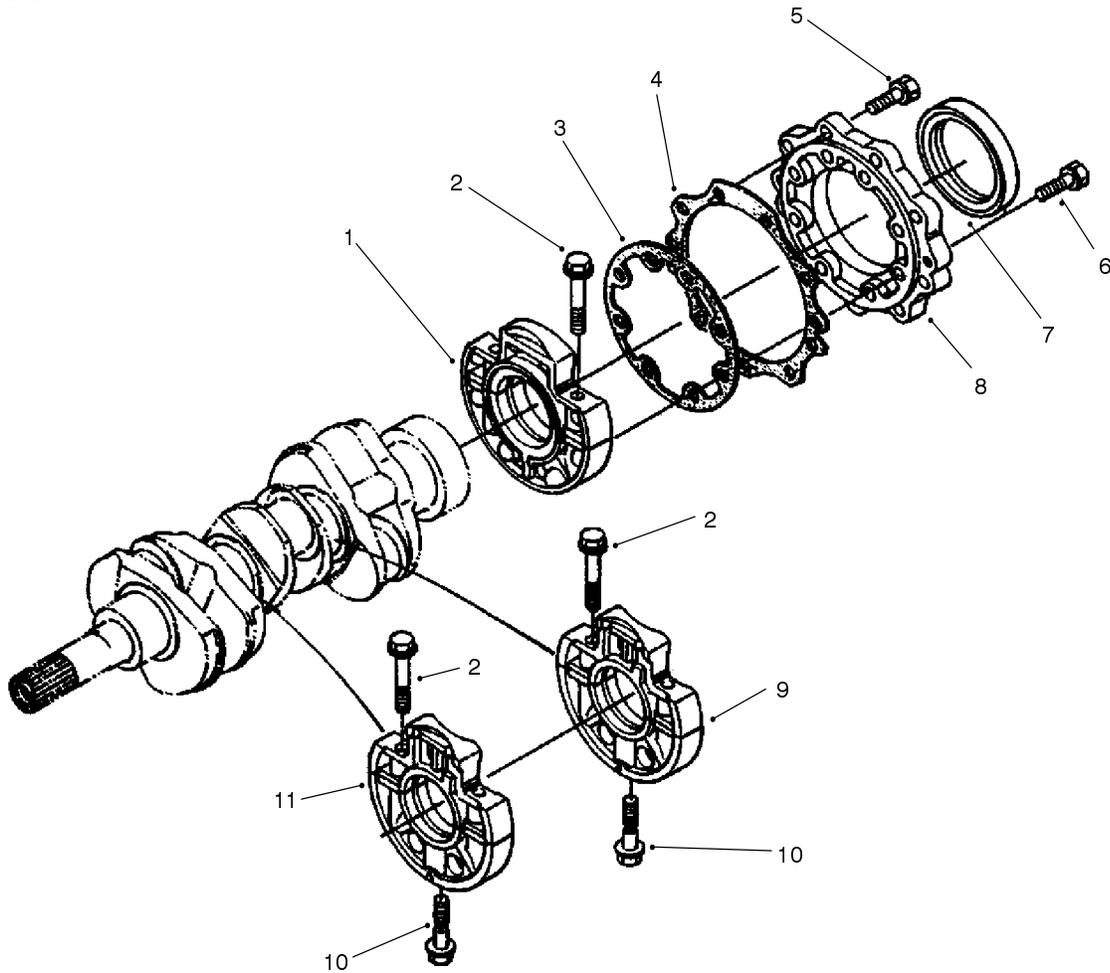

T-2912

Main Bearing Case Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9480	1	Asm-Case, Main Bearing				
2	98-9484	6	Bolt-Bearing Case				
3	98-9634	1	Gasket-Bearing Case				
4	98-9635	1	Gasket-Bearing Case Cover				
5	98-7568	9	Bolt				
6	98-9352	8	Bolt				
7	98-9483	1	Seal-Oil				
8	98-9487	1	Cover-Bearing Case				
9	99-8360	1	Asm-Case, Main Bearing				
10	98-9485	2	Bolt-Bearing Case				
11	99-8361	1	Asm-Case, Main Bearing				

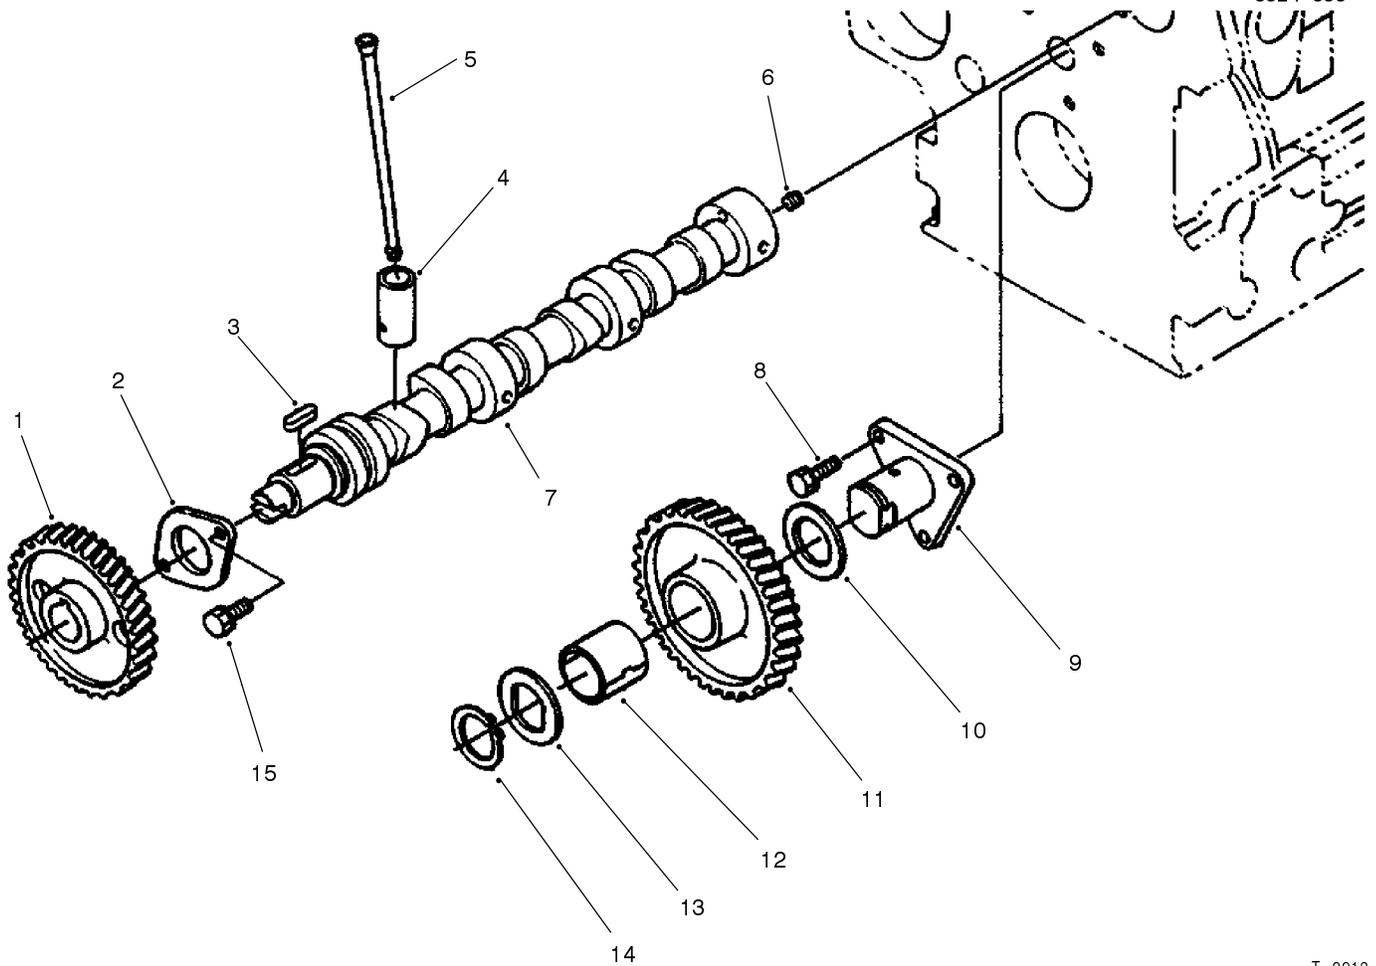


T-2913

Camshaft Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9510	1	Stopper-Camshaft
3	98-9378	1	Key-Feather
4	98-9616	6	Tappet
5	98-9509	6	Push Rod
6	98-7449	1	Screw-Set
7	99-8362	1	Asm-Camshaft (Incl. Ref. #1-3, 6 & 15)
8	98-7692	3	Bolt
9	98-9533	1	Shaft-Gear, Idle
10	98-9535	1	Collar-Gear, Idle
11	98-9649	1	Asm-Gear, Idle (Incl. Ref. #12)
12	98-9650	1	Bushing-Gear, Idle
13	98-9536	1	Collar-Gear, Idle
14	98-9534	1	Clip-Circular, Idle Gear
15	98-9351	2	Bolt

Ref. No.	Part No.	Qty.	Description


PROTOTYPE

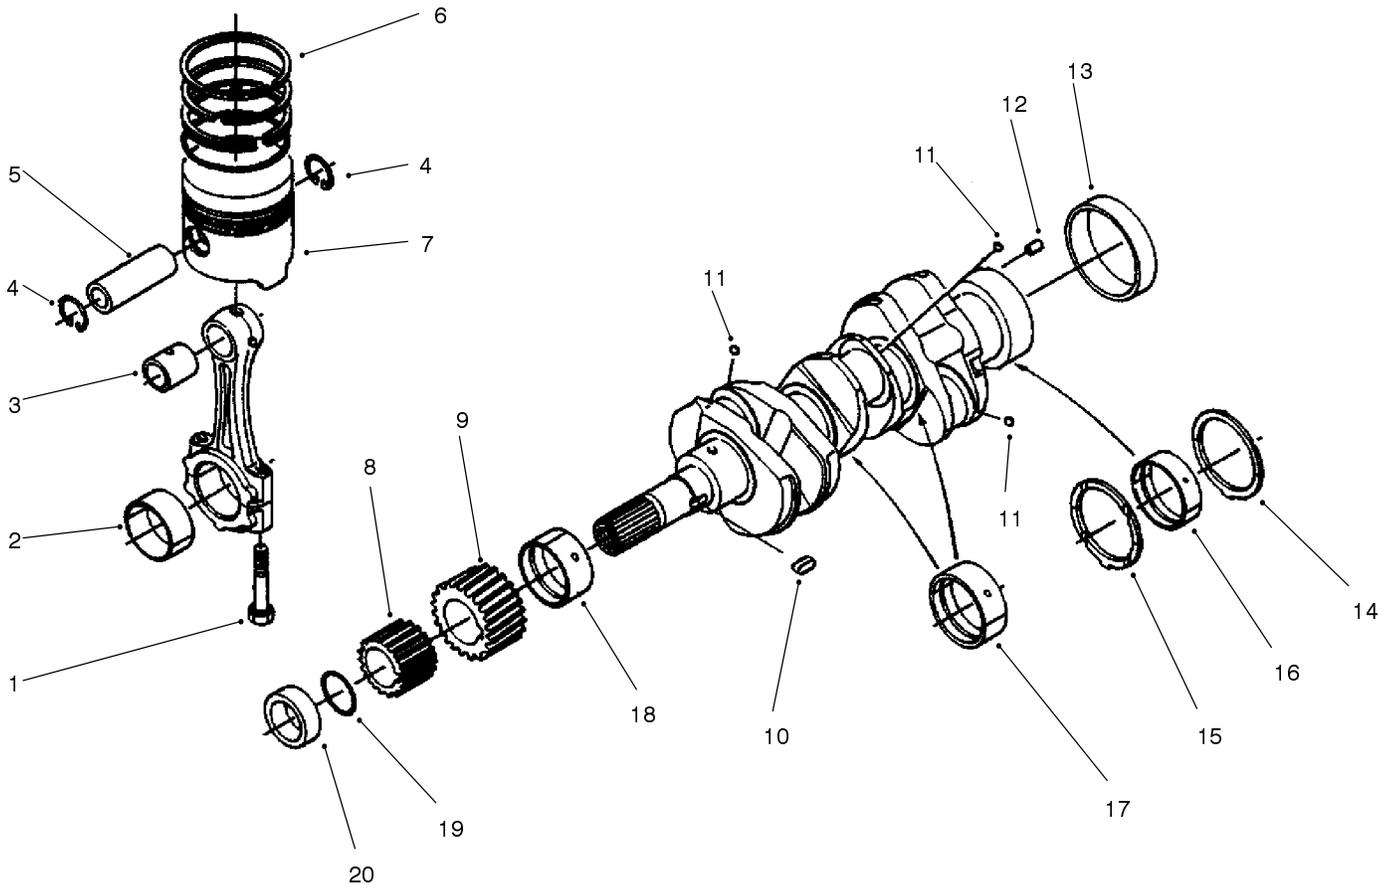

T-2914

Piston & Crankshaft Assembly (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
18	98-9528	1	Metal-Crankshaft (0.2mm Undersize)				
18	98-9529	1	Metal-Crankshaft (0.4mm Undersize)				
19	98-9373	1	O-Ring				
20	98-9521	1	Collar-Crankshaft				
*	98-9552	3	Asm-Rod, Connecting (Incl. Ref. #1-3)				
*	98-9642	1	Asm-Crankshaft (Incl. Ref. #8-13)				

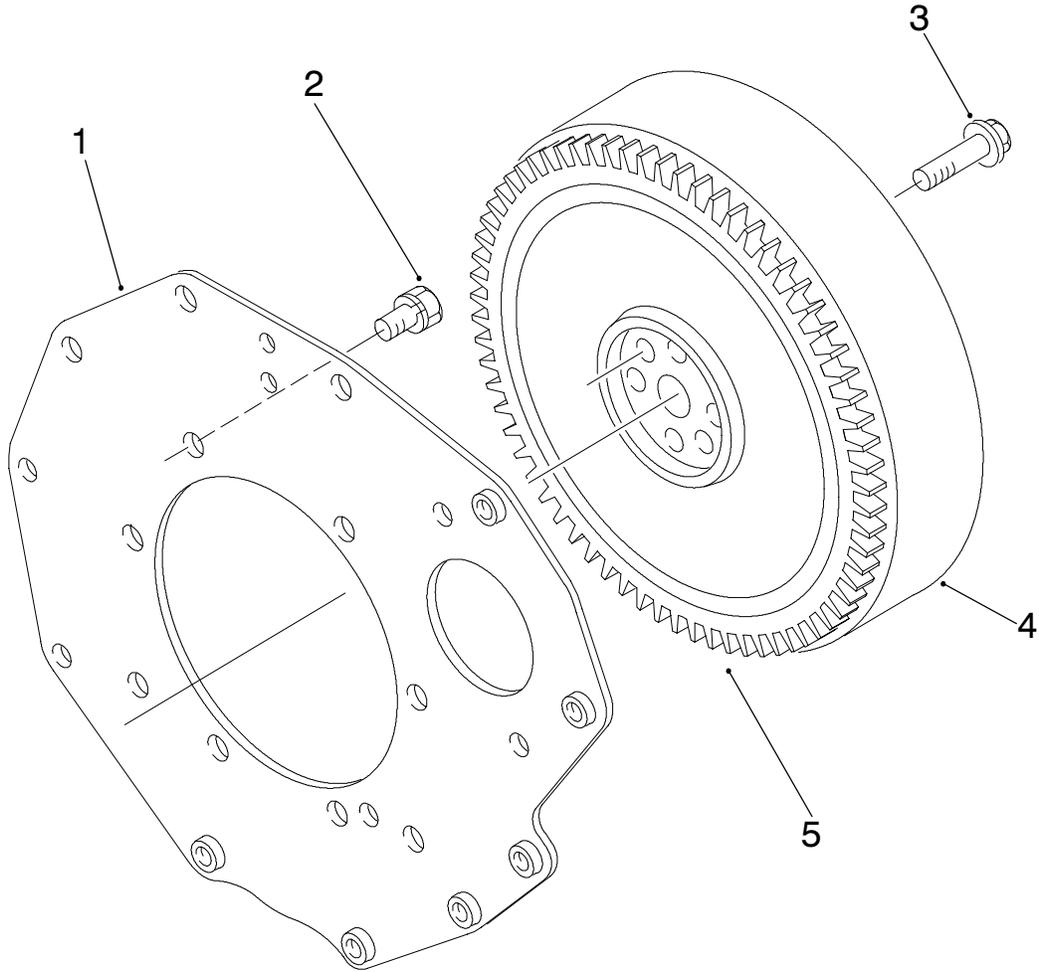


T-2915

Flywheel Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9486	1	Plate-End, Rear
2	98-9392	8	Bolt
3	98-9537	6	Bolt-Flywheel
4	98-9691	1	Asm-Flywheel (Incl. Ref. #5)
5	98-9394	1	Gear-Ring

Ref. No.	Part No.	Qty.	Description


PROTOTYPE

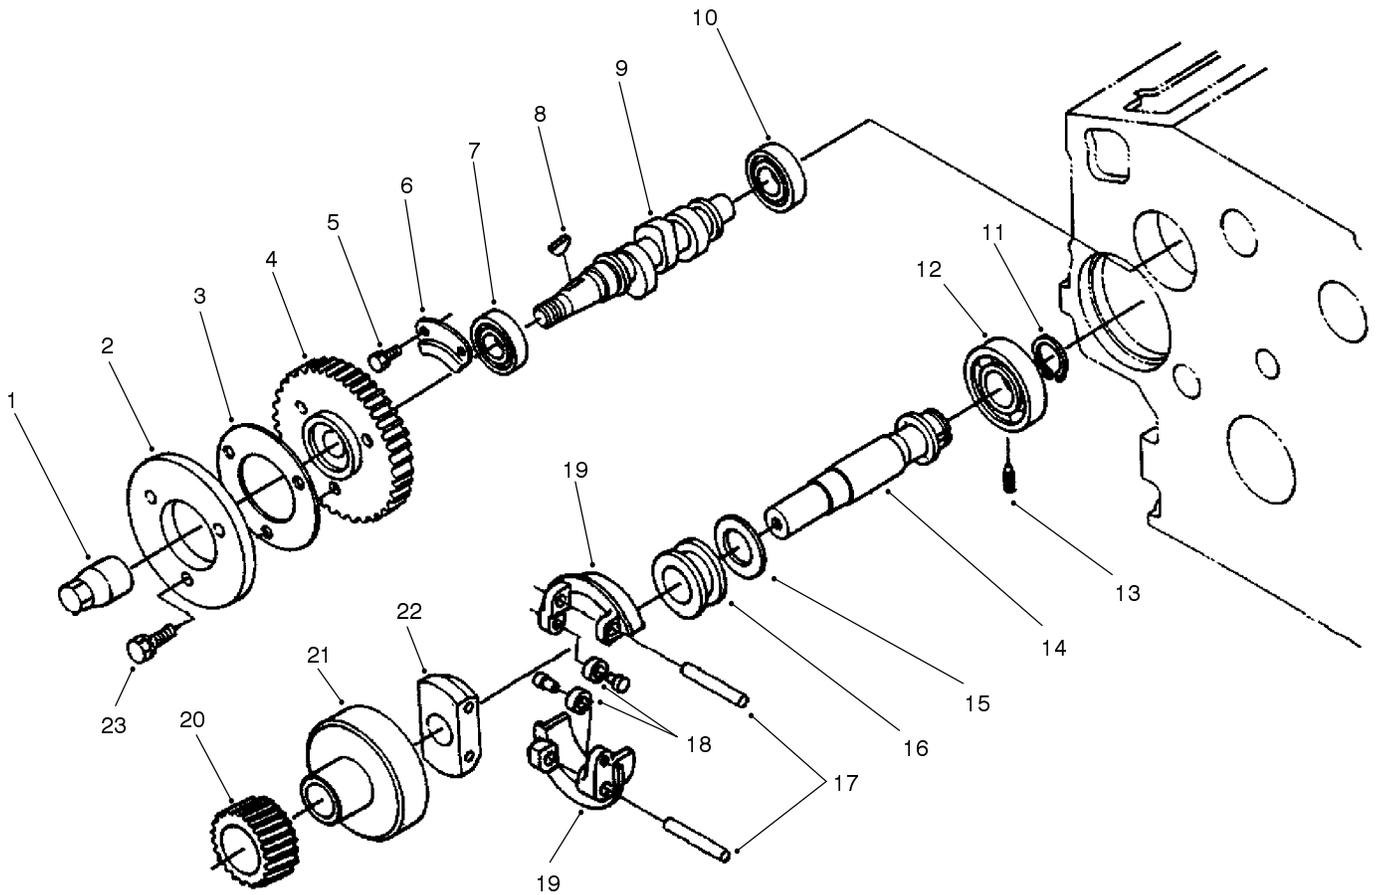

T-2916

Fuel Camshaft Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9590	1	Nut-Cap	22	98-9561	1	Holder-Gear, Governor
2	98-9547	1	Cam-Fuel	23	98-7605	3	Bolt
3	98-9548	1	Washer				
4	98-9669	1	Gear-Injection Pump				
5	98-9350	2	Bolt				
6	98-9511	1	Stopper-Fuel, Camshaft				
7	98-9383	1	Bearing-Ball				
8	98-9595	1	Key-Woodruff				
9	98-9459	1	Camshaft-Fuel				
10	98-9382	1	Bearing-Ball				
11	98-9657	1	Clip-Circular, Gov. Shaft				
12	98-9381	1	Bearing-Ball				
13	98-9565	1	Screw-Set				
14	98-9644	1	Asm-Shaft, Governor (Incl. Ref. #12 & 14-22)				
15	98-9564	1	Washer-Thrust				
16	98-9563	1	Sleeve-Governor				
17	98-9560	2	Shaft-Governor Weight				
18	98-9692	2	Roller				
19	98-9559	2	Asm-Weight, Governor				
20	98-9673	1	Gear-Governor				
21	98-9562	1	Holder-Gear, Governor				

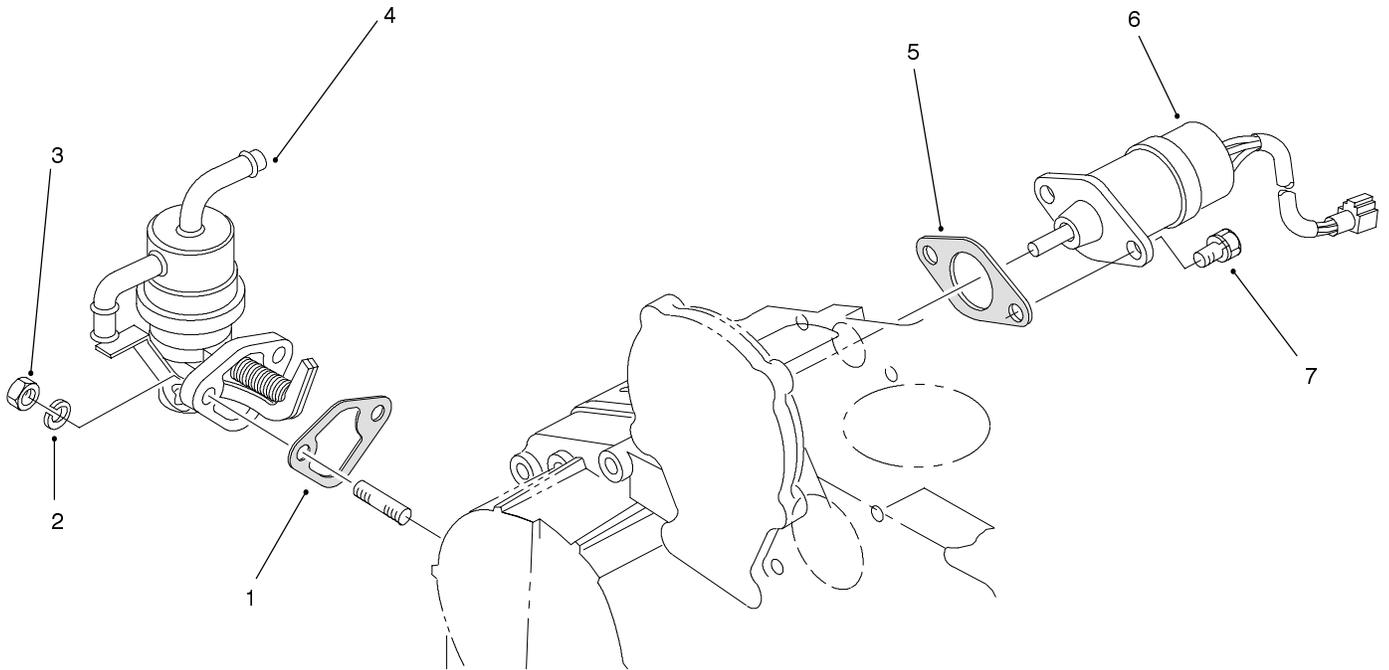


T-2918

Stop Solenoid & Fuel Pump Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9636	1	Gasket-Fuel Pump
2	98-9367	2	Washer-Lock
3	98-7572	2	Nut
4	98-9677	1	Asm-Pump, Fuel
5	98-9683	1	Gasket-Solenoid Cover
6	98-9693	1	Solenoid-Stop
7	98-9351	2	Bolt

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

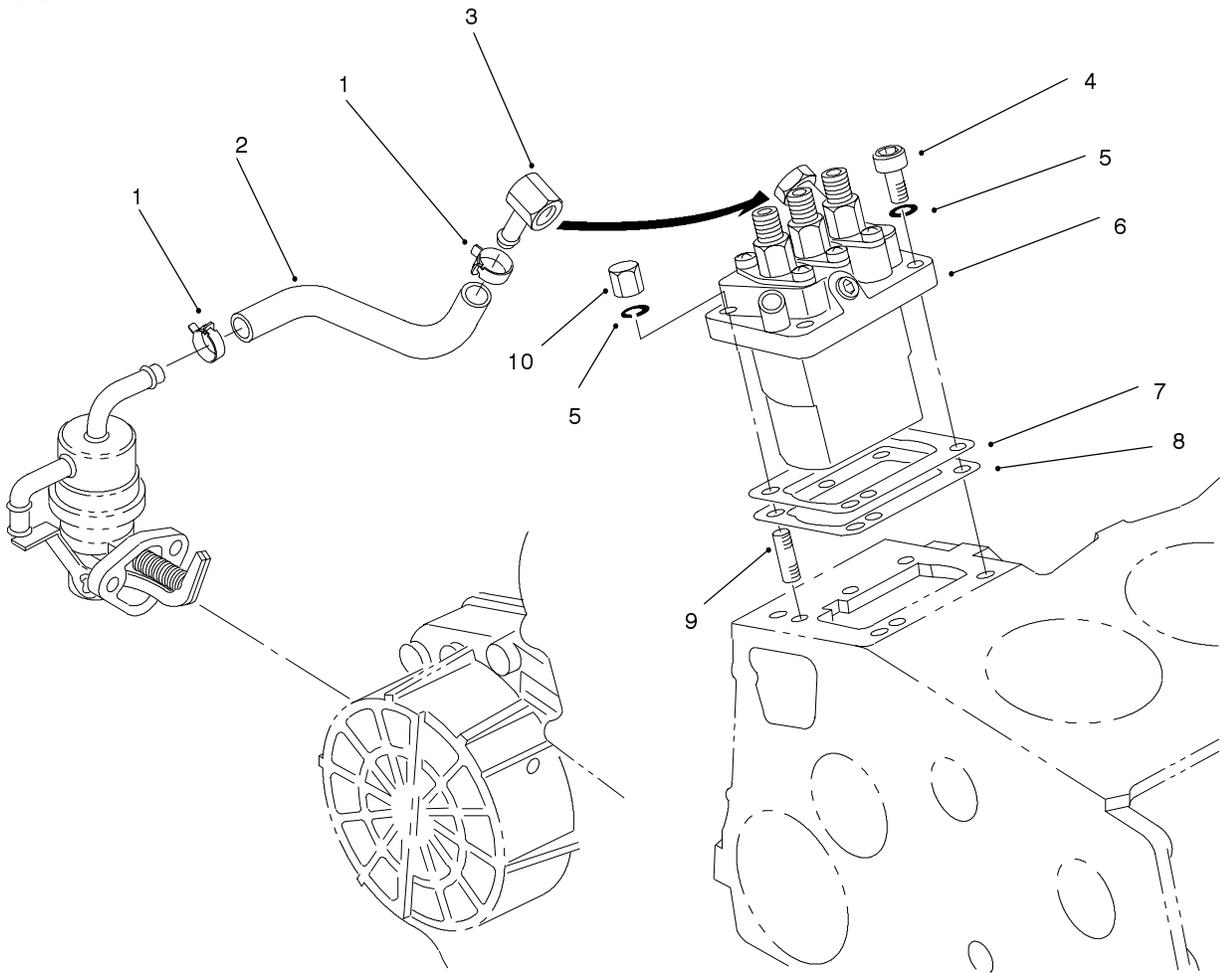


T-2919

Injection Pump Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9545	2	Band-Pipe
2	98-9384	1	Tube-Fuel
3	98-9596	1	Joint-Eye
4	98-9361	2	Bolt
5	98-9367	4	Washer-Lock
6	98-9643	1	Asm-Pump, Injection
7	98-9456	1	Shim-Injection (0.2mm)
7	98-9457	1	Shim-Injection (0.25mm)
8	98-9458	1	Shim-Injection (0.30mm)
9	98-9438	2	Stud
10	98-9440	2	Nut-Cap
*	98-9467	1	Asm-Pipe, Fuel (Incl. Ref. #1 & 2)

Ref. No.	Part No.	Qty.	Description


PROTOTYPE

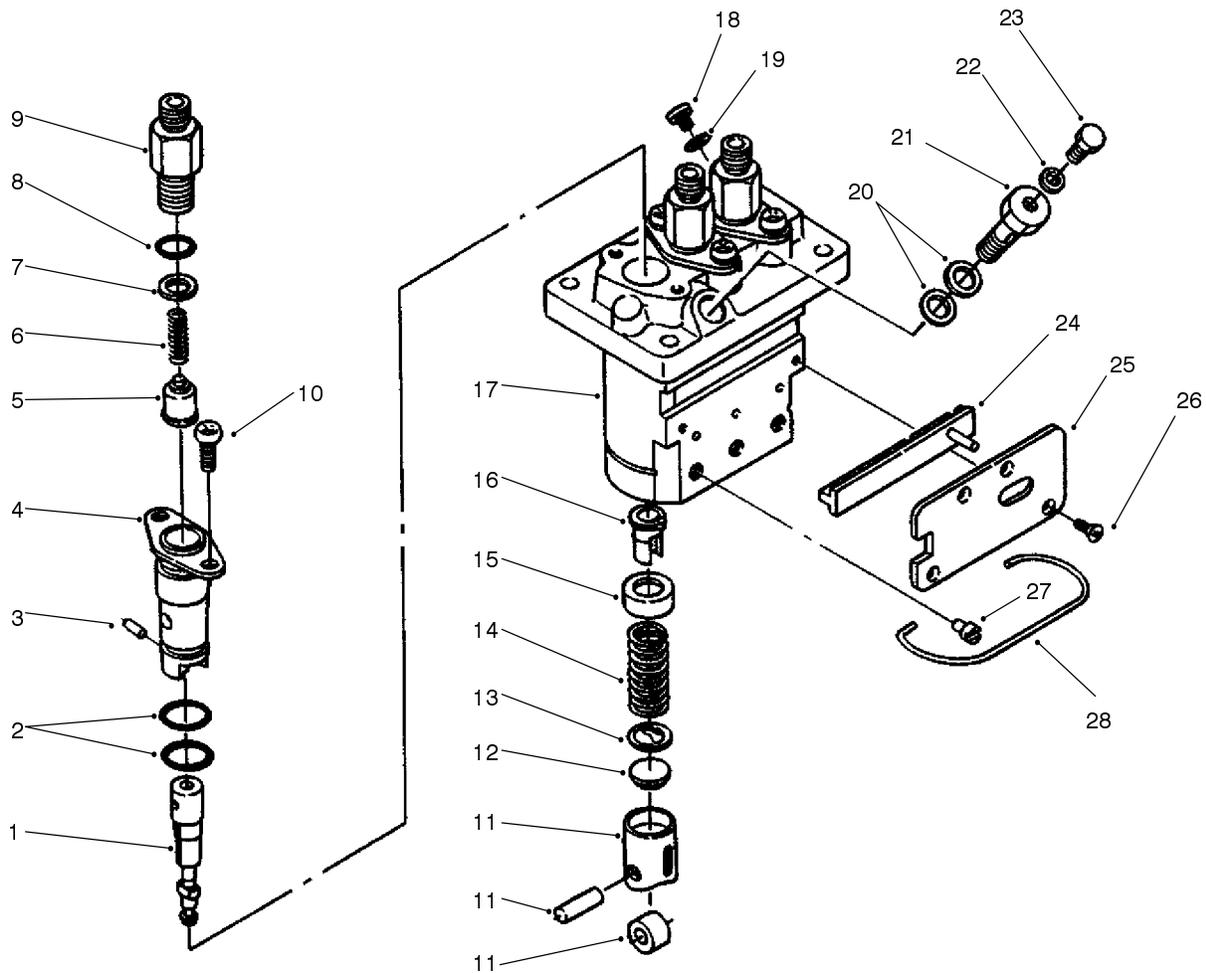

T-2920

Injection Pump Assembly No. 98-9643

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9462	3	Element-Pump	25	98-9465	1	Plate
2	98-9423	6	O-Ring	26	98-9442	4	Screw-Countersunk Hd.
3	98-9443	3	Pin-Joint	27	98-9426	3	Pin-Guide, Tappet
4	98-9434	3	Flange-Sleeve	28	98-9450	1	Pin-Clamp
5	98-9421	3	Valve-Delivery				
6	98-9424	3	Spring-Valve, Delivery				
7	98-9425	3	Gasket-Valve, Delivery				
8	98-9447	3	O-Ring				
9	98-9652	3	Holder-Valve, Delivery				
10	98-9452	6	Screw				
11	98-9422	3	Asm-Tappet				
12	98-9433	3	Shim				
13	98-9429	3	Seat-Spring, Lower				
14	98-9428	3	Spring-Plunger				
15	98-9427	3	Seat-Spring, Upper				
16	98-9432	3	Sleeve-Control				
17	98-9643	1	Asm-Pump, Injection (Incl. Ref. #1-16 & 18-28)				
18	98-9466	1	Plug				
19	98-9451	1	Gasket				
20	98-9445	2	Gasket				
21	98-9464	1	Bolt-Joint				
22	98-9446	1	Gasket				
23	98-9430	1	Screw				
24	98-9463	1	Rack-Control				

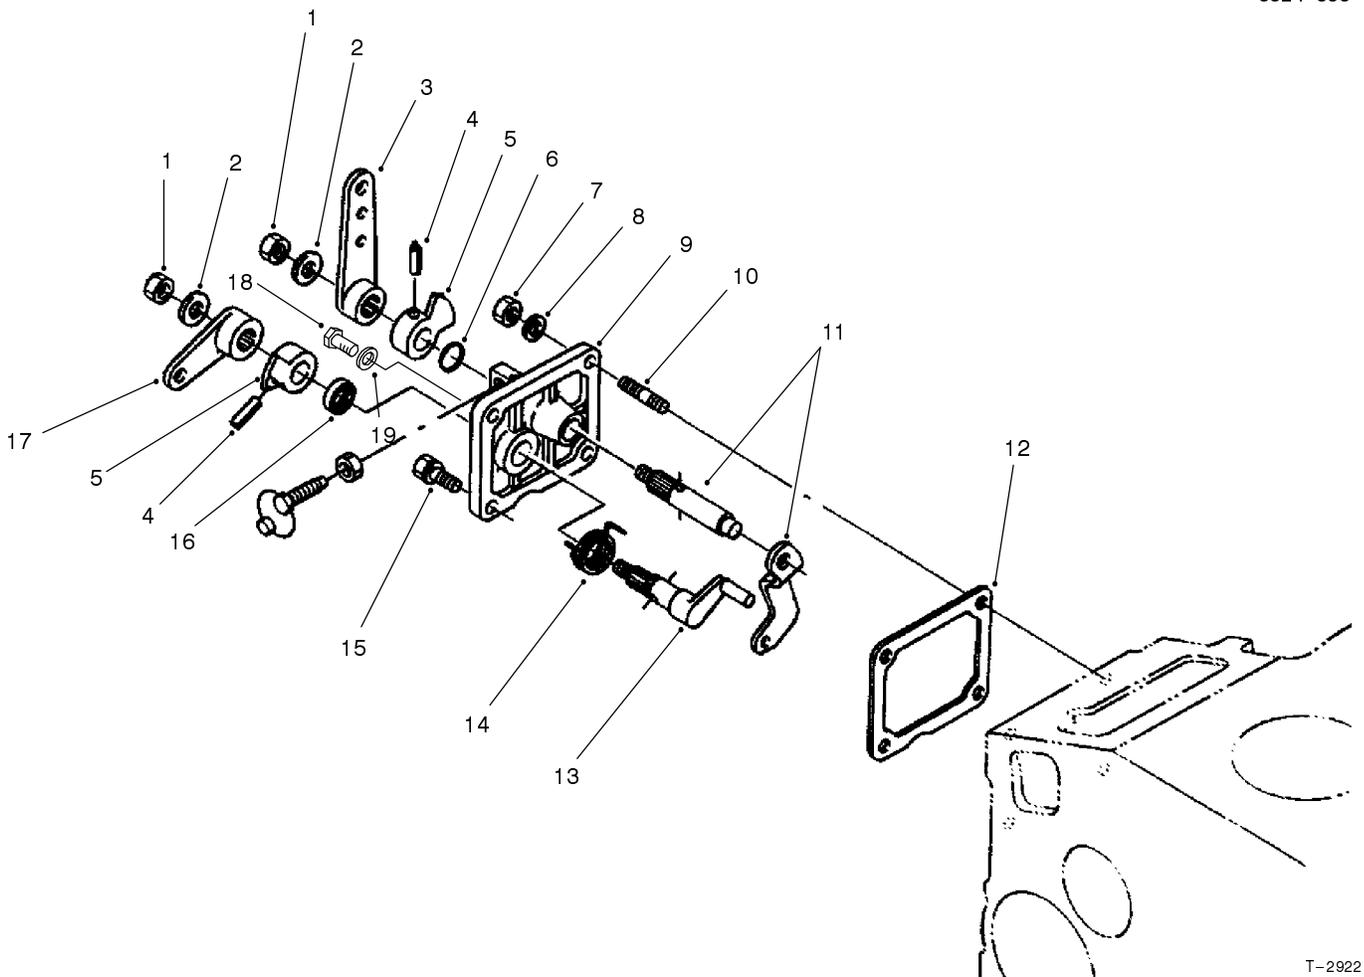


T-2922

Speed Control Plate Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9589	2	Nut
2	98-9594	2	Washer-Flat
3	98-9662	1	Lever-Speed Control
4	98-7602	2	Pin-Spring
5	98-9572	2	Lever-Speed Control
6	98-9371	1	O-Ring
7	98-7572	2	Nut
8	98-9367	2	Washer-Lock
9	98-9661	1	Asm-Plate, Control (Incl. Ref. #1-6, 11, 13, 14, 16 & 17)
10	98-9362	2	Stud
11	98-9658	1	Asm-Lever, Governor
12	98-9637	1	Gasket
13	98-9664	1	Shaft-Stop Lever
14	98-9472	1	Spring-Return
15	98-7692	1	Bolt
16	98-7601	1	Seal-Oil
17	98-9663	1	Lever-Engine Stop
18	99-8348	1	Bolt
19	98-7654	1	Gasket

Ref. No.	Part No.	Qty.	Description

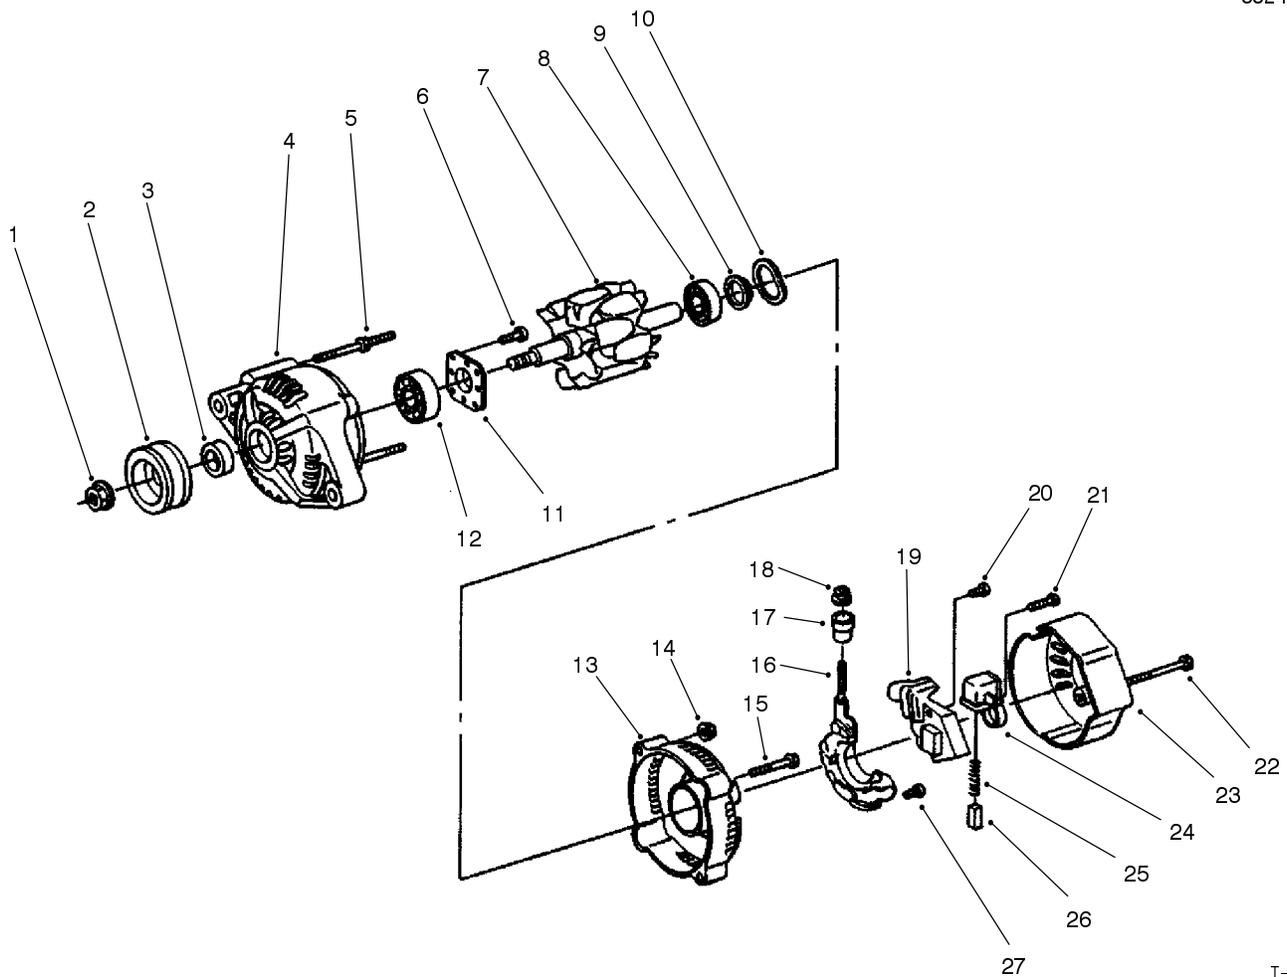


T-2927

Alternator Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7708	1	Nut
2	98-9453	1	Pulley-Dynamo
3	98-7709	1	Collar
4	98-7714	1	Frame-Drive End
5	98-7717	2	Bolt-Through
6	98-7716	4	Screw-RH
7	98-7710	1	Rotor
8	98-7712	1	Bearing-Ball
9	98-7711	1	Cover-Bearing
10	98-7713	1	Washer-Thrust
11	98-7715	1	Plate-Retainer
12	98-7718	1	Bearing-Ball
13	98-7719	1	Frame-End
14	98-7730	2	Nut
15	98-7731	2	Bolt
16	98-7721	1	Asm-Rectifier
17	98-7722	1	Bushing-Insulation
18	98-7732	1	Nut
19	98-7733	1	Asm-Regulator
20	98-7726	2	Screw-RH
21	98-7728	1	Screw-RH
22	98-7729	3	Bolt
23	98-7720	1	Cover-End
24	98-7723	1	Holder-Brush
25	98-7725	2	Spring-Brush
26	98-7724	2	Brush

Ref. No.	Part No.	Qty.	Description
27	98-7727	6	Screw-RH
*	98-9474	1	Asm-Alternator (Incl. Ref. #1-27)

PROTOTYPE

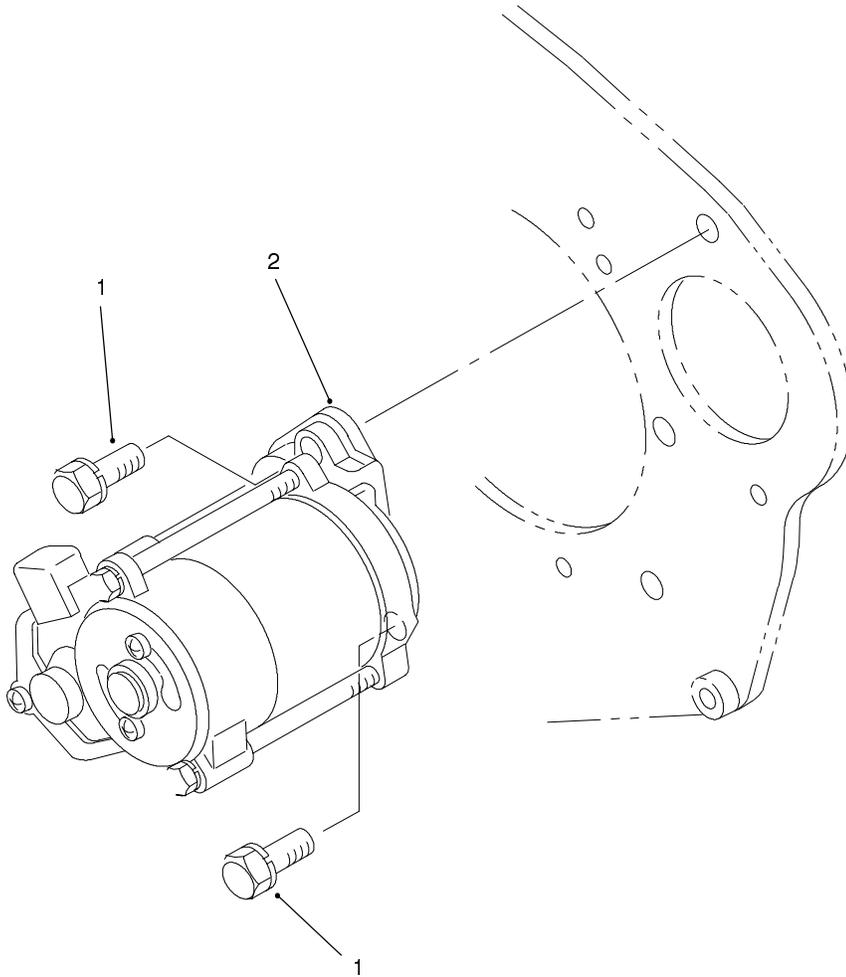


T-2928

Starter Mount Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7697	2	Bolt
2	98-9705	1	Asm-Starter


Ref. No.	Part No.	Qty.	Description
<p style="font-size: 48px; opacity: 0.5; font-weight: normal;">PROTOTYPE</p>			

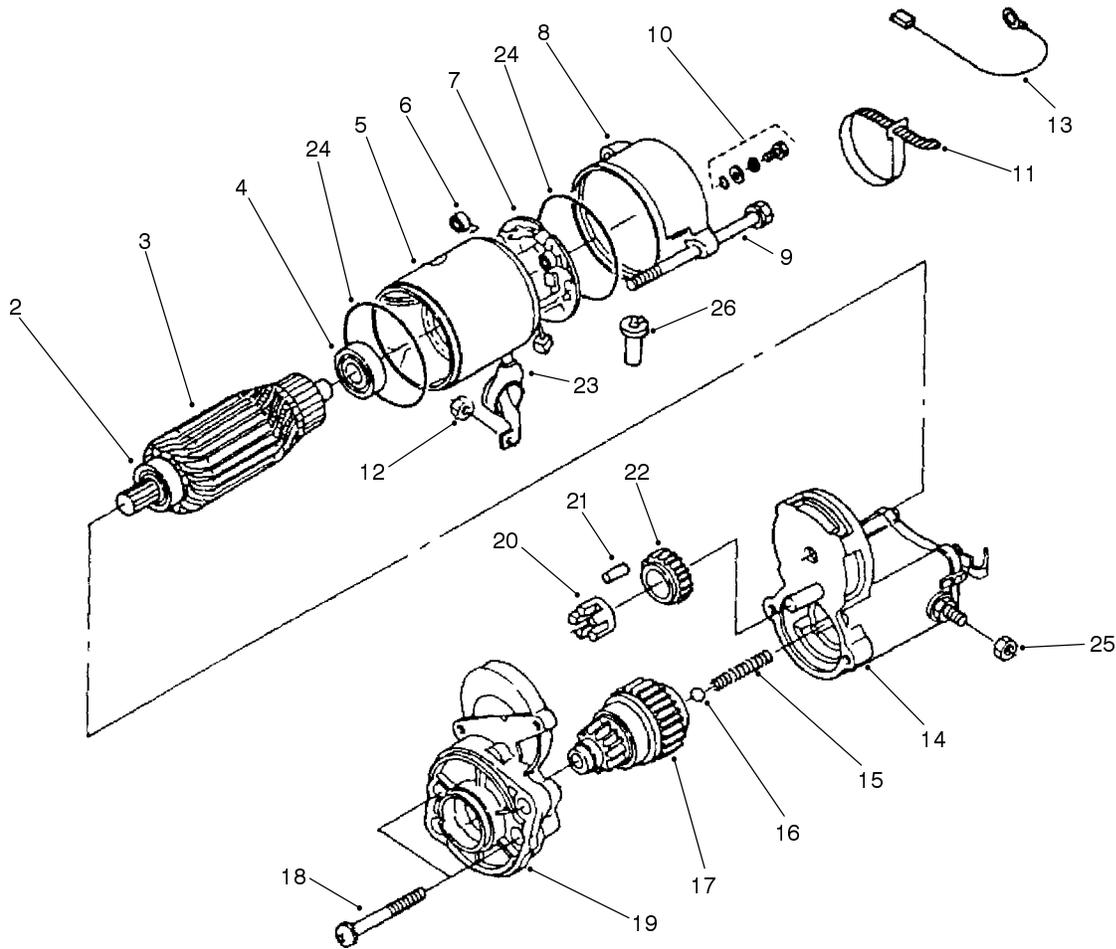

T-3081

Starter Assembly No. 98-9705

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	98-7743	1	Bearing-Ball	26	98-7759	1	Pipe-Drain
3	98-7742	1	Asm-Armature	*	98-9705	1	Asm-Starter
			(Incl. Ref. #2 & 4)				(Incl. Ref. #2-26)
4	98-7744	1	Bearing-Ball				
5	98-7741	1	Asm-Yoke				
6	98-7750	4	Spring-Brush				
7	98-7749	1	Asm-Holder, Brush				
			(Incl. Ref. #6)				
8	99-8370	1	Frame-End				
9	98-9549	2	Bolt				
10	98-7758	2	Asm-Bolt				
11	98-9712	1	Band-Cover				
12	99-8371	1	Nut-Hex.				
13	98-9711	1	Cord-Stop, Solenoid				
14	99-8372	1	Asm-Switch, Magnetic				
15	98-7754	1	Spring				
16	98-7755	1	Ball				
17	99-8373	1	Clutch				
18	98-7756	2	Bolt				
19	99-8374	1	Frame-Drive End				
20	98-7752	1	Retainer				
21	98-7753	5	Roller				
22	98-7751	1	Gear				
23	99-8375	1	Cover-Cord				
24	98-7757	2	O-Ring				
25	99-8376	1	Nut				

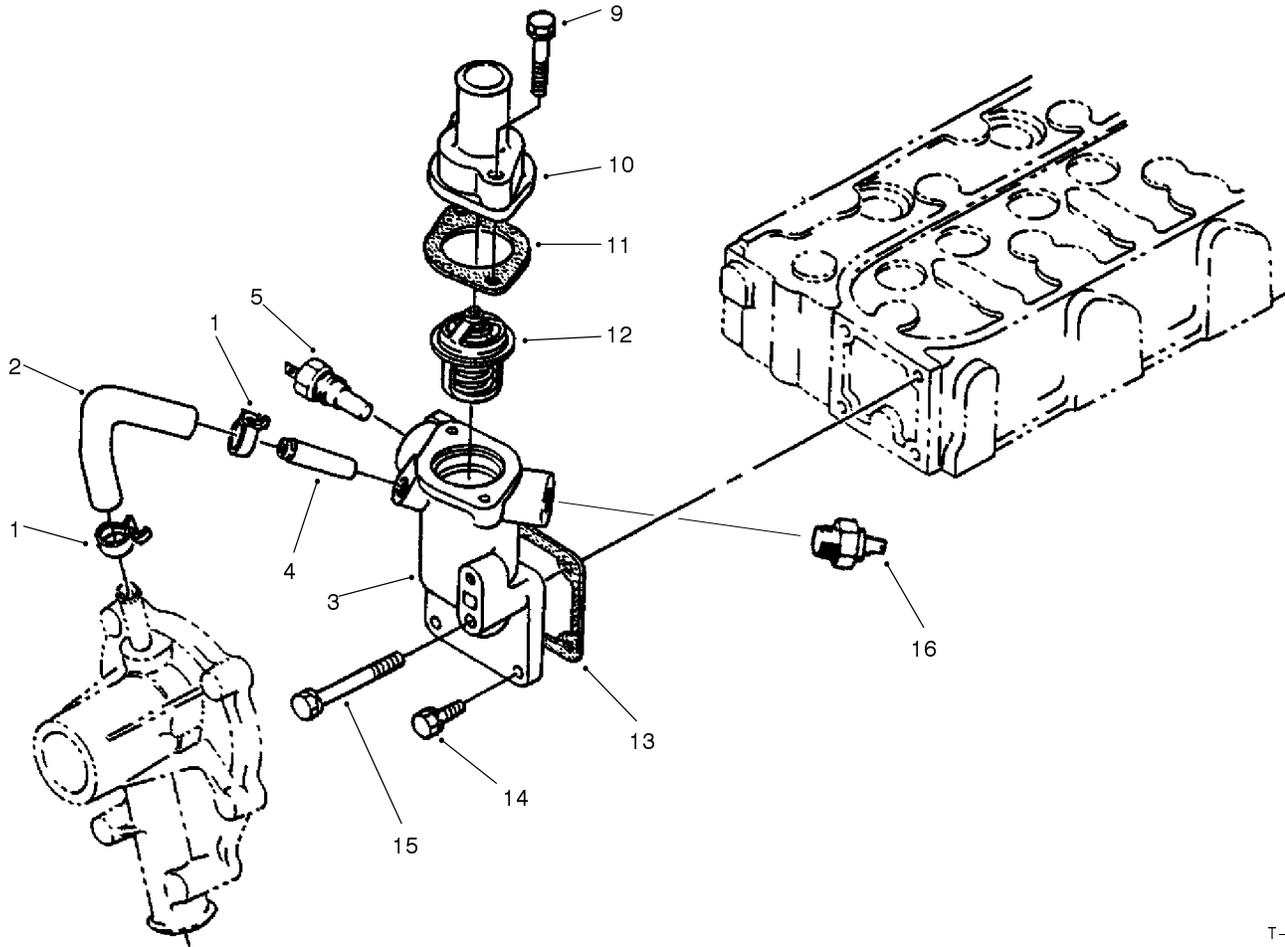


T-2930

Water Flange & Thermostat Asembly

Ref. No.	Part No.	Qty.	Description
1	98-9579	2	Band Pipe
2	98-9578	1	Pipe-Return, Water
3	98-9713	1	Asm-Flange, Water (Incl. Ref. #4)
4	98-9580	1	Pipe-Return, Water
5	98-9719	1	Thermoswitch
9	98-7777	2	Bolt
10	98-9471	1	Cover-Thermostat
11	98-7776	1	Gasket
12	98-7778	1	Asm-Thermostat
13	98-9638	1	Gasket-Flange, Water
14	98-7692	3	Bolt
15	98-9356	1	Bolt
16	98-9346	1	Switch

Ref. No.	Part No.	Qty.	Description


PROTOTYPE

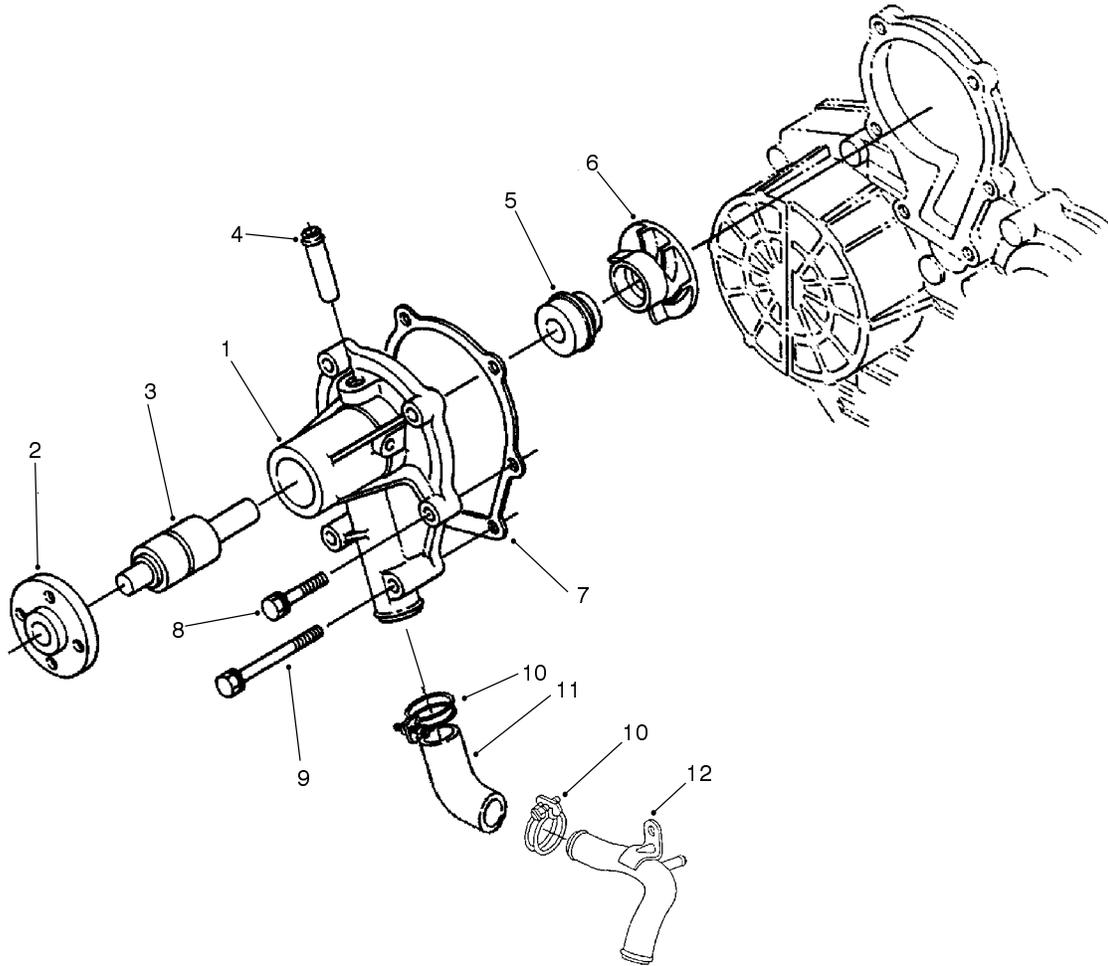

T-2931

Water Pump Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9575	1	Asm-Pump, Water (Incl. Ref. #2-6)				
2	98-9582	1	Flange-Pump, Water				
3	98-9583	1	Bearing				
4	98-9577	1	Pipe-Return, Water				
5	98-9576	1	Asm-Seal				
6	98-9581	1	Impeller-Water				
7	98-9632	1	Gasket-Pump, Water				
8	98-9353	1	Bolt				
9	98-9357	4	Bolt				
10	98-9717	2	Clamp				
11	98-9574	1	Pipe-Water				
12	99-8379	1	Pipe-Water				

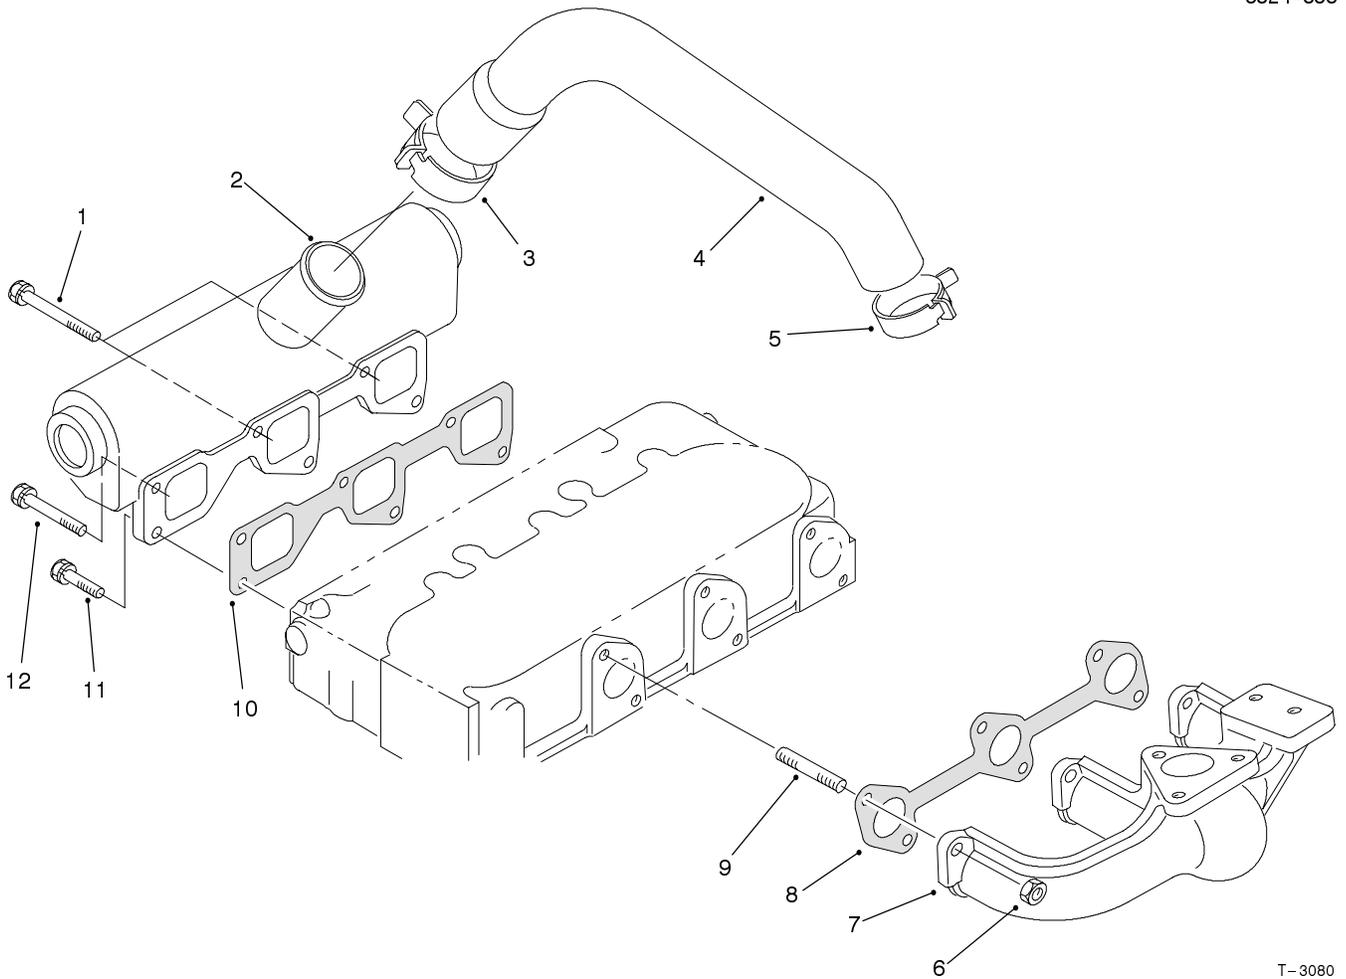


T-3080

Exhaust Manifold & Gasket Assembly

Ref. No.	Part No.	Qty.	Description
1	99-8320	2	Bolt
2	99-8321	1	Manifold-Inlet
3	99-8322	1	Band-Pipe
4	99-8323	1	Hose-Inlet
5	99-8324	1	Band-Pipe
6	98-9665	6	Nut
7	99-8326	1	Manifold-Exhaust
8	99-8327	1	Gasket-Exhaust
9	98-9588	6	Stud
10	99-8329	1	Gasket-Intake
11	98-7568	3	Bolt
12	98-7496	1	Bolt

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

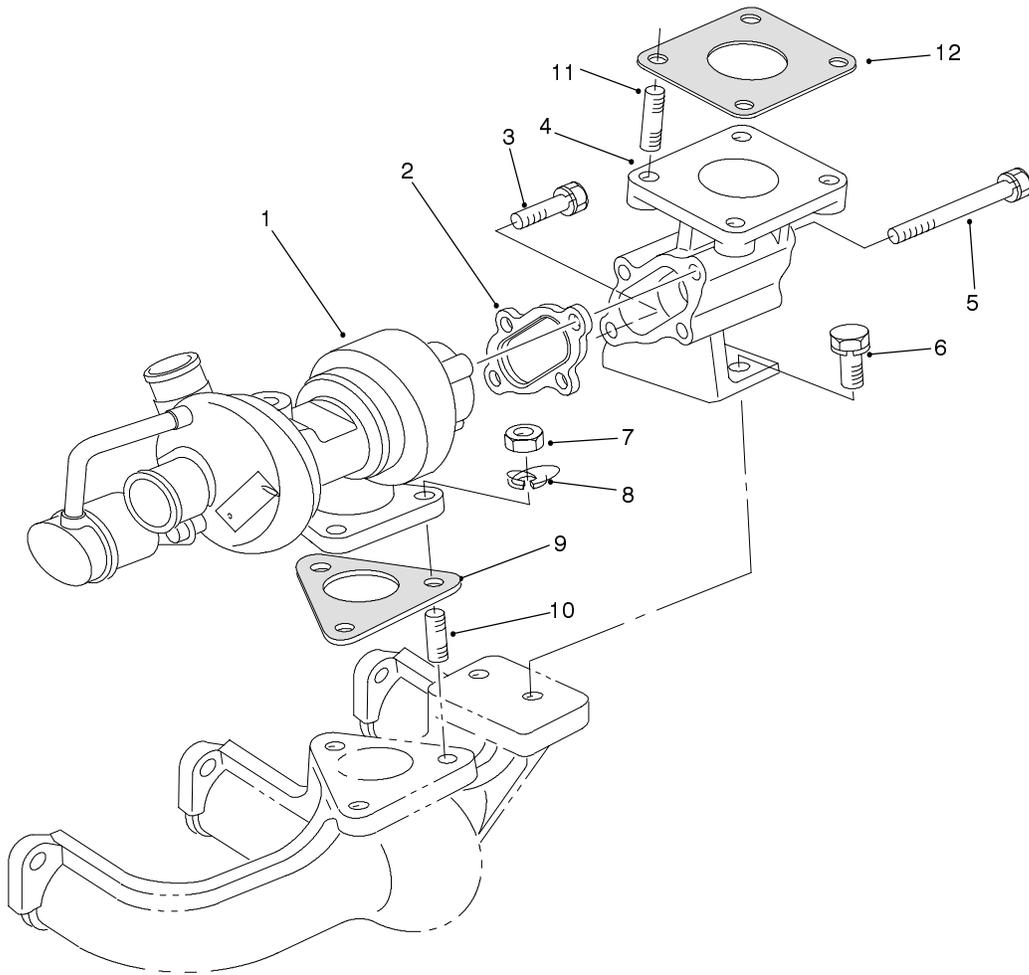

T-3078

Turbo Charger Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-8332	1	Asm-Charger, Turbo				
2	99-8333	1	Gasket				
3	99-8334	1	Bolt				
4	99-8335	1	Flange-Muffler				
5	99-8336	3	Bolt				
6	98-7610	2	Bolt				
7	98-7534	3	Nut				
8	99-8339	3	Washer-Lock				
9	99-8340	1	Gasket				
10	99-8341	3	Stud				
11	99-8342	4	Stud				
12	99-8343	1	Gasket-Muffler				

PROTOTYPE



PROTOTYPE