



Reelmaster[®] 5500-D 2WD

Model No. 03550-20000301 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents


Description	Page	Description	Page
Frame and Body Assembly	4	Rear Axle Support	48
Steering Tower Assembly	6	2WD Rear Axle Assembly	49
Steering Valve Assembly No. 99-8959	8	Hydraulic Cylinder No. 75-1200	51
Traction and Brake Pedal Assembly	9	Stabilizer Assembly	52
Seat Frame and Throttle Assembly	10	Axle Assembly No. 99-6981-03	53
Seat and Suspension Assembly	11	Brake Assembly	55
Seat Suspension Assembly No. 75-3000	12	Special Tools	56
Control Console Assembly	13	Gauge Bar and Backlapping Brush Assembly ..	57
Diagnostic-ACE Display Assembly	15	Hydraulic Schematic	58
Hydraulic Filter and Reservoir Assembly	16	Electrical Schematic	59
Fuel Tank Assembly	17	Electrical Schematic – Turfdefender	60
Fuel Tank Assembly No. 99-8351	18	Crankcase Assembly	61
Front Axle Assembly	19	Oil Pan Assembly	62
Transmission Assembly	20	Cylinder Assembly	63
Transmission Assembly No. 75-0012	21	Gear Case Assembly	64
Traction Control Assembly	23	Filter, Oil Cooler & Pipe Assembly	65
Gear Pump Installation Assembly	24	Head Cover Assembly	66
Engine Installation Assembly	25	Dipstick Assembly	67
Muffler and Pump Drive Assembly	26	Main Bearing Case Assembly	68
Engine Components Assembly	27	Camshaft Assembly	69
Air Cleaner Assembly No. 98-4517	28	Piston & Crankshaft Assembly	70
Water/Fuel Separator Assembly No. 98-9305 ..	29	Flywheel Asssembly	72
Fan Drive Assembly	30	Fuel Camshaft Assembly	73
Radiator Assembly	31	Engine Stop Lever Assembly	74
Oil Cooler / Radiator Assembly	32	Stop Solenoid & Fuel Pump Assembly	75
Hood Assembly	33	Injection Pump Assembly	76
Lift Block Assembly	34	Injection Pump Assembly No. 98-9643	77
Lift Block Assembly No. 99-6979	35	Governor Assembly	78
Mow Block Assembly	36	Speed Control Plate Assembly	79
Mow Block Assembly No. 99-6978	37	Nozzle Holder & Glow Plug Assembly	80
Rear Hydraulic Manifold Assembly	38	Nozzle Holder Assembly No. 98-9468	81
Reel Motor and Hose Assembly	39	Alternator & Pulley Assembly	82
Reel Motor No. 98-9999	40	Alternator Assembly	83
Front Lift Circuit Assembly	41	Starter Mount Assembly	84
Hydraulic Cylinder Assembly No. 99-6987	42	Starter Assembly No. 98-9705	85
Hydraulic Cylinder Assembly No. 99-6986	43	Water Flange & Thermostat Asembly	86
Front Lift Arm Assembly	44	Water Pump Assembly	87
Rear Lift Cylinder Assembly	45	Valve & Rocker Arm Assembly	88
Hydraulic Cylinder Assembly No. 98-3945	46	Exhaust Manifold & Gasket Assembly	89
Rear Lift Arm Assembly	47	Turbo Charger Assembly	90

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		


PROTOTYPE

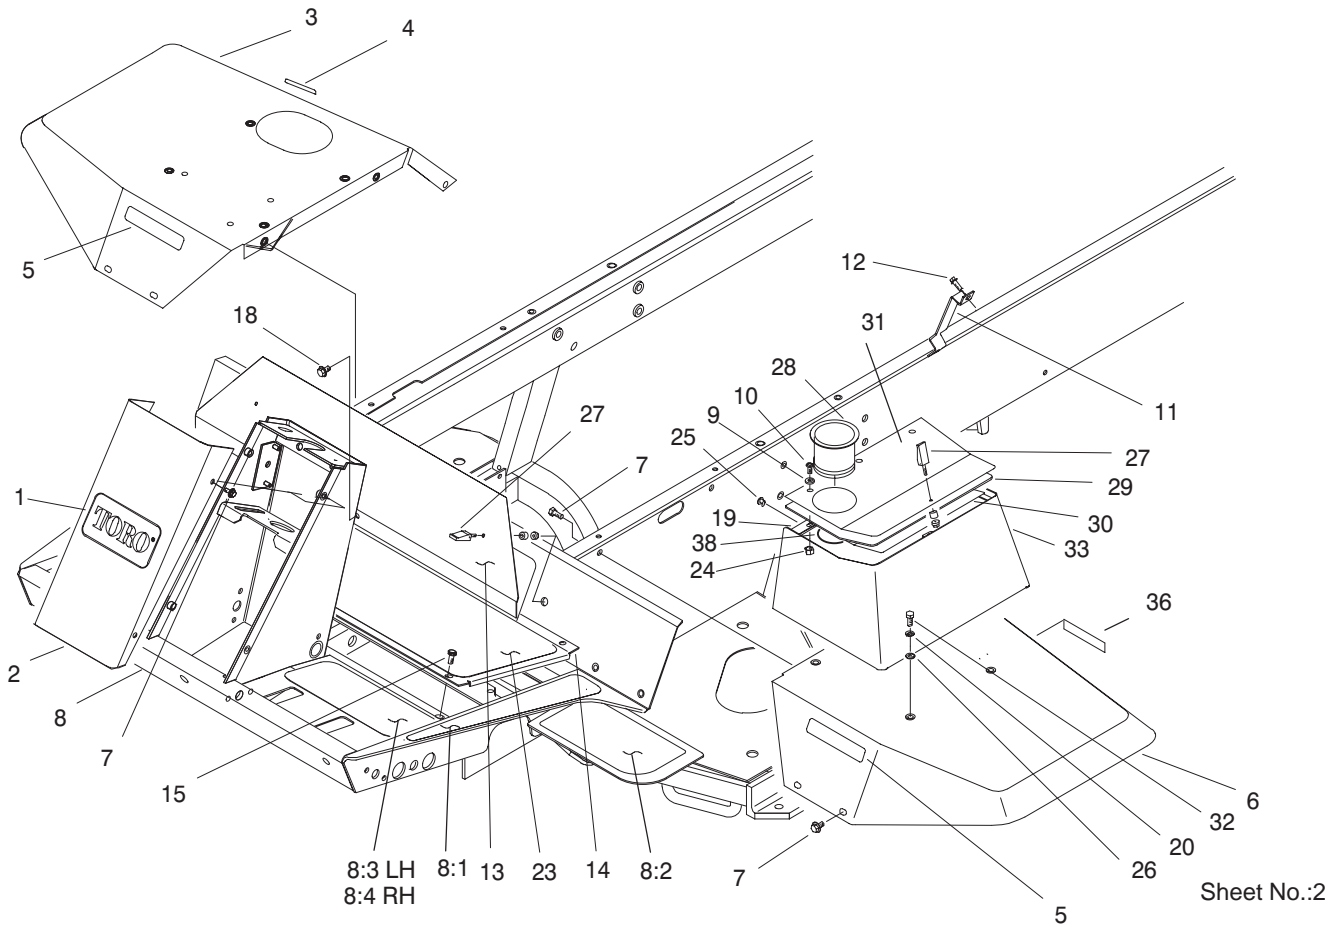

Frame and Body Assembly

Ref. No.	Part No.	Qty.	Description
1	62-5550	1	Decal
2	93-7996-01	1	Cover – Tower
3	93-7579	1	Fender–RH
4	93-6686	1	Decal–Oil, Hydraulic
5	93-6689	2	Decal – No Riders
6	75-3860	1	Fender–LH
7	3234-14	14	Screw–HHF
8	99-6900-01	1	Frame
9	3256-1	3	Washer–Flat
10	3258-166	3	Screw
11	98-4572	1	Bracket–Clamp, Hose
12	32144-14	2	Screw–HWH
13	75-1390-01	1	Cover–Access, Front
14	75-1410-01	1	Plate–Access, Floor
15	3234-7	1	Screw–HHF
15	75-6840	4	Knob – Knurled
16	93-7592	2	Tread Foot Rest – LH
17	104-0048	1	Tread–Step
18	3234-5	1	Screw–HHF
19	75-5780	1	Hinge–Steel
20	3256-3	4	Washer–Flat
21	75-0620	1	Tread–Foot, LH
22	75-0610	1	Tread–Foot, RH
23	75-0630	1	Tread–Foot, Center
24	32128-33	3	Nut–HF
25	93-8744	3	Pop – Rivet


Ref. No.	Part No.	Qty.	Description
26	52-2900	4	Washer
27	74-5950	3	Latch–Swell
28	94-1410	1	Holder–Can, Beverage
29	93-9180-03	1	Cover–Tool Box
30	104-0081	1	Decal–Service Instructions
30	104-1400	1	Decal – Service Instructions, Danish
30	104-1401	1	Decal – Service Instructions, Dutch
30	104-1402	1	Decal – Service Instructions, Finnish
30	104-1403	1	Decal – Service Instructions, French
30	104-1404	1	Decal – Service Instructions, German
30	104-1405	1	Decal – Service Instructions, Italian
30	104-1406	1	Decal – Service Instructions, Japanese
30	104-1407	1	Decal – Service Instructions, Norwegian
30	104-1408	1	Decal – Service Instructions, Portuguese

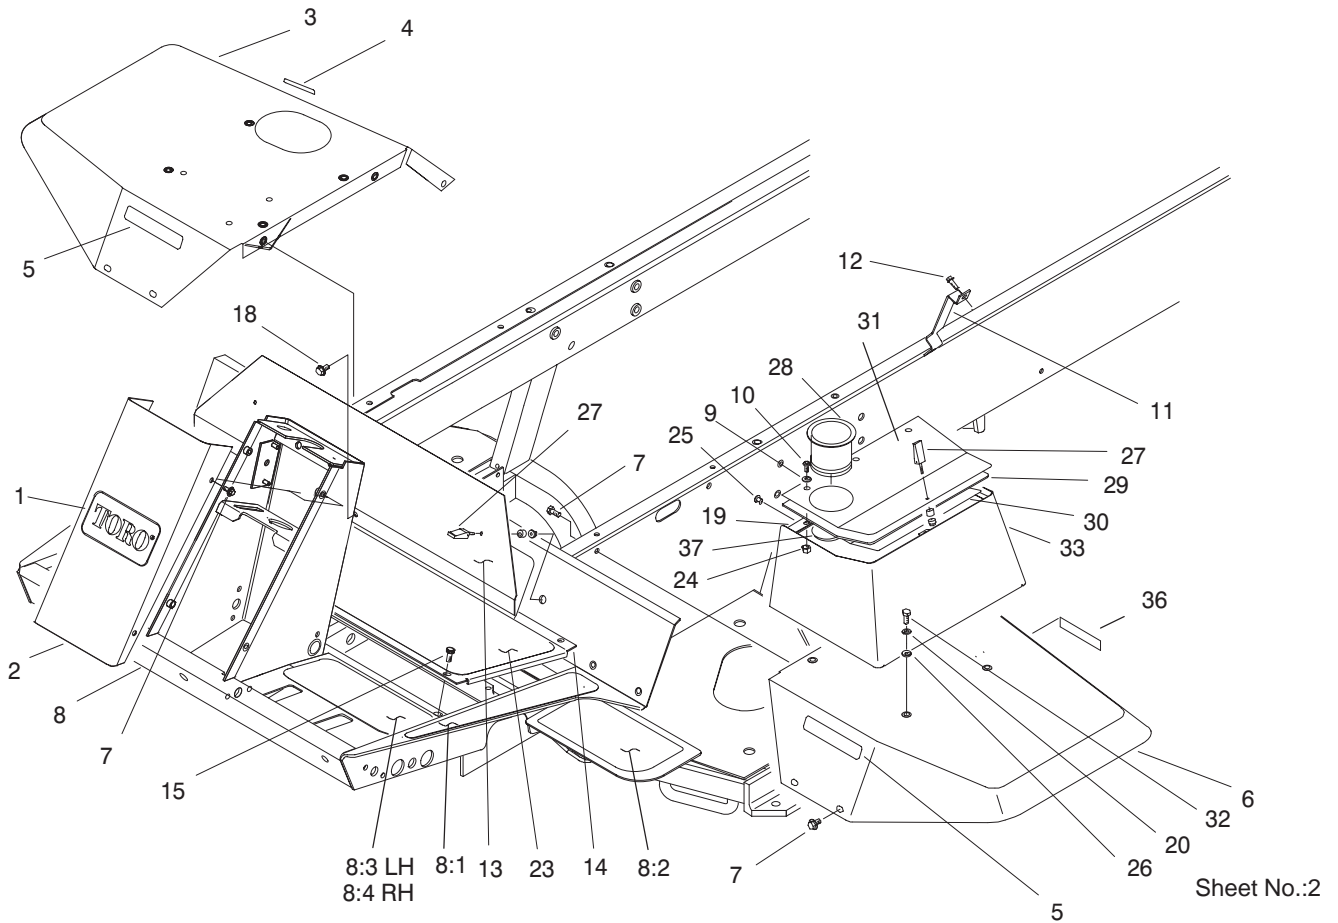 

Frame and Body Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
30	104-1409	1	Decal - , Service Instructions, Spanish
30	104-1410	1	Decal - Service Instructions, Swedish
30	104-1434	1	Decal - Service Blank
31	93-1262	1	Decal-Hillside
32	322-3	4	Screw-HH
33	75-5810-03	1	Box-Tool
36	93-6680	1	Decal - Diesel Only
38	104-1476	1	Ring-Rubber

Ref. No.	Part No.	Qty.	Description
<div style="font-size: 4em; opacity: 0.3; transform: rotate(-10deg); pointer-events: none;"> PROTOTYPE </div>			

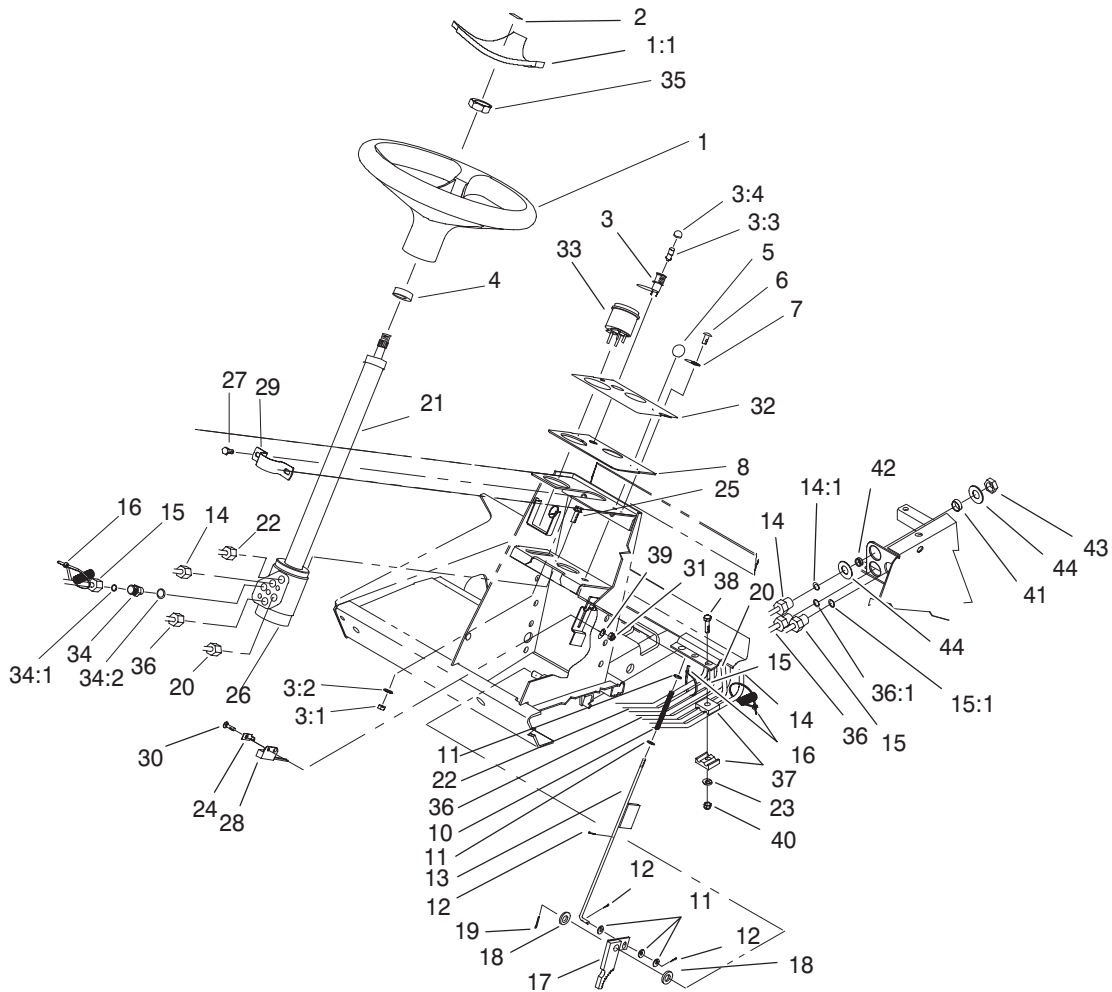 


Sheet No.:3

Steering Tower Assembly

Ref. No.	Part No.	Qty.	Description
1	98-1471	1	Wheel - Steering 14"
1:1	98-1468	1	Cover - Wheel, Steering
2	98-1459	1	Decal-Toro
3	44-2210	1	Light-Indicator, Red
3:1	218-535	1	Nut-Hex
3:2	218-536	1	Washer-Lock
3:3	93-7480	1	Led-Miniature Bayonet
3:4	218-533	1	Lens
4	21-9260	1	Cover-Dust
5	233-17	1	Knob
6	87-6620	2	Screw-Special
7	3256-1	2	Washer-Flat
8	93-7998-03	1	Plate - Instrument
10	95-1821-03	1	Spring - Compression
11	3256-22	5	Washer-Flat
12	3272-5	3	Pin-Cotter
13	104-0096	1	Rod ASM
14	98-3912	1	Tube ASM
14:1	237-22	1	O-Ring
15	98-3910	1	Tube ASM
15:1	237-22	1	O-Ring
16	3290-378	3	Tie-Cable
17	104-1485-03	1	Rack
18	3256-26	2	Washer-Flat


Ref. No.	Part No.	Qty.	Description
19	3272-10	1	Pin-Cotter
20	98-3908	1	Tube ASM
21	94-9951	1	Column - Steering
22	98-3909	1	Tube ASM
23	3256-23	3	Washer-Flat
24	100-4872	1	Plate-Switch, Neutral
25	33103-020	3	Screw-HHF
26	99-8959	1	Control - Steering
27	32144-11	2	Screw-TAP
28	104-1414	1	Sensor-Ferrous Proximity (Nc)
29	75-2810	1	Bracket-Column, Steering
30	104-1450	1	Bolt-CARR
31	3296-2	1	Nut-Lock
32	93-1263	1	Decal-Tower
33	85-4420	1	Speedometer
34	340-2	5	Adapter
34:1	237-22	1	O-Ring
34:2	237-42	1	O-Ring
35	94-9952	1	Nut - Hex
36	98-3911	1	Tube ASM
36:1	237-22	1	O-Ring
37	56-7973	6	Clamp-Tube
38	322-7	3	Screw-HH
39	3256-14	1	Washer-Flat

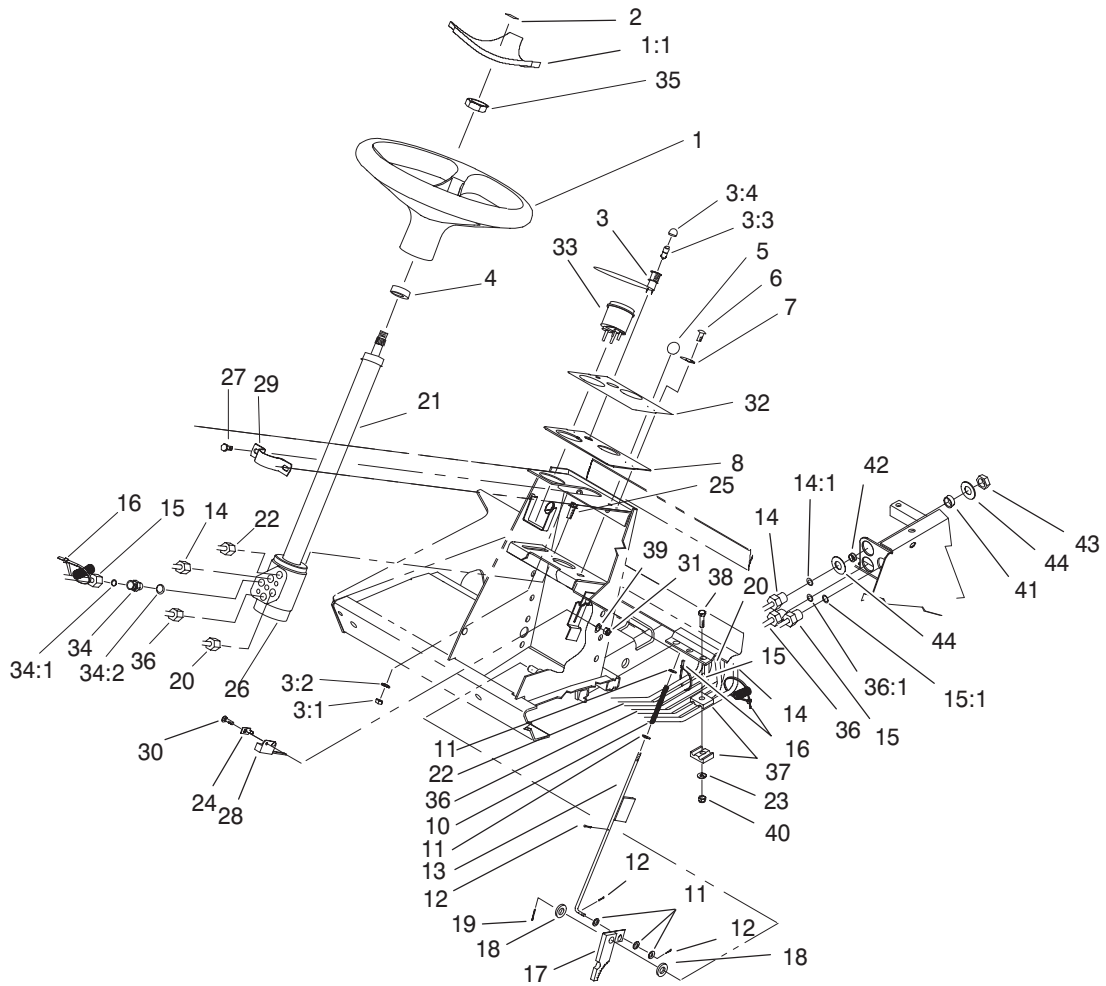 

Sheet No.:3

Steering Tower Assembly (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
40	3296-29	3	Nut-Lock, NI				
41	69-8970	3	Spacer				
42	240-4	3	Rubber Grommet				
43	340-70	3	Locknut-Bulkhead				
44	69-8940	6	Washer				
PROTOTYPE							

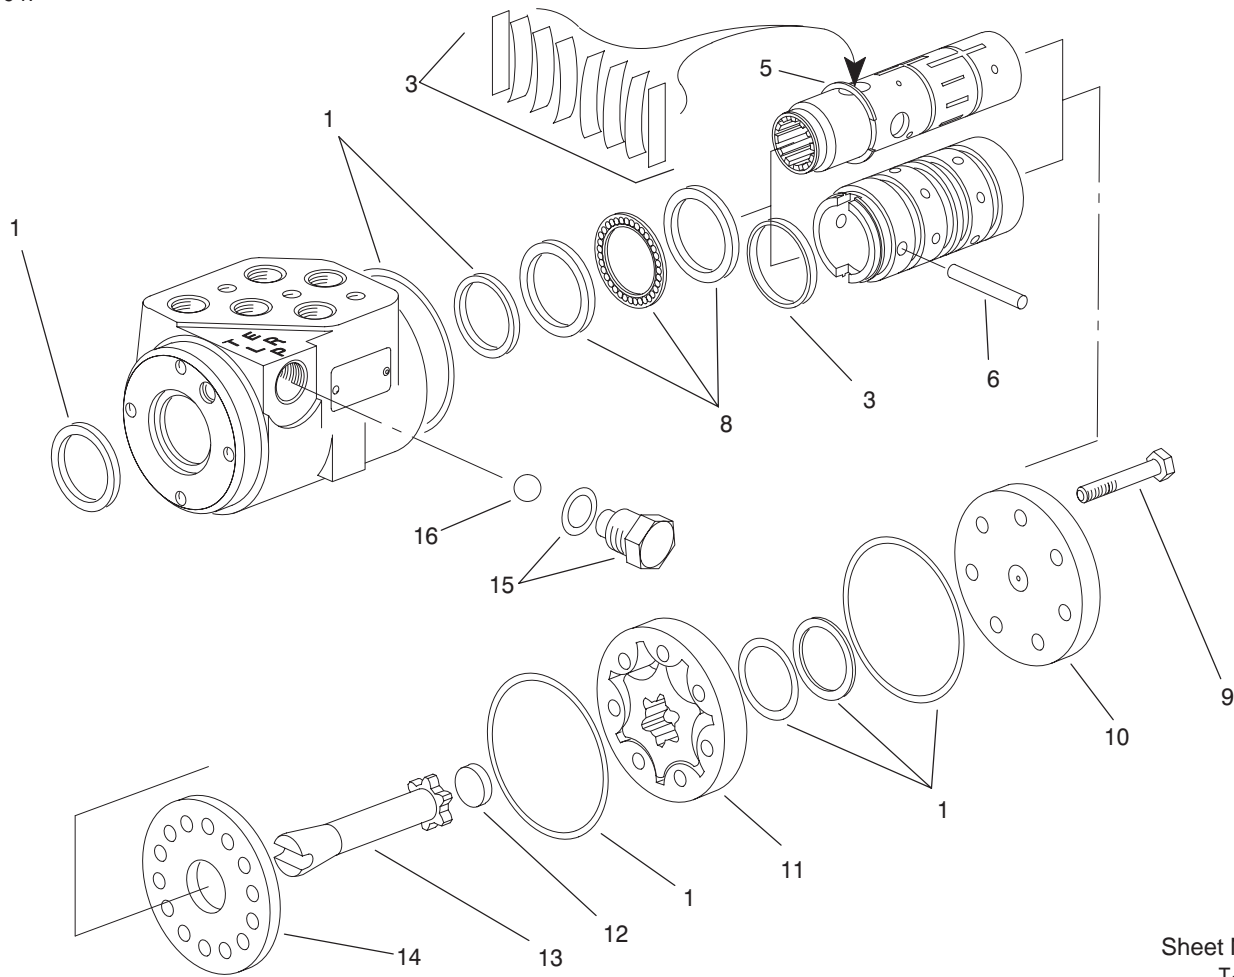 


Sheet No.:A1
T-3216

Steering Valve Assembly No. 99-8959

Ref. No.	Part No.	Qty.	Description
1	94-4099	1	Kit - Seal
3	94-4095	1	Kit - Spring, Centering
5	94-4098	1	Ring - Retaining
6	94-4094	1	Pin
8	94-4096	1	Kit - Bearing
9	94-4088	7	Screw - Cap
10	94-4089	1	Cap - End
11	94-4090	1	Gerotor
12	94-4091	1	Spacer
13	94-4093	1	Drive
14	94-4092	1	Plate - Wear
15	94-4097	1	Plug ASM
16	94-4100	1	Ball


Ref. No.	Part No.	Qty.	Description
<p style="font-size: 48px; opacity: 0.5; transform: rotate(-1deg);">PROTOTYPE</p>			

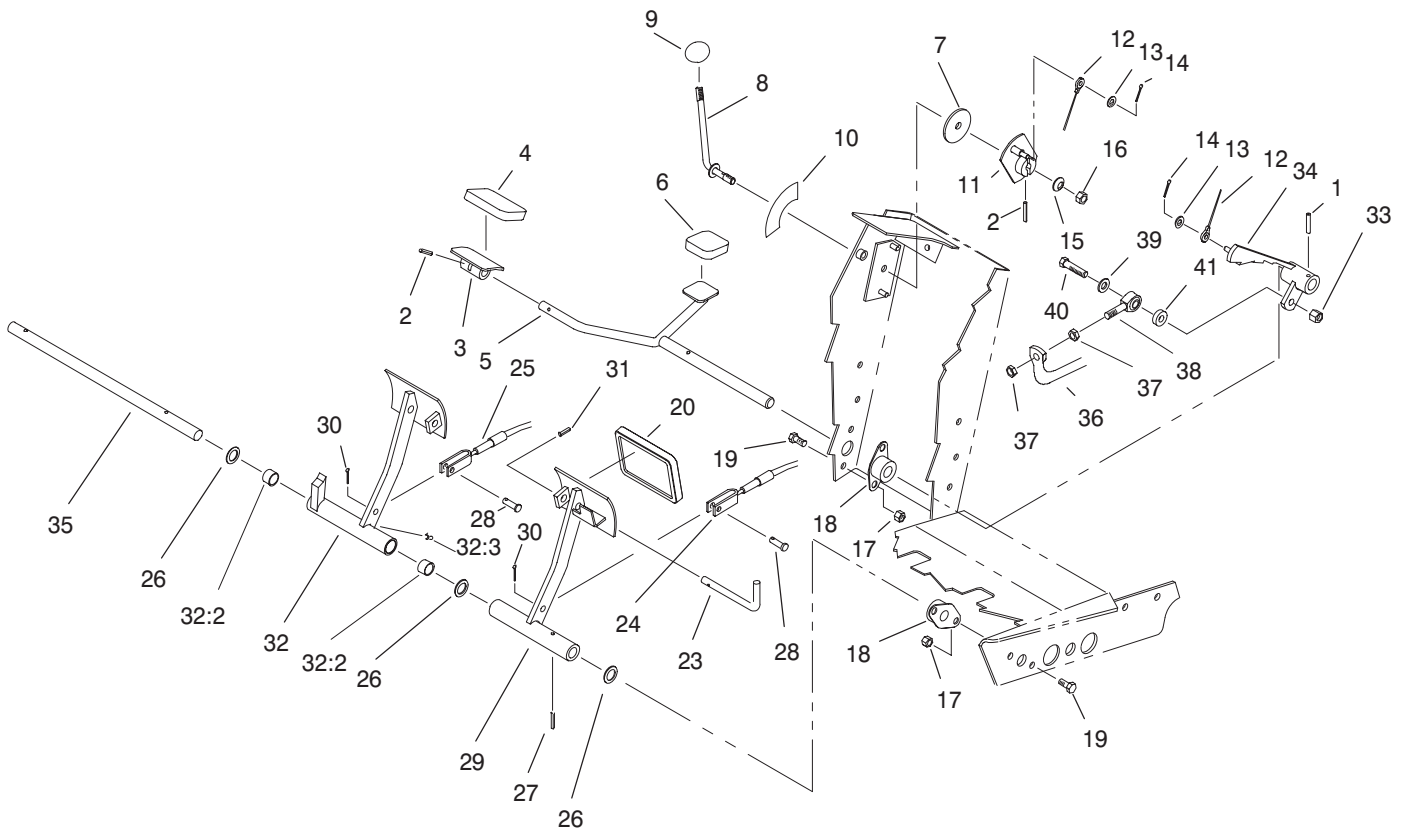

Sheet No.:4

Traction and Brake Pedal Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	32121-6	1	Pin-Roll	28	283-58	2	Pin-Clevis
2	32121-45	2	Pin-Spring	29	75-1440-03	1	Pedal-Brake, LH
3	49-6440-03	1	Pedal-Forward	30	3272-10	2	Pin-Cotter
4	74-9100	1	Pad-Pedal, Forward	31	32121-50	1	Pin-Spring
5	75-2970	1	Pedal-Traction	32	75-1430	1	Pedal-Brake, RH
6	74-9110	1	Pad-Pedal, Reverse	32:2	256-42	2	Bushing
7	75-6550	1	Disc-Friction	32:3	302-5	1	Fitting-Lube
8	75-6490	1	Lever	33	3296-39	1	Nut-Lock, NI
9	233-42	1	Knob	34	75-3270-03	1	Hub-Pivot, Traction
10	93-6699	1	Decal - Fast/Slow	35	75-1470	1	Pin-Pivot, Brake
11	75-6510	1	Bracket-Lever	36	75-2170-03	1	Tube-Control, Pump
12	75-6580	1	Cable - Pedal	37	3220-3	2	Nut-Jam
13	3256-22	2	Washer-Flat	38	2411-36	1	Bearing-End, Rod
14	3272-2	2	Pin-Cotter	39	3256-24	1	Washer-Flat
15	3290-461	1	Washer-Spring	40	323-9	1	Screw-HH
16	3296-59	1	Nut-Lock, NI	41	5-0652	1	Spacer
17	3296-29	8	Nut-Lock, NI				
18	256-236	4	Bearing-Mount, Flange				
19	322-3	8	Screw-HH				
20	93-8742	2	Footpad - Brake				
23	63-7880	1	Pin-Latch, Brake				
24	63-7733	1	LH Brake Cable ASM				
25	63-7732	1	RH Brake Cable ASM				
26	3256-69	3	Washer-Flat				
27	32121-16	1	Pin-Spring				

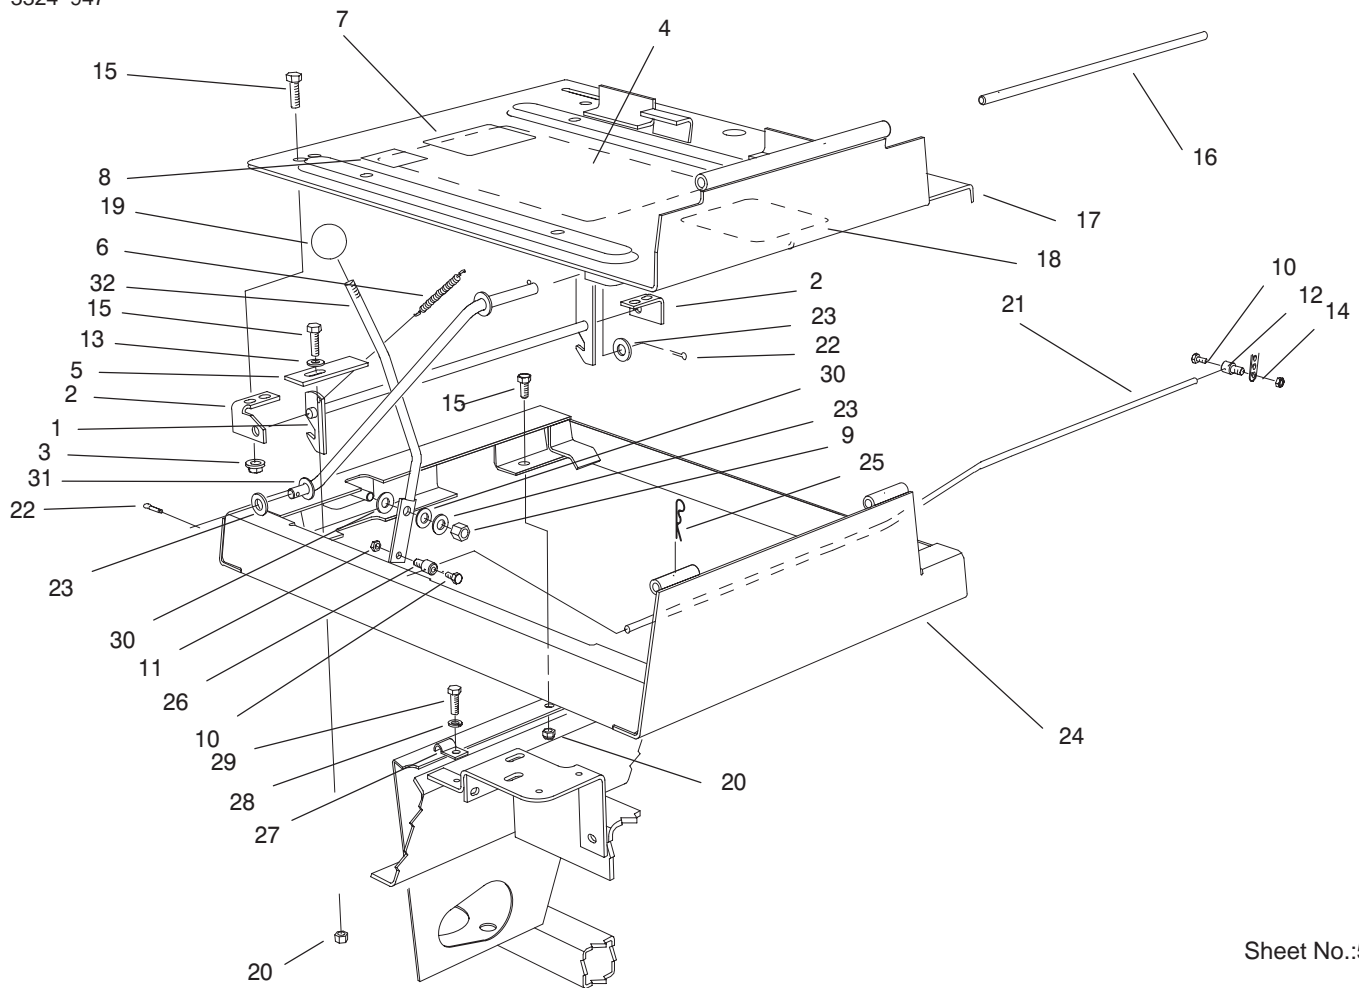 


Sheet No.:5

Seat Frame and Throttle Assembly

Ref. No.	Part No.	Qty.	Description
1	98-2354-03	1	Latch-Seat
2	98-2353	2	Bracket-Latch, Seat
3	32128-25	4	Nut-Flange
4	104-0082	1	Decal - Clip / Solenoid Instructions
5	98-9302	1	Plate-Stop, Idler
6	66-4190-03	1	Spring-Idler, Clutch
7	92-5524	1	Decal-Rating, Noise
8	63-9920	1	Decal-Level, Noise
9	3296-39	1	Nut-Lock, NI
10	25-8640	2	Screw-Machine, HH
11	3296-3	1	Nut-Lock NI
12	98-9311	1	Swivel - Throttle
13	3256-23	1	Washer-Flat
14	3296-20	1	Nut-Lock NI
15	322-3	8	Screw-HH
16	75-3400	1	Shaft-Pivot, Seat
17	98-2350-03	1	Plate-Seat
18	93-8060	1	Decal - Reels
19	233-42	1	Knob
20	3296-29	4	Nut-Lock, NI
21	98-3926	1	Cable-Throttle
22	3272-10	2	Pin-Cotter
23	3256-24	3	Washer-Flat
24	98-2352-03	1	Frame-Seat
25	3290-467	1	Pin-Hair


Ref. No.	Part No.	Qty.	Description
26	93-0021	1	Swivel-Cable, Throttle
27	3-6657	1	Clip-Skid
28	3253-3	1	Washer-Lock/Sp
29	321-4	1	Screw-HH
30	66-2920	2	Washer-Friction, Throttle
31	75-3680-03	1	Rod-Seat
32	75-3430-03	1	Lever-Throttle

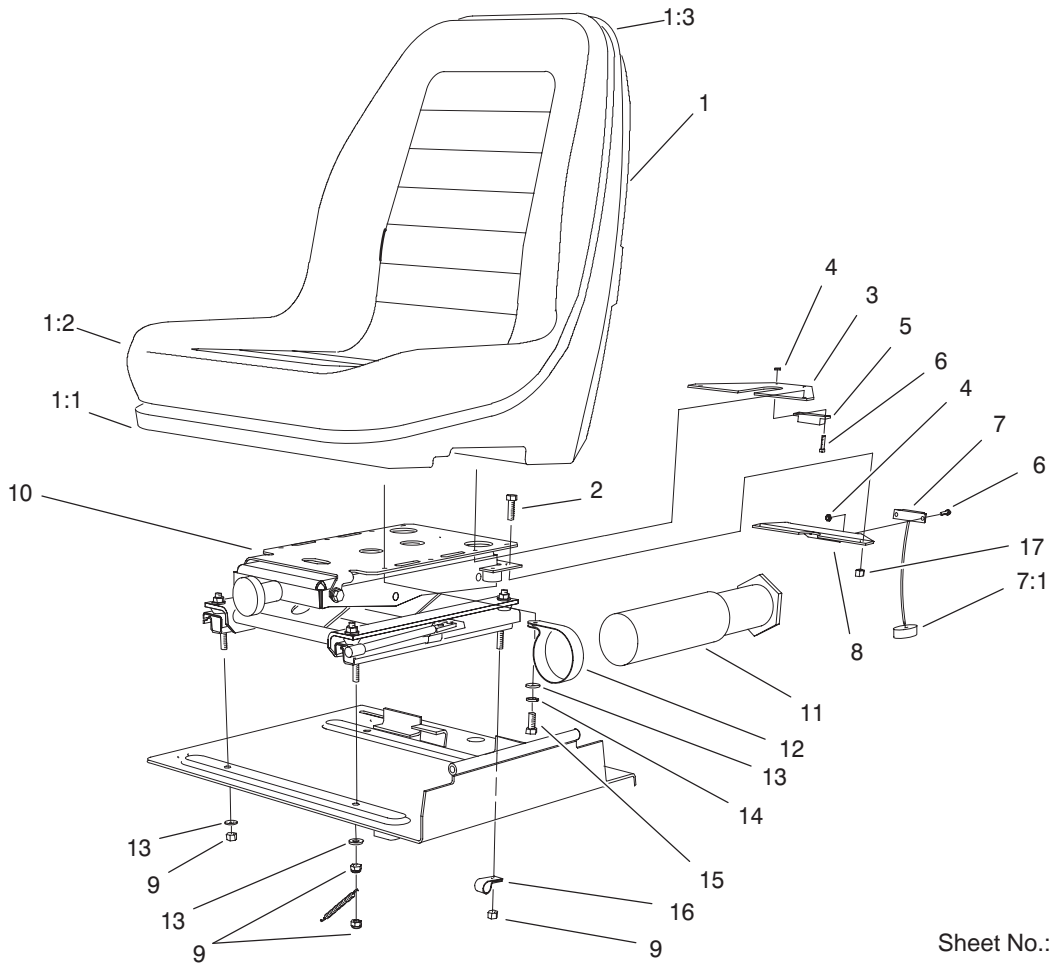 

Sheet No.:6

Seat and Suspension Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-1180	1	Seat-Olympic				
1:1	92-6534	1	Shell				
1:2	92-6533	1	Kit-Cushion, Seat				
1:3	351-78	1	Edging				
2	323-4	2	Screw-HH				
3	75-4370-03	1	Bracket-Seat				
4	3296-54	4	Nut-Lock NI				
5	92-8753	1	Magnet-Switch, Reed				
6	3250-29	4	Screw-PPH				
7	92-8001	1	Sensor-Switch, Reed				
7:1	93-0140	1	Grommet - Rubber				
8	75-4360-03	1	Bracket-Suspension, Seat				
9	3296-29	5	Nut-Lock, NI				
10	75-3000	1	Suspension-Seat				
11	74-0720	1	Tube-Manual				
12	2412-133	2	R-Clamp				
13	3256-23	8	Washer-Flat				
14	3253-4	4	Washer				
15	322-3	4	Screw-HH				
16	2412-93	1	R-Clamp				
17	3296-39	2	Nut-Lock, NI				

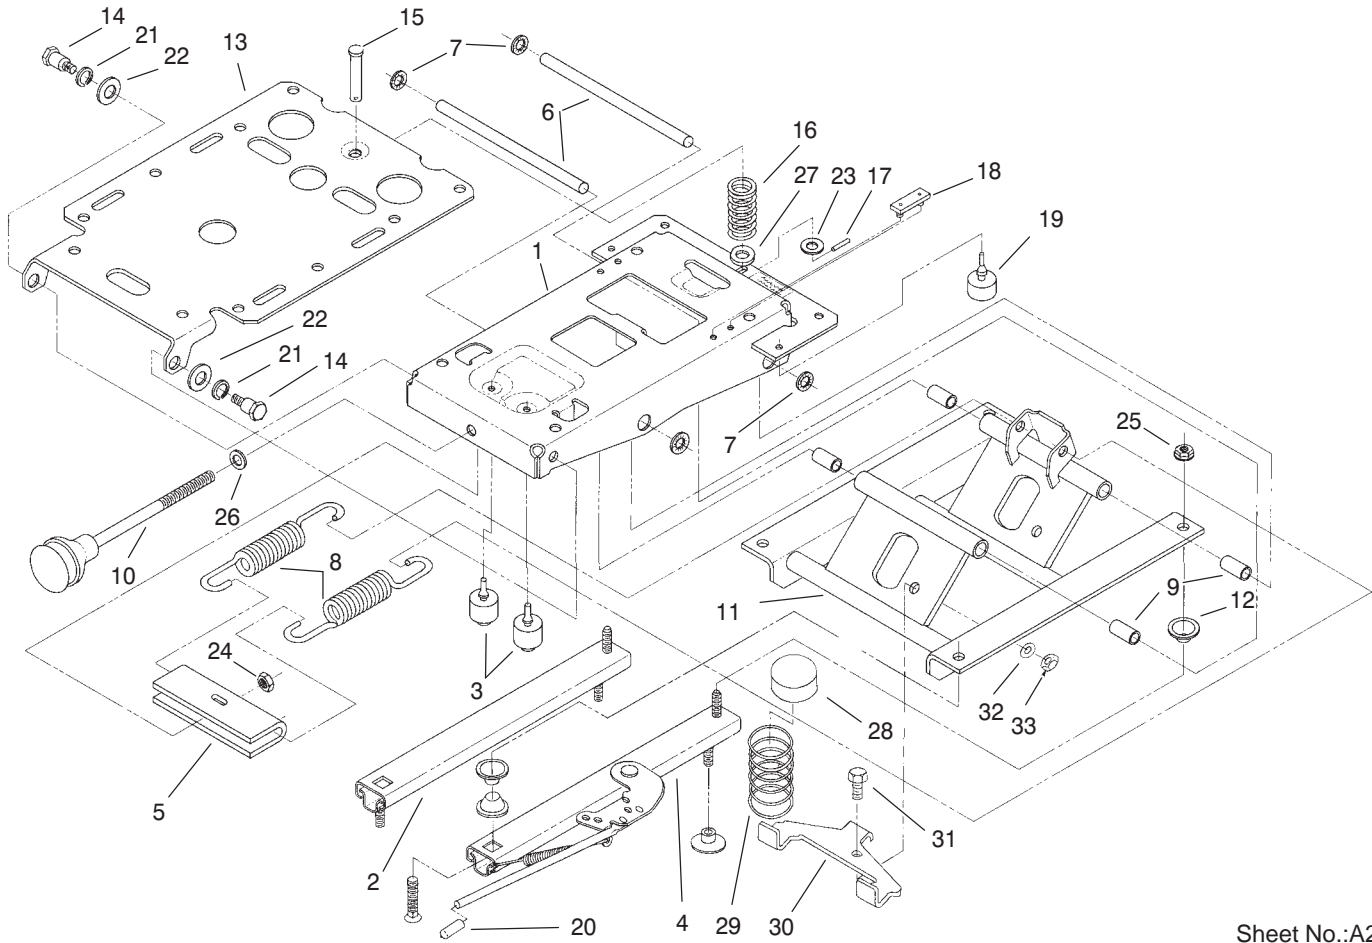 


Seat Suspension Assembly No. 75-3000

Ref. No.	Part No.	Qty.	Description
1	75-3480	1	Frame-Upper
2	66-8530	1	Adjuster
3	66-8520	2	Bumper-Downstop
4	82-9060	1	Adjuster w/Handle
5	77-2870	1	Hanger-Spring
6	76-1910	2	Shaft-Pivot
7	66-8560	4	Nut-Push
8	76-1940	2	Spring-Extension
9	76-1920	4	Bearing-Sleeve
10	76-1930	1	Knob-Adjuster, Tension
11	66-8610	1	Frame-Lower
12	66-9290	6	Spacer-Suspension
13	75-3580	1	Plate-Seat
14	75-3510	2	Bolt
15	80-4860	1	Pin - Clevis
16	75-3530	1	Spring
17	75-3540	1	Pin-Roll
18	75-3550	2	Bumper
19	76-2940	2	Bumper
20	75-3570	1	Tip
21	3253-6	2	Washer-Lock/Sp
22	3256-26	2	Washer-Flat
23	3256-24	1	Washer-Flat
24	3296-44	1	Nut-Lock NI
25	32128-26	4	Nut-Flange

Ref. No.	Part No.	Qty.	Description
26	3256-46	1	Washer-Flat
27	3256-5	1	Washer-Flat
28	93-3164	2	Cap
29	93-3163	2	Spring
30	93-3165	1	Bracket
31	322-6	1	Screw-HH
32	3253-33	1	Washer-Lock
33	3217-6	1	Nut-Hex

PROTOTYPE

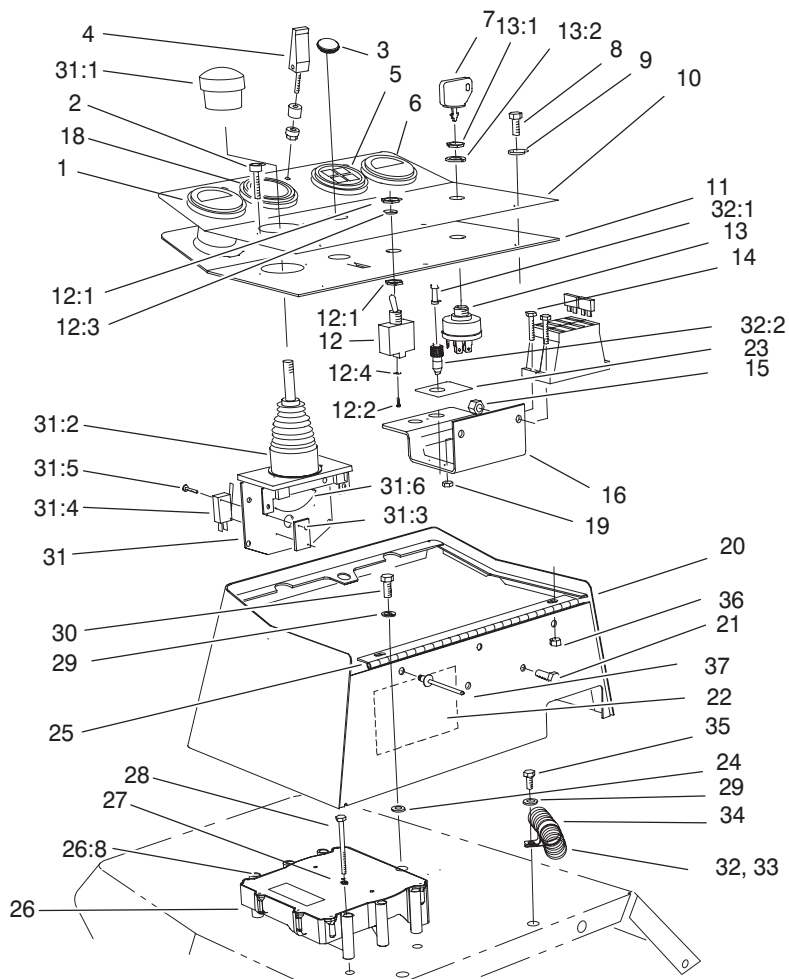


Sheet No.:7

Control Console Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9339	1	Guage - Fuel
2	3273-26	2	Screw-HSH
3	99-1087	1	Plug-Hole, Dash
4	74-5950	1	Latch-Swell
5	98-9306	1	Light - Warning
6	98-9308	1	Gauge - Temperature
7	63-8360	1	Key-Ignition
8	3258-166	3	Screw
9	3256-1	3	Washer-Flat
10	99-8961	1	Panel-Control
11	75-6270-03	1	Cover-Box, Control
12	99-8352	1	Switch-Backlap
12:1	218-498	2	Locknut-Hex
*12:2	218-588	3	Screw
*12:3	218-589	1	Washer
*12:4	3253-19	3	Washer-Lock/Sp
13	27-2360	1	Switch-Key
13:1	218-446	1	Nut-Hex
13:2	218-447	1	Washer-Lock
14	32105-13	4	Screw-Shh
15	3296-42	2	Nut-Lock
16	93-7587	1	Bracket-Fuse Block/Panel
18	66-2950	1	Gauge-Hourmeter
18:1	3255-20	2	Washer-Lock
18:2	3217-25	2	Nut-Hex

Ref. No.	Part No.	Qty.	Description
19	3296-2	4	Nut-Lock
20	75-5740-03	1	Box-Control
21	321-39	2	Screw-HH
22	94-6767	1	Decal - Fuses
23	98-9334	1	Decal - Controller
24	52-2900	3	Washer
25	75-5780	1	Hinge-Steel
26	92-5720	1	Controller-Electronic
26:8	93-8053	1	Decal
27	3253-3	2	Washer-Lock/Sp
28	321-15	2	Screw-HH
29	3256-3	3	Washer-Flat
30	322-3	2	Screw-HH
31	98-2195	1	Joystick
31:1	3290-489	1	Knob
31:2	3290-488	1	Boot
*31:3	3290-354	2	Nut-Speed
31:4	218-590	2	Switch
31:5	3290-93	4	Screw-Head, Pan
*31:6	93-3625	1	Spring - Return
32	98-3946	1	Harness-Wire
32:1	219-19	1	Lamp-Incandescent, Green
32:2	85-4491	1	Light-Indicator
33	94-6343	1	Decal-I.d., Wire
34	2412-126	1	R-Clamp

 * Not illustrated

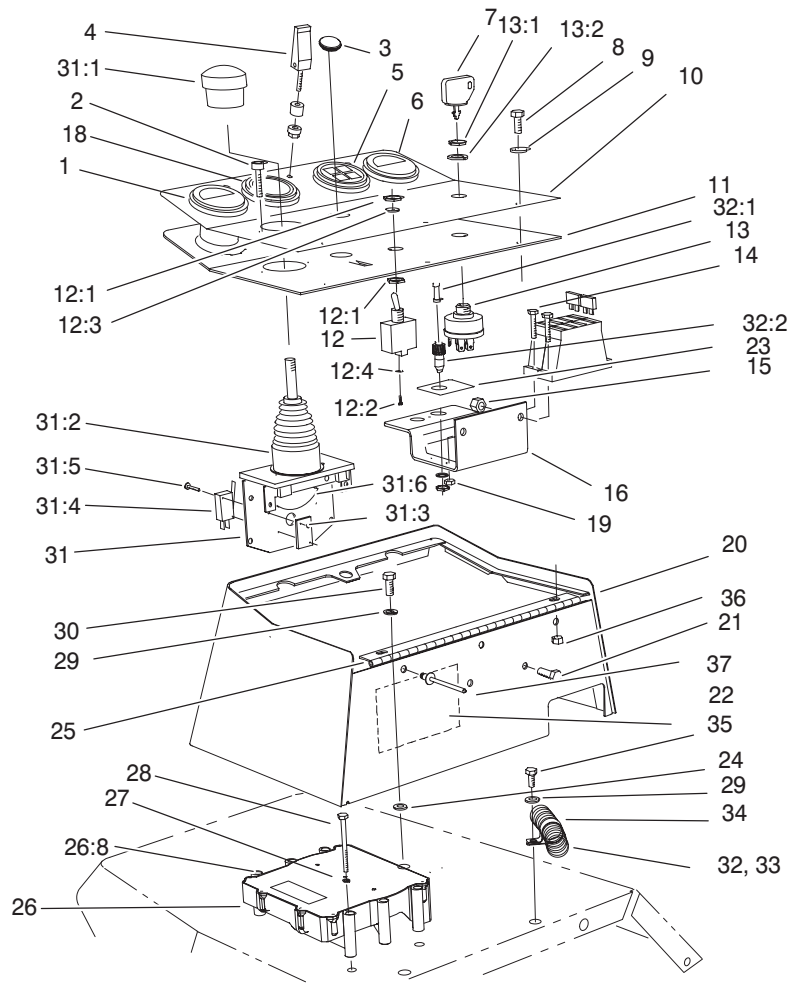


Sheet No.:7

Control Console Assembly (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
35	322-5	1	Screw-HH				
36	32128-33	3	Nut-HF				
37	93-8744	3	Pop - Rivet				
*99	104-0083	1	Decal-Diagnostics				

PROTOTYPE

 * Not illustrated

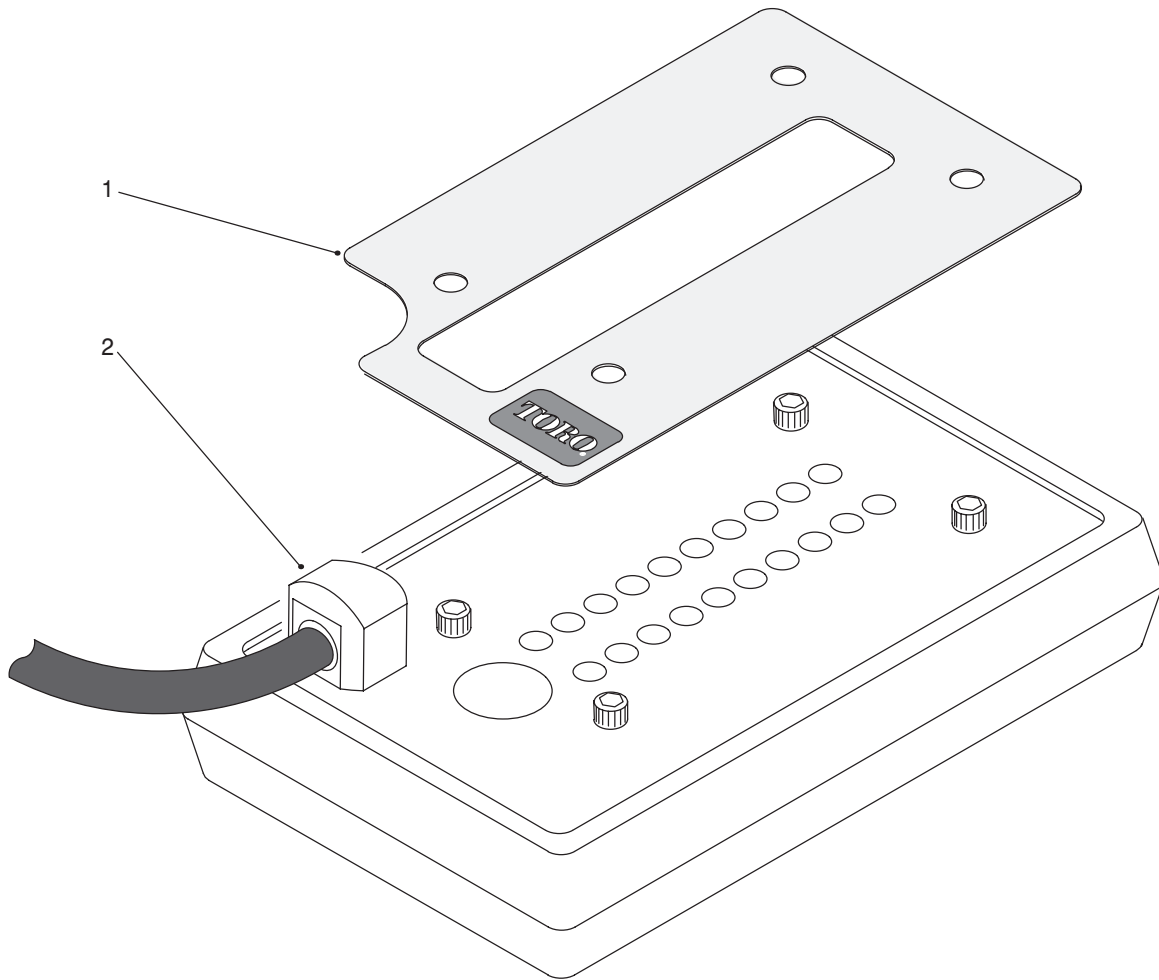

Sheet No.:A


T-1458

Diagnostic-ACE Display Assembly

Ref. No.	Part No.	Qty.	Description
1	104-0030	1	Decal Diagnostics, Dutch
1	104-0031	1	Decal Diagnostics, Finish
1	104-0034	1	Decal Diagnostics, Italian
1	104-0033	1	Decal Diagnostics, German
1	104-0032	1	Decal Diagnostics, French
1	104-0029	1	Decal Diagnostics, Danish
1	104-0035	1	Decal Diagnostics, Japanese
1	104-0036	1	Decal Diagnostics, Nowegian
1	104-0037	1	Decal Diagnostics, Polish
1	104-0038	1	Decal Diagnostics, Spanish
1	104-0039	1	Decal Diagnostics, Swedish
2	85-4750	1	Diagnostic Display Box

Ref. No.	Part No.	Qty.	Description

 PROTOTYPE

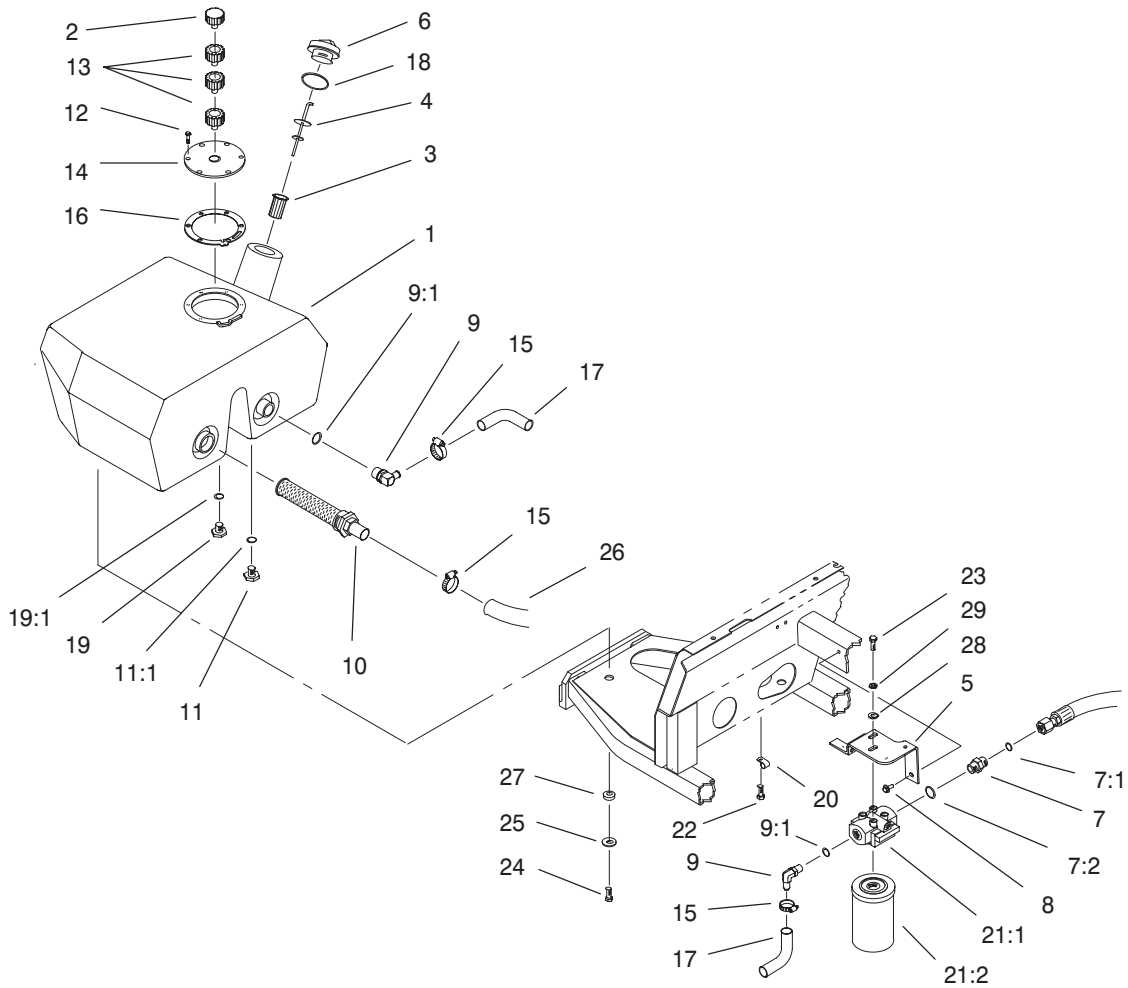


Sheet No.:8

Hydraulic Filter and Reservoir Assembly

Ref. No.	Part No.	Qty.	Description
1	104-0085	1	Tank – Oil
2	68-6150	1	Breather–Air
3	61-2790	1	Filter–Screen
4	94-9411	1	Dipstick
5	98-3917-01	1	Bracket–Filter
6	93-7498	1	Plug–Plastic
7	340-91	1	Adapter
7:1	237-58	1	O–Ring
7:2	237-146	1	O–Ring
8	32144-14	2	Screw–HWH
9	23-8910	2	Stem–Barb, 90°
9:1	237-146	1	O–Ring
10	104-1433	1	Strainer–Suction
11	353-508	1	Plug–O–Ring
11:1	237-42	1	O–Ring
12	33104-020	6	Screw–HHF
13	92-8020	3	Adapter – Breather
14	93-7588	1	Cover – Tank
15	2412-34	3	Clamp–Hose
16	93-7499	1	Gasket
17	98-3931	2	Hose–Formed
18	237-101	1	O–Ring
19	353-550	1	Plug–Hydraulic
19:1	237-79	1	O–Ring
20	2412-93	2	R–Clamp
21		1	Filter Assembly–Oil

Ref. No.	Part No.	Qty.	Description
21:1	104-0080	1	Filter Head ASM
21:2	94-2621	1	Filter Element
22	32144-10	2	Screw–HWH
23	323-4	2	Screw–HH
24	33105-025	3	Screw–HHF
25	63-8410	3	Washer
26	75-6870	1	Hose–Inlet, Pump
27	240-11	3	Grommet–Mount, Tank
28	3256-24	2	Washer–Flat
29	3253-21	2	Washer–Lock

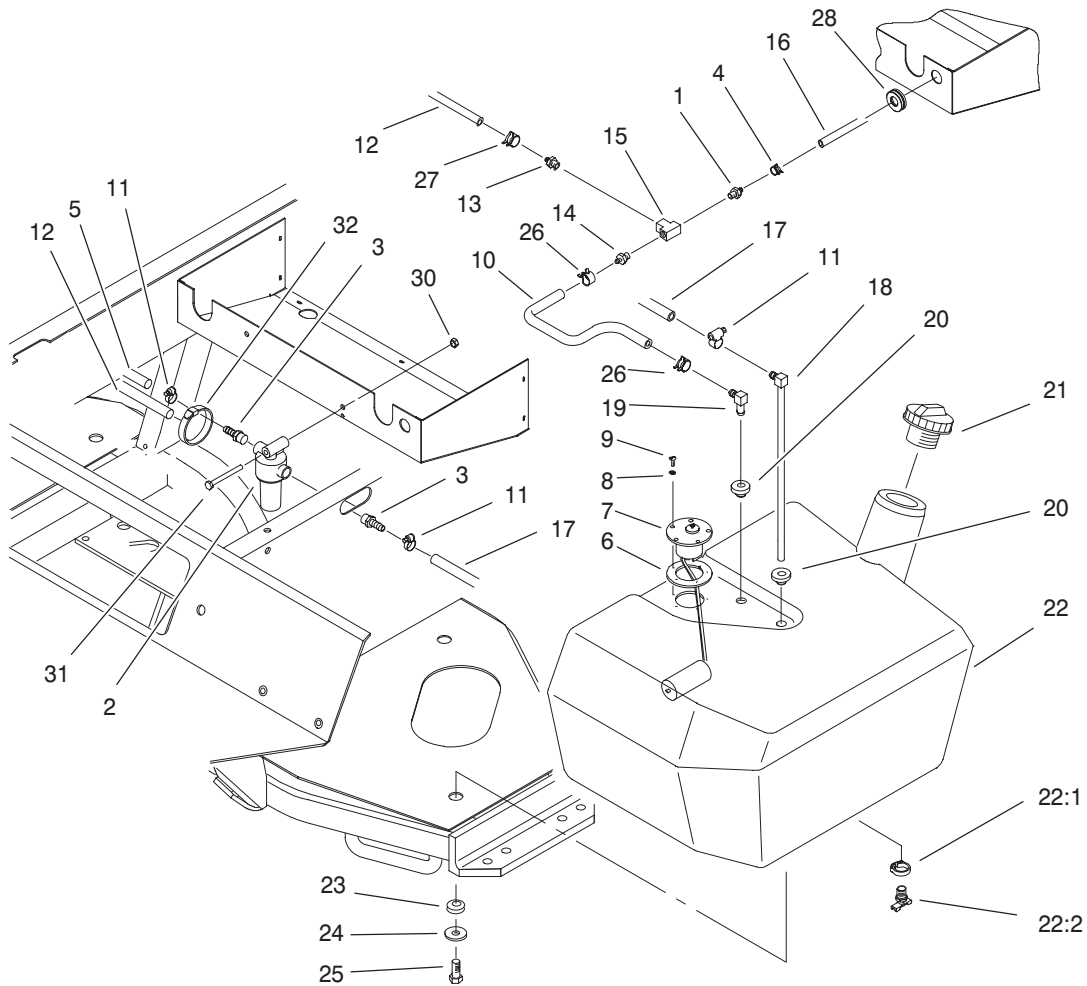 


Sheet No.:9

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	304-73	1	Connector-Hose
2	99-8351	1	Filter - Fuel, Inline
3	353-783	2	Fitting-Pump
4	2412-98	1	Clamp
5	104-0078	1	Hose-Fuel
6	62-7650	1	Gasket
7	63-7640	1	Sender-Fuel
8	3253-15	5	Washer-Lock/Sp
9	32122-24	5	Screw-Pth
10	93-2042	1	Hose - Fuel
11	2412-108	4	Clamp-Worm
12	104-0077	1	Hose-Fuel
13	354-22	1	Fitting-Barb
14	354-21	1	Fitting-Barb
15	354-20	1	Fitting-Tee
16	98-9338	1	Hose - Fuel
17	104-0076	1	Hose-Fuel
18	66-8121	1	Standpipe
19	46-6550	1	Elbow-Connector, 90 DEG
20	46-6560	2	Bushing
21	93-3102	1	Cap-Fuel
22	104-0084	1	Tank - Fuel
22:1	2412-36	1	Clamp-Hose
22:2	304-46	1	Draincock

Ref. No.	Part No.	Qty.	Description
23	240-11	3	Grommet-Mount, Tank
24	63-8410	3	Washer
25	33105-025	3	Screw-HHF
26	92-2379	2	Clamp-Hose
27	2412-146	2	Clamp-Hose
28	240-9	1	Grommet
30	3296-42	1	Nut-Lock
31	321-11	1	Screw-HH
32	3290-378	1	Tie-Cable

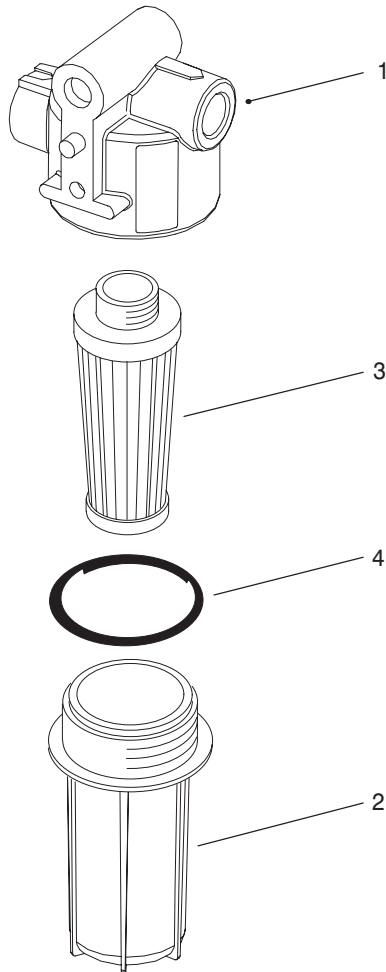

2 — 2 & 4

3 — 3 & 4

Sheet No.:A3


T-3100

Fuel Tank Assembly No. 99-8351

Ref. No.	Part No.	Qty.	Description
1	99-8356	1	Kit – Head w/Label
2	99-8357	1	Kit-Bowel, w/O-Ring
3	99-8358	1	Kit-Element, w/O-Ring
4	99-8359	1	O-Ring Replacement

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

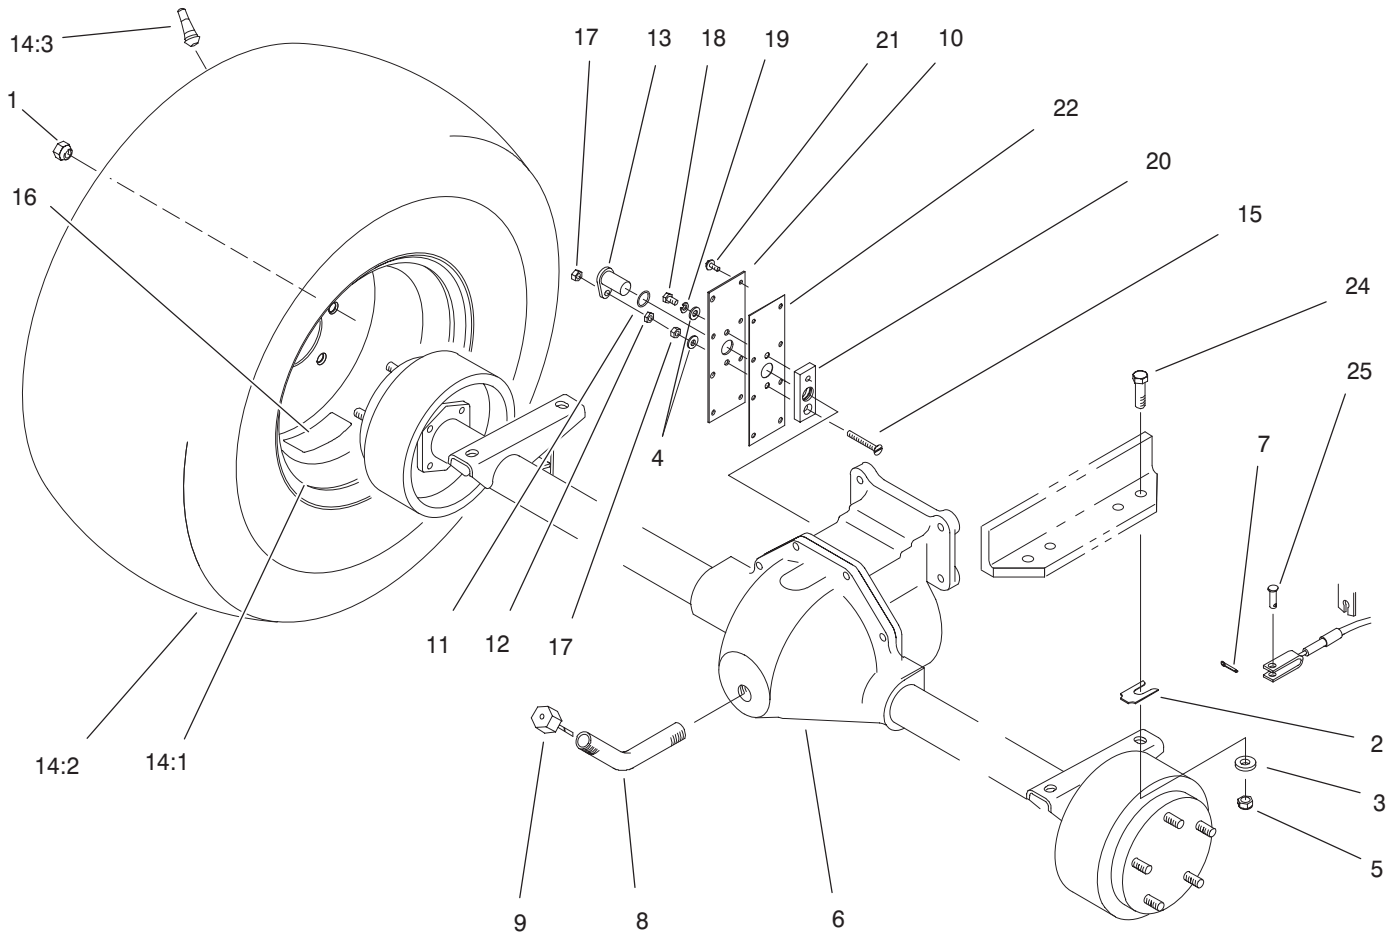


Sheet No.:10

Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	23-7270	10	Nut-Wheel
2	42-6080	5	Shim-Axle
3	66-6480	4	Washer
4	3256-22	2	Washer-Flat
5	3296-48	4	Nut-Lock NI
6	99-6981-03	1	Drive Axle
7	3272-10	2	Pin-Cotter
8	75-6850	1	Tube-Fill, Oil
9	27-3710	1	Dipstick
10	85-4330	1	Cover-Gear
11	237-181	1	O-Ring
12	3218-1	1	Nut-Jam
13	85-4350	1	Sensor - Geartooth
14		2	Wheel And Tire ASM
14:1	99-6984	1	Wheel ASM
14:2	98-2373	1	Tire
14:3	232-27	1	Stem-Valve
15	32108-9	1	Screw-FH
16	76-8730	2	Decal-Torque, Wheel
17	3296-56	2	Nut-Lock, NI
18	321-2	1	Screw-HH
19	3253-3	1	Washer-Lock/Sp
20	85-4340	1	Plate-Sensor Mounting
21	32144-112	8	Screw-Forming, Thread

Ref. No.	Part No.	Qty.	Description
22	92-5797	1	Gasket - Axle
24	324-7	4	Screw-HH
25	283-58	2	Pin-Clevis

 PROTOTYPE

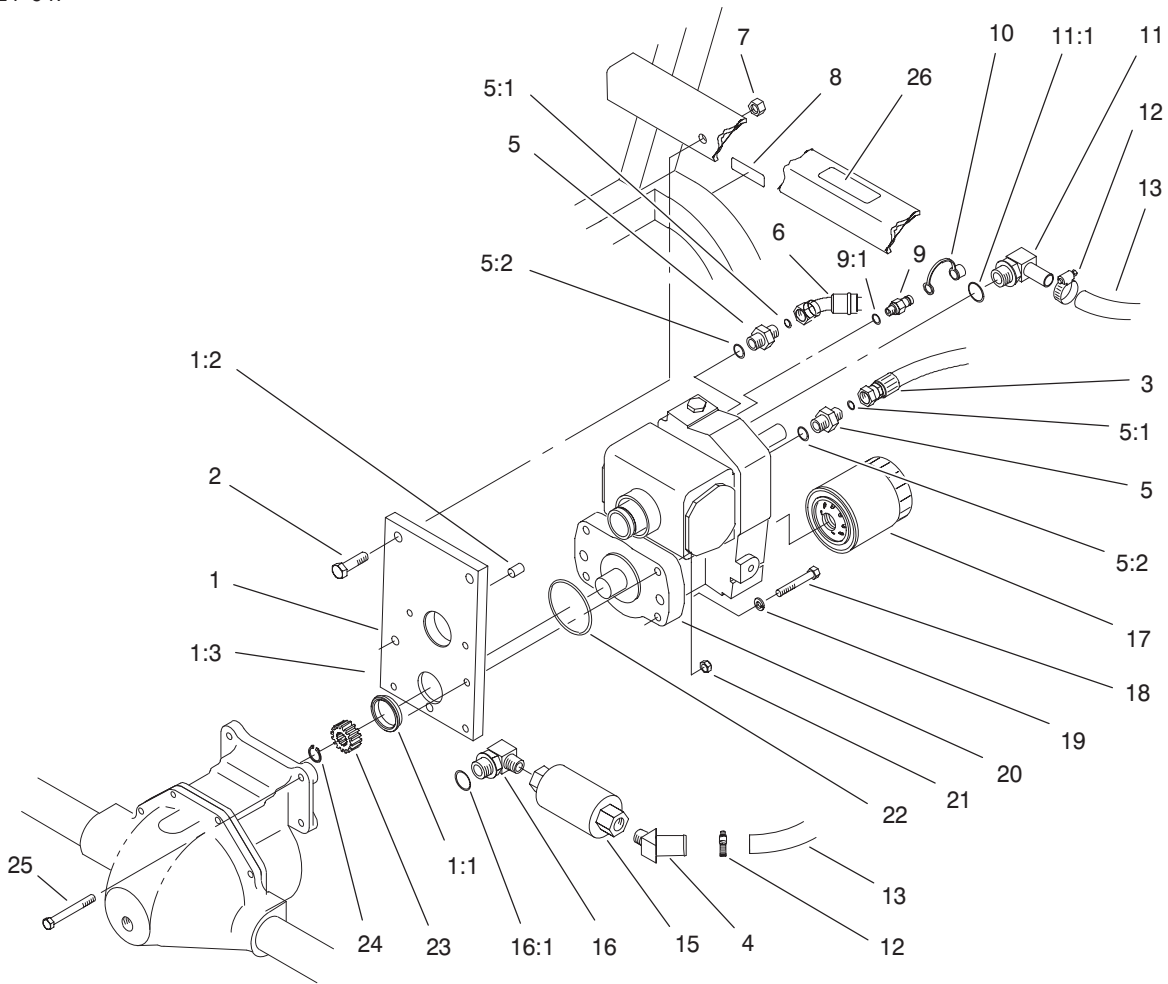


Sheet No.:11

Transmission Assembly

Ref. No.	Part No.	Qty.	Description
1	92-4846	1	Transmission Support ASM
1:1	75-3110	1	Transmission Collar
1:2	92-4808	1	Sleeve-Transmission
1:3	92-4809	1	Transmission Support
2	325-7	2	Screw-HH
3	104-0073	1	Hose ASM-Hydraulic
4	354-72	1	Fitting
5	340-3	2	Adapter
5:1	237-22	1	O-Ring
5:2	237-79	1	O-Ring
6	104-0072	1	Hose ASM-Hydraulic
7	3296-23	2	Nut-Lock, NI
8	93-6691	1	Decal-Bolt, Eccentric
9	354-77	1	Fitting-Quick
9:1	237-78	1	O-Ring
10	354-79	1	Cap - Fitting, Yellow
11	75-4720	1	Fitting-Line, Suction
11:1	237-81	1	O-Ring
12	2412-129	2	Clamp-Hose
13	75-6350	1	Hose
15	75-6340-03	1	Filter
16	354-75	1	Fitting
16:1	237-81	1	O-Ring
17	75-1330	1	Element-Filter
18	323-12	2	Screw-HH

Ref. No.	Part No.	Qty.	Description
19	3253-21	2	Washer-Lock
20	75-0012	1	Transmission
21	3296-39	2	Nut-Lock, NI
22	237-161	1	O-Ring
23	86-7220	1	Gear-Pinion
24	32151-62	1	Ring-Retaining
25	323-20	2	Screw-HH
26	88-6700	1	Decal - Ansi

 PROTOTYPE

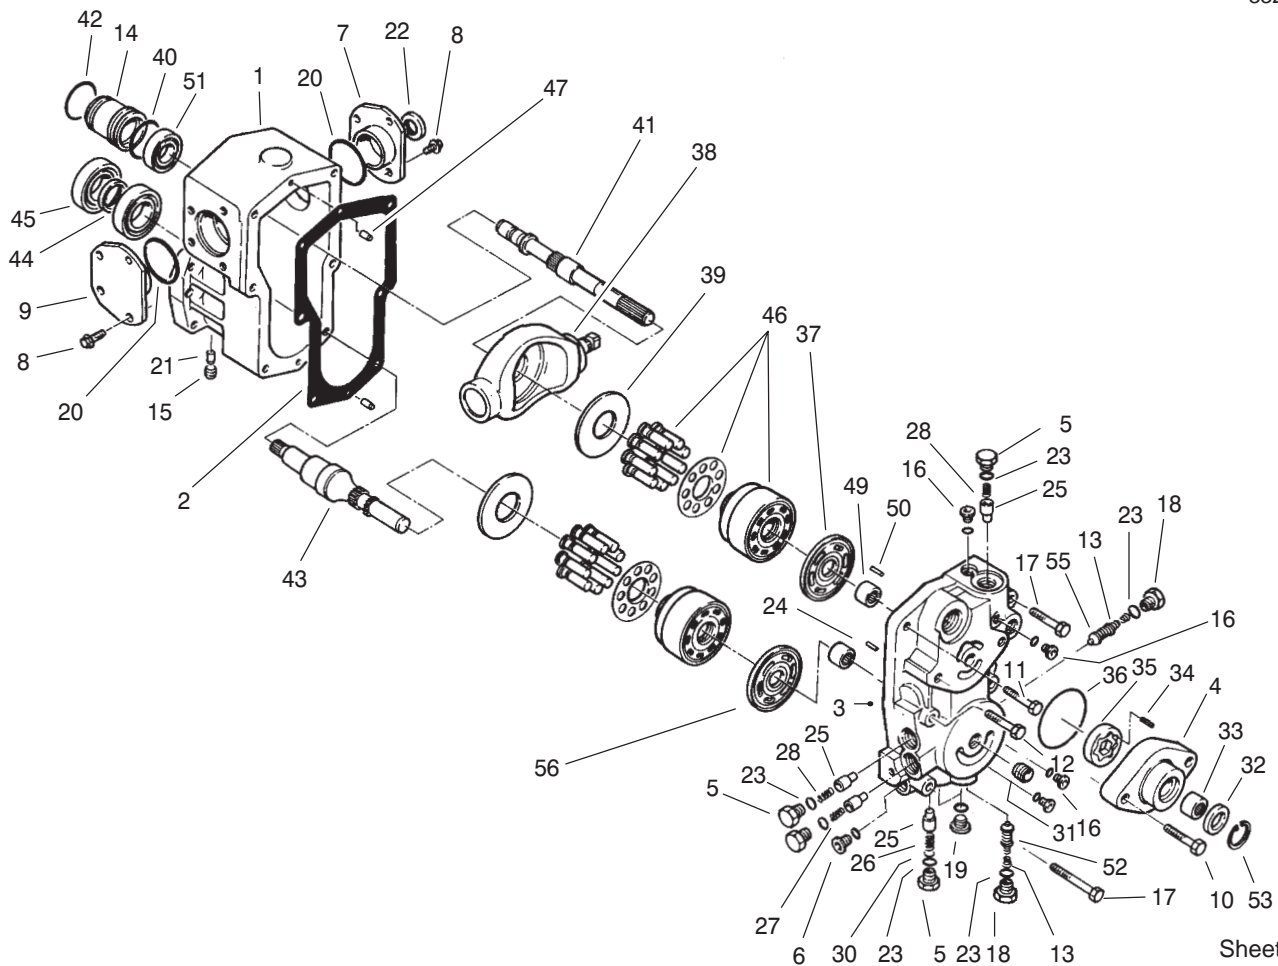

Sheet No.:A4


T-1006

Transmission Assembly No. 75-0012

Ref. No.	Part No.	Qty.	Description
1	75-0020	1	Housing
2	75-0030	1	Gasket-Housing
3	75-0040	1	Section-Center
4	83-4780	1	Housing-Pump, Charge
5	75-0060	4	Plug
6	75-0070	1	Plug
7	86-7520	1	RH Trunnion Cover ASM
8	75-0090	8	Capscrew-HH
9	86-7530	1	LH Trunnion Cover ASM
10	75-0110	2	Capscrew-HH
11	75-0120	1	Capscrew-HH
12	75-0130	3	Capscrew-HH
13	75-0140	1	Spring-Conical
14	75-0150	1	Guide-Seal
15	75-0160	1	Plug-Pipe
16	75-0170	4	Plug-Thread, Straight
17	75-0180	2	Capscrew-HH
18	75-0190	2	Plug-Special
19	75-0200	2	Plug-Thread, Straight
20	75-0210	2	O-Ring
21	75-0220	2	Pin
22	75-0230	1	Seal-Lip
23	75-0240	6	O-Ring

Ref. No.	Part No.	Qty.	Description
24	75-0250	1	Spring
25	75-0260	4	Valve - Relief
26	75-0270	1	Spring
27	75-0280	1	Spring
28	75-0290	2	Spring
30	75-0310	1	Shim
31	75-0320	1	Nipple
32	75-0330	1	Seal-Lip
33	75-0340	1	Bearing-Needle
34	75-0350	1	Pin
35	75-0360	1	Gerotor
36	75-0370	1	O-Ring
37	75-0380	1	Plate-Valve
38	75-0390	1	Plate-Swash
39	75-0400	2	Plate-Thrust
40	75-0410	1	O-Ring
41	86-7540	1	Shaft-Pump
42	75-0430	1	Ring-Retaining
43	75-0440	1	Shaft-Motor
44	75-0450	1	Collar
45	75-0460	2	Bearing-Ball
46	75-0470	2	Kit-Block, Cylinder
47	75-0480	2	Pin
49	75-0500	2	Bearing-Needle
50	75-0510	1	Pin
51	75-0520	1	Bearing-Ball

 3324-947

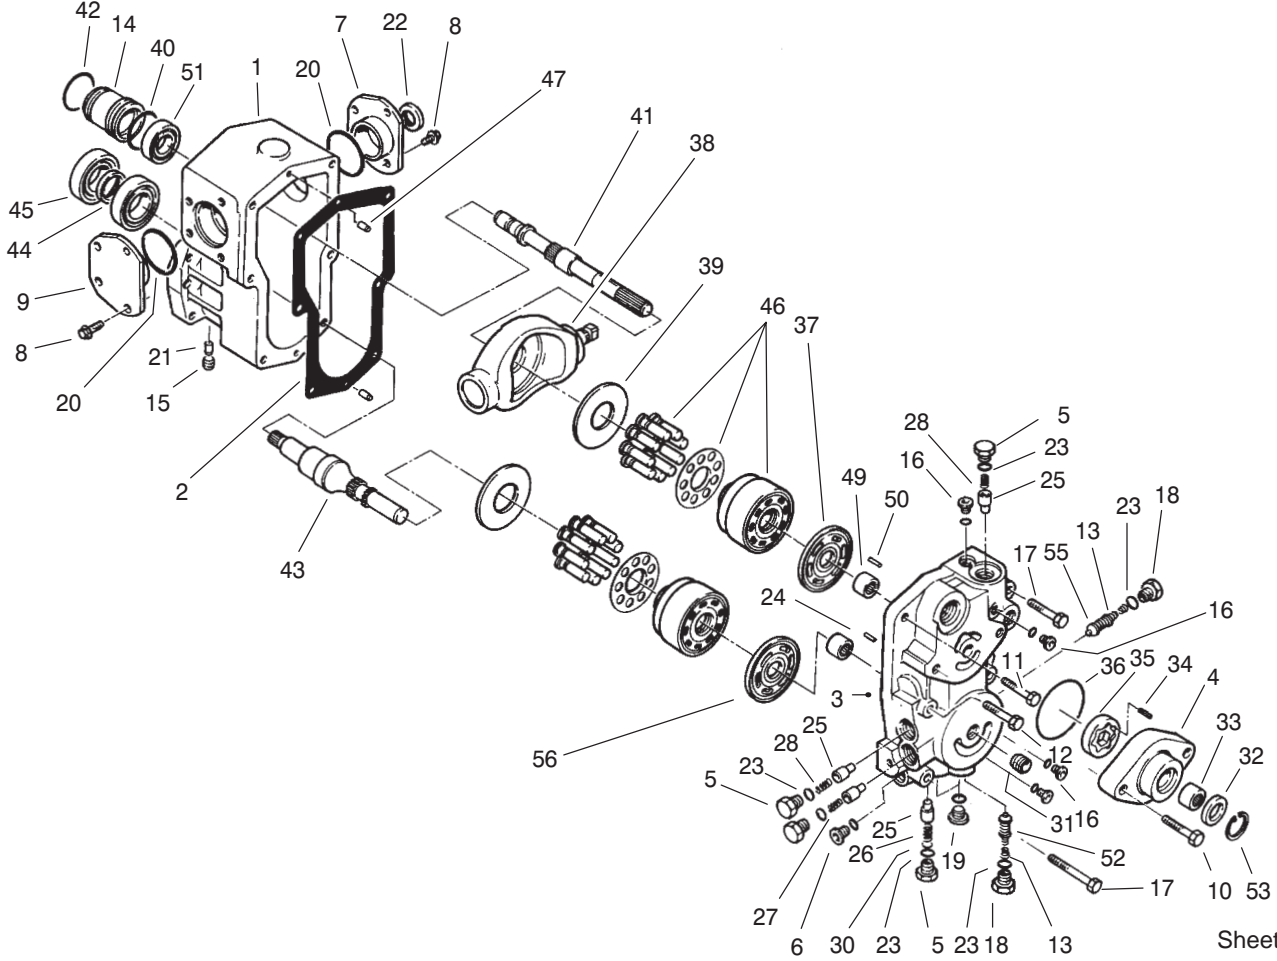


Sheet No.:A4
T-1006

Transmission Assembly No. 75-0012 (Continued)

Ref. No.	Part No.	Qty.	Description
52	75-6930	1	Valve-Screw
53	32120-74	1	Snap-Ring
55	93-0097	1	Valve-Screw
56	93-0083	1	Plate-Valve

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

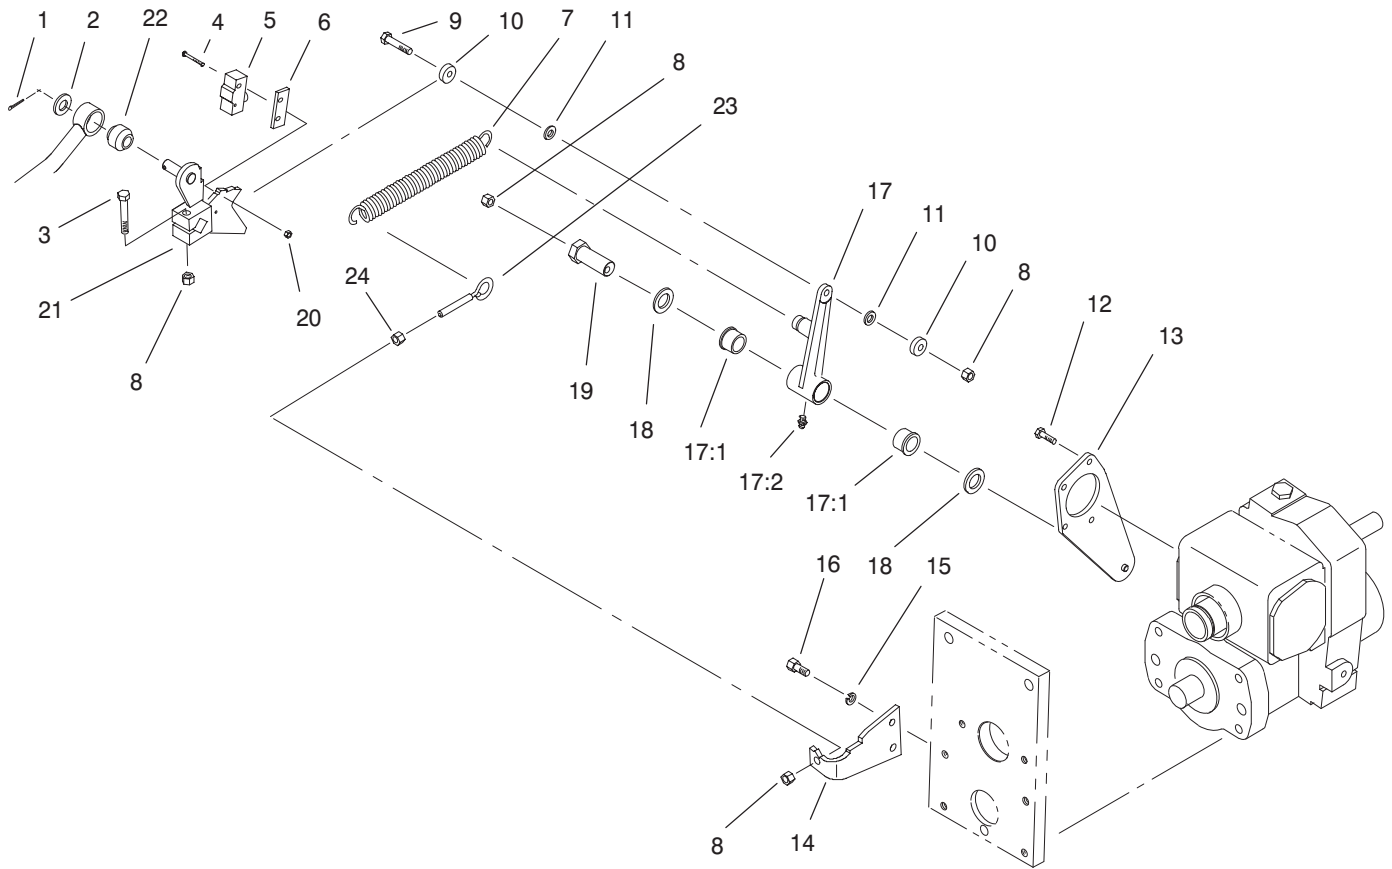


Sheet No.:12

Traction Control Assembly

Ref. No.	Part No.	Qty.	Description
1	3272-10	1	Pin-Cotter
2	3256-26	1	Washer-Flat
3	322-10	1	Screw-HH
4	32105-21	2	Screw-HH
5	29-6162	1	Switch-Micro
6	75-4130	1	Plate-Switch
7	76-9430-03	1	Spring-Ext.
8	3296-29	4	Nut-Lock, NI
9	322-7	1	Screw-HH
10	251-307	2	Bearing-Ball
11	75-5470	2	Spacer-Bearing
12	32144-22	4	Screw
13	75-4080-03	1	Plate-Traction
14	85-9900-03	1	Plate-Anchor, Spring
15	3253-4	2	Washer
16	322-3	2	Screw-HH
17	92-2581	1	Neutral Switch Arm ASM
17:1	256-113	2	Bushing-Flange
17:2	302-5	1	Fitting-Lube
18	3-6498	2	Washer-Thrust
19	76-8640	1	Stud - Traction
20	3296-9	2	Nut-Lock NI
21	75-4100-03	1	Control-Pump
22	23-2270	1	Bushing-Rubber

Ref. No.	Part No.	Qty.	Description
23	85-9910	1	Eyebolt
24	3217-6	1	Nut-Hex

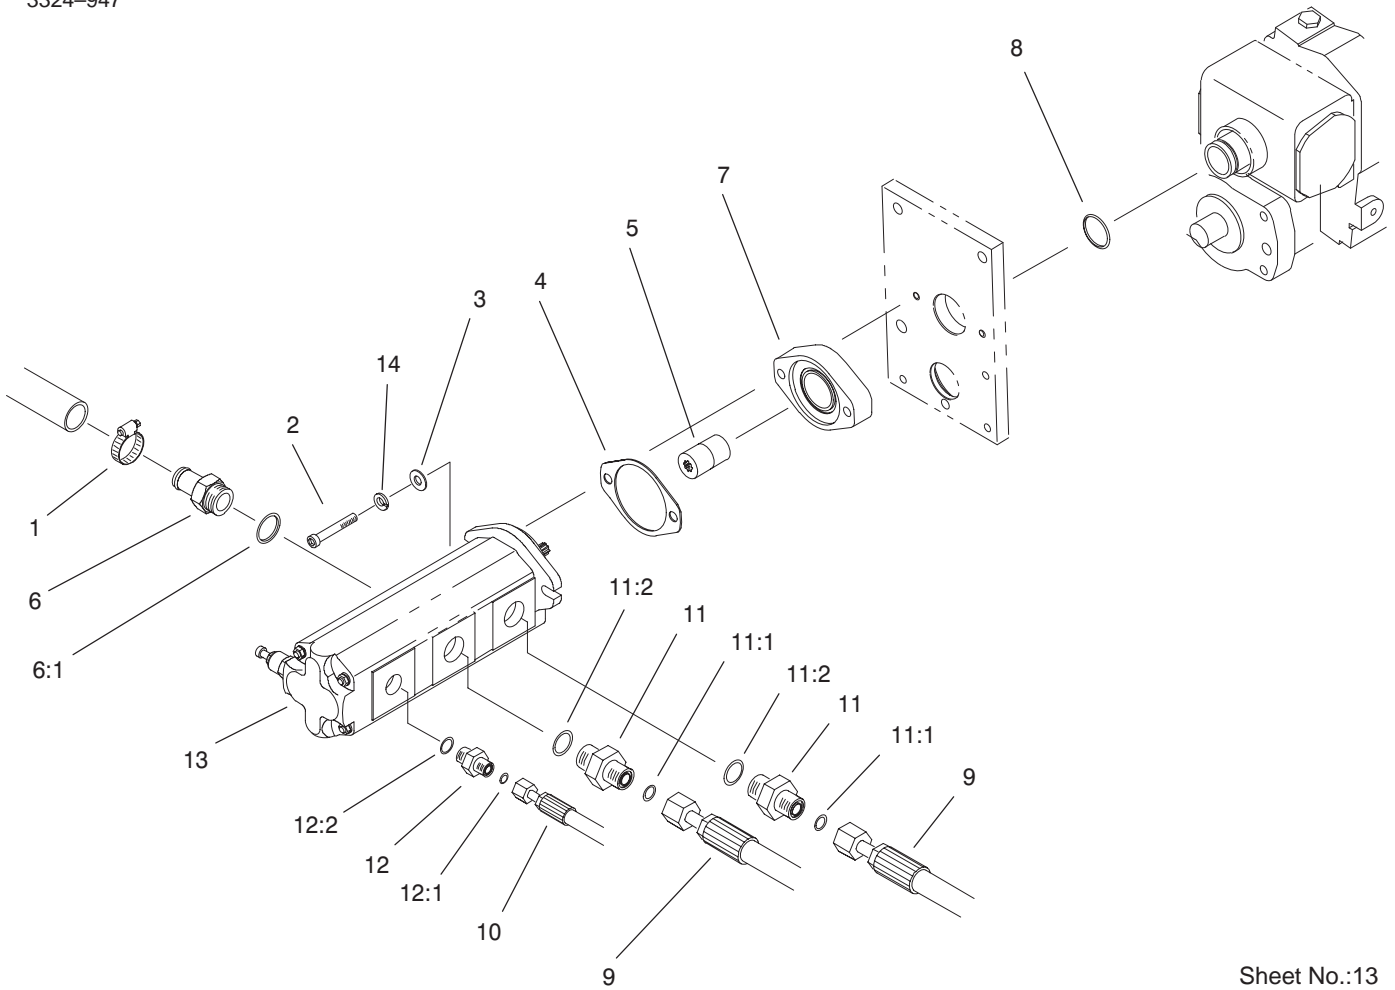 


Sheet No.:13

Gear Pump Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	2412-34	1	Clamp-Hose
2	92-4037	2	Capscrew-HSH
3	3256-24	2	Washer-Flat
4	93-3604	1	Gasket
5	93-1396	1	Coupler
6	354-78	1	Connector-Hose
6:1	237-146	1	O-Ring
7	75-4400-03	1	Adaptor
8	237-163	1	O-Ring
9	104-0050	2	Hose ASM-Hyd
10	104-0051	1	Hose ASM-Hyd
11	340-7	2	Adapter
11:1	237-65	1	O-Ring
11:2	237-80	1	O-Ring
12	340-2	1	Adapter
12:1	237-22	1	O-Ring
12:2	237-42	1	O-Ring
13	99-6933	1	Gear Pump
14	3253-5	2	Washer-Lock/Sp

Ref. No.	Part No.	Qty.	Description

 PROTOTYPE

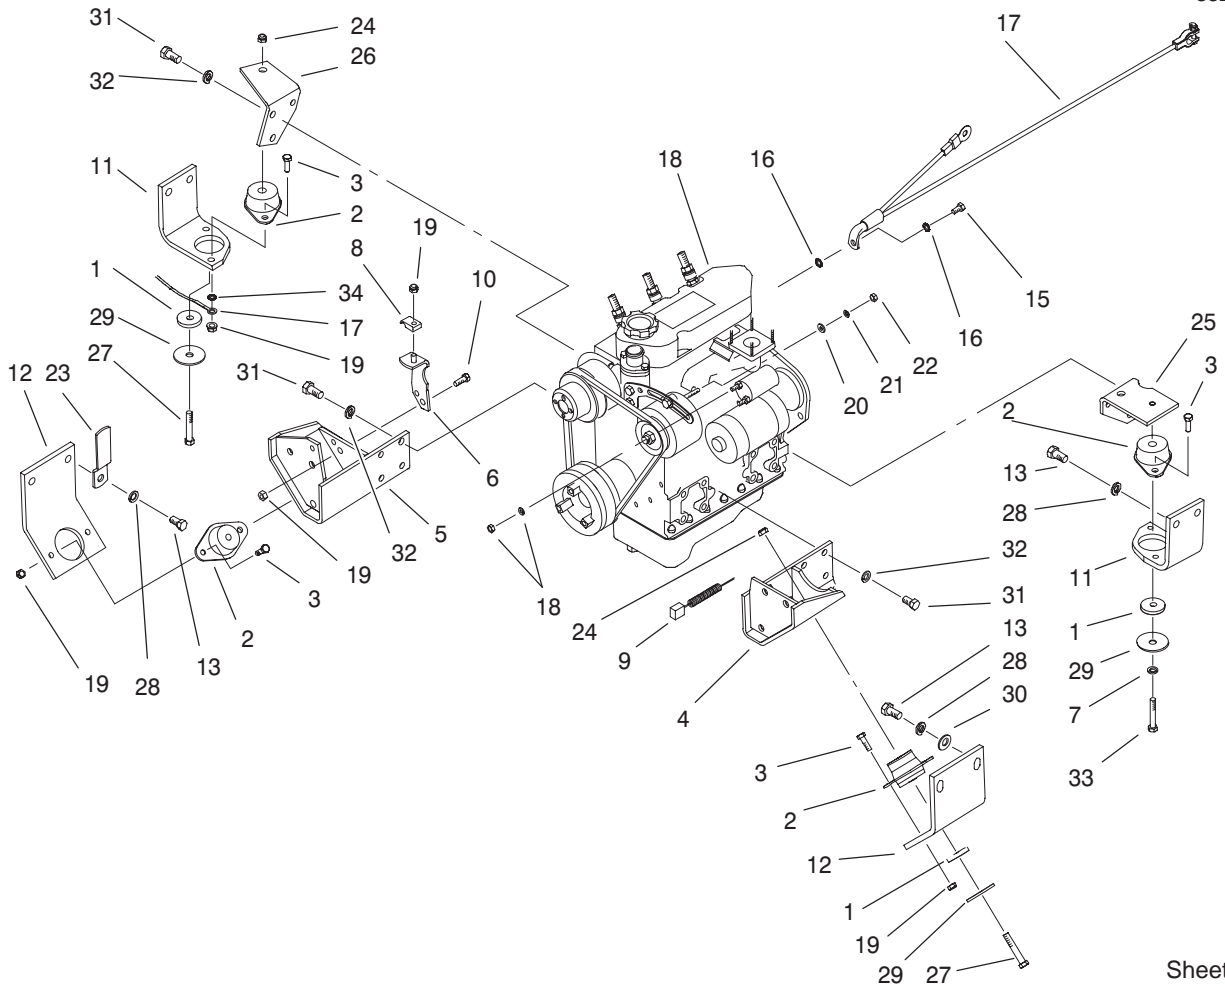


Sheet No.:14

Engine Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	83-1050	4	Spacer
2	83-1030	4	Mount-Engine
3	322-5	8	Screw-HH
4	98-4539-03	1	Bracket-Eng Mt, LH
5	98-4543-03	1	Bracket-Eng Mt, RH
6	98-9749	1	Plate - Throttle
7	3253-21	1	Washer-Lock
8	3-6657	1	Clip-Skid
9	99-3441	1	Harness - Wire, Fusible Link
10	322-4	2	Screw-HH
11	98-4513-03	2	Brkt - Engine, Rear
12	104-1474-03	2	Bracket-Engine, Front
13	3213-2	8	Screw-HH
15	98-9322	1	Bolt-HH, Metric
16	3255-9	2	Washer-Lock/Ext
17	98-4598	1	Cable-Battery, Negative
18	57-6390	1	Jam Nut
18	42-9850	1	Washer-Lock, Spring
18	104-0095	1	Engine-Kubota
19	3296-29	11	Nut-Lock, NI
20	3256-78	1	Washer-Flat
21	43-5930	1	Washer-Spring
22	48-7890	1	Nut
23	98-4594	1	Clamp - Retainer

Ref. No.	Part No.	Qty.	Description
24	32128-36	3	Nut-HF
25	98-4515-03	1	Bracket-Rear Engine, LH
26	98-4514-03	1	Bracket-Rear Engine, RH
27	323-12	3	Screw-HH
28	3253-7	8	Washer-Lock/Sp
29	87-5100	4	Washer - Snubbing
30	3256-40	4	Washer-Flat
31	43-0090	14	Bolt/Washer
32	42-9600	14	Lockwasher-Spring, Mid
33	323-10	1	Screw-HH
34	3255-8	1	Washer-Lock/Ext

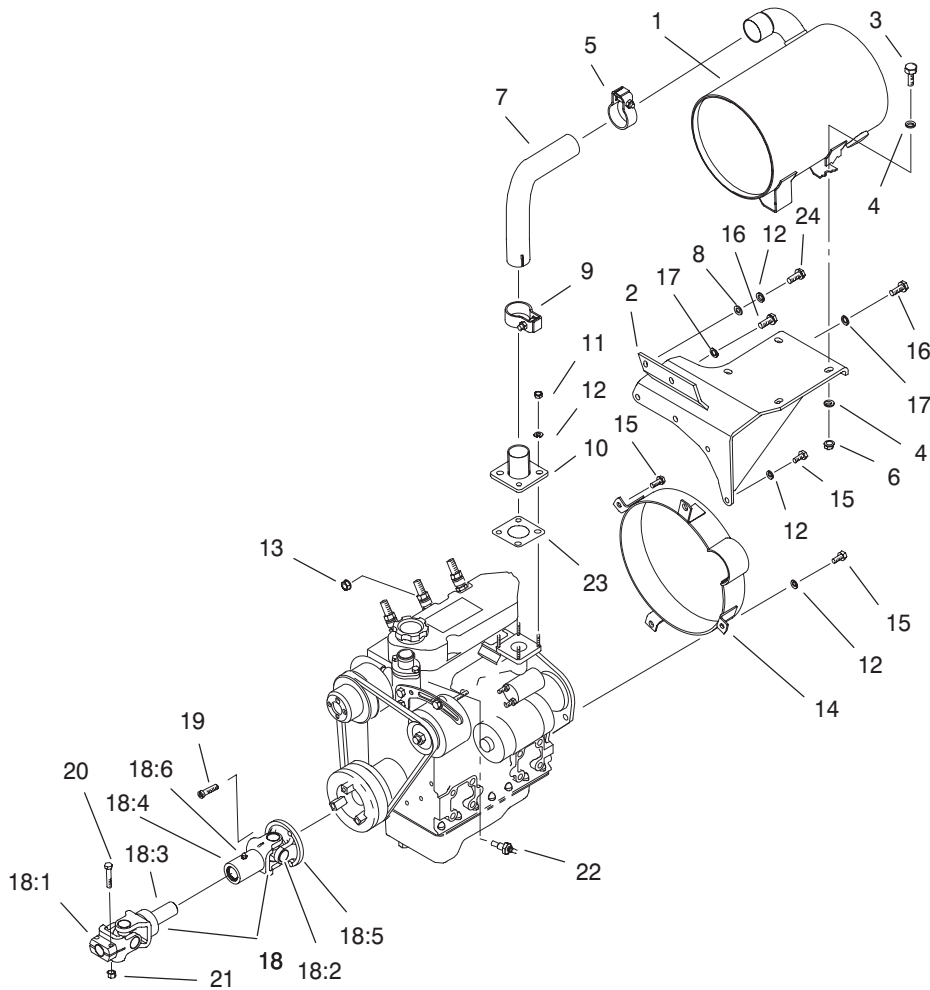 


Sheet No.:15

Muffler and Pump Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	104-1430	1	Muffler-Exhaust
2	98-4555-03	1	Bracket-Muffler
3	323-7	4	Screw-HH
4	3256-4	8	Washer-Flat
5	98-9310	1	Clamp - Muffler
6	3296-39	4	Nut-Lock, NI
7	98-4524	1	Tube - Exhaust 31 HP
8	33094-00	2	Washer-Flat
9	98-9309	1	Clamp - Muffler
10	98-4527	1	Pipe-Exhaust, Engine
11	33014-00	4	Nut-Hex
12	42-9850	10	Washer-Lock, Spring
13	33024-00	1	Nut-Lock, NI
14	98-4564-03	1	Guard - Flywheel,
15	33114-025	5	Screw-HH
16	43-0090	2	Bolt/Washer
17	42-9600	2	Lockwasher-Spring, Mid
18	99-6977	1	Driveshaft ASM
18:1	98-9768	1	Yoke
18:2	98-9766	2	Kit - Universal Joint
18:3	98-9765	1	Yoke & Shaft
18:4	94-7379	1	Tube - Slip Yoke
18:5	104-1230	1	Yoke
19	98-9322	3	Bolt-HH, Metric

Ref. No.	Part No.	Qty.	Description
20	322-9	2	Screw-HH
21	3296-29	2	Nut-Lock, NI
22	98-9346	1	Sender - Temperature
23	99-8343	1	Gasket - Muffler
24	33114-020	2	Screw-HH

 PROTOTYPE

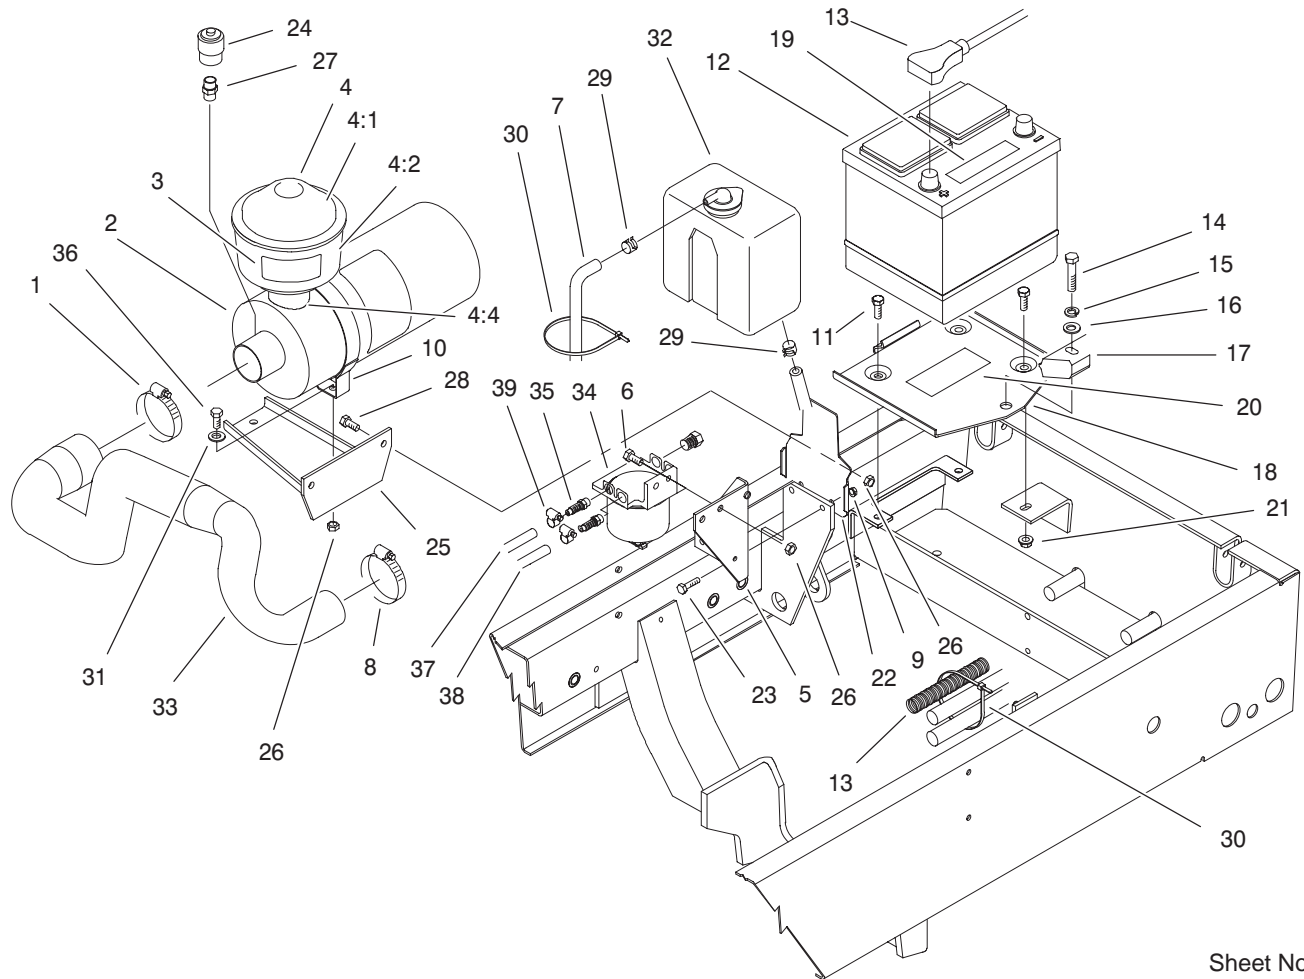


Sheet No.:16

Engine Components Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	2412-42	1	Clamp-Hose	22	98-4576-03	1	Bracket-Reservoir, Water
2	98-4517	1	Air Cleaner ASM	23	321-5	2	Screw-HH
3	93-6692	1	Decal-Fluid, Starting	24	93-9164	1	Indicator - Mini
4	48-7430	1	Precleaner	25	98-4518-03	1	Bracket-Cleaner, Air
4:1	33-1260	1	Cover ASM	26	3296-29	6	Nut-Lock, NI
4:2	33-1270	1	Bowl-Clear	27	94-1416	1	Indicator Adapter ASM
*4:3	62-6300	1	Sleeve ASM	28	322-5	2	Screw-HH
4:4	94-6873	1	Clamp	29	92-2379	2	Clamp-Hose
5	98-4578-03	1	Bracket-Filter, Fuel	30	3290-378	2	Tie-Cable
6	3234-29	2	Screw-HHF	31	3256-23	2	Washer-Flat
7	63-7630	1	Hose	32	98-9323	1	Bottle-Overflow, Water
8	2412-92	1	Clamp-Hose	33	98-4509	1	Hose - Air Cleaner
9	32128-33	2	Nut-HF	34	98-9305	1	Filter-Water/Fuel
10	98-4525	1	Bracket-Cleaner, Air	35	353-783	2	Fitting-Pump
11	322-4	3	Screw-HH	36	322-6	2	Screw-HH
12	66-2750	1	Battery	37	71-3381	1	Hose-Fuel
13	104-0086	1	Cable - Battery, Positive	38	95-4275	1	Hose - Fuel
14	323-9	1	Screw-HH	39	2412-108	4	Clamp-Worm
15	3253-21	1	Washer-Lock				
16	3256-24	1	Washer-Flat				
17	66-2490	1	Retainer-Battery				
18	94-7343	1	Base-Battery, ASM				
19	93-6668	1	Decal - Battery				
20	93-7276	1	Decal - Danger				
21	32128-20	1	Nut-HF				

* Not illustrated

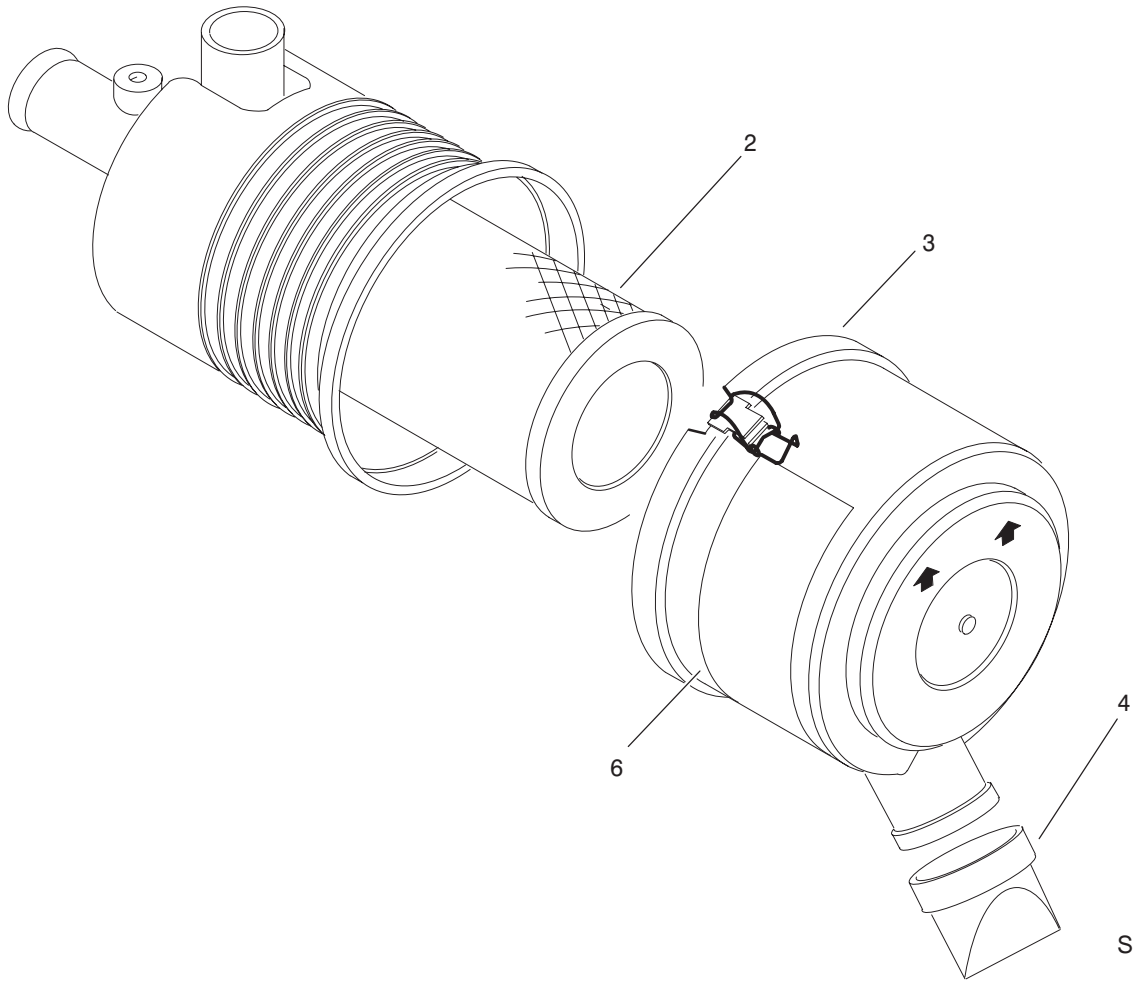


Sheet No.:A9
T-2903

Air Cleaner Assembly No. 98-4517

Ref. No.	Part No.	Qty.	Description
2	98-9763	1	Element ASM
3	98-9771	1	Cover ASM
4	94-1414	1	Valve - Vacuator
6	98-9788	1	Decal - Instruction

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

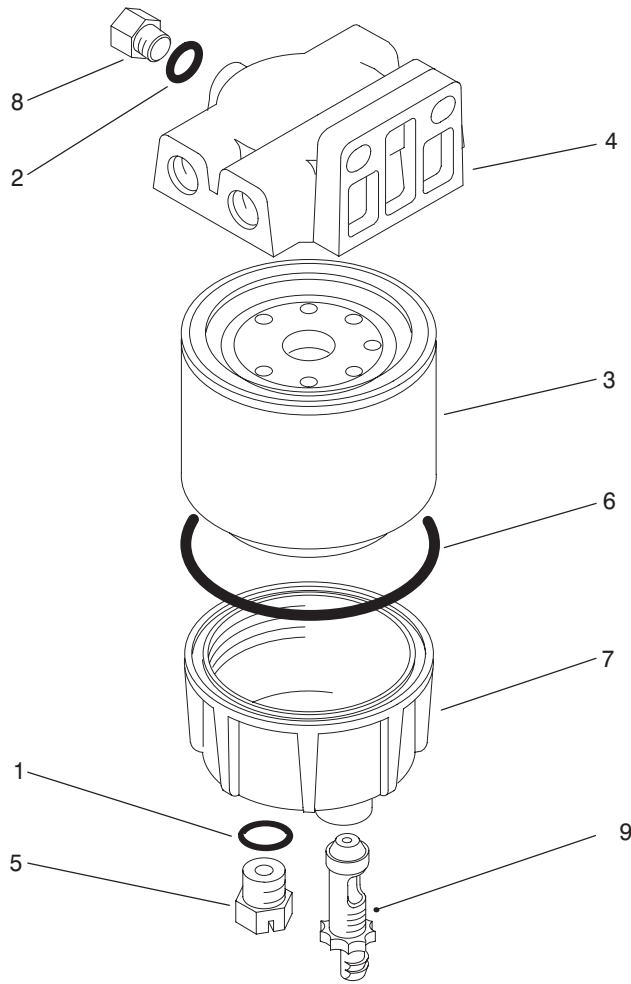


Sheet No.:B1
T-3330

Water/Fuel Separator Assembly No. 98-9305

Ref. No.	Part No.	Qty.	Description
1	98-9772	1	Head - Filter
2	98-9764	1	Element-On, Spin
3	98-9774	1	O-Ring-Base, Filter
4	98-9775	1	Base - Filter
5	98-9773	1	Plug - Base, Filter
6	237-42	1	O-Ring
7	237-78	1	O-Ring
8	98-9776	1	Plug-Filter, Head
9	98-9777	1	Drain Valve ASM

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

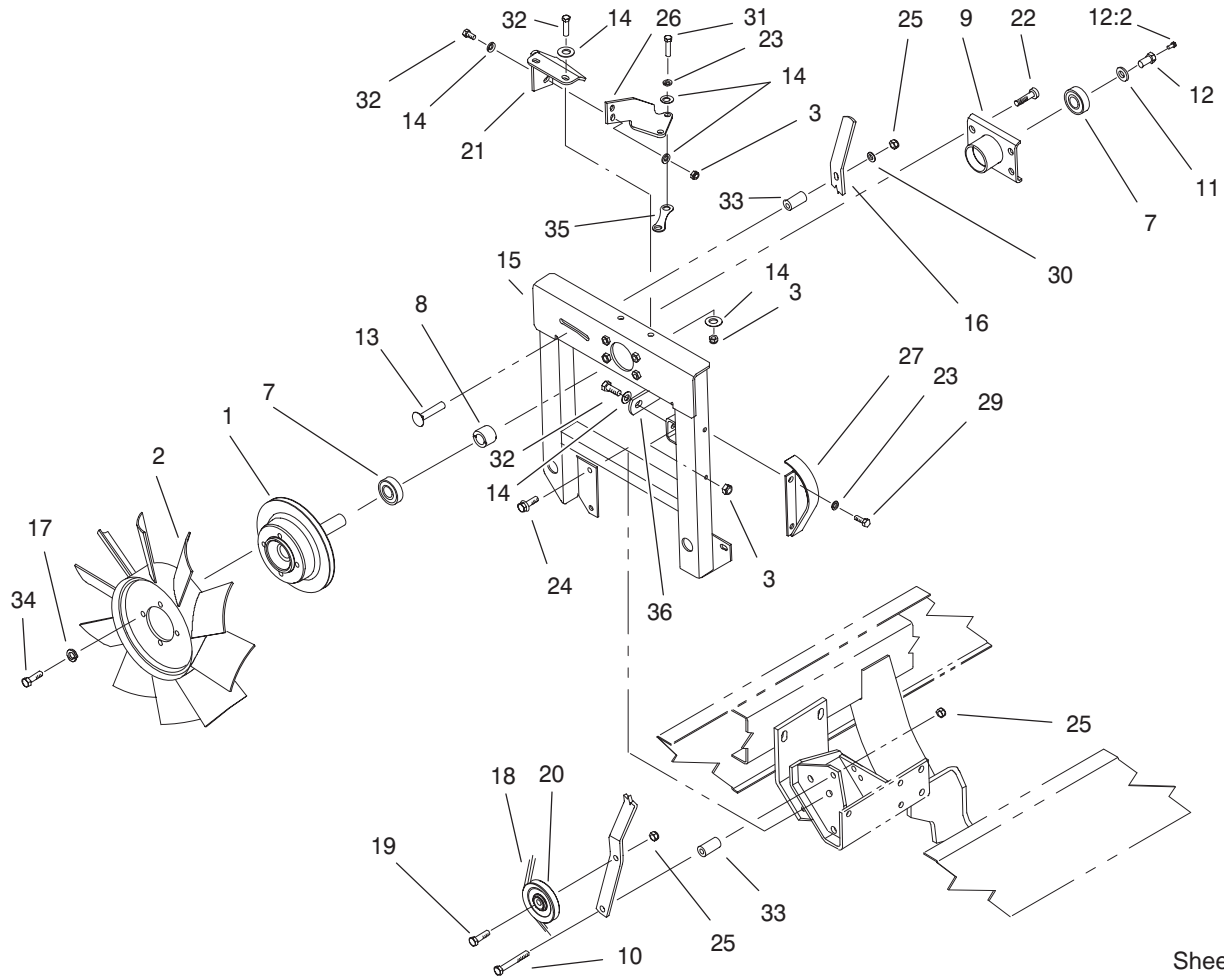


Sheet No.:17

Fan Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	104-0000-03	1	Pulley
2	99-6937	1	Fan
3	3296-29	5	Nut-Lock, NI
7	251-318	2	Bearing
8	104-0001	1	Spacer
9	104-0017-03	1	Hub ASM
10	323-12	1	Screw-HH
11	63-8410	1	Washer
12	11-0160	1	Roller Shaft Screw ASM
12:2	302-5	1	Fitting-Lube
13	104-1487	1	Screw-CARR
14	3256-23	11	Washer-Flat
15	104-1440-03	1	Support-Fan
16	104-0006-03	1	Lever - Fan Idler
17	3253-4	4	Washer
18	98-3921	1	Belt
19	104-1486	1	Screw
20	63-8140	1	Pulley-Idler
21	104-1447-03	1	Bracket-Fan, Support
22	3274-12	4	Screw-HSH
23	42-9850	4	Washer-Lock, Spring
24	3234-29	6	Screw-HHF
25	3296-59	3	Nut-Lock, NI
26	104-1481-03	1	Bracket-Mount, Fan
27	98-4561-03	1	Shield-Alternator

Ref. No.	Part No.	Qty.	Description
29	32144-14	2	Screw-HWH
30	3256-24	1	Washer-Flat
31	33114-020	2	Screw-HH
32	322-4	5	Screw-HH
33	104-0007	2	Spacer
34	322-3	4	Screw-HH
35	104-1482	1	Plate-Washer

 PROTOTYPE

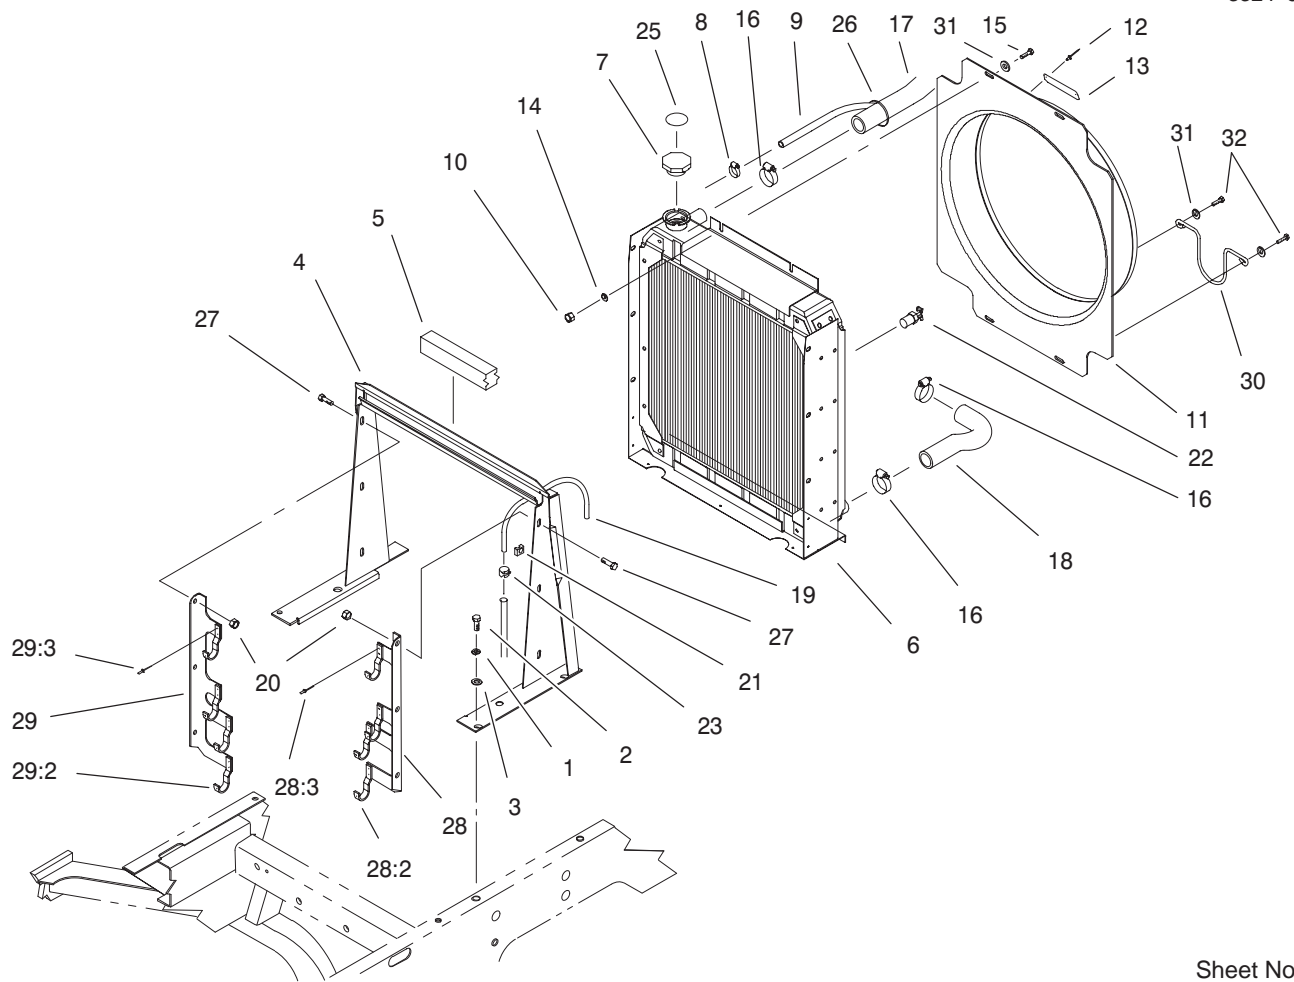


Sheet No.:18

Radiator Assembly

Ref. No.	Part No.	Qty.	Description
1	3253-4	4	Washer
2	322-5	4	Screw-HH
3	3256-23	4	Washer-Flat
4	99-6970-03	1	Support-Radiator
5	104-1418	1	Strip-Foam, Radiator
6	99-6936	1	Radiator
7	66-3240	1	Cap-Radiator
8	92-2379	1	Clamp-Hose
9	104-0079	1	Hose
10	3296-42	4	Nut-Lock
11	99-6939	1	Shroud-Fan
12	3290-271	2	Rivet-Pop
13	98-9335	1	Plate-Warning, Fan
14	3256-22	4	Washer-Flat
15	321-4	2	Screw-HH
16	2412-34	4	Clamp-Hose
17	104-0013	1	Hose-Radiator, Upper
18	104-0014	1	Hose-Radiator, Lower
19	66-3180	1	Tube-Vent
20	32128-20	6	Nut-HF
21	2412-103	1	Clamp
22	304-46	1	Draincock
23	2412-98	1	Clamp
25	93-7840	1	Decal-Cap, Radiator
26	3290-379	1	Tie-Cable
27	3234-5	6	Screw-HHF

Ref. No.	Part No.	Qty.	Description
28	99-6991	1	LH Cooler Mount ASM
28:2	75-0930	4	Hook - Cooler Mount
28:3	3269-15	8	Rivet
29	99-6994	1	RH Cooler Mount ASM
29:2	75-0930	4	Hook - Cooler Mount
29:3	3269-15	8	Rivet
30	104-1448	1	Hoop-Driveline
31	3256-55	4	Washer-Flat
32	321-6	2	Screw-HH

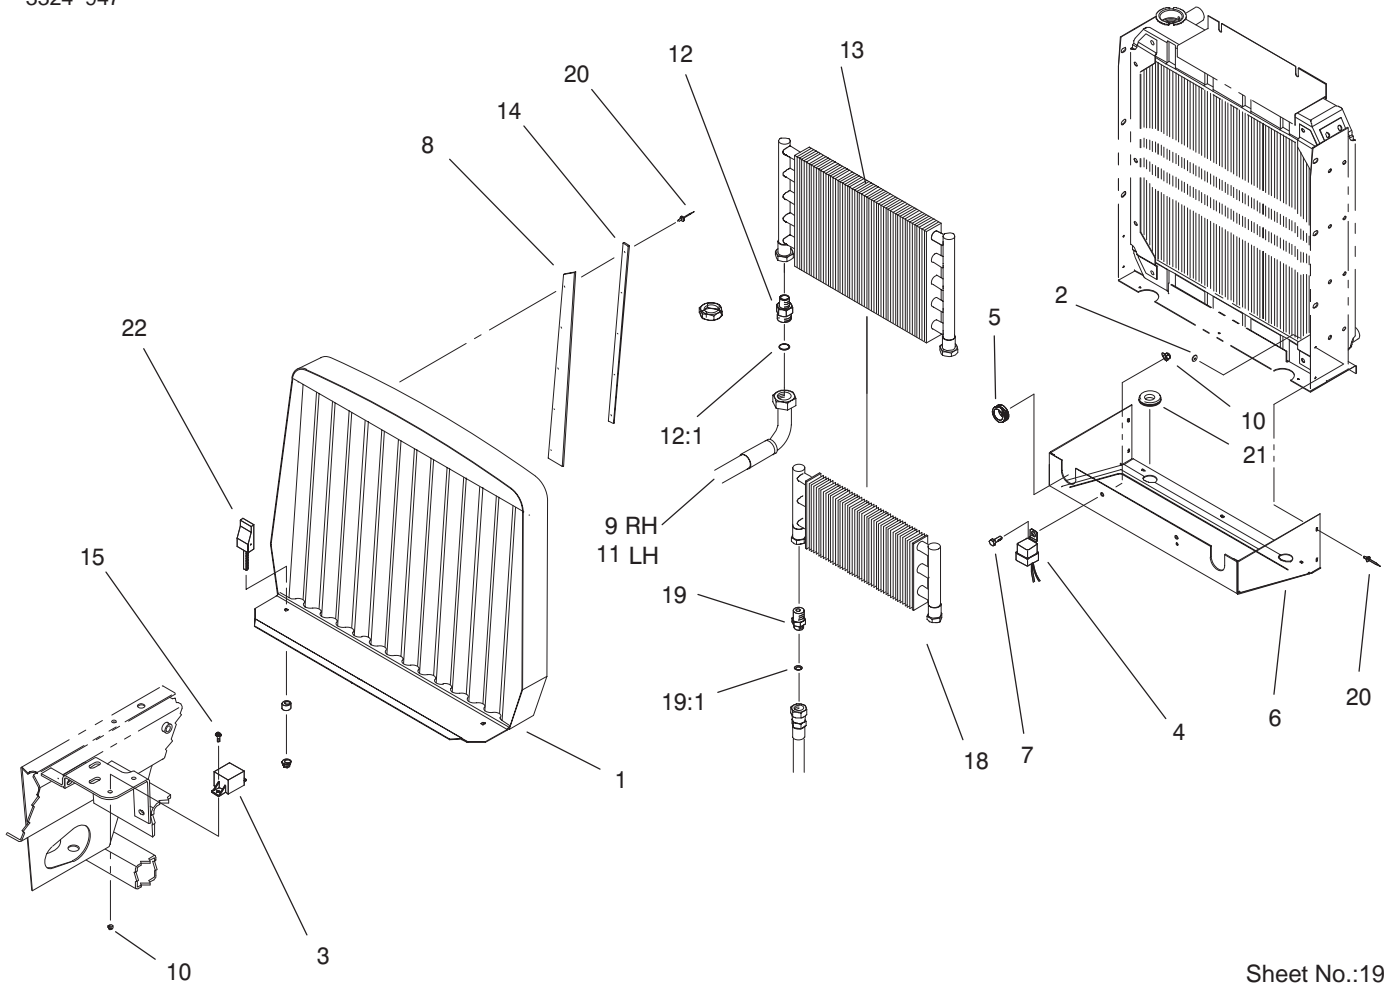 


Sheet No.:19

Oil Cooler / Radiator Assembly

Ref. No.	Part No.	Qty.	Description
1	99-6974-03	1	Front Screen
2	3269-10	5	Washer-Back
3	66-8800	1	Relay
4	70-1480	1	Relay
5	240-3	2	Grommet-Rubber
6	99-6973-03	1	Radiator Shield
7	321-3	1	Screw-HH
8	93-3623	2	Strip-Sealing, Radiator
9	104-0075	1	Hyd. Hose ASM
10	3296-42	3	Nut-Lock
11	104-0074	1	Hyd Hose ASM
12	99-6999	2	Fitting - Hyd
12:1	237-58	1	O-Ring
13	99-6997	1	Cooler - Oil
14	93-3624-03	2	Plate- Retaining
15	321-4	2	Screw-HH
18	24-0760	1	Cooler ASM
19	340-124	2	Adapter
19:1	237-22	1	O-Ring
20	3269-13	15	Rivet-Pop
21	100-3815	2	Grommet-Rubber
22	93-1374	2	Latch - Swell

Ref. No.	Part No.	Qty.	Description
PROTOTYPE			

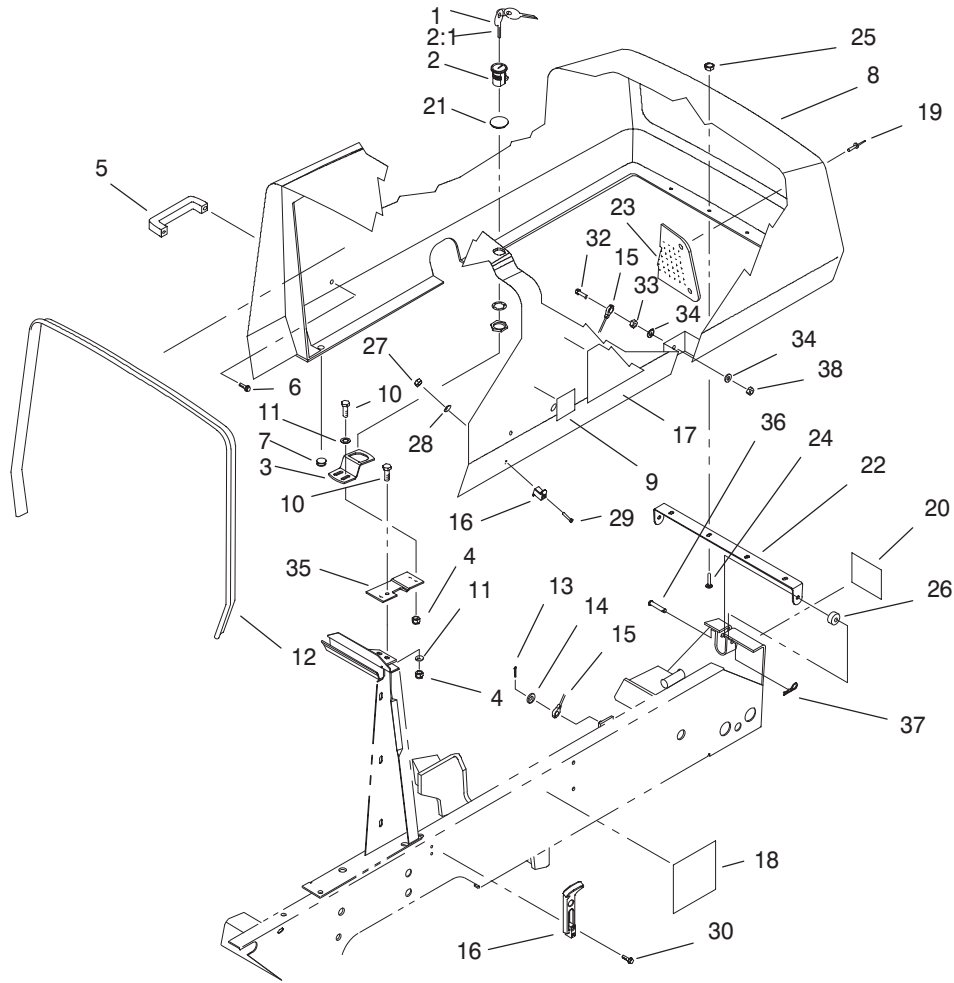 


Sheet No.:20

Hood Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9321	1	Ring-Key
2	98-9315	1	Latch - Locking
2:1	99-8350	2	Key - Latch, Locking
3	98-9316	1	Latch - Hood
4	3296-16	4	Nut-Lock, NI
5	65-5100	2	Handle-Door
6	46-8091	4	Screw-HWH
7	104-1412	2	Grommet - Bumper
8	98-3940	1	Hood ASM
9	93-7252	1	Decal-International
10	321-4	4	Screw-HH
11	3256-1	4	Washer-Flat
12	104-1419	1	Strip-Bulb
13	3272-4	1	Pin-Cotter
14	3256-23	1	Washer-Flat
15	75-0570	1	Cable - Hood
16	104-0010	2	Latch - Draw, Flexible
17	99-6988	2	Decal
18	104-0049	2	Cover - Side Rail
19	104-1417	10	Rivet-Plastic
20	62-7400	1	Decal-Toro
21	104-1453	1	Grommet
22	104-0042-03	1	Strap - Hinge
23	104-0043-03	1	Screen - Rear
24	3229-3	4	Screw-CARR
25	32128-33	4	Nut-HF

Ref. No.	Part No.	Qty.	Description
26	104-1429	2	Spacer - Plastic
27	3296-12	2	Nut-Lock
28	3256-51	2	Washer-Flat
29	104-1452	2	Screw-PPH
30	104-1451	4	Screw-TAP, PPH
32	329-7	1	Screw-HH
33	3220-1	1	Nut-Jam
34	3256-67	2	Washer-Flat
35	104-1439	1	Plate-Latch
36	94-3829	2	Pin-Clevis
37	3290-250	2	Pin-Hair Cotter
38	32128-47	1	Nut

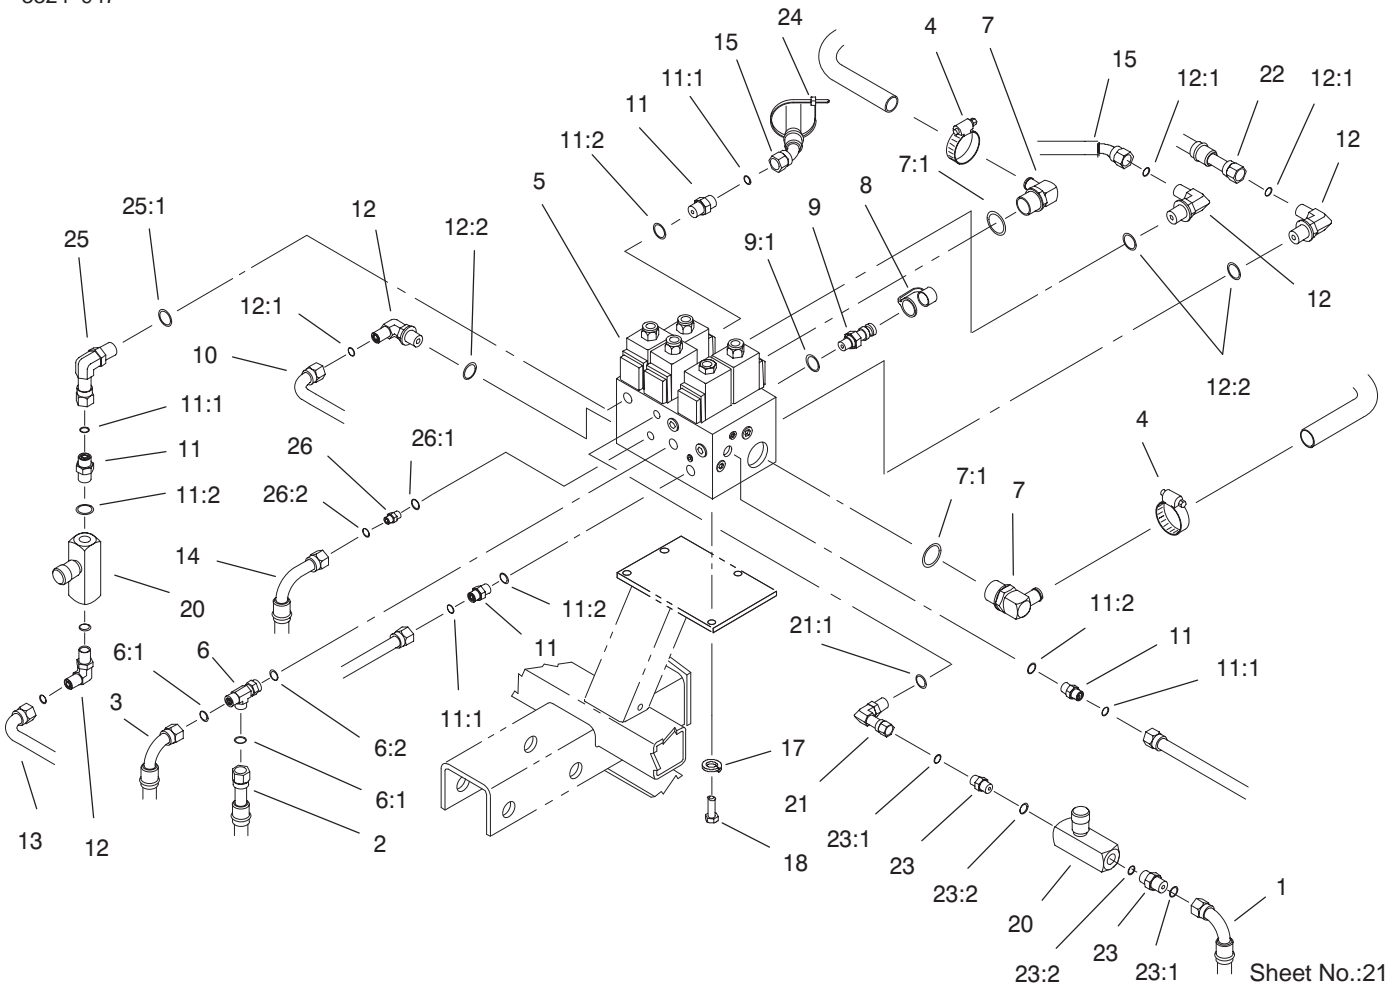 


Sheet No.:21

Lift Block Assembly

Ref. No.	Part No.	Qty.	Description
1	104-0061	1	Hose ASM-Hyd
2	104-0060	1	Hose ASM-Hyd
3	104-0059	1	Hose ASM-Hyd
4	2412-34	2	Clamp-Hose
5	99-6979	1	Manifold Block - Lift
6	340-86	1	Fitting-Tee
6:1	237-22	2	O-Ring
6:2	237-42	1	O-Ring
7	23-8910	2	Stem-Barb, 90°
7:1	237-146	1	O-Ring
8	354-79	1	Cap - Fitting, Yellow
9	59-7410	1	Diag. Nipple Tip
9:1	237-42	1	O-Ring
10	98-3907	1	Tube ASM
11	340-2	4	Adapter
11:1	237-22	1	O-Ring
11:2	237-42	1	O-Ring
12	340-77	4	Fitting-90°
12:1	237-22	1	O-Ring
12:2	237-42	1	O-Ring
13	104-0093	1	Tube-ASM
14	104-0062	1	Hose ASM-Hyd
15	104-0055	2	Hose ASM-Hyd
17	3253-4	3	Washer
18	322-3	3	Screw-HH
20	98-9742	2	Valve-Control, Flow

Ref. No.	Part No.	Qty.	Description
21	340-143	1	Elbow - 90° Swivel
22	104-0054	1	Hose ASM-Hyd
23	340-1	2	Adapter
23:1	237-35	1	O-Ring
23:2	237-42	1	O-Ring
24	3290-379	1	Tie-Cable
25	340-110	1	Elbow-Swivel, 90 DEG Straight
25:1	237-42	1	O-Ring
26	340-92	1	Fitting
26:1	237-78	1	O-Ring
26:2	237-21	1	O-Ring

 PROTOTYPE

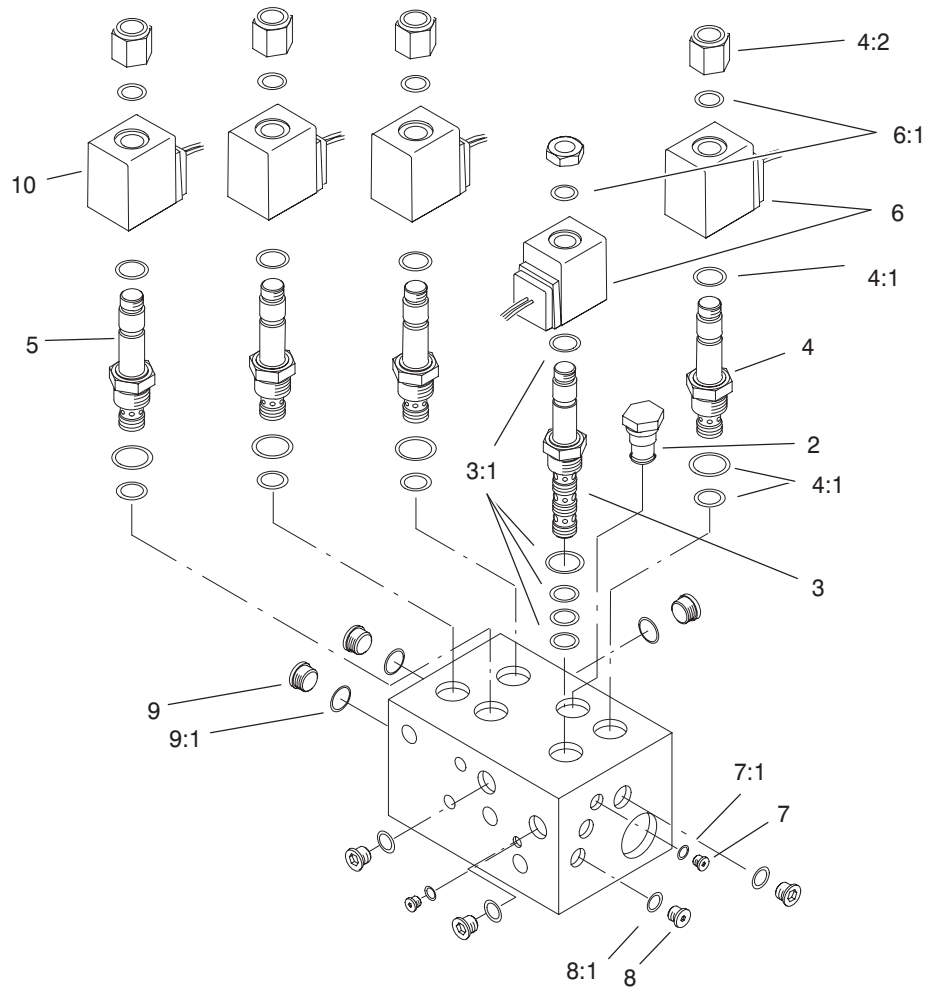


T-3574
Sheet No.:B2

Lift Block Assembly No. 99-6979

Ref. No.	Part No.	Qty.	Description
2	95-7480	1	Plug - Cavity
3	94-2627	1	Cartridge
3:1	75-2090	1	Kit-Seal
4	93-7494	1	Cartridge
4:1	75-2080	1	Kit-Seal
5	104-1208	3	Cartridge - Blocking
6	83-2010	2	Coil - Valve
6:1	94-5438	1	Seal-Solenoid
7	353-991	2	Plug-Hex, Hollow
7:1	237-156	1	O-Ring
8	353-990	1	Plug
8:1	237-78	1	O-Ring
9	353-989	7	Plug-Hex, Hollow
*9:1	237-42	1	O-Ring
10	104-1209	3	Solenoid

Ref. No.	Part No.	Qty.	Description
<p style="font-size: 48px; opacity: 0.5; transform: rotate(-10deg);">PROTOTYPE</p>			

 * Not illustrated

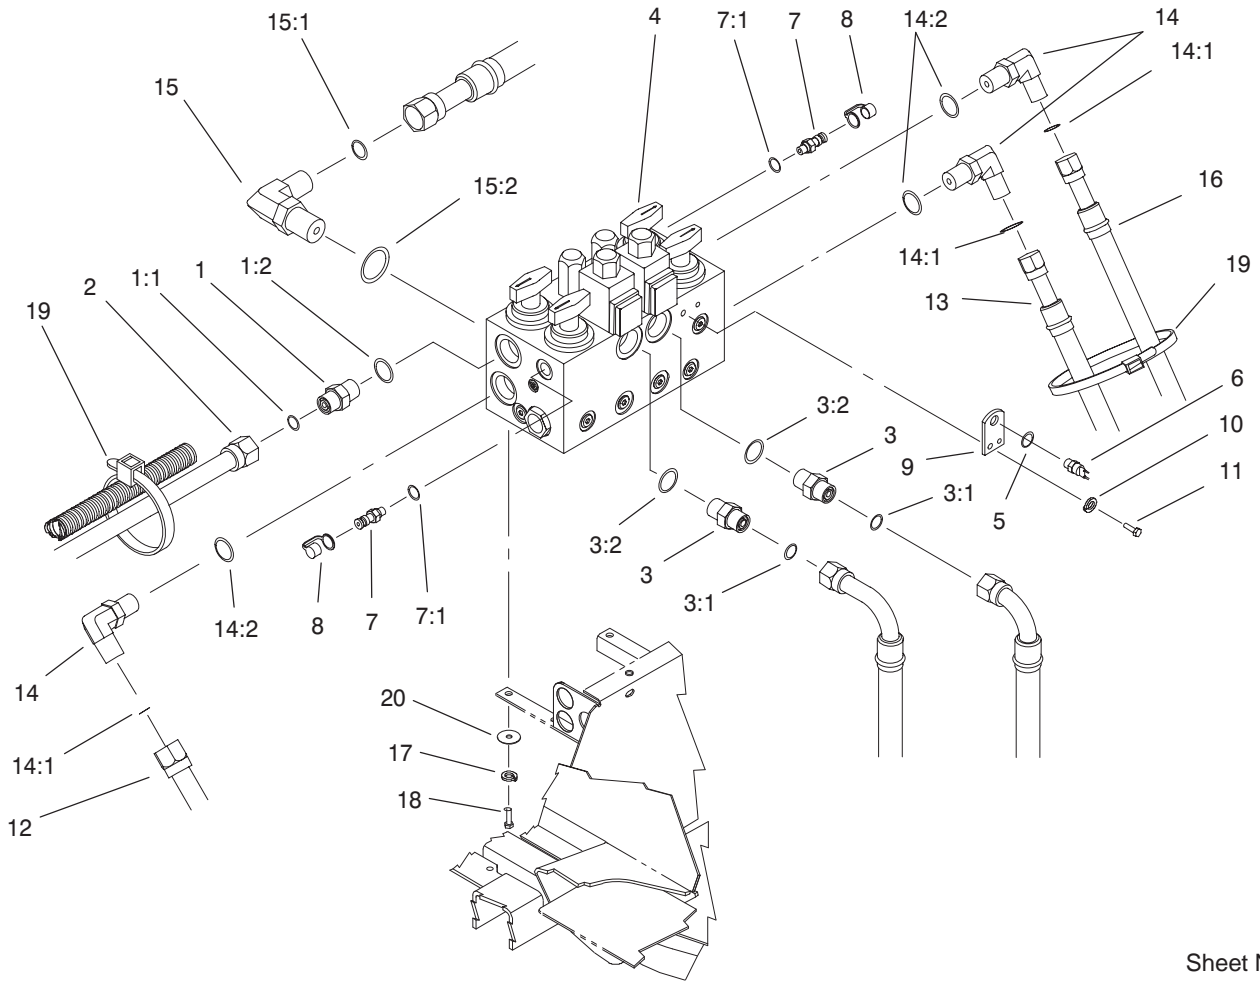


Sheet No.:22

Mow Block Assembly

Ref. No.	Part No.	Qty.	Description
1	340-6	1	Fitting-Straight
1:1	237-30	1	O-Ring
1:2	237-80	1	O-Ring
2	98-3905	1	Tube ASM
3	340-7	2	Adapter
3:1	237-65	1	O-Ring
3:2	237-80	1	O-Ring
4	99-6978	1	Manifold Block - Mow
5	3256-76	2	Washer-Flat
6	72-4320	2	Switch
7	354-77	2	Fitting-Quick
7:1	237-78	1	O-Ring
8	354-79	2	Cap - Fitting, Yellow
9	98-8199	2	Bracket - Switch
10	3253-3	4	Washer-Lock/Sp
11	329-3	4	Screw-HH
12	98-3906	1	Tube ASM
13	104-0065	1	Hydraulic Hose ASM
14	340-105	3	Fitting-90°
14:1	237-80	1	O-Ring
14:2	237-30	1	O-Ring
15	340-142	1	Elbow-90°
15:1	237-58	1	O-Ring
15:2	237-81	1	O-Ring
16	104-0066	1	Hose ASM-Hyd
17	3253-4	4	Washer

Ref. No.	Part No.	Qty.	Description
18	322-3	4	Screw-HH
19	3290-378	2	Tie-Cable
20	3256-23	4	Washer-Flat

 PROTOTYPE

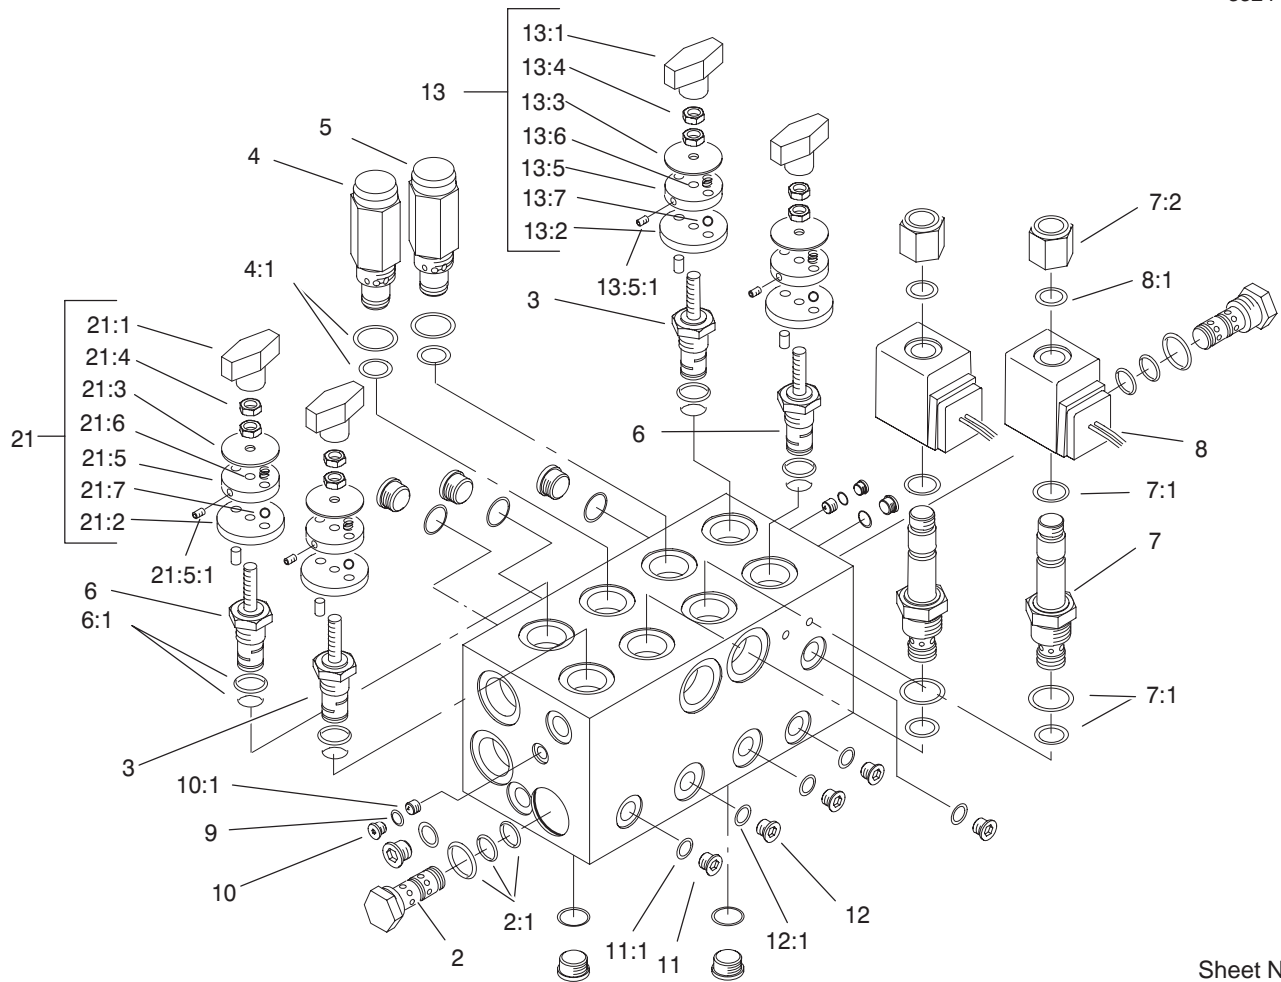


Sheet No.:B3

Mow Block Assembly No. 99-6978

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	69-4120	2	Cartridge-Logic	13:7	255-13	2	Ball-Steel, Stainless
2:1	69-4240	1	Kit-Seal	13:8	3245-36	1	Screw - HSH
3	94-8175	2	Control-Flow, Rotary	21	94-6378	2	Kit-Detent
4	94-3655	1	Valve-Relief	21:1	94-5020	1	Knob ASM
4:1	75-2080	1	Kit-Seal	21:2	94-5021	1	Plate - Locating
5	104-1200	1	Cartridge Relief Valve	21:4	3218-1	2	Nut-Jam
6	94-3657	2	Spool ASM	21:5	94-5023	1	Plate - Detent
6:1	94-3661	1	Kit-Seal, 4-Way	21:6	94-5027	2	Spring
7	93-7494	2	Cartridge	21:7	255-13	2	Ball-Steel, Stainless
7:1	75-2080	1	Kit-Seal				
8	83-2010	2	Coil - Valve				
8:1	94-5438	1	Seal-Solenoid				
9	95-5999	2	Plug-Orifice				
10	353-991	4	Plug-Hex, Hollow				
10:1	237-156	1	O-Ring				
11	353-990	8	Plug				
11:1	237-78	1	O-Ring				
12	353-989	4	Plug-Hex, Hollow				
*12:1	237-42	1	O-Ring				
13	94-3660	2	Kit-Detent				
13:1	94-5020	1	Knob ASM				
13:2	94-5025	1	Plate - Locating				
13:3	94-5026	1	Plate-Indicator				
13:4	3218-1	2	Nut-Jam				
13:5	94-5023	1	Plate - Detent				
13:6	94-5027	2	Spring				

 * Not illustrated

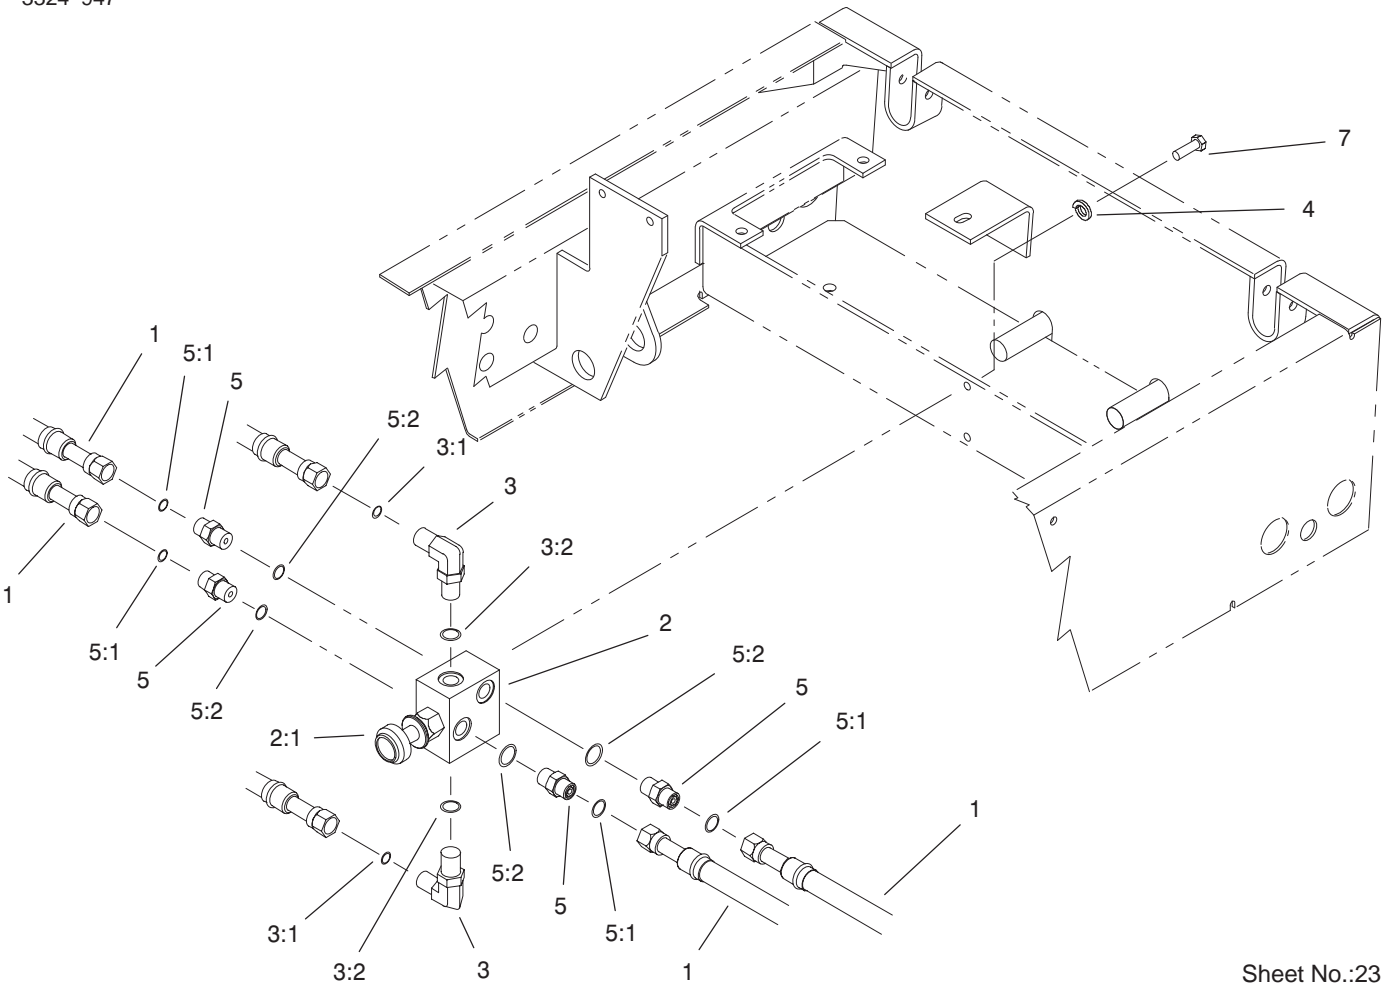

Sheet No.:23


Rear Hydraulic Manifold Assembly

Ref. No.	Part No.	Qty.	Description
1	104-0052	4	Hose ASM-Hyd
2	98-3919	1	Flow Control
2:1	104-0003	1	Cartridge Kit
*2:1:1	104-0004	1	Cartridge Seal Kit
*2:1:2	104-0005	1	Cartridge Knob Kit
3	340-77	2	Fitting-90°
3:1	237-22	1	O-Ring
3:2	237-42	1	O-Ring
4	3253-3	2	Washer-Lock/Sp
5	340-2	4	Adapter
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
7	321-4	2	Screw-HH

Ref. No.	Part No.	Qty.	Description

PROTOTYPE

 * Not illustrated

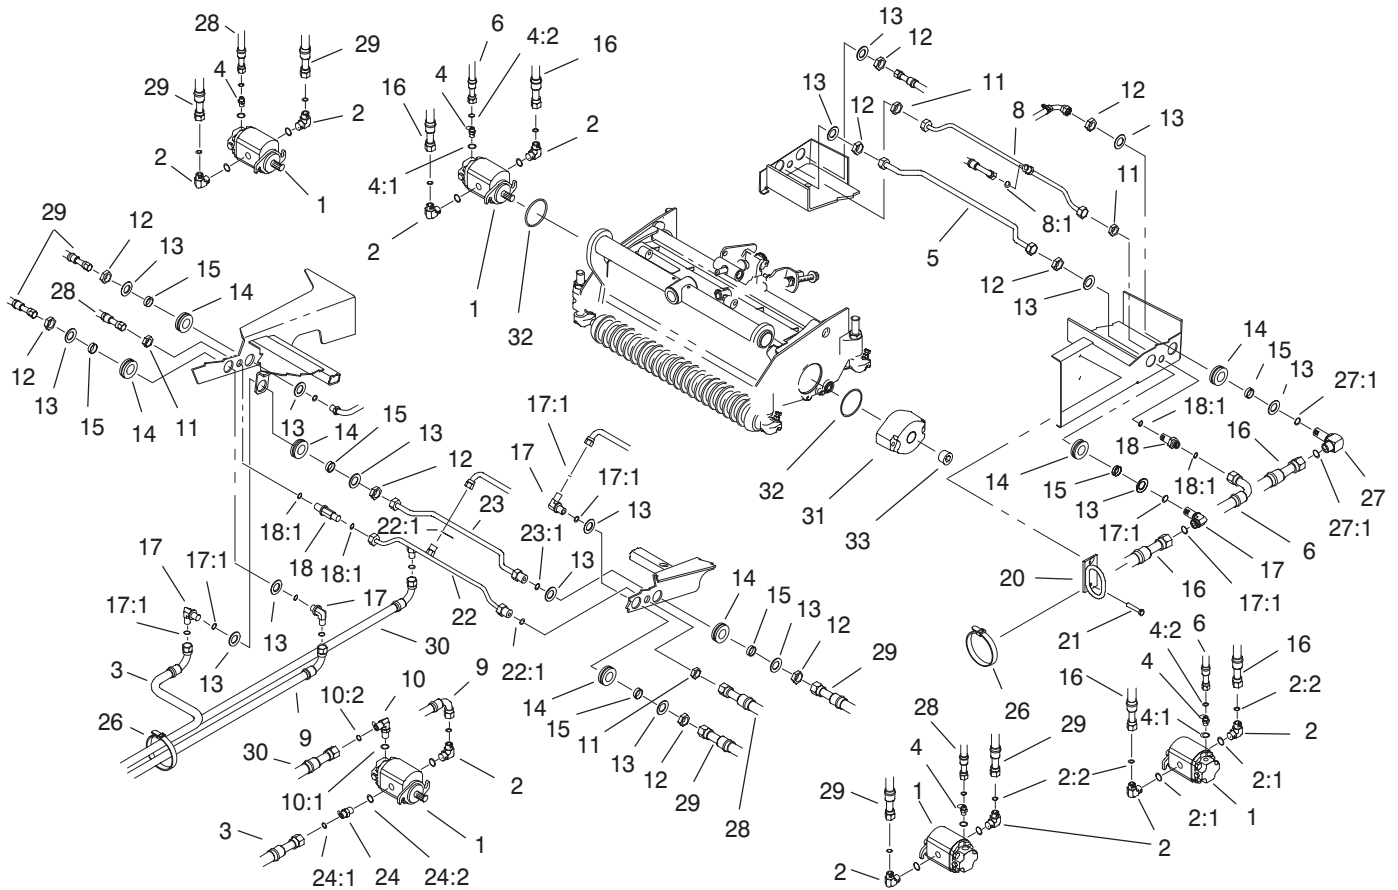


Sheet No.:24

Reel Motor and Hose Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9999	5	Hydraulic Motor
2	340-98	9	Fitting-90°
2:1	237-79	2	O-Ring
2:2	237-30	2	O-Ring
3	104-0067	1	Hose ASM-Hyd
4	340-92	4	Fitting
4:1	237-78	1	O-Ring
4:2	237-21	1	O-Ring
5	94-4918	1	Tube ASM
6	104-0058	2	Hose ASM-Hyd
8	100-3714	1	Drain Tube ASM
8:1	237-21	1	O-Ring
9	104-0068	1	Hose ASM-Hyd
10	340-132	1	Elbow-90°
10:1	237-78	1	O-Ring
10:2	237-21	1	O-Ring
11	340-70	4	Locknut-Bulkhead
12	340-127	9	Nut-Bulkhead
13	69-8930	18	Washer
14	240-5	9	Grommet
15	69-8960	9	Spacer
16	104-0057	4	Hose ASM-Hyd
17	93-9151	5	Fitting-Hydraulic
17:1	237-30	2	O-Ring
18	340-71	3	Fitting-Straight, Bulkhead

Ref. No.	Part No.	Qty.	Description
18:1	237-22	2	O-Ring
20	104-0028	2	Hose Guide
21	32104-32	4	Screw-HH
22	104-0094	1	Tube-ASM
22:1	237-22	3	O-Ring
23	104-0092	1	Tube-ASM
23:1	237-30	1	O-Ring
24	340-4	1	Adapter
24:1	237-30	1	O-Ring
24:2	237-79	1	O-Ring
26	3290-379	10	Tie-Cable
27	100-3713	2	Fitting-Hyd, 90 Bulkhead
27:1	237-30	2	O-Ring
28	104-0063	2	Hose ASM-Hyd
29	104-0069	4	Hose ASM-Hyd
30	104-0064	1	Hose ASM-Hyd
31	94-4347-03	5	Weight-End, Mach
32	93-9783	10	O-Ring
33	93-8717	5	Plug-Pipe
34	98-1851	1	Bar - Guage
35	32122-54	2	Screw-Head, Truss
36	32103-3	2	Nut-Wing
37	98-7976	1	Decal-Bar, Guage

 3324-947

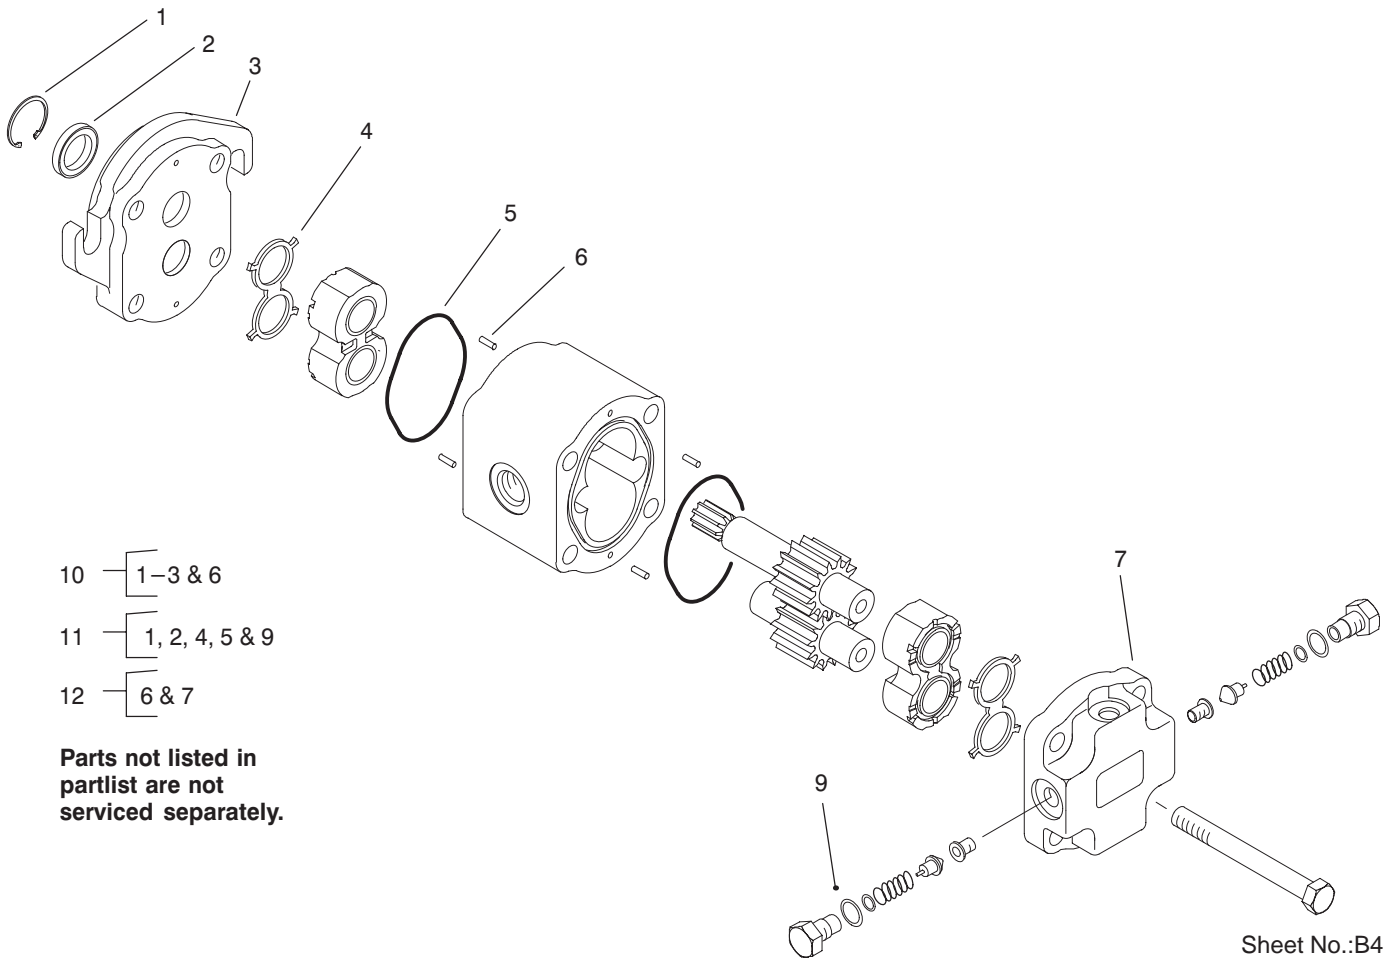


Sheet No.:B4
T-3503

Reel Motor No. 98-9999

Ref. No.	Part No.	Qty.	Description
10	93-9152	2	Flange Kit
11	98-9997	2	Seal Kit
12	93-9154	2	Valve Block Kit

Ref. No.	Part No.	Qty.	Description
<p style="font-size: 48px; opacity: 0.5; font-family: sans-serif;">PROTOTYPE</p>			

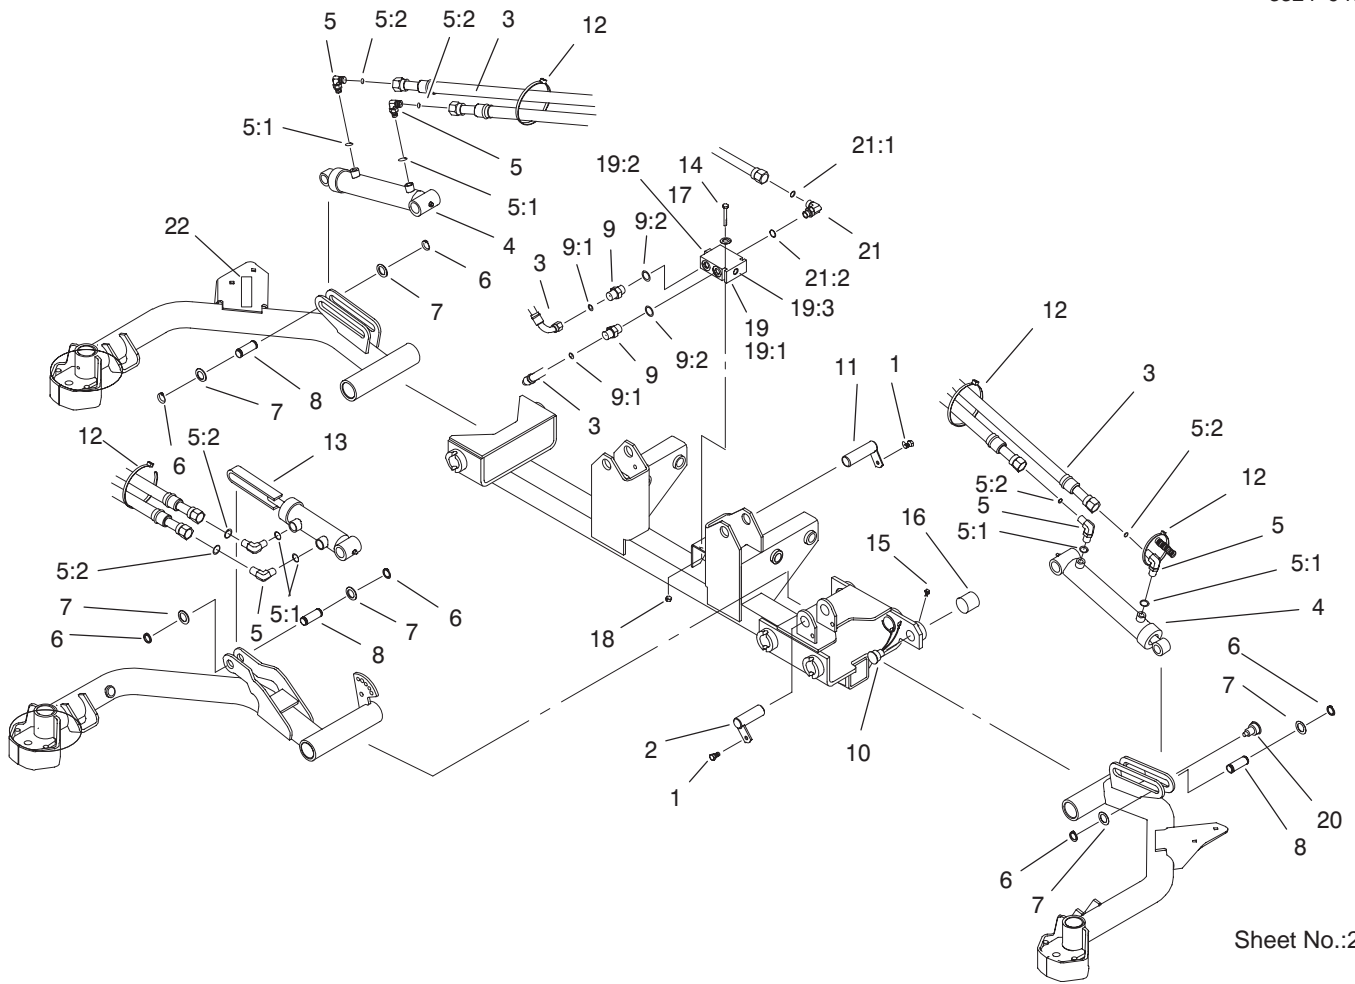 


Sheet No.:25

Front Lift Circuit Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-14	3	Screw-HWH
2	83-6790	1	Pin-Cylinder
3	104-0059	2	Hose ASM-Hyd
4	99-6986	2	Cylinder-Hydraulic
5	340-132	6	Elbow-90°
5:1	237-78	2	O-Ring
5:2	237-21	2	O-Ring
6	32120-93	6	Ring-Retaining
7	3-6498	6	Washer-Thrust
8	104-0046	3	Pin - Cylinder Slide
9	340-2	2	Adapter
9:1	237-22	1	O-Ring
9:2	237-42	1	O-Ring
10	92-8002	1	Plug-Reed Switch, Magnet
11	83-6780	2	Cylinder Pin
12	3290-378	2	Tie-Cable
13	99-6987	1	Cylinder-Hyd
14	321-11	2	Screw-HH
15	32104-76	2	Screw-Slot, Acorn
16	75-6370	1	Cap - Sensor
17	3256-1	2	Washer-Flat
18	3296-42	2	Nut-Lock
19	99-6998	1	Divider-Flow
19:1	99-5645	1	Body
19:2	99-5646	1	Cartridge

Ref. No.	Part No.	Qty.	Description
19:3	353-989	1	Plug-Hex, Hollow
*19:3:1	237-42	1	O-Ring
*19:4	99-5647	1	Seal Kit
20	92-8754	1	Plug-Reed Switch, Magnet
21	340-77	1	Fitting-90°
21:1	237-22	1	O-Ring
21:2	237-42	1	O-Ring
22	93-6687	1	Decal-Step, No

* Not illustrated

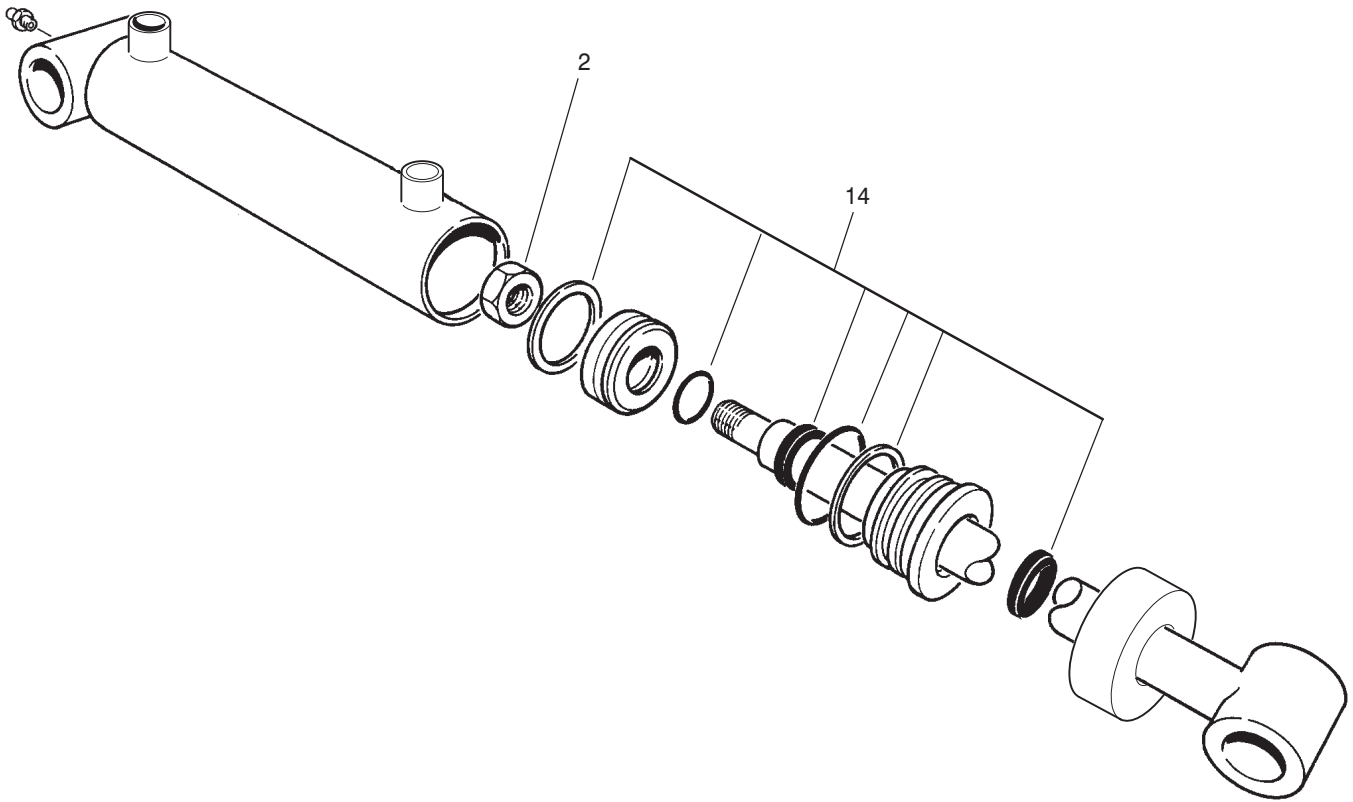


Sheet No.:B5
T-3383

Hydraulic Cylinder Assembly No. 99-6987

Ref. No.	Part No.	Qty.	Description
2	32152-10	1	Locknut-Deform, Top
14	100-8023	1	Kit-Repair, Seal

Ref. No.	Part No.	Qty.	Description
<p style="font-size: 48px; opacity: 0.5; font-family: sans-serif;">PROTOTYPE</p>			

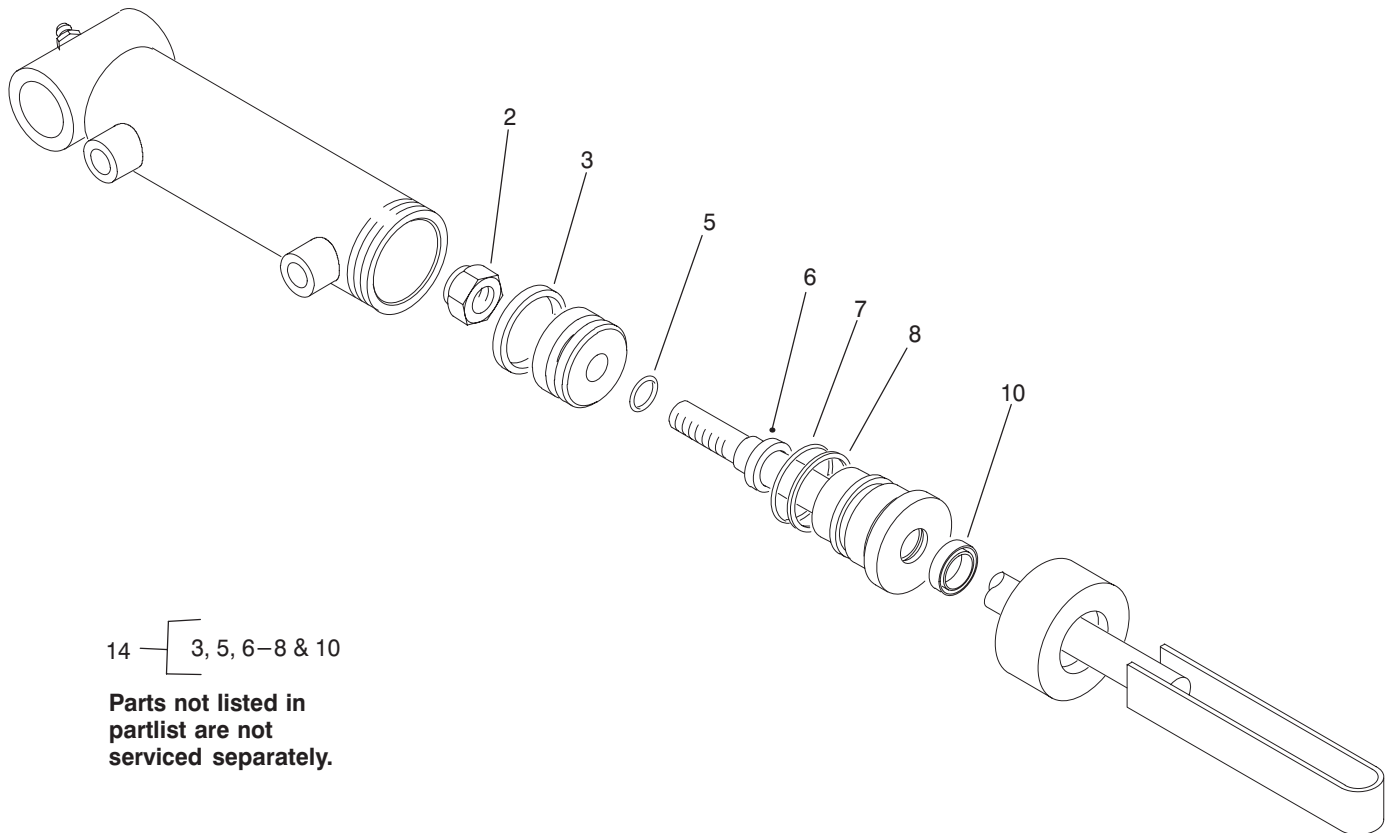

14 — [3, 5, 6-8 & 10


Parts not listed in partlist are not serviced separately.

Sheet No.:B6
T-3501

Hydraulic Cylinder Assembly No. 99-6986

Ref. No.	Part No.	Qty.	Description
2	32152-10	1	Locknut-Deform, Top
14	100-8023	1	Kit-Repair, Seal

Ref. No.	Part No.	Qty.	Description
<p style="font-size: 48px; opacity: 0.5; font-family: sans-serif;">PROTOTYPE</p>			

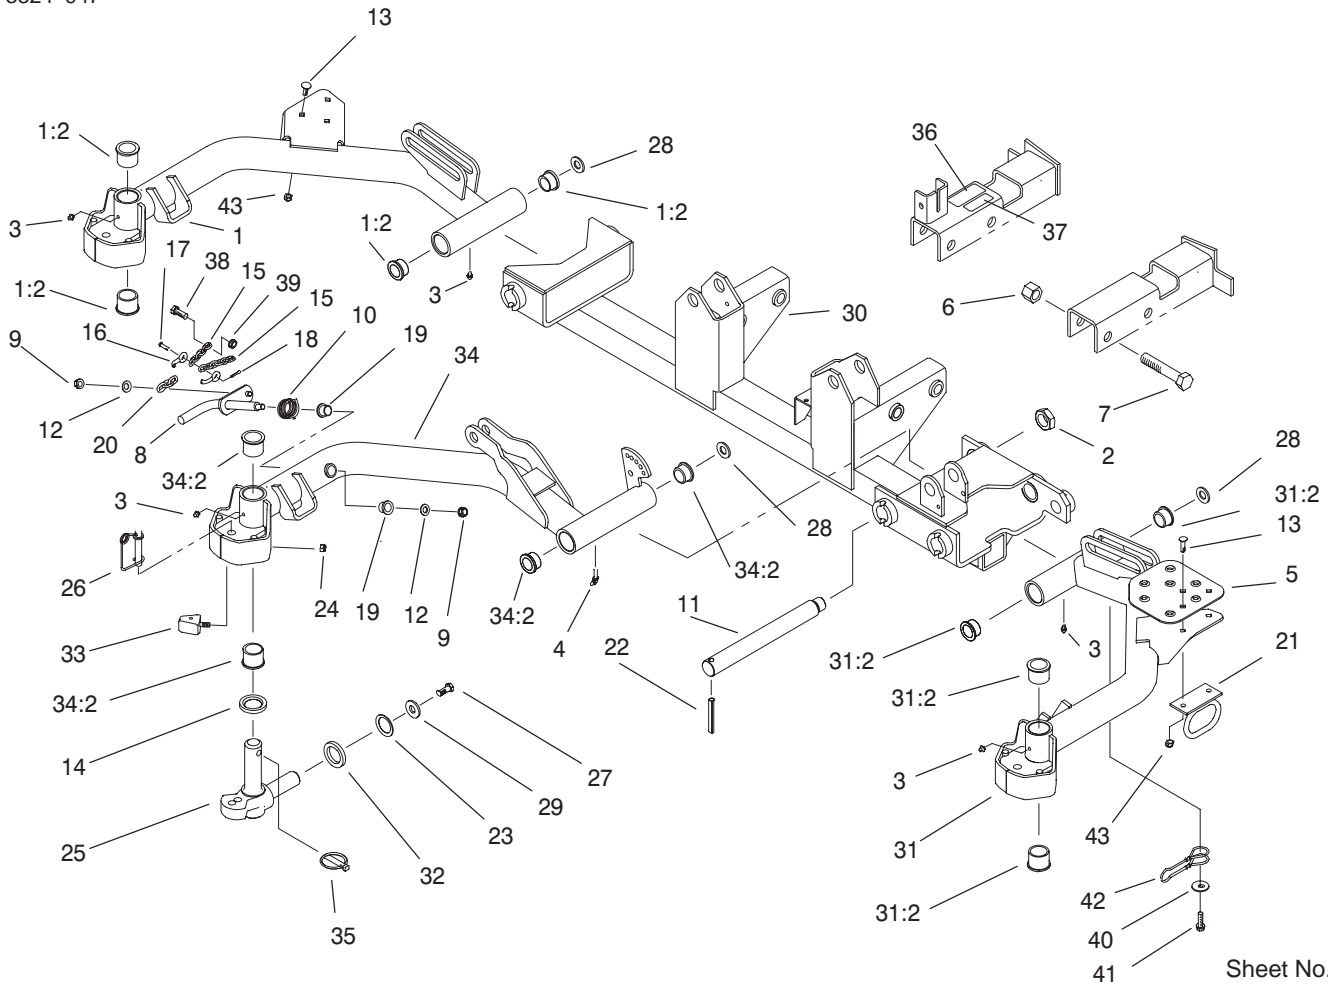 


Sheet No.:26

Front Lift Arm Assembly

Ref. No.	Part No.	Qty.	Description
1	99-6905-03	1	Arm ASM #5
1:2	104-0015	2	Bushing-Flange
2	3296-49	3	Nut-Lock NI
3	302-5	5	Fitting-Lube
4	302-60	1	Fitting-Lube
5	104-1438-03	1	Step-Perforated
6	3296-51	4	Nut-Lock, NI
7	328-7	4	Screw-HH
8	99-6941-03	1	Pivot Rod ASM
9	3296-39	2	Nut-Lock, NI
10	98-3929	1	Spring-Torsion
11	95-7158	3	Pin - Pivot
12	3256-24	2	Washer-Flat
13	3230-1	5	Screw-CARR
14	94-8946	3	Washer
15	5-1096	2	Chain-Lift
16	282-4	1	Shackle
17	283-6	1	Pin-Clevis
18	3272-10	1	Pin-Cotter
19	256-287	2	Bushing
20	104-1413	1	Chain - Straight Link
21	104-0028	2	Hose Guide
22	32121-110	3	Pin-Roll, Slotted
23	3-6781	3	Washer-Thrust
24	3296-29	6	Nut-Lock, NI
25	98-1880-03	3	Knuckle - Pivot

Ref. No.	Part No.	Qty.	Description
26	99-5610	3	Pin
27	98-7993	3	Screw-HHF
28	76-2980	3	Washer-Thrust
29	3256-6	3	Washer-Flat
30	99-6913-03	1	Carrier Frame -
31	99-6904-03	1	Arm ASM #4
31:2	104-0015	2	Bushing-Flange
32	98-7974	3	Washer - Thrust
33	99-5605	6	Bumper ASM
34	99-6901-03	1	Arm ASM #1
34:2	104-0015	2	Bushing-Flange
35	283-71	3	Pin-Lynch
36	93-6693	1	Decal-Plate, Floor
37	93-6686	1	Decal-Oil, Hydraulic
38	323-6	1	Screw-HH
39	32128-21	1	Nut-HF
40	3256-57	2	Washer-Flat
41	32144-26	2	Screw-Flow, Penta
42	98-3936	2	Lanyard
43	3296-47	5	Nut-Lock, NI

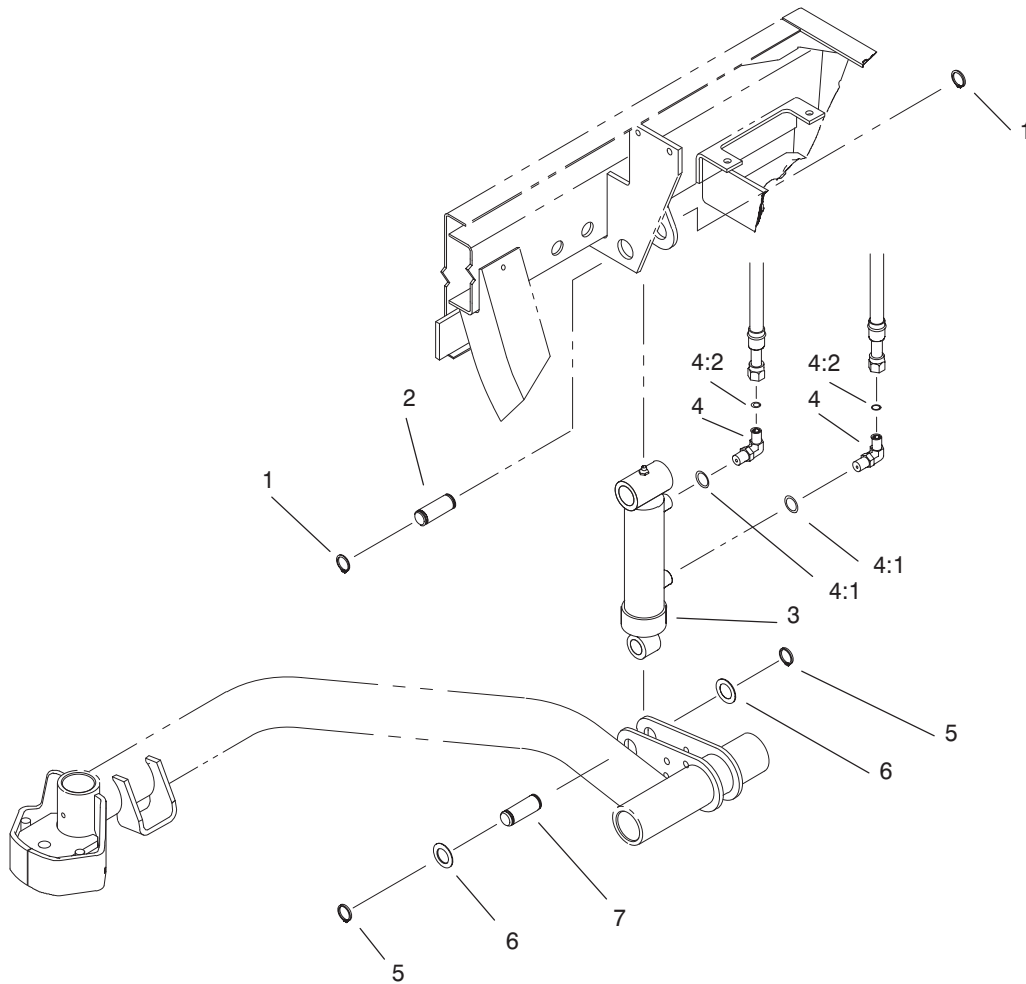 


Sheet No.:27

Rear Lift Cylinder Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	32151-36	4	Ring-Retaining				
2	75-5360	2	Pin-Cylinder				
3	98-3945	2	Cylinder-Hyd				
4	340-132	4	Elbow-90°				
4:1	237-78	1	O-Ring				
4:2	237-21	1	O-Ring				
5	32120-93	4	Ring-Retaining				
6	3-6498	4	Washer-Thrust				
7	104-0046	2	Pin - Cylinder Slide				

PROTOTYPE

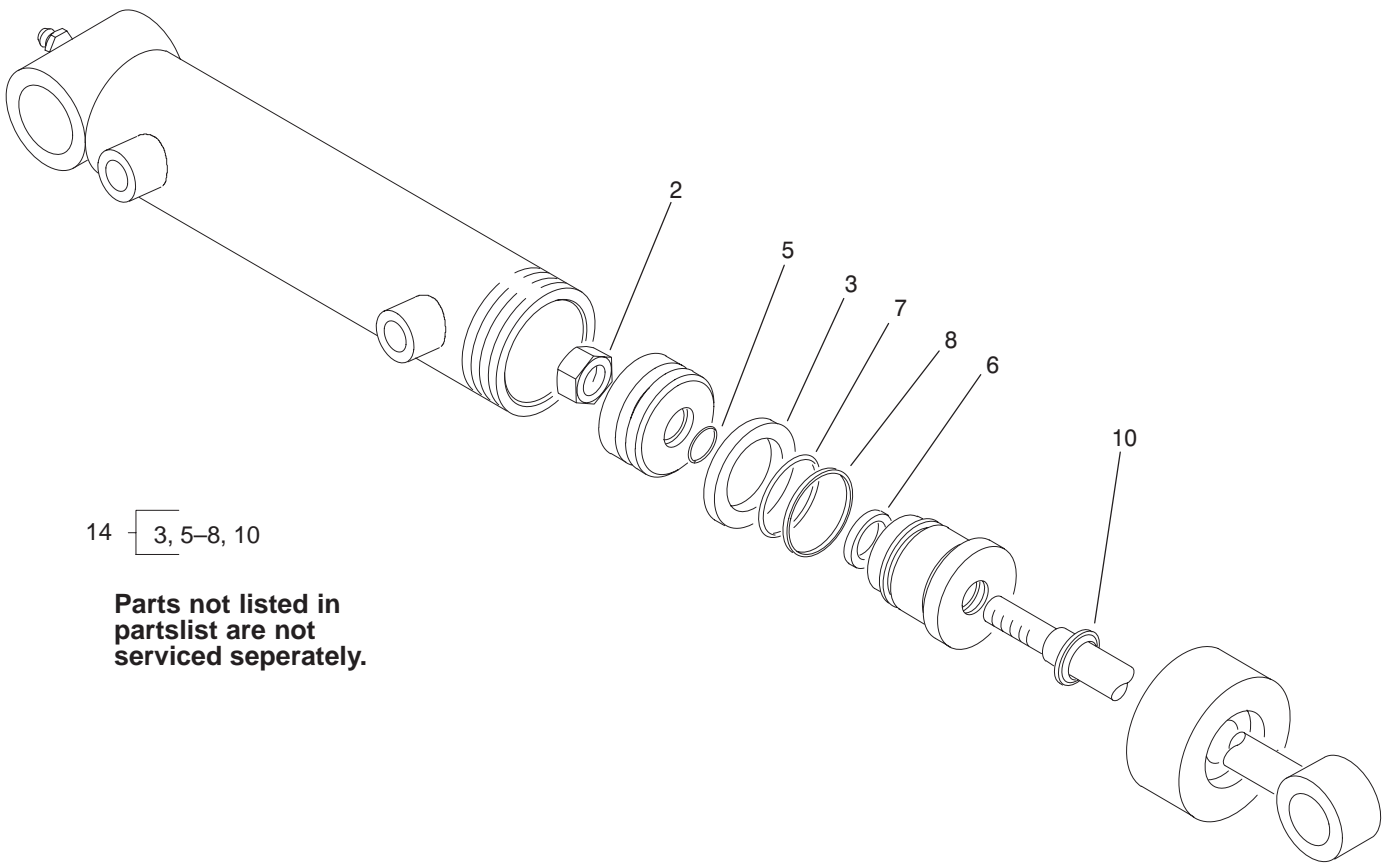

14 - 3, 5-8, 10


Parts not listed in partslist are not serviced seperately.

T-3576
Sheet No.:B7

Hydraulic Cylinder Assembly No. 98-3945

Ref. No.	Part No.	Qty.	Description
2	32152-10	1	Locknut-Deform, Top
14	100-8023	1	Kit-Repair, Seal

Ref. No.	Part No.	Qty.	Description
<p style="font-size: 48px; opacity: 0.5; font-weight: normal;">PROTOTYPE</p>			

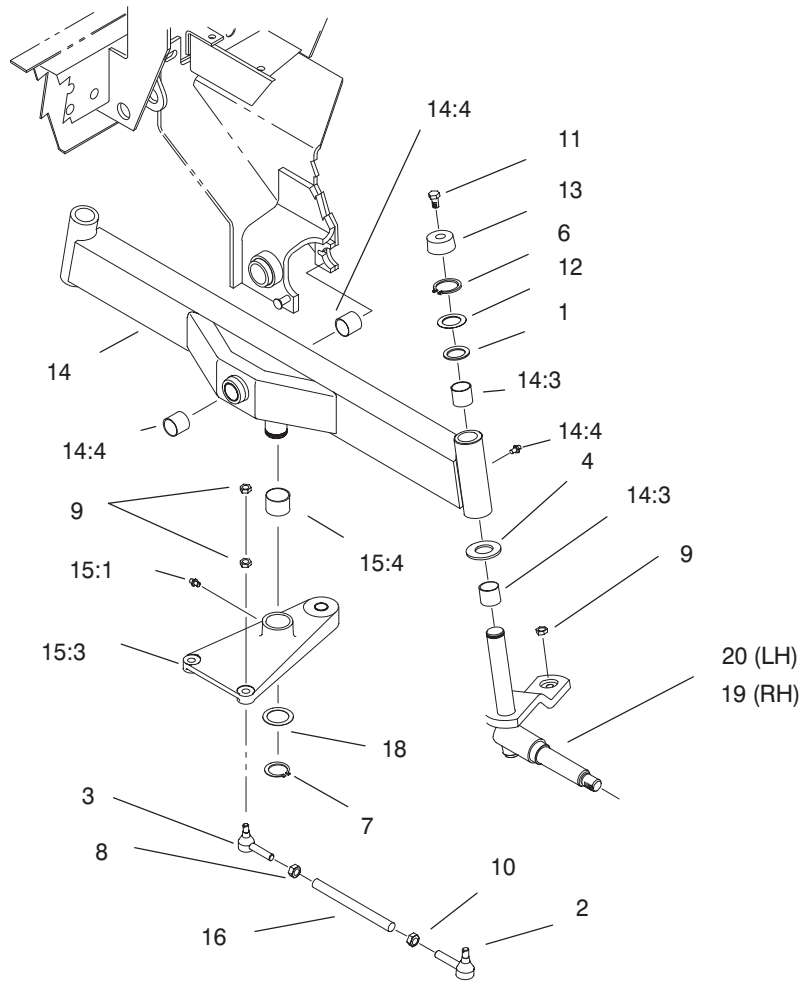 


Sheet No.:B8

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	10-8110	2	Washer-Thrust
2	21-0141	2	RH Socket ASM
3	21-0151	2	LH Socket ASM
4	256-121	2	Thrust Washer
6	32151-36	2	Ring-Retaining
7	32151-77	1	Retaining Ring
8	3220-12	2	Nut-Jam, LH Thread
9	3220-3	8	Nut-Jam
10	3220-5	2	Nut-Hex Jam
11	3234-13	2	Screw-HHF
12	5-1226	2	Washer
13	66-2990	2	Spindle Cap
14	99-6935-03	1	Axle-Rear
14:2	302-5	2	Fitting-Lube
14:3	67-1750	4	Bushing
14:4	99-6964	2	Bushing-Axle
15	75-4410-03	1	Pivot Plate ASM
15:1	302-5	1	Fitting-Lube
15:3	75-2910	1	Pivot Plate
15:4	76-2970	2	Bushing-Straight
16	75-3130-03	1	Tie Rod
18	76-2980	1	Washer-Thrust
19	93-7000-03	1	Spindle-RH
20	93-7001-03	1	Splindle-LH

Ref. No.	Part No.	Qty.	Description
PROTOTYPE			

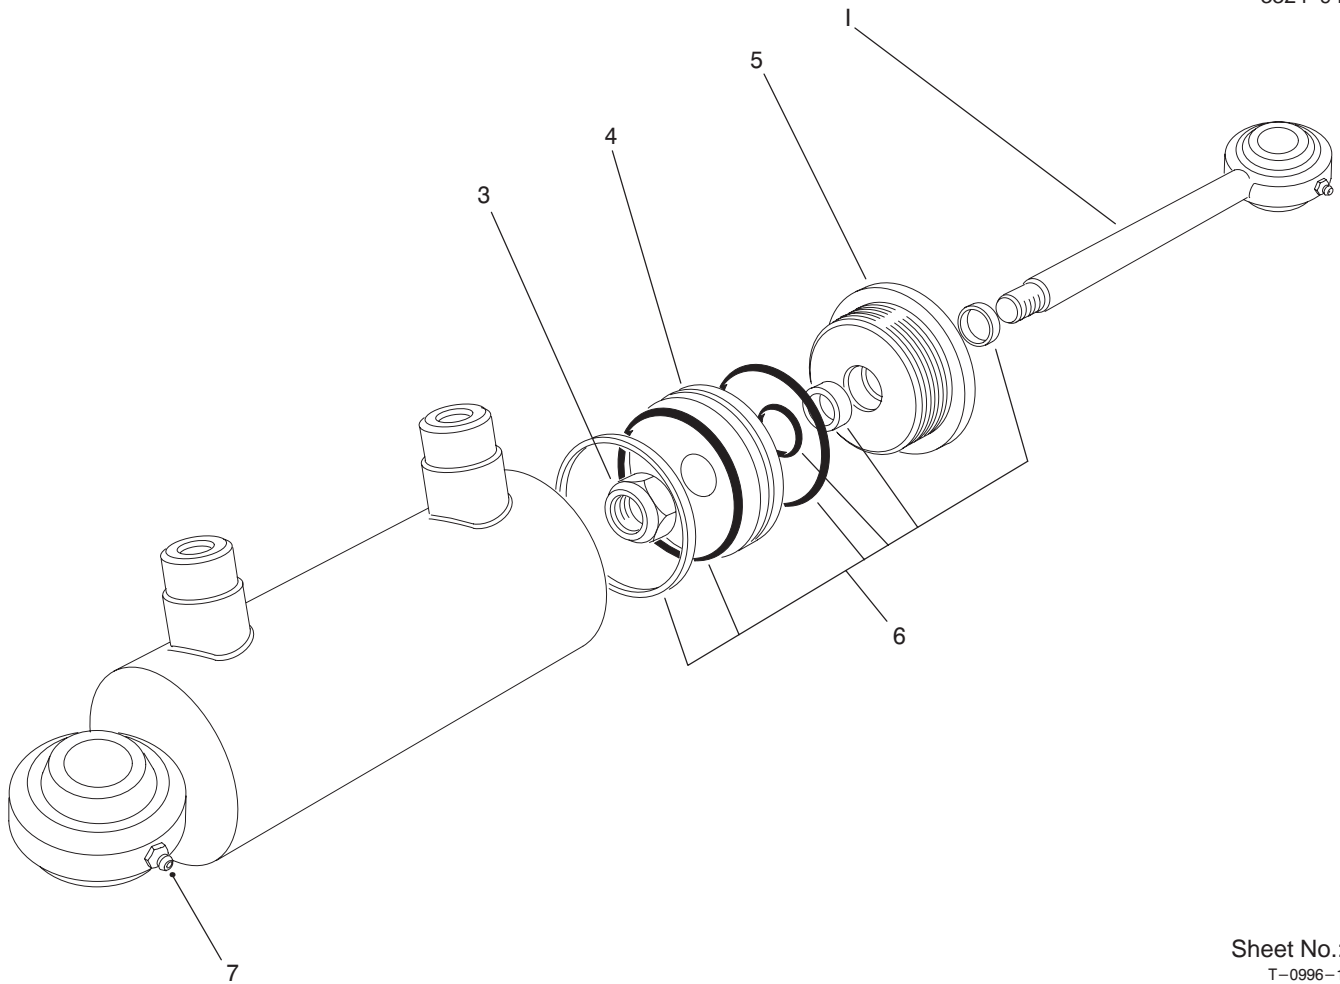 


Sheet No.:B9
T-0996-1

Hydraulic Cylinder No. 75-1200

Ref. No.	Part No.	Qty.	Description
1	75-1230	1	Piston Rod
3	75-1210	1	Nut
4	75-1220	1	Piston
5	75-1260	1	Head
6	75-1250	1	Seal Kit
7	302-5	2	Fitting-Lube

Ref. No.	Part No.	Qty.	Description

 PROTOTYPE

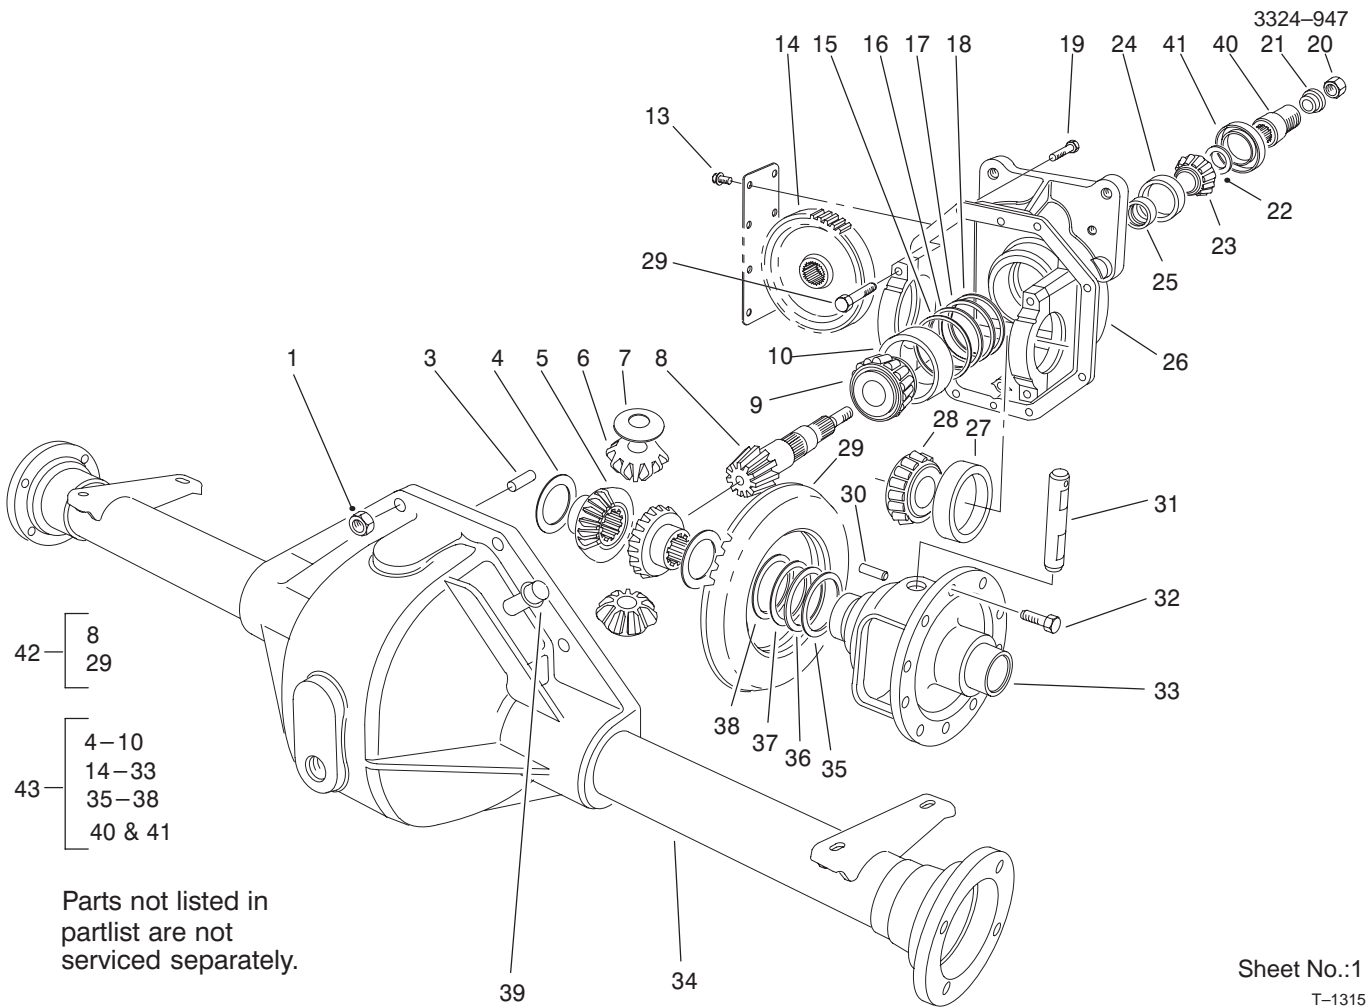


Sheet No.:1
T-1315

Axle Assembly No. 99-6981-03

Ref. No.	Part No.	Qty.	Description
1	32144-5	8	Screw
3	21-8270	2	Dowel Pin
4	21-7720	2	Thrust Washer
5	24-8790	2	Gear-Differential
6	21-7690	2	Pinion-Differential
7	21-7730	2	Pinion Thrust Washer
9	43-6760	1	Cone Taper Roller Brg
10	43-6750	1	Cup Taper Brg
13	32144-112	8	Screw-Forming Thread
14	86-7230	1	Gear-Input Transmission
15	43-6710	1	Shim Adj
16	43-6711	1	Shim
17	43-6712	1	Shim
18	43-6713	1	Shim
19	3210-8	8	Screw-HH
20	71-4350	1	Nut
21	83-5130	1	Spacer - Pinion
22	72-3570	1	Shim - Frt Pinion Brg
22	72-3571	1	Shim - Frt Pinion Brg
22	72-3572	1	Shim - Frt Pinion Brg
22	72-3573	1	Shim - Frt Pinion Brg
22	72-3574	1	Shim - Frt Pinion Brg
22	72-3575	1	Shim - Frt Pinion Brg
22	72-3576	1	Shim - Frt Pinion Brg

Ref. No.	Part No.	Qty.	Description
22	72-3577	1	Shim - Frt Pinion Brg
22	72-3578	1	Shim - Frt Pinion Brg
22	72-3580	1	Shim - Frt Pinion Brg
22	72-3581	1	Shim - Frt Pinion Brg
22	72-3582	1	Shim - Frt Pinion Brg
22	72-3583	1	Shim - Frt Pinion Brg
22	72-3584	1	Shim - Frt Pinion Brg
22	72-3585	1	Shim - Frt Pinion Brg
22	72-3586	1	Shim - Frt Pinion Brg
22	72-3587	1	Shim - Frt Pinion Brg
22	72-3588	1	Shim - Frt Pinion Brg
22	72-3590	1	Shim - Frt Pinion Brg
22	72-3591	1	Shim - Frt Pinion Brg
22	72-3592	1	Shim - Frt Pinion Brg
22	72-3593	1	Shim - Frt Pinion Brg
22	72-3594	1	Shim - Frt Pinion Brg
22	72-3595	1	Shim - Frt Pinion Brg
22	72-3596	1	Shim - Frt Pinion Brg
22	72-3597	1	Shim - Frt Pinion Brg
22	72-3598	1	Shim - Frt Pinion Brg
22	72-3600	1	Shim - Frt Pinion Brg
23	254-91	1	Bearing Cone
24	254-90	1	Bearing Cup
25	21-8020	1	Frt Pinion Brg Spacer
26	93-3619	1	Upper Housing ASM
27	254-66	2	Roller Bearing Cup

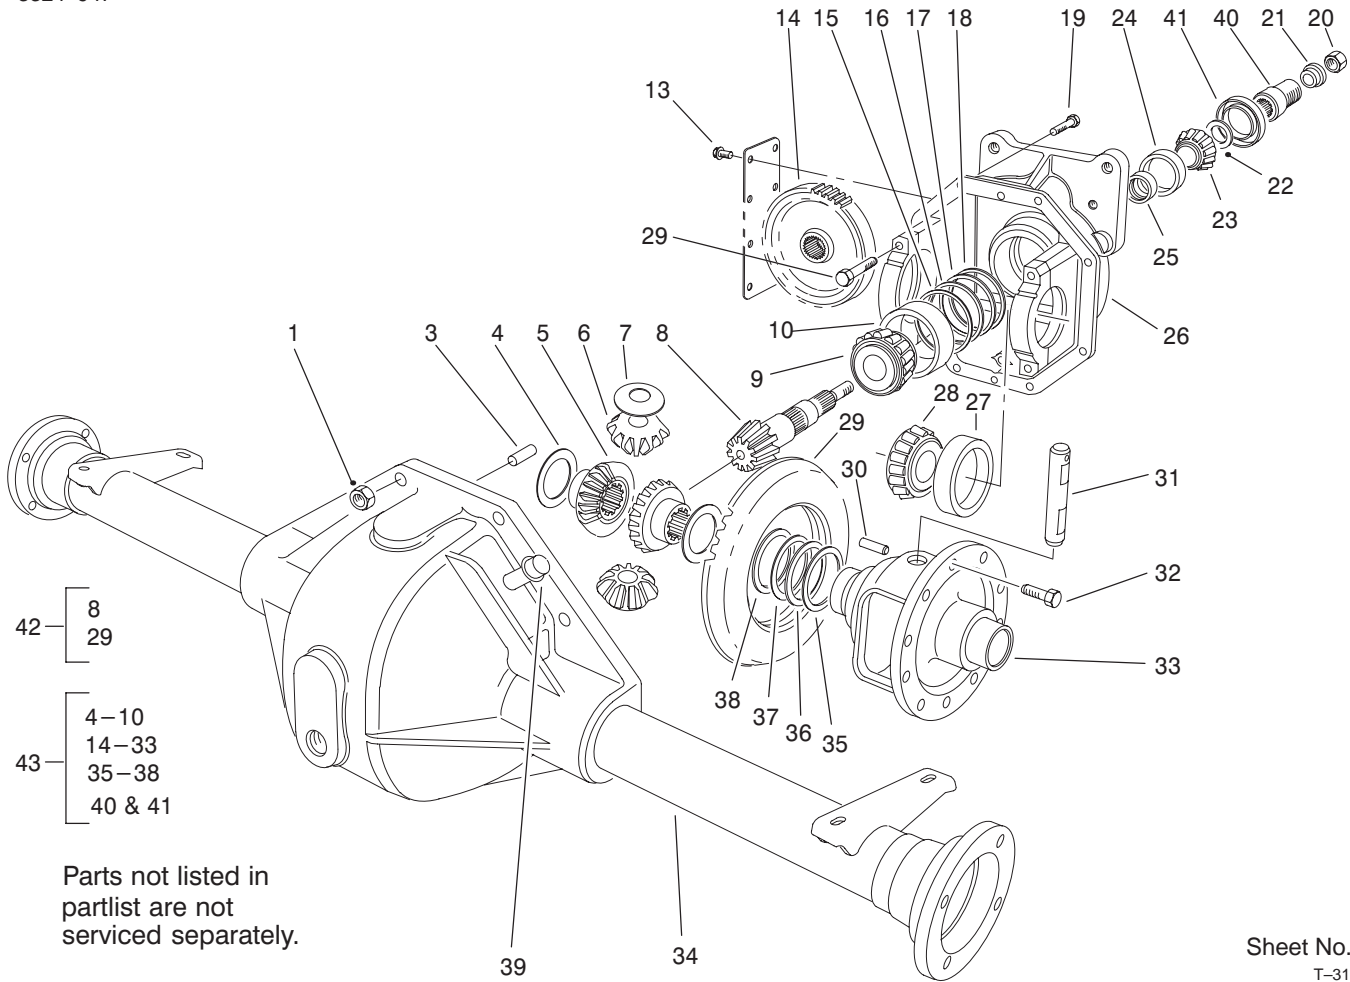 


Sheet No.:1
T-3115

Axle Assembly No. 99-6981-03 (Continued)

Ref. No.	Part No.	Qty.	Description
28	254-65	2	Roller Brg Cone
29	92-1773	4	Capscrew - Flange Hd
30	32121-15	1	Dowel Pin
31	21-7700	1	Pinion Mate Shaft
32	21-7770	5	Drive Gear Screw
33	21-7670	1	Case-Differential
34	75-0721	1	Housing ASM *B
35	21-8120	1	Diff Brg Shim .030
36	21-8110	1	Diff Brg Shim .010
37	21-8100	1	Diff Brg Shim .005
38	21-8090	1	Diff Brg Shim .003
39	72-9420	1	Vent
40	83-4910	1	Coupler- Pinion
41	71-4330	1	Seal
42	93-3618	1	Gear & Pinion Assy
43	93-3617	1	Cover And Carrier Kit

Ref. No.	Part No.	Qty.	Description

 PROTOTYPE

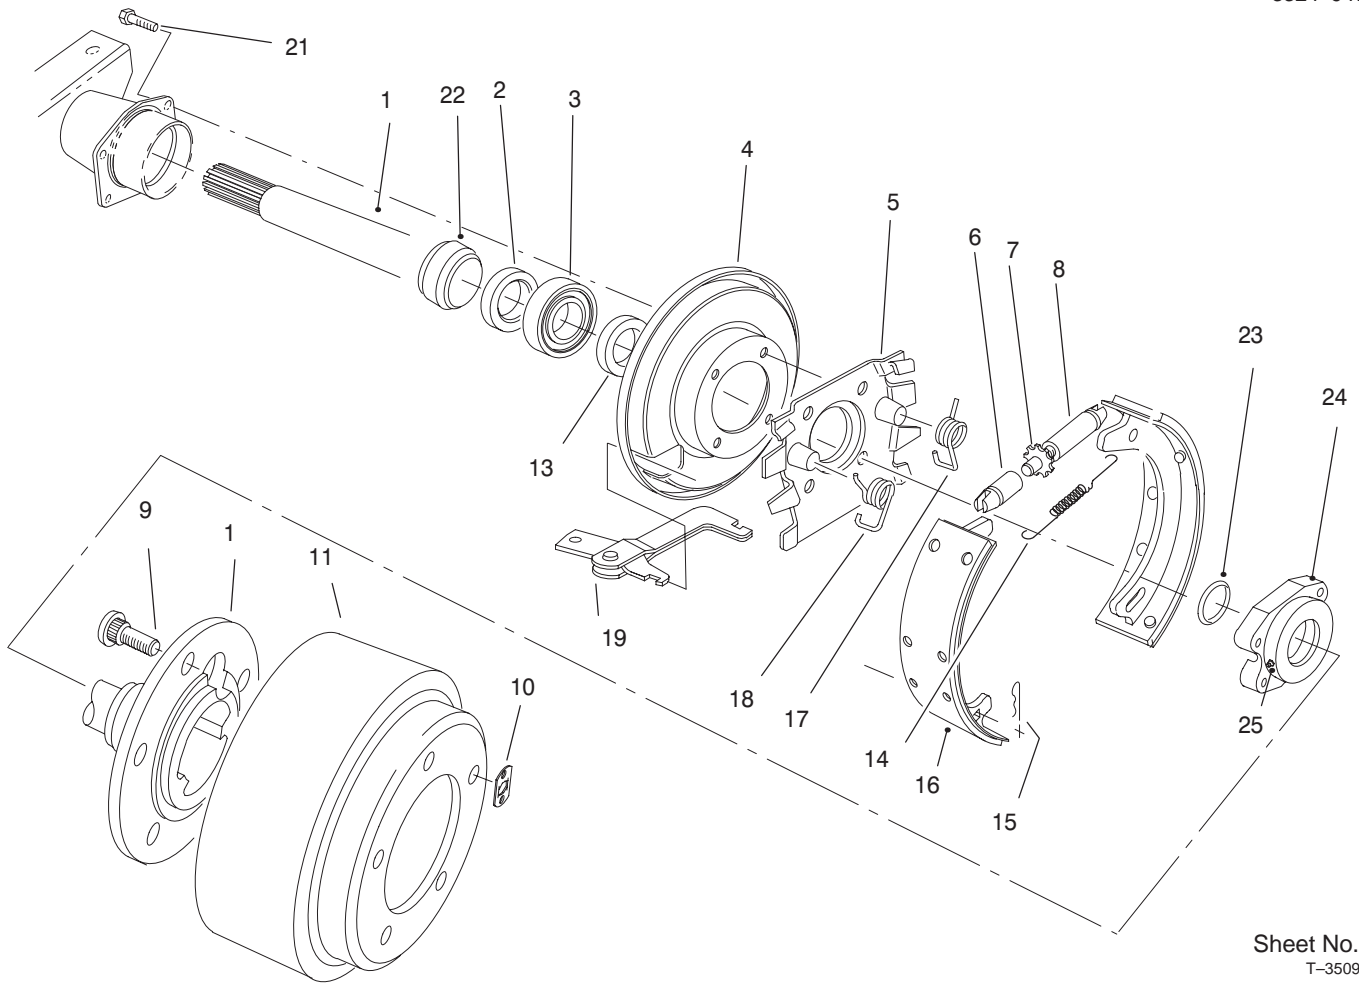


Sheet No.:2
T-3509

Brake Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-3840	1	Shaft-Axle,LH	26	84-8600	1	Pkg,Shoes Lined-Axle St
1	100-3841	1	Shaft-Axle,RH	27	92-8775	1	Liquid Gasket Kit
2	100-3842	2	Seal-Oil				
3	21-8180	2	Brg ASM				
4	100-3843	2	Shield-Dust				
5	100-3844	2	Spider-Torque				
6	21-9390	2	Adj Screw Socket				
7	21-9370	2	Adj Screw				
8	21-9380	2	Pivot Nut				
9	242-34	10	Stud-Drive				
10	21-8360	2	Locknut				
11	28-0680	2	Brake Drum				
13	100-3845	2	Seal-Grease				
14	21-9440	2	Adj Screw Spring				
15	21-9460	4	Brake Lever Retainer				
16	84-8590	4	Shoe And Lining ASM				
17	21-9420	2	Shoe Return Spring				
18	21-9430	2	RH Shoe Return Spring				
19	24-9180	2	Strut & Lever ASM				
21	100-3846	8	Screw-Special				
22	100-3847	2	Retainer-Bearing				
23	100-3848	2	O-Ring				
24	100-3849	2	Cap-Bearing				
25	100-3850	2	Zerk-Special				

SPECIAL TOOLS

AXLE TOOL NO. *TOR859920

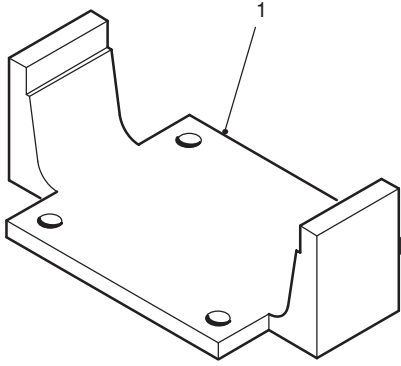


T-1325-1

Ref. No.	Part No.	Description	No. Used
1		Tool-Axle	1

PROTOTYPE

 *Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

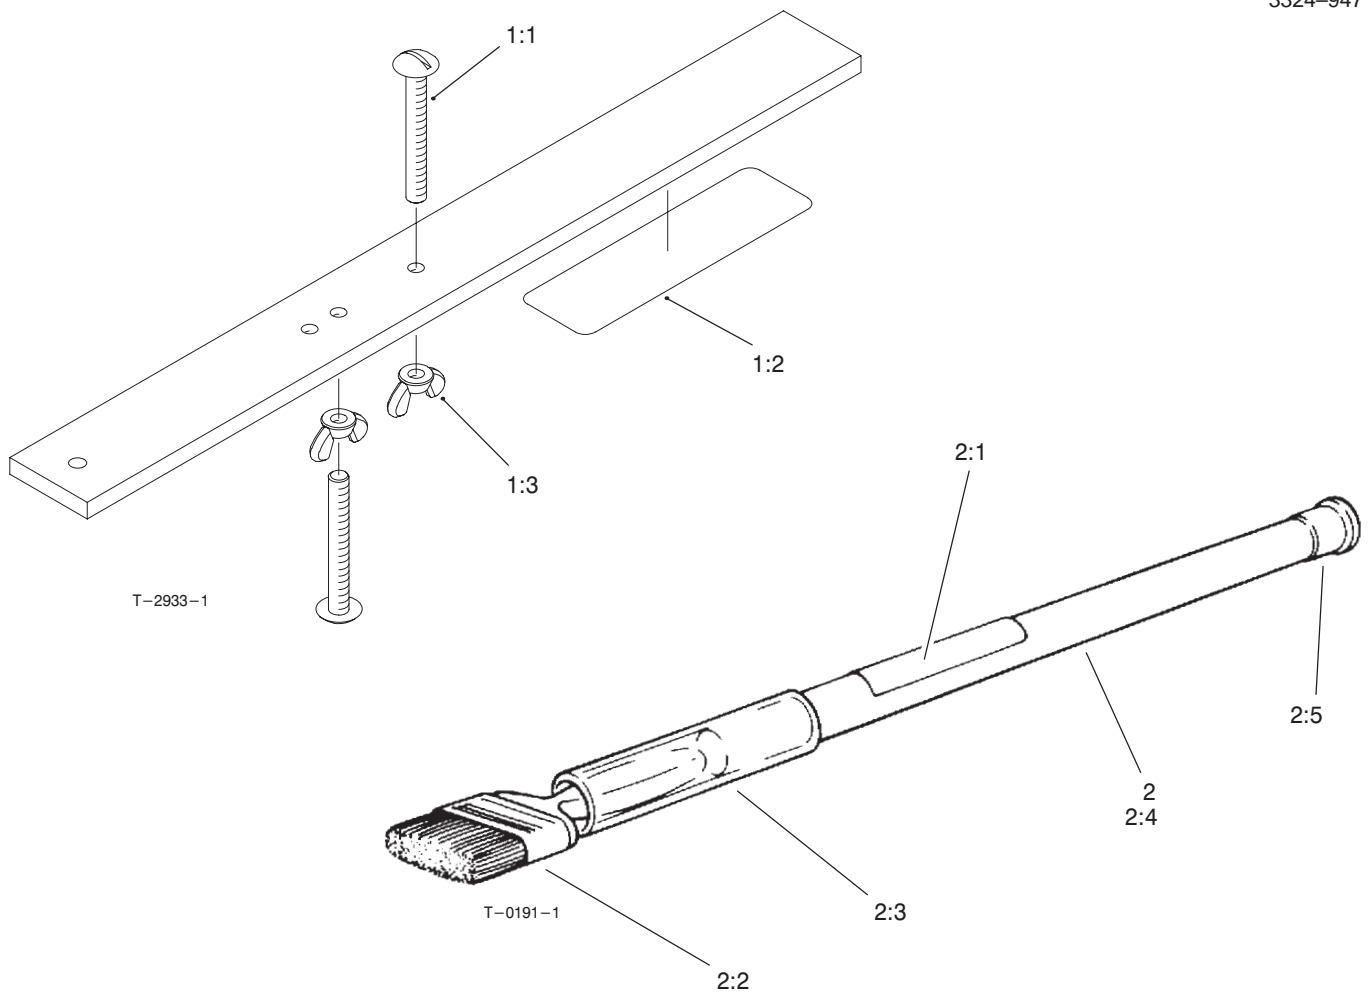


Gauge Bar and Backlapping Brush Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-1852	1	Gauge Bar ASM				
1:1	32122-54	2	Screw				
1:2	98-7976	1	Decal				
1:3	32103-3	2	Nut-Wing				
2	29-9100	1	Backlapping Brush ASM				
2:1	12-9140	1	Decal				
2:2	36-4310	1	Brush				
2:3	29-9090	1	Hose-Handle				
2:4	29-9080	1	Handle				
2:5	2410-18	1	Plug				


PROTOTYPE


Hydraulic Schematic

DISPLACEMENT, FLOW RATE AND PRESSURE CHART					
COMPONENT	DISPLACEMENT		PRESSURE		*FLOW RATE
	in ³ /rev	cm ³ /rev	lbs/in ²	BARS	GPM
P1	.66	10.8			8.4
P2	.66	10.8			8.4
P3	.37	6			4.7
P4	1.5	25			19.1
P5	.58	9.5			7.4
M1	1.16	19			
M2	1.16	19			
M3	1.16	19			
M4	1.16	19			
M5	1.16	19			
M6	1.51	25			
V1	6.1	100			
R1			3000	207	
R2			3000	138	
R3			1450	100	
R4			3625	250	
R5			150	10	
R6			70	5	
R7			70	5	
R8			3625	250	
R9			1500	103	

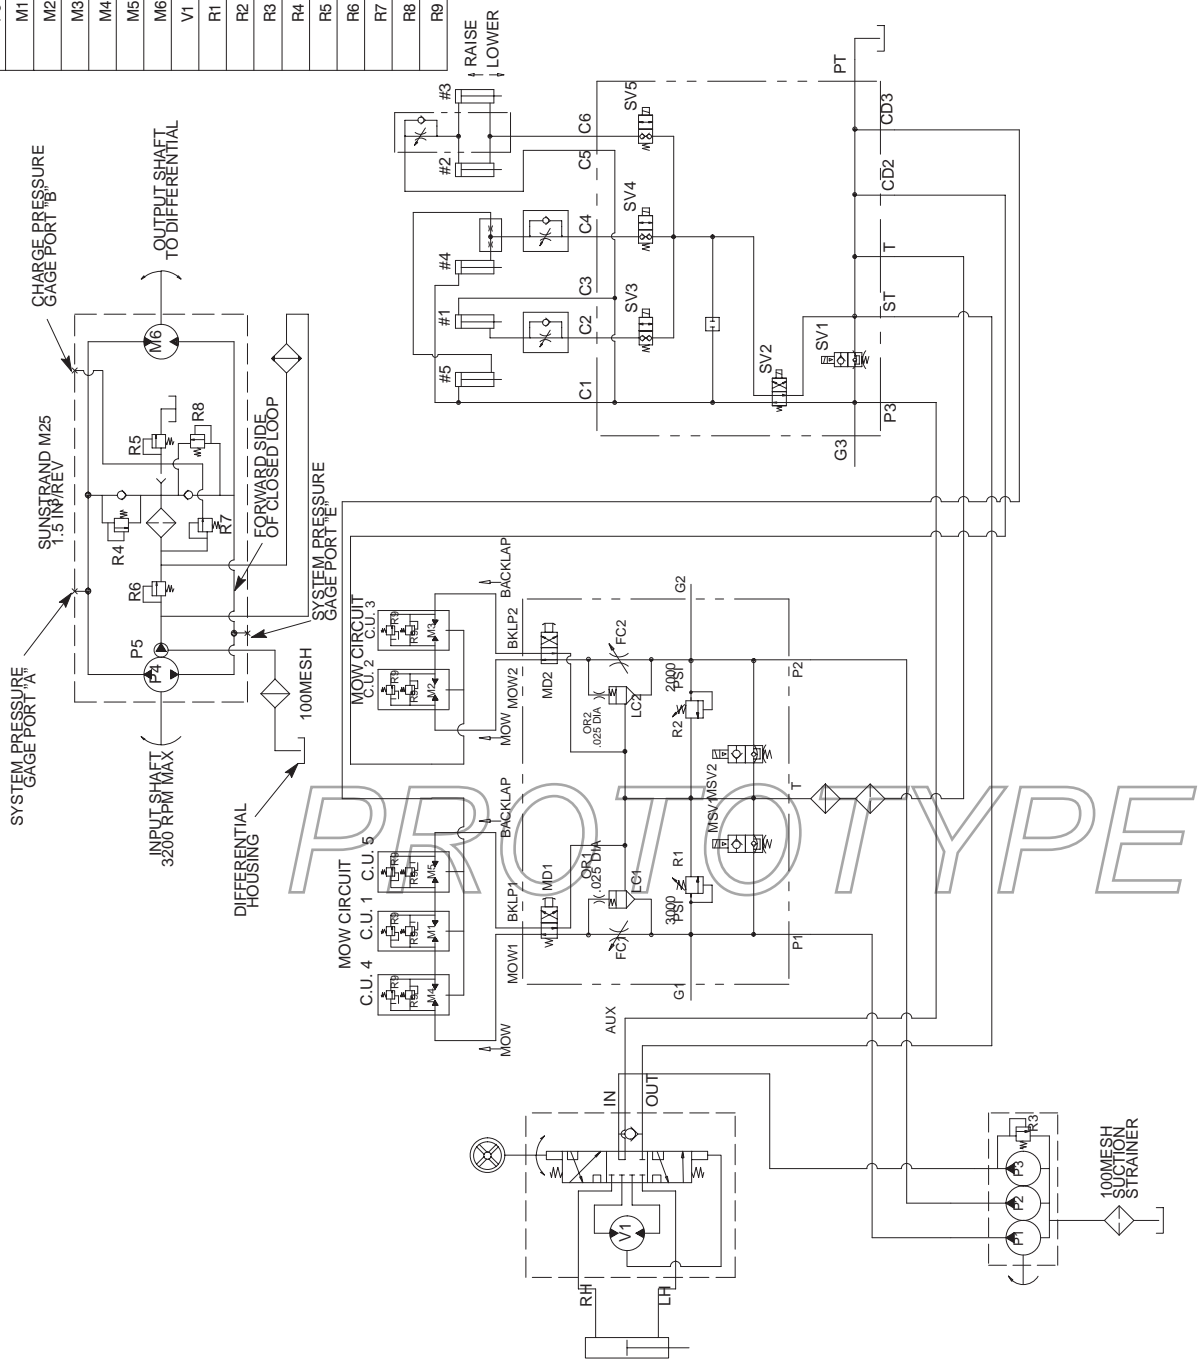 

Electrical Schematic – Turfdefender

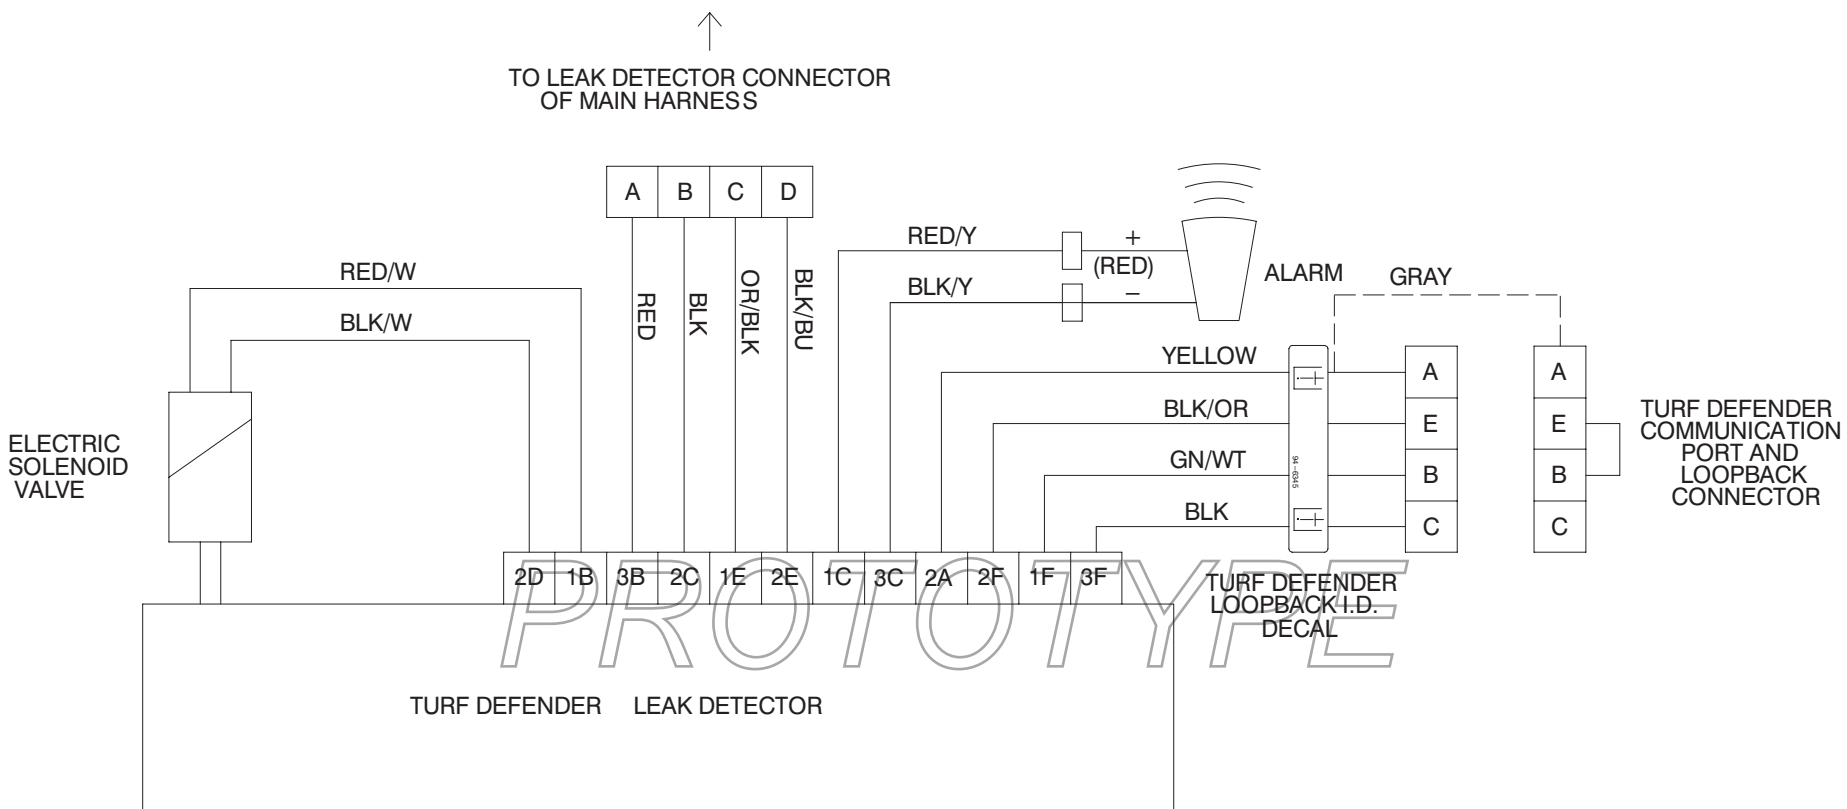 

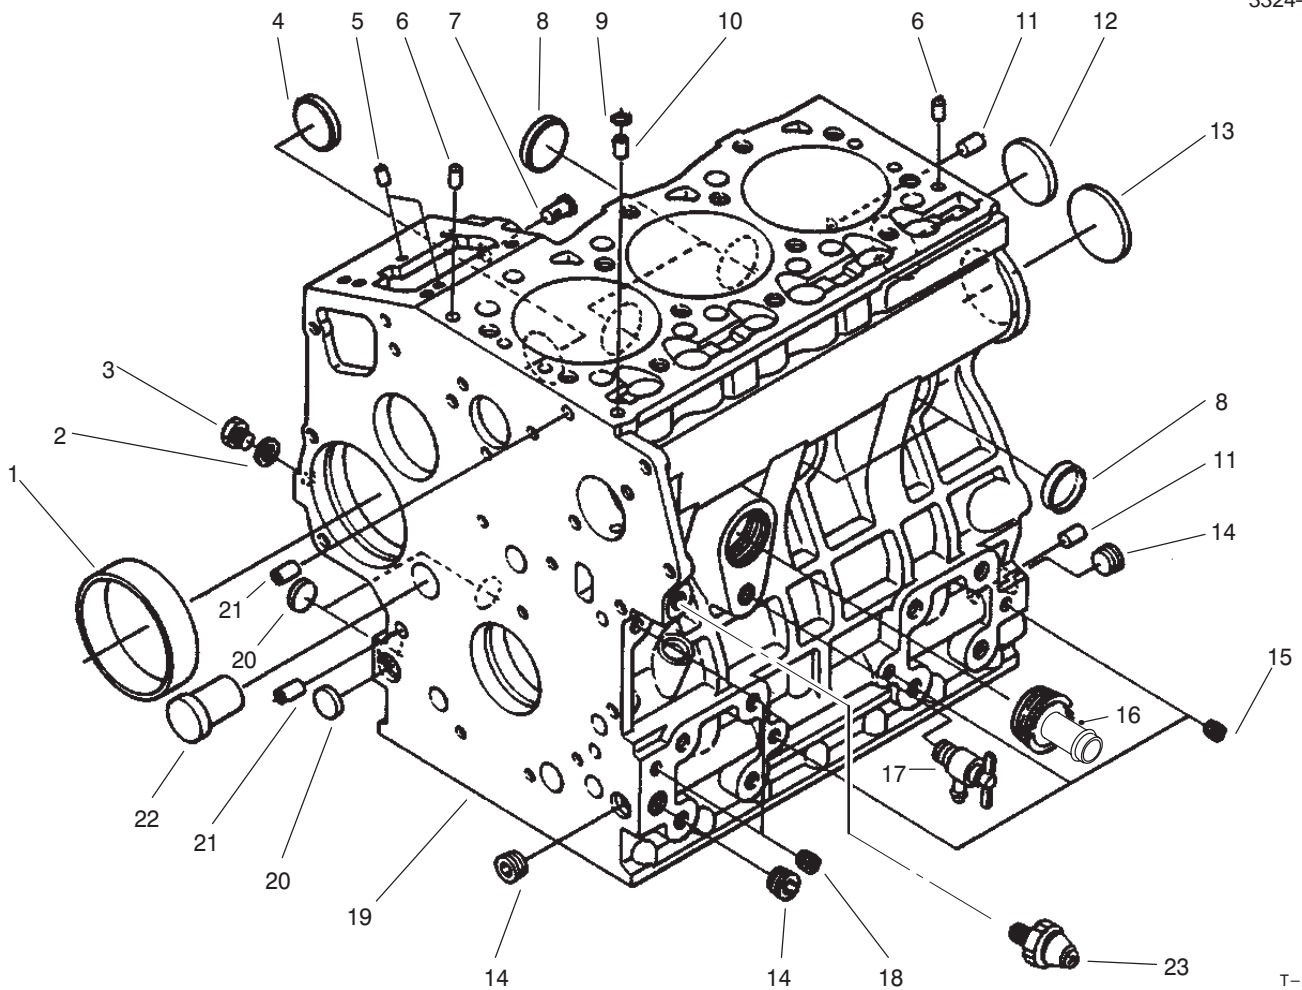 


T-2906

Crankcase Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9656	1	Bushing-Governor, Gear
2	98-7428	1	Gasket
3	98-7507	1	Plug
4	98-9599	1	Plug
5	98-9375	2	Pin-Straight
6	98-9376	2	Pin-Straight
7	98-9630	1	Pin-Start Spring
8	98-9398	4	Cap-Sealing
9	98-7509	1	O-Ring
10	98-9539	1	Pin-Pipe
11	98-9377	2	Pin-Straight
12	98-7539	1	Cap-Sealing
13	98-9668	1	Plug
14	98-9597	3	Plug
15	98-7540	3	Plug
16	99-8347	1	Joint-Drain, Pipe
17	98-9436	1	Asm-Cock, Drain
18	98-7487	2	Plug
19	99-8300	1	Asm-Crankcase (Incl. Ref. #1-8, 10-16, 18 & 20-22)
20	98-9379	3	Plug
21	98-9387	2	Pin-Pipe

Ref. No.	Part No.	Qty.	Description
22	98-9675	1	Plug
23	98-9416	1	Switch

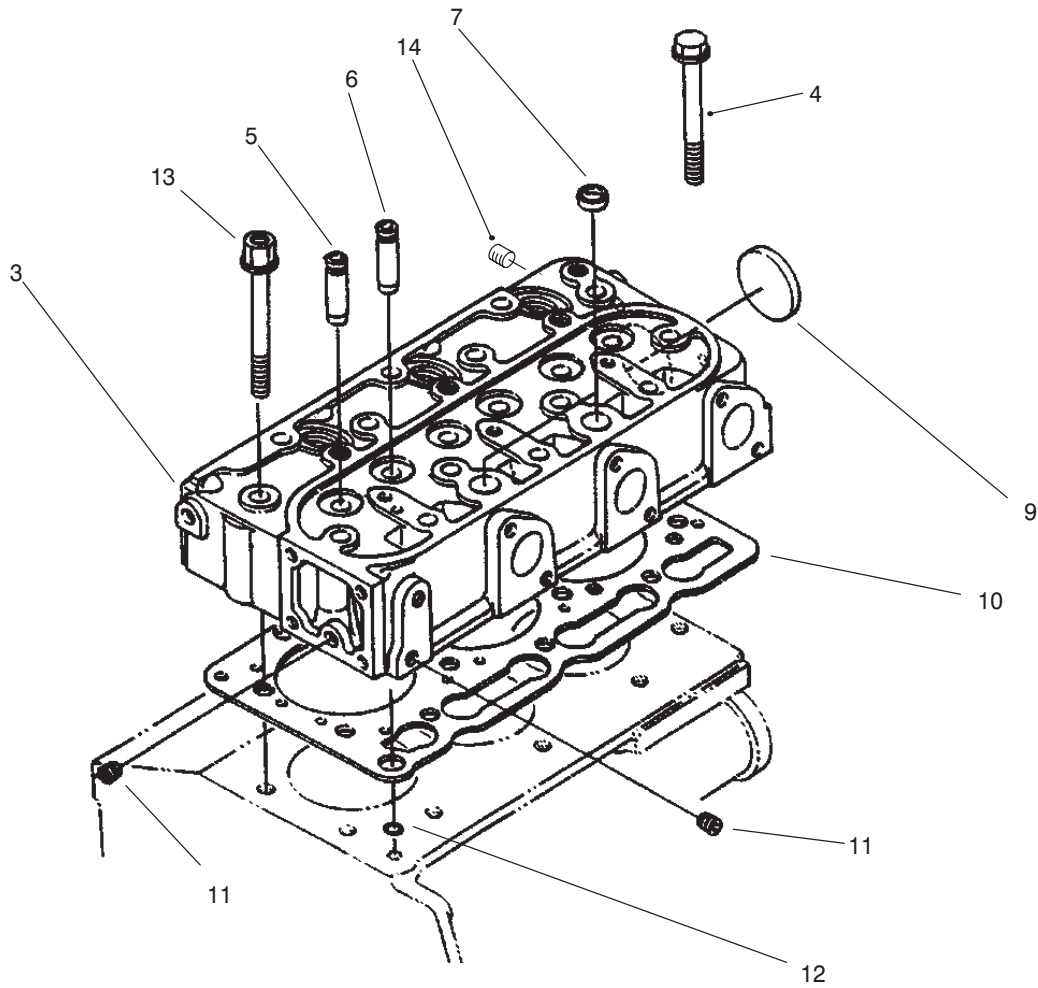 


T-2908-1

Cylinder Assembly

Ref. No.	Part No.	Qty.	Description
3	99-8344	1	Asm-Cylinder Head (Incl. Ref. #5-7, 9,11 & 14)
4	98-9479	12	Bolt-Cylinder Head
5	98-9499	3	Guide-Inlet Valve
6	98-9500	3	Guide-Exhaust Valve
7	98-9389	2	Cap-Sealing
9	98-9395	1	Cap-Sealing
10	98-9613	1	Gasket-Cylinder Head
11	98-7540	2	Plug
12	98-7509	1	O-Ring
13	98-9647	2	Bolt-Cylinder Head
14	98-9444	1	Plug

Ref. No.	Part No.	Qty.	Description

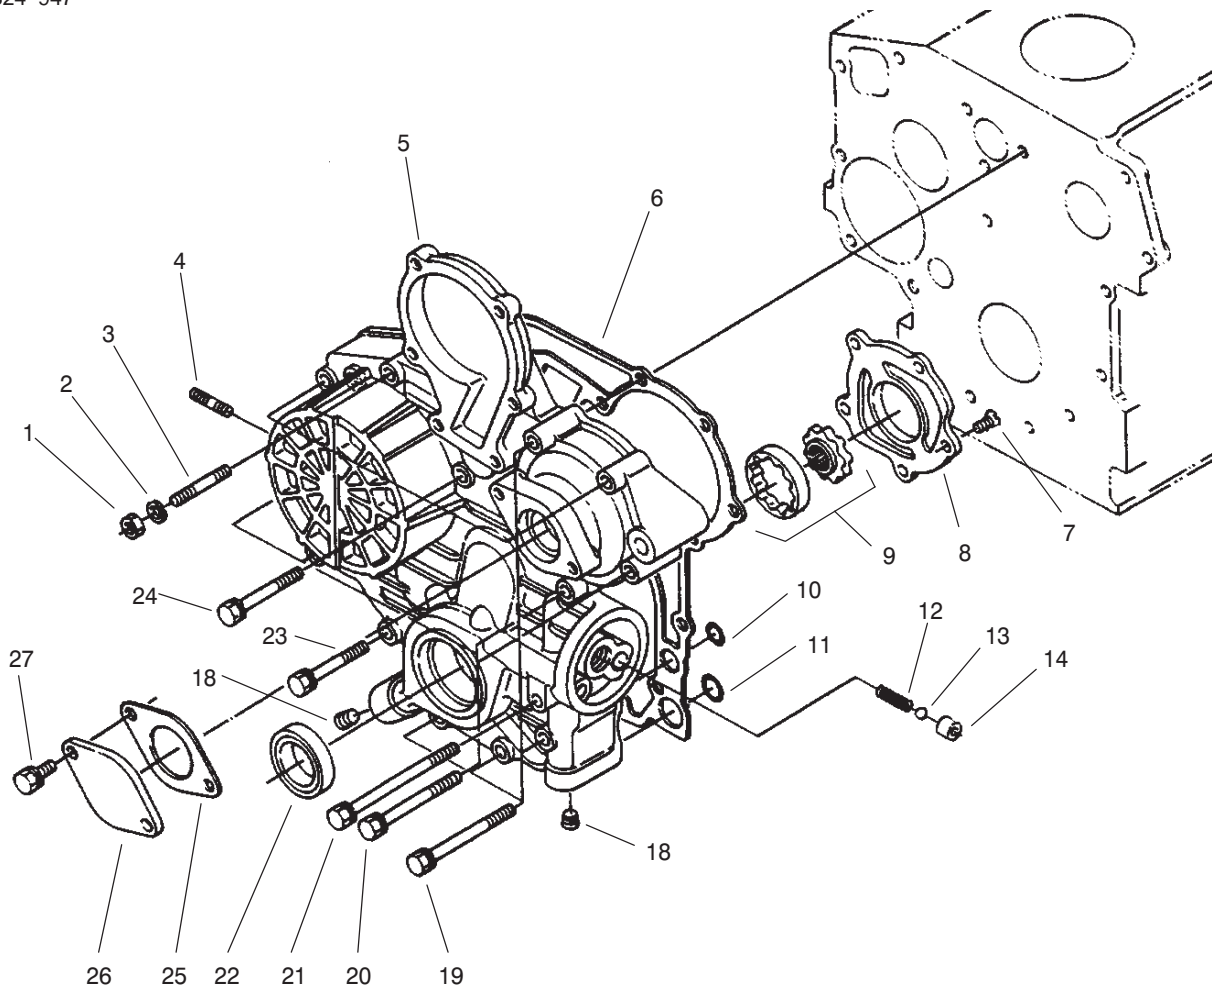 


T-2909

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7572	1	Nut
2	98-9367	1	Washer-Lock
3	98-9363	1	Stud
4	98-9362	2	Stud
5	99-8381	1	Asm-Case, Gear (Incl. Ref. #7-9, 12-14 & 18)
6	98-9633	1	Gasket-Gear Case
7	98-9592	5	Screw
8	98-9541	1	Cover-Oil Pump
9	98-9540	1	Asm-Rotor, Oil Pump
10	98-9372	2	O-Ring
11	98-7547	2	O-Ring
12	98-9544	1	Spring
13	98-9380	1	Ball
14	98-9543	1	Seal-Valve
18	98-9598	2	Plug
19	98-9356	2	Bolt
20	98-9355	6	Bolt
21	98-9586	1	Bolt
22	98-9482	1	Seal-Oil
23	98-9437	1	Bolt
24	98-7496	3	Bolt
25	98-9684	1	Gasket-Gear Case

Ref. No.	Part No.	Qty.	Description
26	98-9641	1	Cover
27	98-7692	2	Bolt

 PROTOTYPE

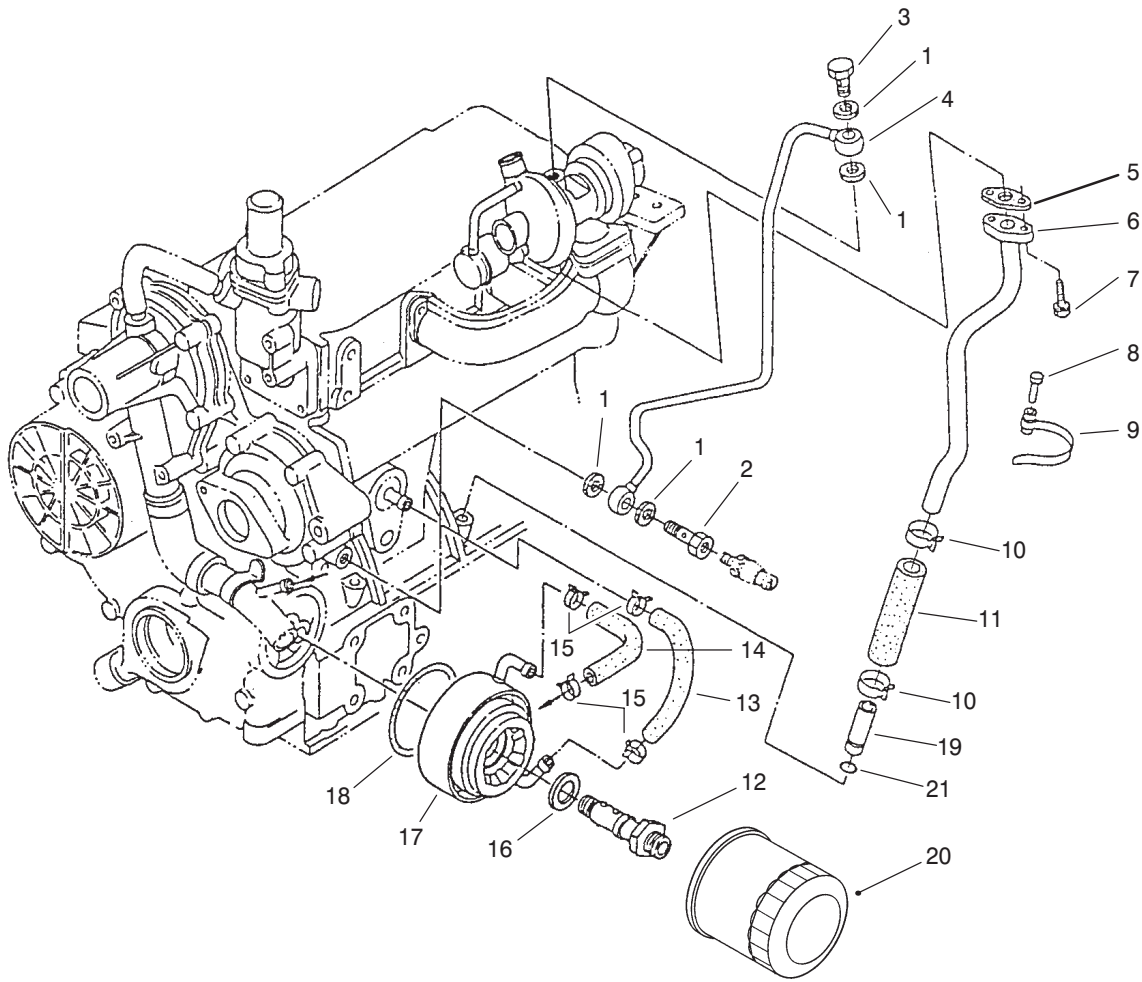


T-3079-1

Filter, Oil Cooler & Pipe Assembly

Ref. No.	Part No.	Qty.	Description
1	99-8346	4	Gasket
2	98-9417	1	Bolt-Eye Joint
3	98-9418	1	Bolt-Eye Joint
4	98-9419	1	Pipe-Oil
5	98-9435	1	Gasket
6	98-9461	1	Pipe-Oil
7	98-9587	2	Bolt
8	98-9591	1	Pin-Band
9	98-9601	1	Clamp-Pipe
10	98-9714	2	Clamp-Hose
11	98-9721	1	Pipe-Oil
12	98-9723	1	Asm-Holder
13	98-9724	1	Pipe-Cooler, Oil
14	98-9578	1	Pipe-Return, Water
15	98-9579	4	Band-Pipe
16	98-9727	1	Collar
17	98-9728	1	Asm-Cooler, Oil
18	98-9729	1	O-Ring
19	99-8383	1	Asm-Pipe, Oil (Incl. Ref. #21)
20	99-8384	1	Asm-Cartridge, Oil
21	98-9722	1	O-Ring

Ref. No.	Part No.	Qty.	Description

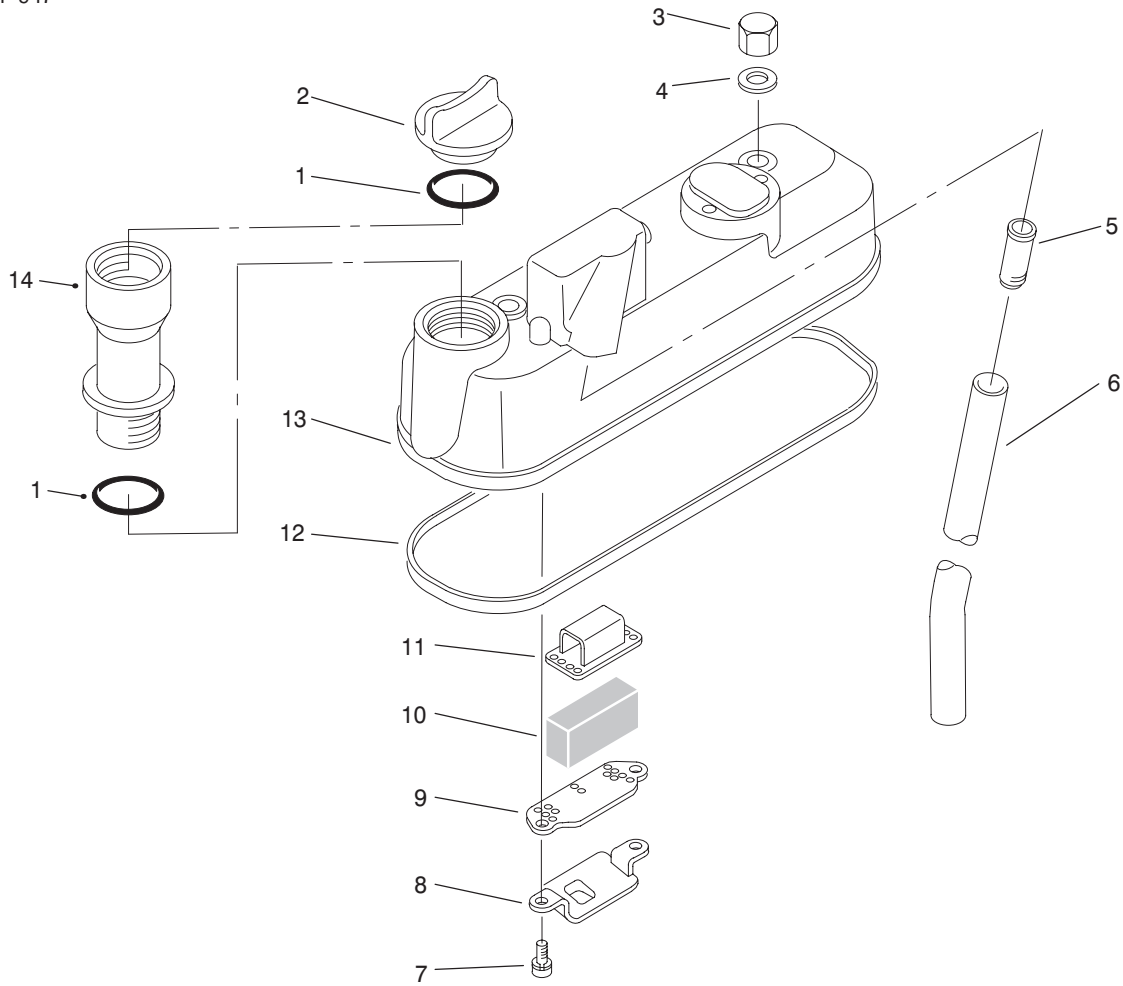 


T-2910-1

Head Cover Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7430	2	O-Ring
2	98-9449	1	Plug-Oil Filler
3	98-9455	3	Nut-Cap
4	98-9454	3	Gasket
5	98-9492	1	Joint-Breather Pipe
6	98-9491	1	Pipe-Breather
7	98-9364	2	Screw w/washer
8	98-9490	1	Oil Shield-Breather
9	98-9488	1	Plate-Breather Element
10	98-9493	1	Element-Breather
11	98-9489	1	Plate-Breather Element
12	98-9615	1	Gasket-Head Cover
13	98-9614	1	Asm-Cover, Cylinder Head (Incl. Ref. #5 & 7-12)
14	99-8349	1	Extension-Fill, Oil

Ref. No.	Part No.	Qty.	Description

 PROTOTYPE

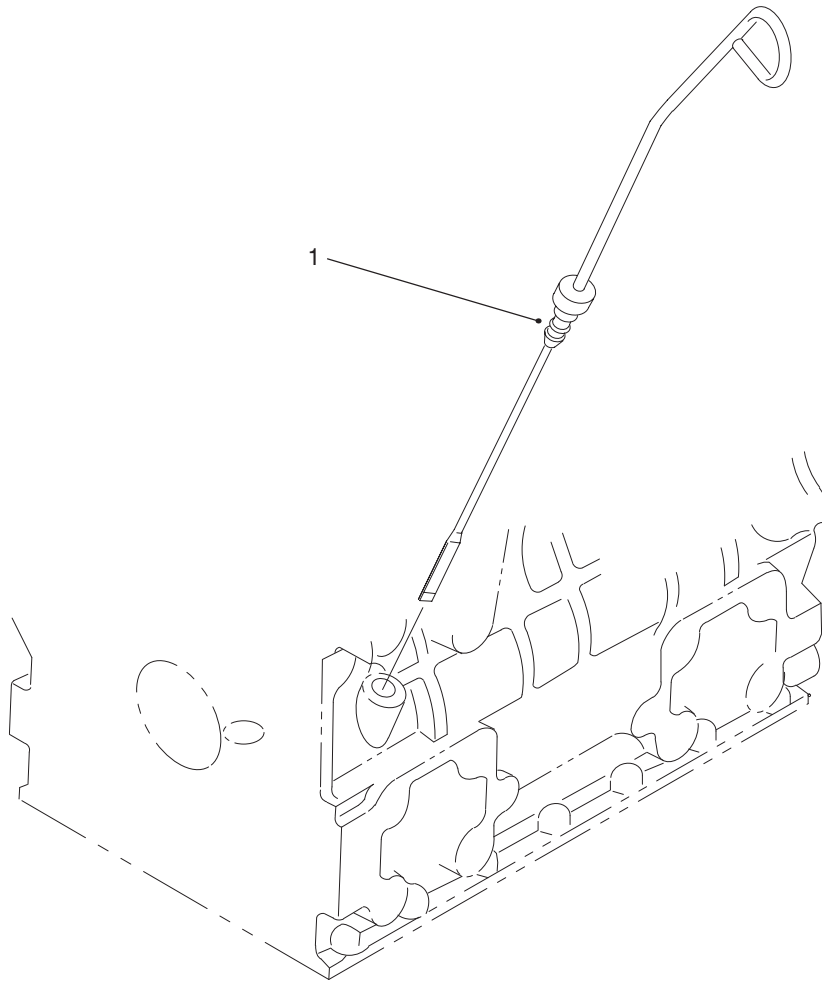


T-3094

Dipstick Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9627	1	Gauge-Oil

Ref. No.	Part No.	Qty.	Description
PROTOTYPE			

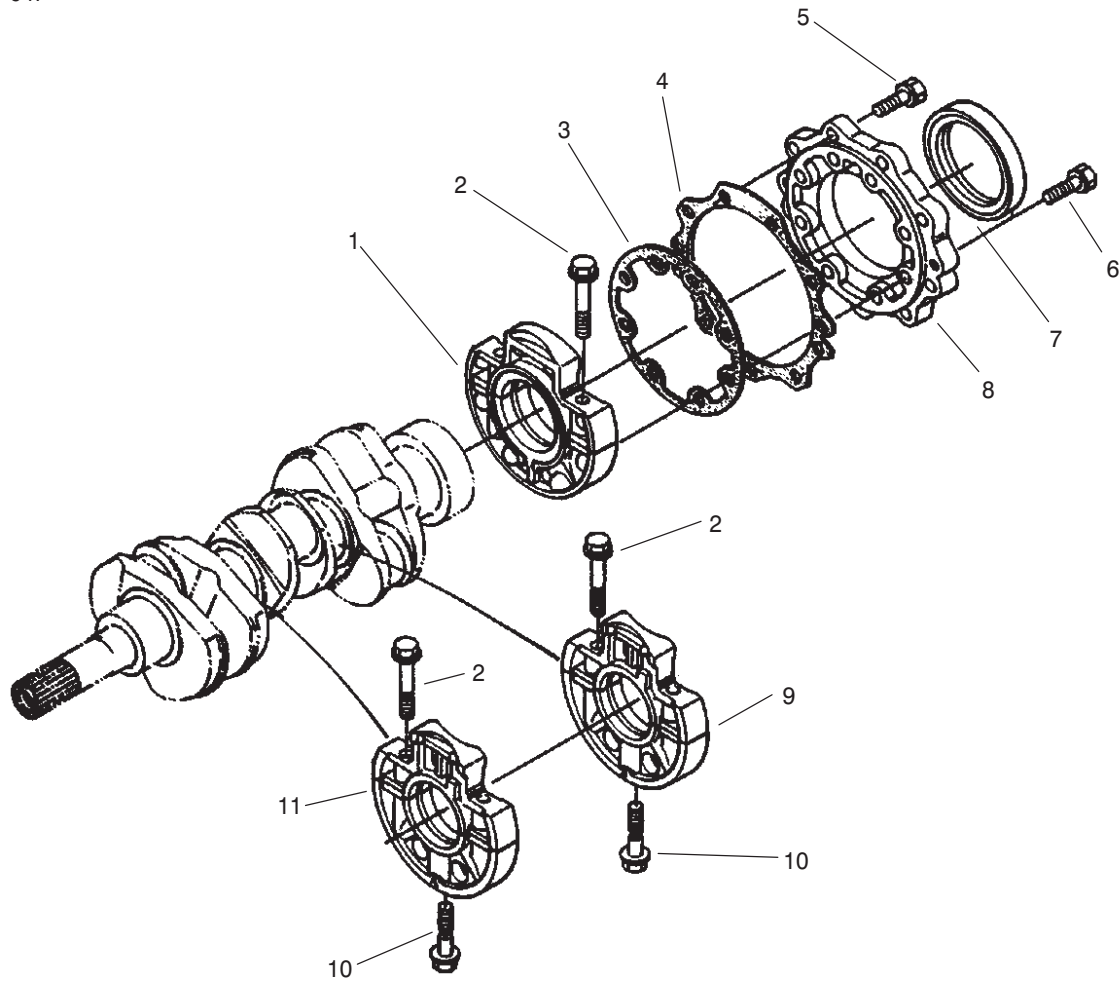 


T-2912

Main Bearing Case Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9480	1	Asm-Case, Main Bearing
2	98-9484	6	Bolt-Bearing Case
3	98-9634	1	Gasket-Bearing Case
4	98-9635	1	Gasket-Bearing Case Cover
5	98-7568	9	Bolt
6	98-9352	8	Bolt
7	98-9483	1	Seal-Oil
8	98-9487	1	Cover-Bearing Case
9	99-8360	1	Asm-Case, Main Bearing
10	98-9485	2	Bolt-Bearing Case
11	99-8361	1	Asm-Case, Main Bearing

Ref. No.	Part No.	Qty.	Description

 PROTOTYPE

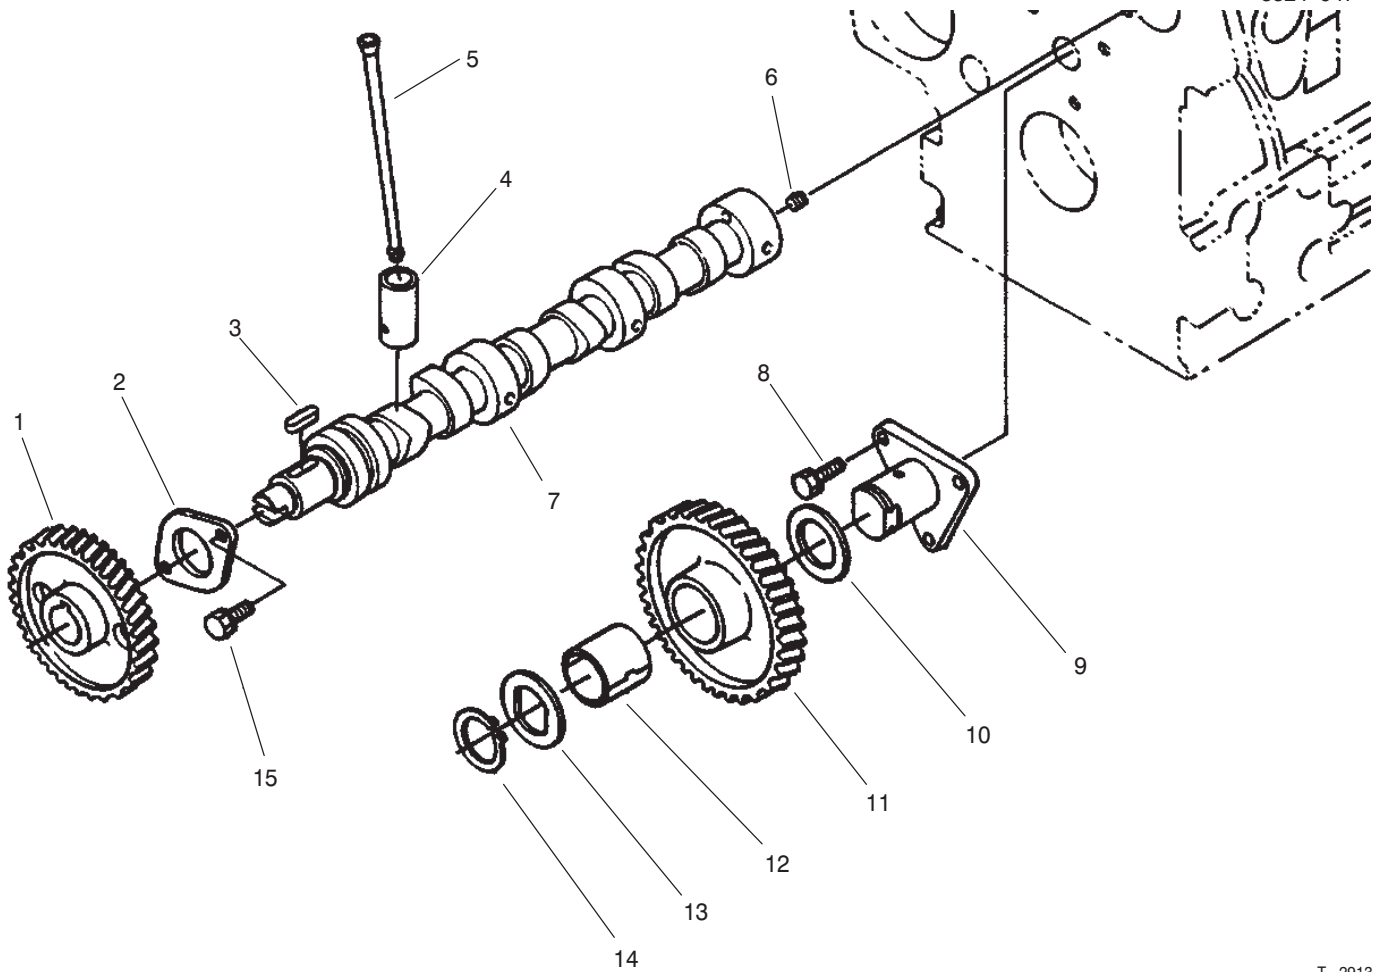


Camshaft Assembly

T-2913

Ref. No.	Part No.	Qty.	Description
1	98-9510	1	Stopper-Camshaft
3	98-9378	1	Key-Feather
4	98-9616	6	Tappet
5	98-9509	6	Push Rod
6	98-7449	1	Screw-Set
7	99-8362	1	Asm-Camshaft (Incl. Ref. #1-3, 6 & 15)
8	98-7692	3	Bolt
9	98-9533	1	Shaft-Gear, Idle
10	98-9535	1	Collar-Gear, Idle
11	98-9649	1	Asm-Gear, Idle (Incl. Ref. #12)
12	98-9650	1	Bushing-Gear, Idle
13	98-9536	1	Collar-Gear, Idle
14	98-9534	1	Clip-Circular, Idle Gear
15	98-9351	2	Bolt

Ref. No.	Part No.	Qty.	Description

 PROTOTYPE

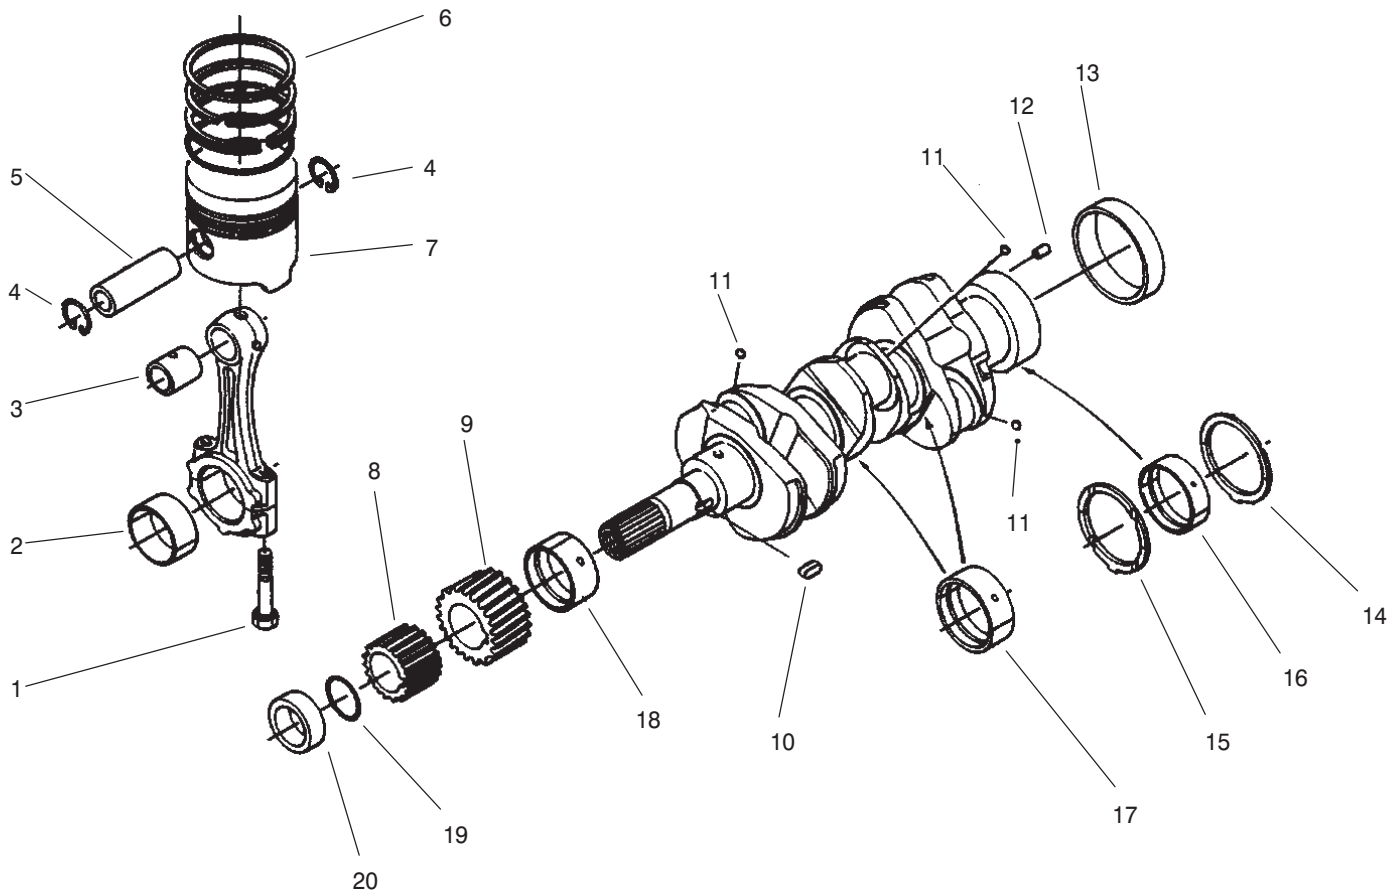


T-2914

Piston & Crankshaft Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9517	6	Bolt-Connecting Rod
2	98-9553	3	Metal-Crankpin (Std)
2	98-9519	3	Metal-Crankpin (0.2mm Undersize)
2	98-9520	3	Metal-Crankpin (0.4mm Undersize)
3	98-9515	3	Bushing-Piston Pin
4	98-9514	6	Clip-Circular, Piston Pin
5	98-9513	3	Pin-Piston
6	98-9551	3	Asm-Piston Ring (Std)
6	98-9619	3	Asm-Piston Ring (0.5mm Undersize)
7	98-9550	3	Piston (Std)
7	98-9470	3	Piston (0.5mm Undersize)
8	98-9542	1	Gear-Oil Pump Drive
9	98-9532	1	Gear-Crankshaft
10	98-9666	1	Key
11	98-7473	3	Ball
12	98-9375	1	Pin-Straight
13	98-9522	1	Sleeve-Crankshaft
14	98-9413	2	Metal-Side (Std)

Ref. No.	Part No.	Qty.	Description
14	98-9414	2	Metal-Side (0.2mm Oversize)
14	98-9415	2	Metal-Side (0.4mm Oversize)
15	98-9688	2	Metal-Side (Std)
15	98-9689	2	Metal-Side (0.2mm Oversize)
15	98-9690	2	Metal-Side (0.4mm Oversize)
16	98-9556	1	Metal-Crankshaft (Std)
16	98-9526	1	Metal-Crankshaft (0.2mm Undersize)
16	98-9527	1	Metal-Crankshaft (0.4mm Undersize)
17	98-9555	2	Metal-Crankshaft (Std Set)
17	98-9530	2	Metal-Crankshaft (0.2mm Undersize Set)
17	98-9531	2	Metal-Crankshaft (0.4mm Undersize Set)
18	98-9554	1	Metal-Crankshaft (Std)

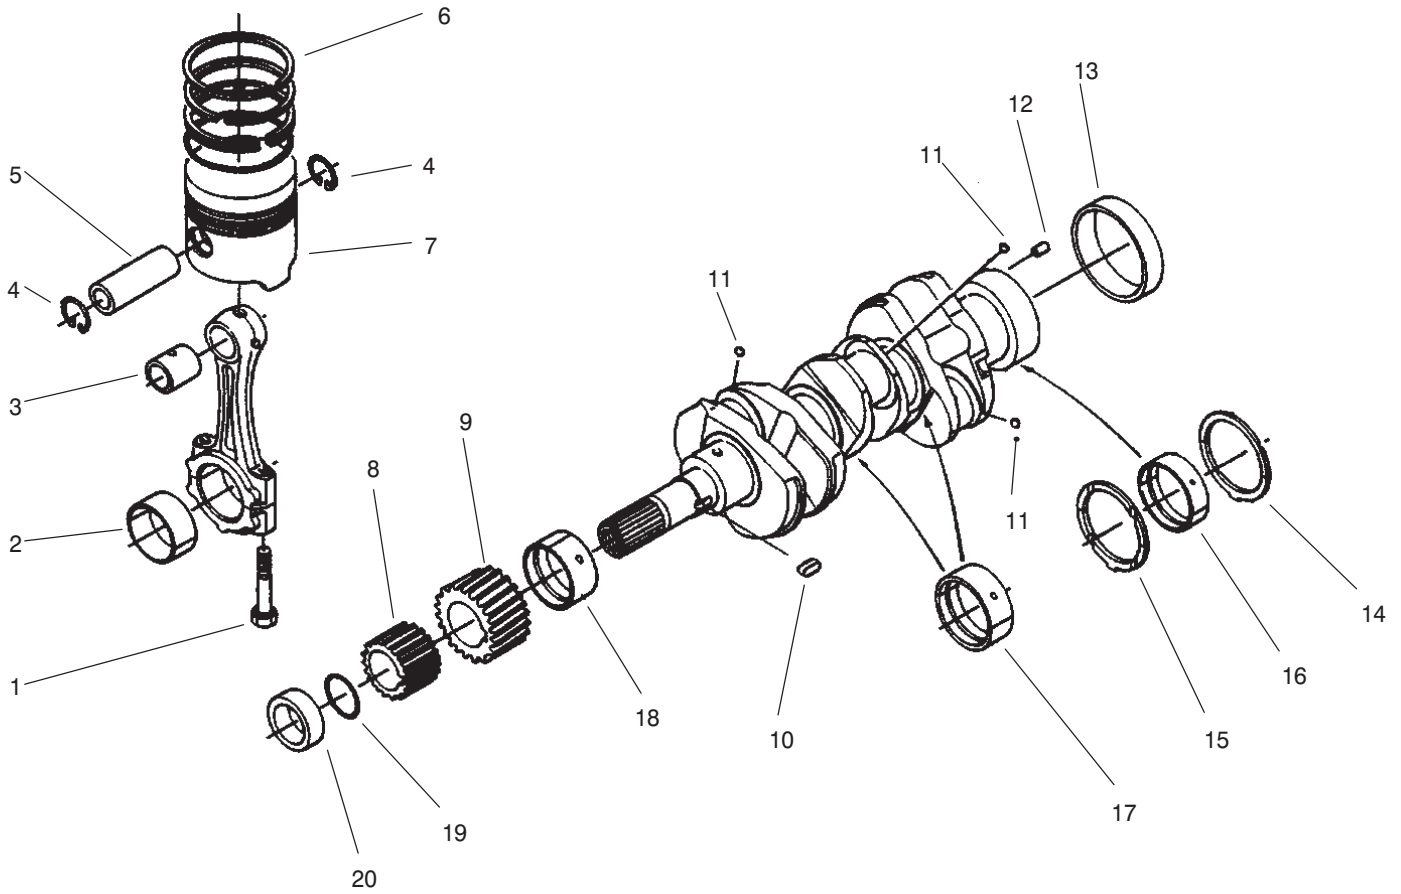 


T-2914

Piston & Crankshaft Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
18	98-9528	1	Metal-Crankshaft (0.2mm Undersize)
18	98-9529	1	Metal-Crankshaft (0.4mm Undersize)
19	98-9373	1	O-Ring
20	98-9521	1	Collar-Crankshaft
*	98-9552	3	Asm-Rod, Connecting (Incl. Ref. #1-3)
*	98-9642	1	Asm-Crankshaft (Incl. Ref. #8-13)

Ref. No.	Part No.	Qty.	Description

 PROTOTYPE

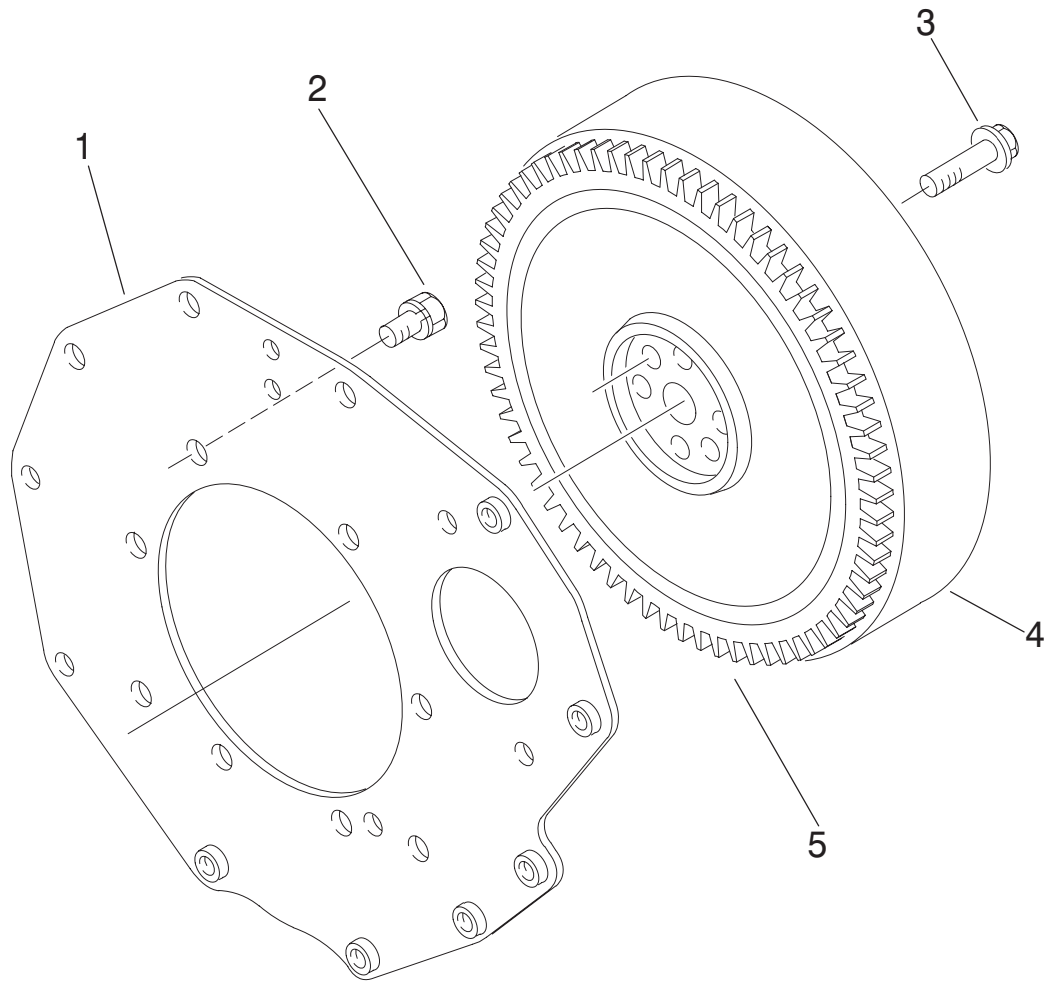


T-2915

Flywheel Asssembly

Ref. No.	Part No.	Qty.	Description
1	98-9486	1	Plate-End, Rear
2	98-9392	8	Bolt
3	98-9537	6	Bolt-Flywheel
4	98-9691	1	Asm-Flywheel (Incl. Ref. #5)
5	98-9394	1	Gear-Ring

Ref. No.	Part No.	Qty.	Description

 PROTOTYPE

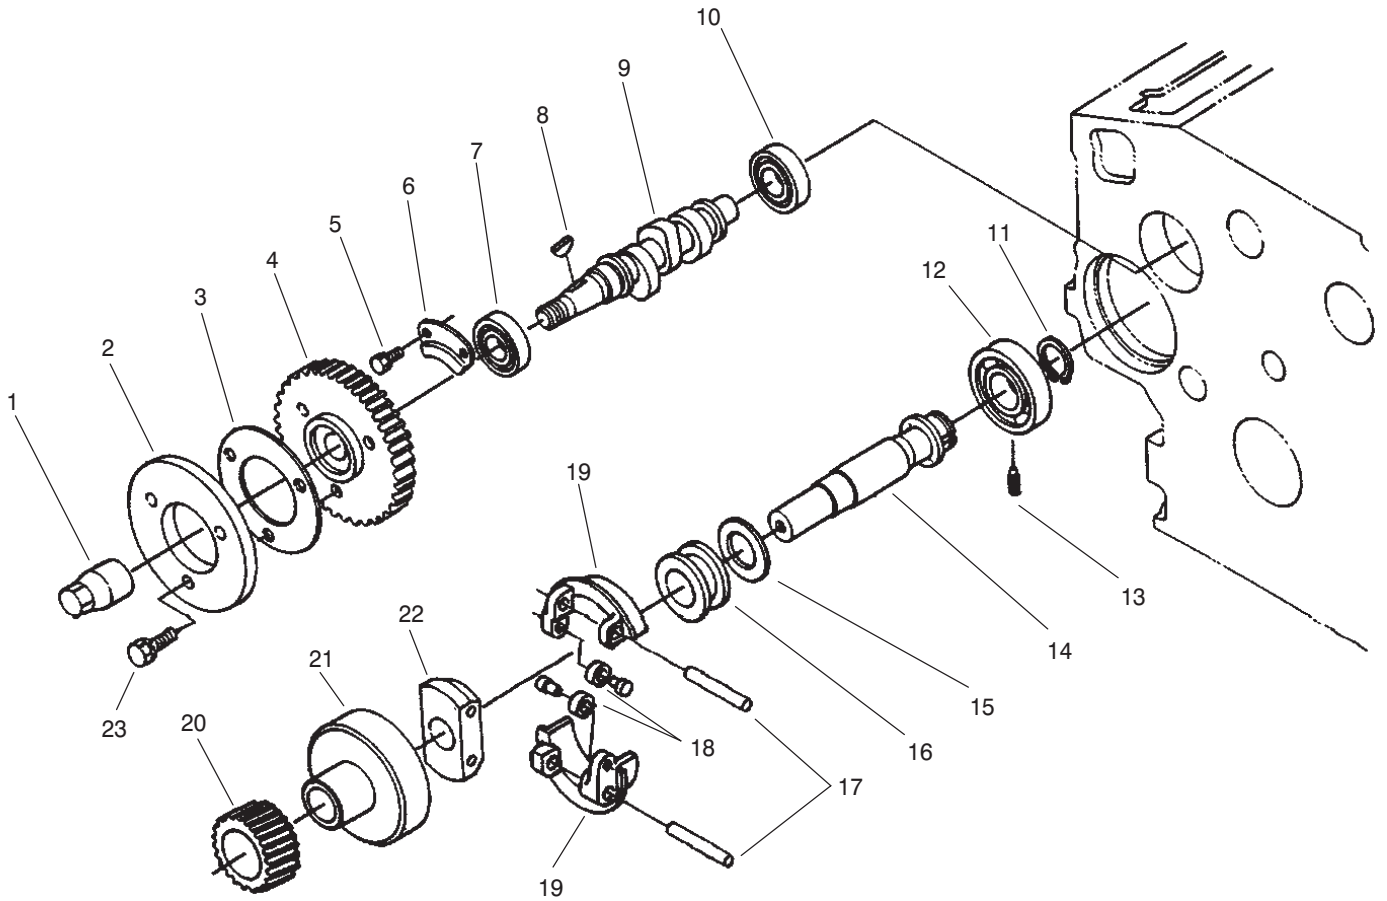


T-2916

Fuel Camshaft Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9590	1	Nut-Cap
2	98-9547	1	Cam-Fuel
3	98-9548	1	Washer
4	98-9669	1	Gear-Injection Pump
5	98-9350	2	Bolt
6	98-9511	1	Stopper-Fuel, Camshaft
7	98-9383	1	Bearing-Ball
8	98-9595	1	Key-Woodruff
9	98-9459	1	Camshaft-Fuel
10	98-9382	1	Bearing-Ball
11	98-9657	1	Clip-Circular, Gov. Shaft
12	98-9381	1	Bearing-Ball
13	98-9565	1	Screw-Set
14	98-9644	1	Asm-Shaft, Governor (Incl. Ref. #12 & 14-22)
15	98-9564	1	Washer-Thrust
16	98-9563	1	Sleeve-Governor
17	98-9560	2	Shaft-Governor Weight
18	98-9692	2	Roller
19	98-9559	2	Asm-Weight, Governor
20	98-9673	1	Gear-Governor
21	98-9562	1	Holder-Gear, Governor

Ref. No.	Part No.	Qty.	Description
22	98-9561	1	Holder-Gear, Governor
23	98-7605	3	Bolt

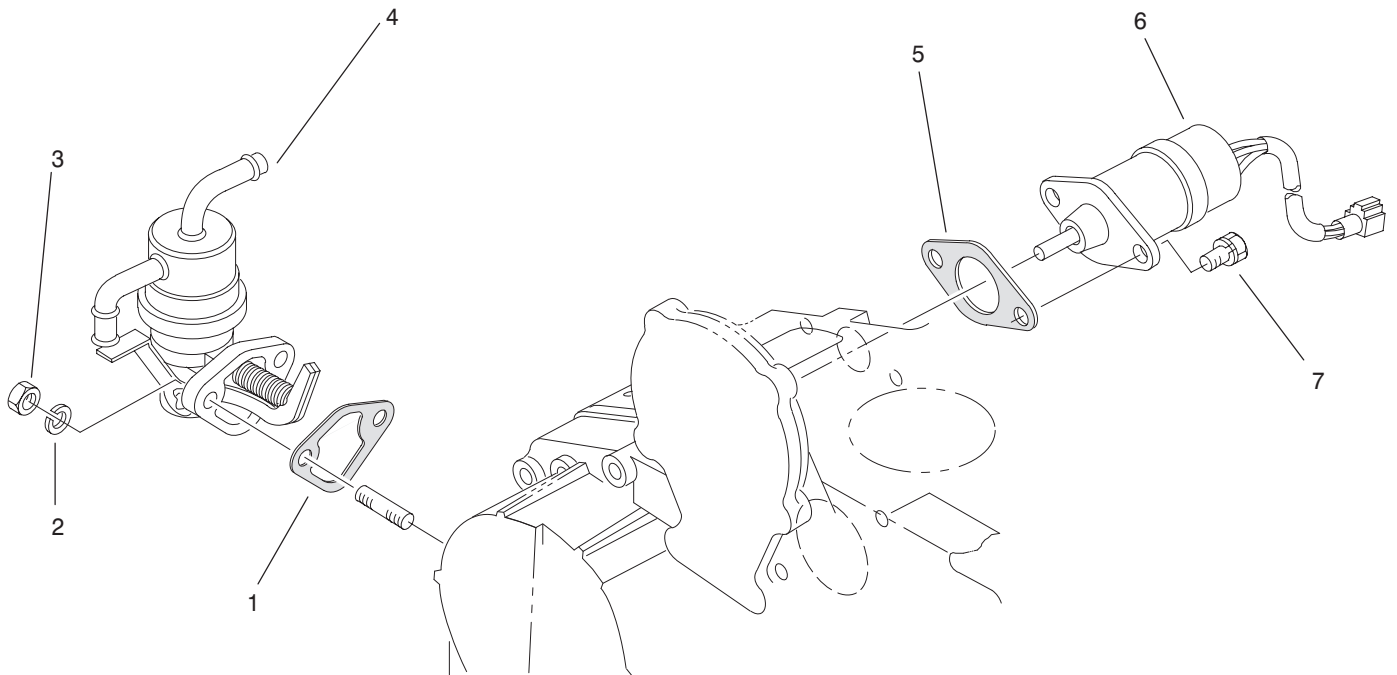 


T-2918

Stop Solenoid & Fuel Pump Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9636	1	Gasket-Fuel Pump
2	98-9367	2	Washer-Lock
3	98-7572	2	Nut
4	98-9677	1	Asm-Pump, Fuel
5	98-9683	1	Gasket-Solenoid Cover
6	98-9693	1	Solenoid-Stop
7	98-9351	2	Bolt

Ref. No.	Part No.	Qty.	Description

 PROTOTYPE

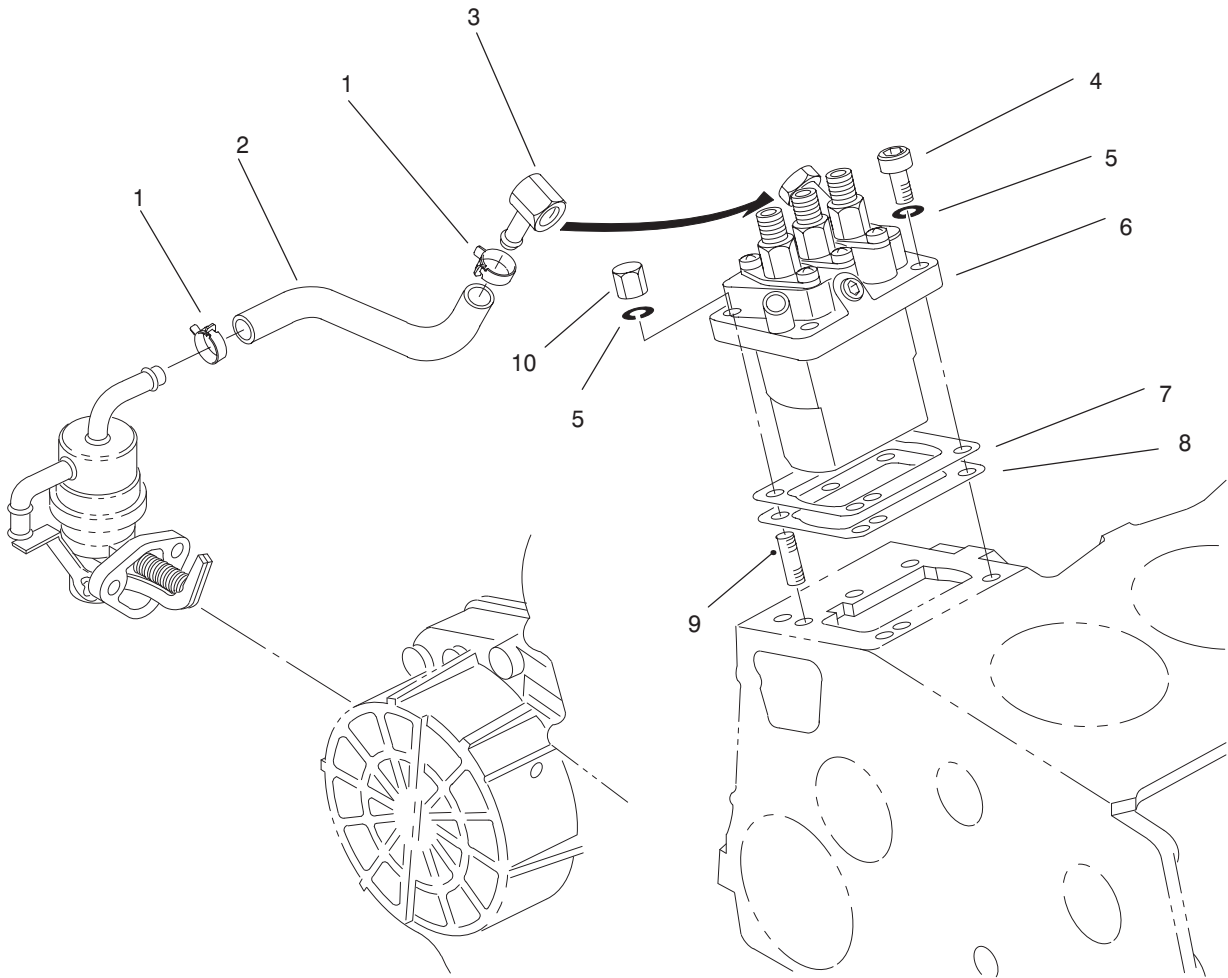


T-2919

Injection Pump Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9545	2	Band-Pipe
2	98-9384	1	Tube-Fuel
3	98-9596	1	Joint-Eye
4	98-9361	2	Bolt
5	98-9367	4	Washer-Lock
6	98-9643	1	Asm-Pump, Injection
7	98-9456	1	Shim-Injection (0.2mm)
7	98-9457	1	Shim-Injection (0.25mm)
8	98-9458	1	Shim-Injection (0.30mm)
9	98-9438	2	Stud
10	98-9440	2	Nut-Cap
*	98-9467	1	Asm-Pipe, Fuel (Incl. Ref. #1 & 2)


Ref. No.	Part No.	Qty.	Description

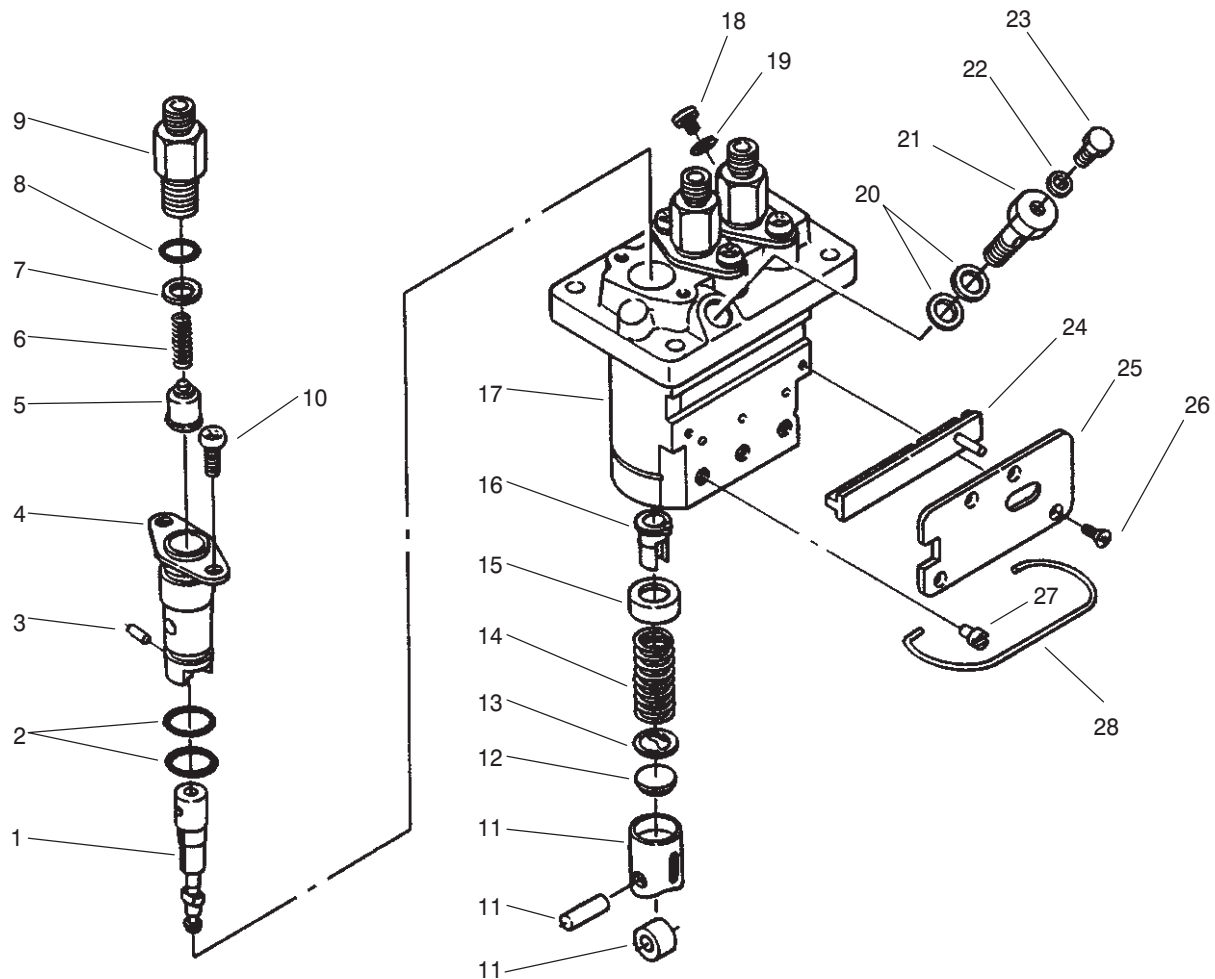 

T-2920

Injection Pump Assembly No. 98-9643

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9462	3	Element-Pump	25	98-9465	1	Plate
2	98-9423	6	O-Ring	26	98-9442	4	Screw-Countersunk Hd.
3	98-9443	3	Pin-Joint	27	98-9426	3	Pin-Guide, Tappet
4	98-9434	3	Flange-Sleeve	28	98-9450	1	Pin-Clamp
5	98-9421	3	Valve-Delivery				
6	98-9424	3	Spring-Valve, Delivery				
7	98-9425	3	Gasket-Valve, Delivery				
8	98-9447	3	O-Ring				
9	98-9652	3	Holder-Valve, Delivery				
10	98-9452	6	Screw				
11	98-9422	3	Asm-Tappet				
12	98-9433	3	Shim				
13	98-9429	3	Seat-Spring, Lower				
14	98-9428	3	Spring-Plunger				
15	98-9427	3	Seat-Spring, Upper				
16	98-9432	3	Sleeve-Control				
17	98-9643	1	Asm-Pump, Injection (Incl. Ref. #1-16 & 18-28)				
18	98-9466	1	Plug				
19	98-9451	1	Gasket				
20	98-9445	2	Gasket				
21	98-9464	1	Bolt-Joint				
22	98-9446	1	Gasket				
23	98-9430	1	Screw				
24	98-9463	1	Rack-Control				

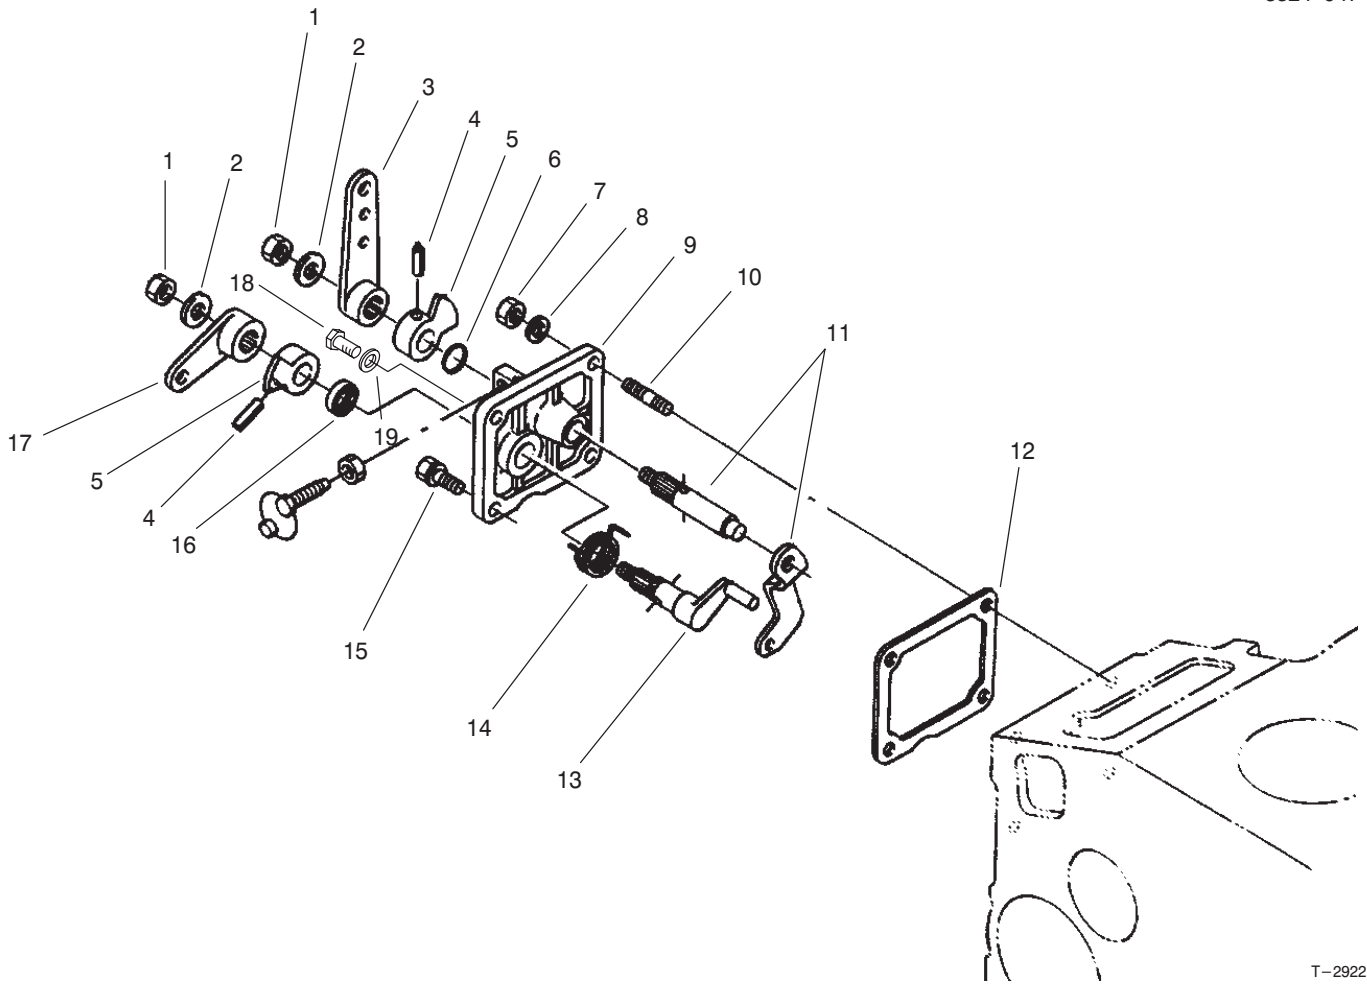 


T-2922

Speed Control Plate Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9589	2	Nut
2	98-9594	2	Washer-Flat
3	98-9662	1	Lever-Speed Control
4	98-7602	2	Pin-Spring
5	98-9572	2	Lever-Speed Control
6	98-9371	1	O-Ring
7	98-7572	2	Nut
8	98-9367	2	Washer-Lock
9	98-9661	1	Asm-Plate, Control (Incl. Ref. #1-6, 11, 13, 14, 16 & 17)
10	98-9362	2	Stud
11	98-9658	1	Asm-Lever, Governor
12	98-9637	1	Gasket
13	98-9664	1	Shaft-Stop Lever
14	98-9472	1	Spring-Return
15	98-7692	1	Bolt
16	98-7601	1	Seal-Oil
17	98-9663	1	Lever-Engine Stop
18	99-8348	1	Bolt
19	98-7654	1	Gasket

Ref. No.	Part No.	Qty.	Description

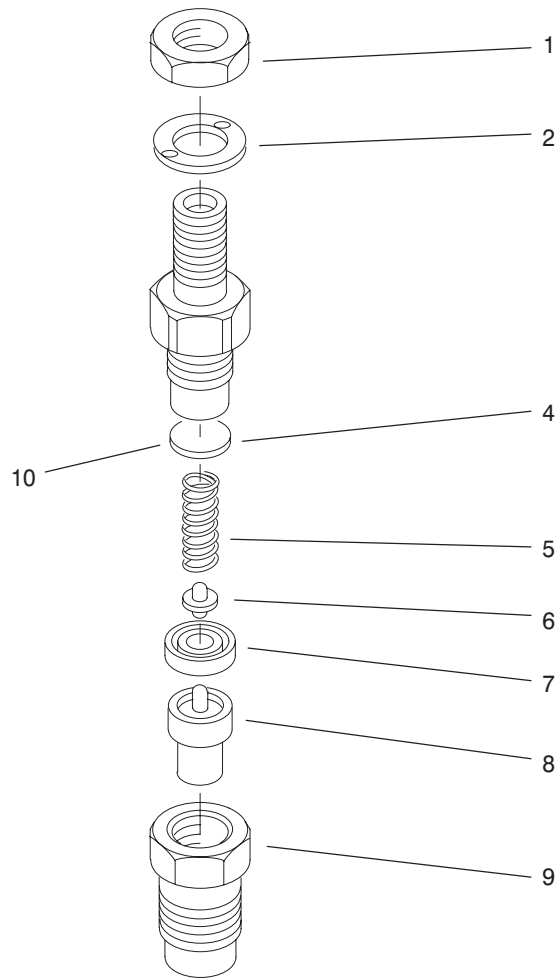 


T-2924

Nozzle Holder Assembly No. 98-9468

Ref. No.	Part No.	Qty.	Description
1	99-8301	3	Nut
2	99-8307	3	Washer
4	99-8302	3	Washer-Adjusting
5	99-8303	3	Spring-Nozzle
6	99-8305	3	Push Rod
7	99-8304	3	Piece-Distance
8	99-8308	3	Piece-Nozzle
9	99-8306	3	Nut-Nozzle
10	99-8309	3	Asm-Washer, Adjusting
*	99-8310	3	Washer-Adj. (0.10mm)
*	99-8311	3	Washer-Adj. (0.20mm)
10	99-8312	3	Washer-Adj. (0.30mm)
*	99-8313	3	Washer-Adj. (0.40mm)
*	99-8314	3	Washer-Adj. (0.50mm)
*	99-8315	3	Washer-Adj. (0.52mm)
*	99-8316	3	Washer-Adj. (0.54mm)
*	99-8317	3	Washer-Adj. (0.56mm)
*	99-8318	3	Washer-Adj. (0.58mm)
*	99-8319	3	Washer-Adj. (0.80mm)
*	98-9468	3	Asm-Holder, Nozzle (Incl. Ref. #1-9)

Ref. No.	Part No.	Qty.	Description

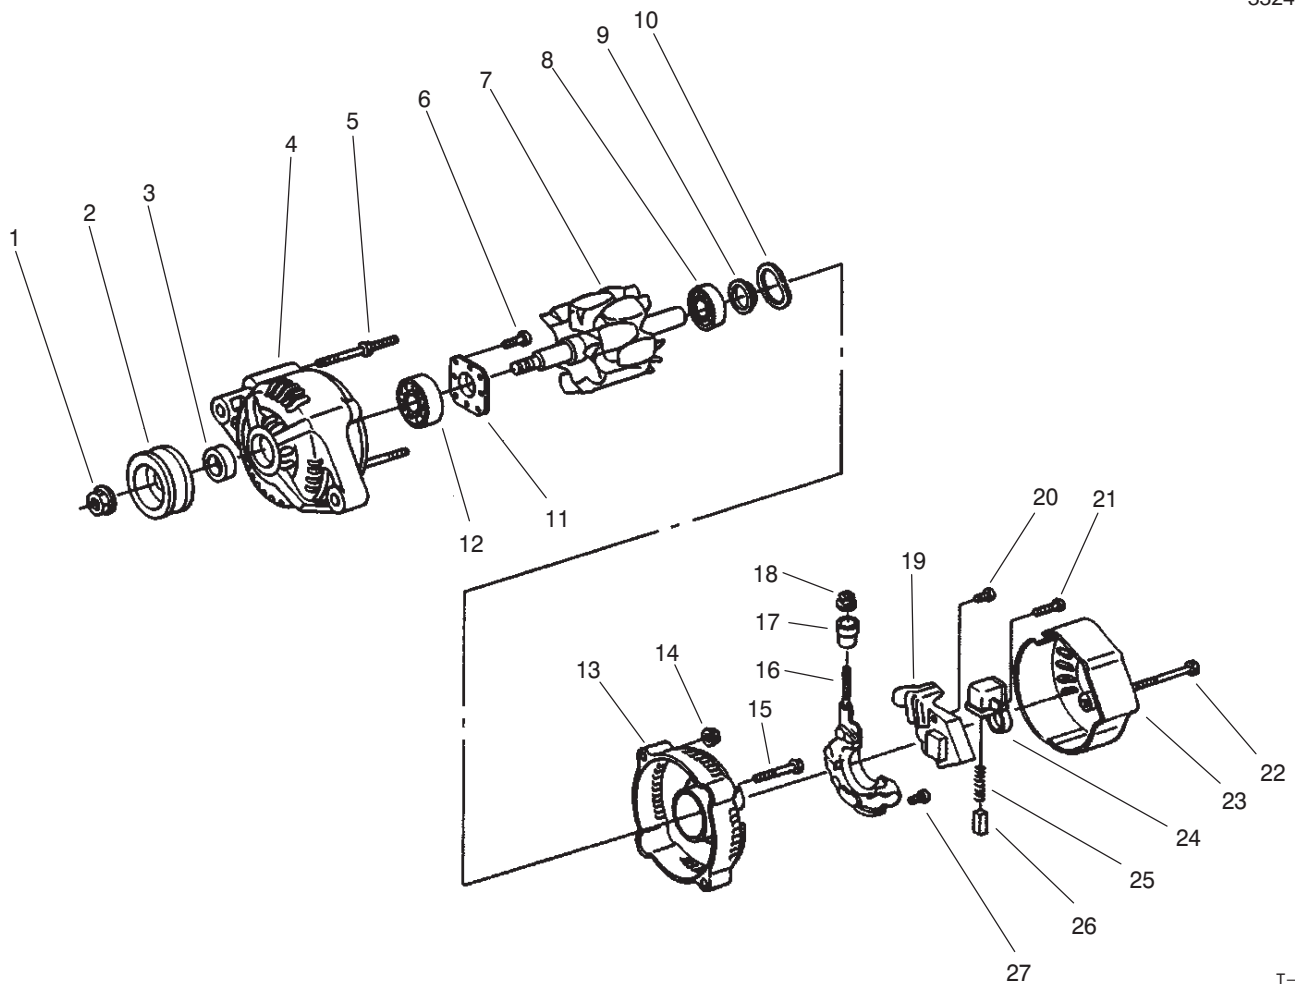 


T-2927

Alternator Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7708	1	Nut
2	98-9453	1	Pulley-Dynamo
3	98-7709	1	Collar
4	98-7714	1	Frame-Drive End
5	98-7717	2	Bolt-Through
6	98-7716	4	Screw-RH
7	98-7710	1	Rotor
8	98-7712	1	Bearing-Ball
9	98-7711	1	Cover-Bearing
10	98-7713	1	Washer-Thrust
11	98-7715	1	Plate-Retainer
12	98-7718	1	Bearing-Ball
13	98-7719	1	Frame-End
14	98-7730	2	Nut
15	98-7731	2	Bolt
16	98-7721	1	Asm-Rectifier
17	98-7722	1	Bushing-Insulation
18	98-7732	1	Nut
19	98-7733	1	Asm-Regulator
20	98-7726	2	Screw-RH
21	98-7728	1	Screw-RH
22	98-7729	3	Bolt
23	98-7720	1	Cover-End
24	98-7723	1	Holder-Brush
25	98-7725	2	Spring-Brush
26	98-7724	2	Brush

Ref. No.	Part No.	Qty.	Description
27	98-7727	6	Screw-RH
*	98-9474	1	Asm-Alternator (Incl. Ref. #1-27)

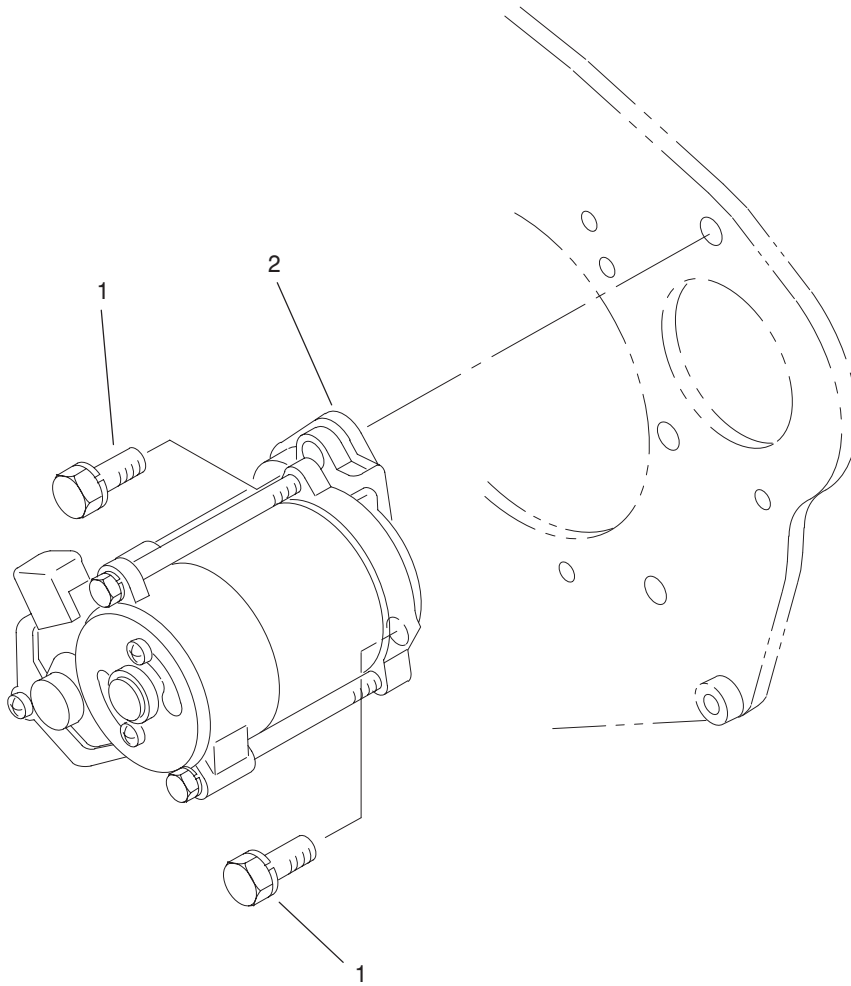 


T-2928

Starter Mount Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7697	2	Bolt
2	98-9705	1	Asm-Starter

Ref. No.	Part No.	Qty.	Description

 
PROTOTYPE

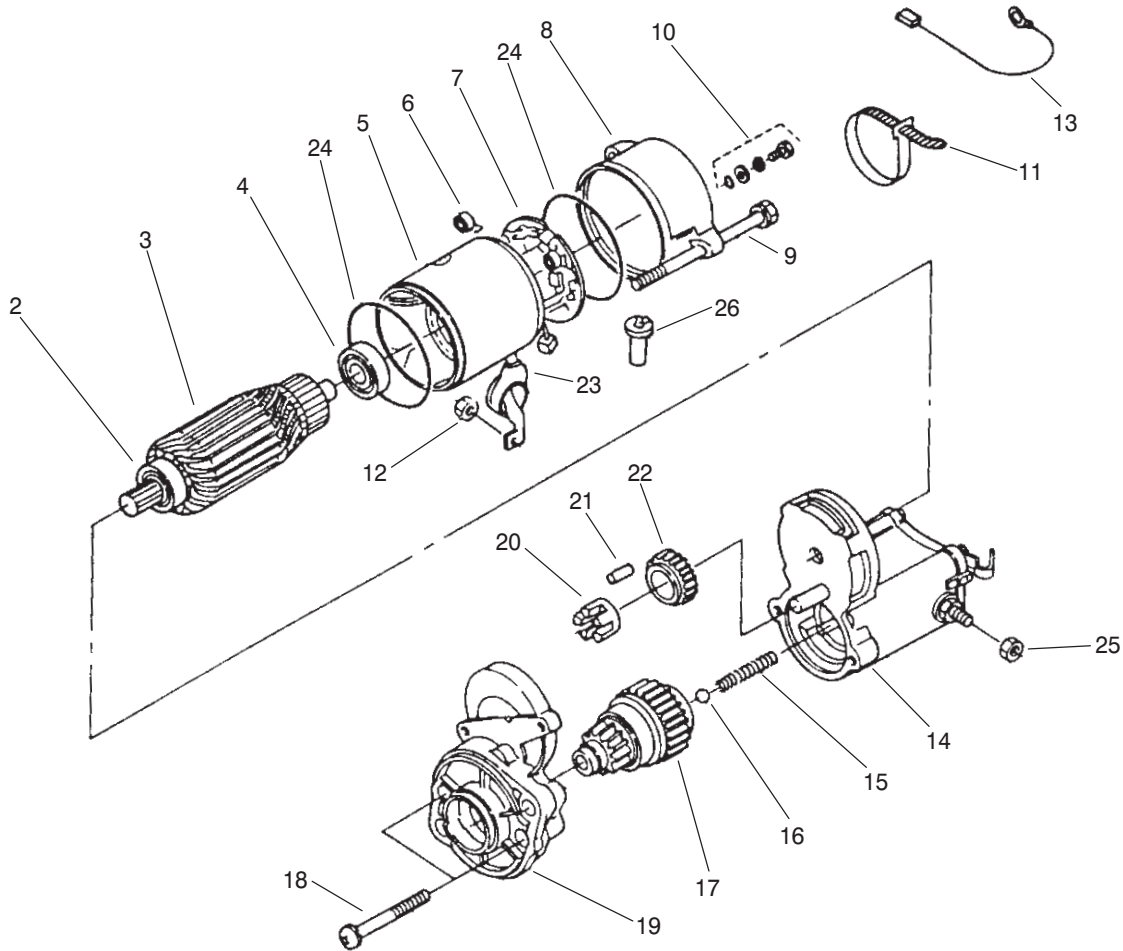

T-3081

Starter Assembly No. 98-9705


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	98-7743	1	Bearing-Ball	26	98-7759	1	Pipe-Drain
3	98-7742	1	Asm-Armature	*	98-9705	1	Asm-Starter
4	98-7744	1	Bearing-Ball			1	(Incl. Ref. #2-26)
5	98-7741	1	Asm-Yoke				
6	98-7750	4	Spring-Brush				
7	98-7749	1	Asm-Holder, Brush				
8	99-8370	1	(Incl. Ref. #6)				
9	98-9549	2	Frame-End				
10	98-7758	2	Bolt				
11	98-9712	1	Asm-Bolt				
12	99-8371	1	Band-Cover				
13	98-9711	1	Nut-Hex.				
14	99-8372	1	Cord-Stop, Solenoid				
15	98-7754	1	Asm-Switch, Magnetic				
16	98-7755	1	Spring				
17	99-8373	1	Ball				
18	98-7756	2	Clutch				
19	99-8374	1	Bolt				
20	98-7752	1	Frame-Drive End				
21	98-7753	5	Retainer				
22	98-7751	1	Roller				
23	99-8375	1	Gear				
24	98-7757	2	Cover-Cord				
25	99-8376	1	O-Ring				
			Nut				

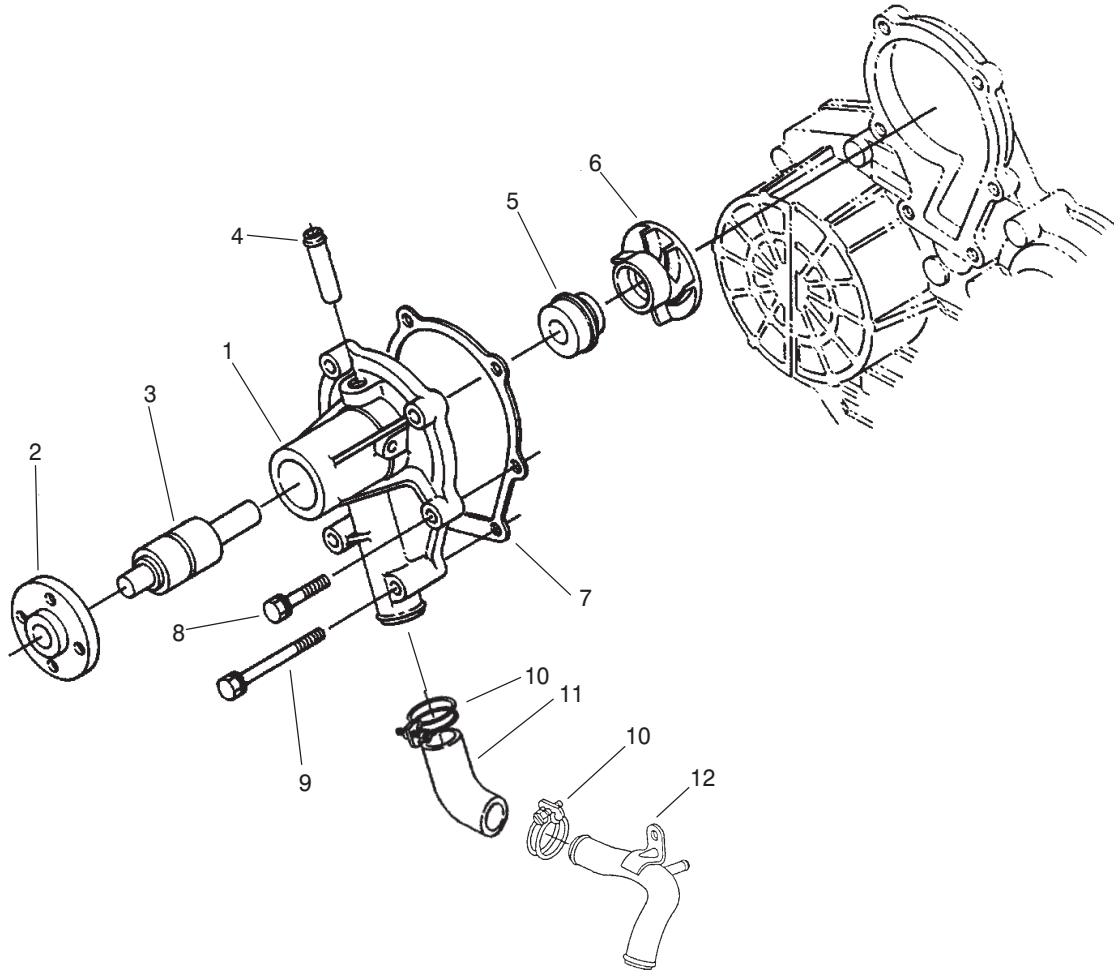 

T-2931

Water Pump Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9575	1	Asm-Pump, Water (Incl. Ref. #2-6)				
2	98-9582	1	Flange-Pump, Water				
3	98-9583	1	Bearing				
4	98-9577	1	Pipe-Return, Water				
5	98-9576	1	Asm-Seal				
6	98-9581	1	Impeller-Water				
7	98-9632	1	Gasket-Pump, Water				
8	98-9353	1	Bolt				
9	98-9357	4	Bolt				
10	98-9717	2	Clamp				
11	98-9574	1	Pipe-Water				
12	99-8379	1	Pipe-Water				

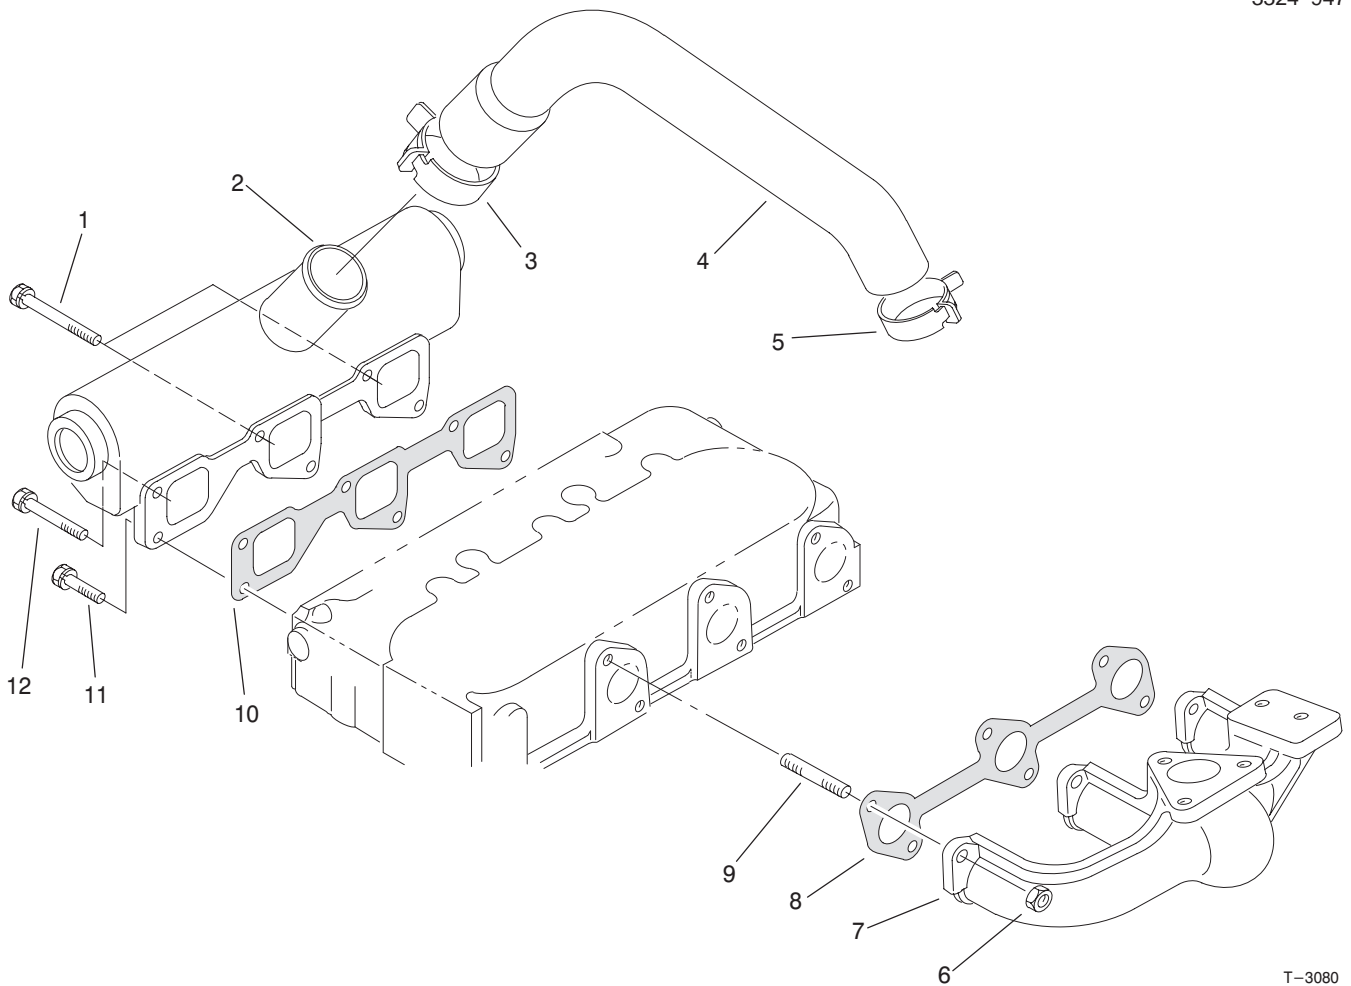 


T-3080

Exhaust Manifold & Gasket Assembly

Ref. No.	Part No.	Qty.	Description
1	99-8320	2	Bolt
2	99-8321	1	Manifold-Inlet
3	99-8322	1	Band-Pipe
4	99-8323	1	Hose-Inlet
5	99-8324	1	Band-Pipe
6	98-9665	6	Nut
7	99-8326	1	Manifold-Exhaust
8	99-8327	1	Gasket-Exhaust
9	98-9588	6	Stud
10	99-8329	1	Gasket-Intake
11	98-7568	3	Bolt
12	98-7496	1	Bolt

Ref. No.	Part No.	Qty.	Description

 PROTOTYPE

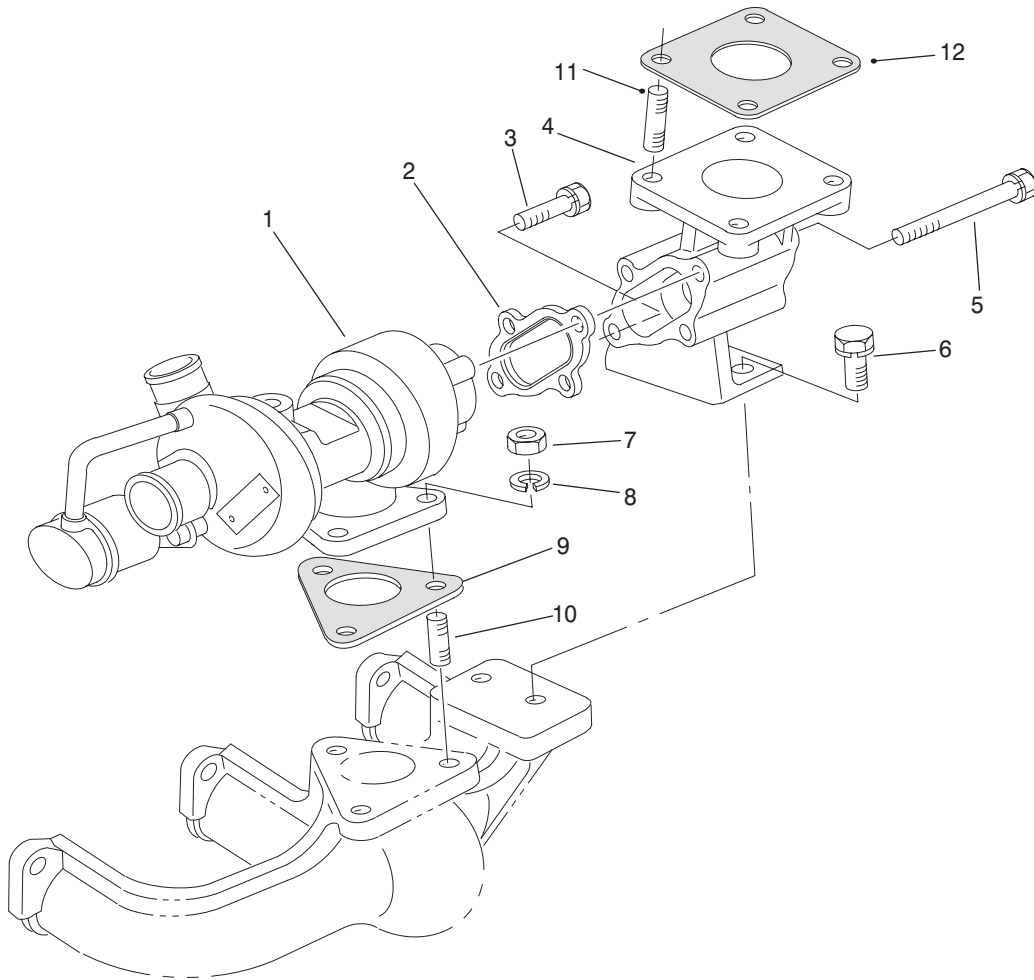

T-3078

Turbo Charger Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-8332	1	Asm-Charger, Turbo				
2	99-8333	1	Gasket				
3	99-8334	1	Bolt				
4	99-8335	1	Flange-Muffler				
5	99-8336	3	Bolt				
6	98-7610	2	Bolt				
7	98-7534	3	Nut				
8	99-8339	3	Washer-Lock				
9	99-8340	1	Gasket				
10	99-8341	3	Stud				
11	99-8342	4	Stud				
12	99-8343	1	Gasket-Muffler				

PROTOTYPE



PROTOTYPE