



Z147

Z-Master[®] with 44" Side Discharge Mower Model No. 74176—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page
Front Frame Assembly	4
Height of Cut Handle and Plates	6
Main Frame	7
Fuel System Assembly	8
Parking Brake System Assembly	9
Motion Control System Assembly	10
Hydraulic System Assembly	11
Pump, Idler and Belt Assembly	12
Engine and Clutch Assembly	13
44" Deck Assembly	14
44" Deck Spindle Assembly	15
Idler, Pulleys/Lift Strut, Chains Assembly	16
Electrical System Assembly	17
Cylinder/Crankcase Assembly Kawasaki FH500V–AS10	18
Cylinder/Crankcase Assembly Kawasaki FH500V–AS10	19
Valve/Camshaft Assembly Kawasaki FH500V–AS10	20
Valve/Camshaft Assembly Kawasaki FH500V–AS10	21
Piston/Crankshaft Assembly Kawasaki FH500V–AS10	22

Description	Page
Lubrication–Equipment Assembly Kawasaki FH500V–AS10	23
Cooling–Equipment Assembly Kawasaki FH500V–AS10	24
Cooling–Equipment Assembly Kawasaki FH500V–AS10	25
Electric–Equipment Assembly Kawasaki FH500V–AS10	26
Electric–Equipment Assembly Kawasaki FH500V–AS10	27
Control–Equipment Assembly Kawasaki FH500V–AS10	28
Control–Equipment Assembly Kawasaki FH500V–AS10	29
Carburetor Assembly Kawasaki FH500V–AS10	30
Carburetor Assembly Kawasaki FH500V–AS10	31
Air–Filter/Muffler Assembly Kawasaki FH500V–AS10	32
Fuel–Tank/Fuel–Valve Assembly Kawasaki FH500V–AS10	33
Starter/Decals Kawasaki FH500V–AS10	34

Accessories

Description	Model / Part No.
Recycler Kit	59220
Bahaia Mulching Kit	59226
High Sails Blade (3 required for improved bagging)	55–4940
Bagging System	79460
Grass Gobbler	30131

Description	Model / Part No.
Striping Kit	30121
High Suspension Seat	74210
Heat Shield Kit	99–8921
Oil Drain Valve	99–8923
Hitch Kit	99–8924


PROTOTYPE

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

PROTOTYPE

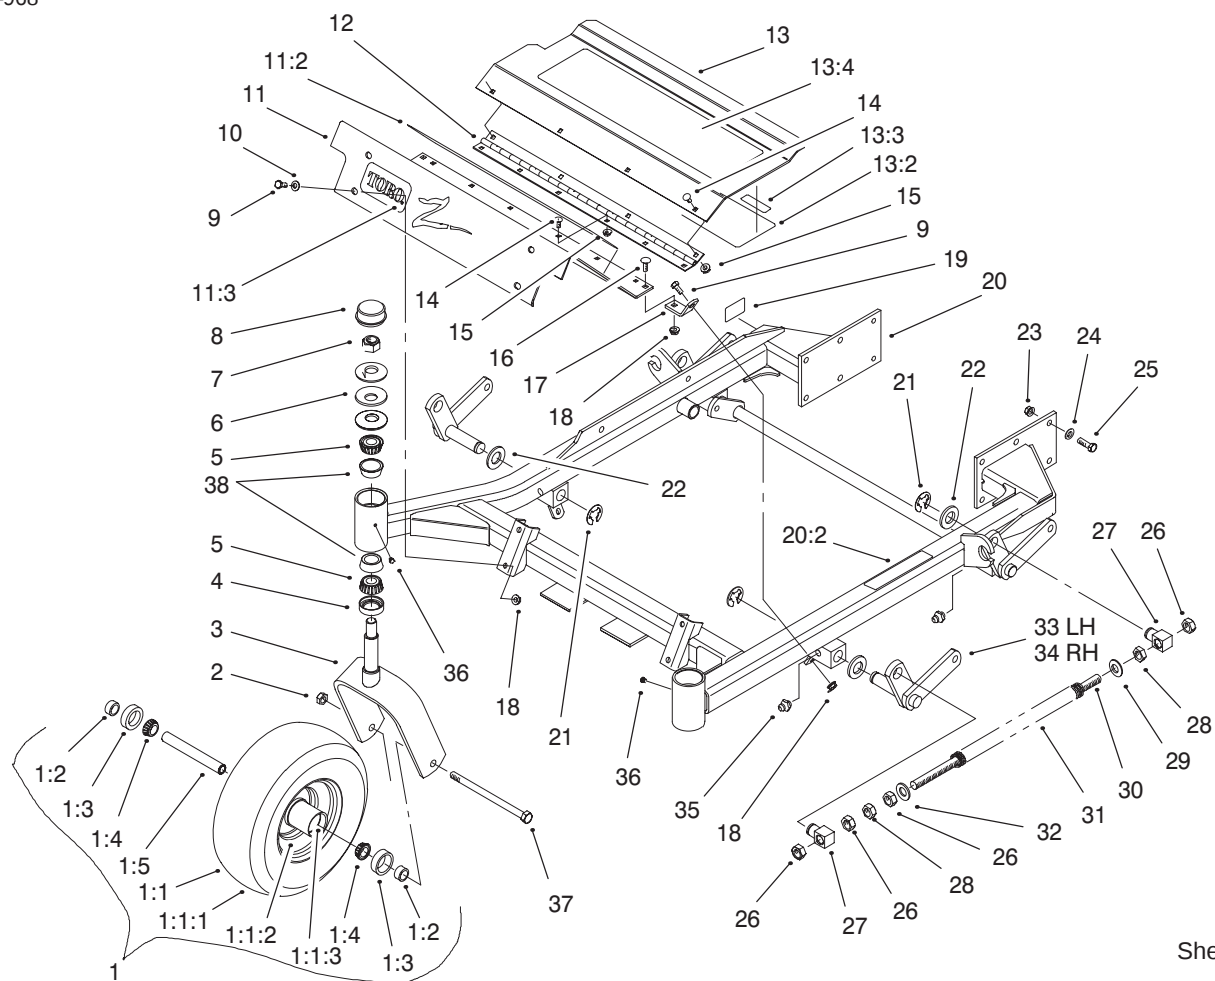


Sheet No.:2

Front Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	1-634662	2	Caster Wheel ASM
1:1	1-633582	1	Wheel & Tire ASM
1:1:1	1-633002	1	Tire
1:1:2	1-633583	1	Wheel
1:1:3	1-633584	2	Bearing-Cup
1:2	1-633581	2	Spacer-Bearing
1:3	1-633580	2	Seal-Bearing
1:4	1-633585	2	Bearing-Cone, Tapered
1:5	1-633579	1	Spacer,Front Caster
2	3296-45	2	Nut-Lock, NI
3	1-632511-01	2	Caster
4	1-543511	2	Seal-Grease
5	254-94	4	Bearing-Taper/Cone
6	1-633508	6	Washer-Bellville
7	3296-51	2	Nut-Lock, NI
8	1-543513	2	Cap-Grease
9	322-3	6	Screw-HH
10	3256-23	4	Washer-Flat
11	99-3940	1	Floorpan-Front
11:2	1-633553	1	Pad-Antiskid
11:3	1-633737	1	Decal-Z-Master
12	1-653049	1	Hinge,Floorpan
13	99-3930	1	Footrest ASM
13:2	99-3924	1	Decal-Service
13:3	98-5954	1	Decal-Missing, Cover


Ref. No.	Part No.	Qty.	Description
13:4	1-633553	1	Pad-Antiskid
14	3229-10	10	Screw-CARR
15	32128-33	10	Nut-HF
16	3230-1	2	Screw-CARR
17	99-3870-01	2	Bracket-Floorpan
18	32128-20	8	Nut-HF
19	88-1270	1	Decal-Safety STD
20	99-3931	1	Front Frame ASM
20:2	1-633818	1	Decal-Warning
21	32151-103	6	Ring-Snap
22	3256-29	6	Washer-Flat
23	3290-357	12	Nut-Flange, Lock
24	98-5975	12	Washer-Belleville
25	323-7	12	Screw-HH
26	3217-11	8	Nut-Hex
27	1-633441	4	Swivel-Deck Mount, Rear
28	3218-6	4	Nut-Jam
29	3256-7	2	Washer-Flat
30	1-653011	2	Rod,Deck Lift
31	1-653009	2	Spring,Compression
32	3256-27	2	Washer-Flat
33	99-3871-01	1	Lift Arm ASM - LH
34	99-3872-01	1	Lift Arm ASM - RH
35	302-19	4	Fitting-Grease
36	1-811010	2	Plug

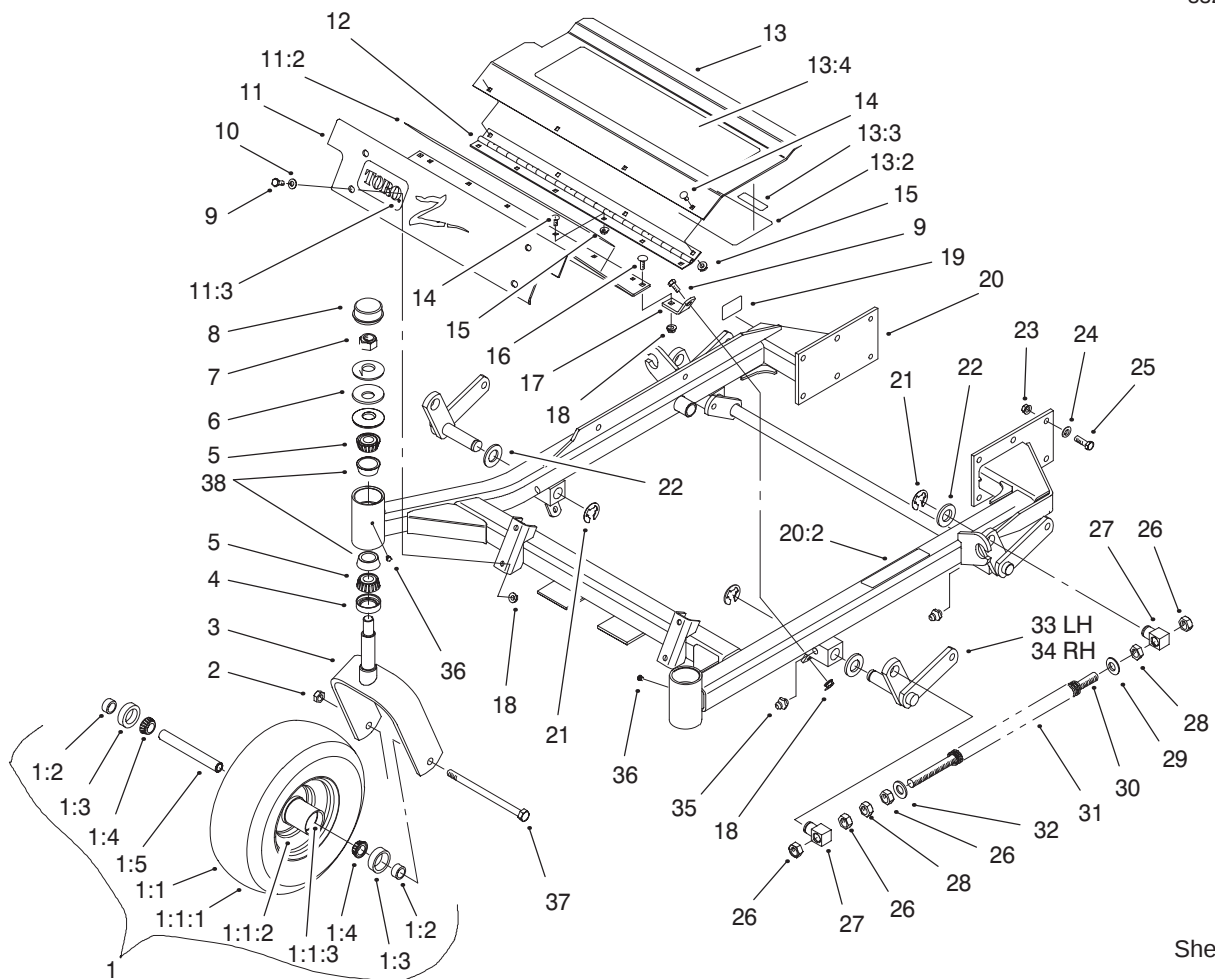

Sheet No.:2

Front Frame Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
37	325-36	2	Screw-HH				
38	254-72	4	Bearing-Taper/Cup				

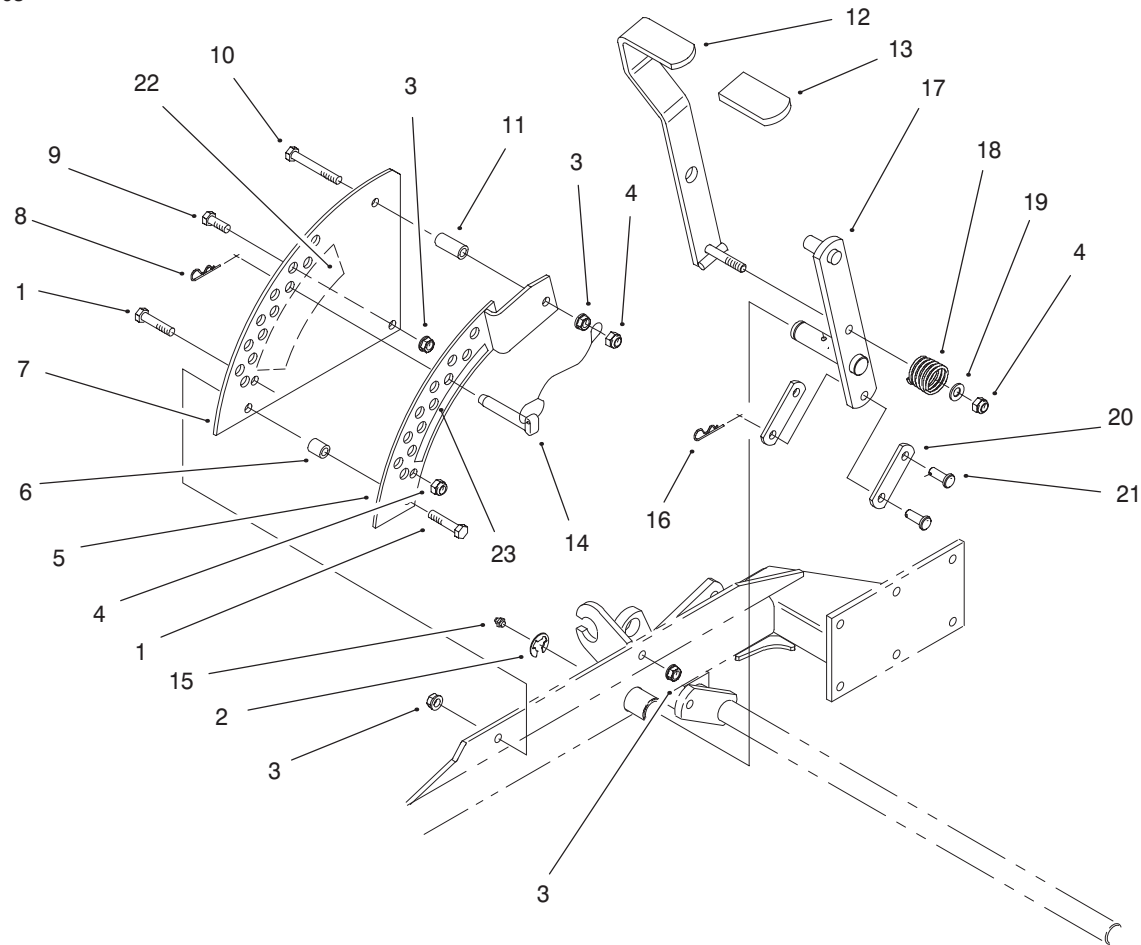

Sheet No.:3

Height of Cut Handle and Plates


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	323-9	2	Screw-HH				
2	32151-103	1	Ring-Snap				
3	3290-357	3	Nut-Flange, Lock				
4	3296-39	3	Nut-Lock, NI				
5	1-652235-01	1	Wld,Deck Lift Plate				
6	1-633080	1	Bushing-Lever, Lift				
7	1-653230-01	1	Plate-Deck Lift				
8	1-806005	1	Pin-Hair				
9	323-6	1	Screw-HH				
10	323-13	1	Screw-HH				
11	1-633082	1	Bushing-Lever, Lift				
12	1-652023-03	1	Wld,Lift Lever				
13	1-633295	1	Grip-Lever, Lift				
14	1-633097	1	Pin-Hitch w/Lanyard				
15	302-19	1	Fitting-Grease				
16	1-806003	2	Pin-Cotter, Hair				
17	99-3922-03	1	Arm-Lift				
18	1-633325	1	Spring-Compression				
19	3256-24	1	Washer-Flat				
20	1-633068	2	Arm-Lift, Deck				
21	1-808284	2	Pin-Clevis				
22	1-653140	1	Decal,Deck Height Outer				
23	1-653147	1	Decal-Deck Height, Inner				

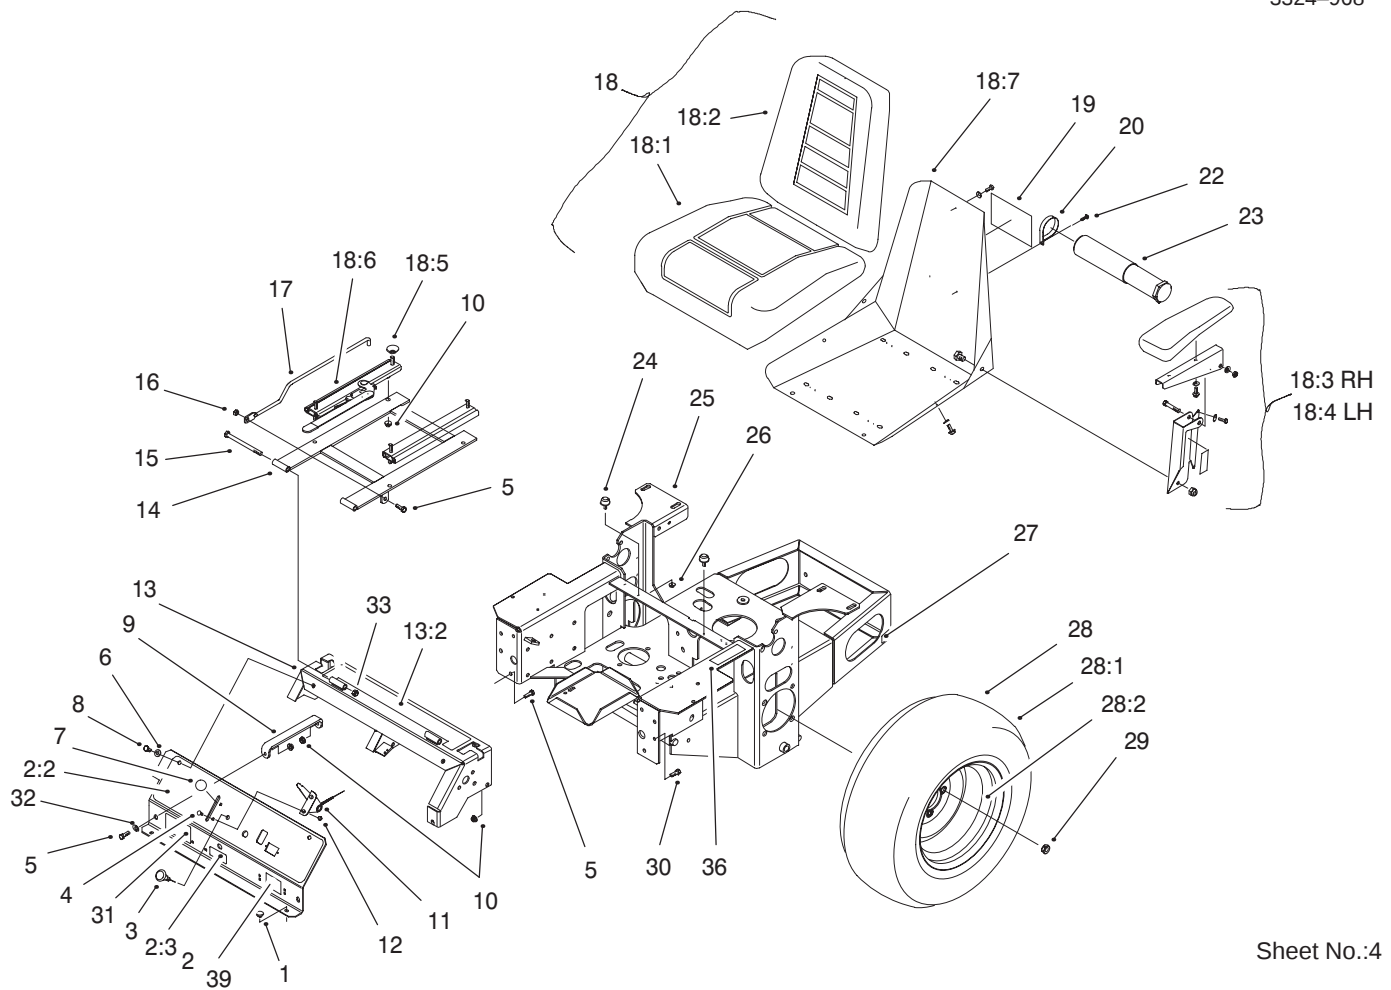

Sheet No.:4

Main Frame

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	1-513658	2	Bumper-Catcher, Grass	18:5	1-543401	4	Spacer-Track
2	103-0724	1	Instrument Panel ASM	18:6	1-643255	1	Track-Seat
2:2	103-0167	1	Decal, Console	18:7	1-633859	1	Frame-Seat
2:3	103-0262	1	Decal-Valve, Fuel	19	99-4693	1	Decal-Toro
3	1-603336	1	Control-Choke	20	2412-120	2	R-Clamp
4	1-807513	2	Bolt-CARR	22	32104-76	2	Screw
5	322-5	3	Screw-HH	23	74-0720	1	Tube-Manual
6	3256-23	2	Washer-Flat	24	1-523420	2	Bumper
7	1-513592	1	Knob-Ball, Red	25	103-0712-03	1	Wld Mainframe - Pntd
8	322-3	3	Screw-HH	26	3296-42	2	Nut-Lock, NI
9	1-653089-03	1	Bracket	27	65-2690	2	Decal-Surface, Hot
10	32128-20	12	Nut-HF	28	1-653010	2	Wheel & Tire ASM
11	1-633696	1	Cable-Throttle	28:1	1-653160	1	Tire
12	3296-2	2	Nut-Lock	28:2	1-653158	1	Wheel
13	99-3933	1	Console ASM	29	242-50	8	Nut - Lug
13:2	103-0315	2	Decal-Console	30	322-2	6	Screw-HH
14	1-632187-03	1	Frame - Seat	31	99-4603	1	Decal-Z147
15	323-21	2	Screw-HH	32	3256-3	2	Washer-Flat
16	3296-29	1	Nut-Lock	33	3296-39	2	Nut-Lock, NI
17	1-653495	1	Rod-Hold Up, Seat	36	1-603845	1	Decal, Drive Release
18	1-633705	1	Seat w/Tracks	39	98-4387	1	Decal-Protection, Ear
18:1	103-0290	1	Cushion-Bottom, Seat				
18:2	104-7754	1	Cushion - Back, Seat				
18:3	1-633710	1	Cushion-Armrest, RH				
18:4	1-633711	1	Cushion-Armrest, LH				

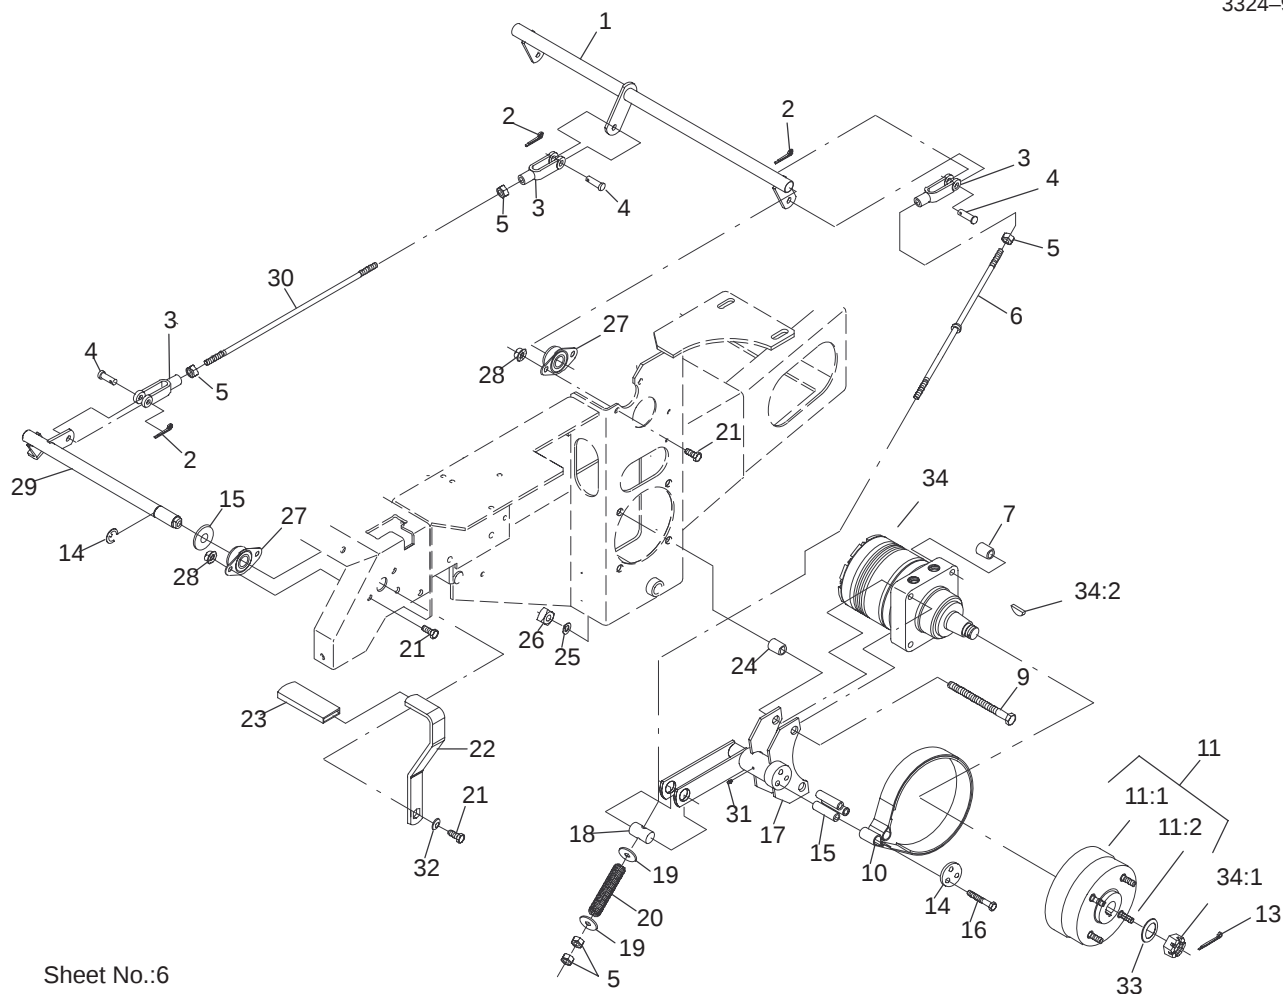


Sheet No.:6

Parking Brake System Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	1-652073-03	1	Wld, Park Brake Crank	27	1-633102	4	Bearing-Flange, Side
2	3272-10	4	Pin-Cotter	28	3290-357	8	Nut-Flange, Lock
3	1-633131	4	Yoke-Linkage, Brake	29	1-652085	1	Shaft - Parking Brake
4	1-808285	4	Pin-Clevis	30	1-653061	1	Linkage-Handle, Brake
5	3219-3	8	Nut-HH	31	1481	2	Fitting-Grease
6	103-0356	2	Rod, Brake	32	98-5975	1	Washer-Belleville
7	1-653068	4	Spacer, Wheel	33	1-523157	2	Washer-Spacer
9	325-13	8	Screw-HH	34	1-523328	2	Motor-Wheel
10	103-0355	2	Band-Brake	34:1	1-809036	1	Nut-HH
11	103-0590	2	Hub-Wheel w/Studs	34:2	3257-42	1	Key-Woodruff
11:1	103-0589	1	Hub-Wheel	*34:99	1-000099	1	Kit-Seal
11:2	1-633926	4	Stud-Heel	*34:99	1-000139	1	Kit-Bearing
13	1-806800	2	Pin-Cotter				
14	103-0374	2	Retainer-Band, Brake				
15	103-0384	6	Spacer				
16	322-9	6	Screw-HH				
17	103-0352-03	2	Bracket-Brake				
18	1-633144	2	Pin-Trunion				
19	3256-4	4	Washer-Flat				
20	1-633454	2	Spring-Brake				
21	323-4	9	Screw-HH				
22	1-653074-03	1	Handle, Park Brake				
23	1-633268	1	Grip-Lever, Brake				
24	1-653069	4	Spacer, Wheel				
25	3253-7	8	Washer-Lock				
26	103-0131	8	Nut-Square				

* Not illustrated

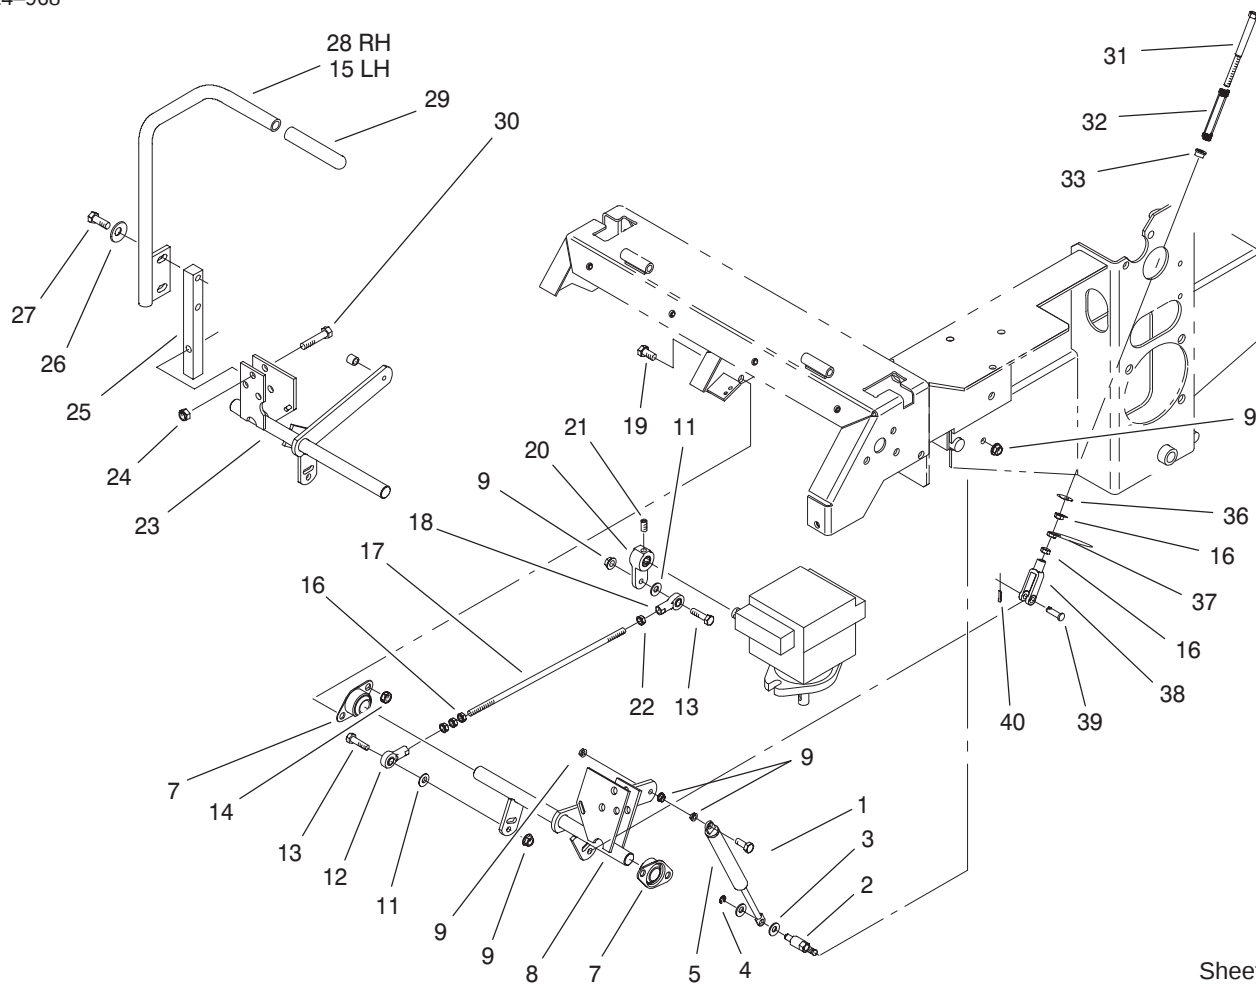


Sheet No.:7

Motion Control System Assembly

Ref. No.	Part No.	Qty.	Description
1	1-403180	2	Screw-HH
2	1-653316	2	Pin-Dampner
3	3256-23	4	Washer-Flat
4	32120-35	2	E-Ring
5	1-523027	2	Damper-Control
7	1-633102	4	Bearing-Flange, Side
8	1-652467	1	Motion Control, LH
9	32128-20	12	Nut-HF
11	3256-3	4	Washer-Flat
12	1-543017	2	Balljoint-RH
13	322-6	4	Screw-HH
14	3290-357	8	Nut-Flange, Lock
15	1-632191-03	1	Lever - Control, LH
16	3219-2	10	Nut-Hex
17	1-653046	2	Linkage,Pump/Lever
18	1-633152	2	Balljoint-Thread, LH
19	323-4	8	Screw-HH
20	1-653092	2	Arm,Pump Control
21	1-803022	2	Screw
22	1-804524	2	Nut
23	1-652466	1	Motion Control, RH
24	3296-39	6	Nut-Lock, NI
25	1-633177	2	Arm,Control Shaft
26	98-5975	4	Washer-Belleville
27	323-6	4	Screw-HH
28	1-632193-03	1	Lever - Control, RH

Ref. No.	Part No.	Qty.	Description
29	1-633257	2	Grip-Control, Motion
30	323-9	6	Screw-HH
31	1-603737	2	Bolt-Return, Neutral
32	1-603807	2	Spring-Return, Neutral
33	1-603735	2	Bushing-Flanged, Nylon
36	3256-2	2	Washer-Flat
37	3220-2	2	Nut
38	1-303105	2	Yoke-Adjustable
39	1-808280	2	Pin-Clevis
40	3272-5	2	Pin-Cotter

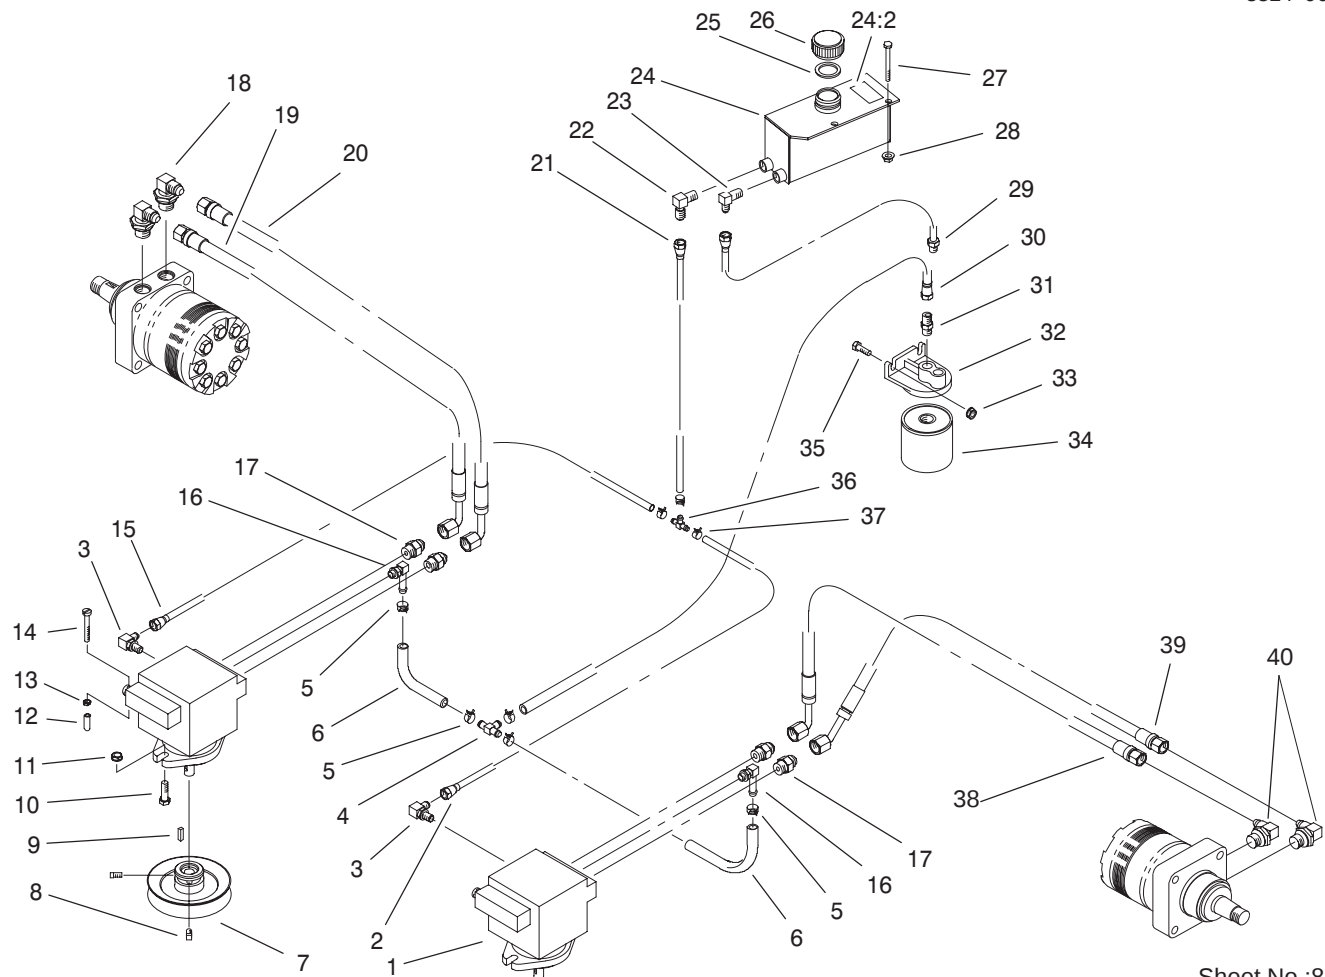


Sheet No.:8

Hydraulic System Assembly

Ref. No.	Part No.	Qty.	Description
1	1-603841	2	Pump-Hydraulic
2	1-632285	1	Hose ASM
3	1-513840	2	Fitting-90°
4	1-603721	1	Fitting-Tee, Hose
5	1-603827	5	Clamp-Hose
6	1-413273	2	Hose
7	1-653156	2	Sheave
8	1-803050	4	Screw-Set
9	1-807272	2	Key-Machine
10	323-7	4	Screw-HH
11	3290-357	4	Nut-Flange, Lock
12	1-613073	2	Grip, Dump Valve
13	3296-42	2	Nut-Lock, NI
14	1-801063	4	Screw
15	1-632286	1	Hose ASM
16	1-603989	2	Fitting
17	1-603990	4	Fitting-Straight
18	1-633605	2	Fitting, Connector
19	1-653186	1	Hose, Front
20	1-653187	1	Hose, RH Rear
21	1-654144	1	Hose
22	1-603987	1	Fitting-Elbow
23	1-603988	1	Fitting-Elbow
24	99-4625	1	Hydraulic Tank ASM
24:2	1-523552	1	Decal-Tank, Hydraulic
25	1-523103	1	Gasket-Cap, Tank

Ref. No.	Part No.	Qty.	Description
26	1-513167	1	Cap
27	321-15	2	Screw-HH
28	32128-33	2	Nut-HF
29	1-654320	1	Hose
30	1-654509	1	Hose
31	1-513510	1	Fitting, Straight
32	1-603720	1	Head-Filter
33	32128-20	2	Nut-HF
34	1-633750	1	Filter-Hydraulic
34	1-633752	1	Filter-Winter, Hydraulic
35	322-5	2	Screw-HH
36	1-603722	1	Fitting-Tee, Hose
37	1-603826	3	Clamp-Hose
38	1-653409	1	Hose, Hydraulic
39	1-653410	1	Hose, Hydraulic
40	1-633786	2	Fitting-90°

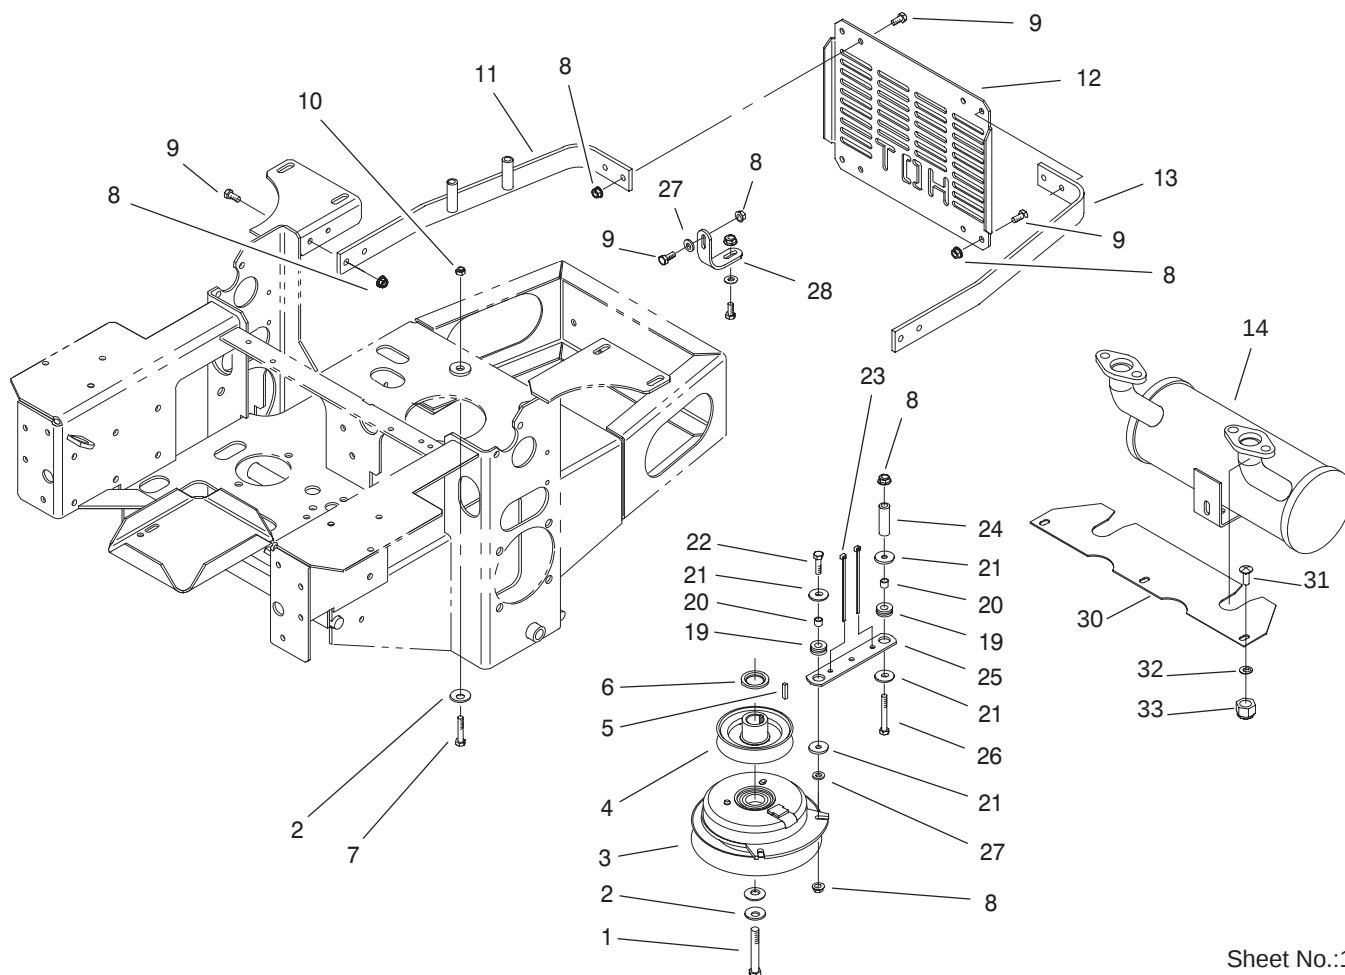


Sheet No.:10

Engine and Clutch Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3212-12	1	Screw-Cap HH	31	3230-1	3	Screw-CARR
2	1-303334	4	Washer-Spring	32	3256-23	3	Washer-Flat
3	1-653048	1	Clutch,Mag Stop	33	3296-29	3	Nut-Lock
4	1-653035	1	Sheave,w/Hub	☆99		1	Engine-Kawasaki, Fh500v-As10
5	1-807259	1	Key				
6	1-543214	1	Spacer-Crankshaft				
7	322-9	4	Screw-HH				
8	32128-20	16	Nut-HF				
9	322-3	14	Screw-HH				
10	3296-29	4	Nut-Lock				
11	1-652146-03	1	Strap-Guard, Engine				
12	1-653095-03	1	Shield,Engine				
13	1-653093-03	1	Strap,Engine Guard				
14	1-653194	1	Muffler				
19	1-633630	2	Grommet-Brake				
20	1-633545	2	Spacer-Grommet				
21	1-613235	4	Washer				
22	322-6	1	Screw-HH				
23	1-303335	2	Tie-Plastic				
24	1-523406	1	Bushing-Mount, Seat				
25	1-633543-03	1	Strap-Clutch, Brake				
26	322-22	1	Screw-HH				
27	3256-3	3	Washer-Flat				
28	1-653196	1	Bracket,Muffler Support				
30	1-653565-03	1	Shield,Heat				


☆ Not serviced

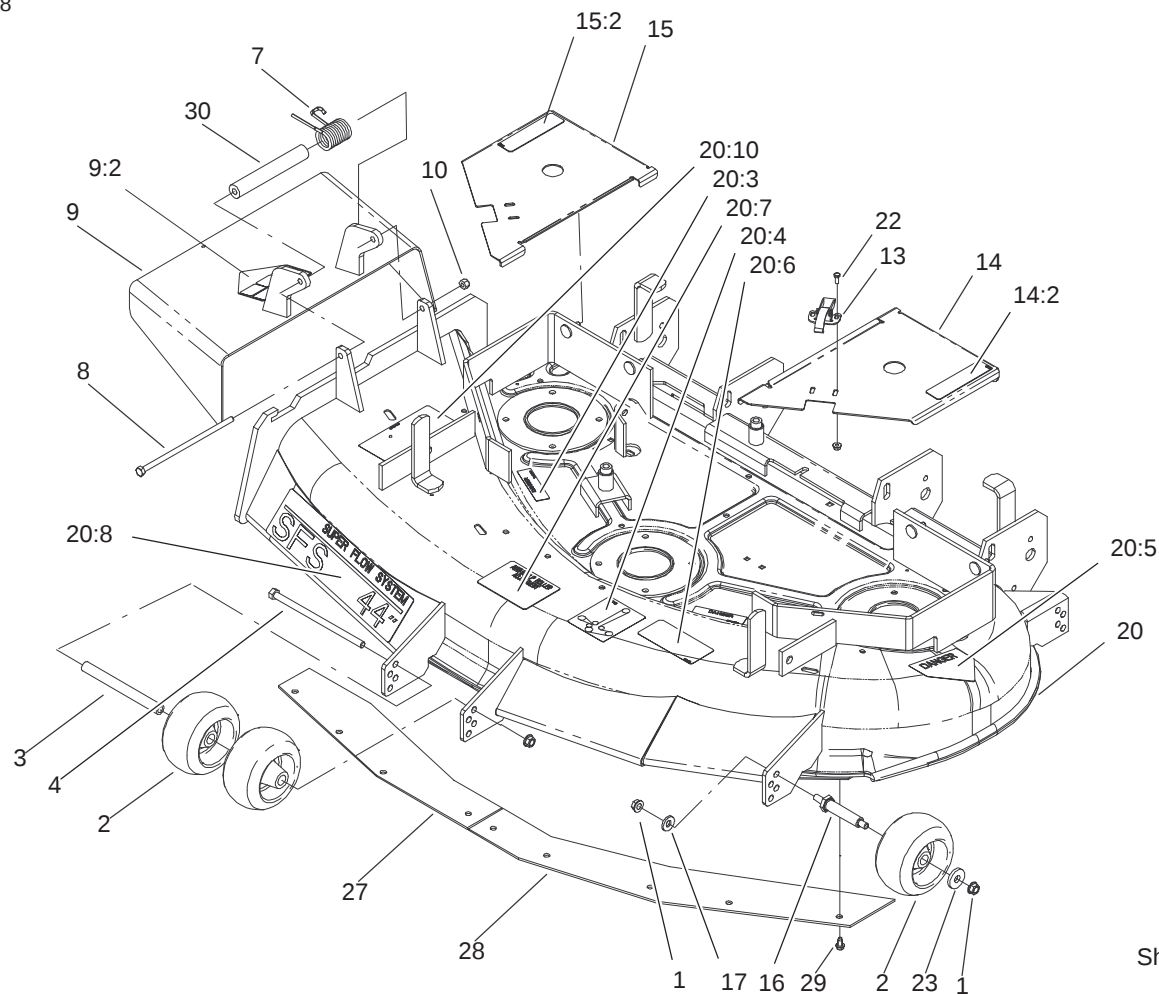

Sheet No.:12

44” Deck Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3290-357	7	Nut-Flange, Lock	22	3290-321	4	Screw-HWH
2	68-2730	5	Gage-Wheel	23	1-373034	3	Washer-Swivel
3	98-5967	1	Spacer - Wheel	27	100-3257-03	1	Plate-Blowout,RH
4	323-28	1	Screw-HH	28	100-3258-03	1	Plate-Blowout,LH
7	104-8554	1	Spring-Torsion	29	12-3270	9	Screw
8	322-50	1	Screw-Cap	30	104-8555	1	Spacer-Deflector, Mounting
9	104-7783	1	Deflector ASM w/ Decals				
9:2	54-9220	1	Decal-Danger				
10	3296-29	1	Nut-Lock				
12	32128-17	4	Nut-Lock, Flange				
13	249-21	2	Clamp-Slotted				
14	99-3928	1	LH Cover ASM				
14:2	67-5360	1	Decal-Danger				
15	99-3929	1	RH Cover ASM				
15:2	67-5360	1	Decal-Danger				
16	99-2842	3	Spacer-Wheel				
17	98-5975	3	Washer-Belleville				
20	104-7782	1	Deck ASM w/ Decals				
20:3	98-5954	3	Decal-Missing, Cover				
20:4	99-3943	1	Decal-Routing, Belt				
20:5	43-8480	1	Decal-Danger				
20:6	93-7818	1	Decal-Torque, Blade				
20:7	98-3798	1	Decal-Wheel, Gage				
20:8	98-8028	1	Decal-Sfs 44"				
20:10	66-1340	1	Decal-Danger				

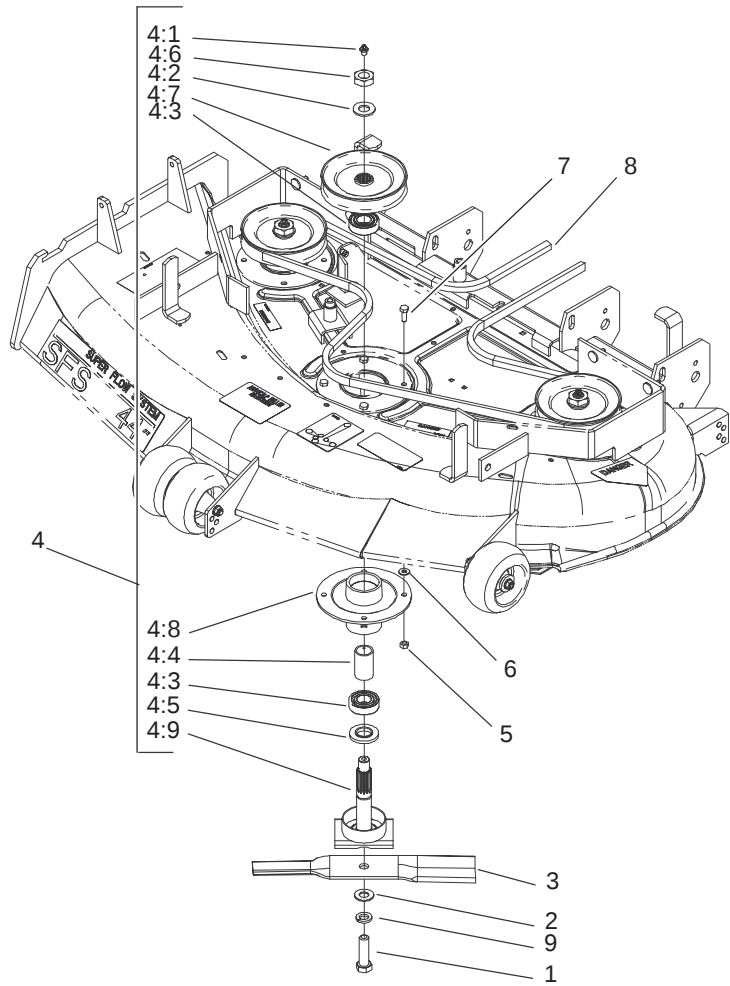

Sheet No.:13

44" Deck Spindle Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	51-4060	3	Screw-Blade				
2	3256-27	3	Washer-Flat				
3	54-0010	3	Blade				
4	100-3977	3	Spindle Housing ASM				
4:1	302-2	1	Fitting-Grease				
4:2	7-4150	1	Washer-Pinion				
4:3	251-257	2	Bearing				
4:4	67-7580	1	Spacer-Bearing				
4:5	67-7570	1	Spacer-Spindle				
4:6	32146-20	1	Nut-Jam				
4:7	100-3975	1	Pulley And Hub ASM				
4:8	67-7590	1	Spindle Housing				
4:9	100-3974	1	Spindle Shaft ASM				
5	32152-1	12	Nut-Lock, NI				
6	3256-2	4	Washer-Flat				
7	322-4	12	Screw-HH				
8	98-3780	1	V-Belt-Drive, Deck				
9	3253-8	3	Washer-Lock				

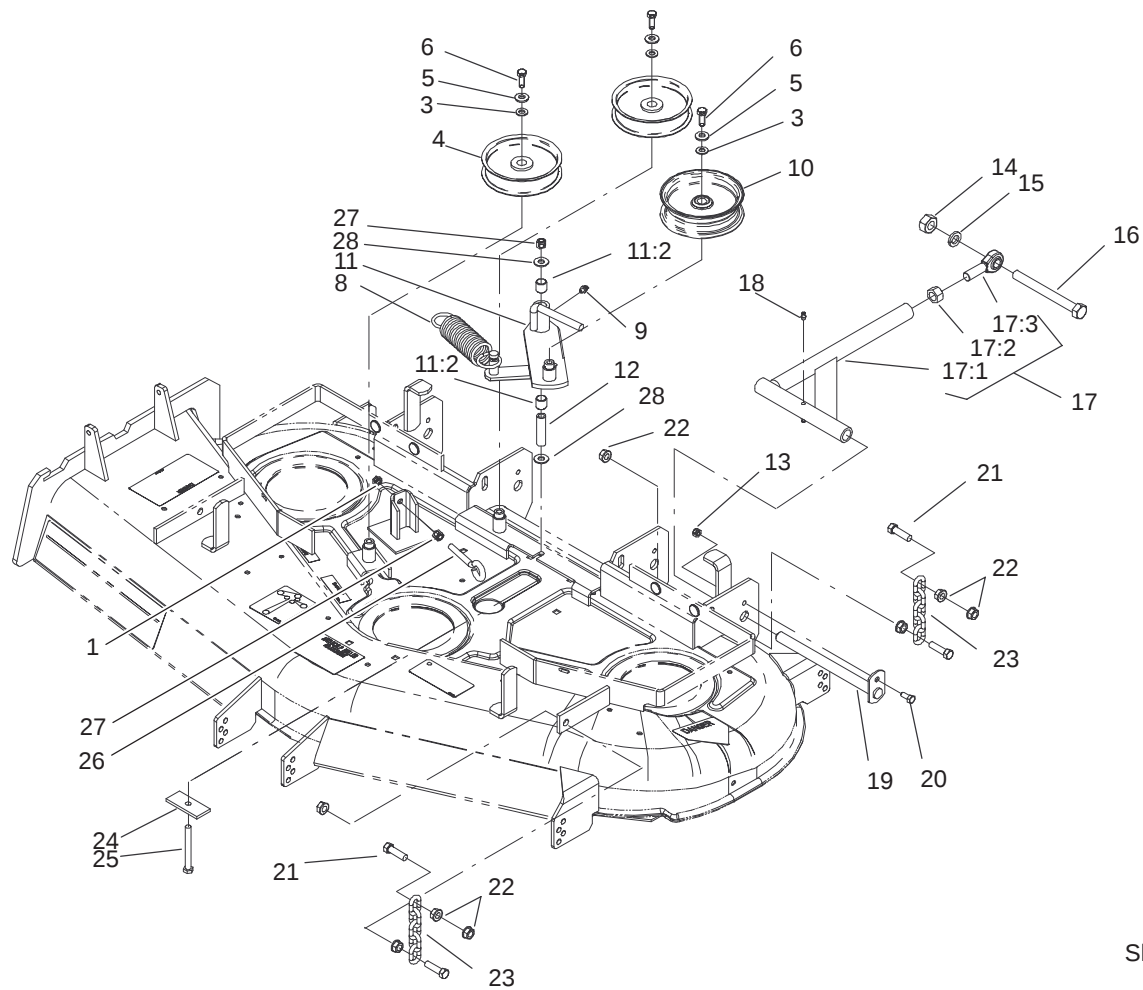

Sheet No.:16

Idler, Pulleys/Lift Strut, Chains Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3217-7	1	Nut-Hex	25	1-800805	1	Screw-HH
3	3256-24	3	Washer-Flat	26	94-2547	1	Eyebolt
4	1-613098	2	Pulley-Idler	27	3296-39	2	Nut-Lock, NI
5	98-5975	3	Washer-Belleville	28	1-809107	2	Washer-Hardened
6	323-6	3	Screw-HH				
8	1-633151	1	Spring-Extension				
9	302-40	1	Fitting-Grease				
10	99-8912	1	Pulley-Idler, Flat				
11	99-8914	1	Idler Arm ASM				
11:2	1-513034	2	Sleeve-Bearing				
12	1-603384	1	Bushing-Pivot, Idler				
13	3296-29	2	Nut-Lock				
14	3217-11	2	Nut-Hex				
15	3253-8	2	Washer-Lock				
16	1-800344	2	Screw				
17	103-1081	2	ASM,Strut STD Long				
17:1	103-1072-01	1	Strut-Deck				
17:2	3219-6	1	Nut-Hex				
17:3	1-633029	1	Balljoint-Spherical				
18	302-19	4	Fitting-Grease				
19	1-632199-01	2	Pin-Strut, Deck				
20	322-3	2	Screw-HH				
21	1-800811	8	Screw-Cap HH				
22	32128-37	16	Nut-HF				
23	1-633447	4	Chain-Lift, Deck				
24	99-3946-01	1	Plate-Retainer, Bolt				

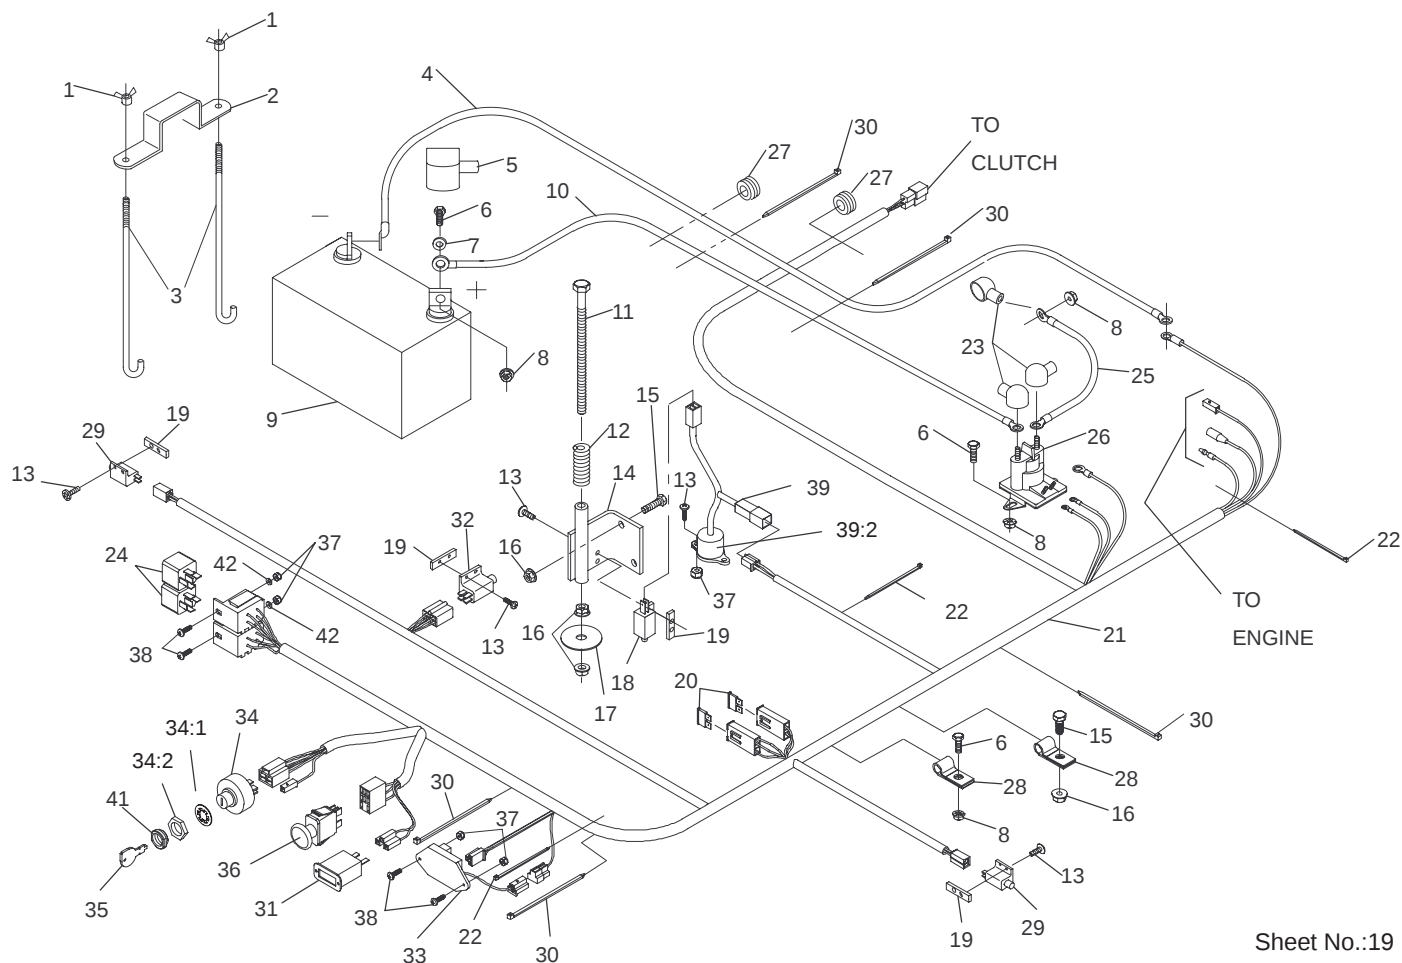


Sheet No.:19

Electrical System Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	1-543792	2	Wingnut	24	1-643275	2	Relay
2	1-633652-03	1	Strap-Holddown, Battery	25	1-633306	1	Wire, Starter
3	1-633651	2	Bolt-Holddown	26	1-513075	1	Switch, 12v Solenoid
4	103-0705	1	Cable, Ground (-)	27	1-543286	2	Grommet
5	1-543391	1	Insulator-Battery	28	1-633396	2	Clip-Loom
6	321-4	5	Screw-HH	29	1-513051	2	Switch-Open, Normally
7	3256-2	2	Washer-Flat	30	1-303335	5	Tie-Plastic
8	32128-33	6	Nut-HF	31	1-513374	1	Meter-Hours
9	1-603479	1	Battery	32	1-633111	1	Switch
10	103-0707	1	Cable, Battery	33	100-6186	1	Module-Delay, Seat
11	1-800282	1	Screw-HH	34	88-9830	1	Switch-Ignition
12	1-523415	1	Spring-Switch, Seat	34:1	3254-5	1	Washer-Lock, Internal
13	3290-500	10	Screw-PPH	34:2	218-461	1	Nut-HH
14	1-652072-03	1	Wld, Seat Switch Bracket	35	63-8360	2	Key-Ignition
15	322-3	3	Screw-HH	36	1-633673	1	Switch-Delta
16	32128-20	5	Nut-HF	37	3296-2	6	Nut-Lock
17	1-653036	1	Washer	38	1-807513	4	Bolt-CARR
18	1-513152	1	Switch-Closed, Normally	39	1-644427	1	Tilt Switch ASM
19	1-633181	4	Plate-Tapped	39:2	1-643401	1	Decal-Switch, Mercury
20	1-816001	2	Fuse-Type, Blade	41	103-0499	1	Seal-Switch, Ignition
21	103-0623	1	Harness, Wire Lhp Ka	42	3256-14	2	Washer-flat
22	1-303287	3	Tie-Plastic				
23	1-543393	3	Insulator-Solenoid				

Cylinder/Crankcase Assembly Kawasaki FH500V-AS10

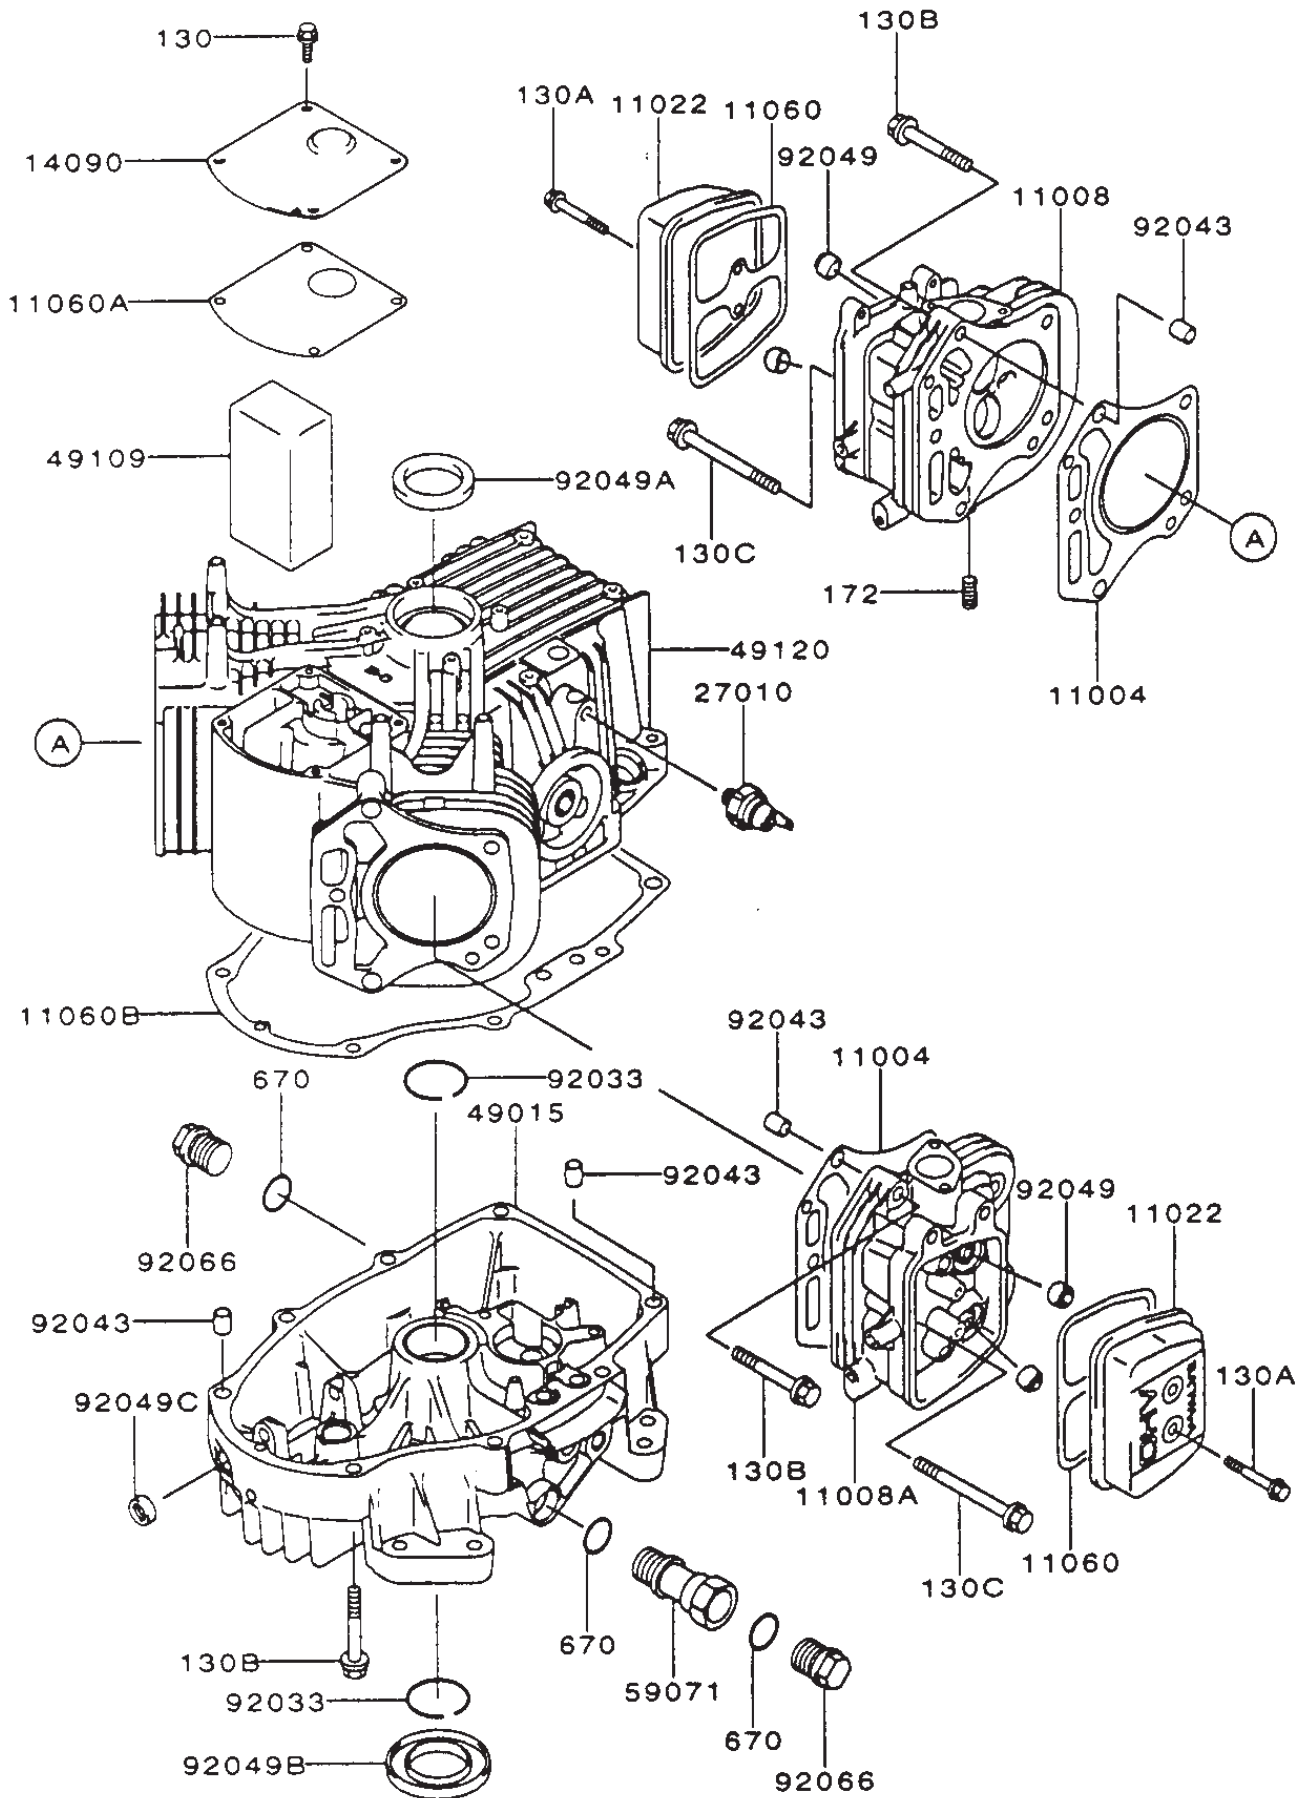


Cylinder/Crankcase Assembly Kawasaki FH500V-AS10

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
11004	11004-7001	2	Gasket-Head				
11008	11008-7001	1	Head-Comp-Cylinder No. 1				
11008A	11008-7002	1	Head-Comp-Cylinder No. 2				
11022	11022-7001	2	Case-Rocker				
11060	11060-7001	2	Gasket, Rocker Case				
11060A	11060-7002	1	Gasket, Breather				
11060B	11060-7007	1	Gasket, Crankcase Cover				
14090	14090-7001	1	Cover, Breather				
27010	27010-7001	1	Switch				
49015	49015-6205	1	Cover-Crankcase				
49109	49109-7001	1	Element-Breather				
49120	49120-6117	1	Crankcase-Comp				
59071	59071-7003	1	Joint				
92033	92033-7003	2	Ring-Snap				
92043	92043-7001	6	Pin				
92049	92049-7001	4	Seal-Oil				
92049A	92049-7002	1	Seal-Oil				
92049B	92049-7004	1	Seal-Oil				
92049C	92049-7005	1	Seal-Oil				
92066	92066-7003	2	Plug				
130	130B0612	4	Bolt-Flanged				
130A	130B0640	4	Bolt-Flanged				
130B	130T0850	16	Bolt-Flanged				
130C	130T0875	2	Bolt-Flanged				
172	172G0818	4	Bolt-Stud				
670	670D2016	3	O-Ring				


PROTOTYPE

Valve/Camshaft Assembly Kawasaki FH500V-AS10

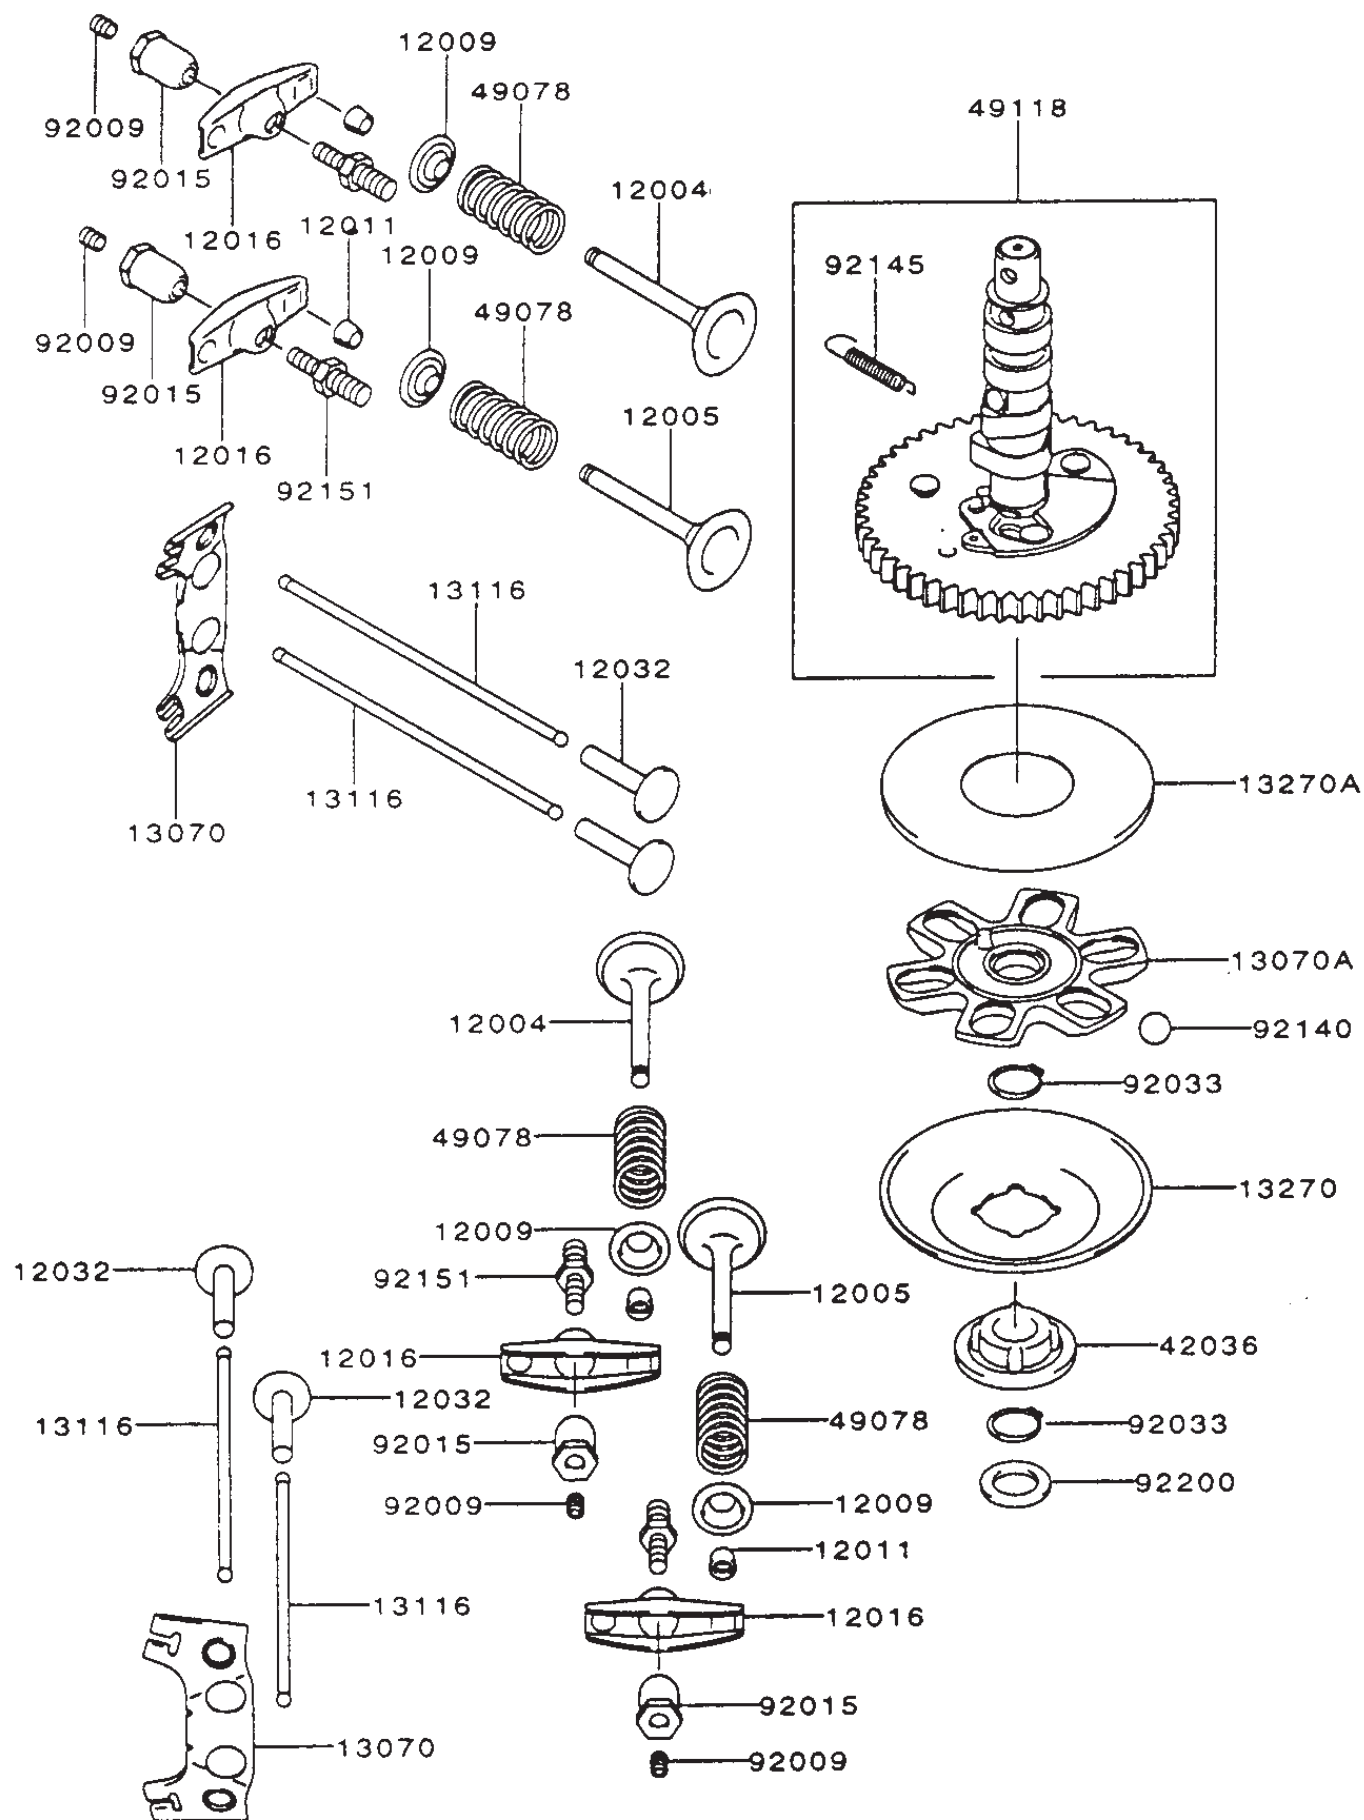

Valve/Camshaft Assembly Kawasaki FH500V-AS10


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
12004	12004-7001	2	Valve-Intake				
12005	12005-7001	2	Valve-Exhaust				
12009	12009-7001	4	Retainer-Valve Spring				
12011	12011-2056	8	Collet				
12016	12016-7001	4	Arm-Rocker				
12032	12032-7001	4	Tappet				
13070	13070-7001	2	Guide				
13070A	13070-7002	1	Guide				
13116	13116-2057	4	Rod-Push				
13270	13270-7002	1	Plate				
13270A	13270-7003	1	Plate				
42036	42036-7001	1	Sleeve				
49078	49078-7001	4	Spring-Engine Valve				
49118	49118-7002	1	Camshaft-Comp				
92009	92009-2341	4	Screw				
92015	92015-2253	4	Nut				
92033	92033-7001	2	Ring-Snap				
92140	92140-7002	6	Ball				
92145	92145-7001	1	Spring				
92151	92151-7001	4	Bolt				
92200	92200-7001	1	Washer				
PROTOTYPE							

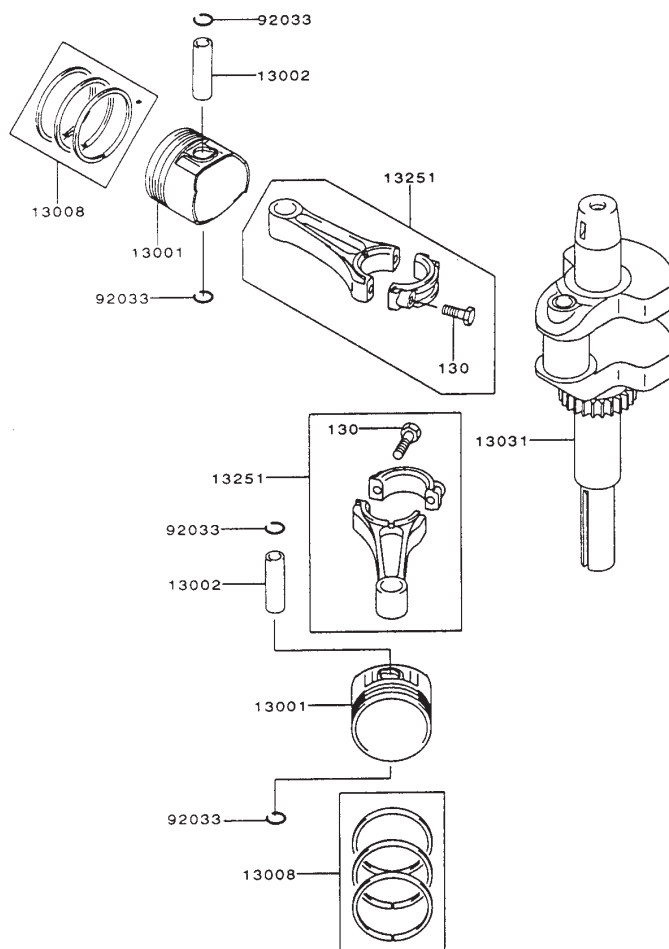

Piston/Crankshaft Assembly Kawasaki FH500V-AS10

Ref. No.	Part No.	Qty.	Description
13001	13001-7001	2	Piston-Engine
13002	13002-7001	2	Pin-Piston
13008	13008-6055	2	Ring-Set-Piston
13031	13031-7001	1	Crankshaft-Comp
13251	13251-7001	2	Rod-Assy-Connecting
92033	92033-7002	4	Ring-Snap
130	130G0630	4	Bolt-Flanged


Ref. No.	Part No.	Qty.	Description
OTOTYPE			

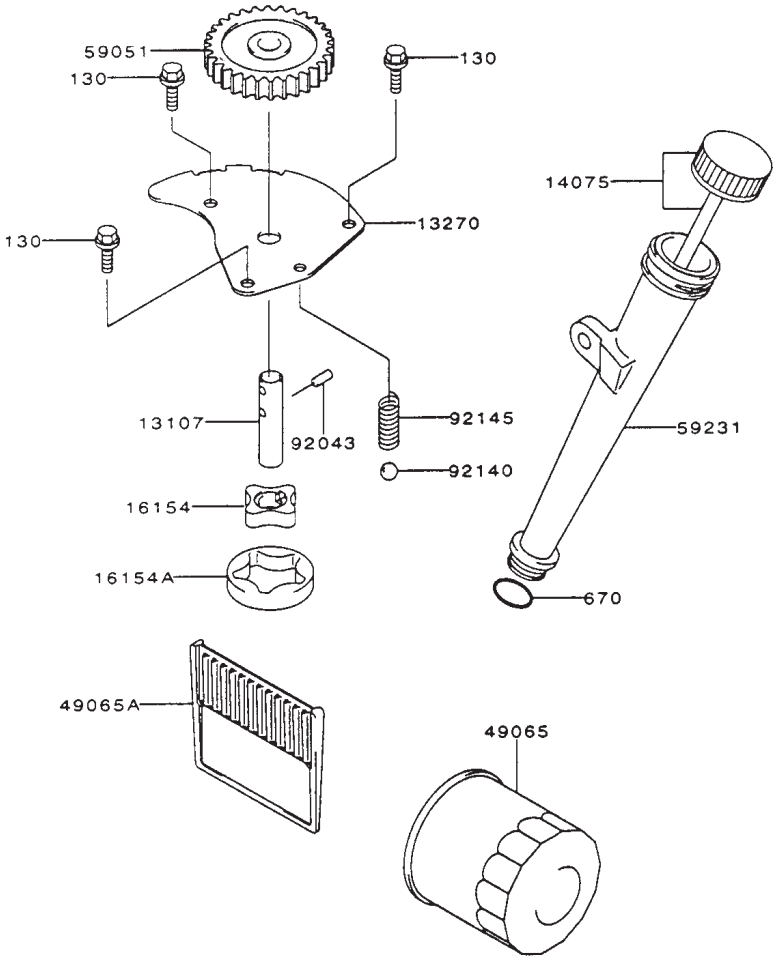

Lubrication-Equipment Assembly Kawasaki FH500V-AS10

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
13107	13107-2099	1	Shaft, Oil Pump				
13270	13270-7004	1	Plate				
14075	14075-7001	1	Cap-Assy				
16154	16154-2053	1	Rotor-Pump, Out				
16154A	16154-2054	1	Rotor-Pump, Out				
49065	49065-2078	1	Filter-Oil				
49065A	49065-7001	1	Filter-Oil				
59051	59051-7004	1	Gear-Spur				
59231	59231-7001	1	Filler				
92043	92043-7003	1	Pin				
92140	92140-7003	1	Ball				
92145	92145-7002	1	Spring				
130	130B0612	3	Bolt-Flanged				
670	670D2016	1	O-Ring				


Cooling-Equipment Assembly Kawasaki FH500V-AS10

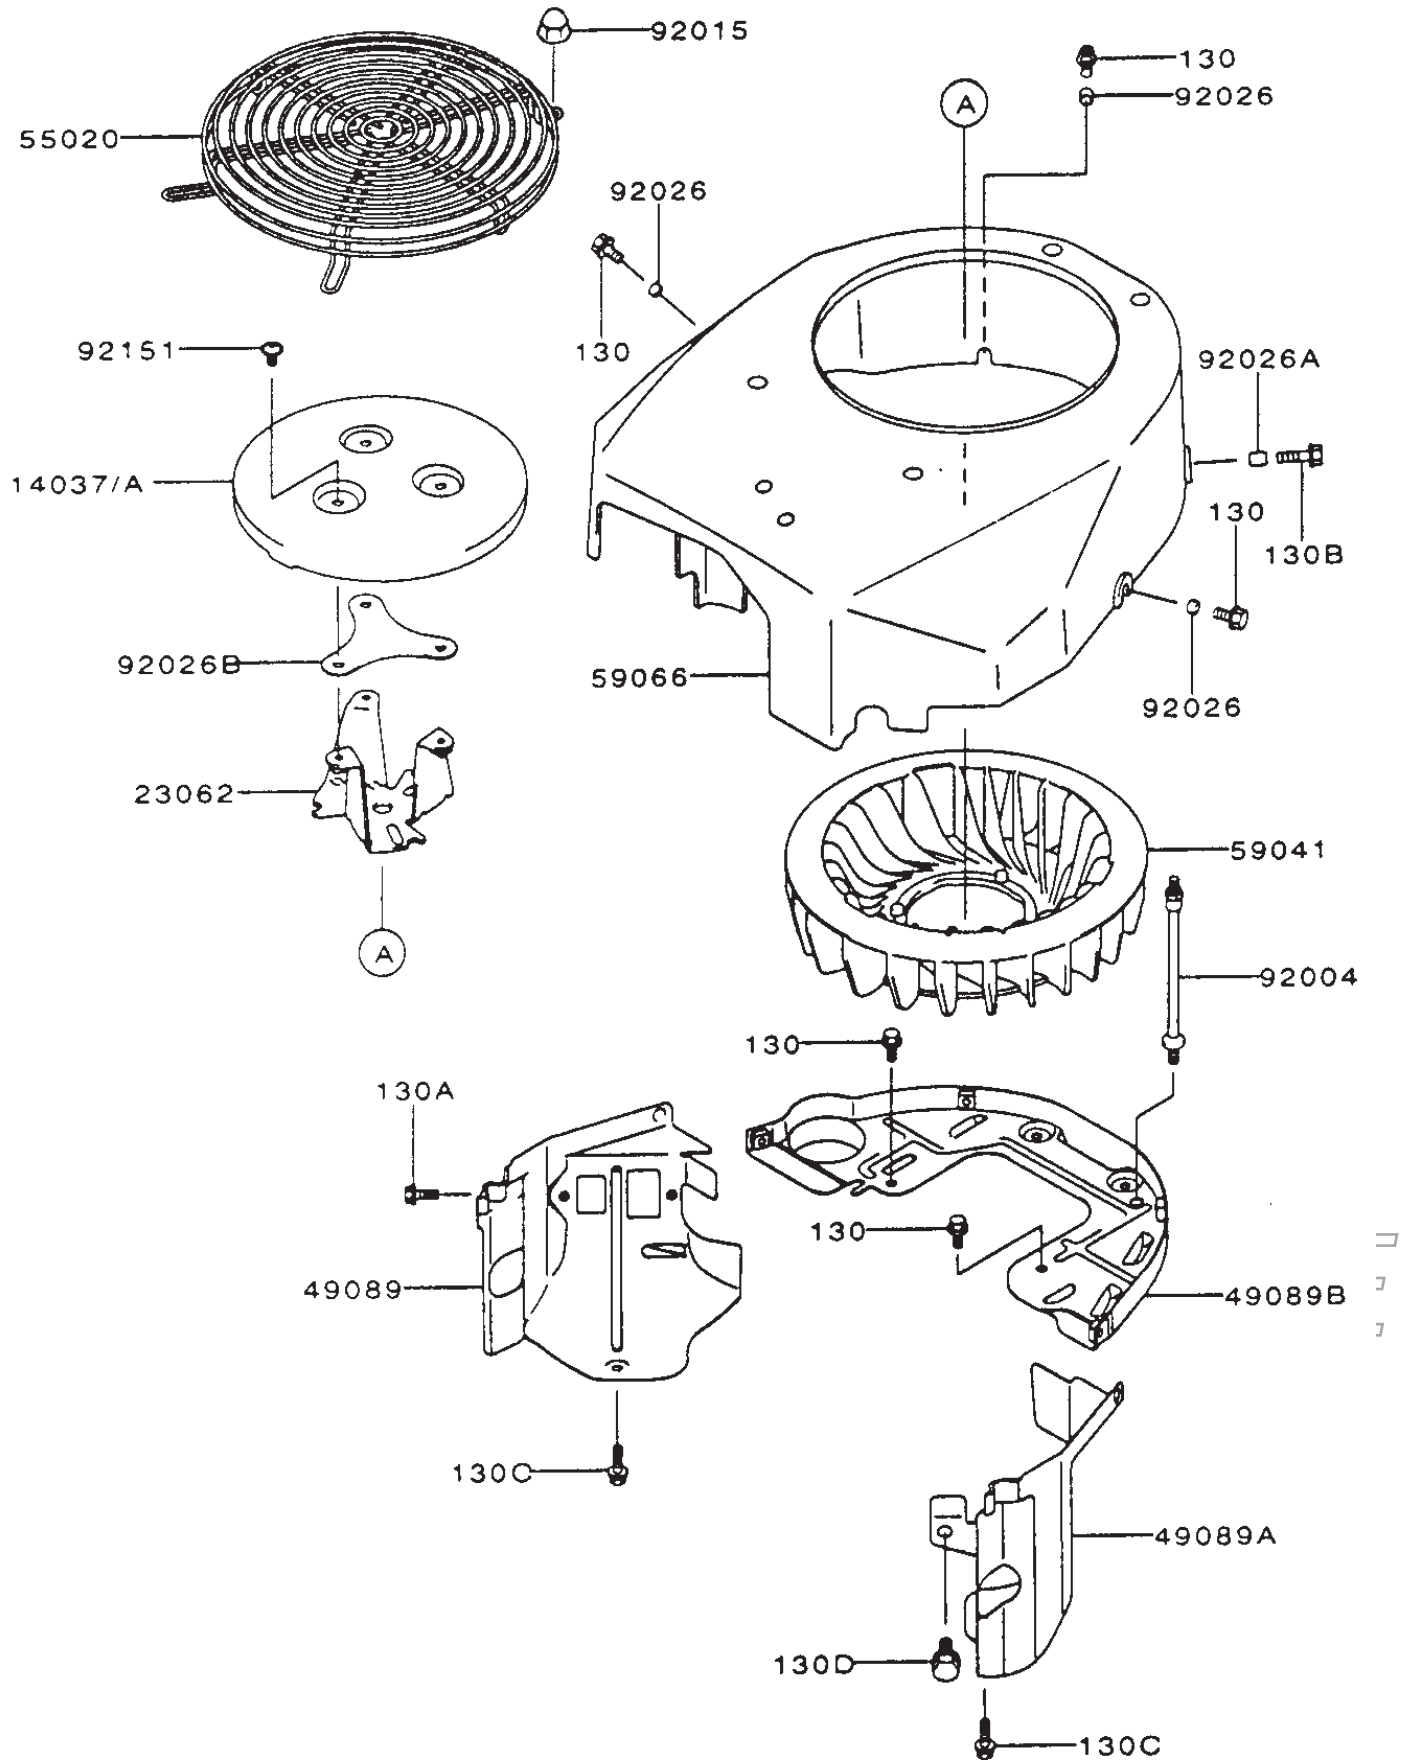

Cooling-Equipment Assembly Kawasaki FH500V-AS10

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
14037	14037-7003	1	Screen				
14037A	14037-7003-9H	1	Screen				
23062	23062-7002	1	Bracket-Comp				
49089	49089-7001	1	Shroud-Engine				
49089A	49089-7002	1	Shroud-Engine				
49089B	49089-7003	1	Shroud-Engine				
55020	55020-7001	1	Guard				
59041	59041-7001	1	Fan				
59066	59066-7002	1	Housing-Fan				
92004	92004-2148	2	Stud				
92015	92015-1170	4	Nut				
92026	92026-7001	3	Spacer, 6.2x7.9x5				
92026A	92026-7003	1	Spacer, 6.5x7.9x10.5				
92026B	92026-7004	1	Spacer				
92151	92151-7009	3	Bolt, 6x10				
130	130B0612	5	Bolt-Flanged				
130A	130B0616	2	Bolt-Flanged				
130B	130B0620	1	Bolt-Flanged				
130C	130B0625	2	Bolt-Flanged				
130D	130B0816	1	Bolt-Flanged				
PROTOTYPE							

Electric-Equipment Assembly Kawasaki FH500V-AS10

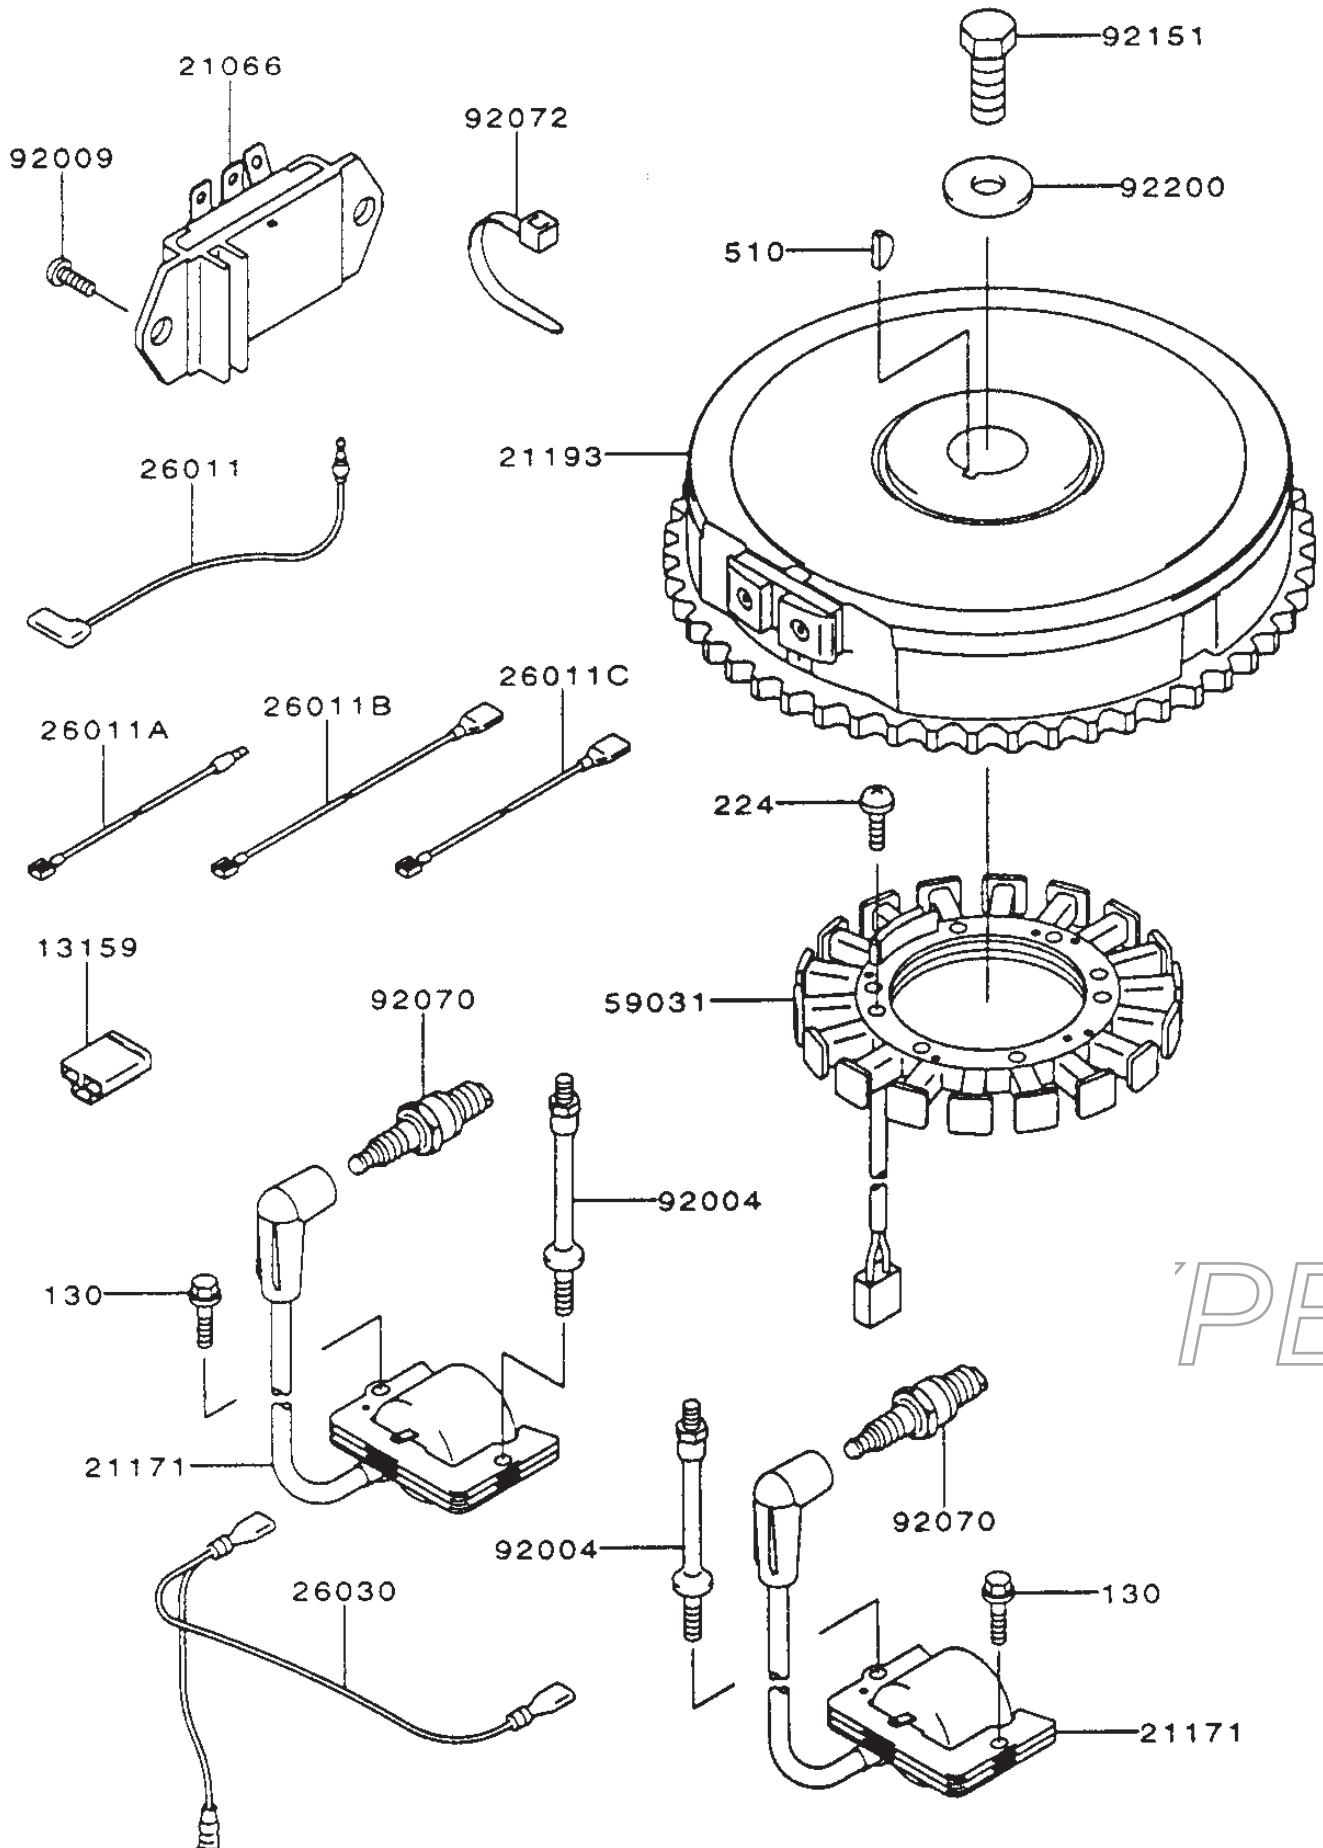


PE

Electric-Equipment Assembly Kawasaki FH500V-AS10

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
13159	13159-7001	1	Connector				
21066	21066-7001	1	Regulator-Voltage				
21171	21171-7001	2	Coil-Assy-Ignition				
21193	21193-7001	1	Flywheel-Assy				
26011	26011-7001	1	Wire-Lead				
26011A	26011-7002	1	Wire-Lead				
26011B	26011-7003	1	Wire-Lead				
26011C	26011-7004	1	Wire-Lead				
26030	26030-7001	1	Harness				
59031	59031-7001	1	Coil-Charging				
92004	92004-2147	2	Stud				
92009	92009-2308	2	Screw				
92070	92070-7001	2	Plug-Spark (RCJ8Y)				
92072	92072-7001	2	Band				
92151	92151-2097	1	Bolt, 12x30				
92220	92220-7002	1	Washer				
130	130B0620	1	Bolt-Flanged				
224	224B0520	4	Screw-Pan-WP-Cros				
510	510A5100	1	Key-Woodruff				
PROTOTYPE							

Control-Equipment Assembly Kawasaki FH500V-AS10

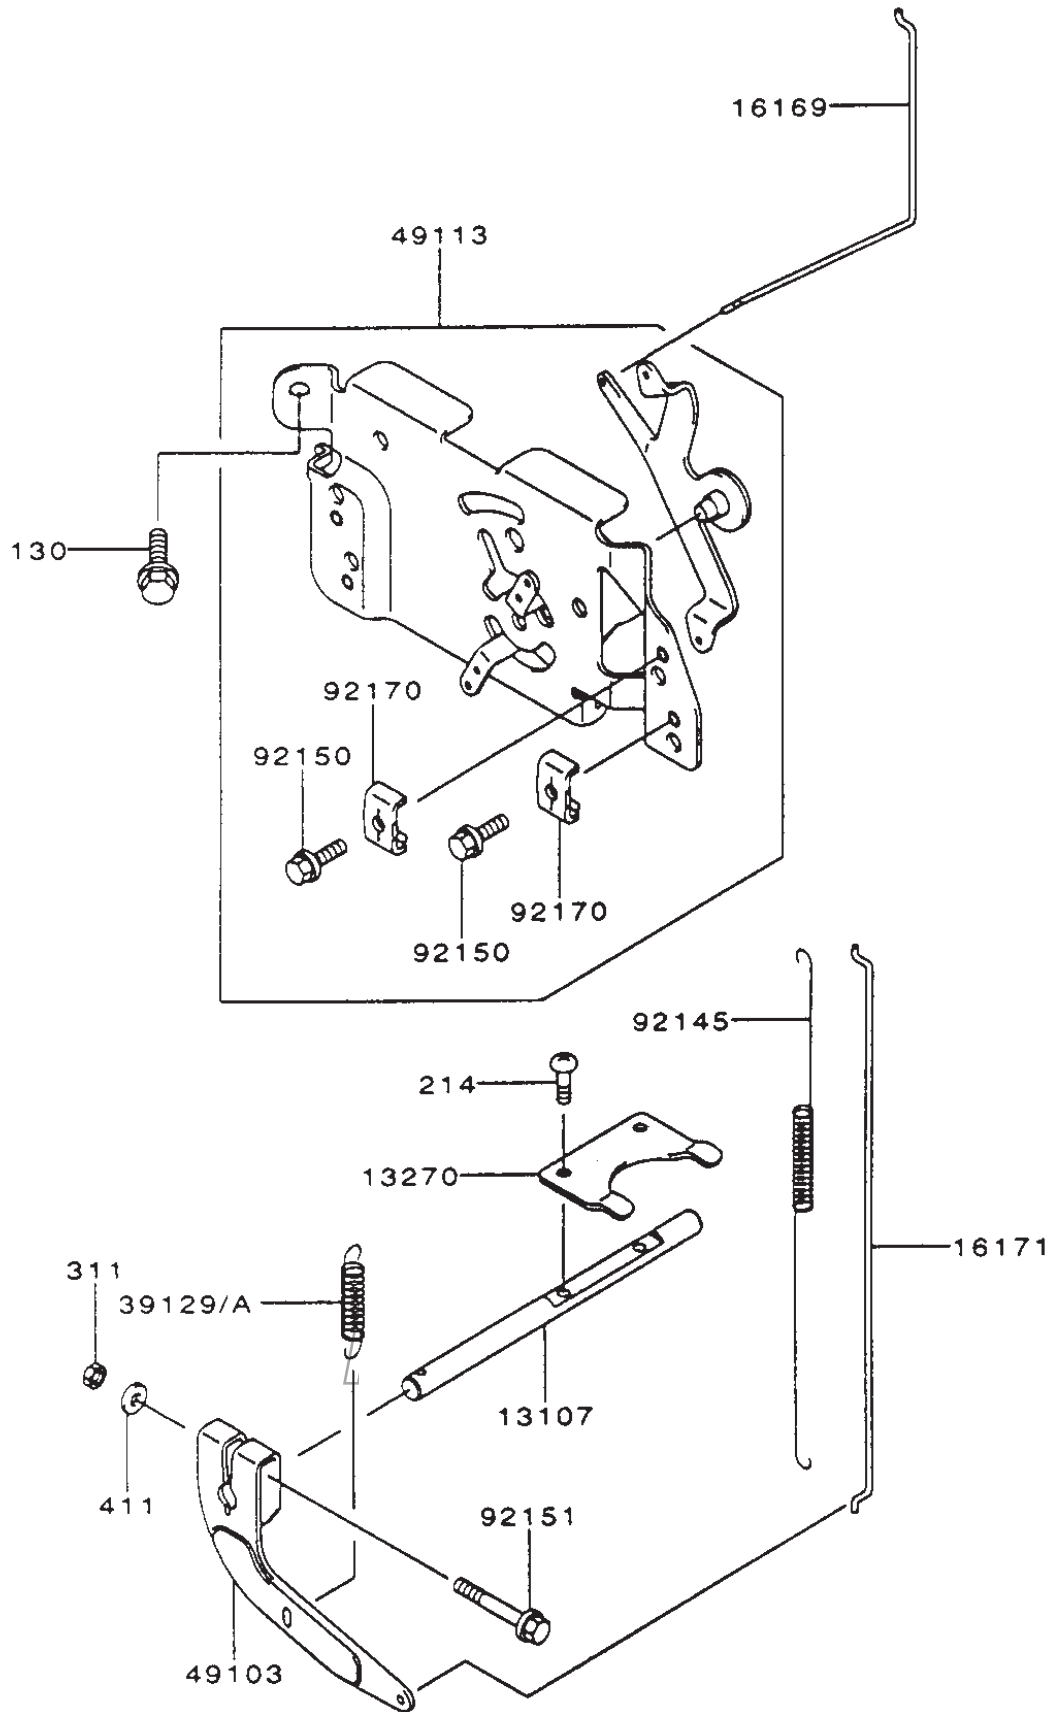


DE

Control-Equipment Assembly Kawasaki FH500V-AS10


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
13107	13107-7002	1	Shaft				
13270	13270-7006	1	Plate				
16169	16169-7001	1	Link-Choke				
16171	16171-7001	1	Link				
39129	39129-7002	1	Spring-Governor				
39129A	39129-7003	1	Spring-Governor				
49103	49103-7001	1	Arm-Governor				
49113	49113-7002	1	Panel-Comp-Control				
92145	92145-7003	1	Spring				
92150	92150-2182	2	Bolt, 5x18				
92151	92151-7006	1	Bolt, 6x30				
92170	92170-7001	2	Clamp				
130	130B0612	2	Bolt-Flanged				
214	214B0408	2	Screw-Pan				
311	311B0600	1	Nut-Hex				
411	411B0600	1	Washer-Plain				
PROTOTYPE							

Carburetor Assembly Kawasaki FH500V-AS10

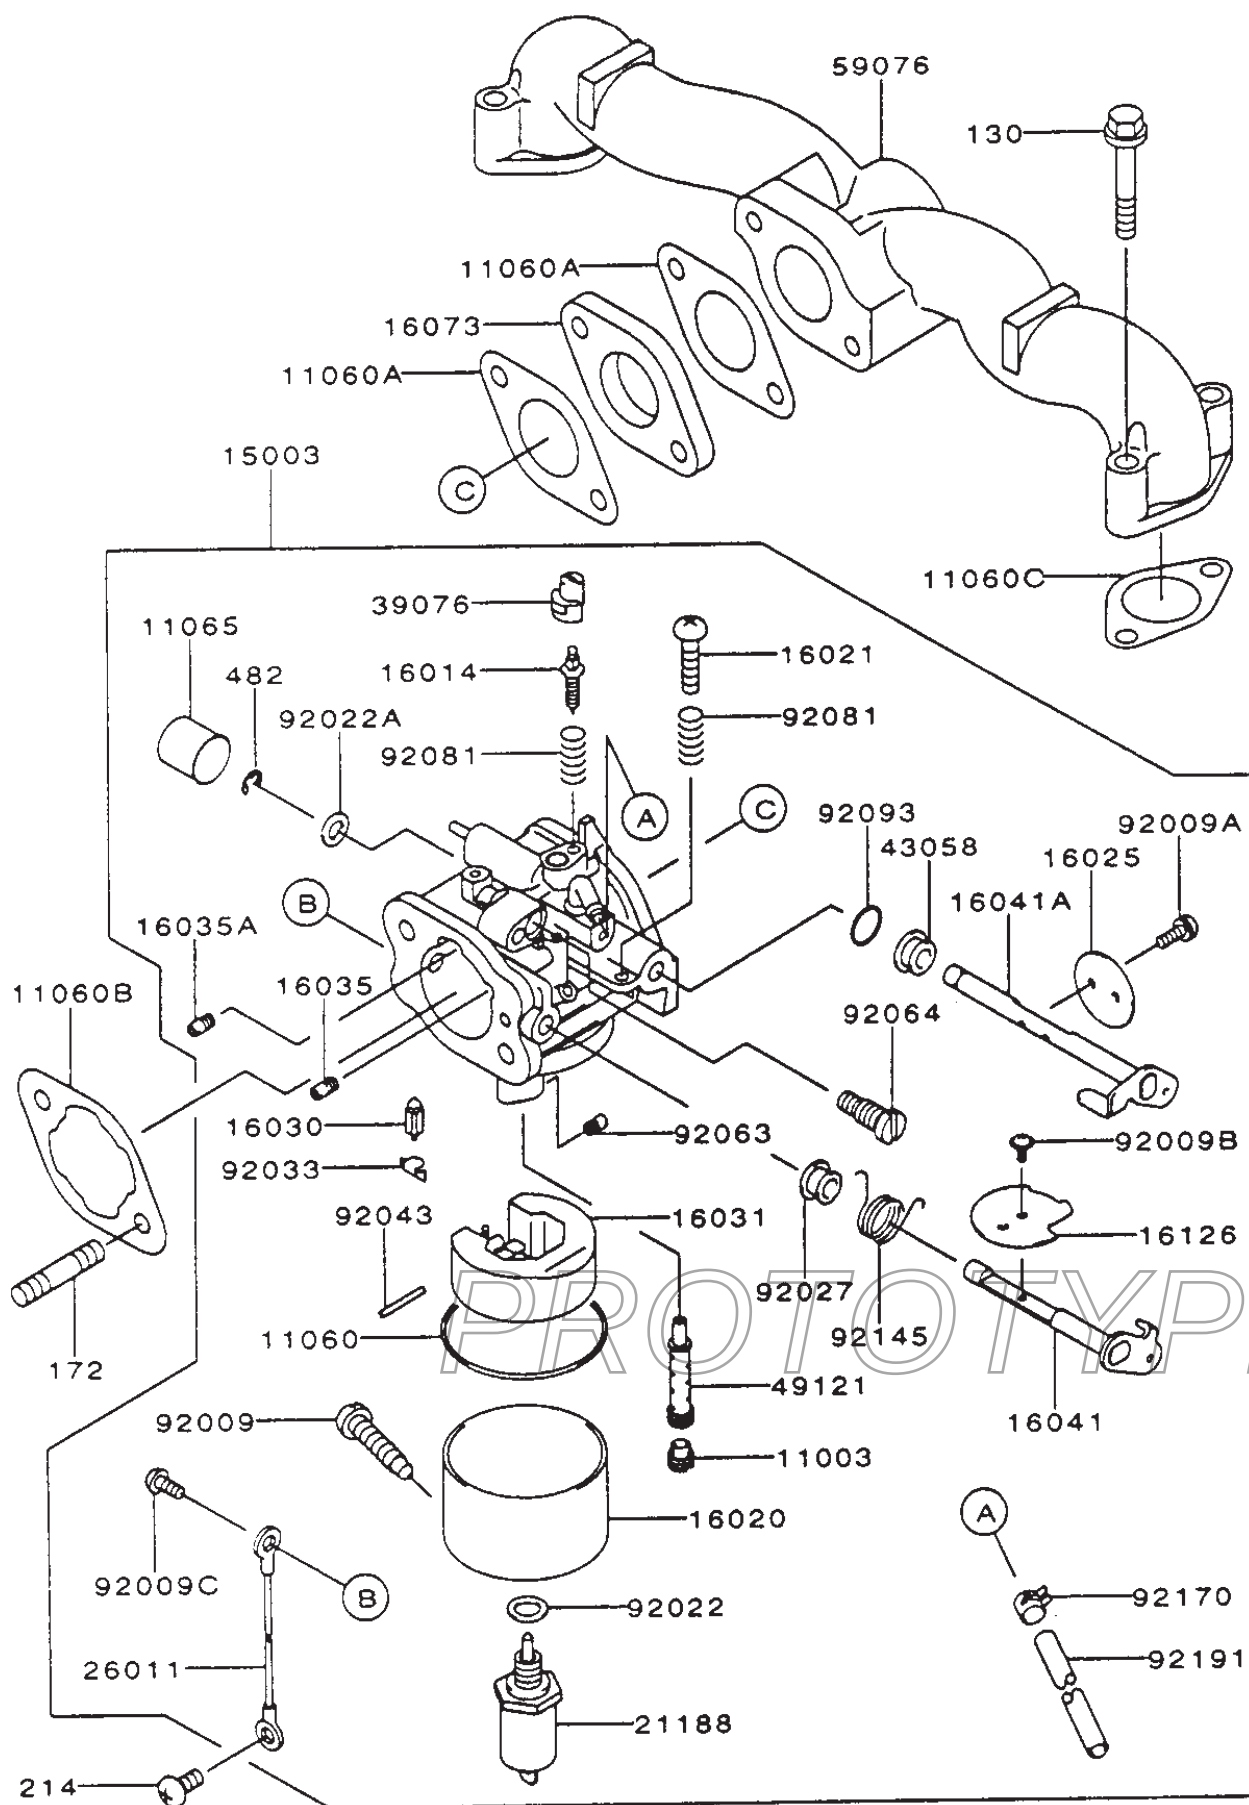

Carburetor Assembly Kawasaki FH500V-AS10


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
11003	11003-2105	1	Seat-Valve				
11060	11060-2406	1	Gasket				
11060A	11060-7003	2	Gasket, Insulator				
11060B	11060-7004	1	Gasket, Air Filter				
11060C	11060-7005	2	Gasket				
11065	11065-2061	1	Cap				
15003	15003-2632	1	Carburetor-Assy				
16014	16014-2080	1	Screw-Pilot Air				
16020	16020-2141	1	Chamber-Float				
16021	16021-2060	1	Screw-Throttlestop				
16025	16025-2193	1	Valve-Throttle, #130				
16030	16030-2067	1	Valve-Float				
16031	16031-2066	1	Float				
16035	16035-2060	1	Jet-Air, #1.7				
16035A	16035-2061	1	Jet-Air, #1.2				
16041	16041-2252	1	Shaft-Carburetor, Choke				
16041A	16041-2253	1	Shaft-Carburetor Throttle				
16073	16073-7001	1	Insulator				
16126	16126-2218	1	Valve				
21188	21188-2011	1	Solenoid				
26011	26011-2281	1	Wire-Lead				
39076	39076-2053	1	Limiter				
43058	43058-3716	1	Ring				
49121	49121-2222	1	Nozzle-Main				
59076	59076-7001	1	Manifold-Intake				
92009	92009-2015	1	Screw				
92009A	92009-2024	2	Screw				
92009B	92009-2081	1	Screw				
92009C	92009-2400	1	Screw				
92022	92022-2231	1	Washer				
92022A	92022-2239	1	Washer				
92027	92027-2025	1	Collar				
92033	92033-2067	1	Ring-Snap				
92043	92043-2226	1	Pin				
92063	92063-2358	1	Jet-Main				
92064	92064-2125	1	Jet-Pilot				
92081	92081-2009	2	Spring				
92093	92093-2002	1	Seal				
92145	92145-2061	1	Spring				
92170	92170-2023	1	Clamp				
92191	92191-2067	1	Tube				
130	130B0635	4	Bolt-Flanged				
172	172G0685	2	Bolt-Stud				
214	214B0510	1	Screw-Pan				
482	482L400	1	Circlip-Type-E				

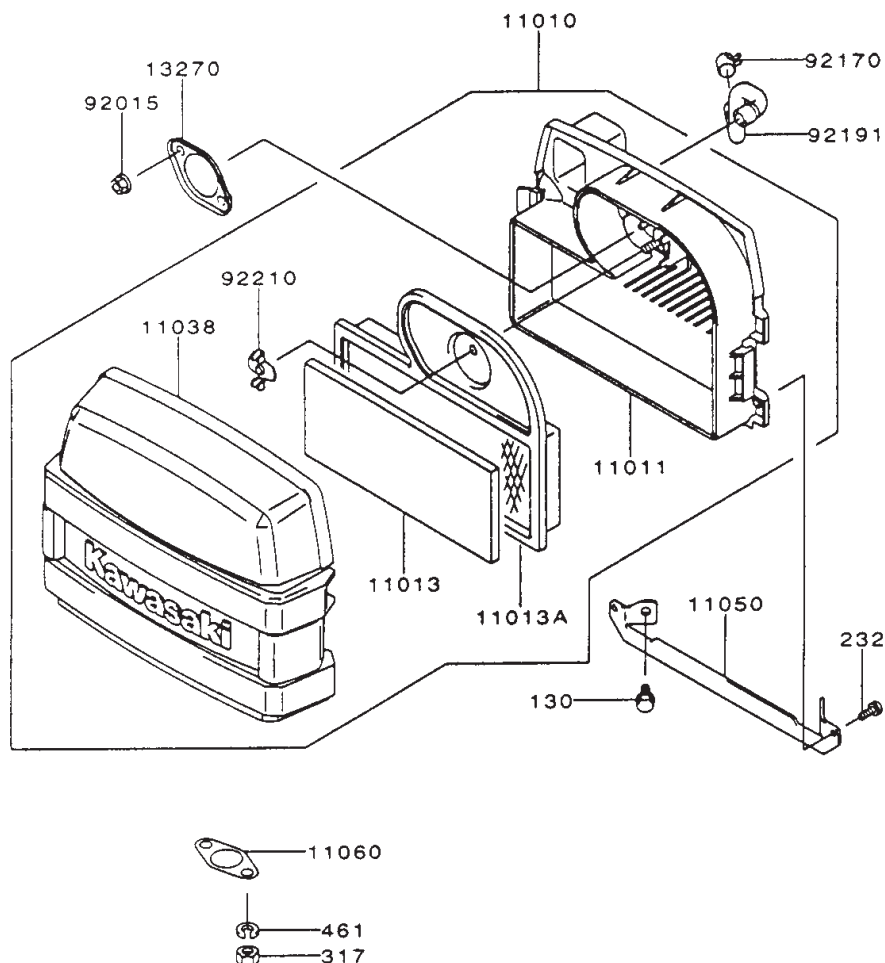

Air-Filter/Muffler Assembly Kawasaki FH500V-AS10

Ref. No.	Part No.	Qty.	Description
11010	11010-7001	1	Filter-Assy-Air
11011	11011-7001	1	Case-Air Filter
11013	11013-7001	1	Element-Air Filter
11013A	11013-7002	1	Element-Air Filter
11038	11038-7001	1	Case-Assy-Air Filter
11050	11050-7006	1	Bracket
11060	11060-7006	2	Gasket, Muffler
13270	13270-7001	1	Plate
92015	92015-1193	2	Nut
92170	92170-7003	1	Clamp
92191	92191-7001	1	Tube
92210	92210-7004	1	Nut
130	130B0612	2	Bolt-Flanged
232	232B0514	2	Screw-Pan-WS
317	317R0800	4	Nut-Hex-Small
461	461F0800	4	Washer-Spring

Ref. No.	Part No.	Qty.	Description
OTOTYPE			

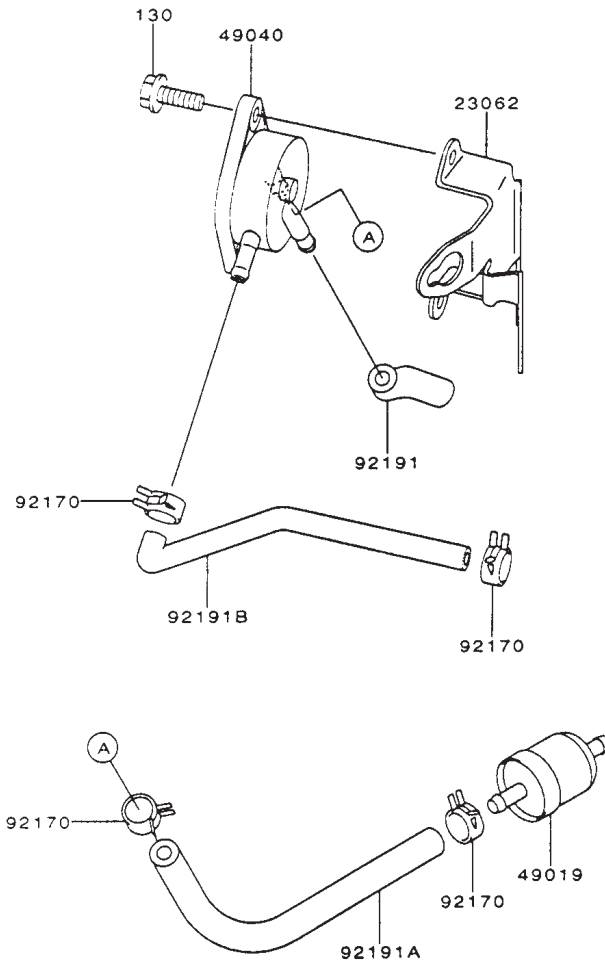

Fuel-Tank/Fuel-Valve Assembly Kawasaki FH500V-AS10

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
23062	23062-7001-9H	1	Bracket-Comp				
49019	49019-7001	1	Filter-Fuel				
49040	49040-2075	1	Pump-Fuel				
92170	92170-2088	4	Clamp				
92191	92191-7002	1	Tube				
92191A	92191-7003	1	Tube,6.35x12.7x160				
92191B	92191-7004	1	Tube				
130	130B0620	2	Bolt-Flanged				

Maintenance Record

[illegible]



PROTOTYPE