



Proline[®] 21" Recycler[®] Mower

Model No. 22172—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	3	Valve and Camshaft Assembly	14
Housing Assembly 98-7146	4	Control Linkage Assembly	15
Front Wheel and Tire Assembly	5	Fuel Tank and Fuel Valve Assembly	16
Gear Case Assembly No. 74-1861	6	Flywheel and Ignition Assembly	17
Engine and Blade Brake Clutch Assembly	7	Carburetor Assembly	18
Handle Assembly	8	Piston and Crankshaft Assembly	19
Panel and Controls Assembly	9	Air Filter and Muffler Assembly	20
Gear Case and Rear Wheel Assembly	10	Cover and Cooling Assembly	21
Rear Wheel and Tire Assembly No. 74-1720 ..	11	Dipstick Assembly	22
Grass Bag Assembly No. 99-2535	12	Recoil Starter Assembly	23
Cylinder and Crankcase Assembly	13		

 
Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Discharge Kit	59199		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

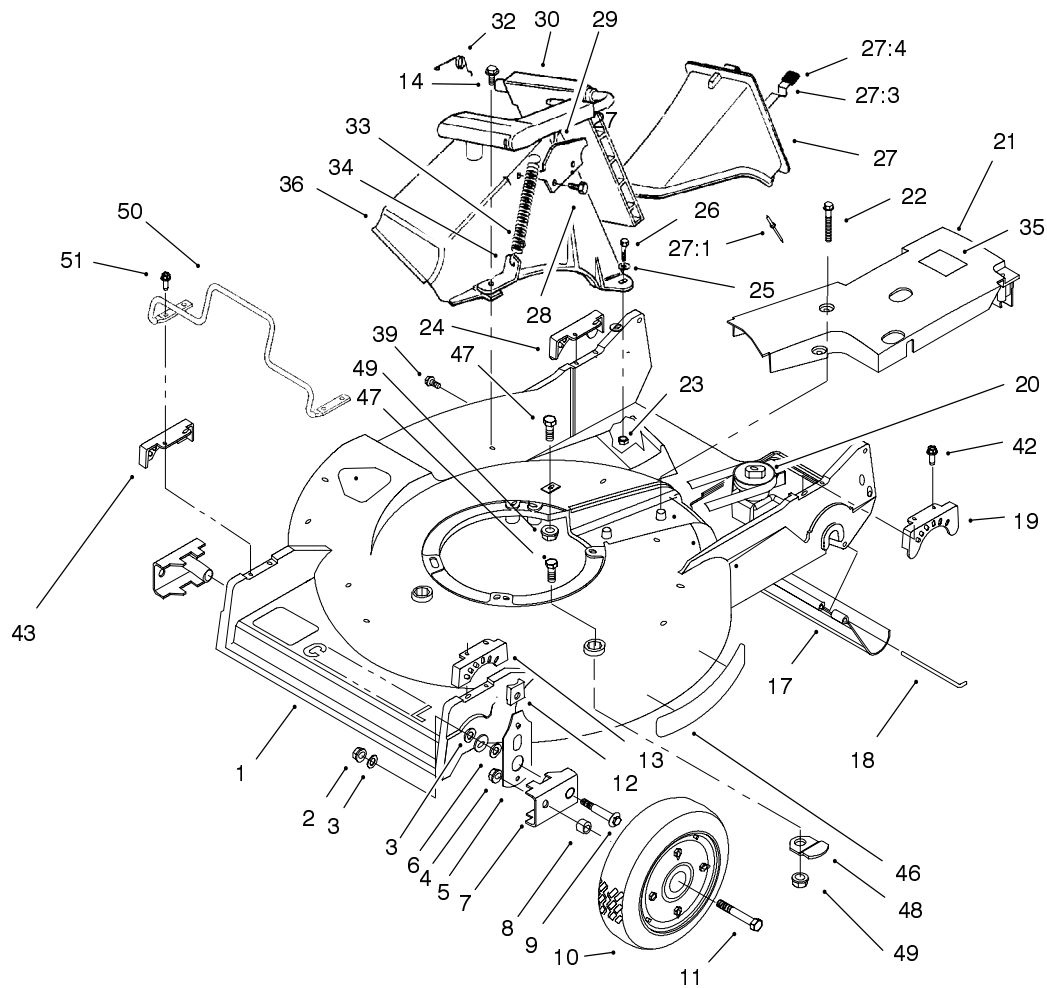


Sheet No.:2

C-2987

Housing Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-7146	1	Housing	27:3	76-4640	1	Latch-Plug, Discharge
2	3296-6	2	Nut-Lock, NI	27:4	76-4650	1	Grip-Latch
3	40-1940	4	Washer	28	46-8090	2	Screw-Plastite
4	32152-2	2	Nut-Conelock	29	93-3154	1	Latch-Plate
5	66-7560	2	Front Spring Arm ASM	30	93-7351	1	Discharge Door ASM
6	257-3	2	Washer-Thrust	32	80-3770	1	Retainer-Door
7	61-8300	2	Arm-Pivot, Front	33	76-4660	1	Spring-Door
8	52-2480	2	Spacer-Wheel	34	71-9350	1	Bracket-Spring
9	27-6232	2	Bolt-Wheel	35	52-2620	1	Label-Grease
10	53-7720	2	Wheel & Tire ASM	36	82-9152	1	Tunnel-Discharge
11	323-12	2	Screw-HH	39	46-6810	1	Screw & Washer ASM
12	25-7740	2	Knob-Arm	42	49-2040	4	Screw-Tapping
13	49-8760	1	Quadrant-Front, LH	43	49-8770	1	Quadrant-Front, RH
14	46-6811	1	Screw-HWH	46	92-7988	1	Decal - Recycler
17	44-0580	1	Shield-Trailing	47	323-6	3	Screw-HH
18	33-3208	1	Rod-Shield	48	84-8930	2	Shield-Retainer
19	49-8740	1	Quadrant-Rear, LH	49	3296-39	3	Nut-Lock, NI
20	74-1861	1	Gear Case ASM	50	99-6722	1	Guard-Engine
21	99-6298	1	Cover-Belt	51	32144-86	4	Screw-HH
22	37-7260	2	Screw-HH				
23	3296-42	2	Nut-Lock NI				
24	49-8750	1	Quadrant-Rear, RH				
25	3256-22	2	Washer-Flat				
26	321-7	2	Screw-HH				
27	77-0500	1	Discharge Plug ASM				
27:1	3295-35	1	Rivet-Head, Flat				

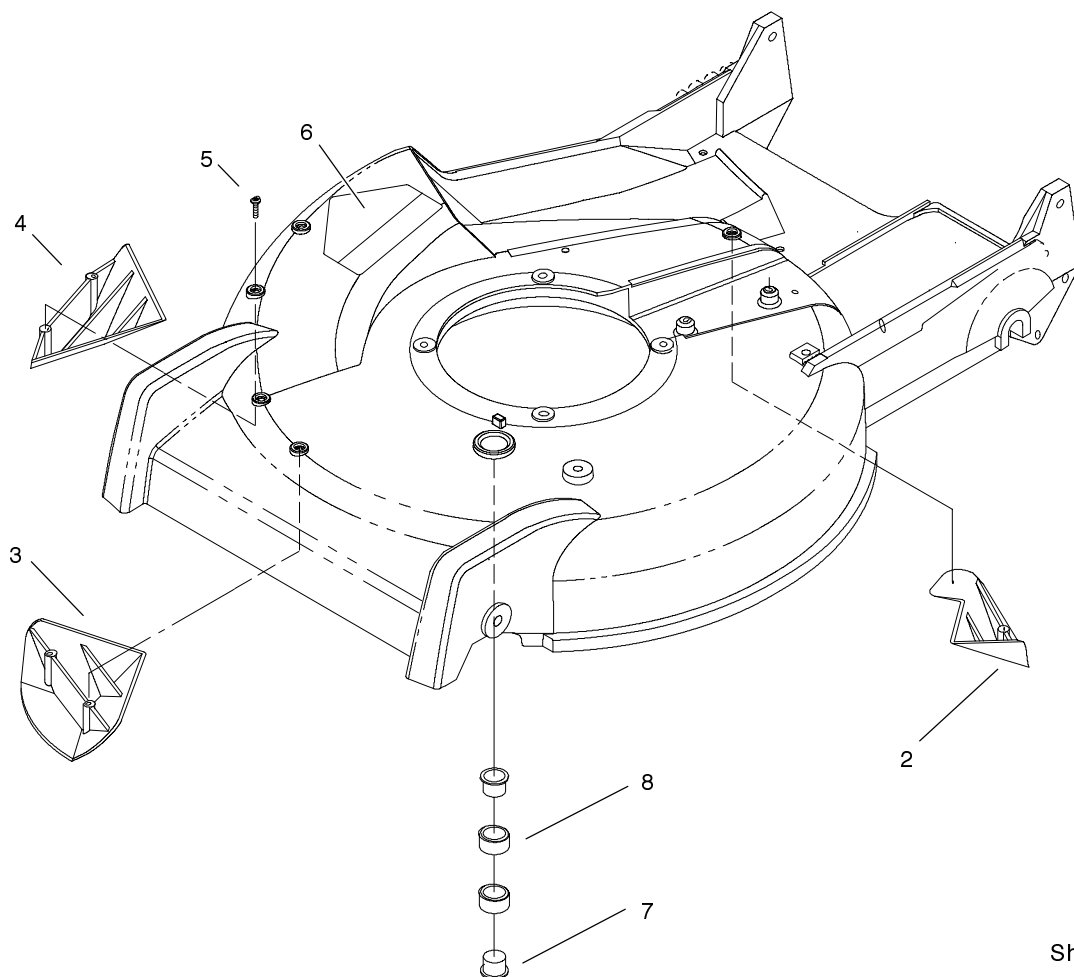 


Sheet No.:A1

Housing Assembly 98-7146

Ref. No.	Part No.	Qty.	Description
2	92-1750	1	Kicker-Rear
3	92-1720	1	Kicker-Front
4	92-1730	1	Kicker-RH
5	32144-111	6	Screw-PPH
6	43-8480	1	Decal-Danger
7	2410-72	2	Caplug
8	68-9780	2	Bearing

Ref. No.	Part No.	Qty.	Description

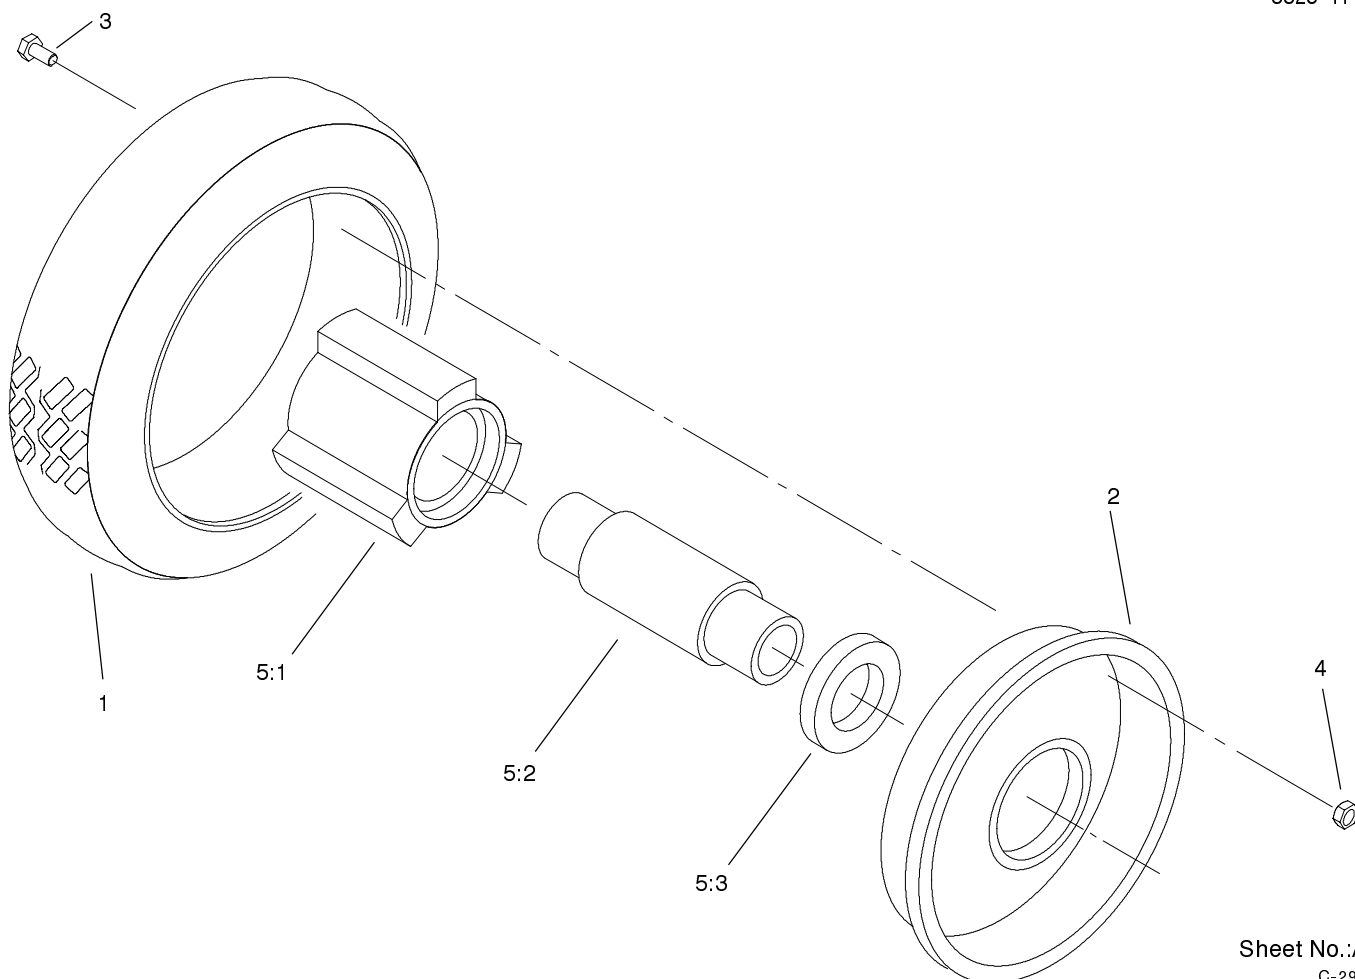 


Sheet No.:A2
C-2989

Front Wheel and Tire Assembly

Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire
2	53-7780-06	2	Plate-Wheel, Half
3	321-2	4	Screw-HH
4	3296-42	4	Nut-Lock NI
☆5		1	Hub & Bearing ASM
5:1	52-2410	1	Hub-Bearing
5:2	52-2440	1	Spacer-Bearing
5:3	52-2450	2	Bearing-Wheel

Ref. No.	Part No.	Qty.	Description

 ☆ Not serviced

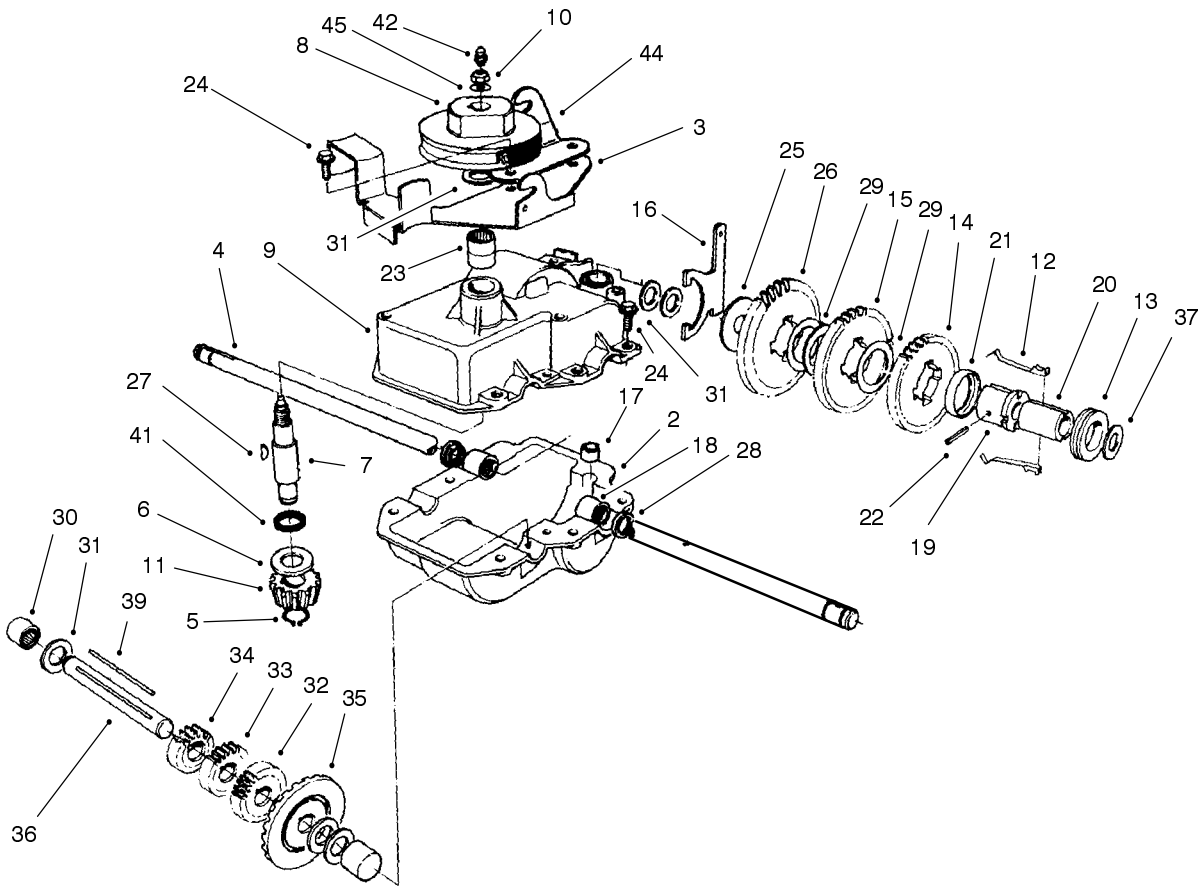


Sheet No.:A3

C-2990

Gear Case Assembly No. 74-1861

Ref. No.	Part No.	Qty.	Description
2	74-1920	1	Case-Gear, Lower
3	49-8461-03	1	Bracket-Guide, Belt
4	74-1890	1	Shaft-Output
5	32151-57	1	Ring-Retaining
6	47-2910	1	Washer-Thrust
7	68-8190	1	Shaft-Input
8	39-6740	1	Pulley
9	74-1880	1	Case-Gear, Upper
10	3296-5	1	Nut-Lock NI
11	39-6660	1	Pinion-Bevel
12	29-9330	2	Key
13	29-9340	1	Collar-Shift
14	42-4740	1	Gear-38 Tooth
15	29-9271	1	Gear-42 Tooth
16	60-8870	1	Yoke-Shift
17	29-9570	1	Bushing-Yoke
18	47-6730	2	Seal-Oil
19	55-8010	1	Sleeve-Gear
20	39-6720	1	Sleeve
21	55-8020	1	Retainer-Key
22	3285-19	1	Pin-Groove
23	47-7270	2	Bearing
24	49-2040	6	Screw-Tapping
25	29-9690	1	Washer
26	46-3560	1	Gear
27	3257-1	2	Key-Woodruff

Ref. No.	Part No.	Qty.	Description
28	48-2060	2	Bearing-Roller
29	36-4770	3	Washer
30	252-103	2	Bearing-Closed
31	36-4792	4	Washer-Thrust
32	39-6650	1	Gear-18t
33	46-3550	1	Gear-14t
34	46-3540	1	Gear-12t
35	74-1760	1	Gear-Bevel
36	53-7950	1	Shaft-Intermediate
37	36-4780	3	Washer
39	39-7842	1	Key
41	47-7260	1	Seal
42	302-63	1	Zerk
44	74-1750-03	1	Brake-Engage, Traction
45	3256-45	1	Washer-Flat

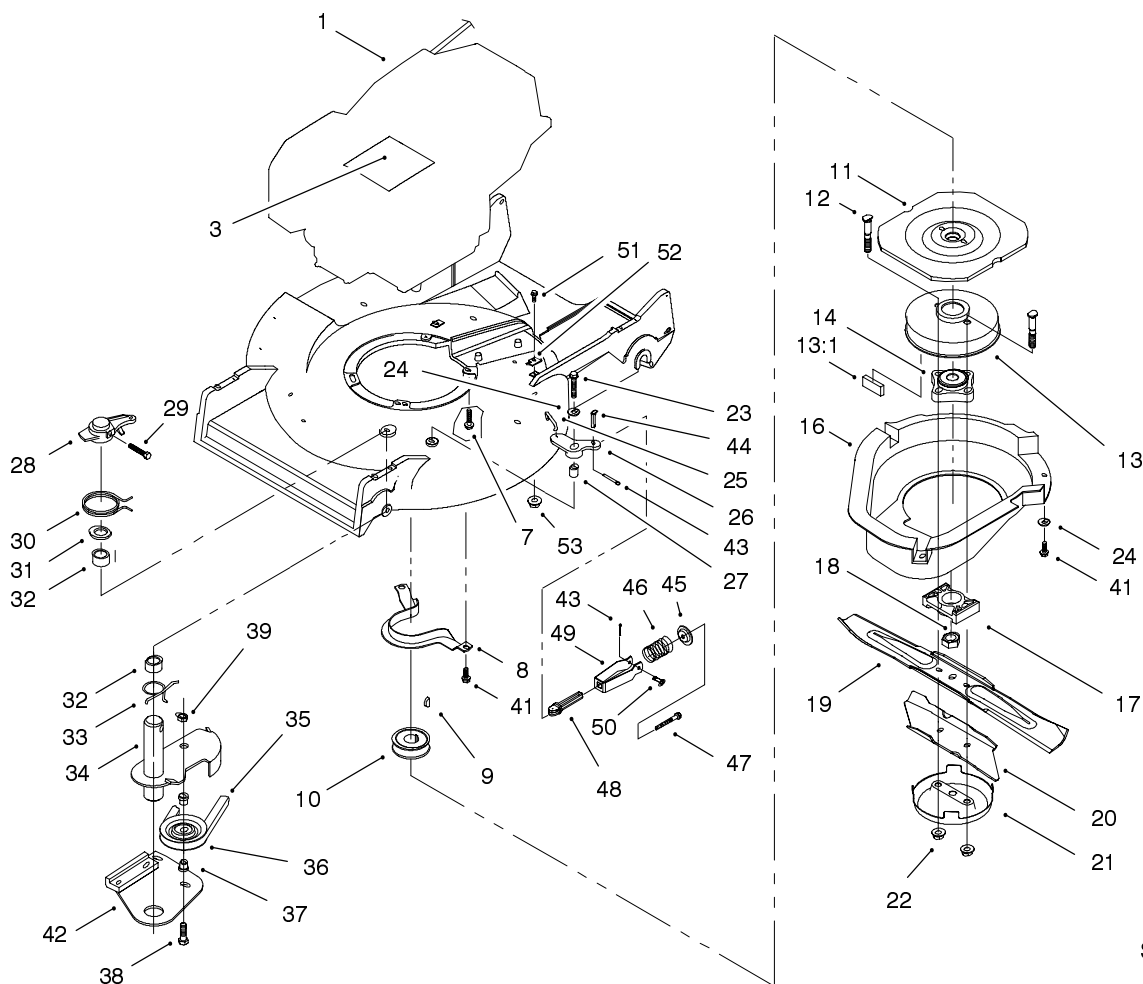 


Sheet No.:3

Engine and Blade Brake Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	104-1333	1	Engine-Kawasaki
3	104-1335	1	Decal-Engine
7	100-2835	3	Screw-Mount, Engine
8	66-0570-03	1	Bracket-Guide, Belt
9	3257-17	1	Key-Woodruff
10	56-6180	1	Driver-Pulley
11	56-6160-03	1	Flywheel - Bbc
12	42-3190	2	Bolt-Blade
13	94-9431	1	Brake Drum ASM
13:1	52-3480	2	Dampner-Vibration
14	42-6890	1	Hub ASM
16	46-5693	1	Shield
17	62-4280	1	Spacer-Blade
18	603164	1	Nut-Blade
19	14-9419	1	Blade
20	91-2255-03	1	Stiffener-Blade
21	80-2770	1	Cup-Anti-Scalp
22	54-9190	2	Nut-Lock
23	32104-107	1	Screw-HH
24	3256-23	2	Washer-Flat
25	49-2810	1	Link - Control
26	49-7960	1	Bellcrank
27	49-7950	1	Sleeve-Bellcrank
28	49-2820	1	Lever
29	32104-96	1	Screw-HH
30	49-7970	1	Spring-Torsion


Ref. No.	Part No.	Qty.	Description
31	70-1160	1	Washer
32	68-9780	2	Bearing
33	85-6880	1	Spring-Torsion
34	84-9130	1	Plate-Brake
35	42-0884	1	V-Belt
36	46-5650	1	Pulley-Idler
37	46-5631	2	Hub-Pulley, Idler
38	322-6	1	Screw-HH
39	3296-47	1	Nut-Lock, NI
41	32144-70	3	Screw-HH
42	84-9180	1	Brake Plate ASM
43	3272-1	2	Pin-Cotter
44	84-9050	1	Pin-Spring
45	65-5280	1	Retainer-Spring
46	84-9100	1	Spring
47	46-7040	1	Screw-HWHTF
48	84-8870	1	Guide-Spring
49	84-8880-03	1	Bracket-Spring
50	84-9040	1	Pin-Cable
51	322-6	1	Screw-HH
52	62-3720	1	Clamp-Cable
53	3296-58	1	Nut-Lock NI

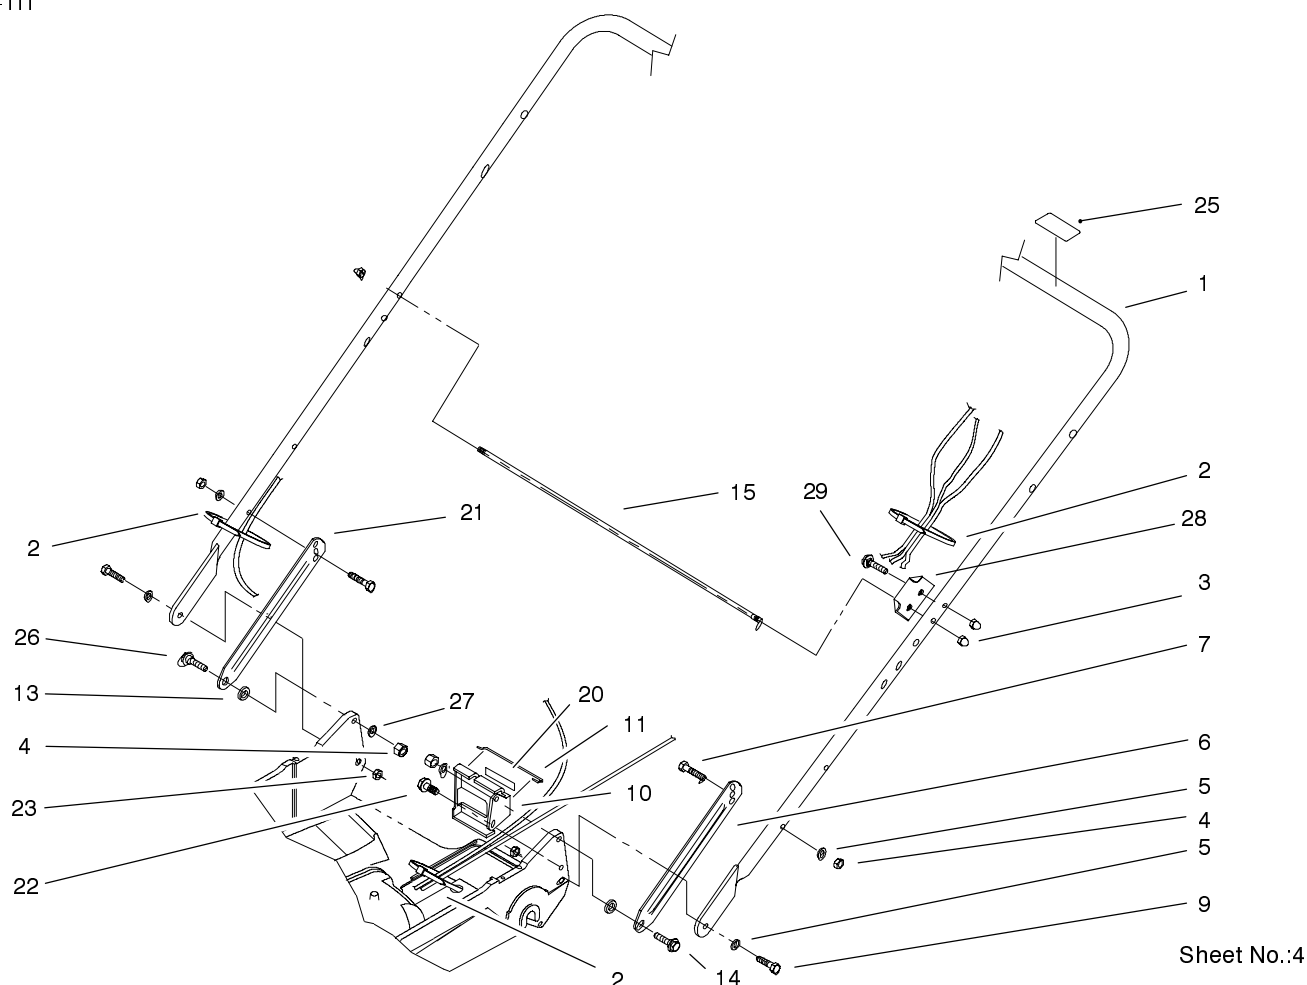 

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	98-2385-03	1	Handle
2	3290-378	3	Tie-Cable
3	32111-7	3	Nut-Cap
4	3296-29	4	Nut-Lock
5	3290-456	4	Washer-Belleville
6	100-3298-03	1	Latch-Handle, LH
7	322-7	2	Screw-HH
9	322-6	2	Screw-HH
10	74-1741	1	Bracket-Adjustment, Traction
11	46-7030	1	Retainer-Cable
13	3-3287	2	Spacer-Latch, Handle
14	27-7210	1	Screw-Shoulder
15	48-2810	1	Rod-Support, Bag
20	74-1970	1	Decal-Position, Gear
21	100-3297-03	1	Latch-Handle, RH
22	32144-70	1	Screw-HH
23	3296-47	2	Nut-Lock, NI
25	98-4387	1	Decal-Protection, Ear
26	27-7211	1	Screw-Shoulder
27	3256-23	2	Washer-Flat
28	104-1326	1	Plate - Bag Aligning
29	3229-3	1	Screw-CARR

Ref. No.	Part No.	Qty.	Description

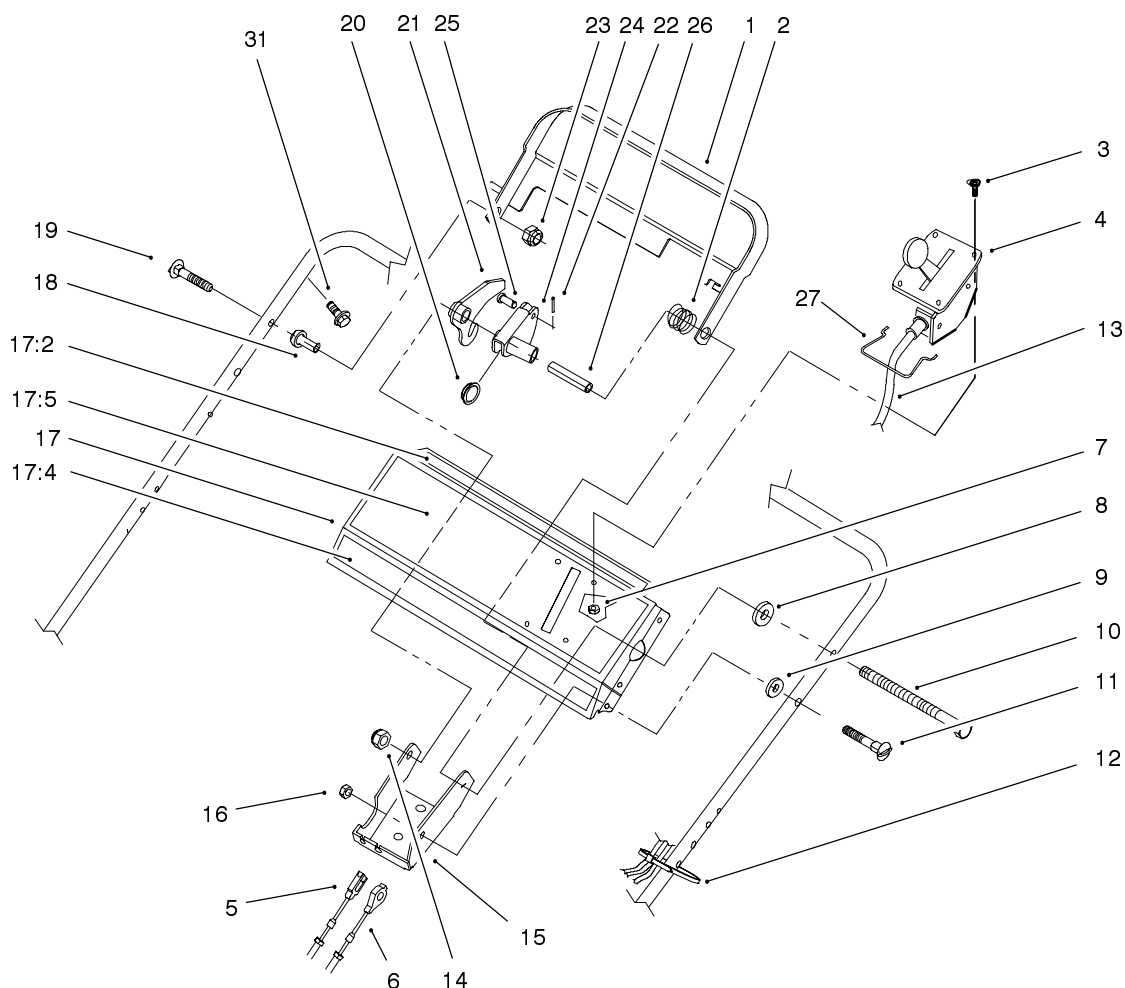 


Sheet No.:5

Panel and Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	84-8940-03	1	Bar-Control
2	85-6750	1	Spring-Control
3	3250-12	4	Screw-PPH
4	85-6770	1	Control-Throttle
5	84-9120	1	Cable-Traction
6	84-9110	1	Cable-Clutch
7	3296-2	4	Nut-Lock
8	71-9310	1	Spacer
9	71-9320	1	Spacer
10	322-19	1	Screw-HH
11	46-6430	1	Screw-Handle
12	3290-378	1	Tie-Cable
13	100-2839	1	Cable-Throttle
14	3296-29	1	Nut-Lock
15	92-1778-03	1	Bracket-Control
16	3296-42	1	Nut-Lock NI
17	14-7709	1	Panel W/Decals
17:2	63-9060	1	Decal - Danger Panel
17:4	85-6720	1	Decal-Panel, Proline
17:5	85-6730	1	Decal-Control Panel
18	49-1631	1	Spacer-Support
19	17-9427	1	Screw
20	86-9320	1	Bushing-Flange
21	84-9000	1	Lever-Traction
22	3272-1	1	Pin-Cotter
23	3296-58	1	Nut-Lock NI

Ref. No.	Part No.	Qty.	Description
24	84-8990	1	Lever-Bbc
25	84-9040	1	Pin-Cable
26	84-9030	1	Spacer-Bracket, Control
27	85-6780	1	Retainer-Cable, Throttle
31	32104-76	6	Screw

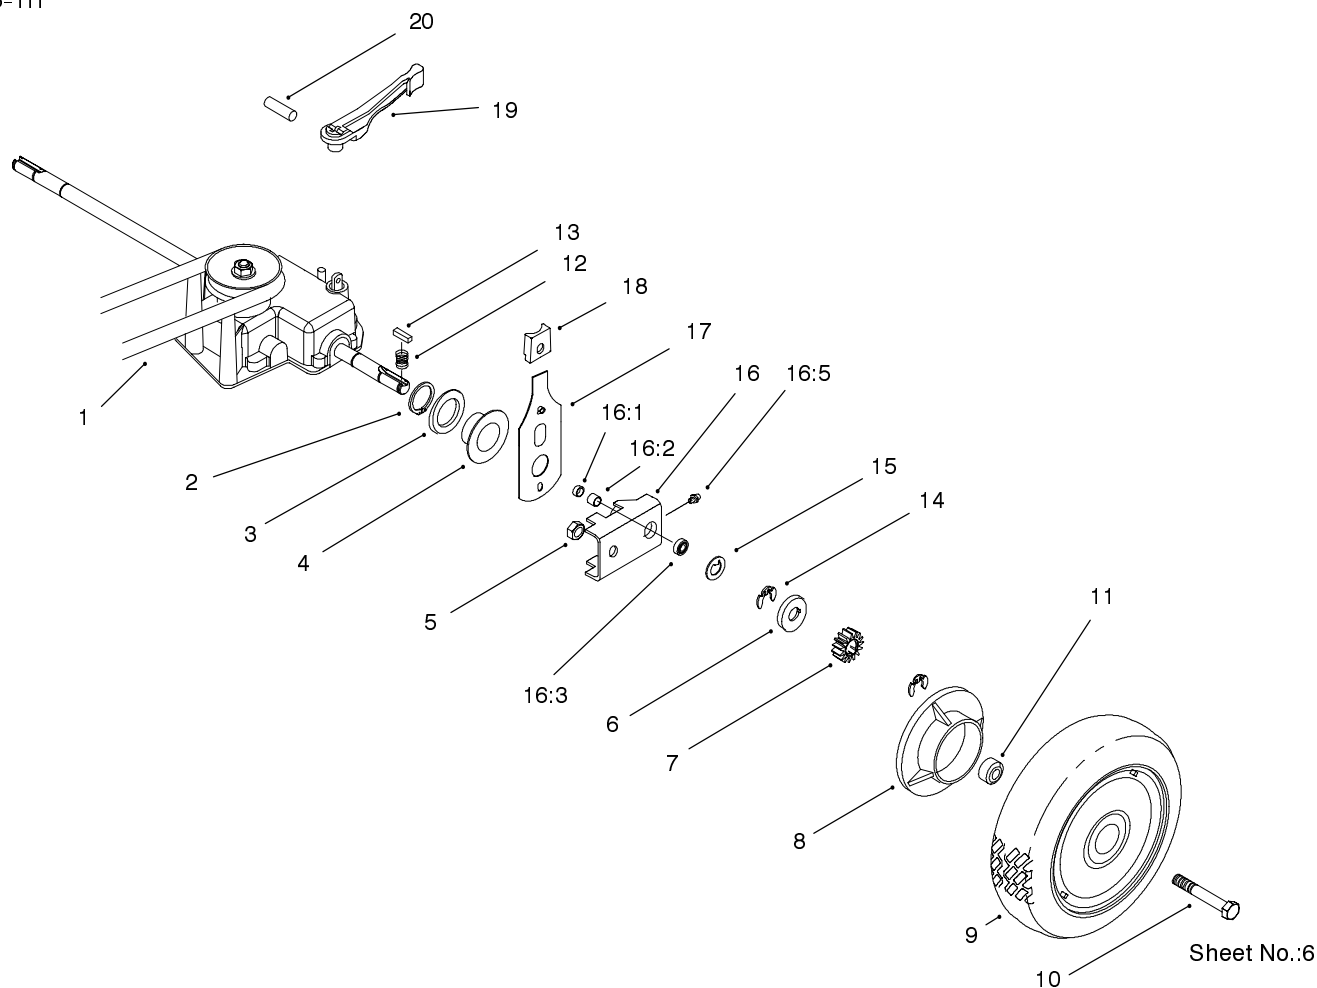 


Gear Case and Rear Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	36-8070	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	48-2170	2	Cap-End
5	32152-2	2	Nut-Conelock
6	62-3830	2	Washer-Thrust, Outer
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	74-1720	2	Wheel & Tire ASM
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Cover, Wheel
12	39-9650	2	Spring-Compression
13	612066	2	Key
14	32151-68	4	Ring-Retaining
15	49-7700	2	Washer-Thrust, Outer
16	74-1851	2	Pivot Arm ASM
16:1	47-6730	1	Seal-Oil
16:2	48-2060	1	Bearing-Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92-6316	1	Zerk-Drive, Special
17	66-7561	2	Rear Spring Arm ASM
18	25-7740	2	Knob-Arm
19	74-1960	1	Lever-Shift
20	32121-99	1	Pin-Coil
*99	100-2512	1	Tube-Oil Drain

Ref. No.	Part No.	Qty.	Description

 * Not illustrated

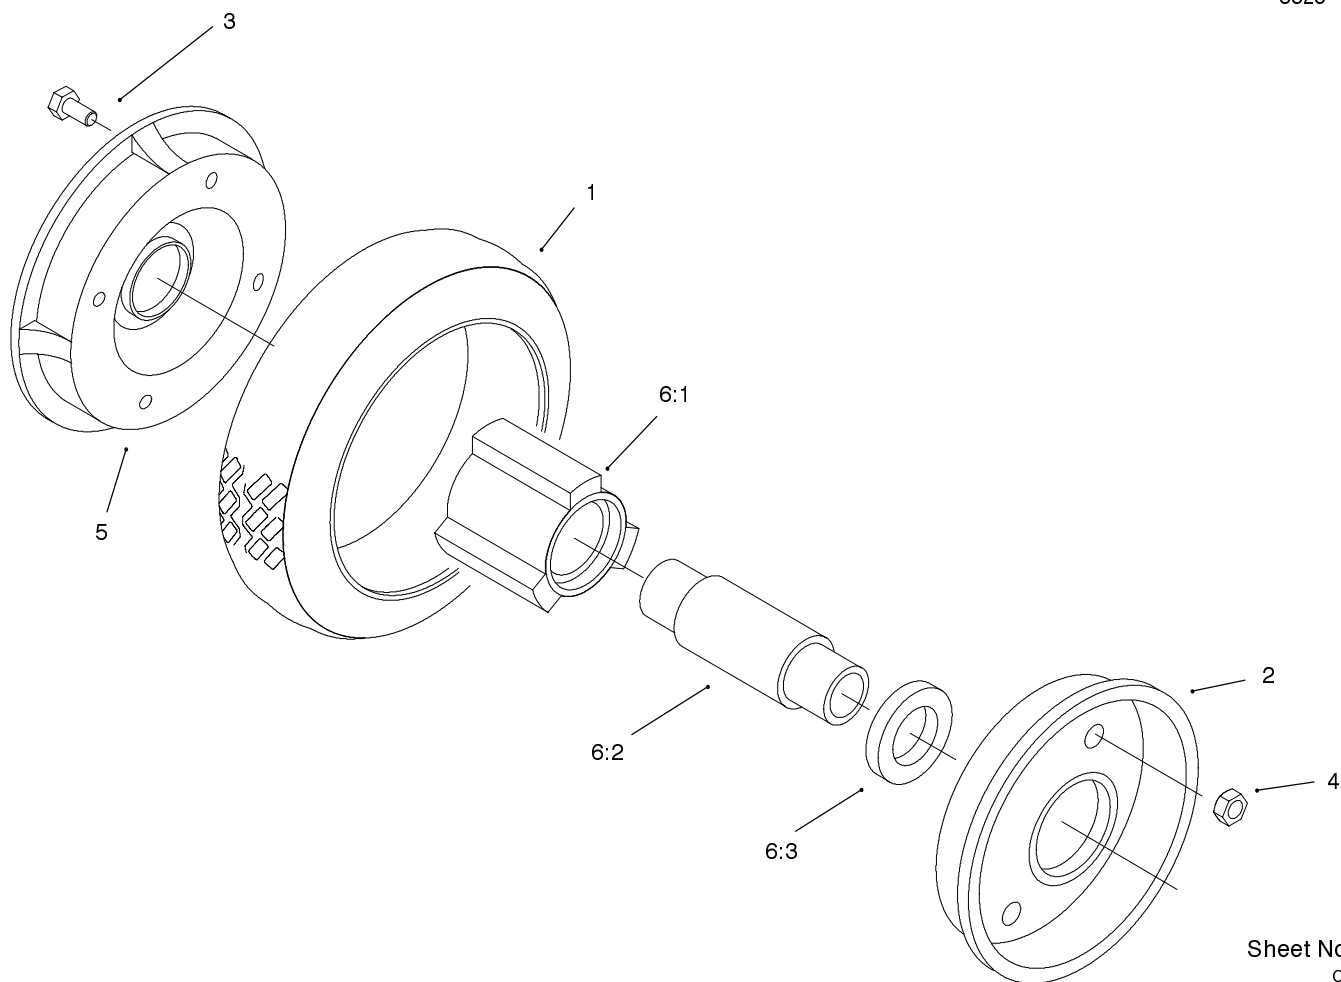


Sheet No.:A4
C-2991

Rear Wheel and Tire Assembly No. 74-1720

Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire
2	53-7780-06	1	Plate-Wheel, Half
3	321-2	4	Screw-HH
4	3296-42	4	Nut-Lock NI
5	92-4957-06	1	Wheel Half/Gear ASM
☆6		1	Hub & Bearing ASM
6:1	52-2410	1	Hub-Bearing
6:2	52-2440	1	Spacer-Bearing
6:3	52-2450	2	Bearing-Wheel

Ref. No.	Part No.	Qty.	Description

 ☆ Not serviced

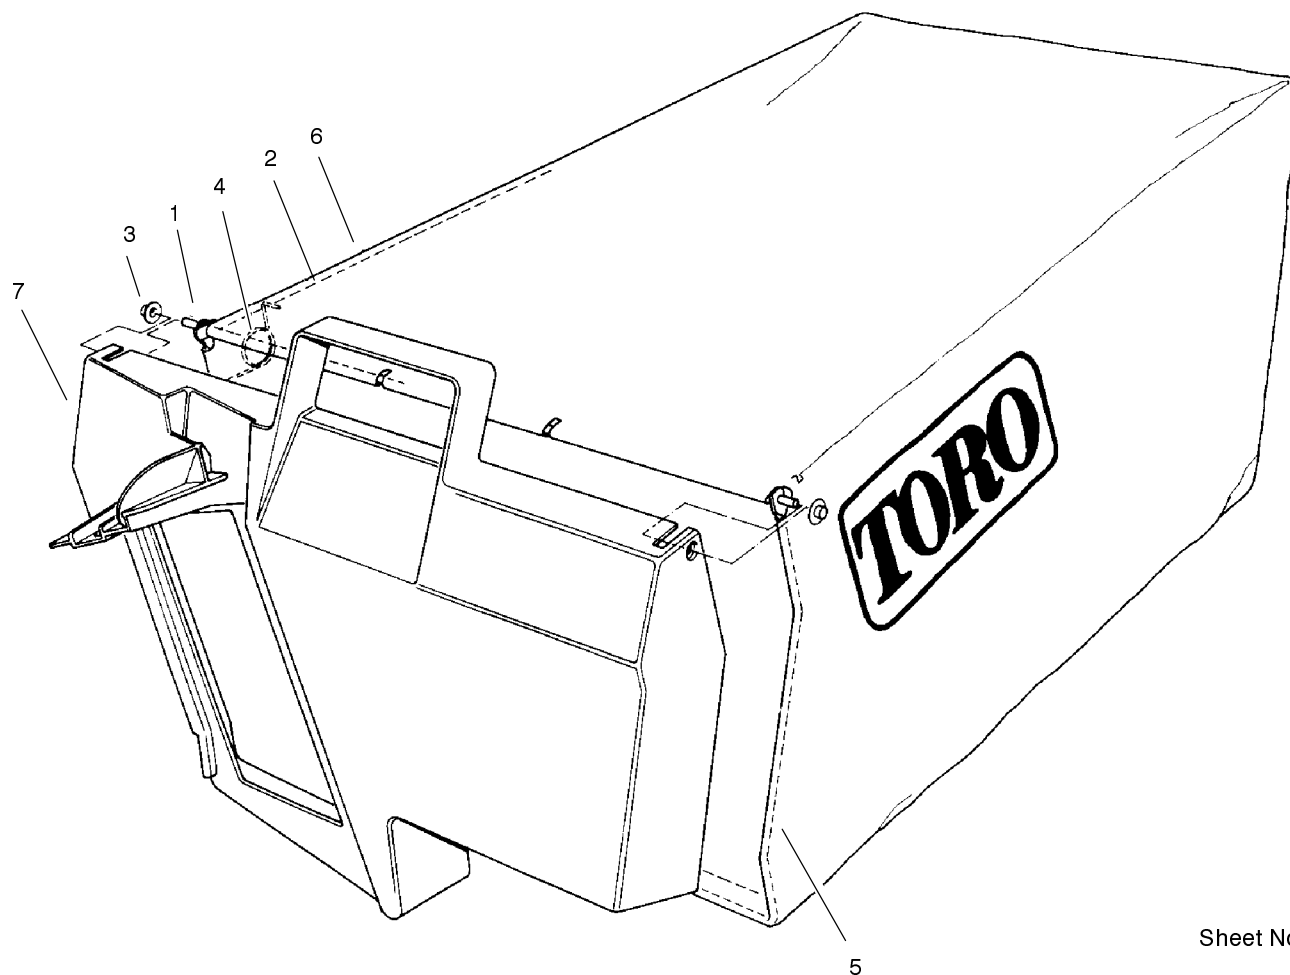


Sheet No.:A5

Grass Bag Assembly No. 99-2535

Ref. No.	Part No.	Qty.	Description
	99-2535	1	Grass Bag ASM
1	33-4820	1	Hinge-Door, Bag
2	42-4030	1	Frame-Bag, Upper
3	3290-422	2	Nut-Push
4	36-6910	2	Spring
5	42-4020	1	Frame-Bag
6	98-9225	1	Bag-Grass
7	48-2840	1	Door-Bag, Grass


Ref. No.	Part No.	Qty.	Description

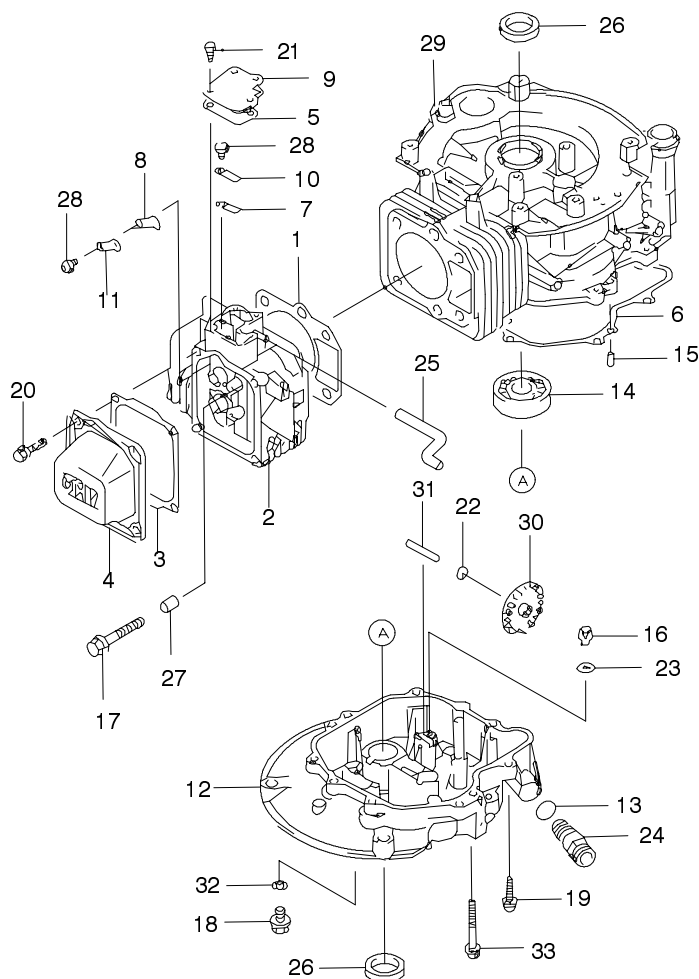 

Sheet No.:3

Cylinder and Crankcase Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2742	1	Gasket-Head	25	100-2846	1	Tube
2	100-2743	1	Head-Cylinder, Complete	26	100-2847	2	Seal-Oil
3	100-2744	1	Gasket-Case, Rocker	27	100-2848	2	Pin
4	100-2745	1	Case-Rocker	28	93-8549	2	Screw
5	100-2746	1	Cover-Gasket	29	100-2849	1	Crankcase-Complete
6	100-2747	1	Gasket-Cover, Crankcase	30	99-6728	1	Slinger-Oil
7	100-2748	1	Plate	31	99-6729	1	Shaft
8	100-2749	1	Plate	32	99-6730	1	Gasket
9	100-2779	1	Cover	33	100-2855	1	Bolt-Flanged
10	100-2780	1	Valve				
11	100-2781	1	Valve				
12	100-2782	1	Cover-Crankcase				
13	100-2840	1	O-Ring				
14	100-2841	1	Bearing-Ball				
15	93-8516	2	Pin				
16	100-2842	1	Bolt				
17	KW10035	4	Bolt-Flanged				
18	KW10033	1	Bolt-Flanged				
19	100-2610	6	Bolt-Flanged				
20	100-2804	4	Bolt-Flanged				
21	100-2609	4	Bolt-Flanged				
22	100-2843	1	Washer				
23	100-2844	1	Washer				
24	100-2854	1	Plug				

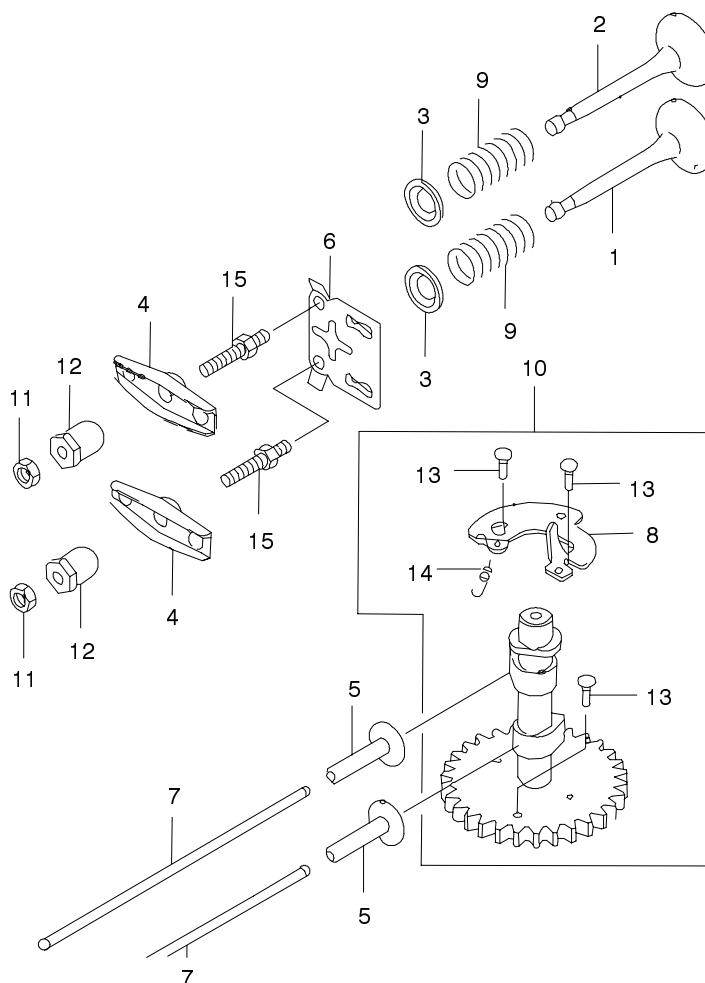 


Sheet No.:4

Valve and Camshaft Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2727	1	Valve-Intake
2	100-2728	1	Valve-Exhaust
3	100-2729	2	Retainer-Spring, Valve
4	100-2730	2	Arm-Rocker
5	100-2731	2	Tappet
6	100-2732	1	Guide
7	100-2733	2	Rod-Push
8	100-2734	1	Decompressor
9	100-2735	2	Spring-Valve, Engine
10	100-2736	1	Camshaft-Complete
11	93-8533	2	Nut
12	93-8534	2	Nut
13	100-2739	3	Pin
14	100-2740	1	Spring
15	100-2741	2	Bolt

Ref. No.	Part No.	Qty.	Description

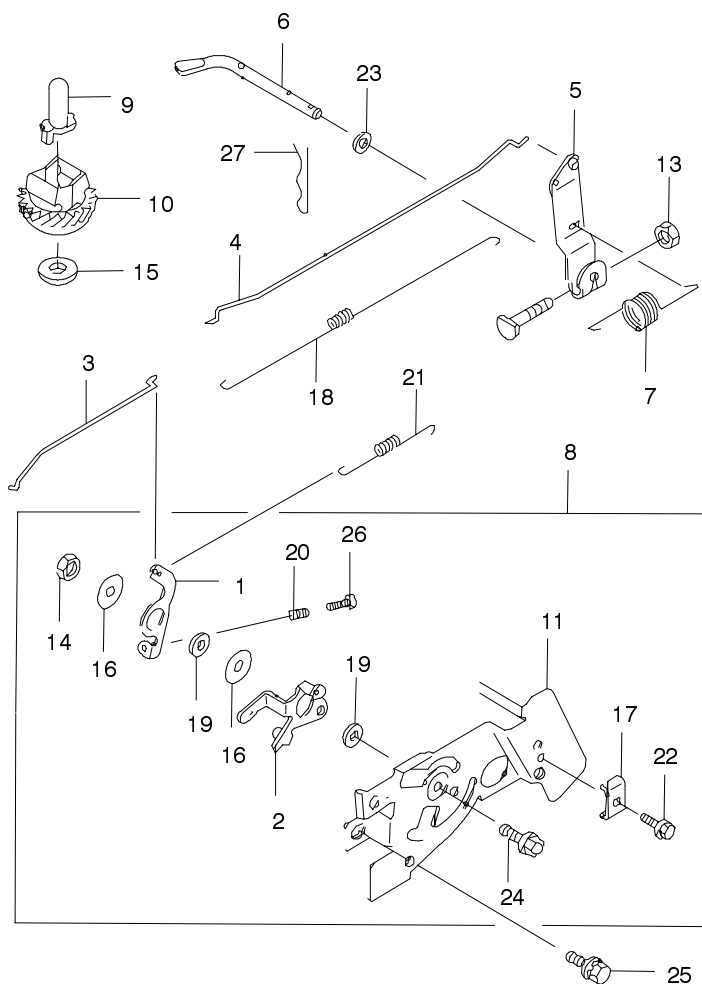 


Sheet No.:5

Control Linkage Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2700	1	Lever	26	100-2725	1	Screw-Pan
2	100-2701	1	Lever	27	93-8607	1	Pin-Snap
3	100-2702	1	Link-Choke				
4	100-2703	1	Link				
5	100-2704	1	Arm ASM				
6	100-2705	1	Arm-Pivot				
7	100-2706	1	Spring-Governor				
8	100-2707	1	Control Panel ASM				
9	100-2708	1	Sleeve				
10	93-8611	1	Governor ASM				
11	100-2710	1	Panel-Control				
*12	93-8608	1	Washer				
13	93-8631	1	Nut				
14	93-8595	1	Nut				
15	94-6842	1	Washer				
16	100-2715	2	Washer				
17	95-9849	1	Clamp				
18	100-2717	1	Link-Spring				
19	100-2718	2	Collar				
20	93-8588	1	Spring				
21	100-2720	1	Spring				
22	95-9853	1	Bolt				
23	93-8608	1	Washer				
24	95-9837	1	Bolt - Flanged				
25	100-2724	2	Bolt				

 * Not illustrated

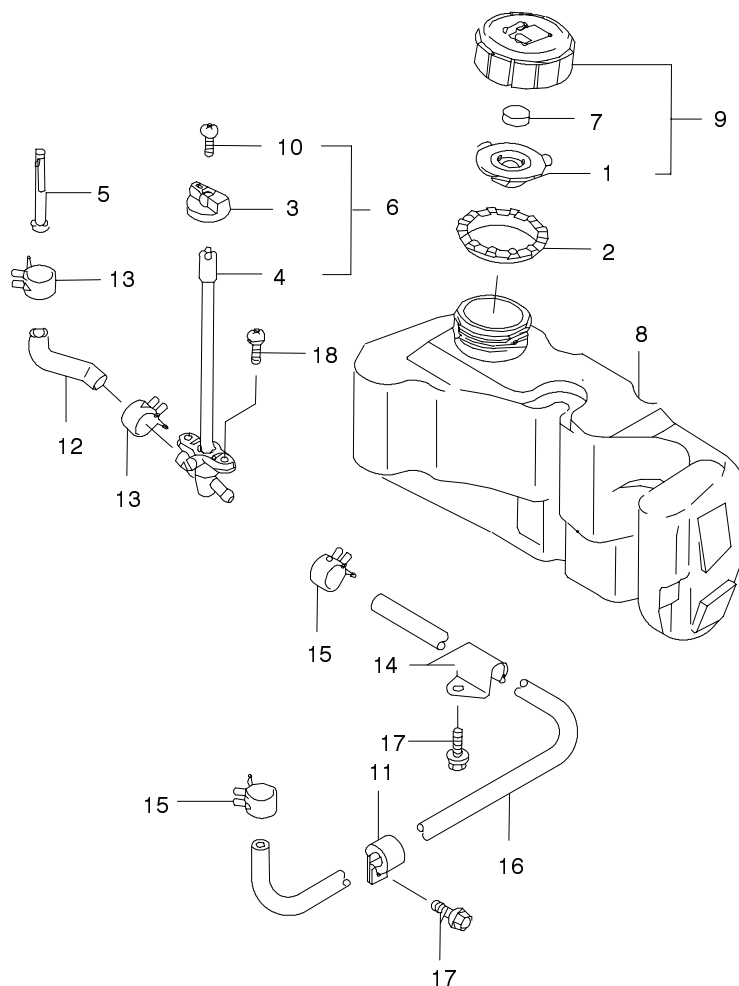


Sheet No.:6

Fuel Tank and Fuel Valve Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2808	1	Gasket
2	100-2809	1	Guide
3	100-2810	1	Lever
4	100-2811	1	Filter-Complete
5	100-2812	1	Filter-Fuel
6	100-2814	1	Valve - Fuel
7	100-2813	1	Element-Breather
8	100-2815	1	Tank-Fuel, Complete
9	100-2816	1	Tank Cap ASM
10	100-2817	1	Screw
11	100-2818	1	Clamp
12	100-2819	1	Tube
13	100-2820	2	Clamp
14	100-2821	1	Clamp
15	100-2822	2	Clamp
16	100-2823	1	Tube
17	100-2804	2	Bolt-Flanged
18	100-2825	2	Screw-Pan


Ref. No.	Part No.	Qty.	Description

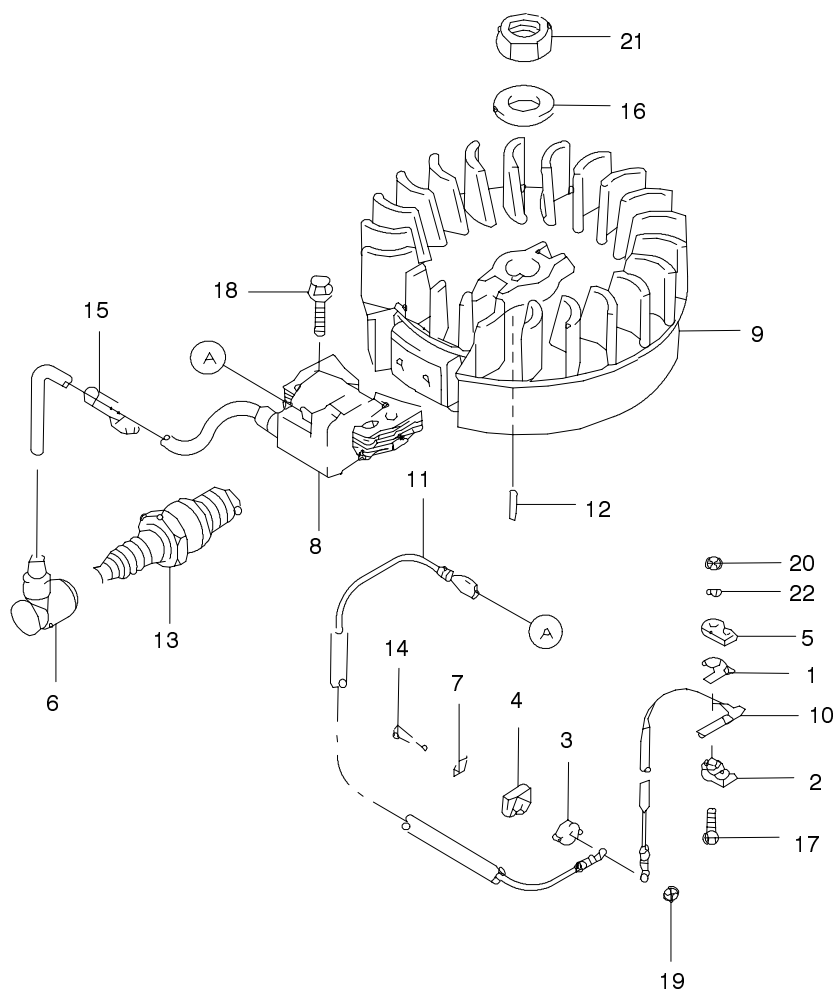 

Sheet No.:7

Flywheel and Ignition Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
3	100-2652	1	Cover				
4	100-2653	1	Insulator				
6	KW10087	1	Plug-Cap				
7	100-2796	1	Terminal				
8	100-2657	1	Ignition Coil ASM				
9	100-2658	1	Flywheel-Complete				
11	100-2660	1	Wire-Lead				
12	93-8571	1	Key				
13	KW10676	1	Plug-Spark				
14	100-2663	1	Bolt				
15	100-2664	1	Clamp				
16	100-2665	1	Washer				
18	100-2610	2	Bolt-Flanged				
19	100-2668	1	Nut-Hex				
21	93-8568	1	Nut				
23	100-2798	1	Washer-Plain				

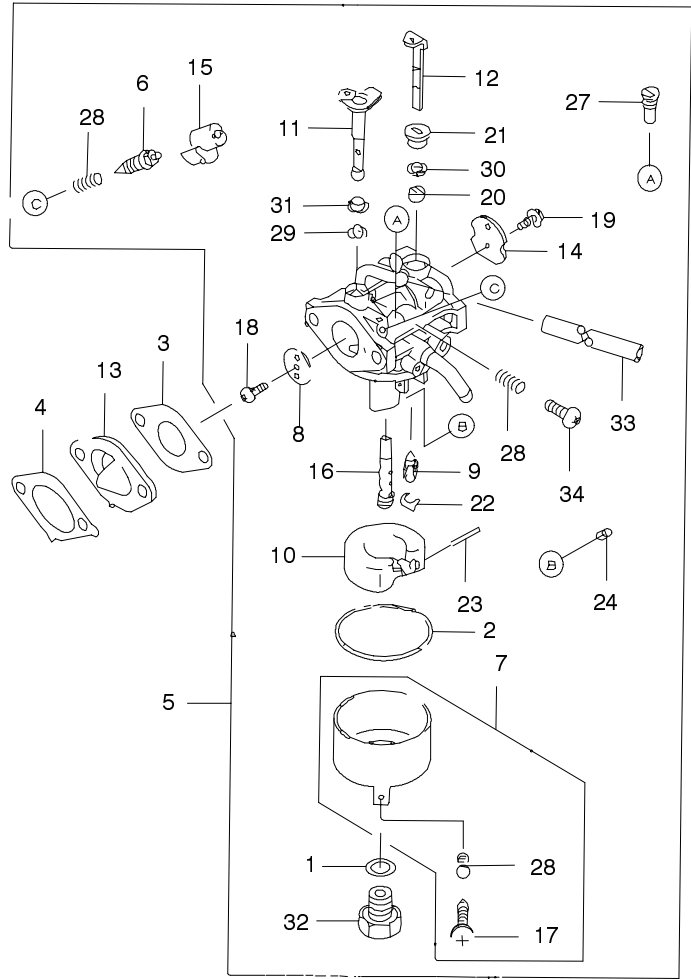 

Sheet No.:8

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2611	1	Gasket	27	100-2635	1	Jet-Pilot
2	100-2612	1	Gasket	28	100-2636	3	Spring
3	100-2613	1	Gasket-Carburetor	29	100-2637	1	Seal
4	100-2614	1	Gasket-Insulator	30	100-2638	1	Seal
5	100-2615	1	Carburetor ASM	31	100-2639	1	Collar
6	100-2616	1	Screw-Pilot, Air	32	100-2640	1	Bolt
7	100-2617	1	Float-Chamber	33	100-2641	1	Tube
8	100-2618	1	Valve-Throttle	34	100-2642	1	Screw-Pan
9	100-2619	1	Valve-Float				
10	100-2620	1	Float				
11	100-2621	1	Shaft-Throttle, Carburetor				
12	100-2622	1	Shaft-Choke, Carburetor				
13	100-2623	1	Insulator				
14	100-2624	1	Valve				
15	100-2625	1	Limiter				
16	100-2626	1	Nozzle-Main				
17	100-2627	1	Screw				
18	100-2628	1	Screw				
19	100-2629	2	Screw				
20	100-2630	1	Collar				
21	100-2631	1	Collar				
22	KW10297	1	Clip				
23	100-2633	1	Pin				
24	100-2634	1	Jet-Main				

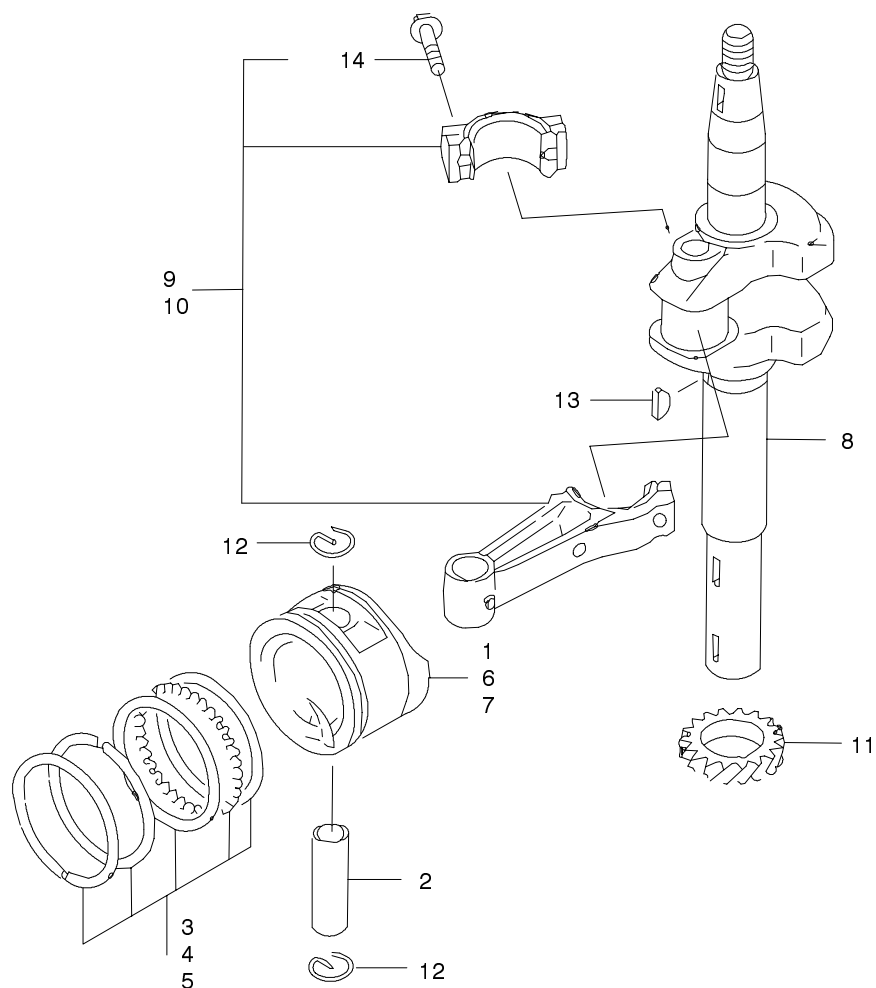 


Sheet No.:9

Piston and Crankshaft Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2672	1	Piston-Engine
2	100-2673	1	Pin-Piston
3	100-2674	1	Set-Ring, Piston
4	100-2675	1	Set-Ring, Piston-L0.25
5	100-2676	1	Set-Ring, Piston-L0.50
6	100-2677	1	Piston-Engine, L0.25
7	100-2678	1	Piston-Engine, L0.50
8	100-2828	1	Crankshaft
9	100-2680	1	Connecting Rod ASM
10	100-2681	1	Connecting Rod ASM (U/S=0.50)
11	100-2682	1	Gear-Helical
12	100-2683	2	Ring-Snap
13	93-8526	1	Key
14	93-8527	2	Bolt-Rod


Ref. No.	Part No.	Qty.	Description

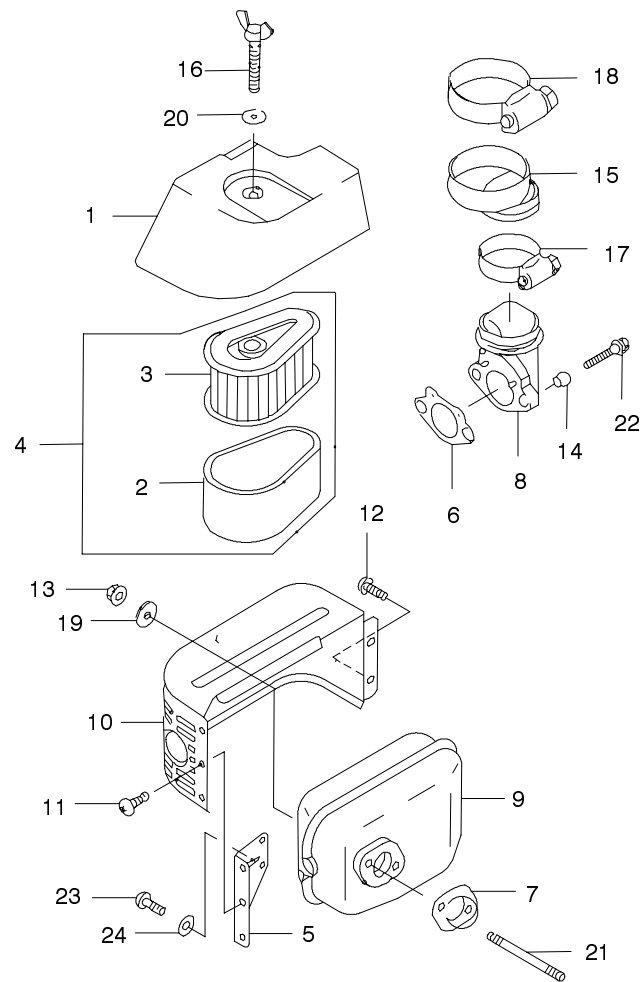 

Sheet No.:10

Air Filter and Muffler Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2691	1	Cap-Filter, Air				
2	100-2692	1	Element-Filter, Air				
3	100-2693	1	Element-Filter, Air				
4	100-2694	1	Air Filter Element ASM				
5	100-2695	1	Bracket				
6	100-2696	1	Gasket-Pipe, Intake				
7	100-2697	1	Gasket-Muffler				
8	100-2698	1	Pipe-Intake				
9	100-2699	1	Muffler-Complete				
10	100-2750	1	Cover-Muffler				
11	93-8549	3	Screw				
12	95-9716	2	Screw				
13	93-8631	2	Nut				
14	100-2754	2	Spacer				
15	100-2755	1	Tube				
16	100-2756	1	Bolt				
17	100-2757	1	Clamp				
18	100-2758	1	Clamp				
19	100-2759	2	Washer				
20	100-2760	1	Washer				
21	100-2761	2	Bolt-Stud				
22	100-2762	2	Bolt				
23	100-2763	2	Screw-Pan				
24	93-8639	2	Washer				

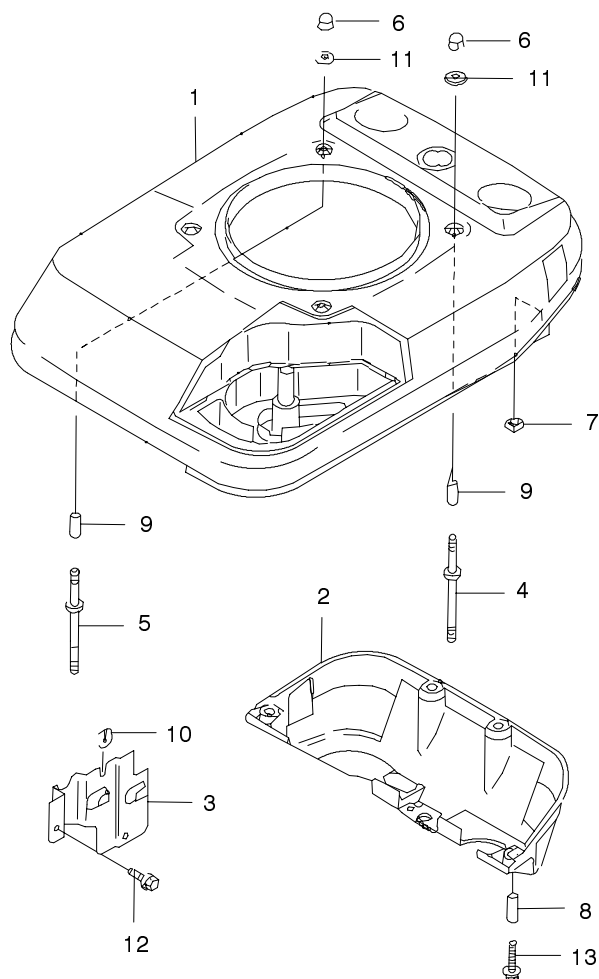 

Sheet No.:11

Cover and Cooling Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2600	1	Cover-Upper
2	100-2793	1	Cover-Lower
3	100-2794	1	Cover
4	100-2601	3	Stud
5	100-2602	1	Stud
6	100-2603	4	Nut
7	100-2604	4	Nut
8	100-2606	4	Spacer
9	100-2605	4	Spacer
10	100-2607	1	Grommet
11	100-2760	4	Washer
12	100-2609	2	Bolt-Flanged
13	100-2610	4	Bolt-Flanged

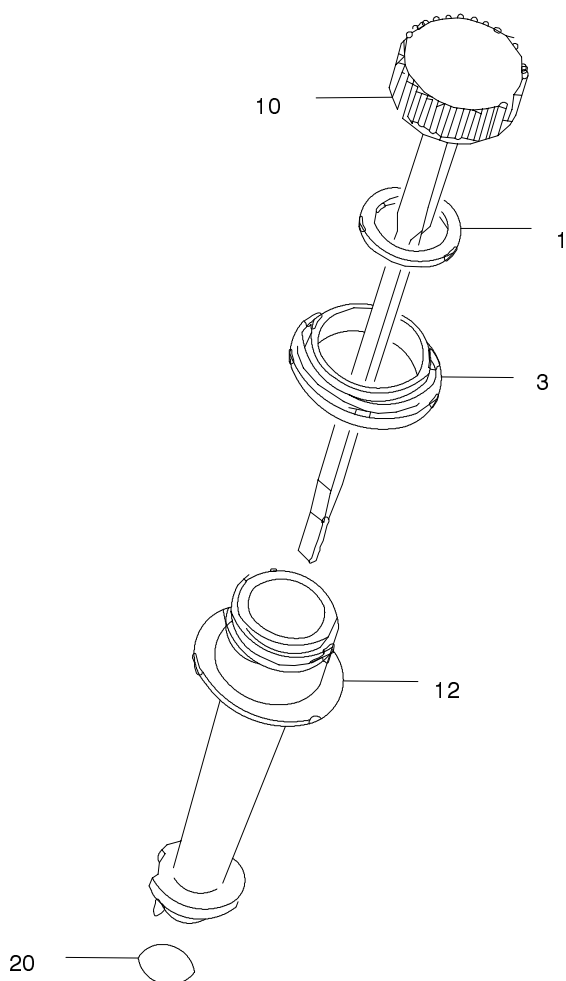 


Sheet No.:12

Dipstick Assembly

Ref. No.	Part No.	Qty.	Description
1	KW10010	1	Gasket
3	100-2687	1	Guide
10	100-2688	1	Gauge
12	100-2689	1	Filler
20	100-2690	1	O-Ring
*21	100-2831	1	O-Ring
*22	100-2830	1	Cover
*23	100-2804	3	Bolt-Flanged

Ref. No.	Part No.	Qty.	Description

 * Not illustrated

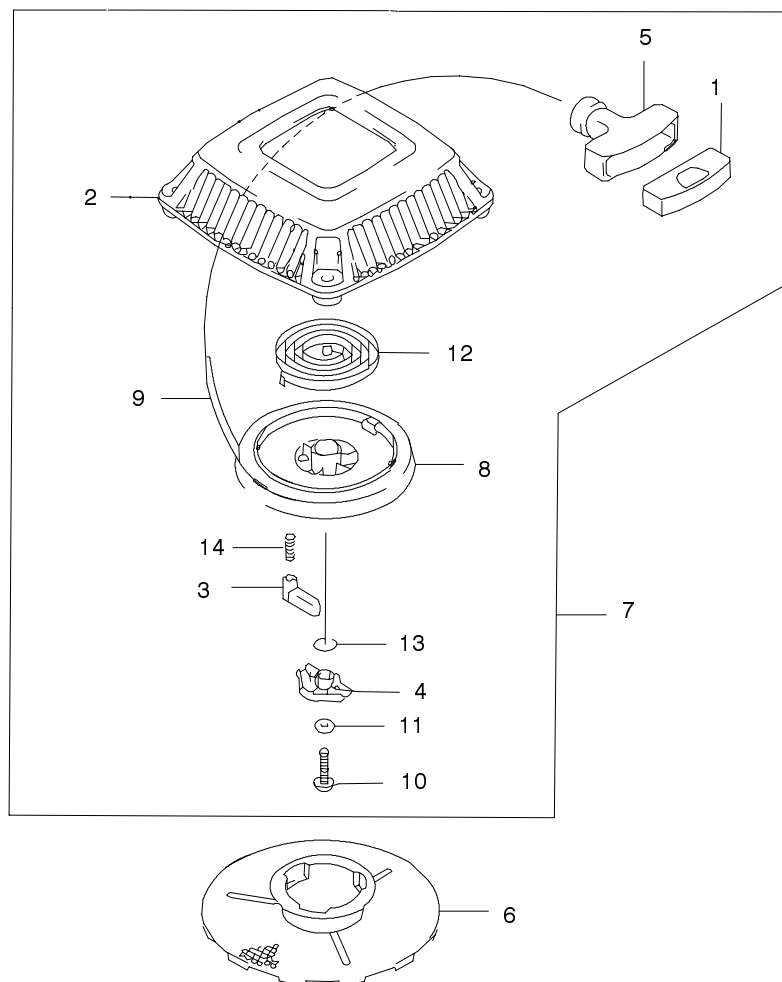

Sheet No.:13

Recoil Starter Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-9044	1	Cap - Grip				
2	100-2766	1	Holder				
3	100-2767	1	Pawl-Starter, Recoil				
4	100-2768	1	Retainer-Spring				
5	100-2769	1	Grip-Starter, Recoil				
6	100-2770	1	Pulley-Starting				
7	100-2837	1	Starter-Recoil				
8	100-2772	1	Reel-Starter, Recoil				
9	100-2773	1	Rope				
10	100-2774	1	Screw				
11	100-2775	1	Washer				
12	100-2776	1	Spring-Recoil				
13	100-2777	1	Spring				
14	93-8555	1	Spring-Return				

