



# ProLine 53 cm Recycler<sup>®</sup>

## Walk Power Lawn Mower

Model No. 22038 - 210000001 and Up

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part. This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

## Contents

Description	Page	Description	Page
Housing Assembly .....	3	Brake Assembly .....	12
Housing Assembly No. 98-7142 .....	4	One Line Title .....	13
Front Wheel and Tire Assembly No. 53-7720 ..	5	Crankshaft and Crankcase Assembly .....	14
Engine and Blade Assembly .....	6	Muffler Assembly .....	15
Fuel Tank and Bracket Assembly .....	7	Ignition Assembly .....	16
Handle and Controls Assembly .....	8	Governor Assembly .....	17
Gear Case and Rear Wheel Assembly .....	9	Recoil Assembly .....	18
Gear Case Assembly No. 74-1861 .....	10	Carburetor Assembly .....	19
Rear Wheel and Tire Assembly No. 74-1720 ..	11		


## Accessories

Description	Model / Part No.	Description	Model / Part No.
.. Side Discharge Kit No. .....	59113		
Spark Arrestor Muffler .....	81-0200		

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR .....	as required	HYD .....	hydraulic
ASM .....	assembly	INC .....	incorporated
CARR .....	carriage	LH .....	left hand
DEG .....	degrees	NI .....	nylon insert
FH .....	flat head	PPH .....	Phillips pan head
GA .....	gauge	PTH .....	Phillips truss head
HF .....	hex flange	PTO .....	power take off
HH .....	hex head	RH .....	right hand
HHF .....	hex head flange	SFH .....	slotted fillister head
HLH .....	hex lag head	SHH .....	slotted hex head
HJ .....	hex jam	SQH .....	square head
HOC .....	height-of-cut	SHWH .....	slotted hex washer head
HS .....	hex socket	SPH .....	slotted pan head
HSBH .....	hex socket button head	SRH .....	slotted round head
HSFH .....	hex socket flat head	STD .....	standard
HSH .....	hex socket head	TAP .....	self tapping
HWH .....	hex washer head	TTH .....	Torx truss head
HWHTF .....	hex washer head thread forming	WH .....	wing head

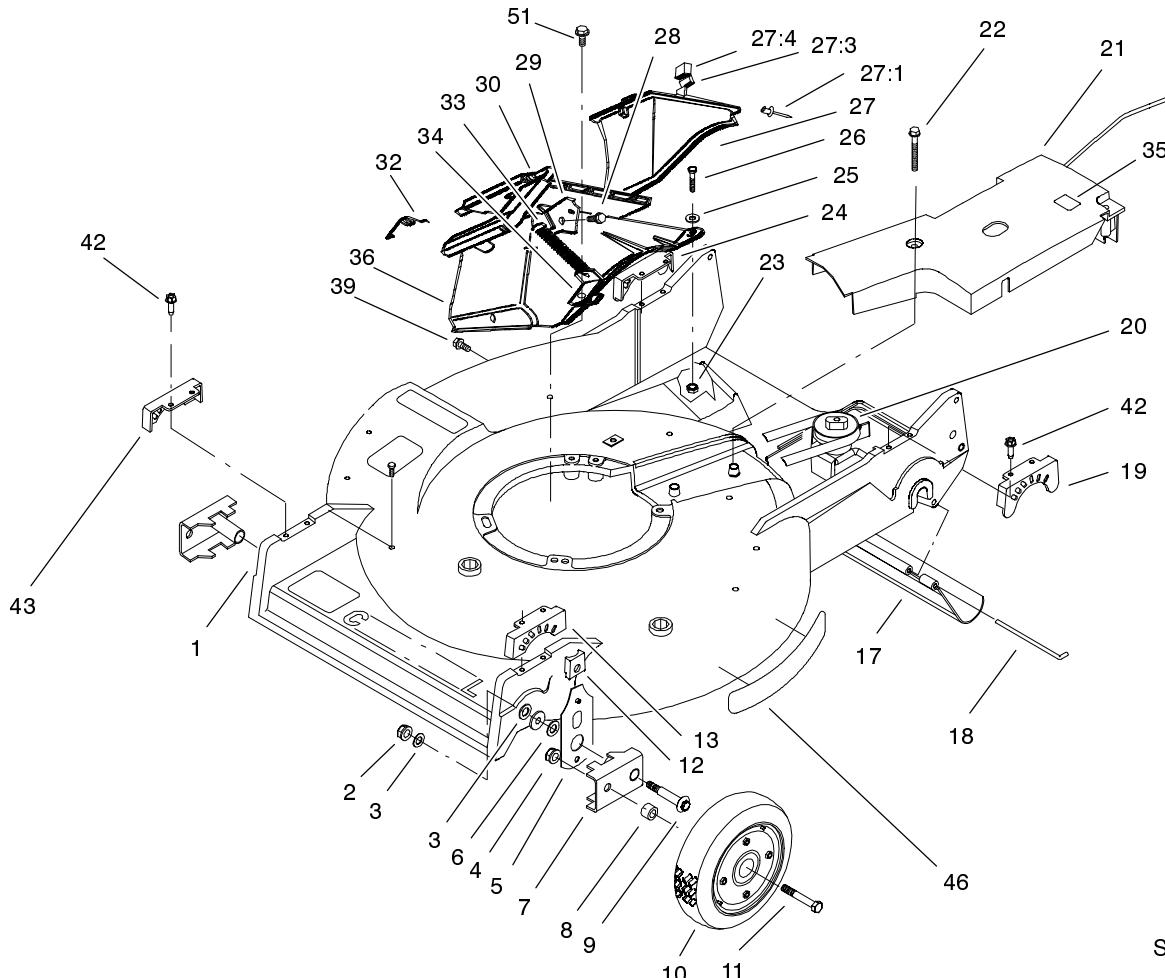

Sheet No.:2

## Housing Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-7142	1	Housing - Service	27.4	76-4650	1	Grip-Latch
2	3296-6	2	Nut-Lock, NI	28	46-8090	2	Screw-Plastite
3	40-1940	4	Washer	29	93-3154	1	Latch-Plate
4	32152-2	2	Nut-ConeLock	30	93-7351	1	Discharge Door ASM
5	66-7560	2	Front Spring Arm ASM	32	80-3770	1	Retainer-Door
6	257-3	2	Washer-Thrust	33	76-4660	1	Spring-Door
7	61-8300	2	Arm-Pivot, Front	34	71-9350	1	Bracket-Spring
8	52-2480	2	Spacer-Wheel	35	93-6664	1	Decal-Grease, Int'l
9	27-6232	2	Bolt-Wheel	36	82-9151	1	Tunnel-Discharge
10	53-7720	2	Wheel & Tire ASM	39	46-6810	1	Screw & Washer ASM
11	323-12	2	Screw-HH	42	49-2040	8	Screw-Tapping
12	25-7740	2	Knob-Arm	43	49-8770	1	Quadrant-Front, RH
13	49-8760	1	Quadrant-Front, LH	46	92-7988	1	Decal - Recycler
17	44-0580	1	Shield-Trailing	51	46-6811	1	Screw-HWH
18	33-3208	1	Rod-Shield				
19	49-8740	1	Quadrant-Rear, LH				
20	74-1861	1	Gear Case ASM				
21	74-1770	1	Cover-Belt				
22	37-7260	2	Screw-HH				
23	3296-42	2	Nut-Lock, NI				
24	49-8750	1	Quadrant-Rear, RH				
25	3256-22	2	Washer-Flat				
26	321-7	2	Screw-HH				
27	77-0502	1	Discharge Plug ASM				
27.1	3295-35	1	Rivet-Head, Flat				
27.3	76-4640	1	Latch-Plug, Discharge				

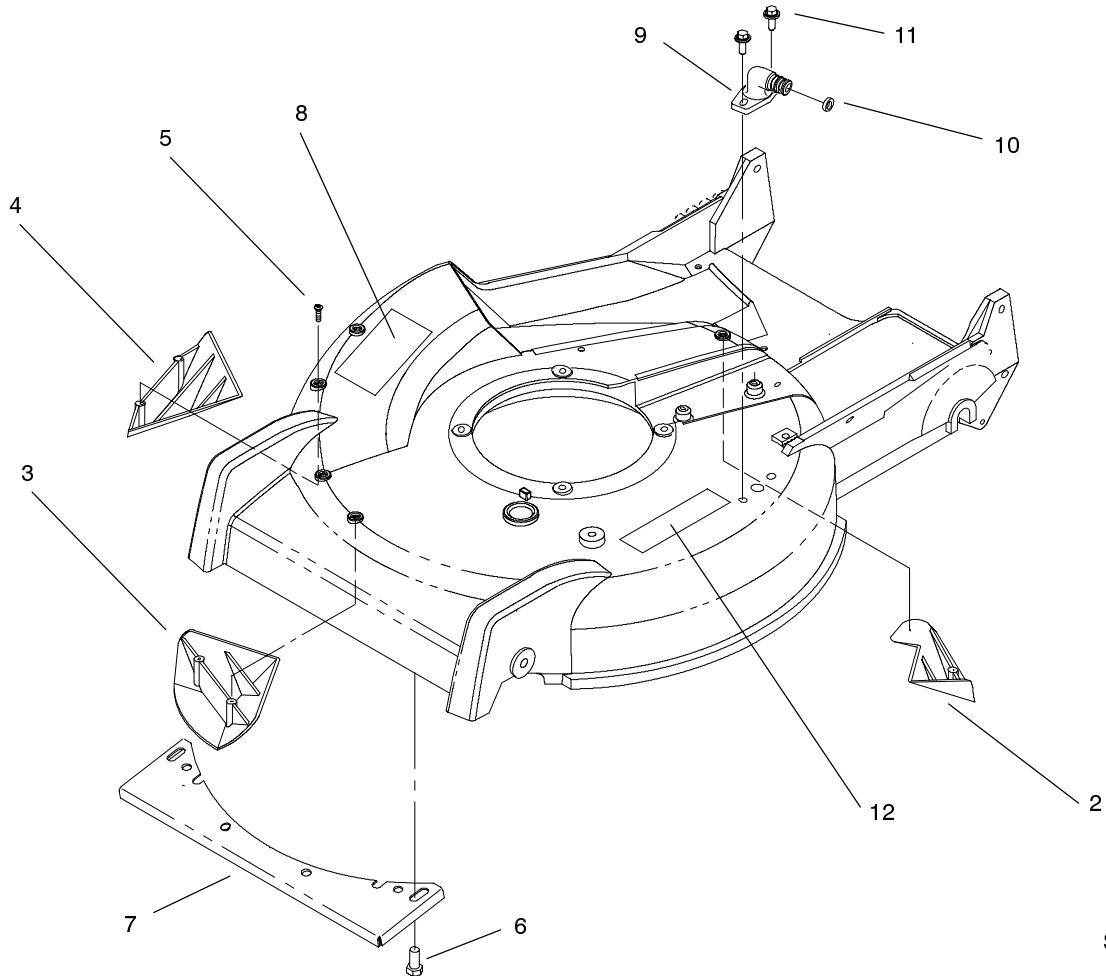


Sheet No.:A1

## Housing Assembly No. 98-7142

Ref. No.	Part No.	Qty.	Description
2	92-1750	1	Kicker-Rear
3	92-1720	1	Kicker-Front
4	92-1730	1	Kicker-RH
5	32144-111	6	Screw-PPH
6	32144-70	4	Screw-HH
7	46-5400-03	1	Shield
8	93-6654	1	Decal-Danger Covers
9	95-2747	1	Fitting-Washout
10	46-6290	1	O-Ring
11	46-6811	2	Screw-HWH
12	93-6657	1	Decal - Danger

Ref. No.	Part No.	Qty.	Description

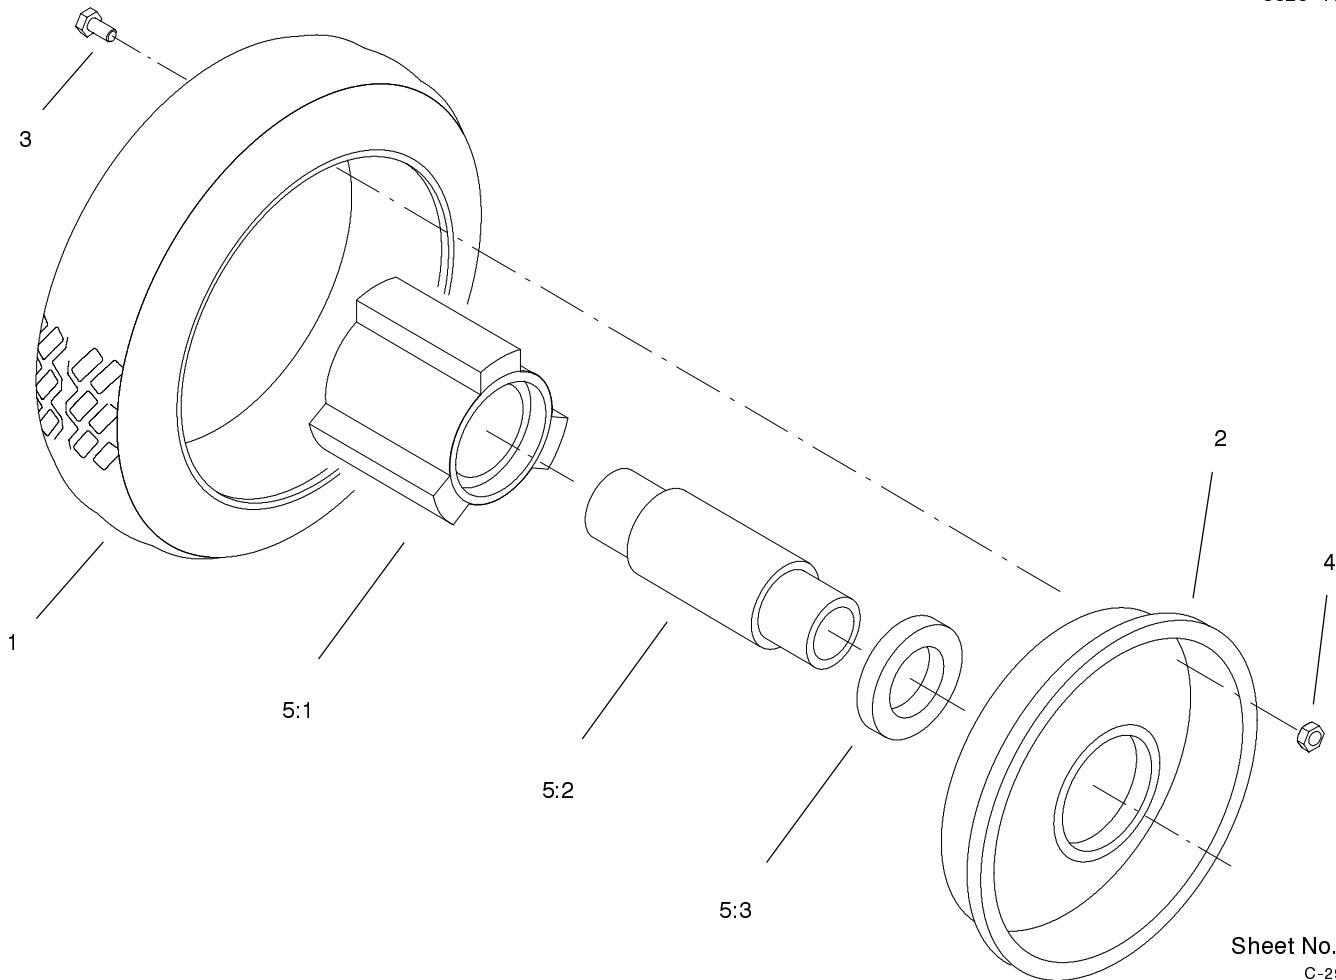


Sheet No.:A2  
C-2989

## Front Wheel and Tire Assembly No. 53-7720

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire				
2	53-7780-06	2	Plate-Wheel, Half				
3	321-2	4	Screw-HH				
4	3296-42	4	Nut-Lock, NI				
★5		1	Hub & Bearing ASM				
5:1	52-2410	1	Hub-Bearing				
5:2	52-2440	1	Spacer-Bearing				
5:3	52-2450	2	Bearing-Wheel				

★ Not serviced

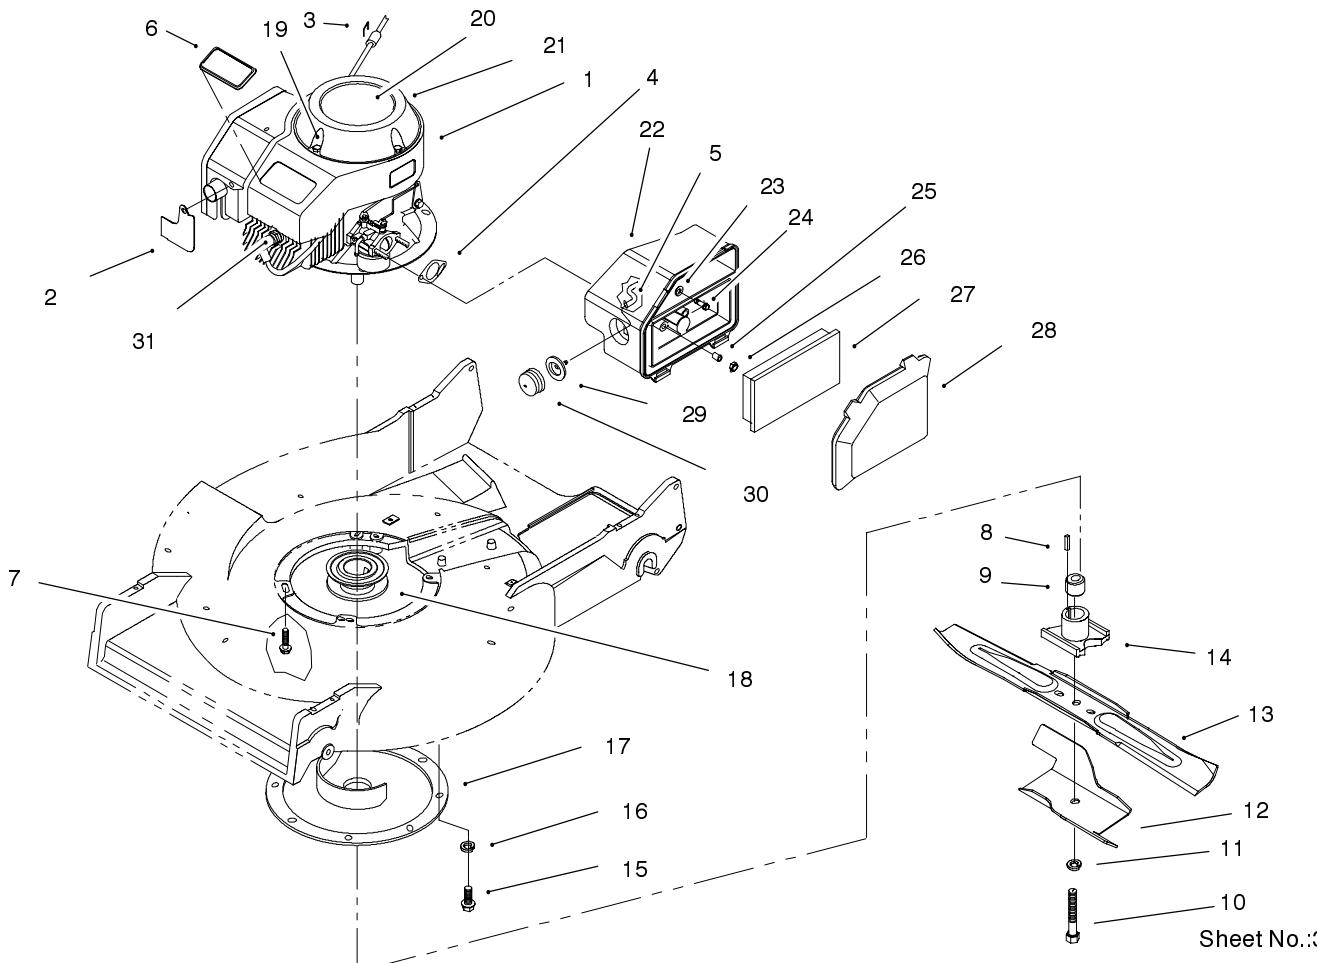


Sheet No.:3

## Engine and Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	98-2040	1	Engine ASM-121cc 2 Cycle
2	93-7661	1	Extension-Muffler Guard
3	3290-443	1	Staple
4	81-0090	1	Gasket-Air Cleaner
5	44-3172	1	Hose-Primer
7	66-9300	4	Screw-HF
8	27-6300	1	Key-Square
9	52-2190	1	Spacer-Blade Retainer
10	26-0670	1	Screw-Blade
11	3253-22	1	Washer-Lock
12	92-1599-03	1	Stiffener-Blade
13	14-9419	1	Blade
14	52-2170	1	Retainer-Blade
15	32144-70	3	Screw-HH
16	3254-6	3	Washer-Lock, Internal
17	65-5860	1	Protector-Crankshaft
18	46-7910	1	Pulley-Driver
20	104-1334	1	Decal-2 Cyc Recoil
21	81-5940	1	Recoil ASM
22	63-9330	1	Body-Air Cleaner
23	3256-16	1	Washer-Flat
24	51-2690	1	Screw-HH
25	62-3980	2	Spacer


Ref. No.	Part No.	Qty.	Description
26	50-7180	2	Nut
27	63-9380	1	Element-Air Cleaner
28	63-9340	1	Cover-Air Cleaner
29	44-2750	1	Body-Primer
30	66-7460	1	Bulb-Primer
31	81-0181	1	Sparkplug

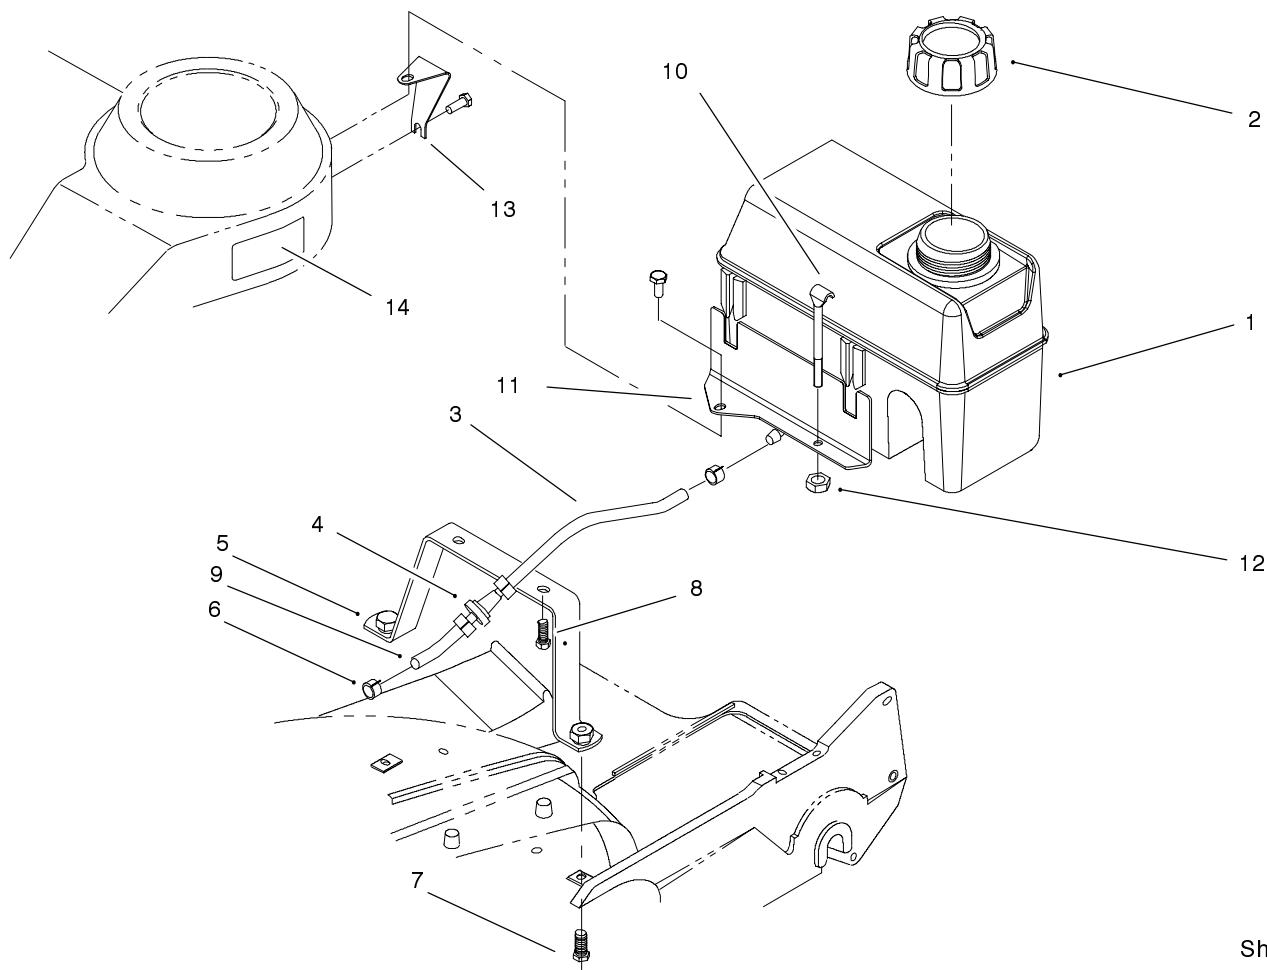

Sheet No.:4

## Fuel Tank and Bracket Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	104-1327	1	Tank-Gas				
2	93-7199	1	Gas Cap ASM				
3	68-3633	1	Line-Fuel				
4	71-9280	1	Filter-Fuel				
5	84-9160-03	1	Base-Tank				
6	2412-95	4	Clamp-Fuel Line				
7	95-1727	2	Screw-Taptite				
8	46-8091	2	Screw-HWH				
9	51-3211	1	Line-Gas				
10	77-2840	1	Retainer - Fuel Tank				
11	74-2110-03	1	Bracket-Tank				
12	3296-42	1	Nut-Lock, NI				
13	77-0520-03	1	Support-Tank Bracket				
14	93-6659	1	Decal - 2 Cycle Fuel				

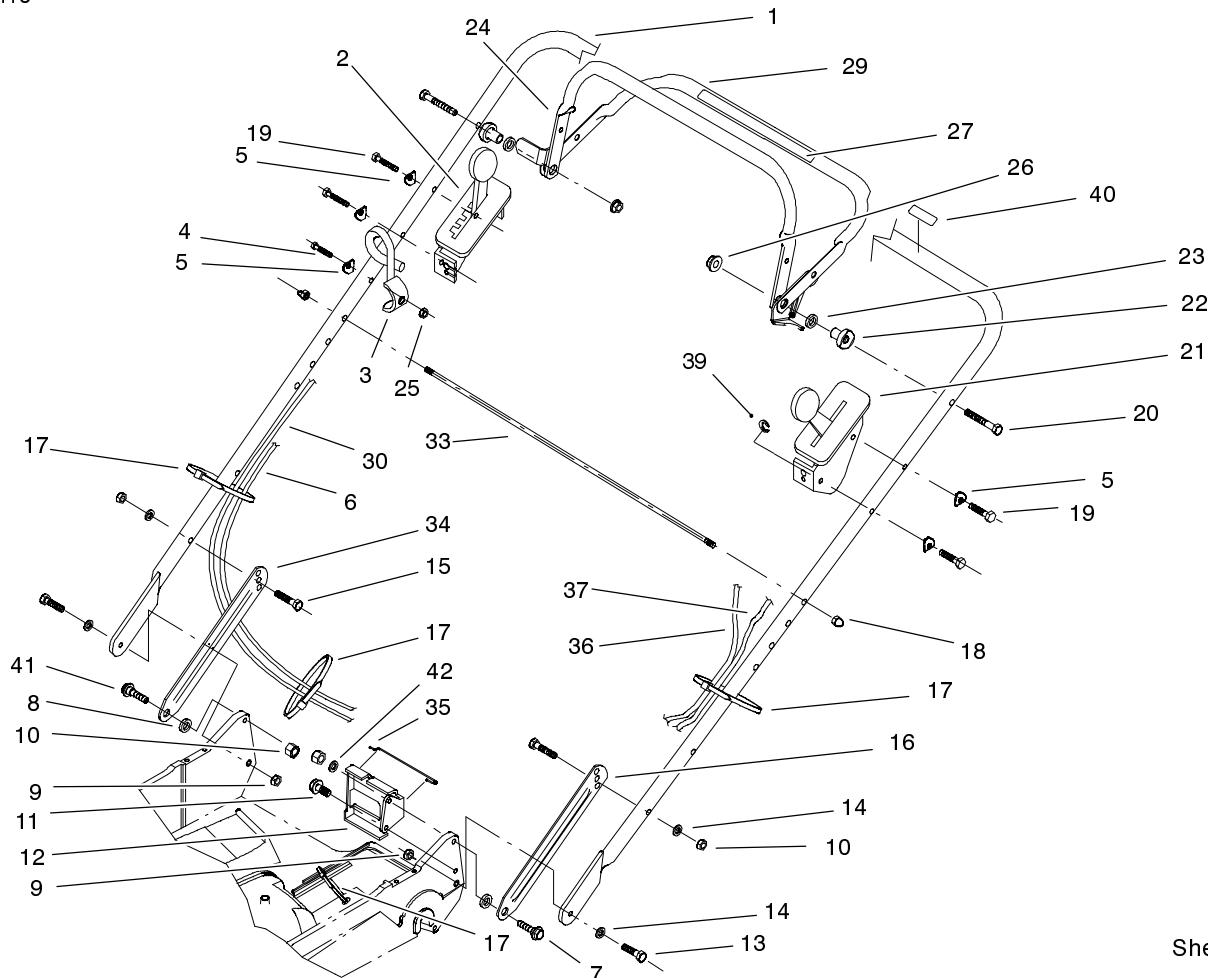


Sheet No.:5

## Handle and Controls Assembly


Ref. No.	Part No.	Qty.	Description
1	99-2545-03	1	Handle-Proline
2	99-2544	1	Control-Shift
3	46-8081	1	Guide-Rope
4	321-9	1	Screw-HH
5	3-7501	5	Washer
6	99-2543	1	Cable-Shift
7	27-7210	1	Screw-Shoulder
8	3-3287	2	Spacer-Latch, Handle
9	3296-47	2	Nut-Lock, NI
10	3296-29	4	Nut-Lock
11	32144-70	1	Screw-HH
12	74-1741	1	Bracket-Adjustment, Traction
13	322-6	2	Screw-HH
14	3290-456	4	Washer-Belleville
15	322-7	2	Screw-HH
16	100-3298-03	1	Latch-Handle, LH
17	3290-378	4	Tie-Cable
18	32111-7	2	Nut-Cap
19	321-13	4	Screw-HH
20	322-12	2	Screw-HH
21	82-9952	1	Bracket-Control, Throttle
22	49-1631	2	Spacer-Support
23	256-276	2	Spacer-Nylon
24	94-4370-03	1	Brake Bail

Ref. No.	Part No.	Qty.	Description
25	3296-42	1	Nut-Lock, NI
26	3296-58	2	Nut-Lock NI
27	94-6046	1	Decal - Operation
29	94-4371-03	1	Traction Bail
30	99-2546	1	Cable-Brake,2 Cyc
33	48-2810	1	Rod-Support, Bag
34	100-3297-03	1	Latch-Handle, RH
35	46-7030	1	Retainer-Cable
36	74-1791	1	Cable-Traction
37	70-1061	1	Cable-Throttle
39	32151-86	4	E-Ring
40	98-4387	1	Decal-Protection, Ear
41	27-7211	1	Screw-Shoulder
42	3256-23	2	Washer-Flat

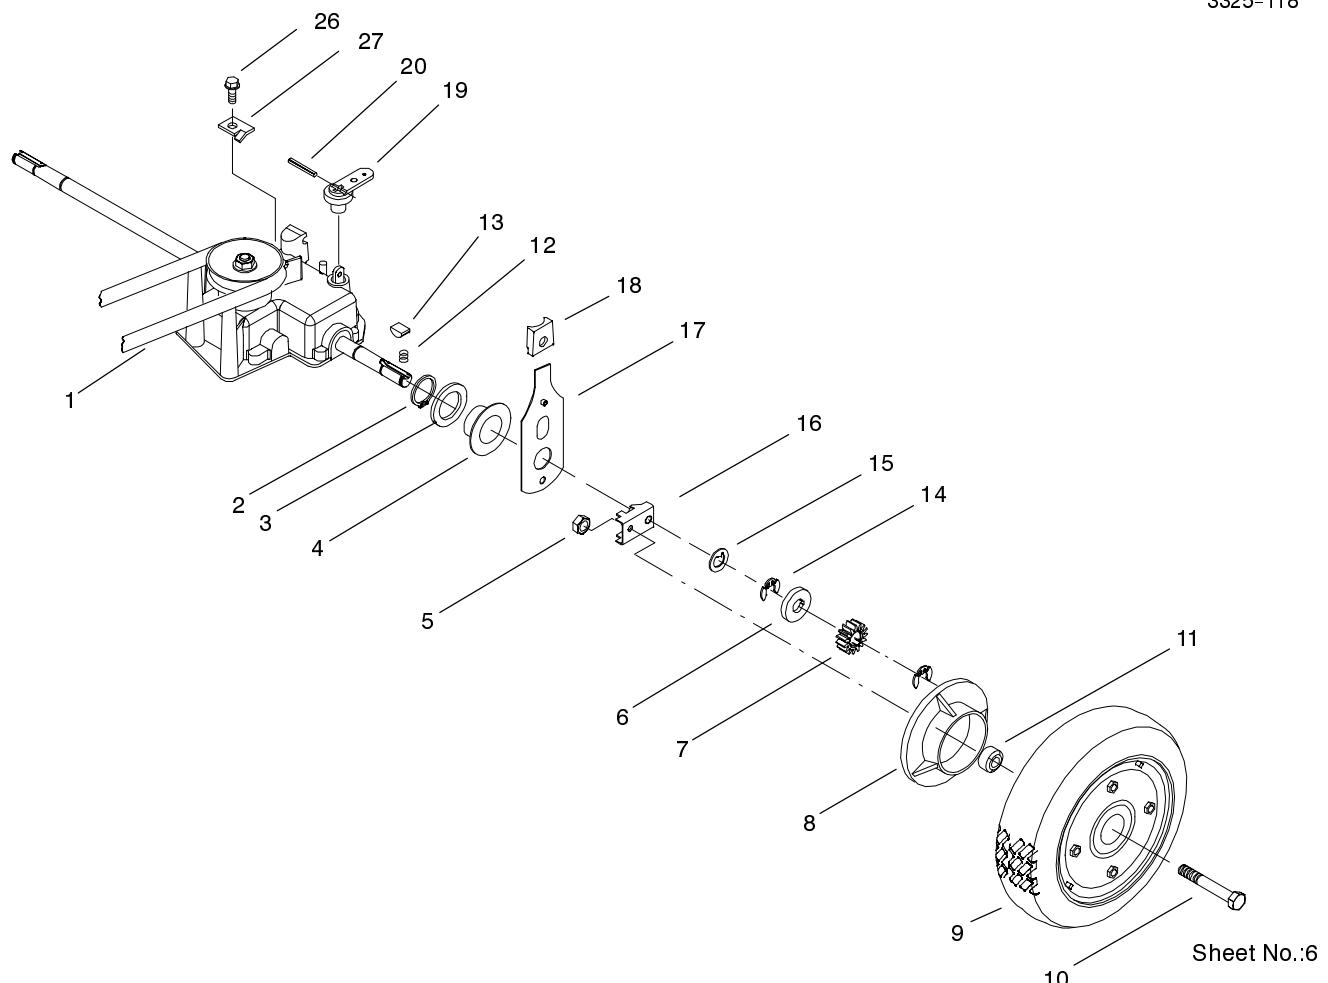

## Gear Case and Rear Wheel Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	36-8070	1	V-Belt				
2	32151-36	2	Ring-Retaining				
3	74-1810	2	Washer				
4	48-2170	2	Cap-End				
5	32152-2	2	Nut-ConeLock				
6	62-3830	2	Washer-Thrust, Outer				
7	39-9160	2	Gear-Pinion				
8	74-1640	2	Cover-Wheel				
9	74-1720	2	Wheel & Tire ASM				
10	323-13	2	Screw-HH				
11	74-1650	2	Spacer-Cover, Wheel				
12	39-9650	2	Spring-Compression				
13	612066	2	Key				
14	32151-68	4	Ring-Retaining				
15	49-7700	2	Washer-Thrust, Outer				
16	74-1851	2	Pivot Arm ASM				
17	66-7561	2	Rear Spring Arm ASM				
18	25-7740	2	Knob-Arm				
19	29-9560	1	Lever-Shift				
20	32121-99	1	Pin-Coil				
26	32144-70	1	Screw-HH				
27	62-3720	1	Clamp-Cable				

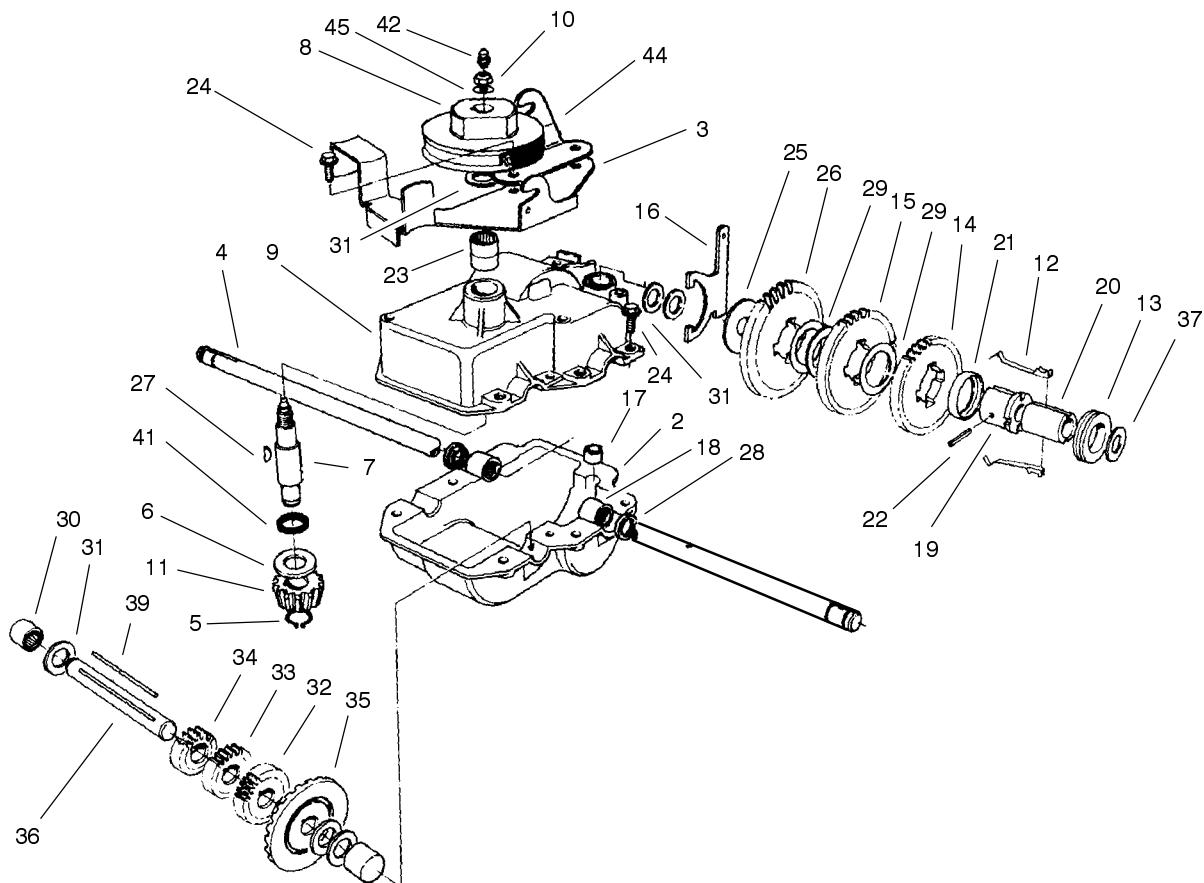

Sheet No.:A3  
C-2990

# **Gear Case Assembly No. 74-1861**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	74-1920	1	Case-Gear, Lower	28	48-2060	2	Bearing-Roller
3	49-8461-03	1	Bracket-Guide, Belt	29	36-4770	3	Washer
4	74-1890	1	Shaft-Output	30	252-103	2	Bearing-Closed
5	32151-57	1	Ring-Retaining	31	36-4792	4	Washer-Thrust
6	47-2910	1	Washer-Thrust	32	39-6650	1	Gear-18t
7	68-8190	1	Shaft-Input	33	46-3550	1	Gear-14t
8	39-6740	1	Pulley	34	46-3540	1	Gear-12t
9	74-1880	1	Case-Gear, Upper	35	74-1760	1	Gear-Bevel
10	3296-5	1	Nut-Lock NI	36	53-7950	1	Shaft-Intermediate
11	39-6660	1	Pinion-Bevel	37	36-4780	3	Washer
12	29-9330	2	Key	39	39-7842	1	Key
13	29-9340	1	Collar-Shift	41	47-7260	1	Seal
14	42-4740	1	Gear-38 Tooth	42	302-63	1	Zerk
15	29-9271	1	Gear-42 Tooth	44	74-1750-03	1	Brake-Engage, Traction
16	60-8870	1	Yoke-Shift	45	3256-45	1	Washer-Flat
17	29-9570	1	Bushing-Yoke				
18	47-6730	2	Seal-Oil				
19	55-8010	1	Sleeve-Gear				
20	39-6720	1	Sleeve				
21	55-8020	1	Retainer-Key				
22	3285-19	1	Pin-Groove				
23	47-7270	2	Bearing				
24	49-2040	6	Screw-Tapping				
25	29-9690	1	Washer				
26	46-3560	1	Gear				
27	3257-1	2	Key-Woodruff				

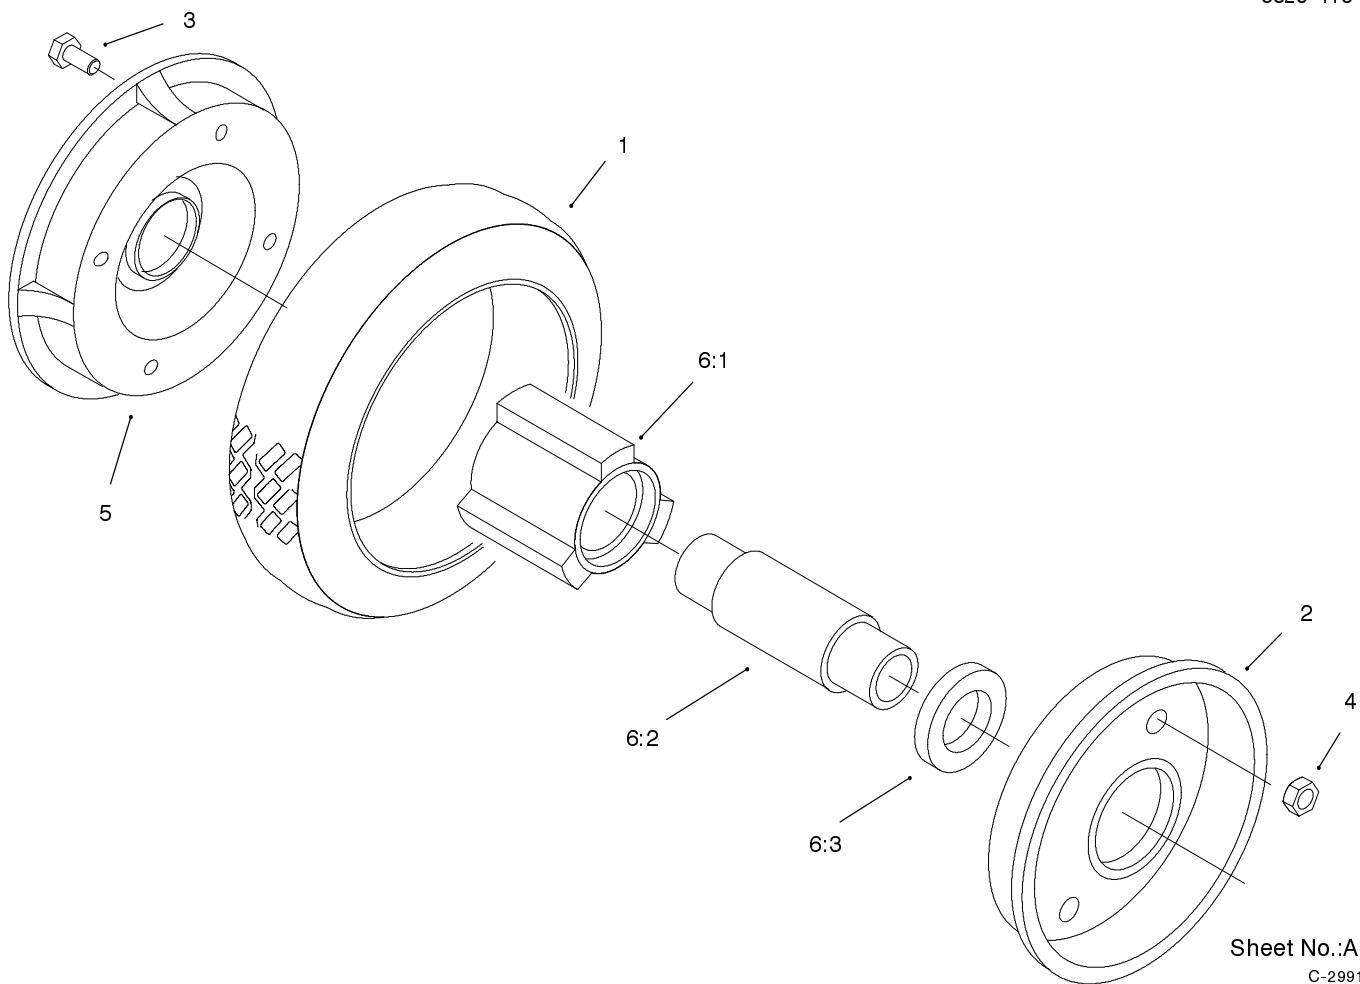


Sheet No.:A4

C-2991

## Rear Wheel and Tire Assembly No. 74-1720

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire				
2	53-7780-06	1	Plate-Wheel, Half				
3	321-2	4	Screw-HH				
4	3296-42	4	Nut-Lock, NI				
5	92-4957-06	1	Wheel Half/Gear ASM				
★6		1	Hub & Bearing ASM				
6:1	52-2410	1	Hub-Bearing				
6:2	52-2440	1	Spacer-Bearing				
6:3	52-2450	2	Bearing-Wheel				

★ Not serviced

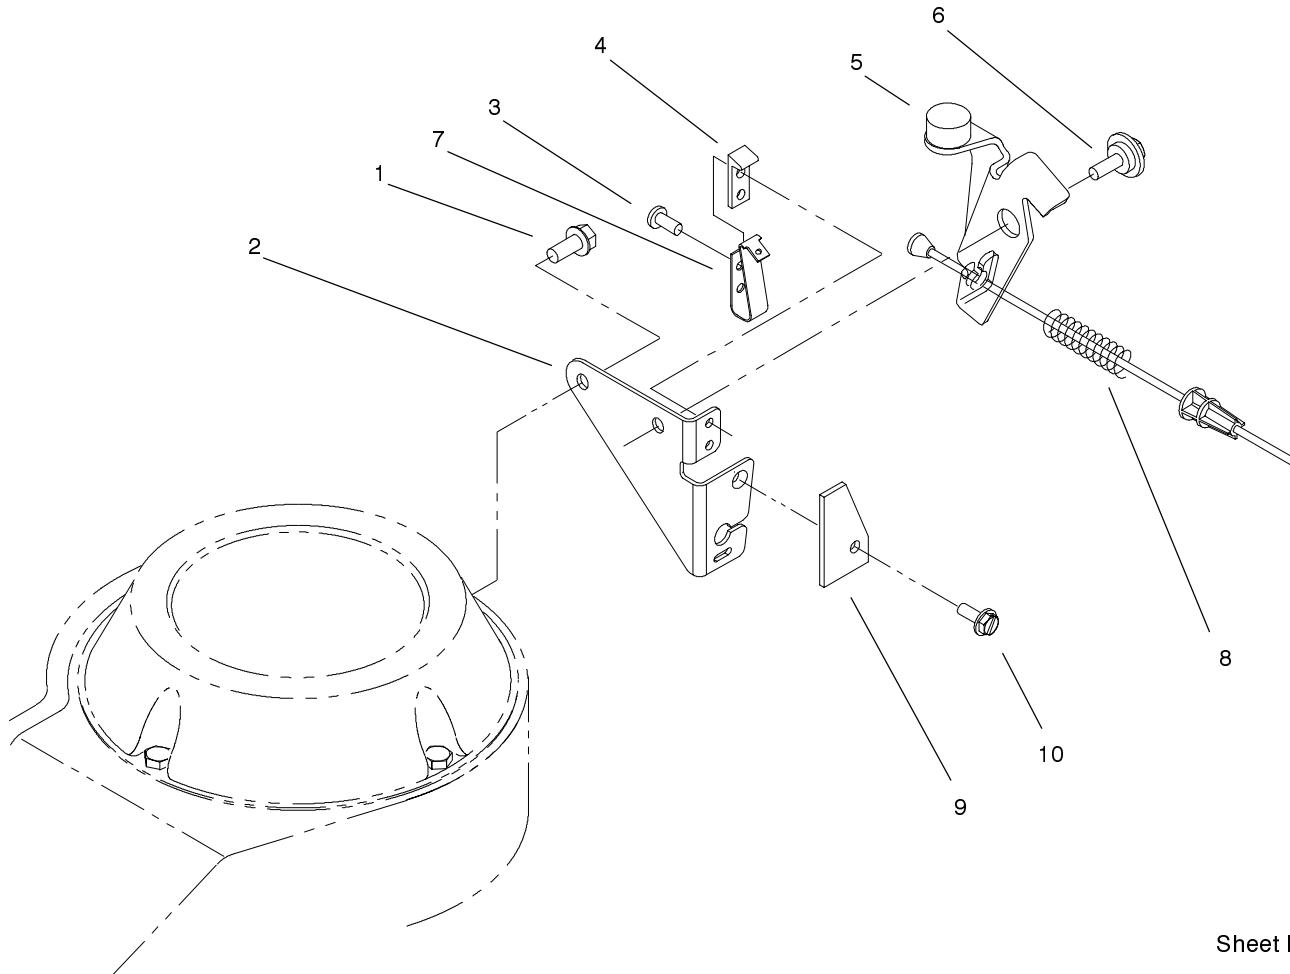


Sheet No.:7

## Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-10	1	Screw-HWH
2	84-7820	1	Plate-Brake
3	3290-459	2	Rivet-Plastic
4	77-5260	1	Strap-Insulating
5	66-5380	1	Brake Plate ASM
6	92-9698	1	Screw-Shoulder
7	60-9010	1	Strap-Ground
8	66-5370	1	Spring-Compression
9	53-4690	1	Stop-Ground Strap
10	32144-112	1	Screw-HWHTF
*	14-6009	1	Mounting Plate ASM

Ref. No.	Part No.	Qty.	Description


\* Not illustrated

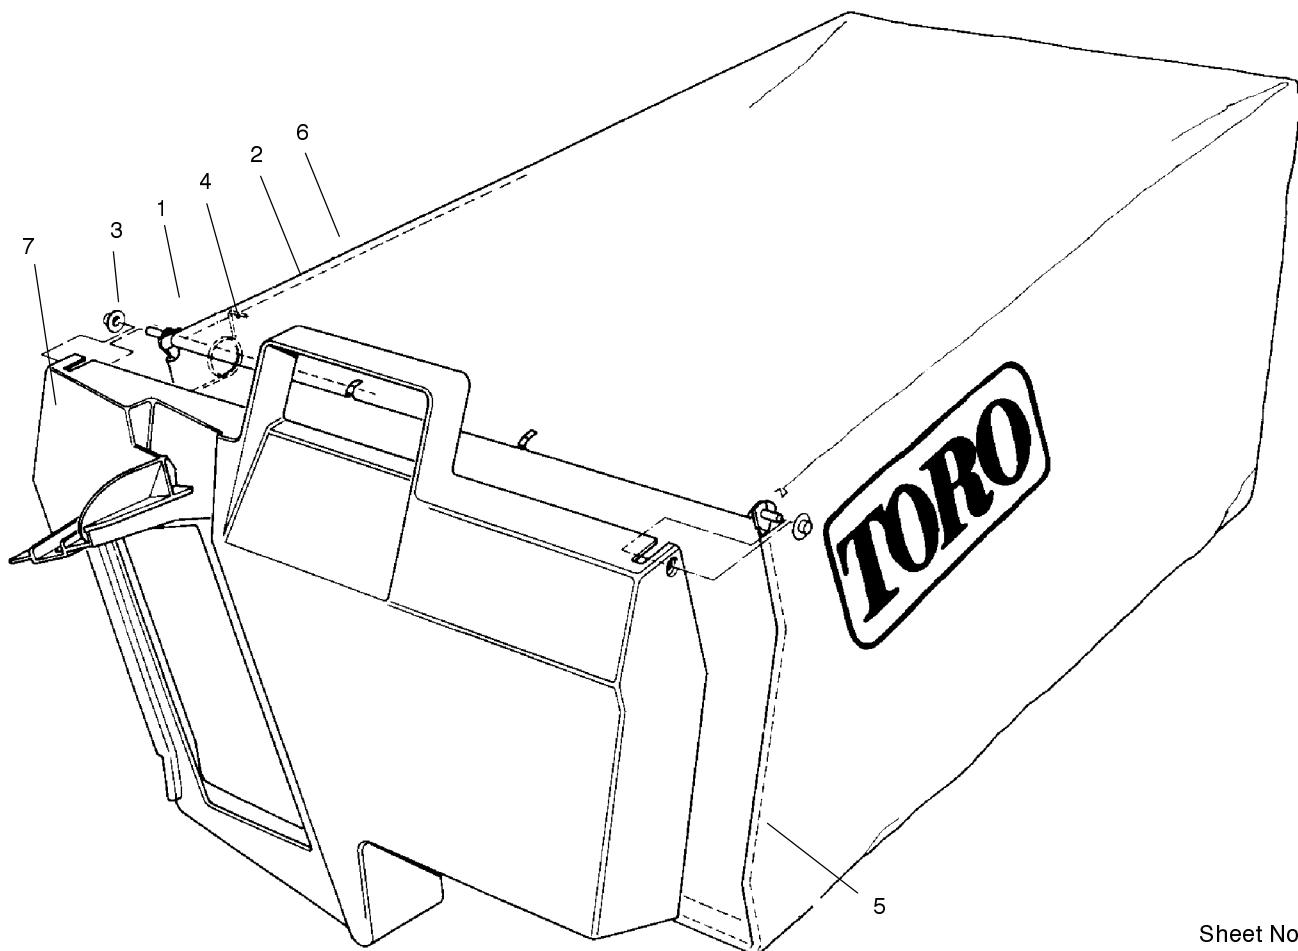

Sheet No.:A5  
C-2992

### One Line Title

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	33-4820	1	Hinge-Door, Bag				
2	42-4030	1	Frame-Bag, Upper				
3	3290-422	2	Nut-Push				
4	36-6910	2	Spring				
5	42-4020	1	Frame-Bag				
6	98-9225	1	Bag-Grass				
7	48-2840	1	Door-Bag, Grass				

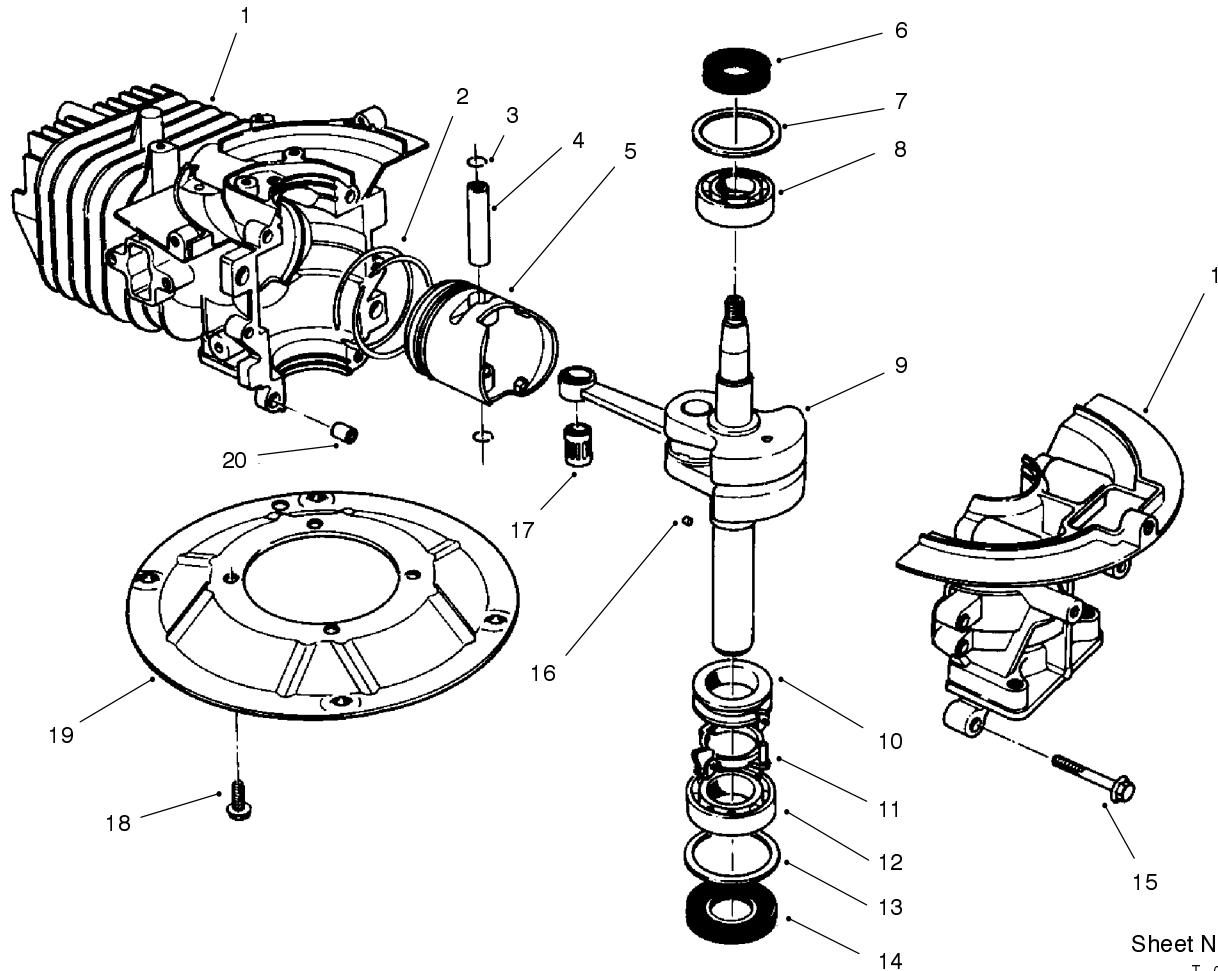


Sheet No.:50  
T-0663

## Crankshaft and Crankcase Assembly

Ref. No.	Part No.	Qty.	Description
1	94-1685	1	ASM - Crankcase
2	81-0590	1	Ring Set
3	81-0620	2	Clip
4	81-0600	1	Pin-Piston
5	81-2140	1	Piston
6	81-0720	1	Seal-Oil
7	81-0710	1	Washer-Upper
8	81-0690	1	Bearing-Upper
9	81-4680	1	Crankshaft
10	81-0770	1	Spacer
11	81-0750	1	Bracket
12	81-0700	1	Bearing-Lower
13	81-0730	1	Washer-Lower
14	81-0740	1	Seal-Oil
15	81-0540	5	Bolt
16	81-0760	1	Pin
17	81-0610	1	Bearing
18	81-0570	4	Bolt
19	81-0560	1	Plate-Mounting
20	81-0520	2	Pin

Ref. No.	Part No.	Qty.	Description

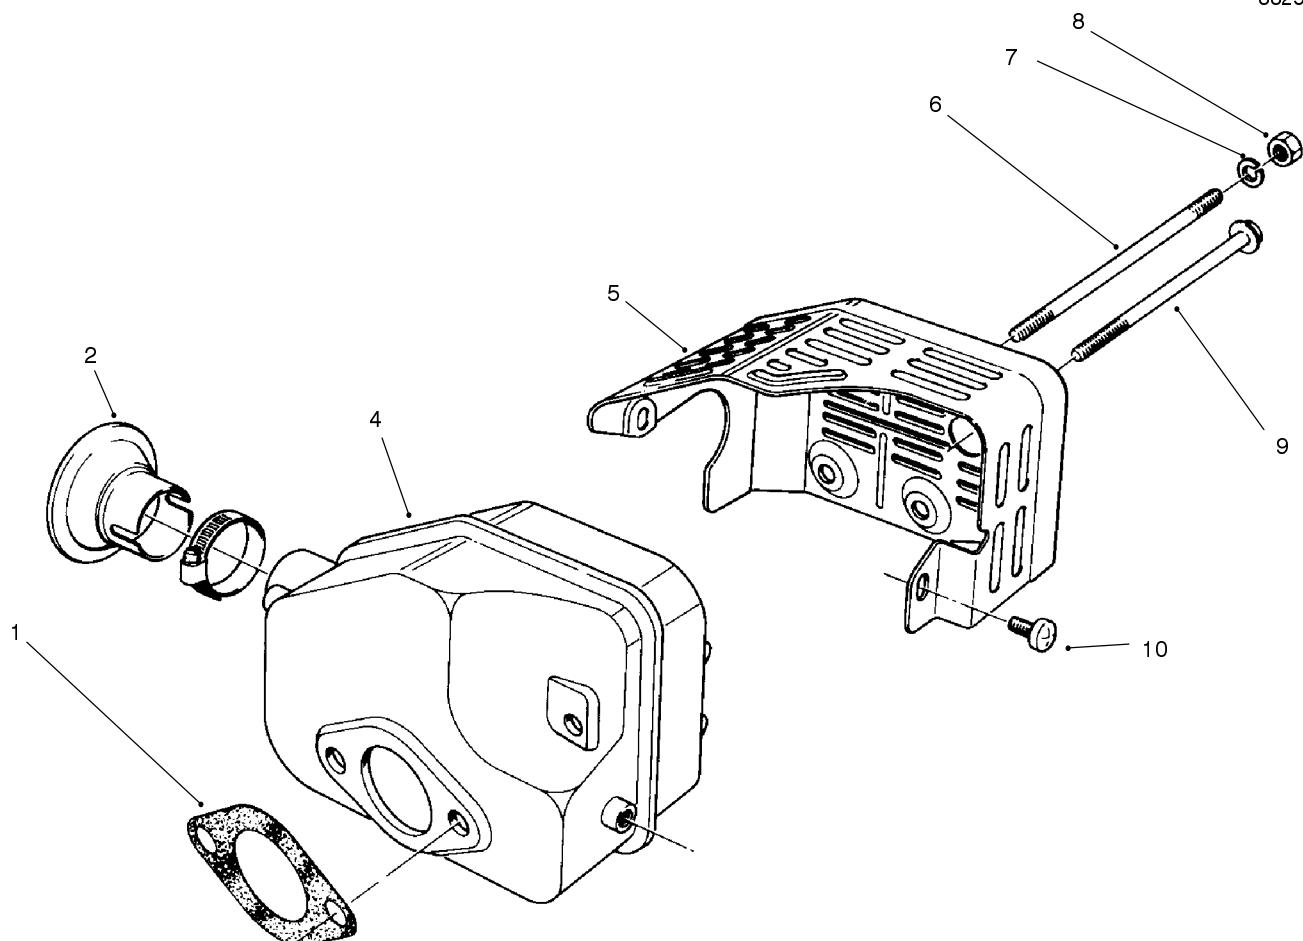


Sheet No.:51

T-0667

## Muffler Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	81-1080	1	Gasket				
2	81-0200	1	Arrestor-Spark				
4	81-5690	1	Muffler				
5	81-2450	1	Cover-Muffler				
6	81-1100	2	Bolt				
7	81-1120	2	Washer-Lock				
8	81-1110	2	Nut				
9	81-1150	1	Bolt				
10	81-1140	2	Screw				

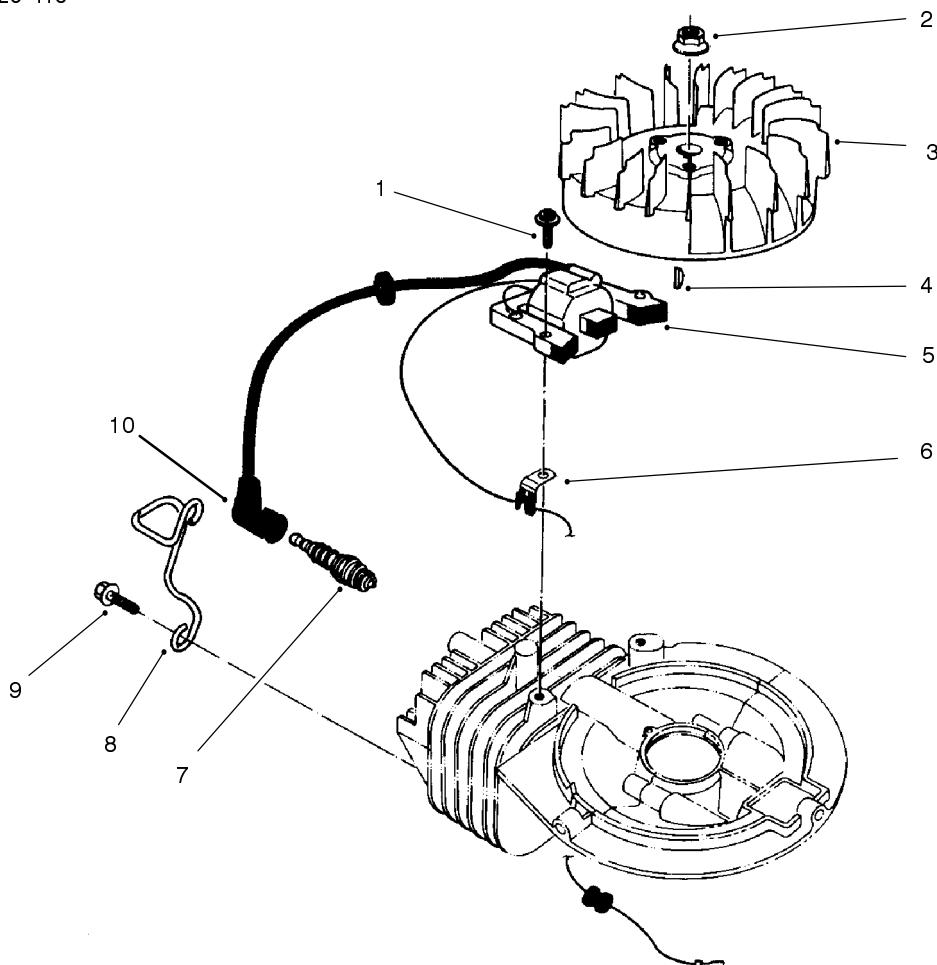


Sheet No.:52  
T-0664

## Ignition Assembly

Ref. No.	Part No.	Qty.	Description
1	81-5680	2	Screw
2	81-1330	1	Nut
3	81-2810	1	Flywheel
4	81-2370	1	Key
5	81-2820	1	Coil-Magneto
6	81-1480	1	Clamp
7	81-0181	1	Sparkplug
8	81-2120	1	Protector-Plug
9	81-2350	2	Screw
10	81-1500	1	Cap-Sparkplug
*11	41-7650	1	Puller-Flywheel


Ref. No.	Part No.	Qty.	Description

\* Not illustrated

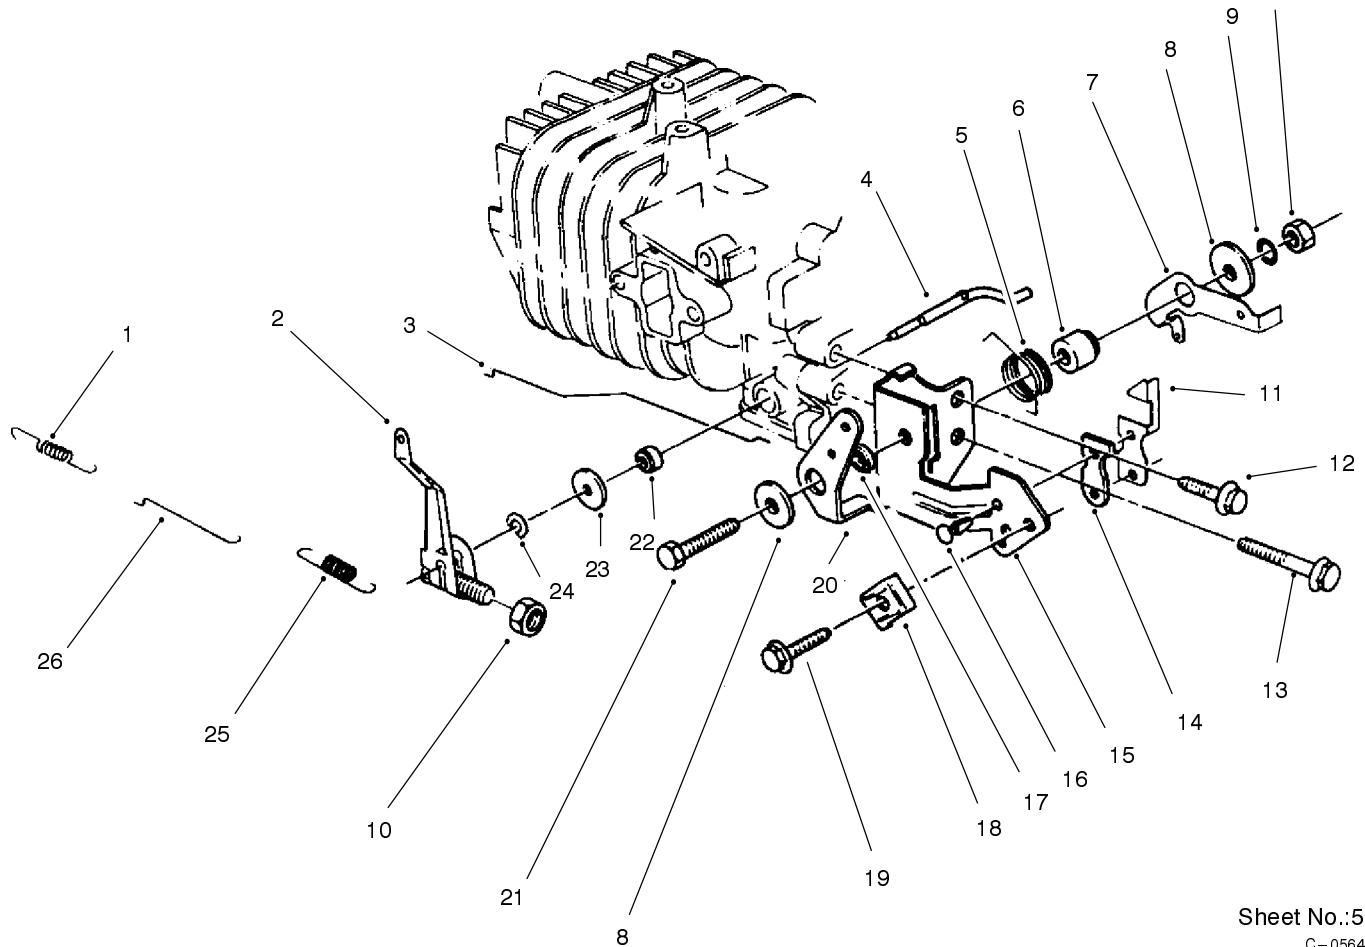Sheet No.:53  
C-0564

## Governor Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	81-0920	1	Spring	24	81-0870	1	E-Ring
2	81-5420	1	Arm-Governor	25	81-2830	1	Spring-Governor
3	81-5410	1	Rod-Choke	26	81-0910	1	Rod-Carburetor
4	81-2880	1	Shaft				
5	81-2460	1	Spring-Choke Lever				
6	81-1770	1	Spacer-Governor Lever				
7	81-2850	1	Lever-Spring, Governor				
8	81-1750	2	Washer				
9	81-1450	1	Lockwasher				
10	81-0900	2	Nut				
11	81-1840	1	Terminal-Kill Switch				
12	81-1170	1	Bolt				
13	81-0540	1	Bolt				
14	81-1830	1	Insulator-Kill Switch				
15	81-2420	1	Bracket-Throttle, Control				
16	81-4530	2	Rivet				
17	81-2470	1	Spacer-Choke Lever				
18	81-2430	1	Clamp				
19	50-0130	1	Bolt				
20	81-1710	1	Lever-Control, Choke				
21	81-1730	1	Bolt				
22	81-0850	1	Seal-Oil				
23	81-0860	1	Washer				

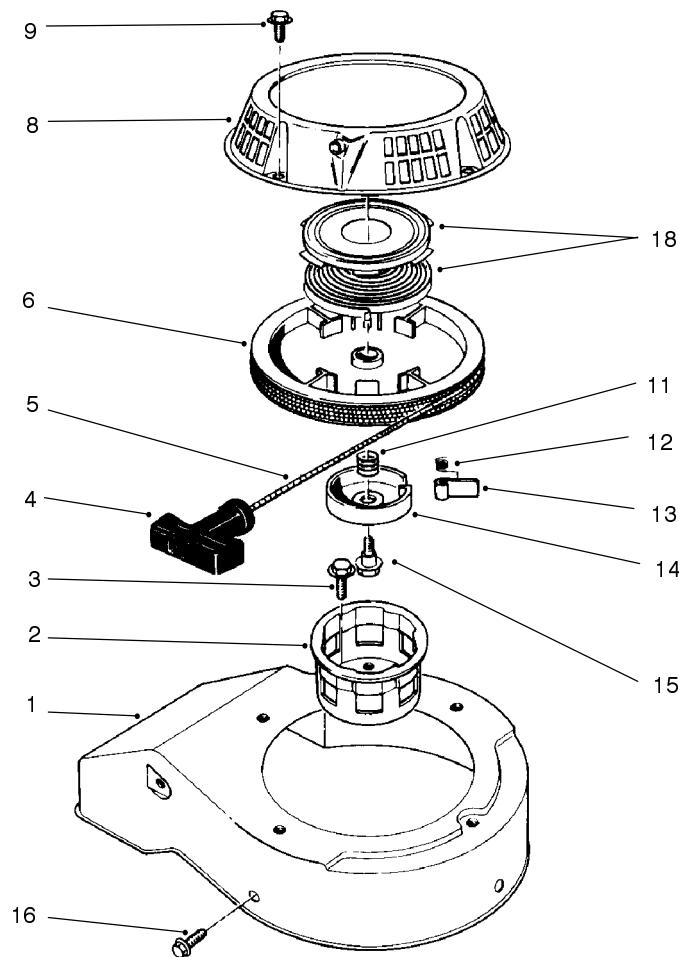

Sheet No.:54  
T-1102

## Recoil Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	81-2080	1	Cover-Fan, Cooling				
2	81-2170	1	Pulley-Cup, Starter				
3	81-1300	3	Bolt				
4	81-1630	1	Handle-Recoil				
5	81-1270	1	Rope				
6	81-1210	1	Reel				
8	81-2100	1	Case-Starter				
9	81-1280	4	Bolt				
11	81-1240	1	Spring				
12	81-1220	1	Spring				
13	81-1230	1	Dog				
14	81-1250	1	Retainer				
15	81-1260	1	Bolt				
16	53-1340	3	Bolt				
18	81-2300	1	Spring & Retainer ASM				

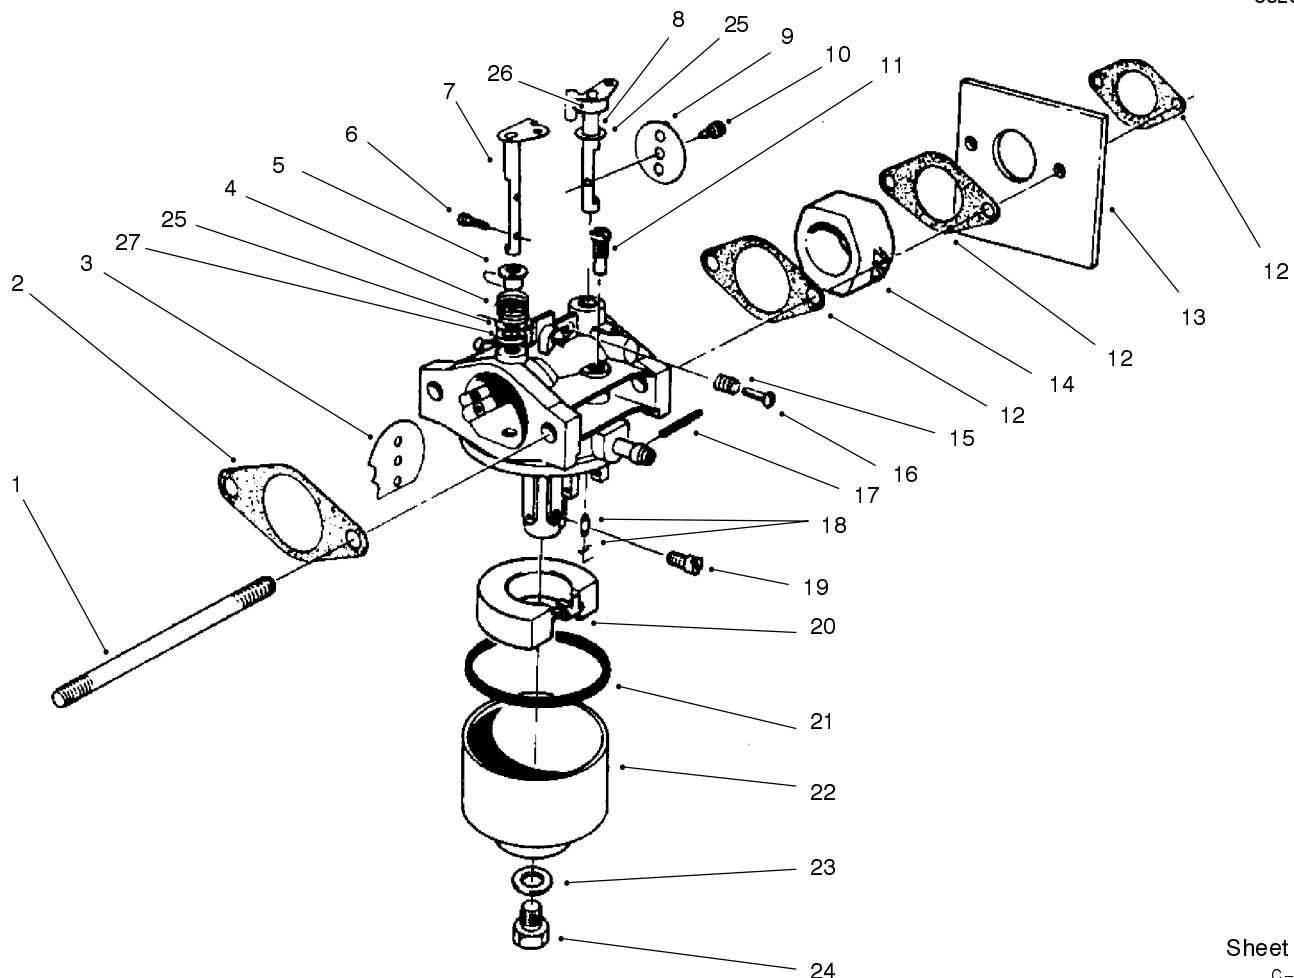

Sheet No.:55  
C-0563

## Carburetor Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	81-5450	2	Stud-Carburetor	26	81-2540	1	Ring
2	81-0090	1	Gasket-Air Cleaner	27	81-2550	1	Packing
3	81-0240	1	Plate	*29	81-2520	1	Carburetor ASM, Complete
4	81-0230	1	Spring	*30	94-1687	1	Carburetor ASM With Primer
5	81-0220	1	Bushing	*31	81-5810	1	Needle-Seat Set
6	81-2160	2	Screw				
7	81-1950	1	Shaft-Choke				
8	81-0250	1	Shaft				
9	81-0260	1	Plate				
10	81-2160	1	Screw				
11	94-1684	1	Jet-Pilot				
12	81-0780	3	Gasket-Carburetor				
13	81-5490	1	Shield-Carburetor				
14	81-5440	1	Insulator-Carburetor				
15	81-2580	1	Spring-Pilot Screw				
16	50-0250	1	Screw				
17	81-2600	1	Pin-Hinge				
18	81-4910	1	Needle				
19	81-1060	1	Jet-Main				
19	81-2340	1	Jet-High Altitude				
20	81-0970	1	Float				
21	81-1010	1	Gasket				
22	81-5660	1	Bowl - Float				
23	81-1020	1	Gasket				
24	81-5670	1	Screw				
25	81-2530	2	Seal				

\* Not illustrated

