

1983


FORM NO. 3310-414

TORO®

MODEL NO. 58114-30001 & UP

**PARTS
CATALOG****4 H.P. TILLER**

AUG 2 1 1972

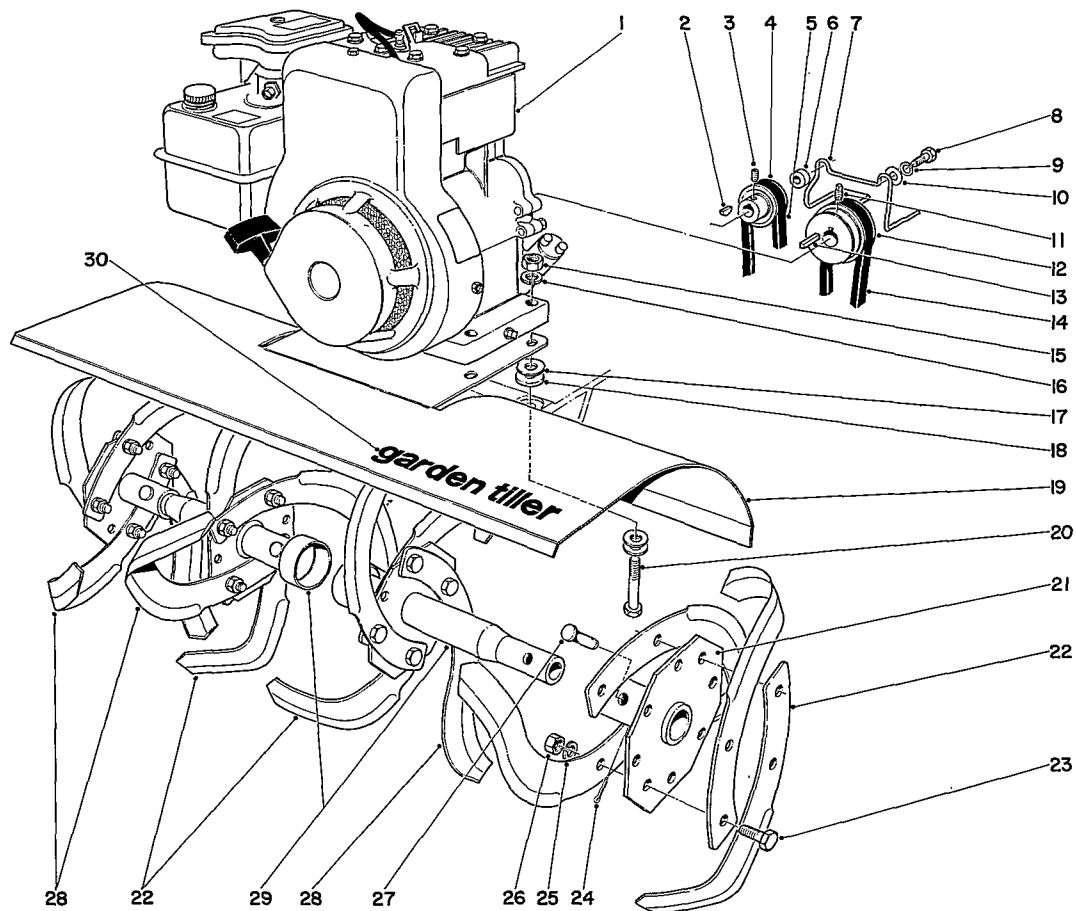**TINE AND ENGINE ASSEMBLY**


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	221-272	Engine	1	16	3253-4	Lockwasher	4
2	3257-24	Woodruff Key	1	17	3256-3	Washer	12
3	3245-7	Set Screw	1	18	7-0081	Special Washer	4
4	7-0071	Reverse Pulley	1	19	7-0072	Plant Shield	1
5	7-0074	Belt, Reverse	1	20	322-11	Capscrew	4
6	2-0780	Spacer	2	21	7-0105	Axle Hub	2
7	7-9350	Belt Guide	1	22	7-0103	Tine R.H.	8
8	321-11	Capscrew	2	23	323-6	Capscrew	16
9	3253-3	Lockwasher	2	24	3272-7	Cotter Pin	4
10	3256-2	Washer	2	25	3253-21	Lockwasher	16
11	3246-2	Set Screw	1	26	3217-7	Nut	16
12	7-0070	Engine Pulley	1	27	7-2116	Tine Pin	4
13	7-0036	Key	1	28	7-0102	Tine L.H.	8
14	7-0073	Belt, Forward	1	29	7-0104	Axle Hub	2
15	3217-6	Nut	4	30	17-8340	Decal	1

Copyright 1972 By

The Toro Company

Bloomington, Minnesota 55420 U.S.A.


Price \$1.00

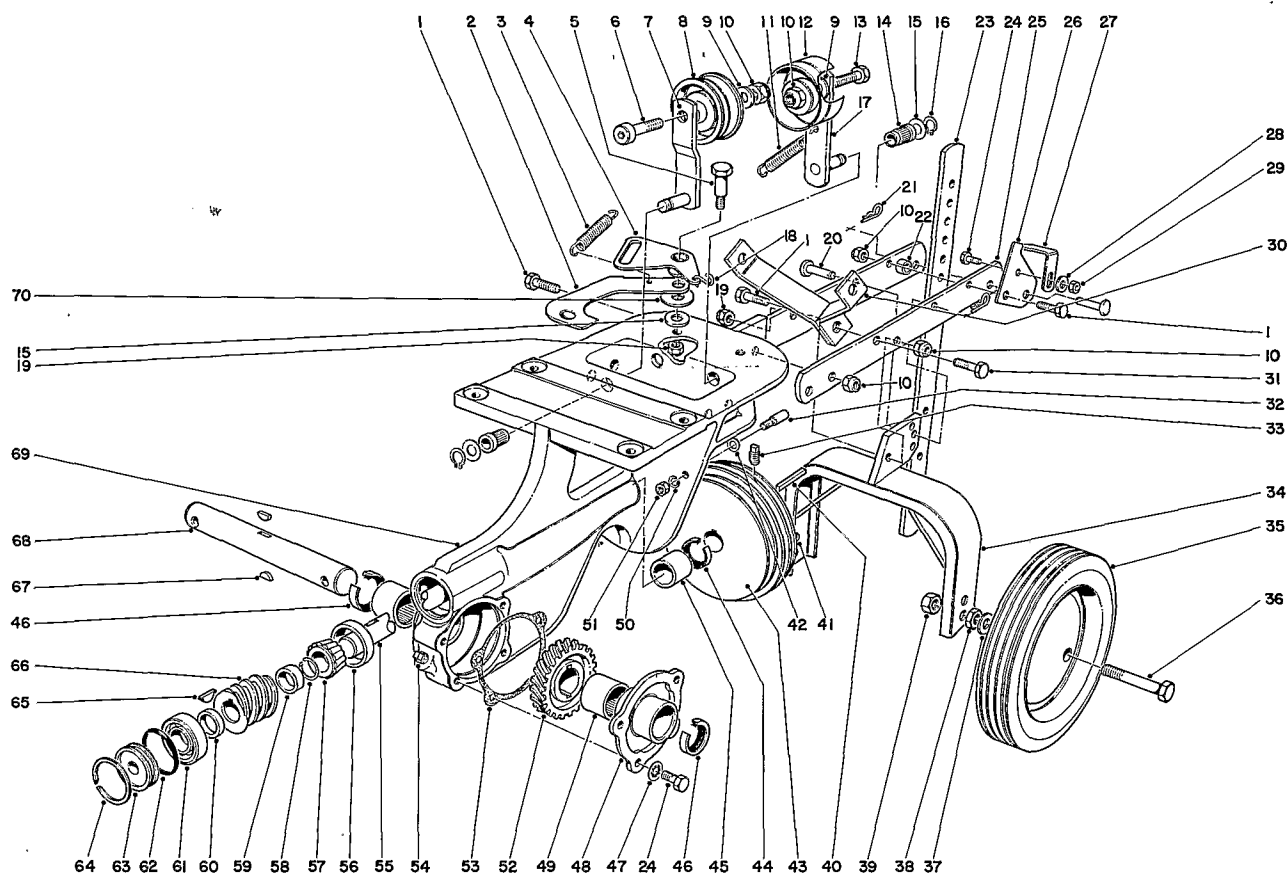

CHASSIS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-8	Capscrew	4
2	7-0028	Reverse Link	1
3	7-1322	Reverse Return Spring	1
4	7-0027	Bell Crank	1
5	7-0030	Shoulder Bolt	1
6	3274-45	Socket Hd. Capscrew	1
7	7-0055	Idle Arm	1
8	7-0056	Idle Pulley	1
9	3256-24	Washer	2
10	32152-2	Locknut	5
11	7-0025	Spring	1
12	7-0051	Idle Pulley	1
13	323-9	Capscrew	1
14	7-0023	Idle Bearing	2
15	3256-23	Washer	4
16	32120-35	Snap Ring	2
17	7-0050	Idle Arm	1
18	7-3618	"S" Hook	1
19	32152-1	Locknut	2
20	7-2116	Clevis Pin	2
21	3290-255	Hair Pin Cotter	1
22	17-6530	Spacer	1
23	7-0076	Depth Gauge	1

Ref. No.	Part No.	Description	No. Used
24	321-3	Capscrew	5
25	17-8510	Drawbar	2
26	17-8480	Latch Hinge	1
27	17-8490	Drag Bar Latch	1
28	3256-2	Flatwasher	1
29	32152-4	Nut	1
30	7-9340	Handle Support	2
31	322-7	Capscrew	1
32	7-0031	Belt Guide	2
33	3246-2	Set Screw	2
34	17-8360	Wheel Bracket	1
35	7-0075	Wheel	2
36	7-3552	Wheel Bolt	2
37	3256-6	Washer	2
38	3218-5	Jam Nut	2
39	32152-3	Locknut	2
40	7-0036	Key	1
41	7-0035	Pulley	1
42	3256-16	Washer	2
43	7-0034	Reverse Pulley	1
44	253-84	Oil Seal	1
45	256-167	Bearing	1
46	7-0045	Oil Seal	2

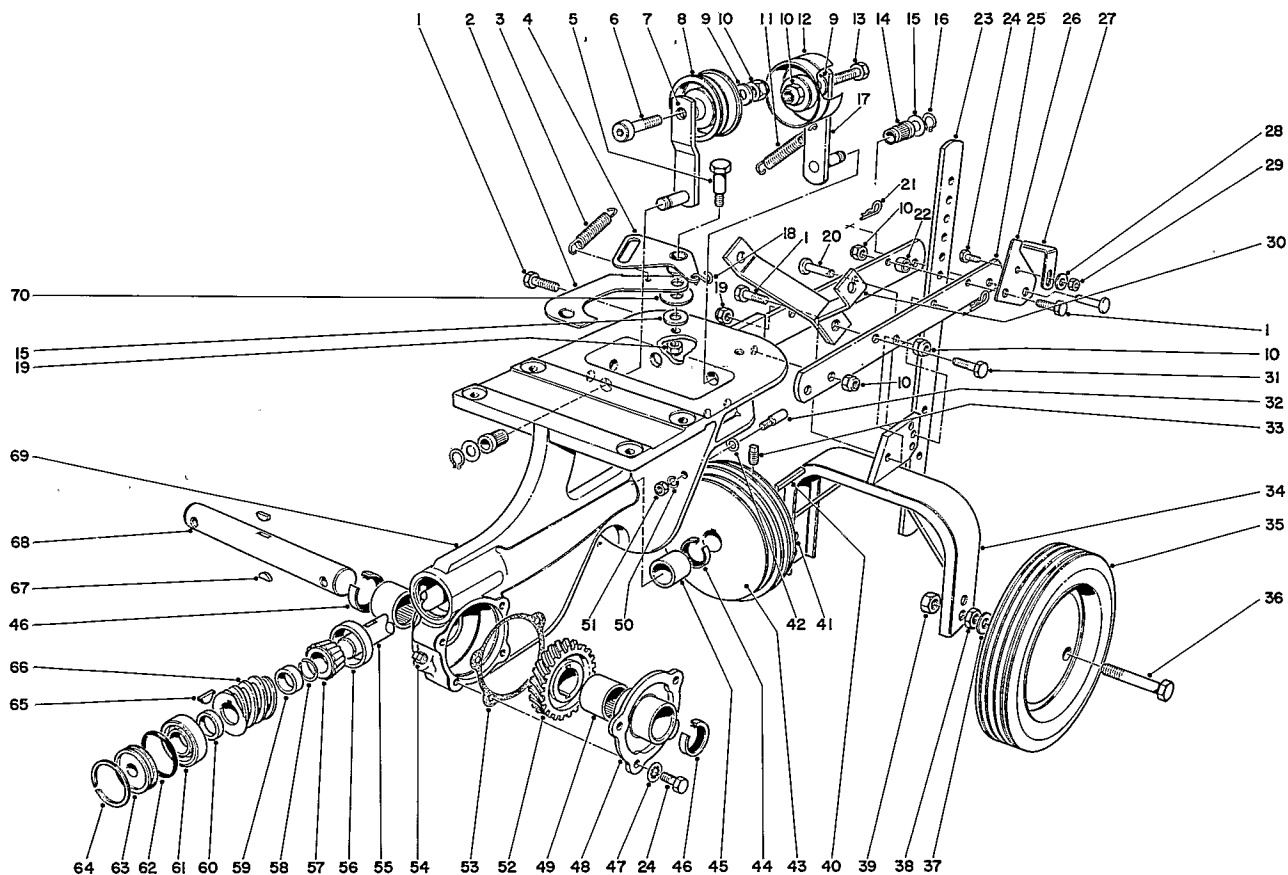


CHASSIS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	3254-8	Lockwasher	4
48	7-0048	Cover	1
49	252-52	Needle Bearing	2
50	3255-7	Lockwasher	2
51	3218-1	Jam Nut	2
52	7-0047	Worm Wheel	1
53	7-0020	Gasket	1
54	281-1	Pipe Plug	1
55	7-0012	Shaft	1
56	254-89	Bearing Cup	1
57	254-88	Bearing Cone	1
58	7-0013	Snap Ring	1

Ref. No.	Part No.	Description	No. Used
59	7-0014	Rear Spacer	1
60	7-0015	Front Spacer	1
61	251-207	Bearing	1
62	237-71	"O" Ring	1
63	7-0017	Plug	1
64	7-0018	Snap Ring	1
65	3257-23	Woodruff Key	1
66	7-0016	Worm Gear	1
67	3257-33	Woodruff Key 91	2
68	7-0046	Shaft	1
69	7-0043	Chassis	1
70	3256-25	Washer	2
*	5-4709	Loose Parts Bag	1


*Not Illustrated

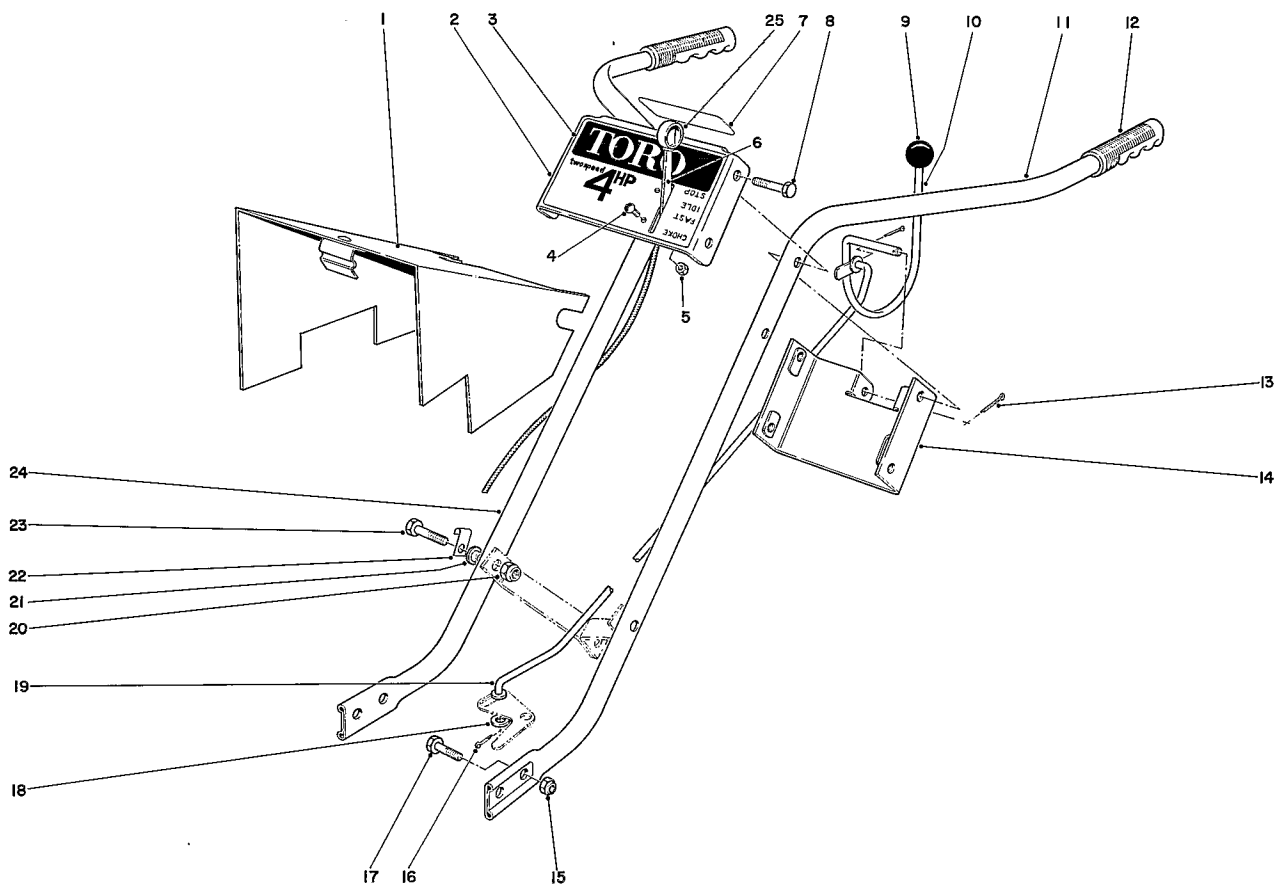

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	7-9190	Pulley Cover	1
2	17-8580	Control Plate	1
3	17-8420	Decal, Control	1
4	3251-2	Machine Screw	2
5	32149-7	Lock Nut	2
6	17-8450	Throttle Control	1
7	7-9450	Decal, Clutch	1
8	322-9	Capscrew	4
9	233-22	Knob	1
10	7-9320	Clutch Control	1
11	7-9270	Handle L.H.	1
12	235-19	Handle Grip	2

Ref. No.	Part No.	Description	No. Used
13	3272-2	Cotter Pin	3
14	17-8460	Handle Brace	1
15	32152-2	Lock Nut	4
16	3272-7	Cotter Pin	1
17	323-6	Capscrew	4
18	3256-24	Washer	1
19	7-0078	Clutch Rod	1
20	32152-1	Lock Nut	2
21	7-2041	Bushing	2
22	7-0077	Clip	1
23	322-11	Capscrew	2
24	7-9280	Handle R.H.	1
25	233-35	Knob	1

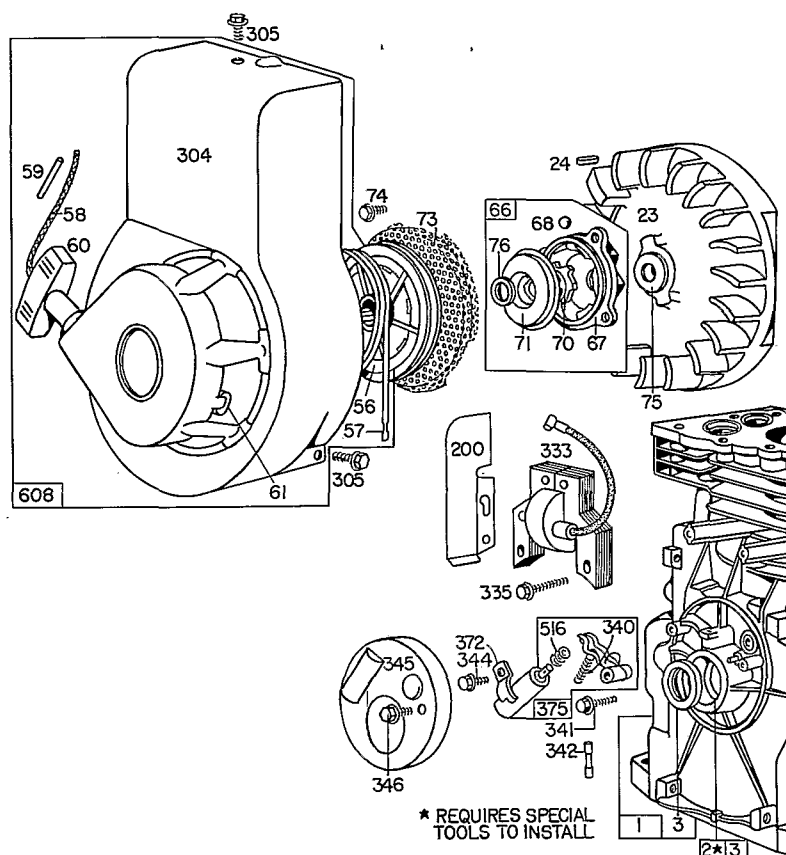


REWIND STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	297566	Cylinder Assembly	1	305	93158	Screw - Blower Housing Mounting	2
*2	297565	Bushing - Cylinder	1	333	298316	Armature - Magneto	1
3	89660	Seal - Oil	2	335	93414	Screw - Armature Mtg.	1
23	297229	Flywheel Assembly	1	340	26018	Spring Breaker Arm	1
24	61760	Key - Flywheel	1	341	93381	Screw - Breaker Arm Mounting Sem	1
56	298738	Pulley - Rewind Starter	1	342	65704	Plunger - Breaker Point	1
57	294303	Spring - Rewind Starter	1	344	93042	Screw - Condenser Clamp Mounting Sem	1
58	66694	Rope-Rewind Starter	1	345	220366	Cover - Breaking Point and Condenser	1
59	230228	Pin - Starter Grip	1	346	93014	Screw - Dust Cover Mounting Sem	1
60	66728	Grip - Starter Rope	1	372	220477	Clamp - Condenser	1
61	68618	Bumper - Starter Pulley	1	375	294628	Breaker Points and Condenser Set	1
66	298310	Clutch Assembly - Rewind Starter	1	Note: 299061 Ignition Kit Includes: 294628 Point Set 65704 Plunger 61760 Key - Flywheel			1
67	211383	Housing - Starter Clutch	1	516	260374	Spring - Connector	1
68	63770	Ball - Clutch	1	608	297259	Starter Assy., - Rewind	1
70	298436	Ratchet - Rewind Starter	1				
71	221653	Washer - Clutch Ret.	1				
73	221661	Screen - Starter Pulley	1				
74	93042	Screw - Rotating Screen Mounting Sem	1				
75	220865	Washer - Spring	1				
76	68238	Washer - Ratchet Sealing	1				
200	221480	Guide - Air	1				
304	297596	Housing - Blower	1				

* Requires special tools for installing

ENGINE MODEL NO. 100292 TYPE 0245-07 BRIGGS & STRATTON

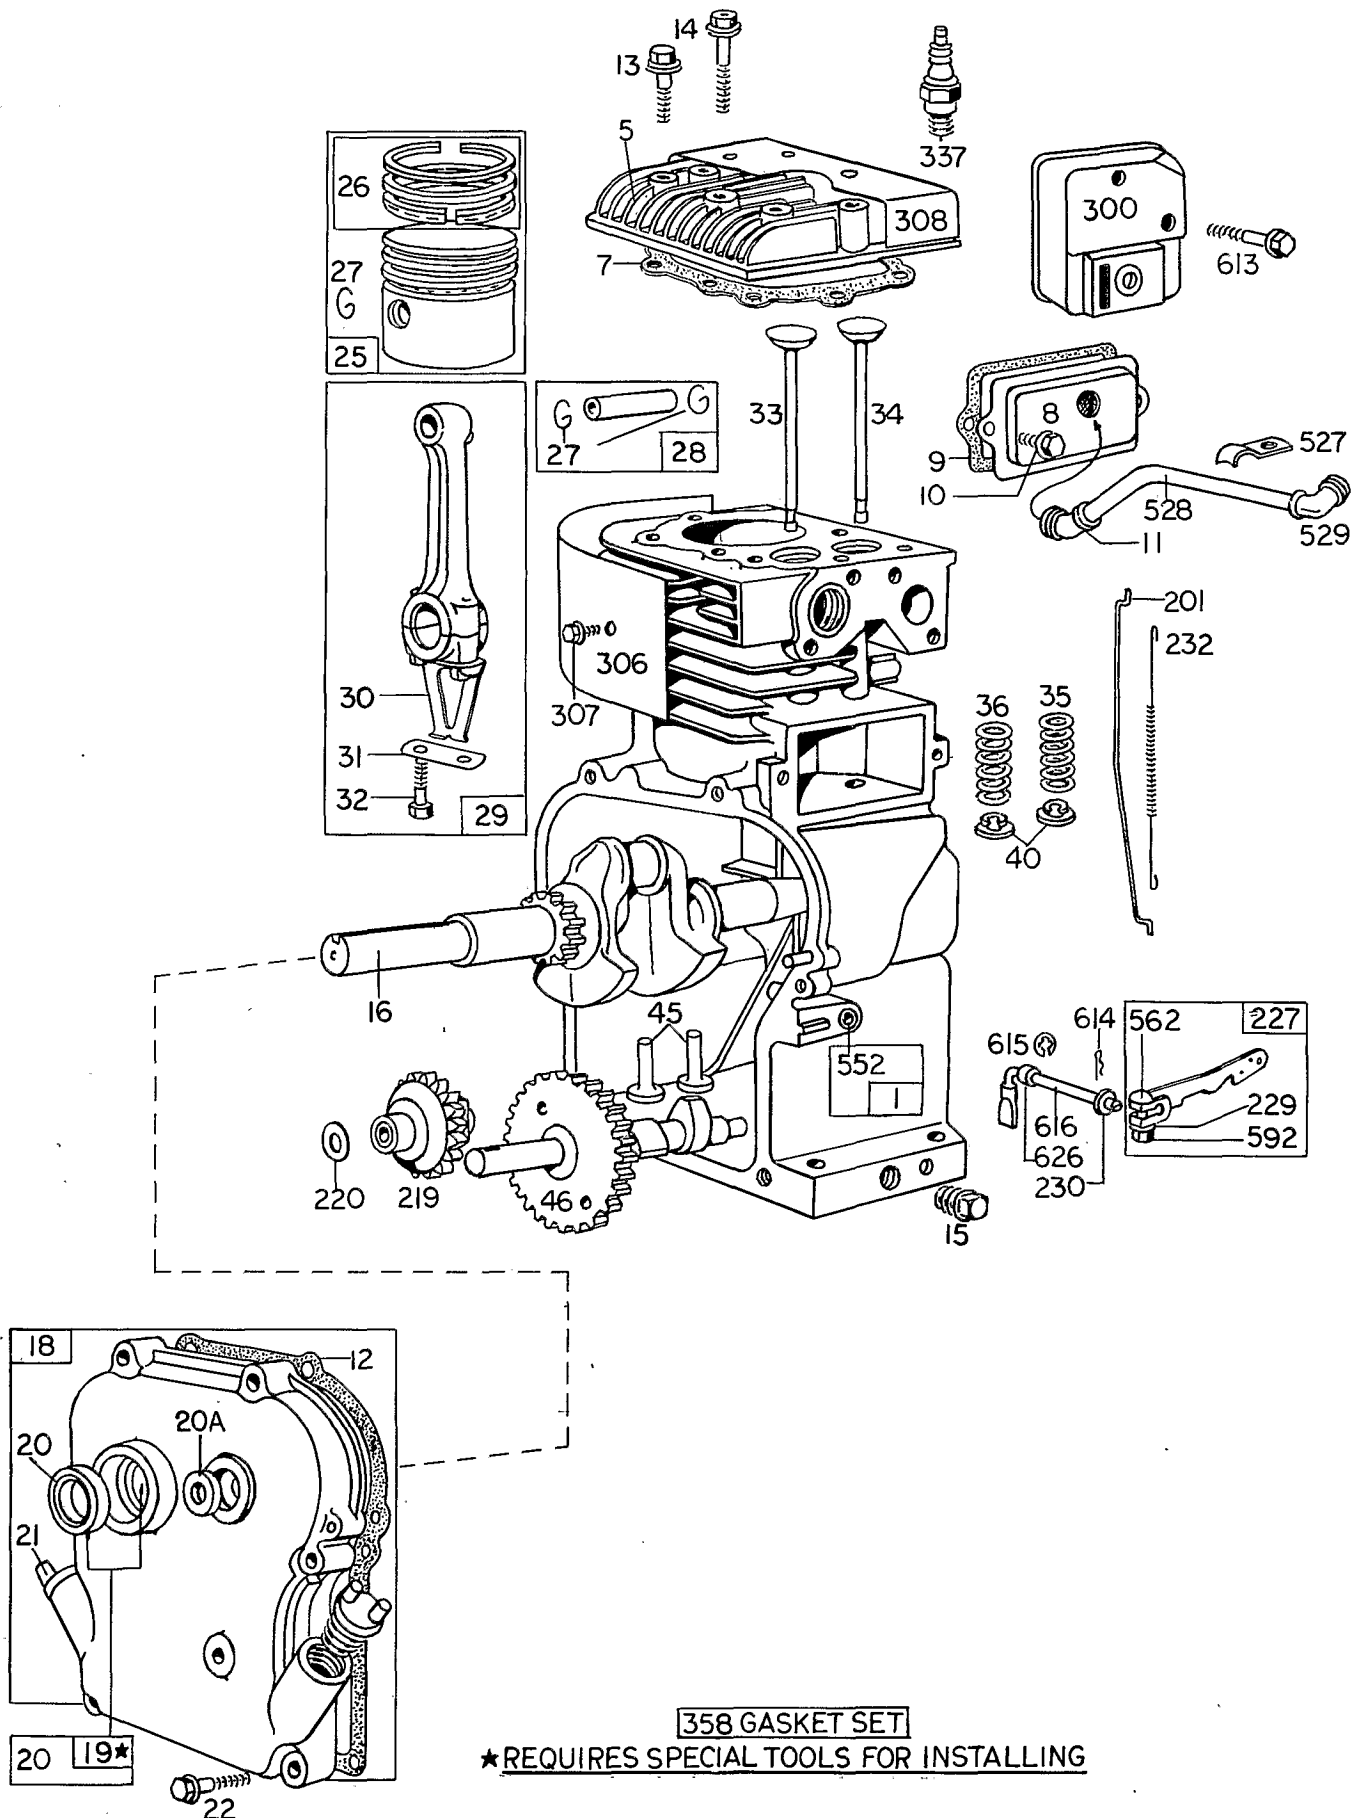


ENGINE MODEL NO. 100292 TYPE 0245-07

BRIGGS & STRATTON

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	297566	Cylinder Assembly	1		298177	Ring Set - .030" O.S. Piston, consists of:	
5	211127	Head - Cylinder	1			211361 Ring, Piston, Comp., Top, .030" O.S., 5/64" wide	
7	**270383	Gasket - Cylinder Head	1			211360 Ring, Piston, Compression, Center, .030" O.S., 5/64" wide	
8	294178	Breather - Valve Chamber	1			211359 Ring, Piston, Oil, .030" O.S.	
9	**27549	Gasket - Valve Cover	1	27	260645	Lock - Piston Pin	
10	93394	Screw - Breather Mounting Sem	1	28	297581	Pin Assy., - Piston - Standard	
11	66578	Grommet - Breather Tube	1		297582	Pin Assy., - Piston - .005" O.S.	1
12	**270080	Gasket - Crankcase - .015" Thick (Standard)	1	29	297569	Rod Assy., - Connecting Rod Assy., - Note: For Connecting Rod with .020" undersize Crankpin Bore - order No. 298786	1
	270125	Gasket - Crankcase - .005" thick	1	30	221786	Dipper - Connecting Rod	1
	270126	Gasket - Crankcase - .009" thick	1	31	221741	Lock - Connecting Rod Screw	1
13	93368	Screw - Cylinder Head	1	32	93450	Screw - Connecting Rod	1
14	93369	Screw - Cylinder Head	1	33	211119	Valve - Exhaust	1
15	91249	Plug - Pipe, Square Hd, Std.	1	34	261044	Valve - Intake	1
16	260719	Crankshaft	1	35	260552	Spring - Intake Valve	1
18	298183	Cover Assy., Crankcase	1	36	26478	Spring - Exhaust Valve	1
*19	297603	Bushing - Crankcase Cover	1	40	93312	Retainer - Valve Spring	1
20	294606	Seal - Oil	1	45	260642	Tappet - Valve	1
20A	298041	Seal - Oil	1	46	211284	Gear - Cam	1
21	66768	Plug - Oil Filler	1	201	260661	Link - Governor	1
22	93032	Screw - Crankcase Cover Mounting Sem	1	219	297656	Gear - Governor	1
25	298168	Piston Assy. (Standard)	1	220	221551	Washer - Thrust	1
	298169	Piston Assy. (.010 oversize)	1	227	297601	Lever Assy., Governor	1
	298170	Piston Assy. (.020 oversize)	1	229	220680	Washer - Gov. Lever	1
	298171	Piston Assy. (.030 oversize)	1	230	221559	Washer - Governor Lever	1
26	298174	Ring Set - Std. Piston, consists of:		232	260478	Spring - Governor Link	1
		211297 Ring, Piston, Comp., Top, 5/64" wide		300	297506	Muffler - Exhaust	1
		211298 Ring, Piston, Compression Center, 5/64" wide		306	221511	Shield - Cylinder	1
		211299 Ring, Piston, Oil .010" O.S.	1	307	93042	Screw - Cylinder Shld. Mtg. Sem	
	298175	Ring Set - .010" O.S. Piston, Consists of:		308	221512	Cover - Cylinder Head	1
		211353 Ring, Piston, Comp., Top, .010" O.S., 5/64" wide		337	298809	Plug - Spark (with Gasket) Note: 1 1/2" High - 38 M.M. Spark Plugs 298809, Ignition Cable Terminal No. 221798.	1
		211352 Ring, Piston, Compression, Center, .010" O.S. 5/64" wide		358	297615	Gasket Set	1
		211351 Ring, Piston, Oil, .010" O.S.		527	221514	Clamp - Breather Tube	1
	298176	Ring Set - .020" O.S. Piston, Consists of:		528	230722	Tube - Breather	1
		211357 Ring, Piston, Comp., Top, .020" O.S., 5/64" wide		529	67838	Grommet - Breather Tube	1
		211356 Ring, Piston, Compression, Center, .020" O.S., 5/64" wide		552	230732	Bushing - Governor	1
		211355 Ring, Piston, Oil, .020" O.S.		562	92613	Bolt - Governor Lever	1
				592	90356	Nut - Hex	1
				613	93377	Screw - Muffler Mtg.	1
				614	93306	Cotter - Hairpin	1
				615	93307	Retainer E-Ring	1
				616	230723	Crank - Governor	1
				626	230749	Spacer - Gov. Crank	1

**Included in Gasket Set - Part No. 297615

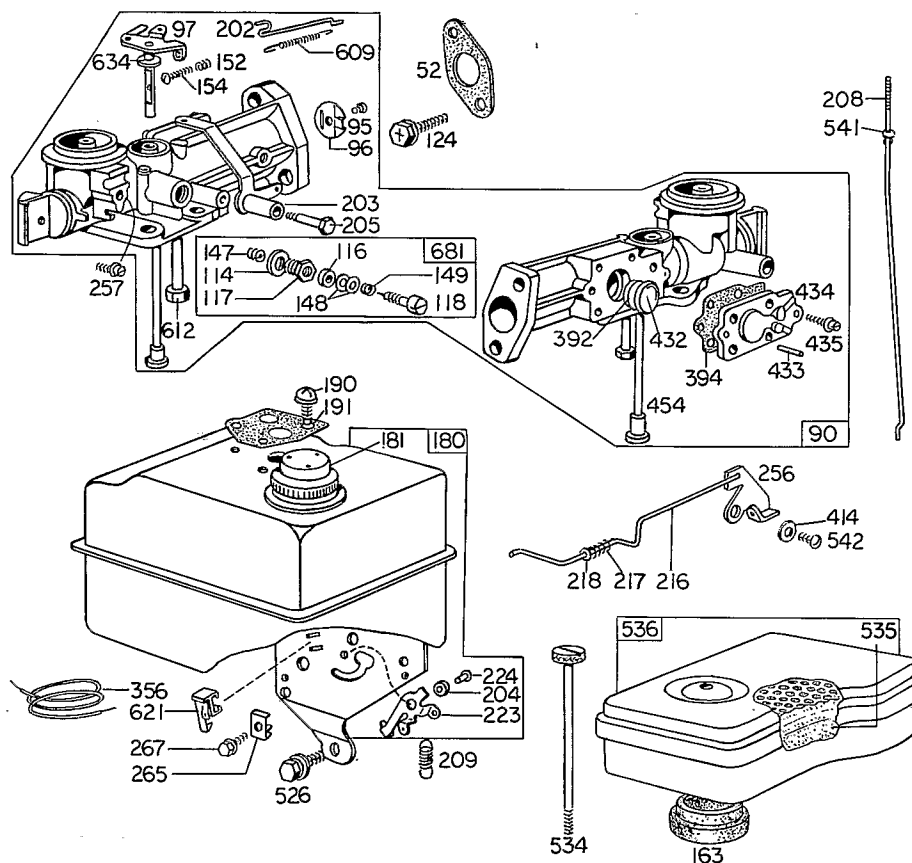

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
52	**27355	Gasket - Carburetor Mounting	2
90	298547	Carburetor Assy., (Complete)	1
95	93385	Screw - Throttle Valve to Shaft Sem	1
96	211203	Throttle - Carburetor	1
97	297468	Shaft and Lever - Throttle	1
114	66594	Gasket - Needle Valve Nut	1
116	65978	Packing - Needle Valve	1
117	230590	Nut - Needle Valve	1
118	23433	Valve - Needle	1
124	93357	Screw - Sem, Phillips Hex. Hd.	1
147	230591	Seat - Needle Valve	1
148	22235	Washer - Needle Valve	1
149	26336	Spring - Needle Valve	1
152	260575	Spring - Throttle Adjustment	1
154	92634	Screw - Round Head	1
163	**27660	Gasket - Air Cleaner Mounting	1
180	297600	Tank Assembly - Fuel (Complete)	1
181	298425	Cap - Fuel Tank	1
190	93341	Screw - Fuel Tank Mounting Sem	1
191	**27911	Gasket - Fuel Tank Mtg.	2
202	260678	Link - Throttle	1
203	297718	Crank - Bell	1
204	230844	Bushing - Governor Lever	1
205	93566	Screw - Shoulder	1
208	230737	Rod - Control	1
209	260695	Spring - Governor	1
216	299859	Link - Choke	1
217	260189	Spring - Choke Link	1

Ref. No.	Part No.	Description	No. Used
218	221198	Washer - Choke Link	1
223	221517	Lever - Gov. Control	1
224	93491	Rivet	1
256	299859	Crank - Bell	1
257	93263	Screw - Fil. Hd. Sem	1
265	221535	Clamp - Casing	1
267	93496	Screw - Sem	1
356	295413	Wire - Ground	1
392	260455	Spring - Fuel Pump Diaphragm	1
394	270026	Diaphragm	1
414	220982	Washer	1
432	221377	Cap - Spring	1
433	93265	Pin - Diaphragm Cover	1
434	210959	Cover - Diaphragm	1
435	93141	Screw - Diaphragm Cover	1
454	296178	Housing - Fuel Pipe Screen	1
526	93343	Screw - Tank Bracket Mounting Sem	1
534	93322	Screw - Air Cleaner	1
535	27987	Element - Air Cleaner	1
536	297036	Cleaner Assembly - Air (Complete)	1
541	22398	Washer	1
542	92265	Screw	1
609	260694	Spring - Throttle Link	1
612	296811	Pipe - Fuel	1
621	297472	Switch - Stop	1
634	270167	Washer, Throttle Shaft (Felt)	1
681	299060	Needle Valve Kit	1

**Included in Gasket Set - Part No. 297615

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO distributor or his Authorized TORO Service Dealer for information and part numbers.

IMPORTANT ORDERING INSTRUCTIONS

Repair parts are available from your Authorized TORO Service Dealer. To insure getting correct parts without delay, furnish the following information:

1. Serial number of your tiller as shown on the name plate.
2. Part number, description, and quantity of each part required.
3. State whether parts should be shipped by mail or express. All repair parts are shipped F.O.B. Factory.
4. Name and address where parts are to be shipped.
5. Do not order by reference number; use part number only.

THE TORO PROMISE

It is Toro's policy to design and produce TORO products to provide our customers with a high level of performance and durability in normal operation. Our products, however, are produced in high volume, and it is inevitable that occasionally a unit will reach a customer with a defect in materials or workmanship which causes that unit to fall below the normal high

level of TORO performance. Invariably, such a defect will be noticed in a residential product within one year, and in an institutional product within ninety days after purchase. Recognizing this possibility, Toro has established a simple guarantee policy and procedure that is intended to assure customer satisfaction. This guarantee statement is as follows:

The Toro Promise

The Toro Company promises to repair any TORO product for the original purchaser if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential products	1 year
Residential products used commercially	45 days
Institutional products	90 days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer, or any institutional product to a TORO distributor.

Should you feel that a product is defective, and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any TORO dealer or distributor, but preferably the dealer or distributor from whom you purchased the product.
2. He will instruct you to either return the product to him, or tell you the name and address of your nearest Authorized TORO Service Dealer if the product is to be returned to such dealer.
3. Take the product and your original sales slip, or other evidence of purchase date, to the servicing dealer.

4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service he performs, we urge you to contact us. Write:

**TORO "Customer Care" Department
8111 Lyndale Avenue South
Bloomington, Minnesota 55420**

[illegible]

MAINTENANCE RECORD

[illegible]