

TORO[®]

Count on it.

Parts Catalog

Flow Divider Kit

**Groundsmaster® 4500-D/4700-D Traction
Unit**

Model No. 31527

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nXy . The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number $2X37$ means that two of the parts identified by reference number 37 are indicated.


Contents

Automatic Flow Divider Assembly	4
Manual Flow Divider Assembly	5
Flow Divider Manifold Assembly No. 121-3128	6

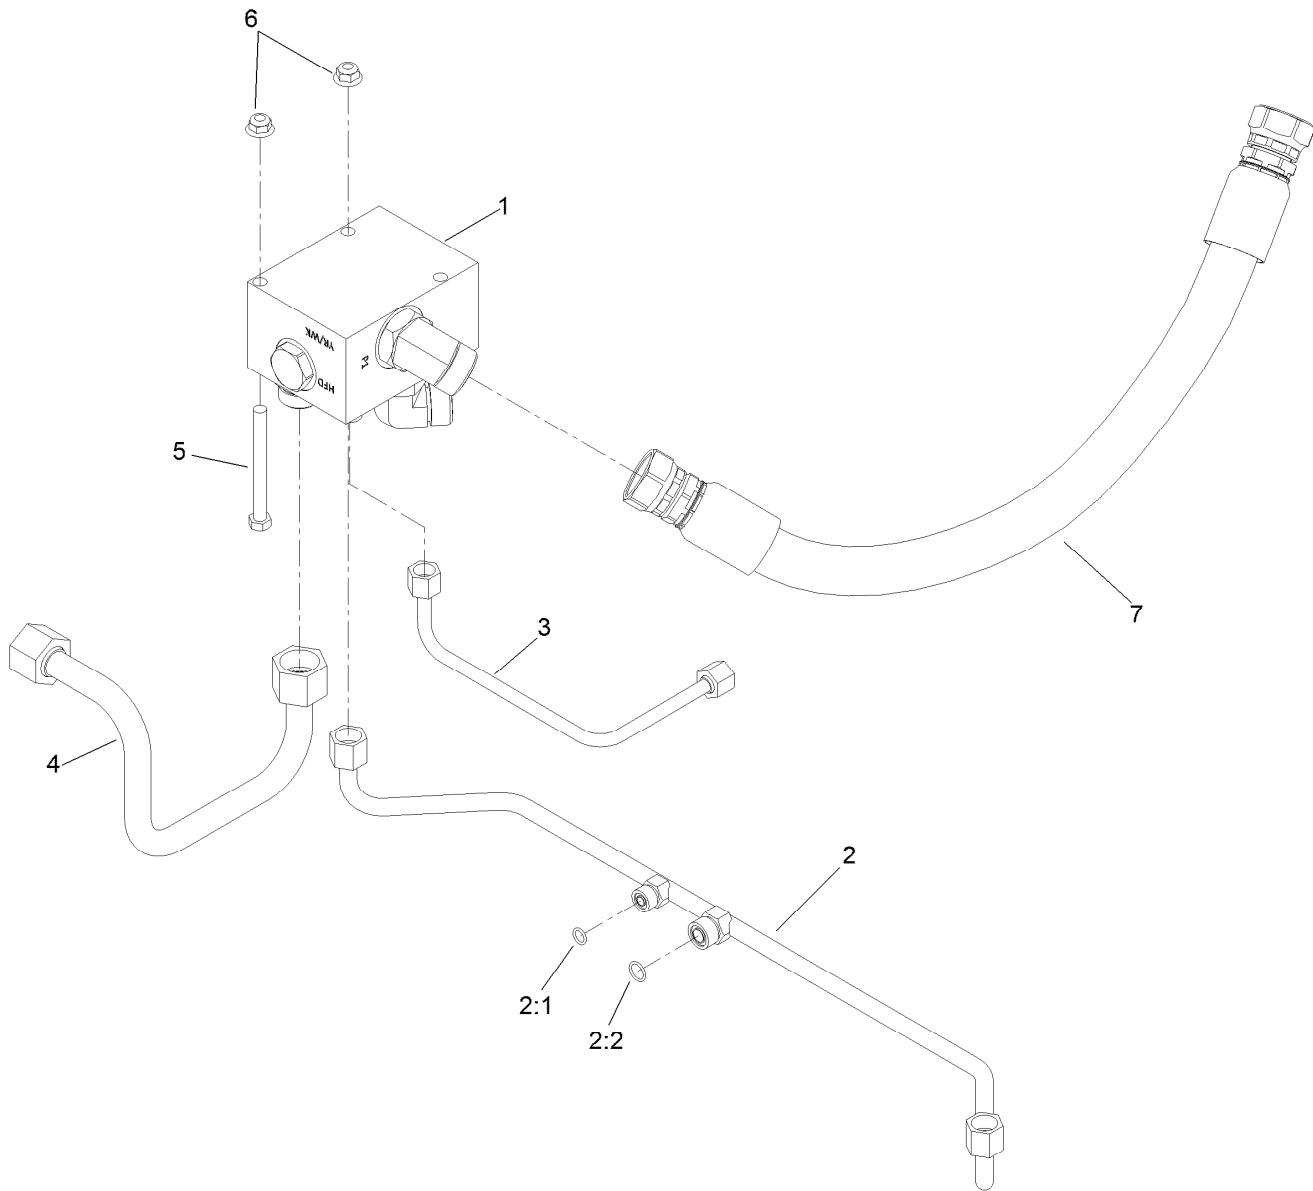


Automatic Flow Divider Assembly

Ref.	Part Number	Qty.	Description
1	121-3128	1	Flow Divider Manifold ASM
2	125-4561	1	Tube ASM
2:1	237-22	1	O-Ring
2:2	237-30	1	O-Ring
3	125-4564	1	Tube ASM
4	125-4588	1	Tube ASM
5	323-42	2	Screw-HH
6	104-8301	2	Nut-HF, NI
7	136-2910	1	Hose ASM

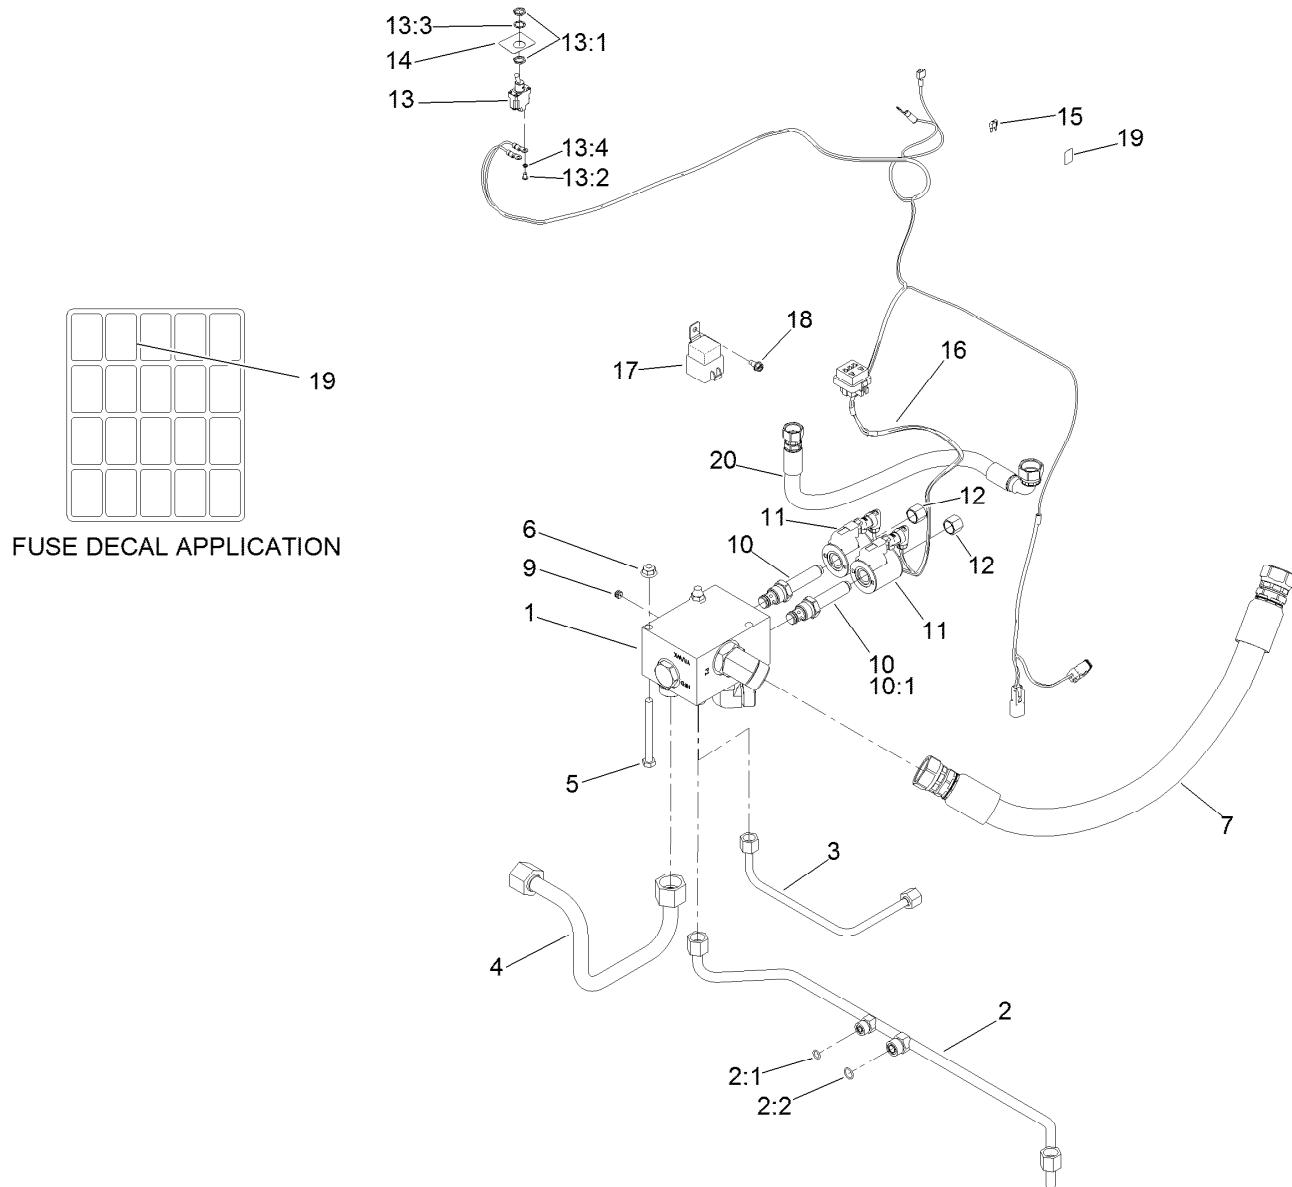

Manual Flow Divider Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	121-3128	1	Flow Divider Manifold ASM	13	122-0719	1	Switch-Toggle (On) - None - On
2	125-4561	1	Tube ASM	13:1	218-498	2	Nut-Lock
2:1	237-22	1	O-Ring	13:2	218-588	3	Screw
2:2	237-30	1	O-Ring	13:3	218-589	1	Washer
3	125-4564	1	Tube ASM	13:4	3253-19	3	Washer-Lock
4	125-4588	1	Tube ASM	14	132-6104	1	Decal-Momentary
5	323-42	2	Screw-HH	15	121-8866	1	Fuse-Mini Blade, 10 Amp
6	104-8301	2	Nut-HF, NI	16	122-0140	1	Harness-Wire
7	136-2910	1	Hose ASM	17	99-7430	1	Relay-Mini
9	110-8889	1	Plug-Orifice (0.020)	18	32104-17	1	Screw-HWH
10	132-6103	2	Valve	19	132-6185	1	Decal-Fuse, Momentary (4Wd)
10:1	132-6231	1	Seal Kit	20	136-2911	1	Hose ASM
11	115-3021	2	Coil-12V				
12	110-2635	2	Nut-Coil				

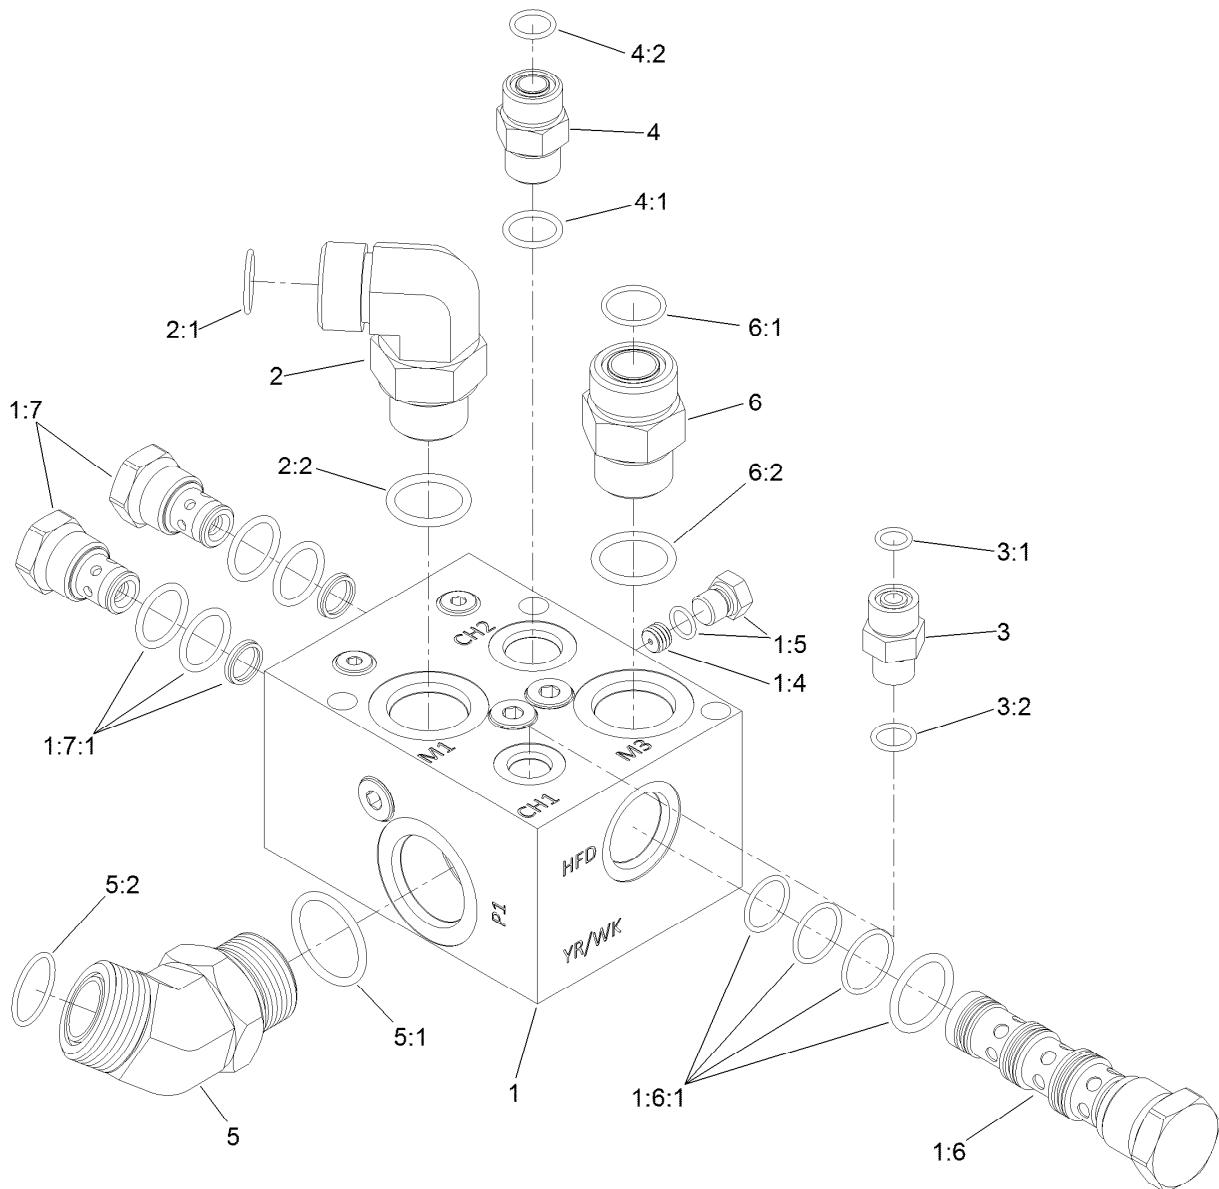

Flow Divider Manifold Assembly No. 121-3128

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1		1	Manifold-Flow Divider, 50/50 ●	3:1	237-22	1	O-Ring
1:4	112-6538	1	Orifice (.063 Inch)	3:2	237-42	1	O-Ring
1:5	117-0115	1	Plug	4	100-4890	1	Fitting-Check
1:6	125-4634	1	Valve-Flow Divider, 50/50	4:1	237-79	1	O-Ring
1:6:1	125-4338	1	Seal Kit	4:2	237-30	1	O-Ring
1:7	125-4333	2	Valve-Check	5	104-3509	1	Fitting-HYD, 45 DEG
1:7:1	125-4337	1	Seal Kit	5:1	237-146	1	O-Ring
2	340-142	1	Fitting-Elbow, 90 DEG	5:2	340-65	1	O-Ring
2:1	237-58	1	O-Ring	6	340-9	1	Fitting-STR
2:2	237-81	1	O-Ring	6:1	237-58	1	O-Ring
3	92-9258	1	Adapter-Check	6:2	237-81	1	O-Ring

● Not serviced separately

Notes:



Count on it.