



42" Snowthrower

Lawn and Garden Tractors

Model No. 79360-210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Housing and Attachment System	3	Auger and Drive System	5
Chute and Rotation System	4		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

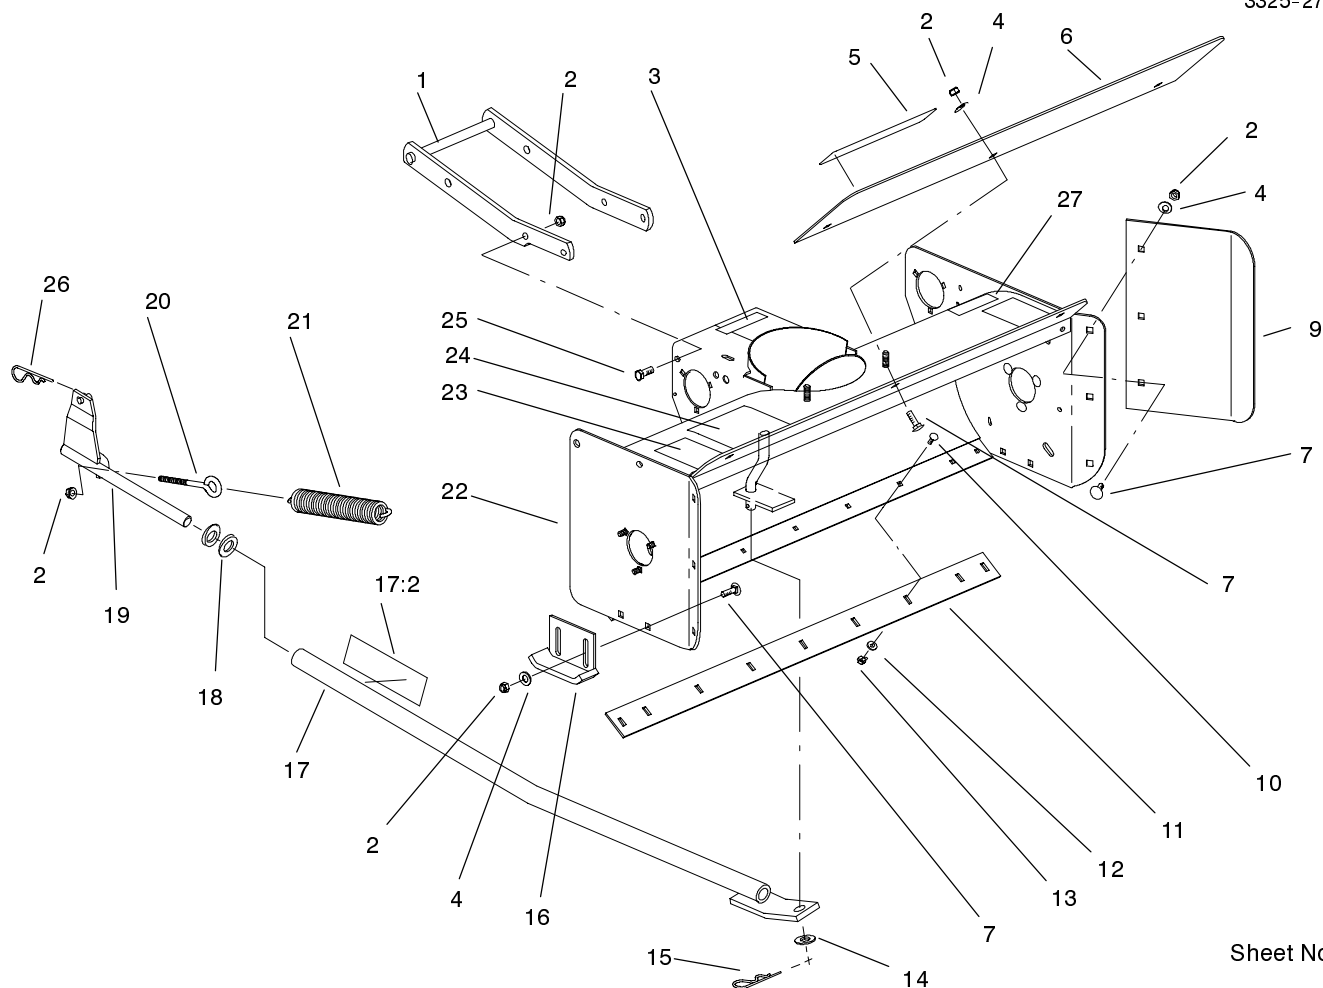

Sheet No.:2

Housing and Attachment System

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	104604-01	1	Frame-Mounting	26	9335054	1	Pin-Hair
2	3296-39	18	Nut-Lock, NI	27	86-5100	1	Decal - Warning
4	3256-24	13	Washer-Flat				
5	92-8748	1	Decal-Attachment				
6	93-1616-01	1	Plate-Extension				
7	3231-2	13	Screw-CARR				
9	93-1617-01	2	Plate-Extension, RH				
10	3229-25	9	Screw-CARR				
11	79-6170-01	1	Scraper-Reversible				
12	3256-22	9	Washer-Flat				
13	3296-42	9	Nut-Lock NI				
14	3256-27	1	Washer-Flat				
15	9335064	1	Pin-Hair				
16	93-1620-01	2	Skid				
17	105-1401	1	Tube,Lift				
17:2	86-5100	1	Decal - Warning				
18	3256-28	2	Washer-Flat				
19	101461-01	1	ASM-Lift Rod W/Decal				
20	100653	1	Eyebolt				
21	4629	1	Spring				
22	92-7299	1	Auger ASM/W/Decals				
23	63-2380	2	Decal-Danger				
24	92-8652	1	Decal-Warning				
25	323-6	4	Screw-HH				

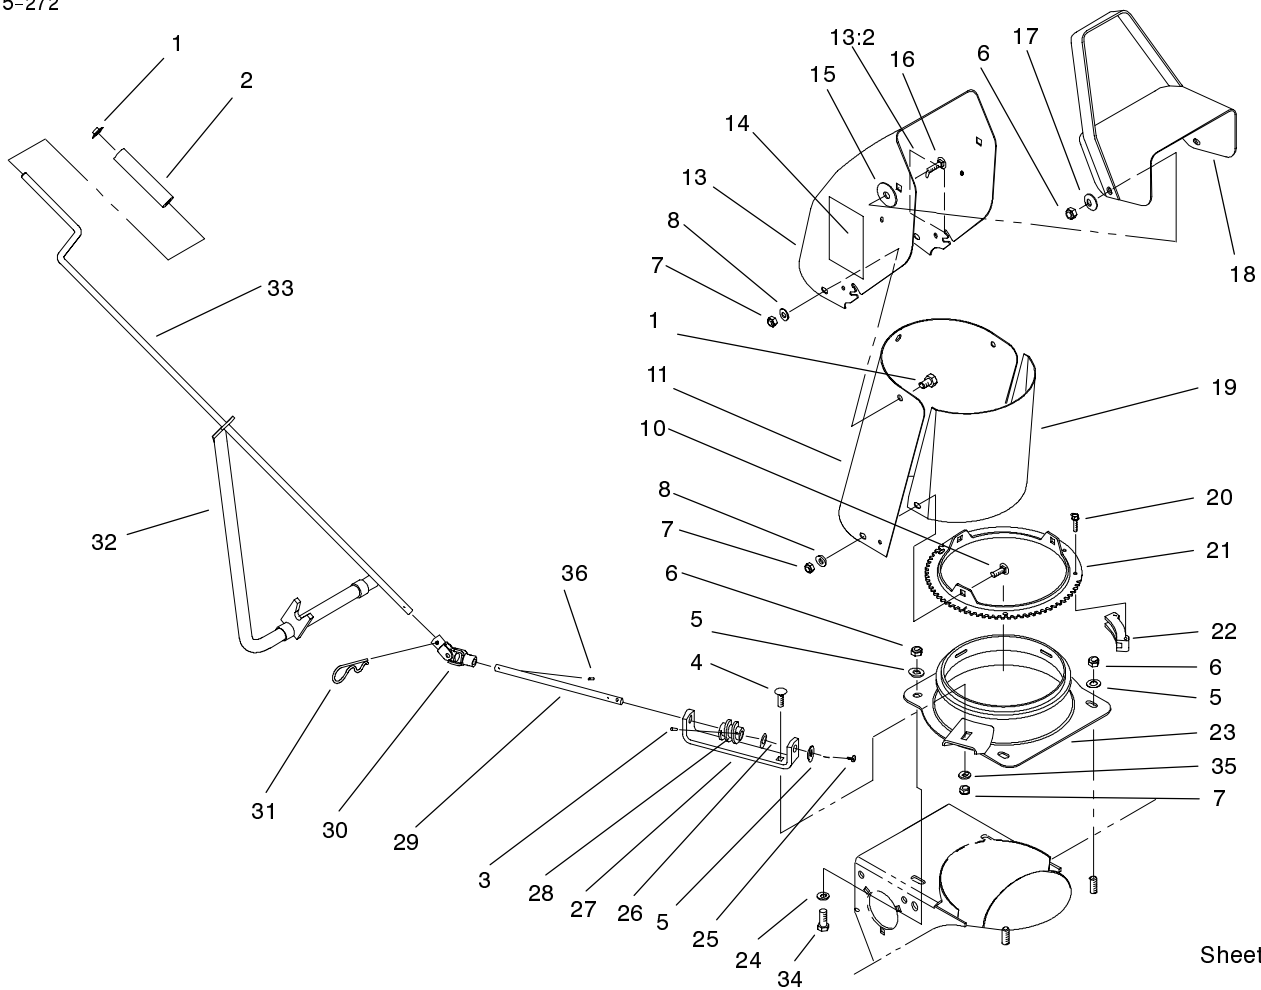


Sheet No.:3

Chute and Rotation System

Ref. No.	Part No.	Qty.	Description
1	3290-320	1	Retainer-Push On
2	40-8230	1	Grip-Chute Control
3	32121-50	1	Pin-Spring
4	3230-2	1	Screw-CARR
5	3256-24	5	Washer-Flat
6	3296-39	6	Nut-Lock, NI
7	3296-29	7	Nut-Lock
8	3256-23	6	Washer-Flat
10	3230-1	3	Screw-CARR
11	26-1110-01	1	Extender-Chute, Upper
12	322-2	3	Screw-HH
13	94-1832	1	Chute
13:2	94-8079	1	Decal-Danger
14	94-8078	2	Decal-Discharge Danger
15	20-4320	2	Washer-Rubber
16	3231-2	2	Screw-CARR
17	3290-340	2	Washer-Belleville
18	11-7120-01	1	Deflector
19	94-9787-01	1	Shield-Deflector
20	27-0220	6	Screw-Special
21	78-0160-01	1	Chute Swivel Ring
22	25-5450	3	Retainer-Chute
23	78-0330-01	1	Adapter
24	9202414	2	Washer-Spacer

Ref. No.	Part No.	Qty.	Description
25	3272-10	1	Pin-Cotter
26	3290-212	1	Washer-Spring
27	79-3770-03	1	Bracket-Worm
28	8-8600	1	Gear-Worm, Chute
29	78-7430	1	Rod
30	94-2686	1	Joint-Universal
31	9335054	1	Pin-Hair
32	78-0200-01	1	Support,Rod
33	51-2650	1	Chute Control Rod
34	323-6	2	Screw-HH
35	3290-238	1	Washer-Lock
36	32121-47	1	Pin-Spring

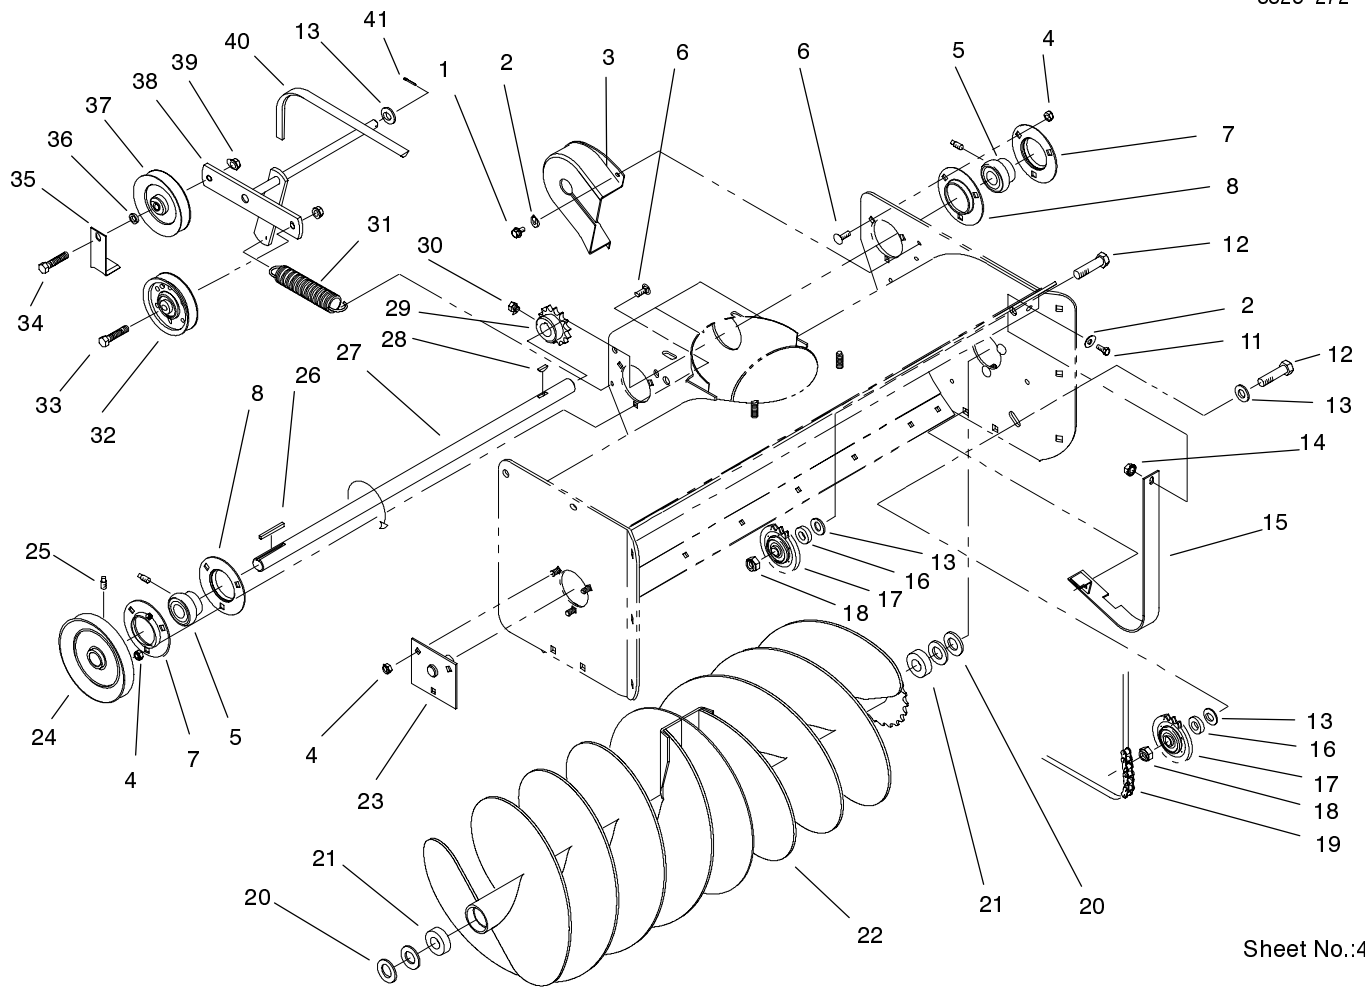

Sheet No.:4

Auger and Drive System

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	9266714	2	Screw-HWH	29	78-0850-01	1	Sprocket-Drive,14 Tooth
2	3256-22	3	Washer-Flat	30	3246-2	1	Setscrew-HSH
3	109218	1	Guard-Chain	31	78-7480	1	Spring-Extension
4	3296-29	12	Nut-Lock	32	92-7101	1	Pulley - Flat Idler
5	110569	2	Bearing & Collar	33	323-9	1	Screw-HH
6	3230-1	6	Screw-CARR	34	323-10	1	Screw-HH
7	110567	2	Flange Relube-Zerk	35	7450-01	1	Bracket-Retainer,Belt
8	110568	2	Flange	36	104662	1	Spacer
11	321-3	1	Screw-HH	37	7451	1	Idler Pulley
12	325-8	2	Screw-HH	38	78-0480-01	1	Arm,Idler
13	3256-26	5	Washer-Flat	39	3296-39	2	Nut-Lock, NI
14	32149-2	1	Nut	40	9750	1	V-Belt
15	109244-01	1	Guard,Chain	41	3272-7	1	Pin-Cotter
16	6417	2	Spacer				
17	93-1614	2	Idler Sprocket				
18	3296-23	2	Nut-Lock, NI				
19	6416	1	Chain				
20	3256-28	4	Washer-Flat				
21	101480	2	Ball Bearing				
22	93-1615-01	1	Auger Assembly				
23	93-1618-01	2	Support				
24	113356	1	Pulley				
25	3242-2	2	Screw-SQH				
26	1005	1	Straight Key				
27	113320-01	1	Shaft-Drive				
28	937089	1	Key				

Maintenance Record

[illegible]

Maintenance Record

[illegible]

