



Mid-Size Mower

ProLine Gear 12.5 HP with 91cm. Side Discharge Mower

Model No. 30250TE—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Engine, Clutch Assembly	3	Valves and Camshaft Assembly	
Clutch Assembly No. 54–3200	4	Kawasaki Model FB460V–LS08	19
Fuel Tank Assembly	5	Lubrication Equipment Assembly	
Lower Controls Assembly	6	Kawasaki Model FB460V–LS08	20
Transmission and Drive System Assembly	7	Cooling Equipment Assembly	
Wheel Drive and Brake System Assembly	8	Kawasaki Model FB460V–LS08	21
Upper Handles Assembly	9	Electric Equipment Assembly	
Control Panel Assembly	10	Kawasaki Model FB460V–LS08	22
Deck Assembly	11	Control Equipment Assembly	
Spindles, Pulleys and Belts Assembly	12	Kawasaki Model FB460V–LS08	23
Spindle Housing Assembly No. 104–6319	13	Carburetor Assembly	
Spindle Housing Assembly No. 104–6317	14	Kawasaki Model FB460V–LS08	24
Carrier Frame Assembly	15	Air Filter Assembly	
Schematic	16	Kawasaki Model FB460V–LS08	25
Crankcase Assembly – Kawasaki Model		Starter Assembly	
FB460V–LS08	17	Kawasaki Model FB460V–LS08	26
Piston and Crankshaft Assembly		Muffler Assembly	
Kawasaki Model FB460V–LS08	18	Kawasaki Model FB460V–LS08	27


Accessories

Description	Model / Part No.	Description	Model / Part No.
Bagging Unit	Model No. 30125		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

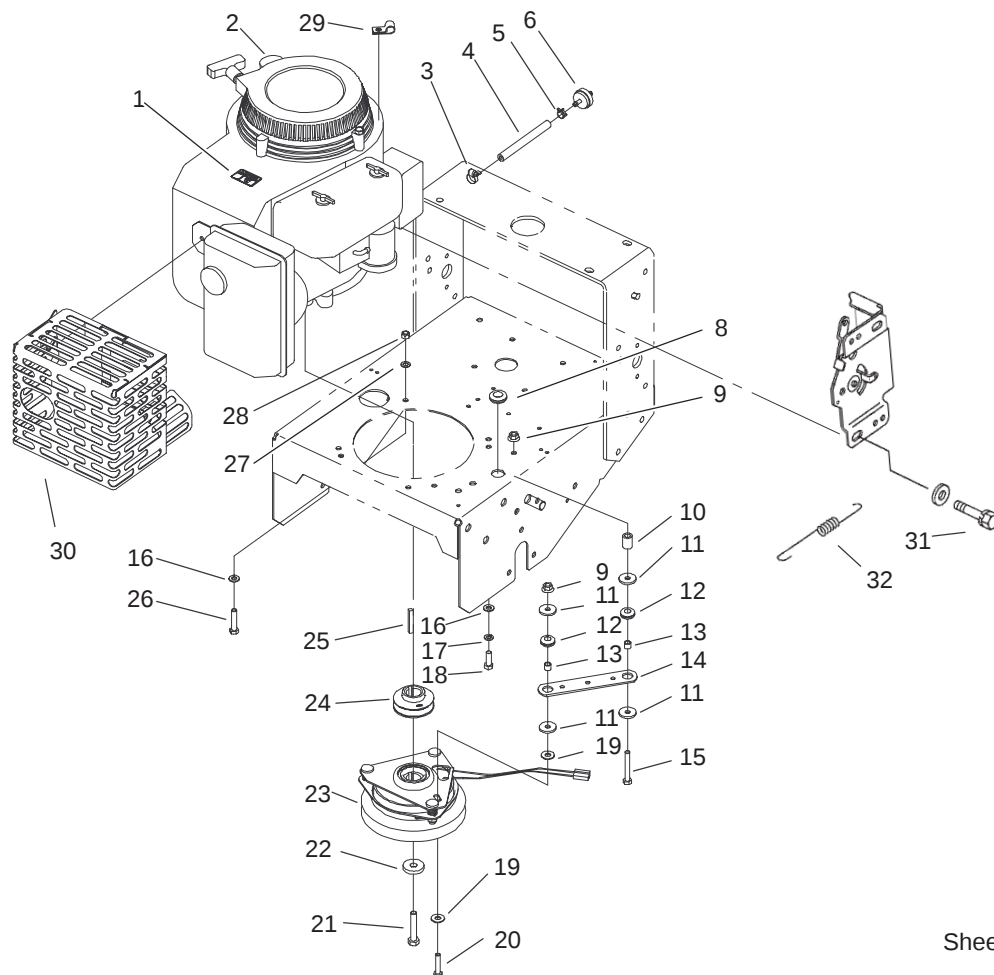


Sheet No.:2

Engine, Clutch Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-8069	1	Decal-Hot Surface	27	3255-8	1	Washer-Lock/Ext
2	100-6466	1	Engine-12.5 Kawasaki	28	33024-00	1	Nut-Lock
3	2412-108	1	Clamp-Worm	29	2412-87	1	Clamp-Cable
4	47-2966	1	Hose-Gas	30	105-0857-03	1	Muffler Guard ASM
5	2412-98	1	Clamp	31	105-2681	2	Screw-Governor Plate
6	56-6360	1	Filter-Fuel	32	105-2679	1	Spring-Governor
*7	104-8135	1	Wire Harness				
8	237-124	1	Grommet				
9	32128-20	2	Nut-HF				
10	104-6373	1	Tube - Retainer				
11	1-613235	4	Washer				
12	1-633630	2	Grommet-Brake				
13	1-633545	2	Spacer-Grommet				
14	1-633543	1	Strap-Clutch/Brake				
15	322-11	1	Screw-HH				
16	3256-23	4	Washer-Flat				
17	3253-4	3	Washer-Lock				
18	33114-025	3	Screw-HH				
19	3256-3	2	Washer-Flat				
20	322-7	1	Screw-HH				
21	57-6360	1	Screw-Clutch				
22	112843	1	Washer				
23	54-3200	1	Clutch/Brake				
24	105-0827	1	Pulley-Drive				
25	92-5436	1	Key				
26	57-6370	1	Screw(Eng Ground)				

* Not illustrated

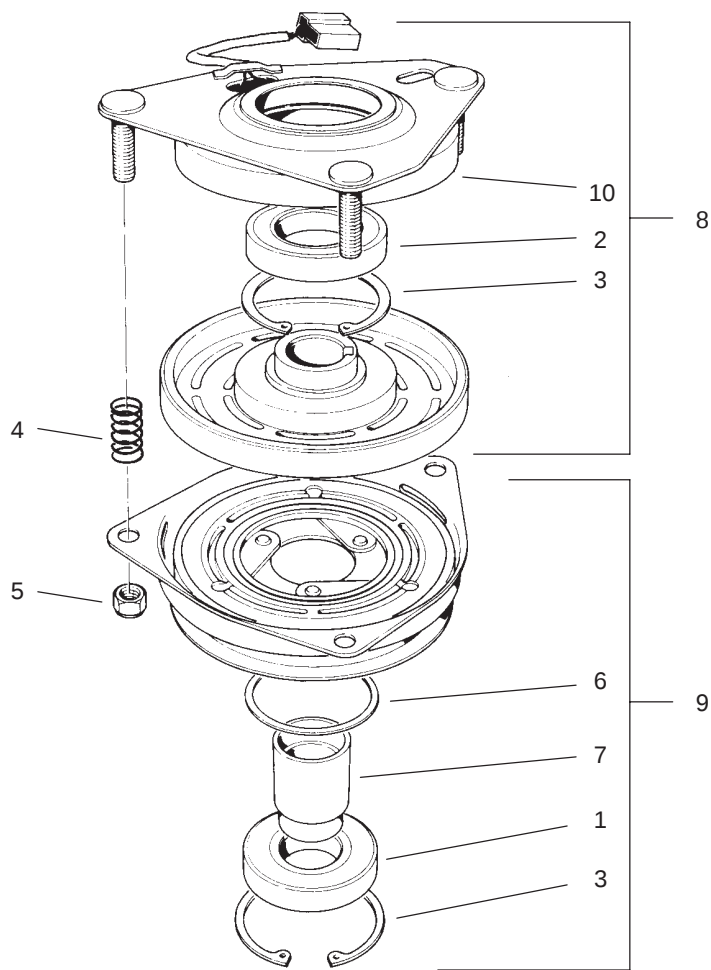


Sheet No.:A1
T-3726

Clutch Assembly No. 54-3200

Ref. No.	Part No.	Qty.	Description
1	251-291	1	Bearing-Pulley
2	251-292	1	Bearing-Field
3	44-8310	2	Ring-Retaining
4	44-8320	3	Spring
5	3296-6	3	Nut-Lock, NI
6	44-8330	1	Spacer-Bearing, Pulley
7	44-8340	1	Collar-Bearing
8	44-8360	1	Field Coil-Rotor / Bearing ASM
9	44-8370	1	Armature / Pulley / Bearing ASM
10	54-0230	1	Field Bearing ASM


Ref. No.	Part No.	Qty.	Description

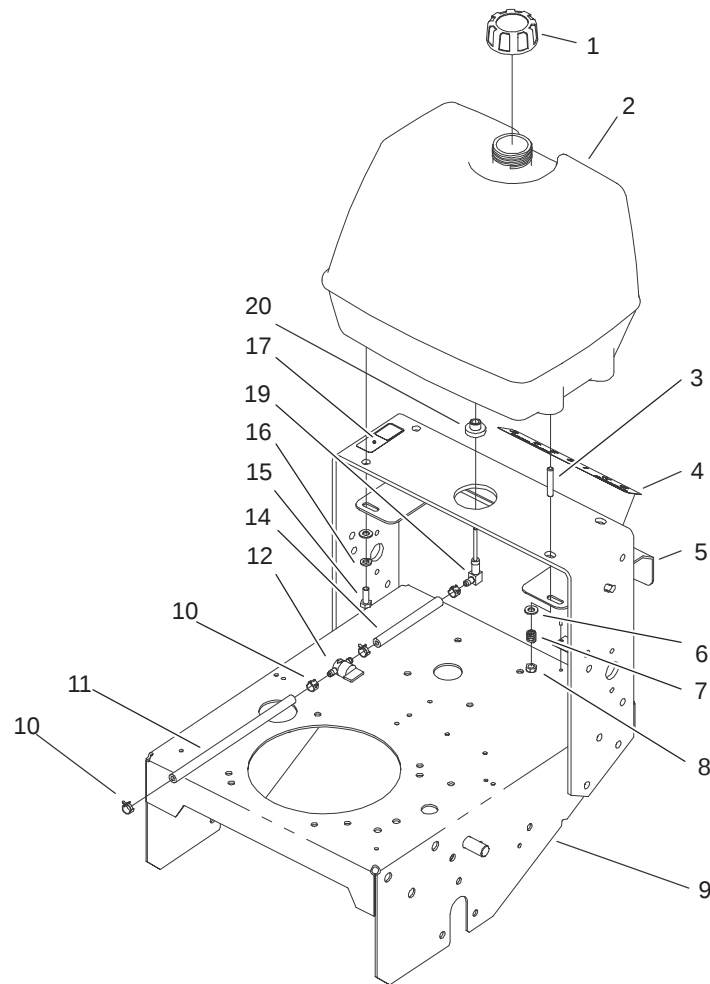

Sheet No.:5

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	55-3570	1	Gas Cap ASM				
2	1-323551	1	Tank-Fuel				
3	104-8121	2	Stud-Threaded				
4	98-3264	1	Decal-Ground Speed				
5	104-8102-01	1	Plate-Shift Gate				
6	3256-23	4	Washer-Flat				
7	1-633349	2	Spring-Tank, Fuel				
8	3296-47	2	Nut-Lock, NI				
9	104-8100-01	1	Traction Frame ASM				
10	2412-98	4	Clamp				
11	47-2982	1	Hose-Gas				
12	1-603770	1	Valve-Fuel				
14	47-2966	1	Hose-Gas				
15	322-4	2	Screw-HH				
16	3253-4	2	Washer-Lock				
17	93-9353	1	Decal - Fuel Shut Off				
19	1-543277	1	Elbow-Tank, Fuel				
20	1-513645	1	Bushing-Valve, Fuel				

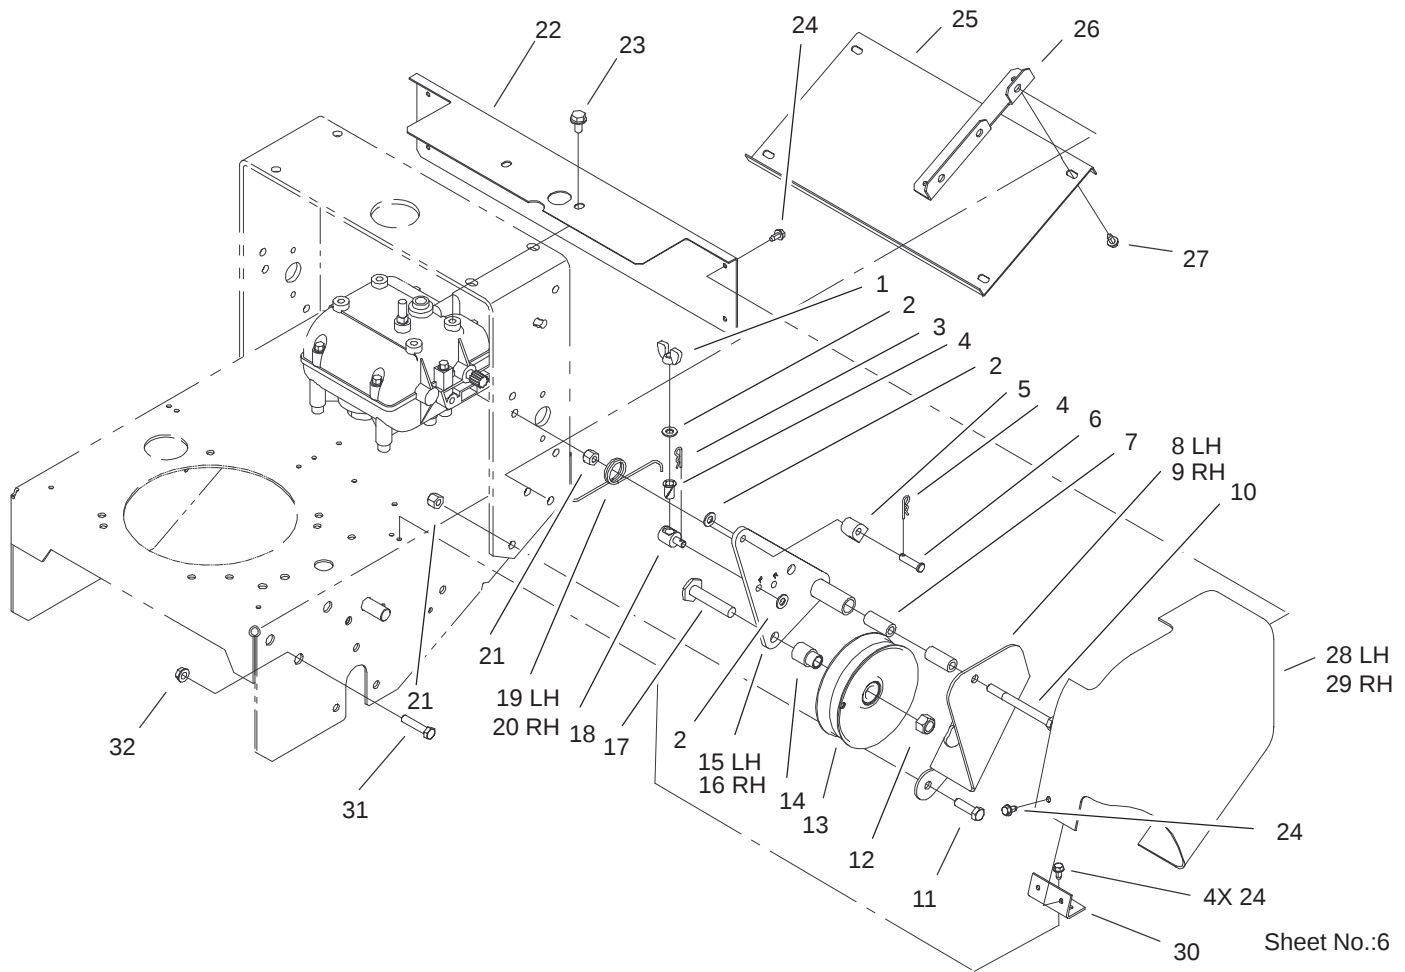


Sheet No.:6

Lower Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	32103-25	2	Nut-Wing
2	3256-23	6	Washer-Flat
3	3290-307	4	Pin-Hair
4	52-2890	2	Bushing-Nylon
5	74-0521	2	Fitting-Rod
6	283-6	2	Pin-Clevis
7	74-0040	4	Spacer-Idler Pivot
8	67-6380-01	1	Bracket-LH Support
9	67-6370-01	1	Bracket-RH Support
10	323-16	2	Screw-HH
11	323-7	4	Screw-HH
12	3296-23	2	Nut-Lock, NI
13	95-2800	2	Pulley-Idler
14	95-2801	2	Spacer-Pulley
15	74-0220-01	1	Bracket-LH Idler
16	74-0230-01	1	Bracket-RH Idler
17	51-4450	2	Screw-Leveler
18	68-9690	2	Fitting-Rod
19	51-4380	1	Spring-LH Torsion
20	51-4370	1	Spring-RH Torsion
21	3296-39	6	Nut-Lock, NI
22	104-8158-03	1	Guard-Shaft, Transmission
23	32144-14	2	Screw-HWH
24	12-3270	10	Screw
25	93-7437-01	1	Panel - Bottom


Ref. No.	Part No.	Qty.	Description
26	93-7436-03	2	Angle - Mounting
27	12-3270	4	Screw
28	104-8159	1	Guard-Belt, LH
29	104-8160	1	Guard-Belt, RH
30	104-6399-01	2	Mount-Belt Guard
31	3234-32	6	Screw-HHF
32	32128-23	6	Nut-HF

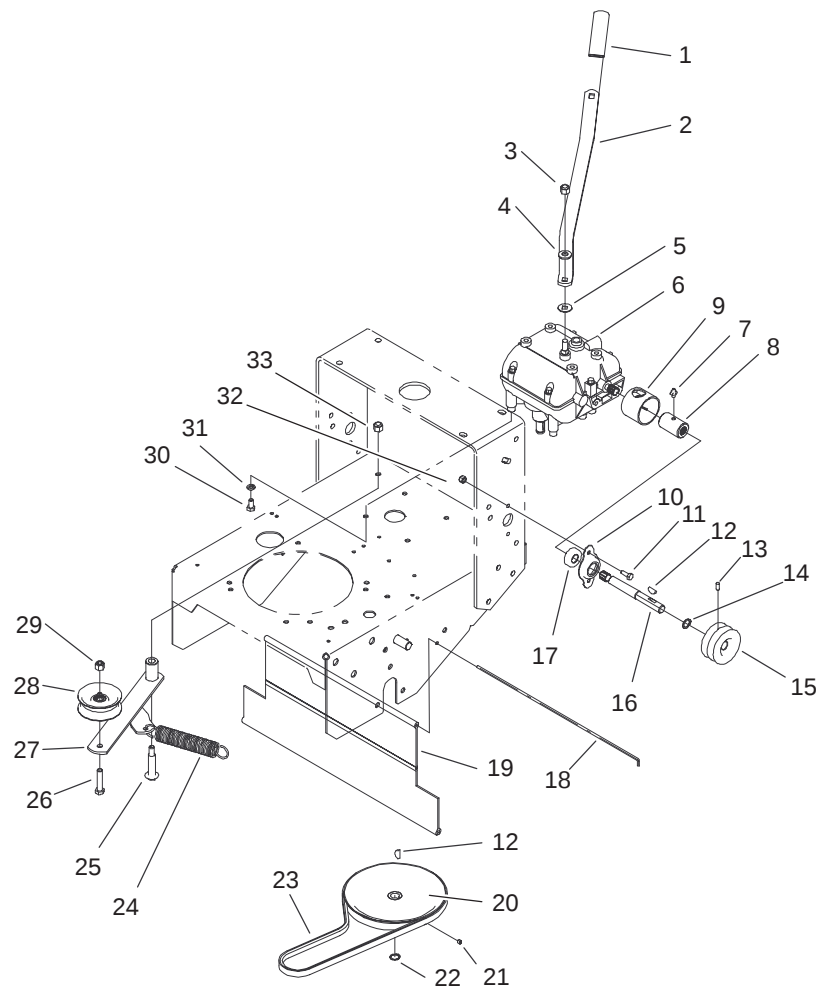

Sheet No.:7

Transmission and Drive System Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	47-1970	1	Grip-Engagement	26	323-9	1	Screw-HH
2	98-3274-03	1	Lever-Shift	27	16-7509	1	Lever-Idler
3	3296-6	1	Nut-Lock, NI	28	62-4540	1	Pulley
4	98-5975	1	Washer-Belleville	29	3296-39	1	Nut-Lock, NI
5	1-323379	1	Washer-Shifter Lever	30	322-2	4	Screw-HH
6	1-323500	1	Transmission, Peerless	31	3253-4	4	Washer-Lock
7	302-5	2	Fitting-Grease	32	3296-42	4	Nut-Lock, NI
8	98-0789	2	Coupler	33	3296-6	1	Nut-Lock, NI
9	51-4220	2	Guard-Coupler				
10	1-323254	2	Flange-Output				
11	321-4	4	Screw-HH				
12	3257-5	3	Key-Woodruff				
13	3245-9	2	Screw-Set				
14	32151-62	2	Ring-Retaining				
15	105-0828	2	Pulley-Transmission				
16	104-1102	2	Shaft-Output				
17	1-323252	2	Bearing-Shaft, Transmission				
18	95-1529	1	Rod-Shield				
19	95-1526	1	Shield-Trailing				
20	51-4190	1	Pulley-Driven				
21	3245-1	1	Screw-Set, HSH				
22	32120-64	1	Ring-Snap, External				
23	26-9671	1	V-Belt				
24	68-2190	1	Spring-Extension				
25	27-6230	1	Bolt-Wheel				

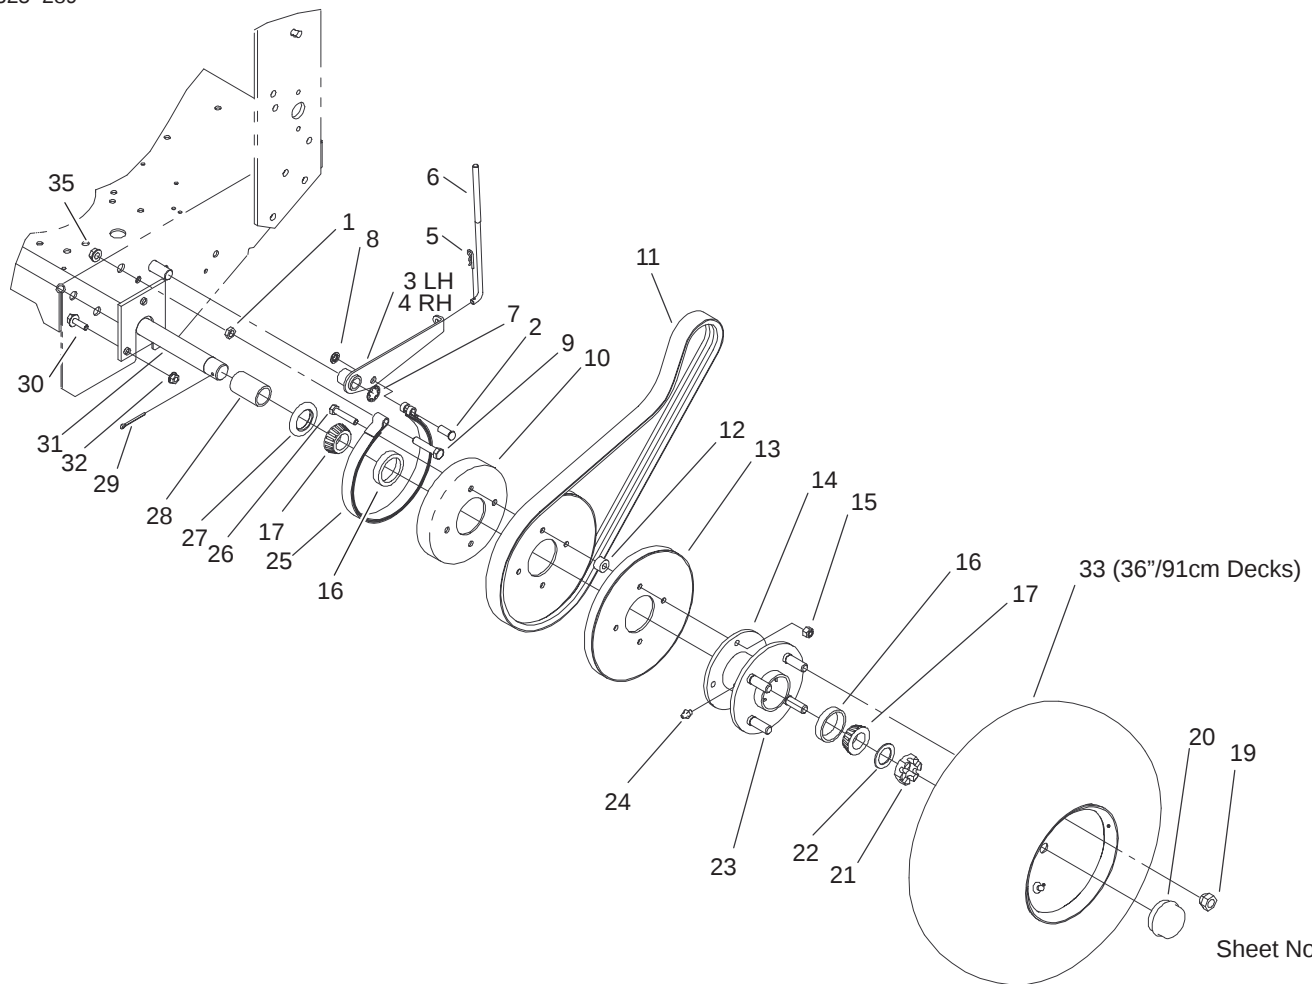


Sheet No.:8

Wheel Drive and Brake System Assembly

Ref. No.	Part No.	Qty.	Description
1	3218-3	2	Nut-Jam
2	1-323307	2	Pin - Clevis
3	51-4610-01	1	Arm-LH Brake
4	51-4600-01	1	Arm-RH Brake
5	3290-307	2	Pin-Hair
6	51-4580	2	Rod-Brake
7	32151-40	2	Ring-Retaining
8	32151-56	2	Ring-Retaining, External
9	323-10	2	Screw-HH
10	1-323261	2	Drum, Brake
11	104-8152	2	Belt-Traction Drive
12	51-4170	8	Spacer-Pulley
13	51-4160-03	4	Pulley-Wheel
14	1-413333	2	Hub, Wheel W/Cups
15	3296-29	8	Nut-Lock
16	254-72	4	Bearing-Taper, Cup
17	254-94	4	Bearing-Taper, Cone
19	242-50	8	Nut-Lug
20	241-119	2	Cap-Dust
21	1-809082	2	Nut, SHH
22	1-523157	2	Washer-Spacer
23	1-633926	8	Stud-Wheel
24	302-19	2	Fitting-Grease
25	1-323262	2	Band, Brake
26	322-8	8	Screw-HH


Ref. No.	Part No.	Qty.	Description
27	1-543511	2	Seal-Grease
28	104-1197	2	Spacer-Wheel
29	1-806800	2	Pin-Cotter
30	3234-11	6	Screw-HHF
31	104-1196-01	1	Axle ASM
32	32128-21	6	Nut-HF
33	104-6321	2	Wheel And Tire ASM
35	3290-357	2	Nut-Flange, Lock

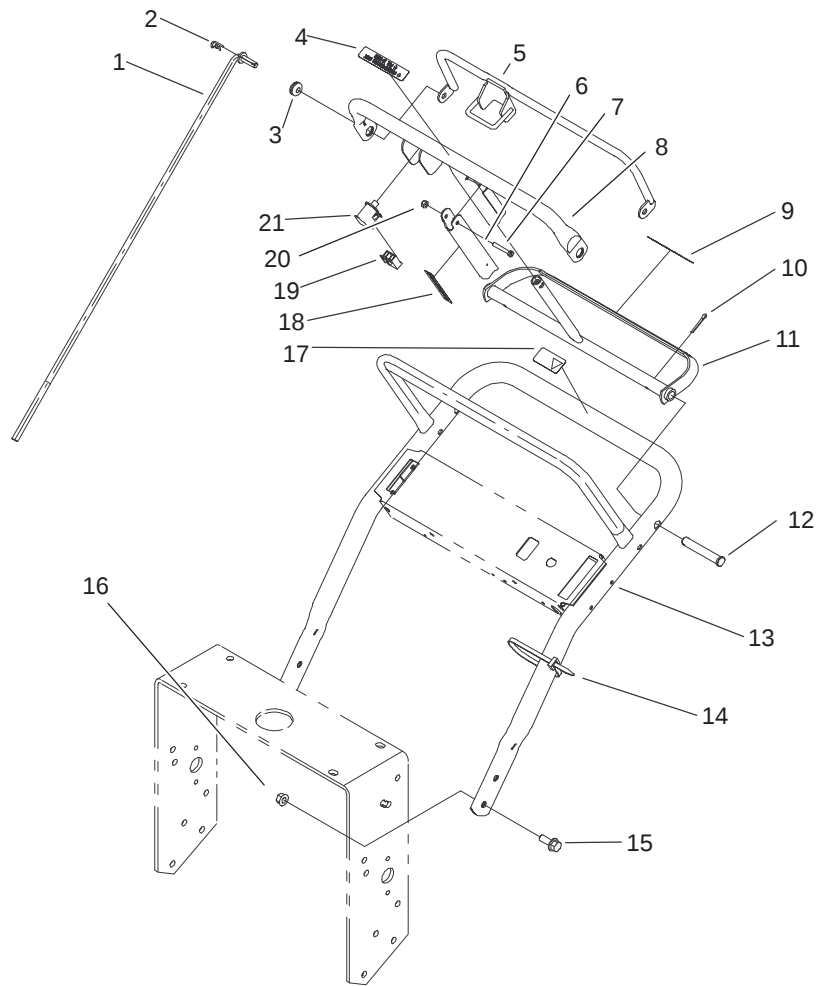

Sheet No.:9

Upper Handles Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	82-7631	2	Rod-Control				
2	3290-307	2	Pin-Hair				
3	237-141	2	Grommet-Rubber				
4	93-7298	1	Decal - Control Bar				
5	82-7680-03	1	Bail				
6	51-4850-03	1	Lever-Parking Brake				
7	32105-1	1	Screw-SHH				
8	82-7690-03	1	Bar-Control				
9	93-7299	1	Decal - Reverse				
10	3272-11	2	Pin-Cotter				
11	99-8501-03	1	Control-Pivot				
12	283-55	2	Pin-Clevis				
13	67-6440-03	1	Handle-Upper				
14	3290-378	1	Tie-Cable				
15	3234-11	4	Screw-HHF				
16	32128-21	4	Nut-HF				
17	98-4387	1	Decal-Protection, Ear				
18	93-7442	1	Decal - Parking Lever				
19	218-595	1	Connector-Body				
20	32153-1	1	Nut-Lock				
21	82-2190	1	Switch-Bail				

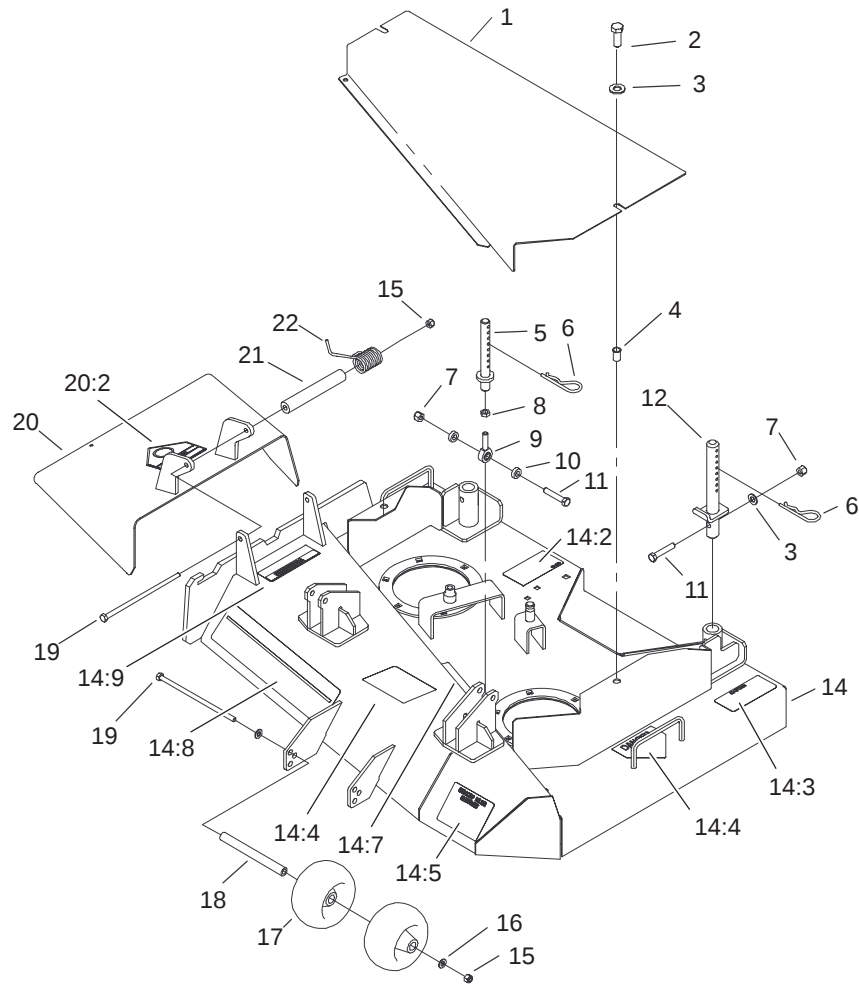

Sheet No.:2

Deck Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	104-8170-01	1	Cover-36	20	105-0825	1	Deflector ASM
2	323-6	2	Screw-HH	20:2	93-7316	1	Decal-Danger, Int'l
3	3256-24	4	Washer-Flat	21	104-8555	1	Spacer-Mounting, Deflector
4	32148-9	2	Nut-Insert	22	104-8554	1	Spring-Torsion
5	105-0832	2	Link-Support				
6	3290-256	6	Pin-Hair				
7	3296-39	4	Nut-Lock, NI				
8	3220-3	2	Nut-Jam				
9	1-613204	2	Balljoint				
10	104-1156	4	Spacer				
11	323-10	4	Screw-HH				
12	105-0831	2	Rod ASM				
14	104-6391	1	Deck ASM				
14:2	104-8185	1	Decal-Belt Routing				
14:3	93-7818	1	Decal-Torque, Blade Bolt				
14:4	93-7010	2	Decal-Danger				
14:5	105-0841	1	Decal-Anti Scalp				
14:7	98-1977	1	Decal-Warning				
14:8	104-8192	1	Decal-Proline 91 Cm				
14:9	93-7828	1	Decal-Danger, Int'l				
15	3296-29	2	Nut-Lock				
16	3256-23	2	Washer-Flat				
17	68-2730	2	Gage-Wheel				
18	98-5967	1	Spacer - Wheel				
19	322-50	2	Screw-Cap				

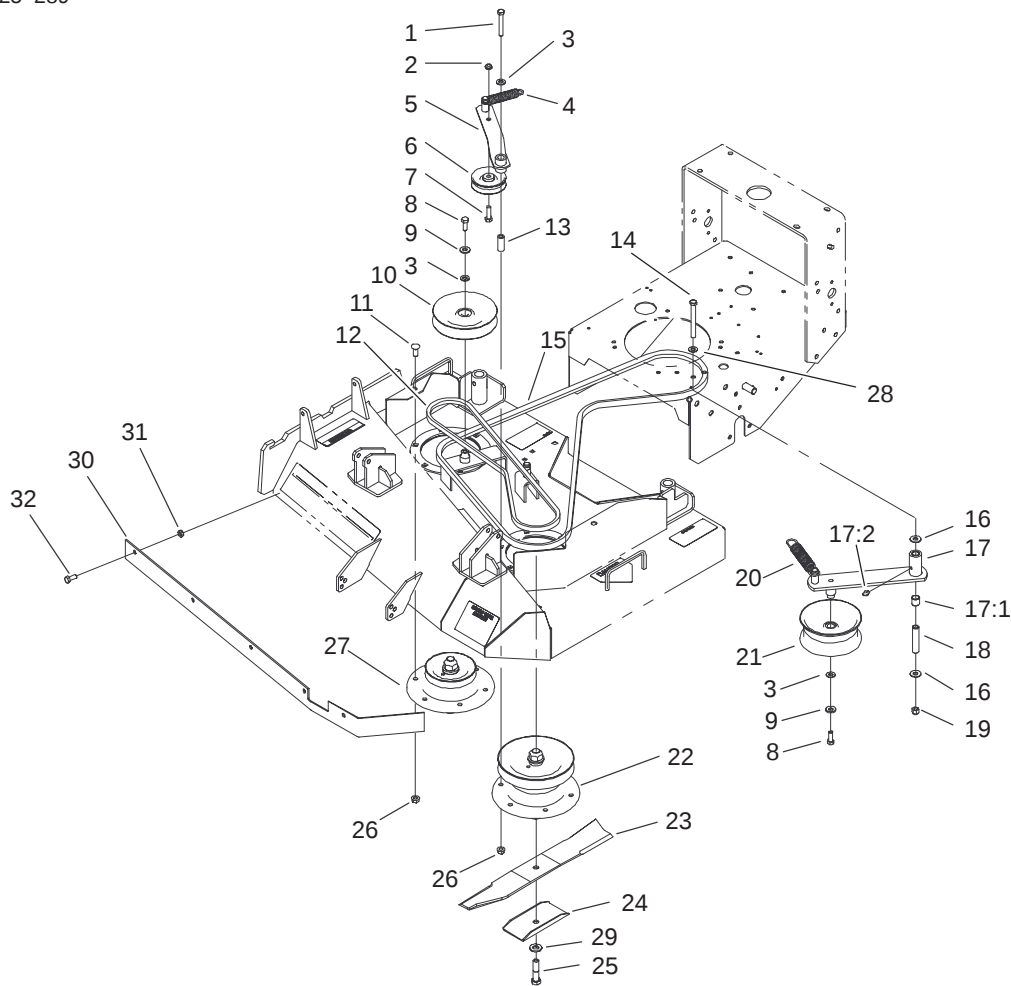


Sheet No.:3

Spindles, Pulleys and Belts Assembly

Ref. No.	Part No.	Qty.	Description
1	323-12	1	Screw-HH
2	3296-5	1	Nut-Lock NI
3	3256-24	3	Washer-Flat
4	105-2673	1	Spring - Extension
5	105-0889	1	Idler Arm ASM
6	51-3660	1	Pulley-Idler
7	3211-5	1	Screw-HH
8	323-6	2	Screw-HH
9	98-5975	2	Washer-Belleville
10	1-633166	1	Idler Pulley
11	3231-22	11	Screw-CARR
12	51-3530	1	V-Belt, Deck Drive
13	51-3641	1	Idler-Pivot Sleeve
14	323-42	1	Screw-HH
15	105-0887	1	Belt-Drive, PTO
16	1-809107	2	Washer-Hardened
17	104-6370	1	Idler Arm ASM
17:1	1-513034	2	Sleeve-Bearing
17:2	302-5	1	Fitting-Grease
18	104-6377	1	Tube - Idler
19	3296-39	1	Nut-Lock, NI
20	104-8161	1	Spring-Extension
21	1-413099	1	Pulley-Idler
22	104-6319	1	Spindle Housing ASM
23	27-0990	2	Blade
24	92-9820	2	Stiffener - Blade


Ref. No.	Part No.	Qty.	Description
25	44-2200	2	Screw - Blade
26	32128-21	12	Nut-HF
27	104-6317	1	Spindle Housing ASM
28	3256-4	1	Washer-Flat
30	93-9479-01	1	Baffle - Front
31	3296-47	6	Nut-Lock, NI
32	322-3	6	Screw-HH

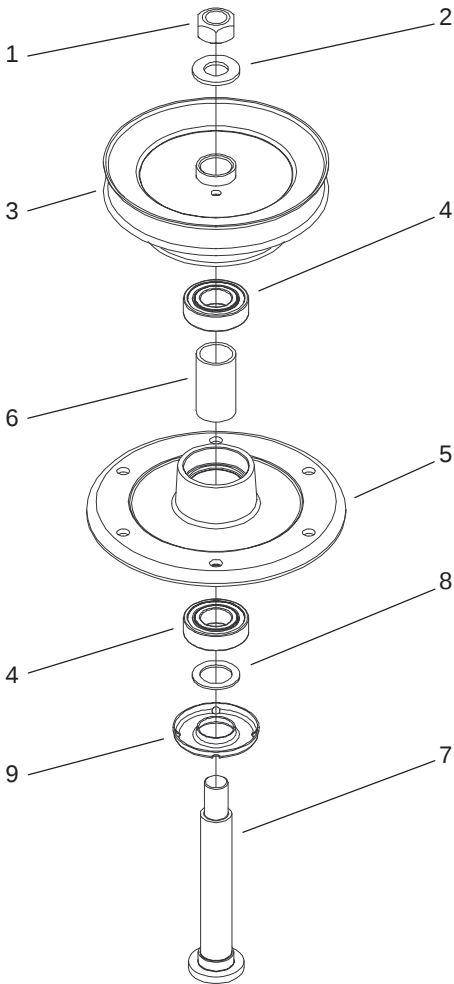

Sheet No.:A1
C-3011

Spindle Housing Assembly No. 104-6319

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer-Pinion				
3	104-1180	1	Pulley And Hub ASM				
4	104-6325	2	Bearing				
5	104-6307	1	Spindle Housing				
6	104-6313	1	Spacer-Bearing				
7	104-6311	1	Shaft-Spindle				
8	88-7540	1	Washer - Backup				
9	79-1920	1	Shield-Bearing				

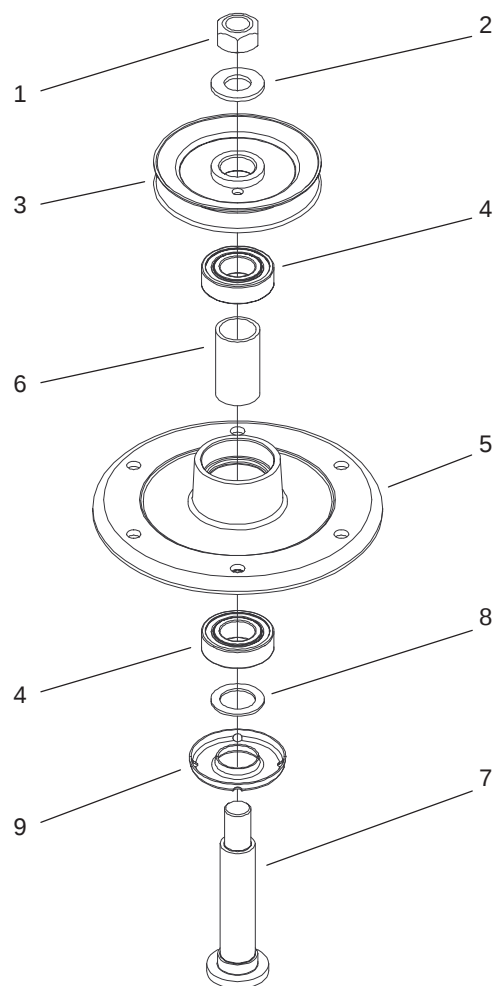


Sheet No.:A2
C-3012

Spindle Housing Assembly No. 104-6317

Ref. No.	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer-Pinion
3	104-1118	1	Pulley And Hub ASM
4	104-6325	2	Bearing
5	104-6307	1	Spindle Housing
6	104-6313	1	Spacer-Bearing
7	104-6310	1	Shaft-Spindle
8	88-7540	1	Washer - Backup
9	79-1920	1	Shield-Bearing

Ref. No.	Part No.	Qty.	Description

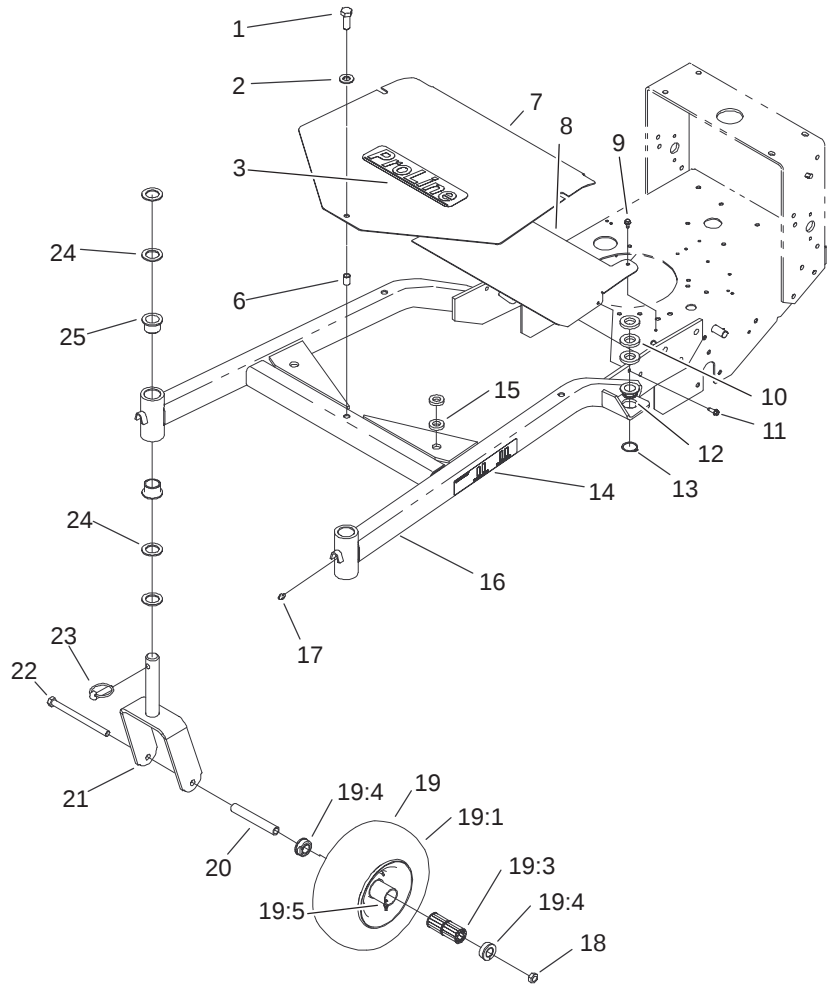


Sheet No.:4


Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	323-6	3	Screw-HH	24	3-6781	8	Washer-Thrust
2	3256-24	3	Washer-Flat	25	94-1291	4	Bushing-Special
3	74-2080	1	Decal-Proline				
6	32148-9	3	Nut-Insert				
7	104-8167-01	1	Cover-Carrier Frame				
8	105-0846-01	1	Shield-Heat				
9	12-3270	2	Screw				
10	104-1105	6	Spacer-Deck Support				
11	49-2040	2	Screw-Tapping				
12	1-513336	2	Bushing - Deck				
13	32120-33	2	Ring-Retaining				
14	104-8184	2	Decal-HOC				
15	105-0842	4	Spacer				
16	104-1108-01	1	Carrier Frame ASM				
17	302-5	2	Fitting-Grease				
18	32153-5	2	Nut-Lock				
19	104-1170	2	Castor Wheel ASM				
19:1	104-1169	1	Tire And Tube ASM				
19:3	62-5570	2	Bearing-Roller				
19:4	62-5580	2	Bearing-Outside				
19:5	302-11	1	Fitting-Lube, 45°				
20	104-1189	2	Bushing-Spanner				
21	104-1183-01	2	Castor Fork ASM				
22	325-33	2	Screw-HH				
23	283-71	2	Pin-Lynch				

Schematic

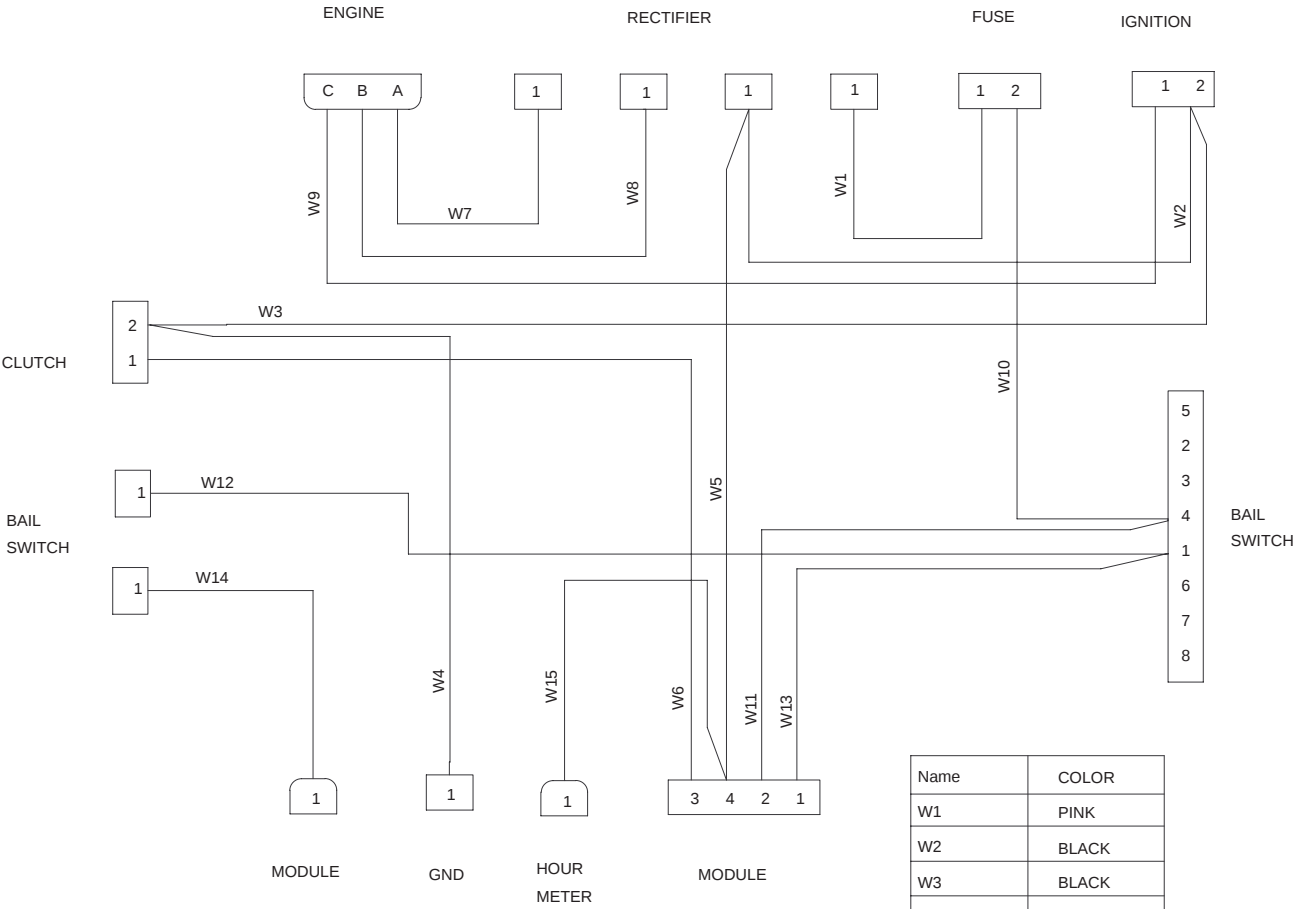

Name	COLOR
W1	PINK
W2	BLACK
W3	BLACK
W4	BLACK
W5	BLACK
W6	GREEN
W7	BLUE
W8	BLUE
W9	WHITE
W10	PINK
W11	PINK
W12	ORANGE
W13	ORANGE
W14	BROWN
W15	BLACK

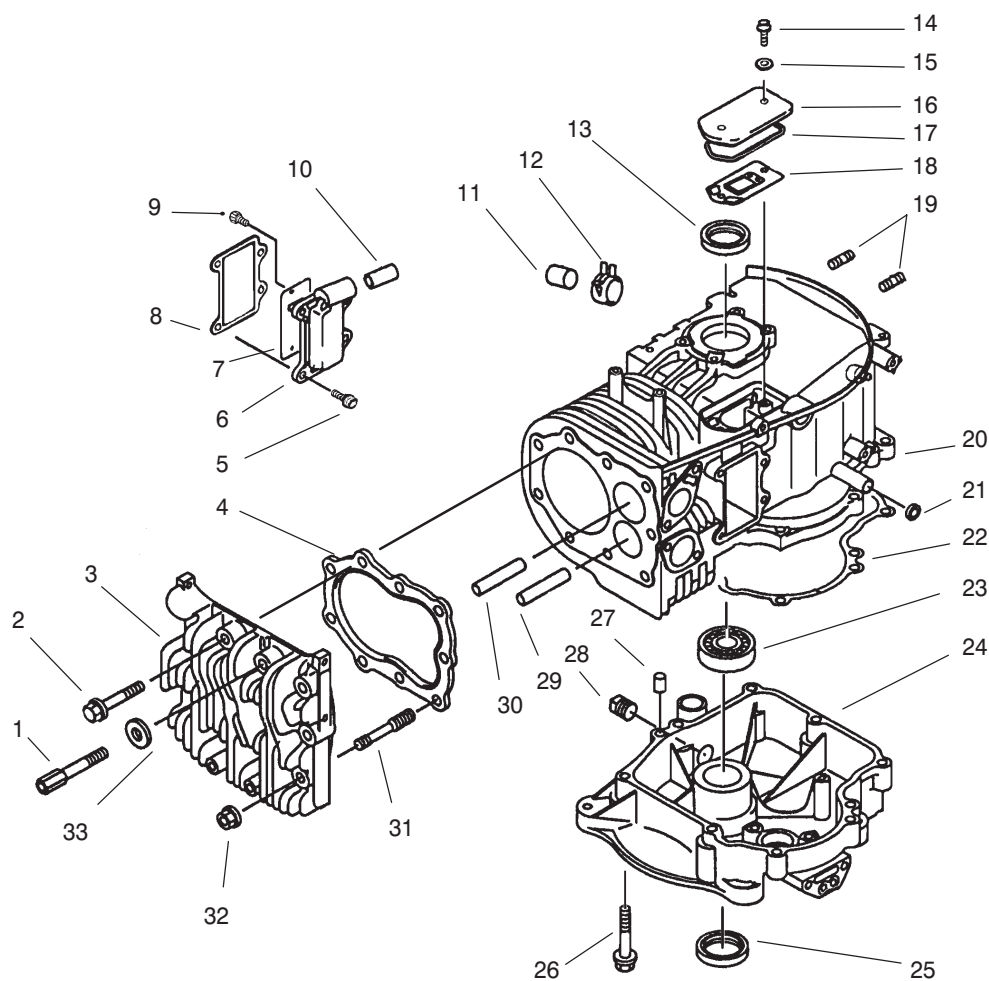


Crankcase Assembly – Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
1	92002-2258	2	Bolt
2	130g1055	4	Bolt-Flange
3	11001-2151	1	Head-Cylinder
4	11004-2091	1	Gasket-Head
5	130g0616	4	Bolt-Flange
6	49108-2011	1	Cover-Valve Chamber
7	14025-2143	1	Cover
8	11060-2059	1	Gasket
9	92009-2307	2	Screw
10	92059-2142	1	Tube
11	92066-2096	1	Plug
12	92170-2088	1	Clamp
13	92049-2096	1	Seal-Oil
14	92002-2087	2	Bolt
15	11060-2323	2	Gasket
16	14025-2040	1	Cover-Breather
17	11009-2339	1	Gasket-Cover
18	14069-2062	1	Breather
19	92004-2083	4	Stud-6 X 14
20	49120-6108	1	Crankcase-Complete
21	92049-2097	1	Seal-Oil
22	11060-2015	1	Gasket-Crankcase
23	601a6207	1	Bearing-Ball
24	49015-6176	1	Cover-Crankcase
25	92049-2227	1	Seal-Oil
26	130g0845	8	Bolt-Flange

Ref. No.	Part No.	Qty.	Description
27	92043-1263	2	Pin
28	92066-2097	1	Plug
29	49002-2071	1	Guide-Valve Exhaust
30	49002-2070	1	Guide-Valve Intake
31	92004-2082	3	Stud
32	92015-2115	3	Nut
33	410b1000	2	Washer-Plain

*Order Parts from Kawasaki

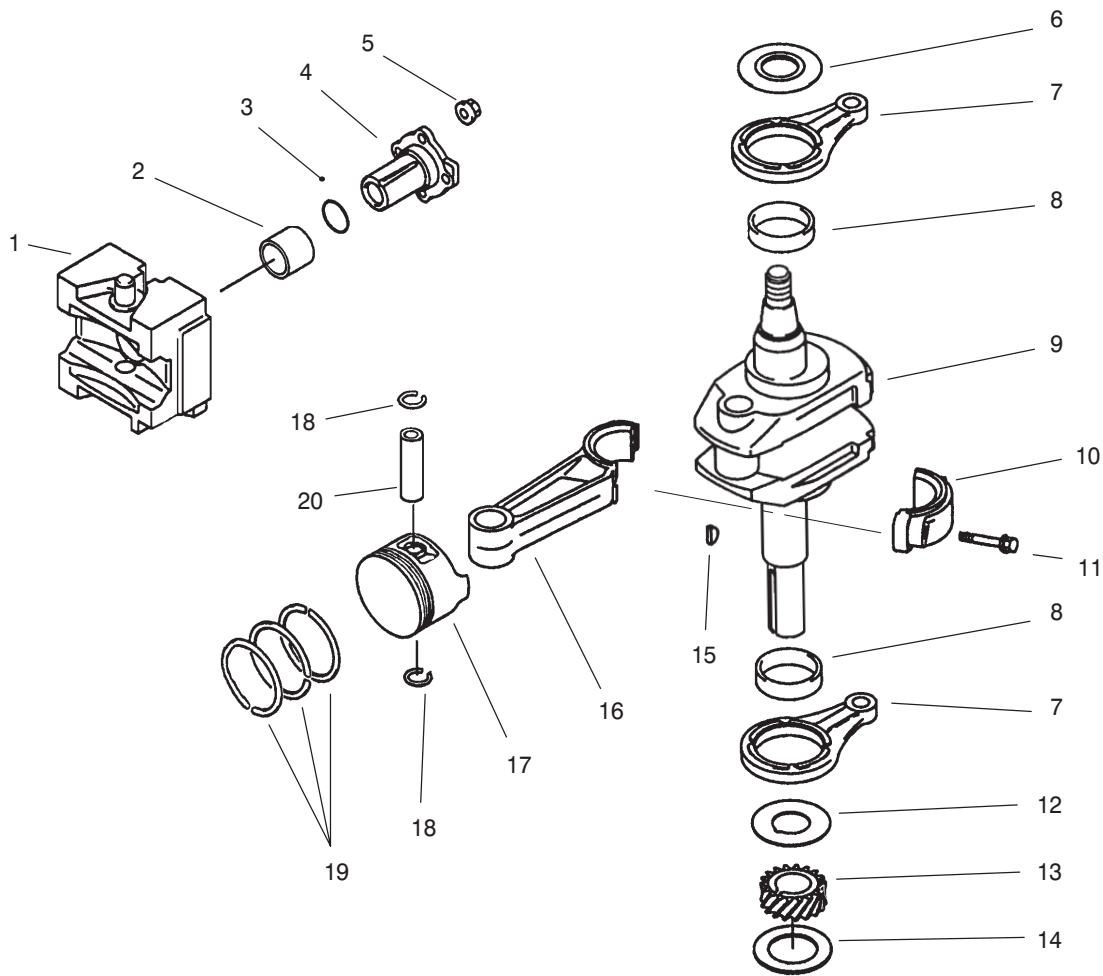


Piston and Crankshaft Assembly Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
1	13042-6006	1	Weight Incl #2
2	92141-2097	1	Bearing-Plane
3	92055-2072	1	O-Ring
4	13107-2253	1	Shaft
5	92015-1193	4	Nut
6	92026-2164	1	Spacer
7	46102-6007	2	Rod Incl #8
8	92141-2108	2	Bearing-Plane
9	49119-2177	1	Crankshaft ASM
11	92050-2193	2	Bolt
12	92026-2156	1	Spacer
13	59056-2105	1	Gear-Helical
14	92025-2145	A/R	Shim T=1.18
14	92025-2146	A/R	Shim T=1.25
14	92025-2147	A/R	Shim T=1.32
14	92025-2148	A/R	Shim T=1.39
14	92025-2149	A/R	Shim T=1.46
14	92025-2150	A/R	Shim T=1.53
14	92025-2151	A/R	Shim T=1.60
14	92025-2152	A/R	Shim T=1.67
14	92025-2153	A/R	Shim T=1.74
14	92180-2015	A/R	Shim T=1.11
14	92180-2016	A/R	Shim T=1.81
15	92038-2094	1	Key

Ref. No.	Part No.	Qty.	Description
16	13251-6005	1	Rod ASM Incl #10 11
16	13251-6007	A/R	Rod ASM Incl #10 11 0.50
17	13001-2084	1	Piston
17	13029-2019	A/R	Piston 0.25
17	13029-2020	A/R	Piston 0.50
18	92033-2066	2	Ring-Snap
19	13008-6001	1	Set-Ring Piston
19	13008-6002	A/R	Set-Ring Piston 0.25
19	13008-6003	A/R	Set-Ring Piston 0.50
20	13002-2066	1	Pin-Piston

*Order Parts from Kawasaki

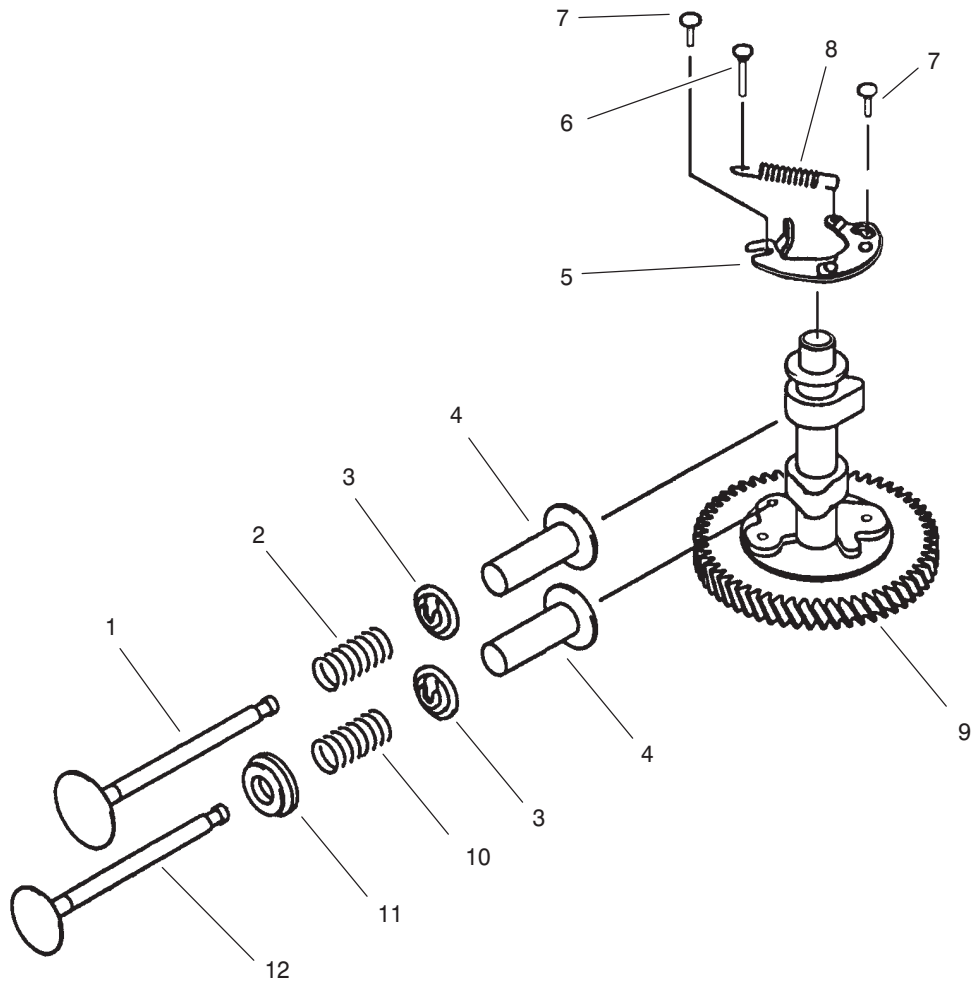


Valves and Camshaft Assembly Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
1	12004-2076	1	Valve-Intake
2	49078-2059	1	Spring-Valve
3	39108-2054	2	Retainer-Spring
4	12032-2058	2	Tappet
5	21118-2068	1	Decompressor
6	92043-2167	1	Pin
7	92043-2113	2	Pin
8	92144-2171	1	Spring
9	49118-2134	1	Camshaft Incl # 5-8
10	49078-2058	1	Spring-Valve
11	12039-2052	1	Rotator
12	12005-2066	1	Valve-Exhaust

Ref. No.	Part No.	Qty.	Description


*Order Parts from Kawasaki

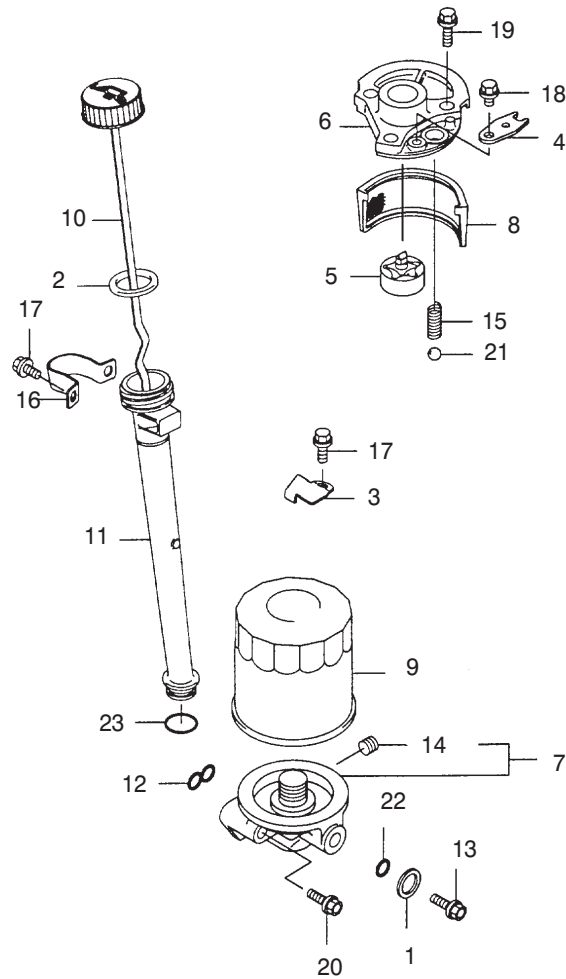

Lubrication Equipment Assembly
Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	11009-2175	1	Gasket				
2	11009-2346	1	Gasket-Oil Gauge				
3	13169-2359	1	Plate				
4	13270-2054	1	Plate				
5	16082-2057	1	Pump Assy-Oil				
6	16142-6001	1	Cover-Pump				
7	23062-6001	1	Bracket-Comp				
8	49065-2056	1	Filter-Oil				
9	49065-2071	1	Filter-Oil				
10	52005-2058	1	Gauge-Oil				
11	59231-2059	1	Filler				
12	92055-2063	1	Ring-O				
13	92066-2093	1	Plug				
14	92066-2211	1	Plug				
15	92081-2216	1	Spring				
16	92170-2014-9H	1	Clamp				
17	130B0508	3	Bolt-Flanged				
18	130B610	1	Bolt-Flanged				
19	130G0825	3	Bolt-Flanged				
20	130G0845	2	Bolt-Flanged				
21	600A1000	1	Ball-Steel				
22	670D1507	1	O Ring				
23	670D2016	1	O Ring				

*Order Parts from Kawasaki

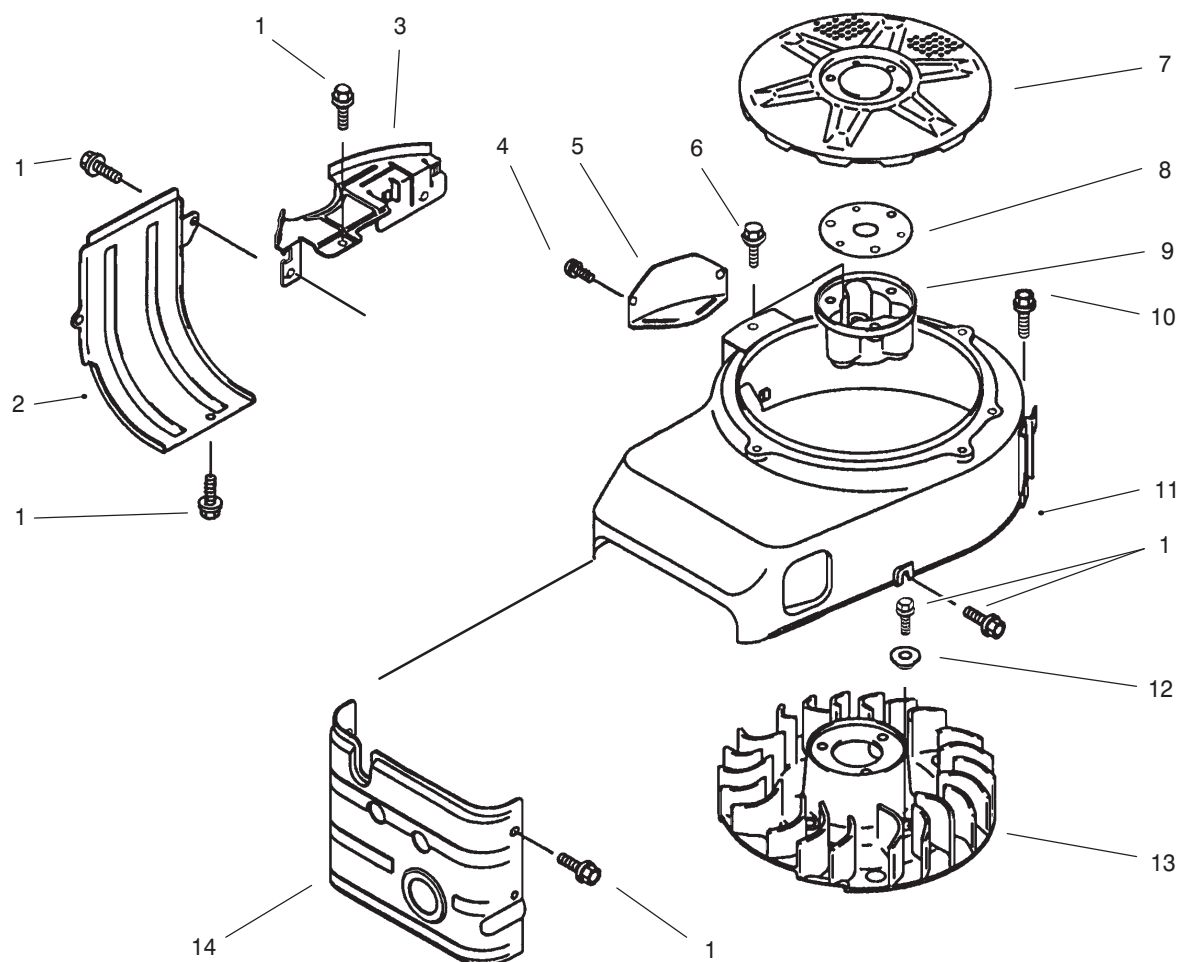


Cooling Equipment Assembly Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
1	130g0610	9	Bolt-Flange
2	49089-2199-9H	1	Shroud-Engine
3	59066-2295-9H	1	Housing-Fan
4	234b0408	2	Screw
5	14024-2038-9H	1	Cover
6	130b0820	3	Bolt-Flange
7	14037-2104-9H	1	Screen
8	92025-2003	1	Shim T-1.20
9	11044-2084	1	Bracket
10	130g0614	6	Bolt-Flange
11	59066-2677-9H	1	Housing-Fan
12	92143-2179	4	Collar
13	59041-2081	1	Fan
14	49089-2181-9H	1	Shroud-Engine

Ref. No.	Part No.	Qty.	Description

*Order Parts from Kawasaki

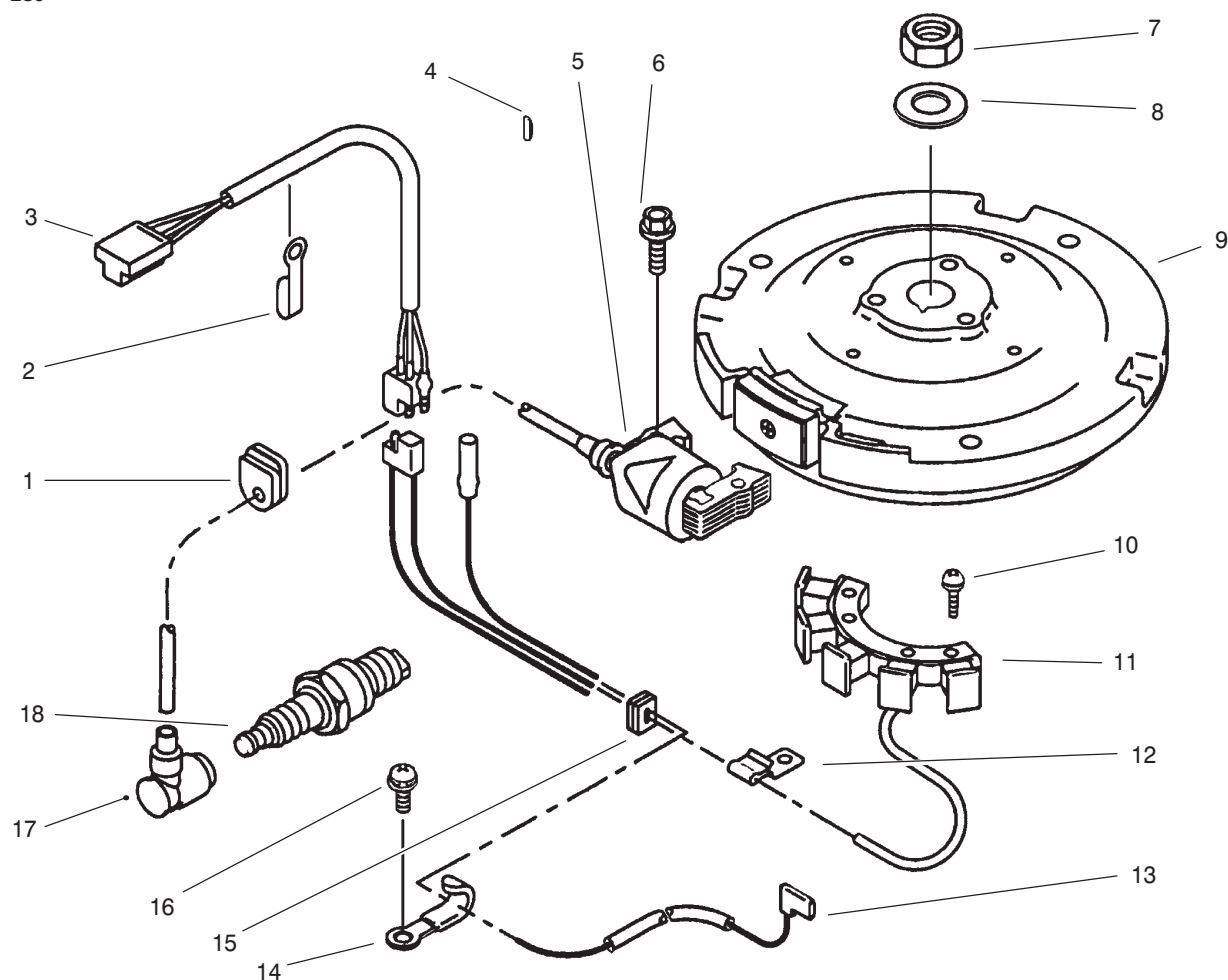


Electric Equipment Assembly Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
192071	2100	1	Grommet
2	92037-2063	1	Clamp
3	26001-2113	1	Harness-Wire
4	92038-2094	1	Key
5	21121-2086	1	Coil-Ignition
6	130b0520	2	Bolt-Flange
7	314g1800	1	Nut-Hex
8	92022-2178	1	Washer
9	21194-2323	1	Flywheel
10	224b0620	2	Screw
11	59031-2106	1	Coil-Charging
12	92037-2158	1	Clamp
13	26011-2329	1	Wire-Lead
14	92170-2029	1	Clamp
15	92071-2099	1	Grommet
16	234b0408	1	Screw
17	21130-2060	1	Cap-Spark Plug
18	92070-2101	1	Spark Plug-Rcj8

Ref. No.	Part No.	Qty.	Description


*Order Parts from Kawasaki

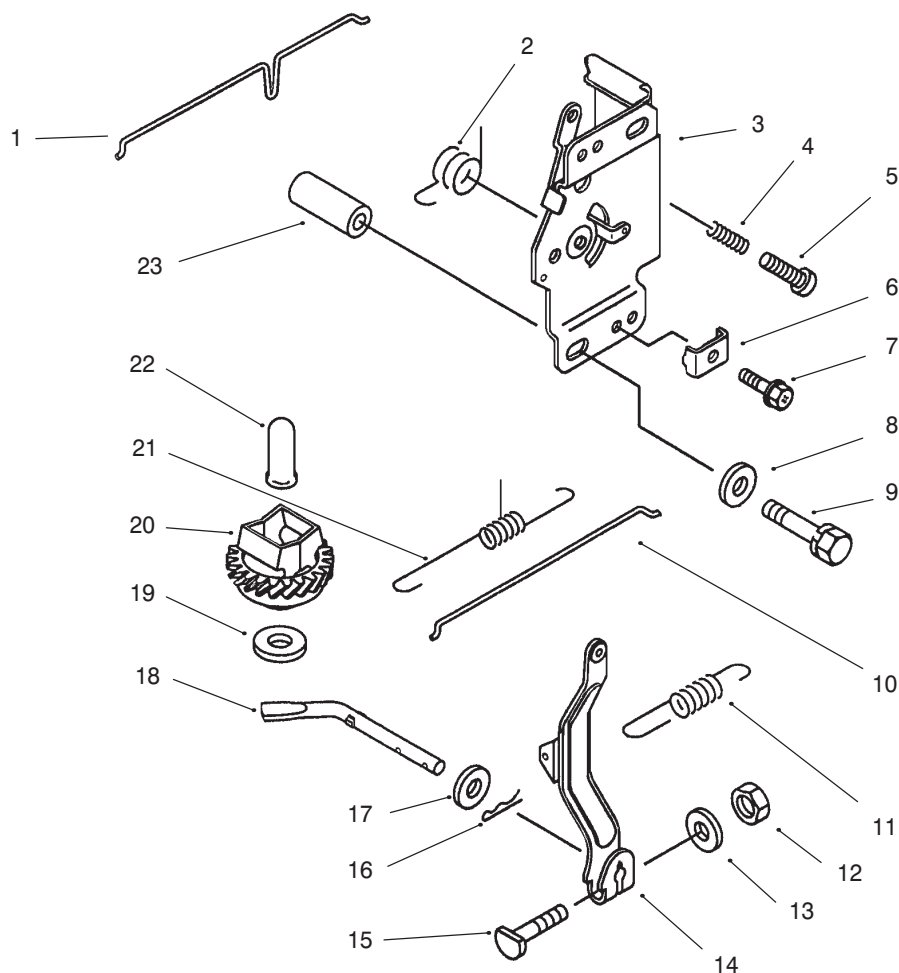

Control Equipment Assembly Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	16169-2126	1	Link-Choke				
2	92081-2316	1	Spring				
3	49113-2067	1	Panel Incl #2 4-7				
4	92144-2266	1	Spring				
5	214b0425	1	Screw				
6	92037-2020	1	Clamp				
7	92150-2128	1	Bolt				
8	92200-2070	2	Washer				
9		2	Bolt				
10	16171-2083	1	Link				
11	39129-2019	1	Spring-Governor				
12	311b0600	1	Nut-HH				
13	411b0600	1	Washer				
14	21187-2052	1	Arm ASM				
15	92002-2269	1	Bolt				
16	554a0600	1	Pin-Snap				
17	92200-2029	1	Washer				
18	39003-2072	1	Arm-Pivot				
19	92200-2036	1	Washer				
20	49110-2067	1	Governor ASM				
21	92081-2213	1	Spring				
22	42036-2060	1	Sleeve				
23	92027-2071	2	Collar				

*Order Parts from Kawasaki

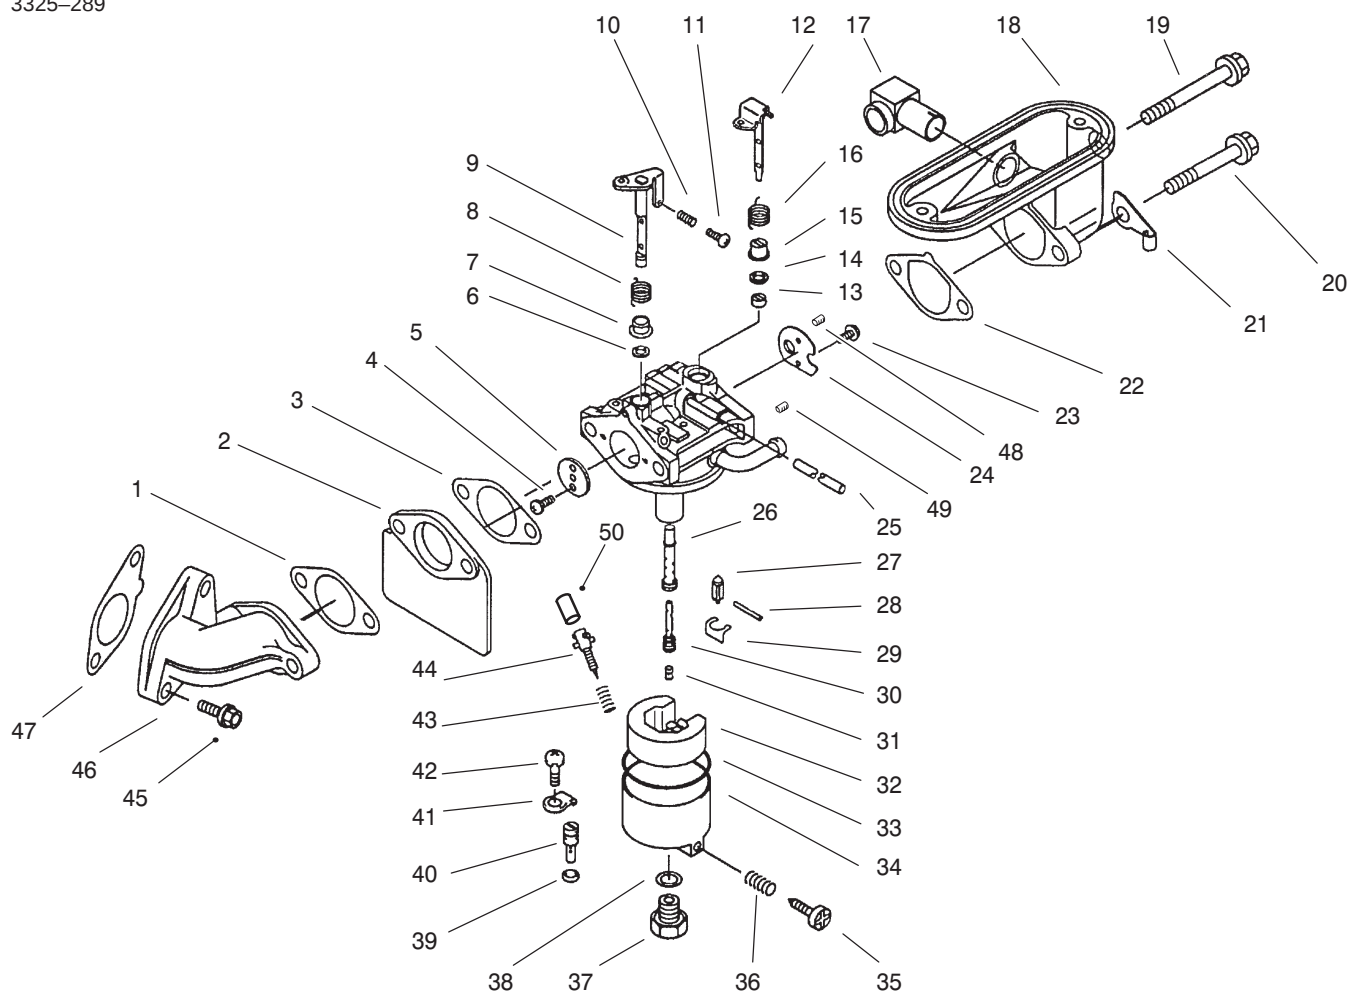


Carburetor Assembly – Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
0	15003-2467	1	Carburetor ASM
1	11060-2338	1	Gasket-Intake Pipe
2	16073-2091	1	Insulator
3	11060-2339	2	Gasket-Carburetor
4	92009-2080	2	Screw
5	16025-2141	1	Valve-Throttle #110
6	92093-2082	1	Seal
7	92027-2025	1	Collar
8	92081-2077	1	Spring
9	16041-2009	1	Shaft-Throttle
10	92081-2046	1	Spring
11	92009-2079	1	Screw
12	16041-2010	1	Shaft-Choke
13	92027-2003	1	Collar
14	92093-2069	1	Seal
15	92143-2142	1	Collar
16	92144-2160	1	Spring
17	59071-2062	1	Joint
18	16060-2108	1	Pipe-Intake
19	92002-2254	1	Bolt
20	92002-2253	1	Bolt
21	92170-2019	1	Clamp
22	11009-2025	1	Gasket
23	92009-2081	2	Screw
24	16126-2206	1	Valve-Choke
25	92059-2266	1	Tube

Ref. No.	Part No.	Qty.	Description
26	49121-2207	1	Nozzle-Main
27	16030-2073	1	Valve-Float
28	92043-2006	1	Pin
29	92033-2067	1	Ring-Snap
30	49123-2078	1	Holder-Main Jet
31	92063-2294	1	Jet-Main
32	16031-2066	1	Float
33	11009-2024	1	Gasket
34	16020-2109	1	Chamber-Float Incl 35 36
35	92009-2015	1	Screw
36	92081-2009	1	Spring
37	92150-2146	1	Bolt
38	1100a-2025	1	Gasket
39	16038-024	1	Gasket
40	92064-2108	1	Jet-Pilot
41	13183-2252	1	Plate
42	92009-2244	1	Screw
43	92081-2008	1	Spring
44	16014-2076	1	Screw-Pilot Air
45	130g0825	2	Bolt-Flange
46	16060-2109	1	Pipe-Intake
47	11060-2337	1	Gasket-Intake Pipe
48	16035-2063	1	Jet-Air #0.9
49	16035-2051	1	Jet-Air #1.4
50	39076-2053	1	Limiter


*Order Parts from Kawasaki

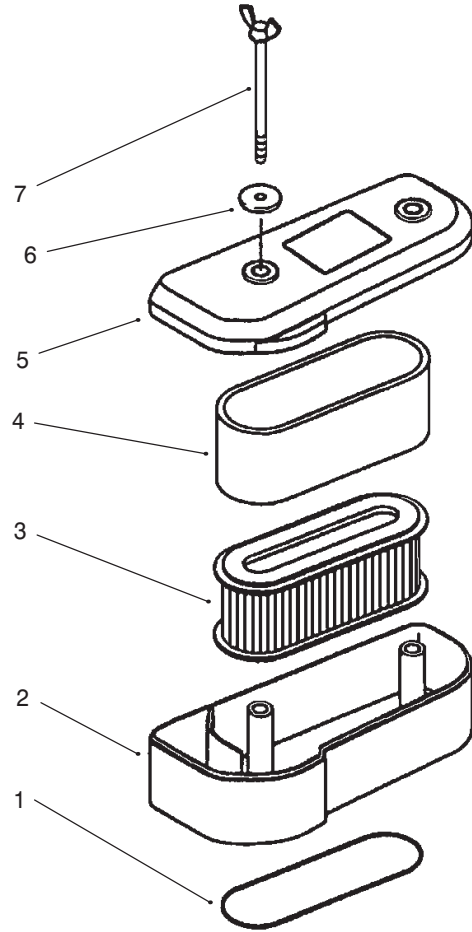

Air Filter Assembly – Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	11009-2443	1	Gasket-Air Filter				
2	11011-2174	1	Case-Air Filter				
3	11013-2021	1	Element-Air Filter				
4	11013-2020	1	Element-Air Filter				
5	11012-2192	1	Cap-Air Filter				
6	92022-2220	2	Washer				
7	92002-2230	2	Bolt				
	11010-2291	1	Filter ASM				

*Order Parts from Kawasaki

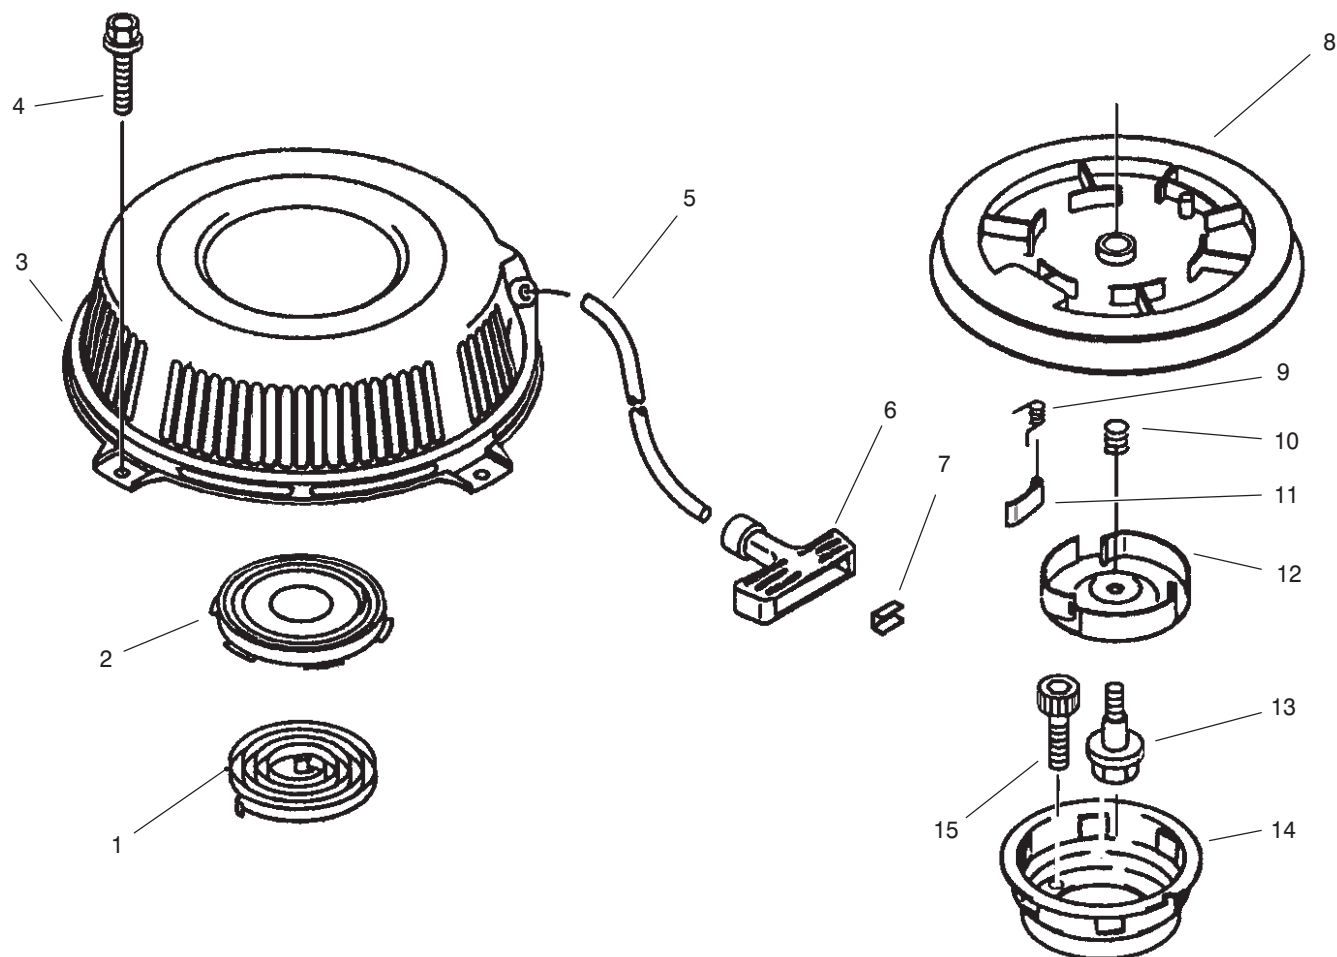


Starter Assembly – Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
1	90281-2267	1	Spring-Recoil
2	32099-2060	1	Case-Spring
3	32099-2239-yk	1	Case-Recoil Starter
4	130b0610	4	Bolt-Flange
5	59106-2060	1	Rope-Starter
6	46075-2059	1	Grip-Starter Rope
7	92022-2248	1	Washer
8	59101-2054	1	Reel-Recoil Starter
9	92081-2021	3	Spring
10	92081-2268	1	Spring-Return
11	13165-2073	3	Pawl-Recoil Starter
12	14020-2054	1	Retainer-Recoil
13	92001-2027	1	Bolt
14	49080-2144	1	Pulley-Starting
15	120p0620	3	Bolt-Socket
	49088-2412-yk	1	Starter Incl #1-5 8-14

Ref. No.	Part No.	Qty.	Description

*Order Parts from Kawasaki

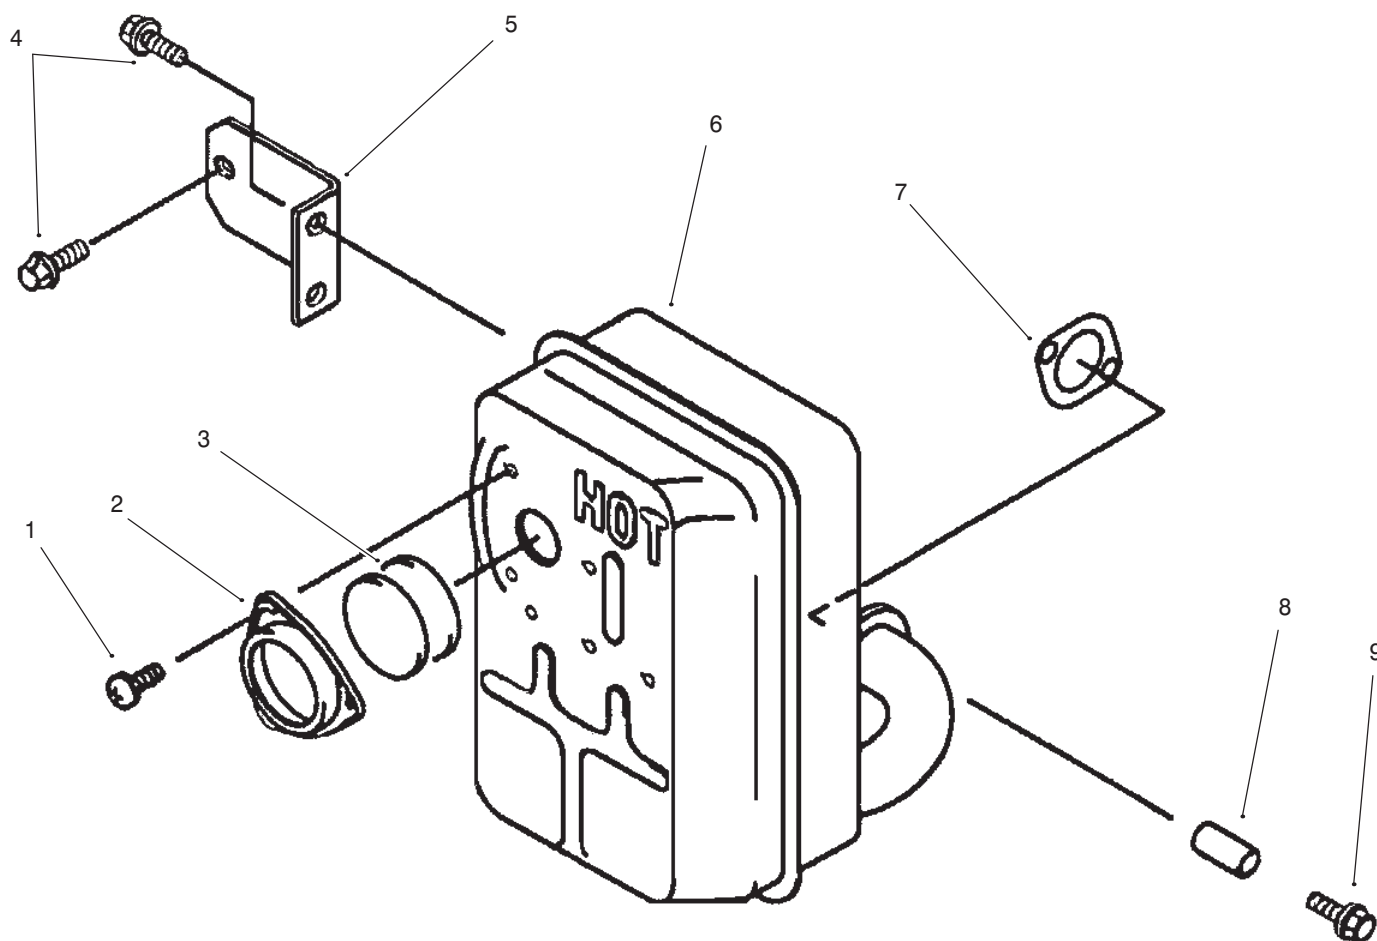

Muffler Assembly – Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
1	92009-2166	2	Screw
2	11012-2165-9Y	1	Cap-Spark Arrestor
3	18077-2054	2	Arrestor-Spark
4	130b0812	4	Bolt-Flange
5	11044-2069-9Y	1	Bracket
6	49069-2190-9Y	1	Muffler ASM
7	11009-2527	1	Gasket-Muffler
8	92027-2081	1	Collar
9	130g0845	1	Bolt-Flange

Ref. No.	Part No.	Qty.	Description

*Order Parts from Kawasaki

