

# Rake and Vac Blower/Vacuum

Model No. 51573-210000001 and Up

### **Parts Catalog**

#### **Ordering Replacement Parts**

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

#### **Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

#### **Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

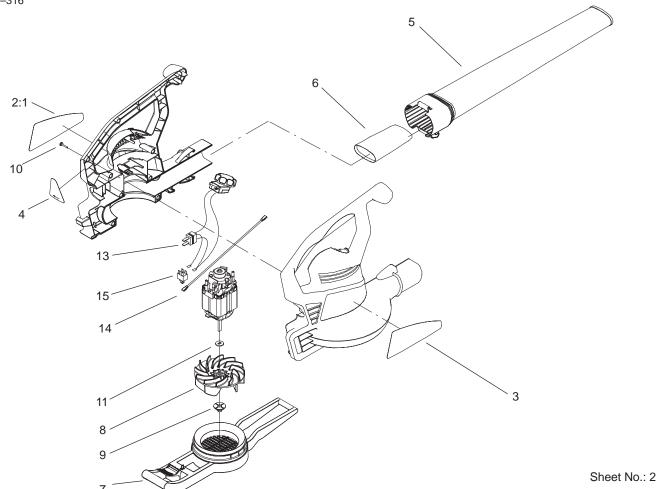


## Blower/Vacuum Assembly Ref. No. Part No.

Ref. No.	Part No.	Qty.	Description
<b>☆2</b>		1	Decal-Serial, Rake & Vac
2:1	100-9087	1	Label Stock-Serial
3	104-3804	1	Decal-Rake & Vac
4	100–9088	1	Decal-Cord Lock
5	100–9072	1	Tube-Blower
6	104–3843	1	Tube-Insert
7	100–9067	1	Cover–Inlet
8	100–9068	1	Impeller-Blower
9	100–9075	1	Nut-Impeller
10		9	
11	93–0585	1	Washer
13	104–3819	ı	Wire Harness ASM, 2 Speed
14	100–9085	2	Wire-Jumper
15	100–9083	1	Switch-Interlock
13	100-3003	'	Switch-interiock

	Ref. No.	Part No.	Qty.	Description
l				

<sup>☆</sup> Not serviced

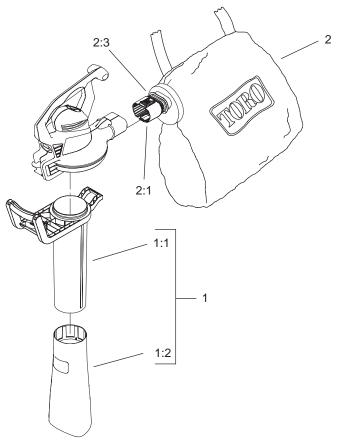

Sheet No.:3

## **Vacuum Tube and Bag Assembly**

				dudiii	1450	a
Re	f. No.	Part No.	Qty.	Desc	cription	
	★1 1:1 1:2 2 2:1 2:3	104–3809	1 1 1 1 1 1 1	Vac Tube A Tube–Vac, Tube–Vac, Bag ASM Collar–Bag Tie–Cable	Upper Lower	

Ref. No.	Part No.	Qty.	Description

