

## Air Cleaner Kit Industrial Workman® Model No. 100-9466

### **Parts Catalog**

#### **Ordering Replacement Parts**

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

#### **Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### **Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

#### **Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form  $\mathbf{nX}$   $\mathbf{y}$ . The  $\mathbf{n}$  represents the quantity of the part, the  $\mathbf{X}$  is the multiplication symbol, and the  $\mathbf{y}$  represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.




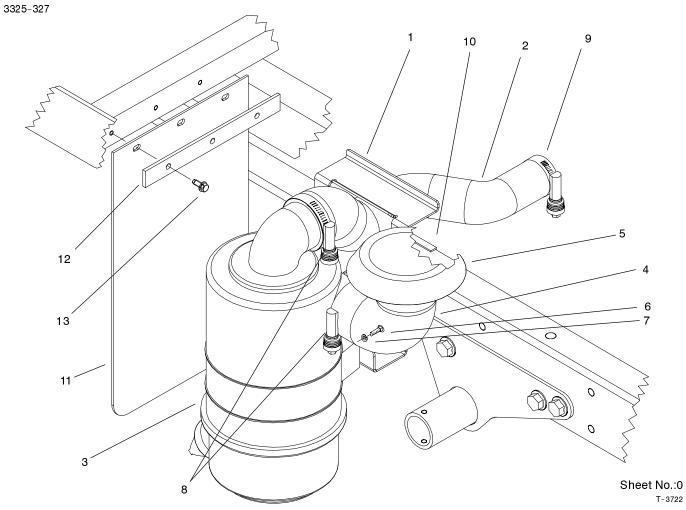

# Air Cleaner Installation

Ref. No.	Part No.	Qty.	Description
1	104-9212	1	Mount-Air Cleaner ASM,
2	100-9450	1	Hose-Air Cleaner
3	93-7485	1	Air Filter ASM
4		1	Elbow-Air Intake
5		1	Hood-Air Inlet
6		2	Screw-HHF
7	3253-4	2	Washer-Lock
8 9		2	Clamp-Hose Clamp-Hose
10			U-Channel
11			Flap-Mud
1	104-9243		Bracket-Mud Flap
13		3	Screw-HWH

Ref. No.	Part No.	Qty.	Description

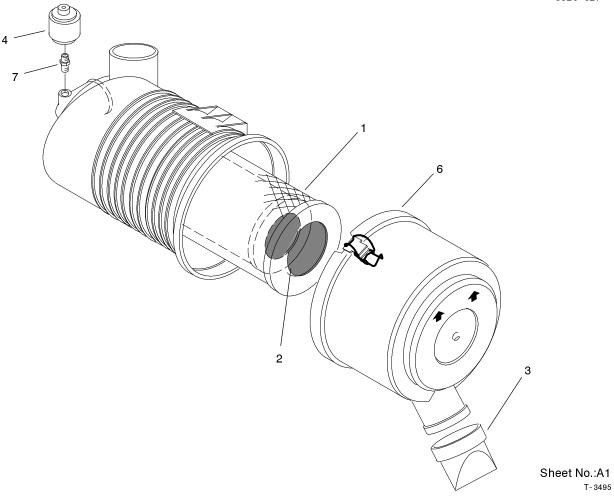

**Air Cleaner Assembly** 

Ref. No.	Part No.	Qty.	Description
1	93-9162	1	Filter-Primary
2		1	Filter-Secondary
3		1	Valve-Vacuator
4	93-9164	1	Indicator - Mini (Optional)
6	93-5986	1	Cover ASM
7	94-1416	1	Adapter-Indicator ASM (Optional)

Ref. No.	Part No.	Qty.	Description

