



## Recycler Kit

### for 72" Flex Deck Side Discharge Mower

Model No. 30838

Installation  
Instructions

- Park traction unit on a level surface, set parking brake, raise deck to highest position and stop engine. Remove the key from ignition.

#### ⚠ CAUTION

##### POTENTIAL HAZARD

- If you leave the key in the ignition switch, someone could start the engine.

##### WHAT CAN HAPPEN

- Accidental starting of the engine could seriously injure you or other bystanders.

##### HOW TO AVOID THE HAZARD


- Remove the key from the ignition switch before you do any maintenance.

- Block up deck so it does not accidentally fall.
- Thoroughly clean underside of deck to expose all mounting holes.
- Position right, center and left chamber under deck, aligning mounting holes (Fig. 1).

**Note:** One of the mounting holes for the center chamber is used to secure rubber flap strap to top of deck. Carriage bolt and nut must be removed to install chamber.

**Note:** One longer carriage bolt is required when installing left and center chambers.

- Secure chambers to deck with carriage bolts and nuts. Nuts to be positioned outside deck.
- Position kickers under deck aligning mounting holes (Fig. 1).
- Secure kickers to deck with carriage bolts and nuts. Nuts to be positioned outside deck.
- Remove fasteners securing deflector mounting brackets to deck. Retain deflector for future installation.
- Mount deflector cover to deck with (4) carriage bolts and nuts removed from deflector (Fig. 1).
- Tighten all fasteners securely.

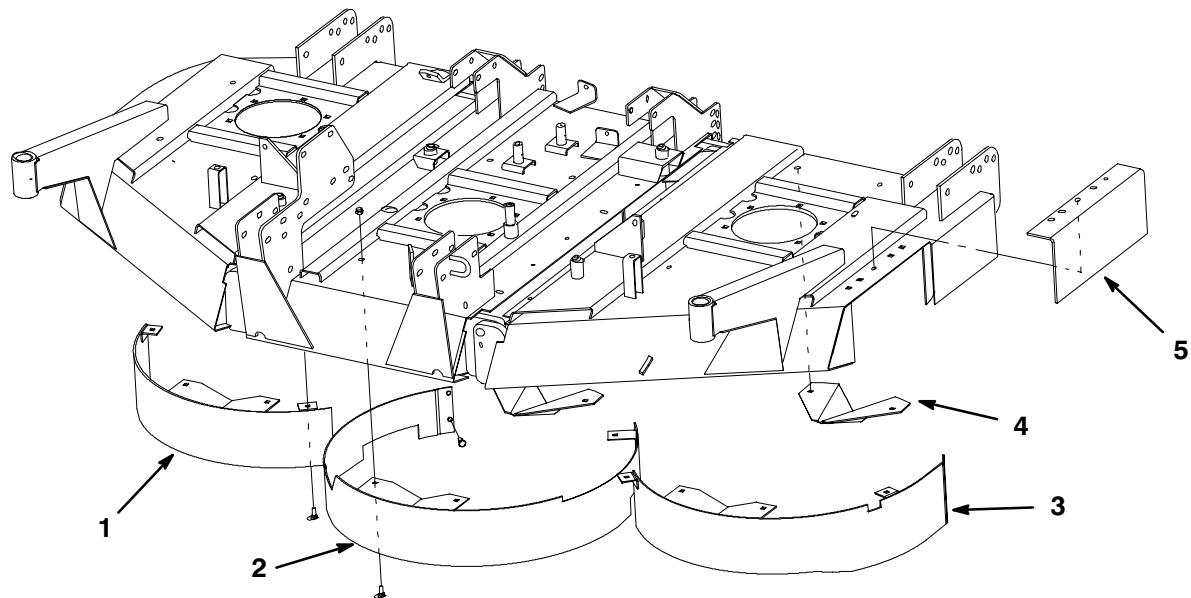

**Figure 1**

---

- 1. Right chamber
- 3. Left chamber
- 5. Deflector cover
- 2. Center chamber
- 4. Kicker

---